

1 Relays

♦ ⇒ ["1.1 Fuse holder B SB", page 1](#)

♦ ⇒ ["1.2 Fuse holder C SC", page 2](#)

Component	Chapter	Comment
Heated rear window relay -J9-	⇒ "1.2 Fuse holder C SC", page 2	
Magnetic clutch relay -J44-	⇒ "1.2 Fuse holder C SC", page 2	According to equipment
Automatic glow period control unit -J179-	⇒ "1.1 Fuse holder B SB", page 1	Only models with diesel engine
Main relay -J271-	⇒ "1.1 Fuse holder B SB", page 1	
Secondary air pump relay -J299-	⇒ "1.1 Fuse holder B SB", page 1	
Vacuum pump relay -J318-	⇒ "1.1 Fuse holder B SB", page 1	
Terminal 15 voltage supply relay -J329-	⇒ "1.2 Fuse holder C SC", page 2	
Low heat output relay -J359-	⇒ "1.1 Fuse holder B SB", page 1	Only models with diesel engine
High heat output relay -J360-	⇒ "1.1 Fuse holder B SB", page 1	Only models with diesel engine
Horn relay -J413-	⇒ "1.1 Fuse holder B SB", page 1	
Engine component current supply relay -J757-	⇒ "1.1 Fuse holder B SB", page 1	Only models with petrol engine
Relay for power sockets -J807-	⇒ "1.2 Fuse holder C SC", page 2	
Starter relay 1 -J906-	⇒ "1.1 Fuse holder B SB", page 1	
Starter relay 2 -J907-	⇒ "1.1 Fuse holder B SB", page 1	
Relay for reducing agent metering system -J963-	⇒ "1.2 Fuse holder C SC", page 2	
Engine component current supply relay 2 -J976-	⇒ "1.1 Fuse holder B SB", page 1	For models with 2.5l petrol engine

1.1 Fuse holder B -SB-

♦ ⇒ ["1.1.1 Relay in fuse holder B SB", page 1](#)

1.1.1 Relay in fuse holder B -SB-

1 - Fuse holder B -SB-

R1 - Starter relay 1 -J906-

R2 - Starter relay 2 -J907-

R3 - Horn relay -J413-

R4 - Vacuum pump relay -J318-

❑ For models with 1.4l petrol engine

R4 - Secondary air pump relay -J299-

❑ For models with 2.0l petrol engine

R4 - High heat output relay -J360-

❑ For models with diesel engine

R5 - Main relay -J271-

R6 - Automatic glow period control unit -J179-

❑ For models with diesel engine

R7 - Low heat output relay -J359-

❑ For models with diesel engine


R8 - Engine component current supply relay -J757-

❑ For models with petrol engine

R9 - Engine component current supply relay 2 -J976-

❑ For models with 2.5l petrol engine

R10 - not assigned

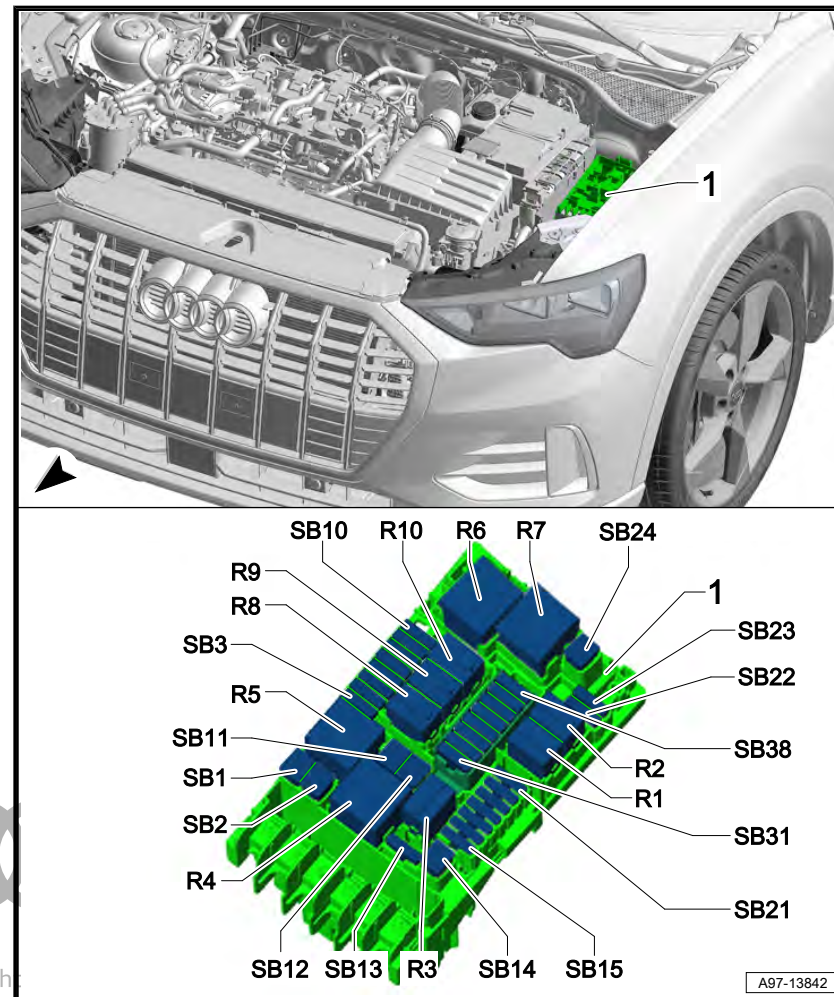

Protected by copyright

permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

[Back to overview ⇒ page 1](#)

1.2 Fuse holder C -SC-

◆ ⇒ [“1.2.1 Relay in fuse holder C SC , left-hand drive”, page 3](#)

◆ ⇒ [“1.2.2 Relay in fuse holder C SC , right-hand drive”, page 4](#)

1.2.1 Relay in fuse holder C -SC-, left-hand drive

1 - Fuse holder C -SC-

- ☐ For left-hand drive models

R1 - Relay for reducing agent metering system -J963-

- ☐ For left-hand drive models

R2 - Magnetic clutch relay -J44-

- ☐ According to equipment

R3 - not assigned

R4 - Terminal 15 voltage supply relay -J329-

- ☐ For left-hand drive models

R5 - Heated rear window relay -J9-


- ☐ For left-hand drive models

R6 - Relay for power sockets -J807-

- ☐ For left-hand drive models



Protected by copyright. Copying
permitted unless authorised by
with respect to the correctness

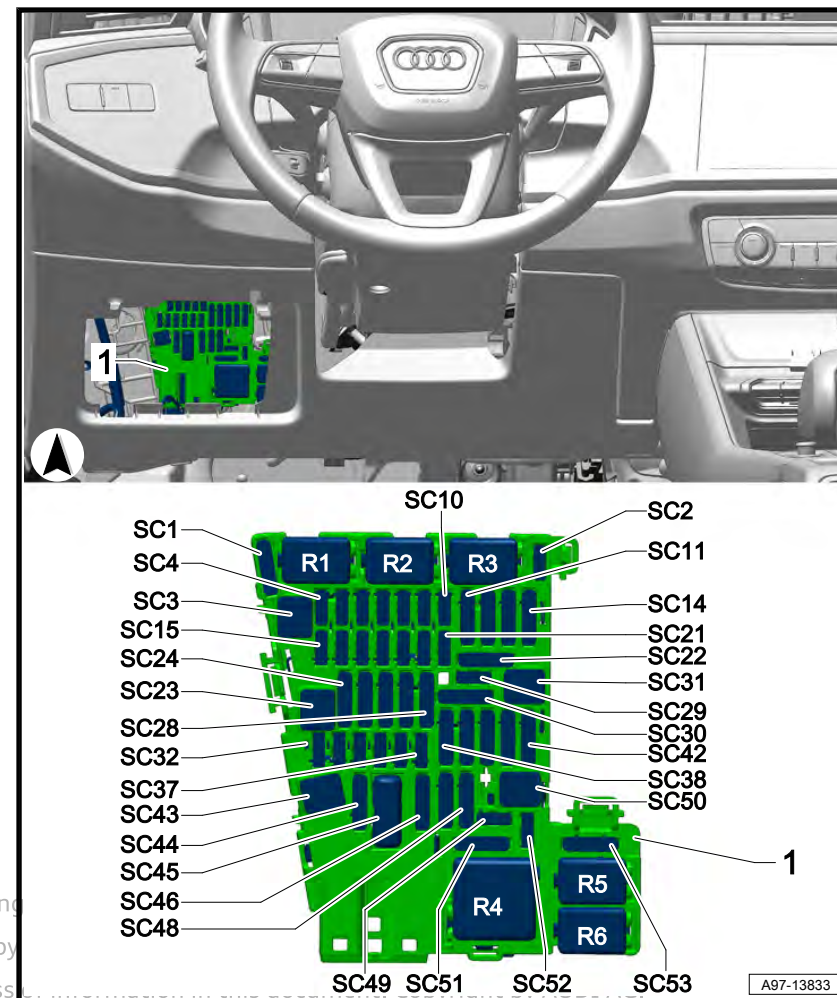

[Back to overview ⇒ page 1](#)

1.2.2 Relay in fuse holder C -SC- , right-hand drive

1 - Fuse holder C -SC-

- ☐ For right-hand drive models

R1 - Relay for reducing agent metering system -J963-

- ☐ For right-hand drive models

R2 - Magnetic clutch relay -J44-

- ☐ According to equipment

R3 - not assigned

R4 - Terminal 15 voltage supply relay -J329-


- ☐ For right-hand drive models

R5 - Heated rear window relay -J9-

- ☐ For right-hand drive models

R6 - Relay for power sockets -J807-

- ☐ For right-hand drive models

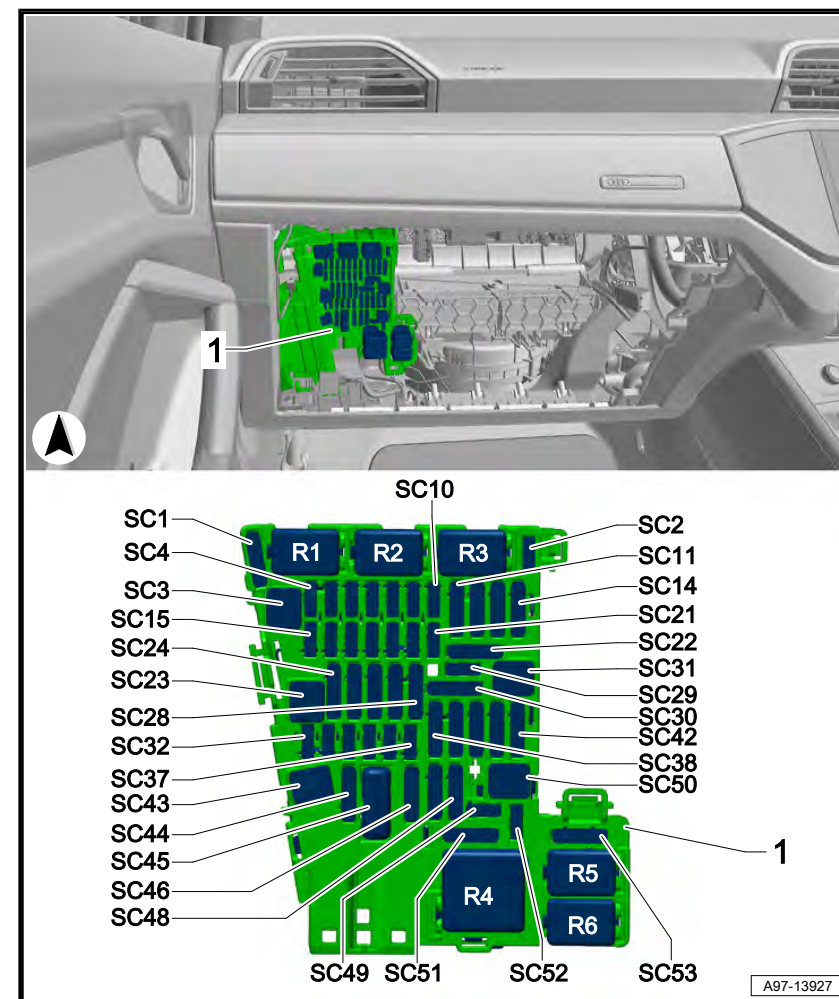

[Back to overview ⇒ page 1](#)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.