



Fuse/Relay Boxes



Connector to Fuse/Relay Box Index

Under-hood Fuse/Relay Box

Socket	Ref	Terminal	Connects to
A/C compressor clutch relay	2	4	Engine compartment wire harness (see page 22-26)
A (ELD)	9	3	
B	11	1	
Blower motor relay	1	4	
C	12	2	
D	8	9	
E	13	16	
F	14	20	
Fog lights relay	4	4	
G	10	2	
H	15	14	
J	17	10	Engine compartment wire harness (see page 22-26)
K	16	5	
Rear window defogger relay	3	4	
Windshield wiper relay	5	4	
T1	7		Starter cable (see page 22-19)
T101	6		Engine wire harness (see page 22-20)

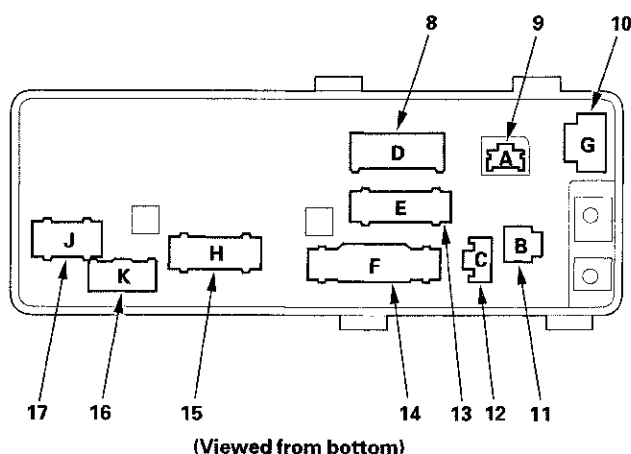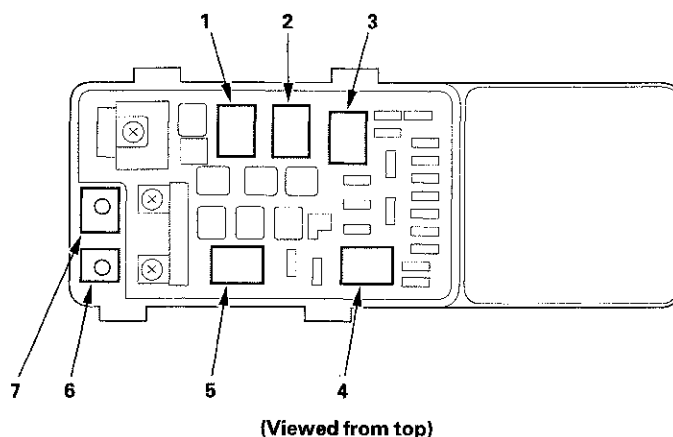


Fuse/Relay Boxes

Connector to Fuse/Relay Box Index (cont'd)

Auxiliary Under-hood Relay Box

Socket	Ref	Terminal	Connects to
Daytime running lights relay*	1	5	Engine compartment wire harness (see page 22-26)
Adaptive cruise control (ACC) relay	3	5	Engine compartment wire harness (see page 22-26)
Radiator fan control (RFC) unit relay	2	4	Engine compartment wire harness (see page 22-26)


* : Canada models

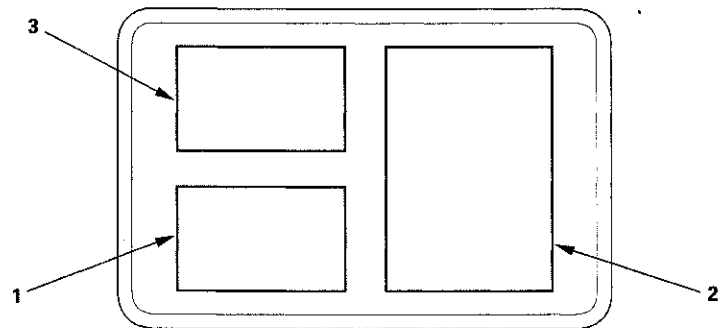



Driver's Under-dash Fuse/Relay Box

Socket	Ref	Terminal	Connects to
A	6	6	Dashboard wire harness (see page 22-32)
Accessory power socket relay	19	4	
A/F sensor relay	20	4	
B	12	6	Engine compartment wire harness (see page 22-28)
C	11	12	Engine compartment wire harness (see page 22-28)
D	13	17	Engine compartment wire harness (see page 22-28)
E	8	16	Left side wire harness (see page 22-40)
F	9	14	Left side wire harness (see page 22-40)
G	14	6	Left side wire harness (see page 22-40)
H	15	14	Left side wire harness (see page 22-40)
Ignition coil relay	23	4	
J	27	21	Left side wire harness (see page 22-40)
K	26	12	Driver's door subharness (see page 22-56)
M	25	3	MICU service check connector
N	2	45	Dashboard wire harness (see page 22-32)
P (MICU)	17	30	Dashboard wire harness (see page 22-32)
PGM-FI main relay 1 (FI MAIN)	21	4	
PGM-FI main relay 2 (FUEL PUMP)	24	4	
Q (MICU)	16	14	Left side wire harness (see page 22-40)
R (MES connector)	3	2	Dashboard wire harness (see page 22-32)
S	5	2	Dashboard wire harness (see page 22-32)
Starter cut relay 2	18	4	
T	7	6	Dashboard wire harness (see page 22-32)
Turn signal/hazard relay 1	4	6	
W	10	5	Left side wire harness (see page 22-40)
X	1	39	Dashboard wire harness (see page 22-32)
Y	22		Not used

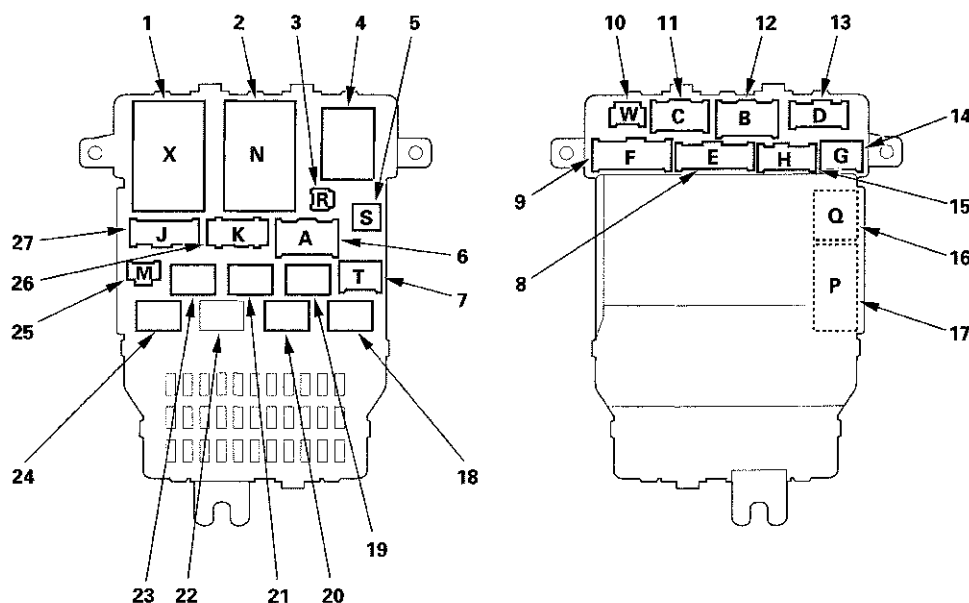


Fuse/Relay Boxes

Connector to Fuse/Relay Box Index (cont'd)

Passenger's Under-dash Fuse/Relay Box

Socket	Ref	Terminal	Connects to
A	1	1	Engine compartment wire harness (see page 22-30)
B	2	10	Engine compartment wire harness (see page 22-30)
C	9	5	Right side wire harness (see page 22-44)
D	6	17	Dashboard wire harness (see page 22-38)
E	11	14	Dashboard wire harness (see page 22-38)
Fuel fill door open relay	5	4	
F	7	8	Right side wire harness (see page 22-44)
G	8	14	Right side wire harness (see page 22-44)
H	10	3	Dashboard wire harness (see page 22-38)
J	3	13	Engine compartment wire harness (see page 22-30)
Headlight washer relay*	12	4	
Seat heater relay	4	4	
Throttle actuator control module relay	13	4	


*: Canada models

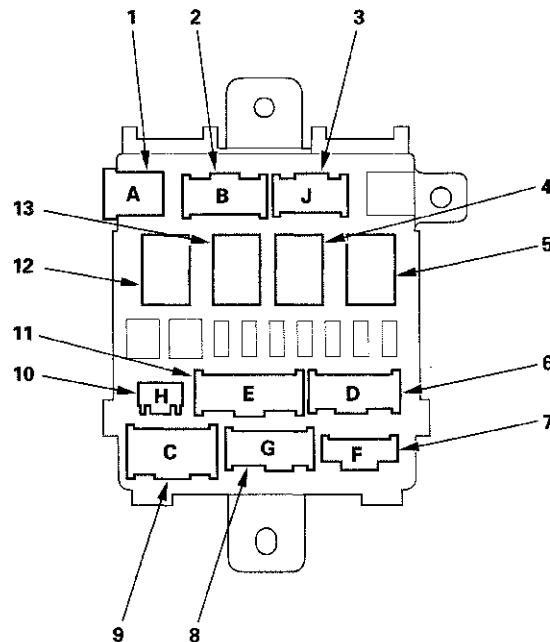




Auxiliary Under-dash Fuse/Relay Box

Socket	Ref	Terminal	Connects to
Starter cut relay 1	1	4	Engine compartment wire harness (see page 22-28)

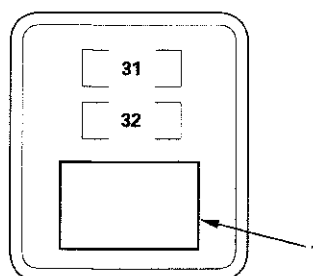

Driver's Auxiliary Under-dash Relay Box

Socket	Ref	Terminal	Connects to
ACC cut relay	3	5	Dashboard wire harness (see page 22-34)
IG2 cut relay	2	5	Dashboard wire harness (see page 22-34)

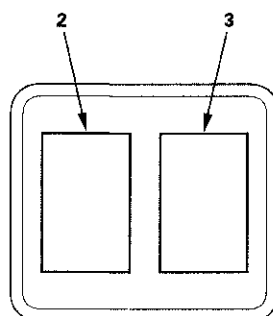

Passenger's Auxiliary Under-dash Relay Box (Canada models)

Socket	Ref	Terminal	Connects to
Rear seat heater relay	4	4	Dashboard wire harness (see page 22-38)

