




SINGLE PART INSTALLATION POSITION

CONTENTS



RELAY	2	SOLENOID VALVE	4
ECU	2	EARTH CABLE	4
SENSOR	3	EARTH	5

RELAY

Name	Symbol	Name	Symbol
ABS warning lamp relay	A	Accessory socket relay	B

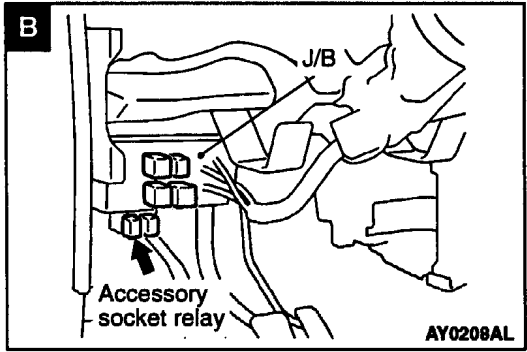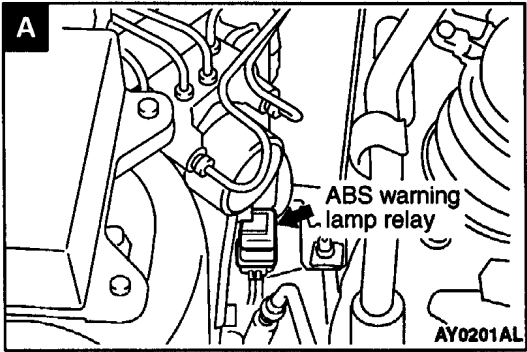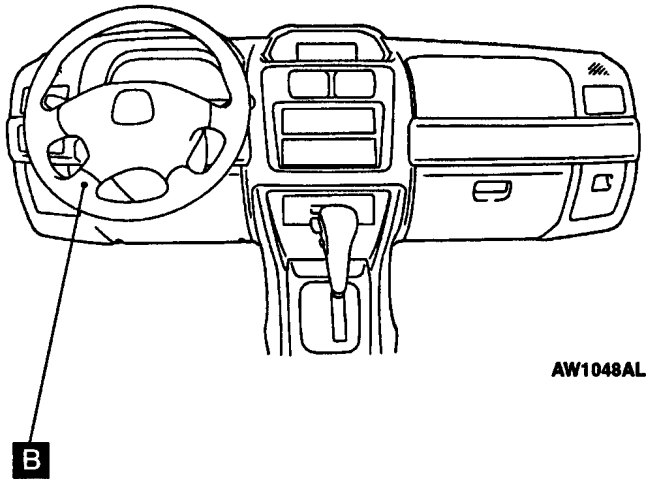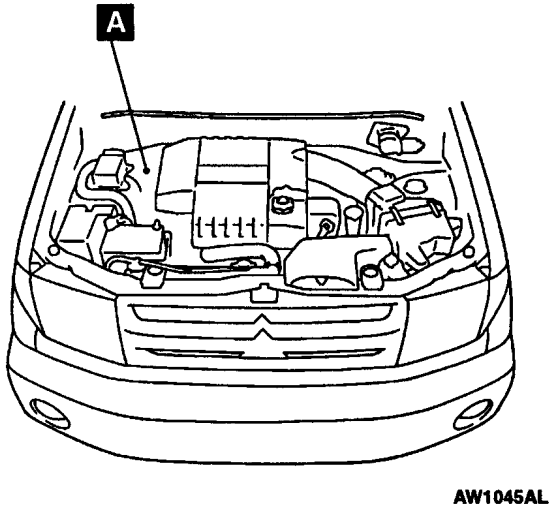


ECU

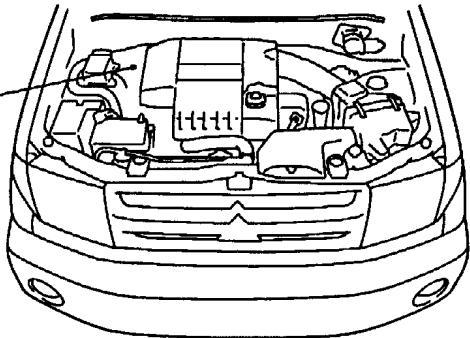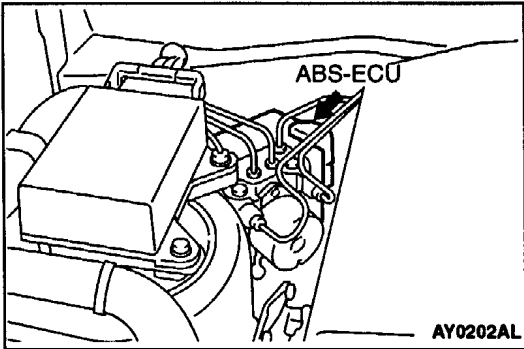


SENSOR






Name	Symbol	Name	Symbol
Fuel pressure sensor	D	Oxygen sensor	Front C
Ignition failure sensor	B	Rear E	E
		Throttle position sensor	A

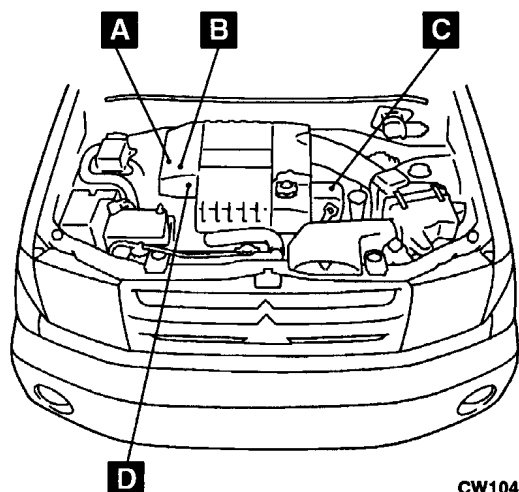

CW1045AL

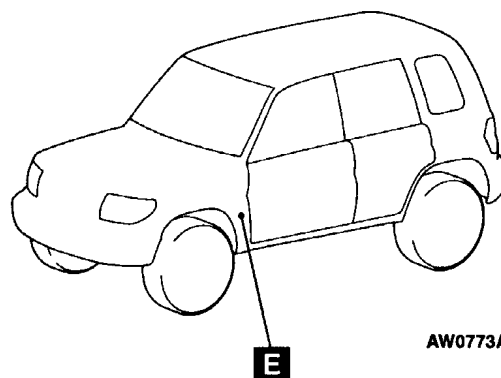


AW0773AL

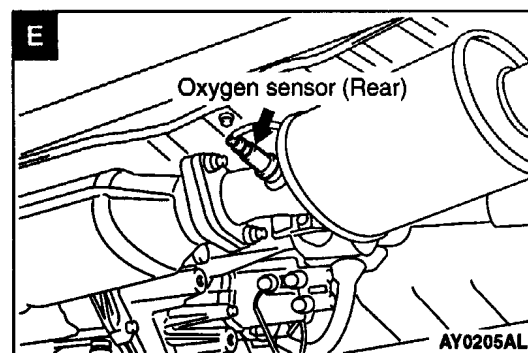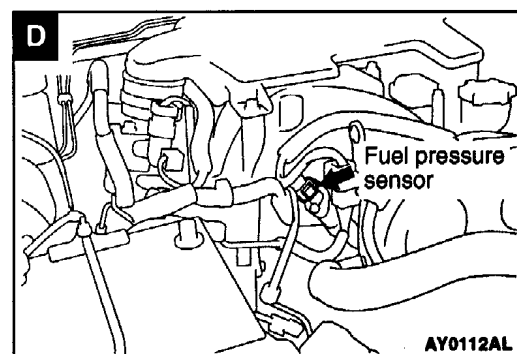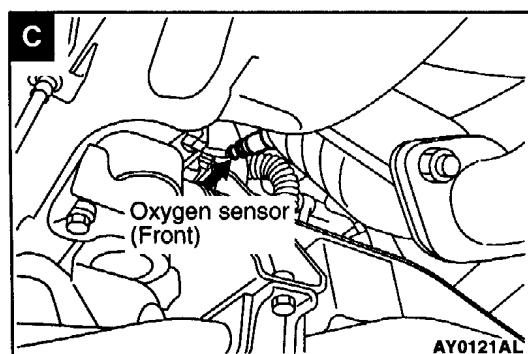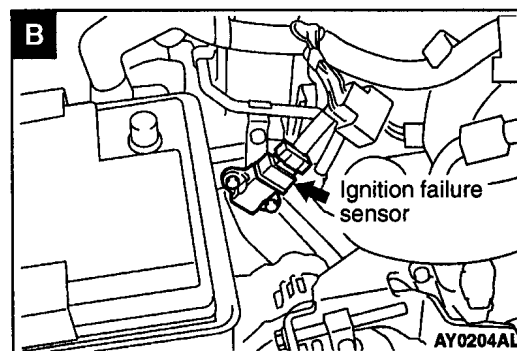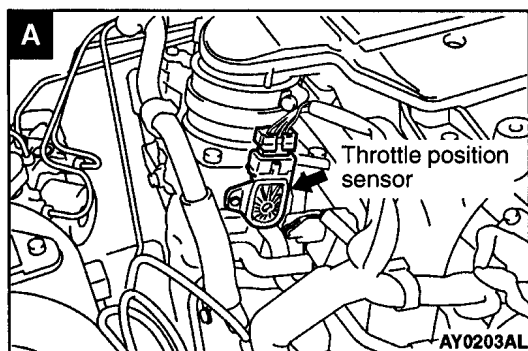



2-4 SINGLE PART INSTALLATION POSITION – Solenoid Valve/Earth Cable

SOLENOID VALVE


Name	Symbol	Name	Symbol
Hydraulic unit (with solenoid valve)	A	Purge control solenoid valve	B

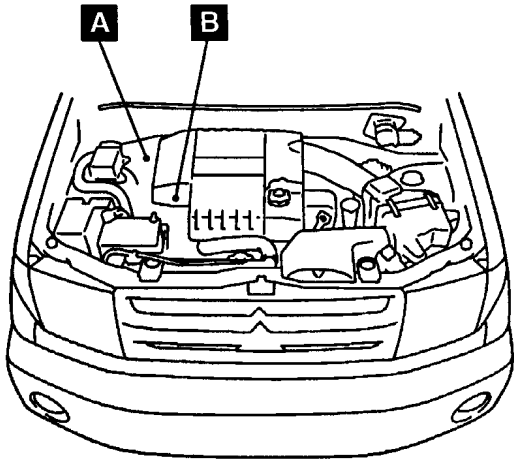


DW1045AL

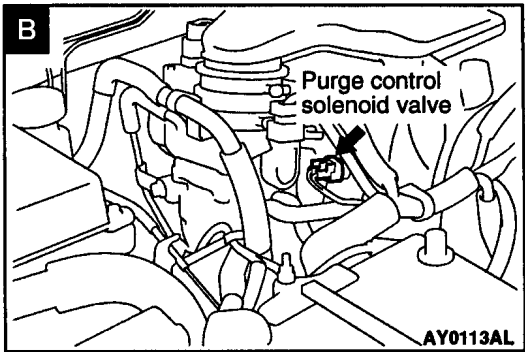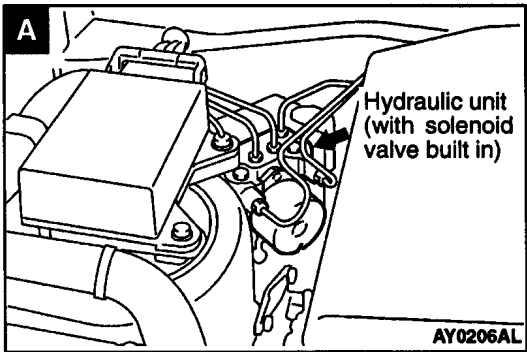


EARTH CABLE




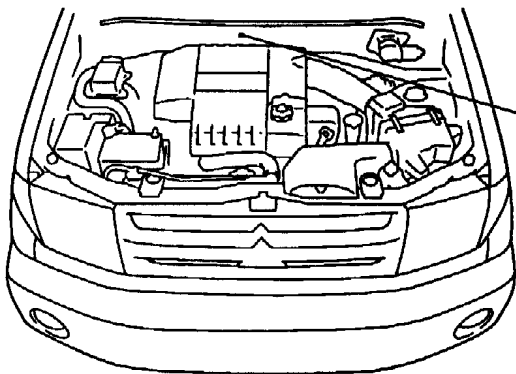


EW1045AL

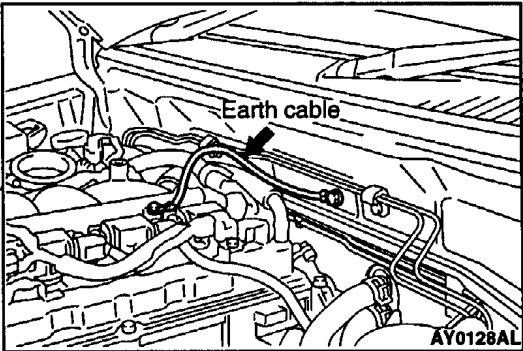

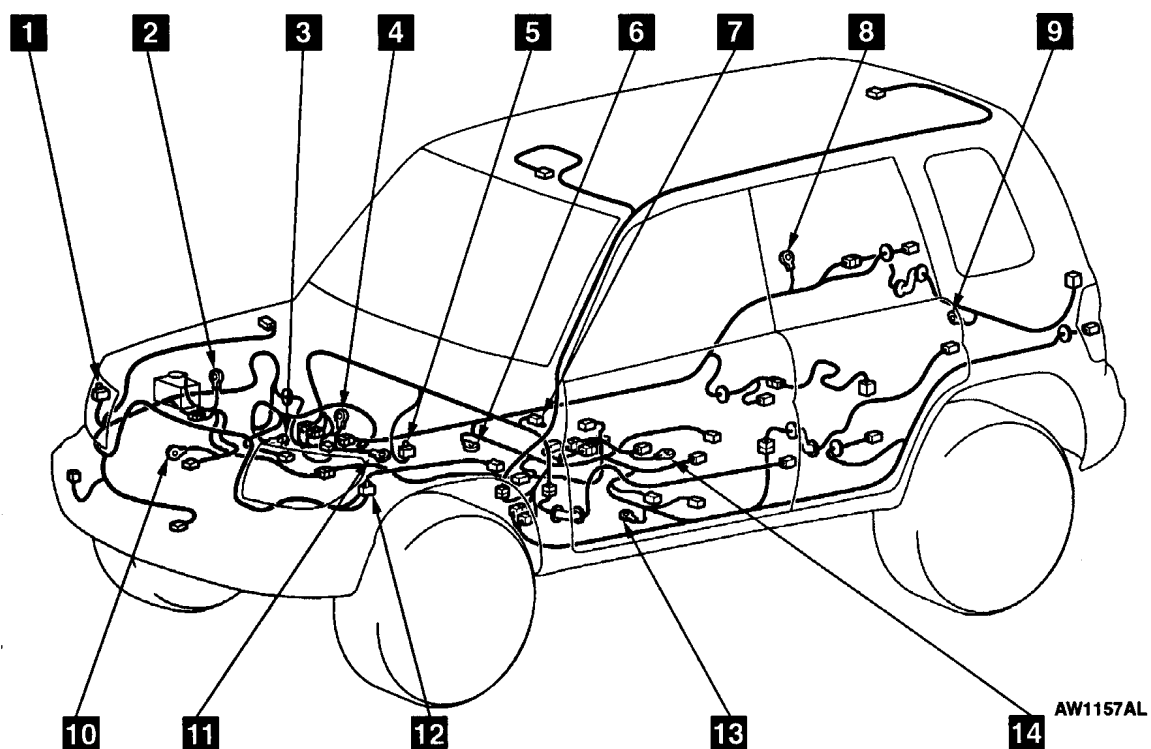EARTH**5-DOOR MODELS****NOTE**

Same earth numbers are used in the circuit diagrams.

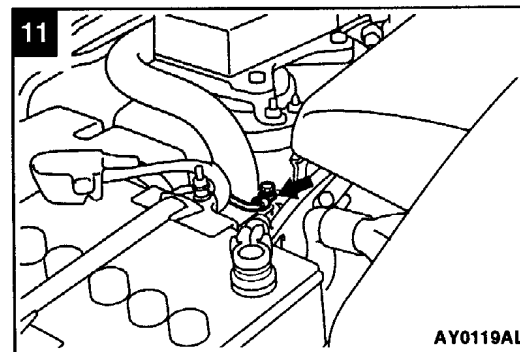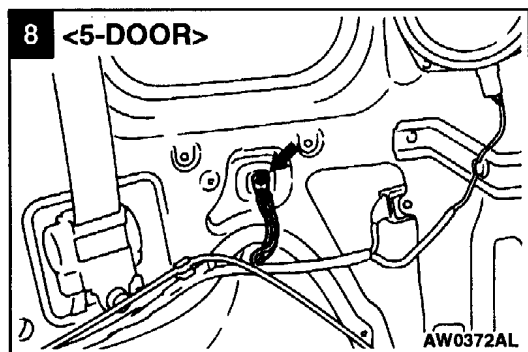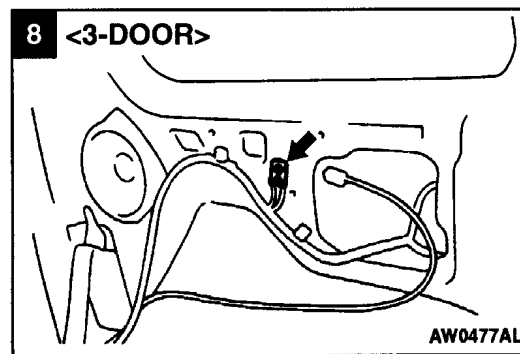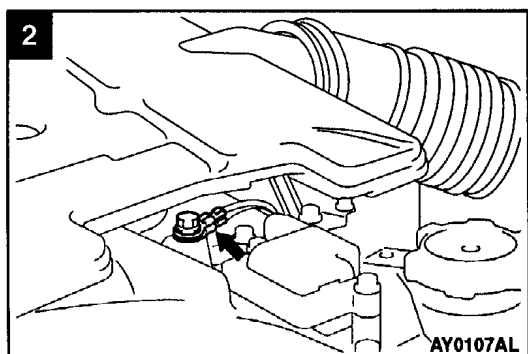**NOTE**

Earths other than those shown above are the same as for 3-door models.