


Emergency call module , (EL1),(EL3),(EL5),(NZ2)

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

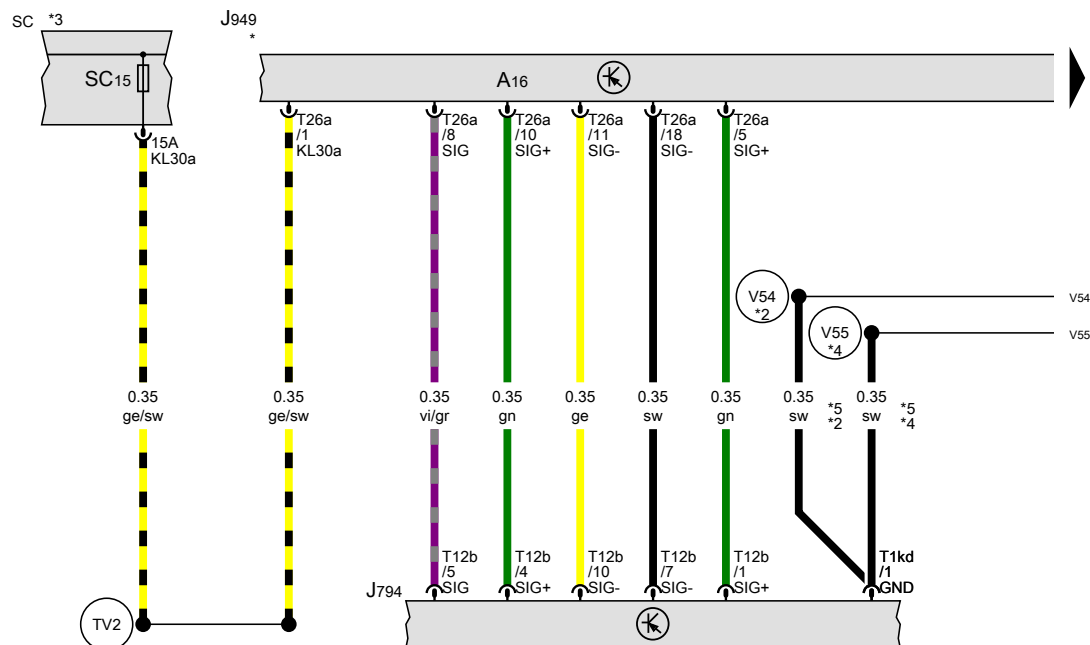

Control unit 1 for information electronics, Emergency call module control unit and communication unit, Fuse holder C

A16	Emergency battery, telematics
J794	Control unit 1 for information electronics
J949	Emergency call module control unit and communication unit
SC	Fuse holder C
SC15	Fuse 15 on fuse holder C
T1kd	1-pin connector, Terminal
T12b	12-pin connector, blue
T26a	26-pin connector, black

(TV2) Terminal 30 wiring junction

(V54) Connection 1 (telephone), in main wiring harness


V55 Connection 2 (telephone), in main wiring harness

- * see applicable current flow diagram for aerials
- *2 For left-hand drive models
- *3 see applicable current flow diagram for fuses in interior
- *4 For right-hand drive models
- *5 Wiring open end



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

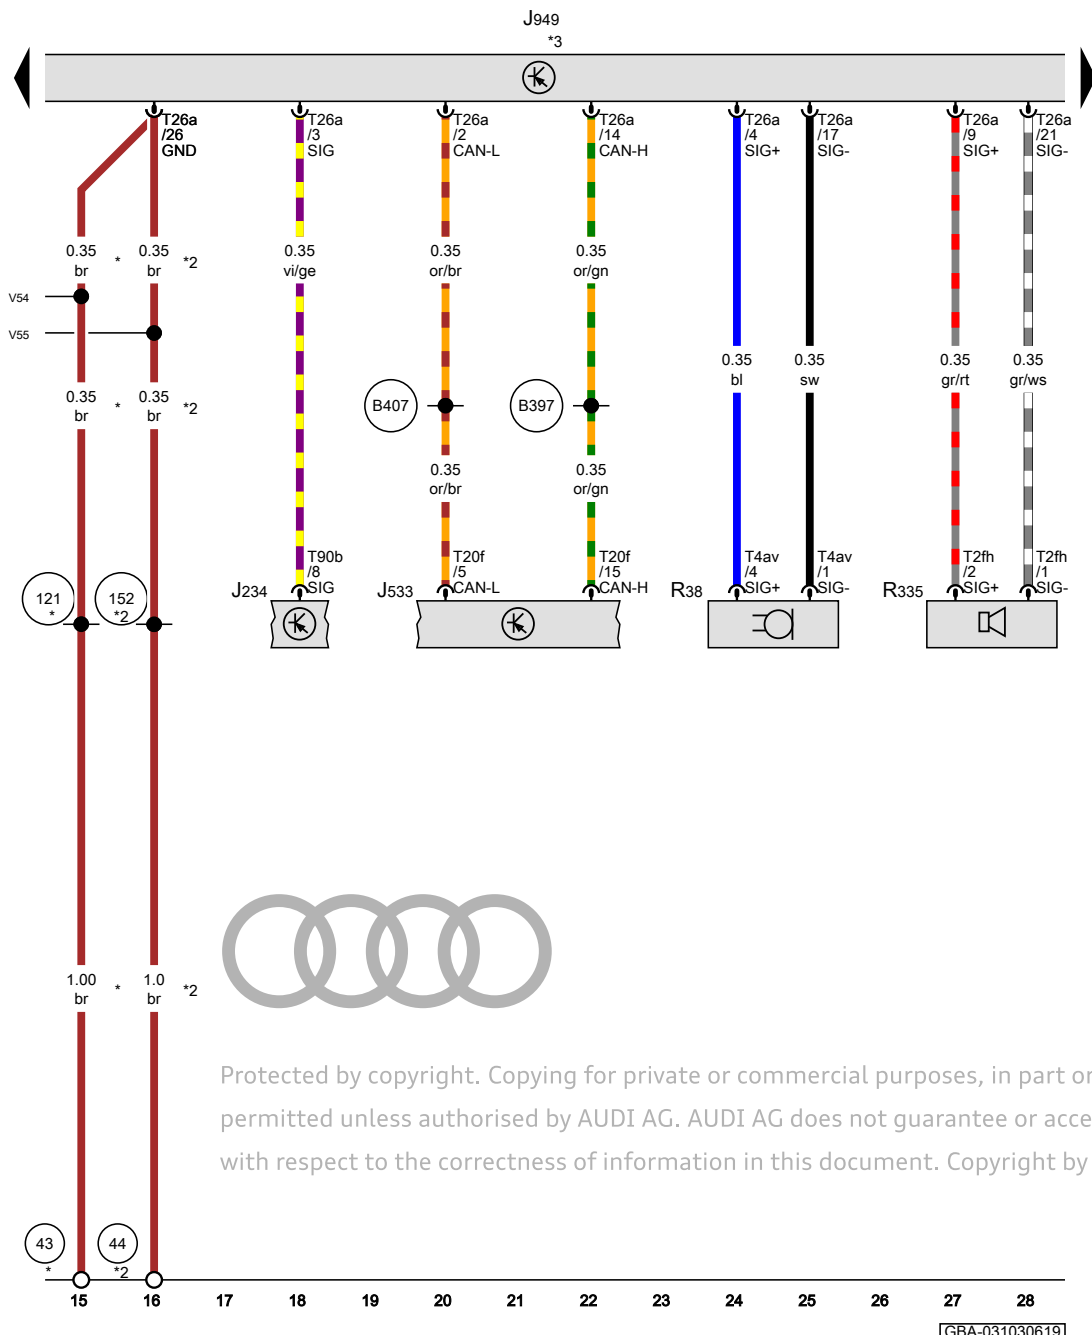

Airbag control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Telephone microphone, Loudspeaker for emergency call module

- J234 Airbag control unit
- J533 Data bus diagnostic interface
- J949 Emergency call module control unit and communication unit
- R38 Telephone microphone
- R335 Loudspeaker for emergency call module
- T2fh 2-pin connector, black
- T4av 4-pin connector, grey
- T20f 20-pin connector, red
- T26a 26-pin connector, black
- T90b 90-pin connector, yellow


- 43 Earth point, lower part of right A-pillar
- 44 Earth point, lower part of left A-pillar
- 121 Earth connection 2, in front right wiring harness
- 152 Earth connection 2, in front wiring harness
- B397 Connection 1 (convenience CAN bus, high), in main wiring harness
- B407 Connection 2 (convenience CAN bus, low), in main wiring harness
- V54 Connection 1 (telephone), in main wiring harness
- V55 Connection 2 (telephone), in main wiring harness

- * For left-hand drive models
- *2 For right-hand drive models
- *3 see applicable current flow diagram for aerials


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Emergency call module control unit and communication unit, Front roof module

- E734 Telematics button module
- J528 Roof electronics control unit
- J949 Emergency call module control unit and communication unit
- T16b 16-pin connector, brown
- T26a 26-pin connector, black
- WX3 Front roof module
- * For models with background lighting
- *2 see applicable current flow diagram
- *3 For models with no background lighting
- *4 see applicable current flow diagram for aerals

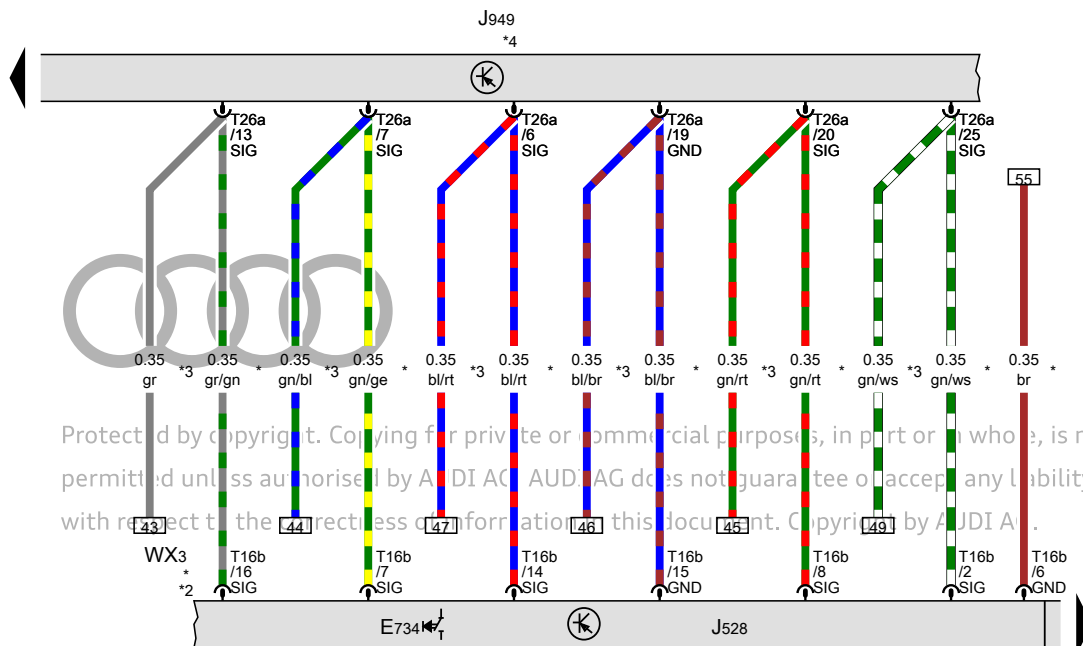

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

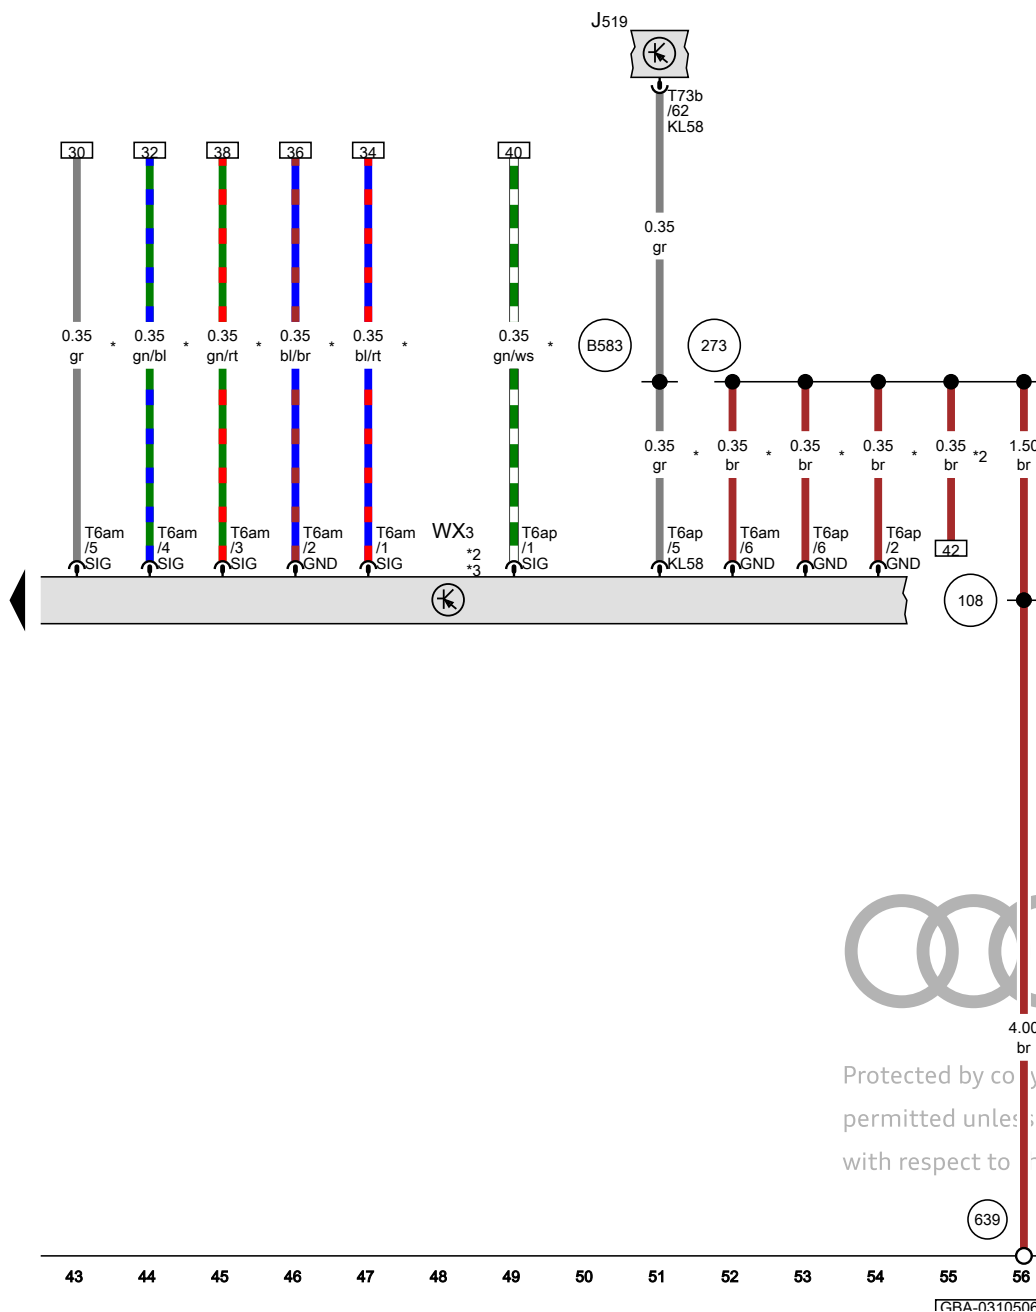

Onboard supply control unit, Front roof module

J519 Onboard supply control unit

T6am 6-pin connector, black

T6a	6-pin connector, black
T6ap	6-pin connector, brown

T73b 73-pin connector, black

WX3 Front roof module

(108) Earth connection 2, in front left wiring harness

(273) Earth connection 5, in front wiring harness

(639) Earth point, left A-pillar

(B583) Positive connection (58), in interior wiring harness

* For models with no background lighting

*2 For models with background lighting

*3 see applicable current flow diagram

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink