


Seats

Component Location Index

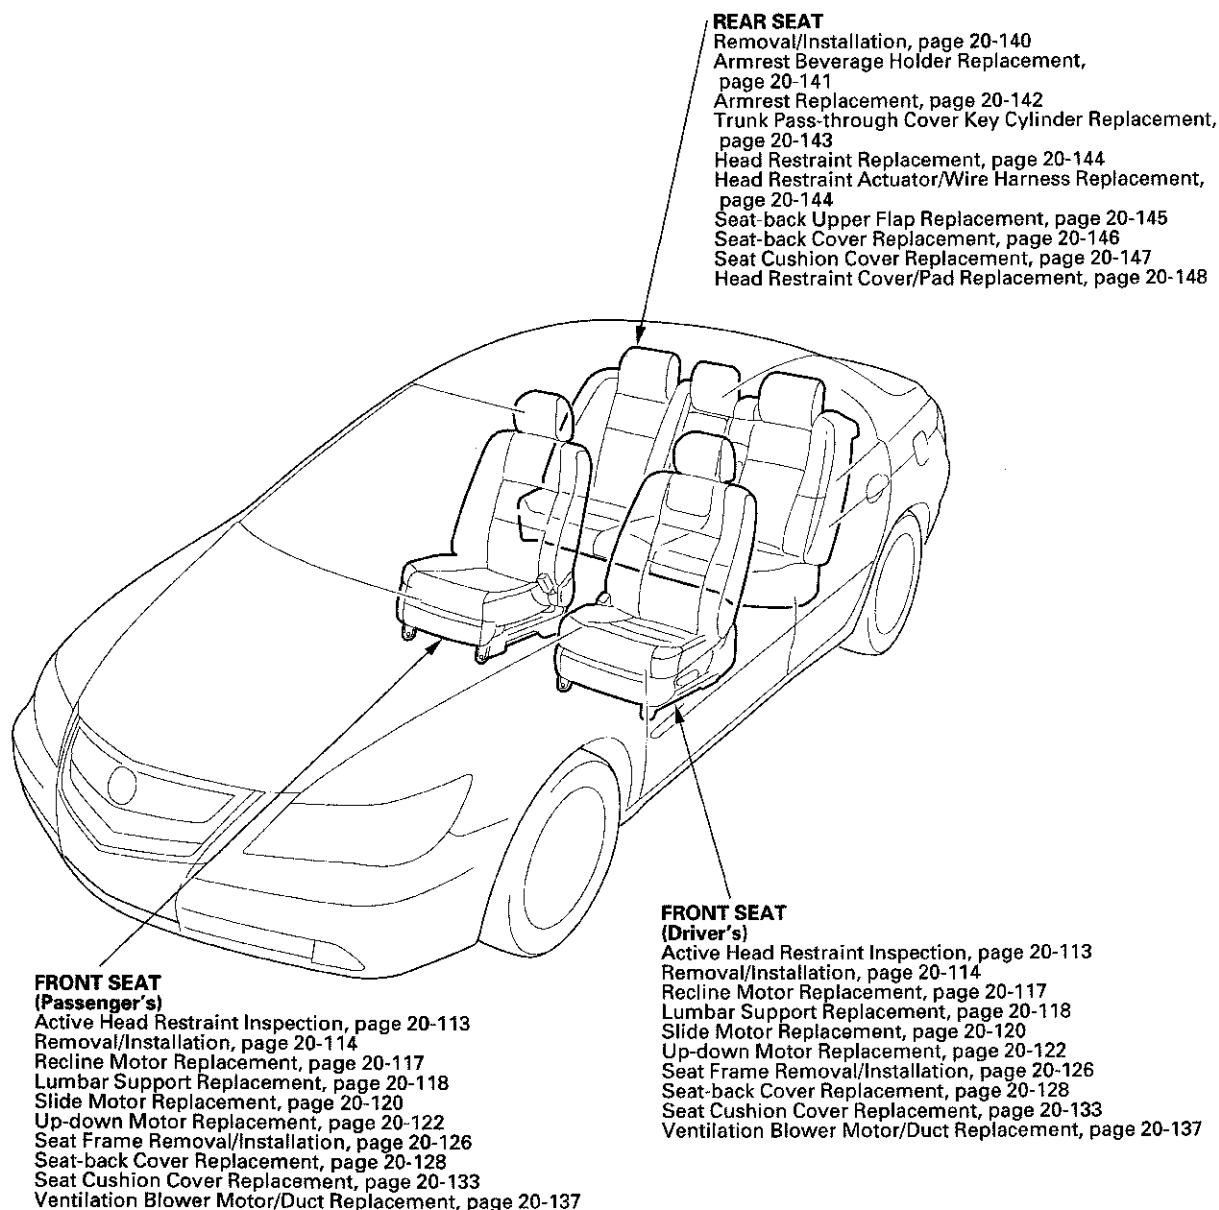





Front Seat Active Head Restraint Inspection

NOTE: If the vehicle has been in a collision, always inspect the active head restraint, even if they appear reusable, by doing the following procedure.

1. With the recline switch, move the seat-back to the fully upright position.
2. Apply masking tape on the top of the head restraint.
3. Make marks (A) on both sides at 255 mm (10.0 in) upward from the roots of the head restraint frame (B) along the back of the head restraint (C) surface. Use the center point (D) between the two marks for the measurements.

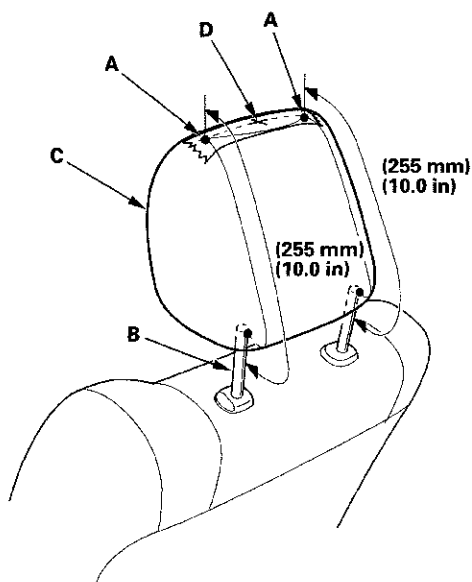

4. Push the head restraint (A) forward, and using a scale, measure the horizontal head restraint movement. The head restraint should move more than 50 mm (2.0 in) without resistance. If it is less than 50 mm (2.0 in), or the head restraint does not move smoothly, replace the seat frame (see page 20-126).

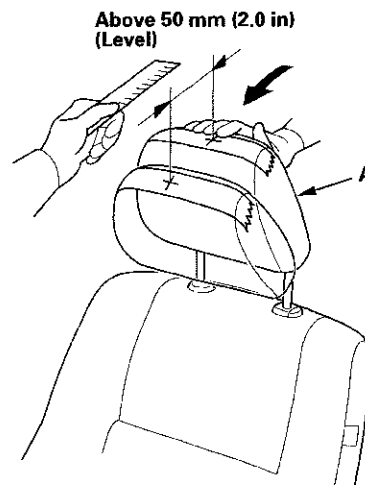

Seats

Front Seat Removal/Installation

Special Tools Required

KTC trim tool set SOJATP2014 *

* Available through the Acura Tool and Equipment Program; 888-424-6857

SRS components are located in this area. Review the SRS component locations (see page 24-12) and the precautions and procedures (see page 24-14) before doing repairs or service.

Do the ODS unit initialization (see page 24-26) after front passenger's seat replacement.


NOTE:

- Put on gloves to protect your hands.
- Take care not to tear or damage the seat covers.
- When prying with a flat-tip screwdriver, wrap it with protective to prevent damage.
- Take care not to scratch the body or tear the seat covers.
- Use the appropriate tool from KTC trim tool set to avoid damage when removing components.


1. Tilt the steering wheel all the way up, and move it all the way in.

2. Slide the front seat all the way forward. Carefully pry up on the bottom of the anchor cover (A) to release the hooks (B) and the tab (C), then remove the cover by pulling it upward.

Driver's seat

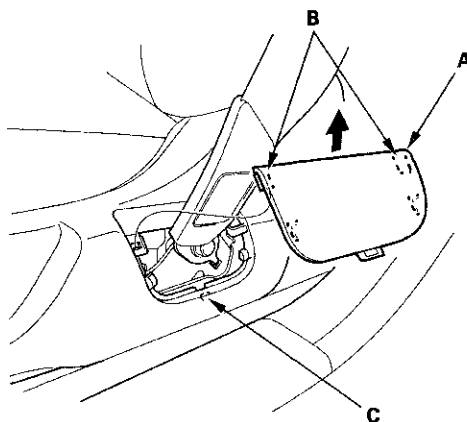


Passenger's seat

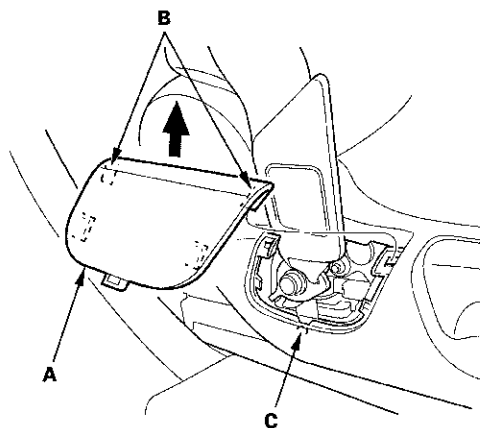




3. Remove the lower anchor bolt (A).

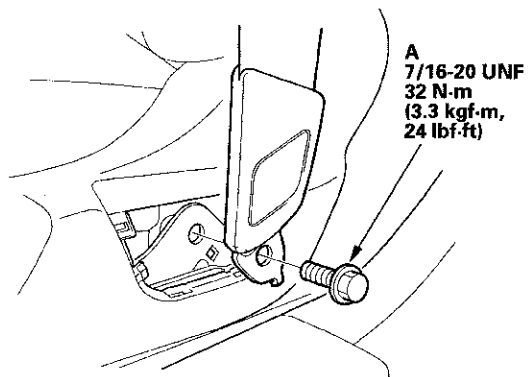



4. Slide the front seat all the way forward, remove the seat track outer end covers (A) and the seat track inner end covers (B) from the back of both seat tracks.

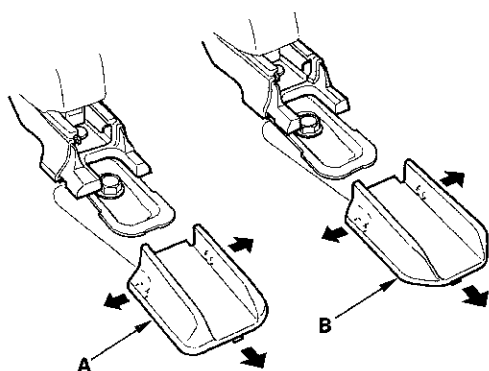

5. Remove the rear bolts.

Fastener Locations


 
► : Bolt, 2

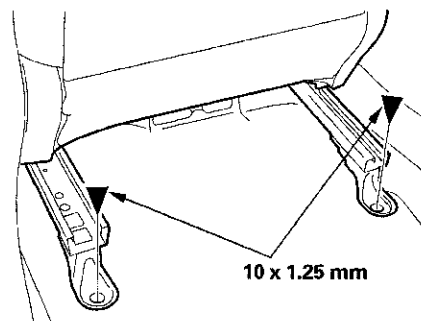

6. Slide the front seat all the way back, and remove the front bolts.

Fastener Locations

 ► : Bolt, 2

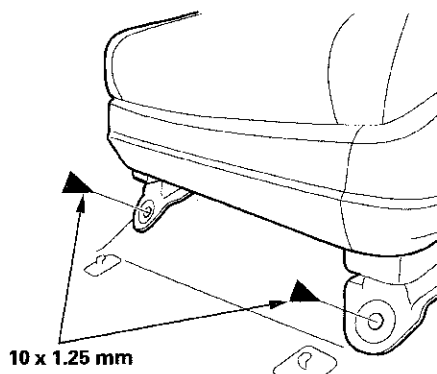

7. Do the battery terminal disconnection procedure (see page 22-91), then wait at least 3 minutes before removing the seat.


(cont'd)

Seats


Front Seat Removal/Installation (cont'd)

8. Lift up the front seat, then detach the harness clips (A), and disconnect the seat wire harness connector (B), the side airbag connector (C), the seat position sensor connector (D), and disconnect the ODS unit connector (E) on the passenger's seat.

Driver's seat

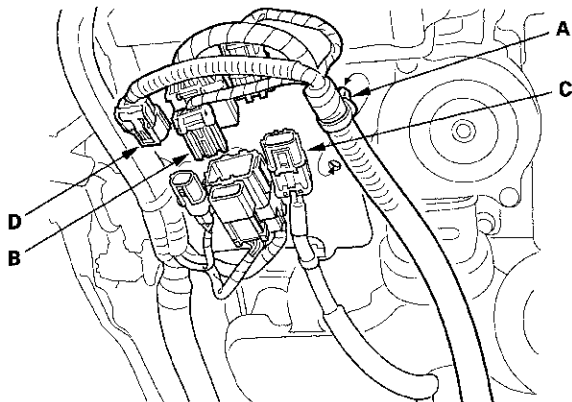

Passenger's seat

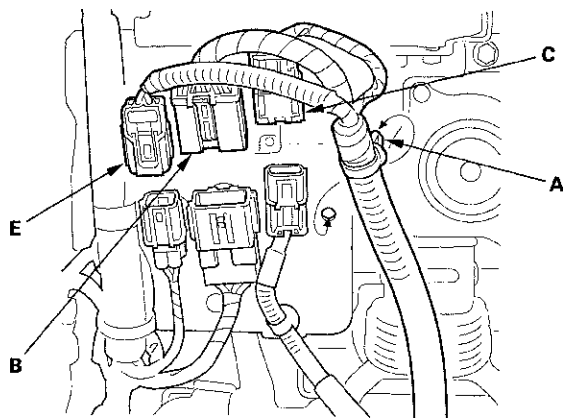

9. Install the seat in the reverse order of removal, and note these items:

- Make sure the seat harness are routed correctly.
- Apply medium strength liquid thread lock to the seat mounting bolts before reinstallation.
- Tighten the seat mounting bolts to the specified torque in the sequence shown. Slide the seat all the way back and tighten ① and ②, then slide it forward and tighten ③ and ④. The driver's seat is shown; the passenger's seat is symmetrical.
- Make sure each connectors are plugged in properly.
- Tighten the bolts by hand first, then tighten them to specification with a torque wrench.
- Do the battery terminal reconnection procedure (see page 22-91).
- Check for any DTCs that may have been set during repairs, and clear them.


Seat mounting bolts tightening sequence

Fastener Locations

► : Bolt, 4



10 x 1.25 mm
41 N·m
(4.2 kgf·m,
30 lbf·ft)

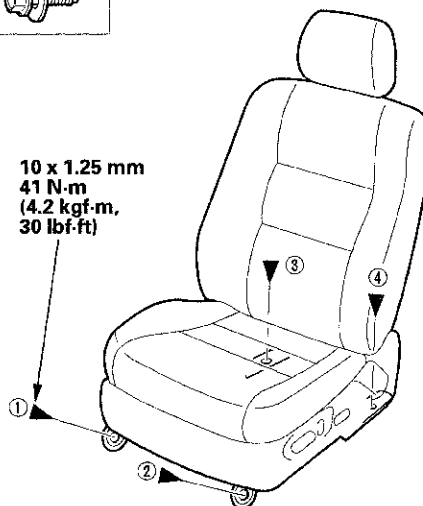




Front Seat Recline Motor Replacement


SRS components are located in this area. Review the SRS component locations (see page 24-12) and the precautions and procedures (see page 24-14) before doing repairs or service.

NOTE: Put on gloves to protect your hands.

1. Remove the front seat (see page 20-114).
2. Remove the seat-back cover and pad (see page 20-128).
3. Disconnect and detach the recline motor connector (A), and detach the harness clip (B).

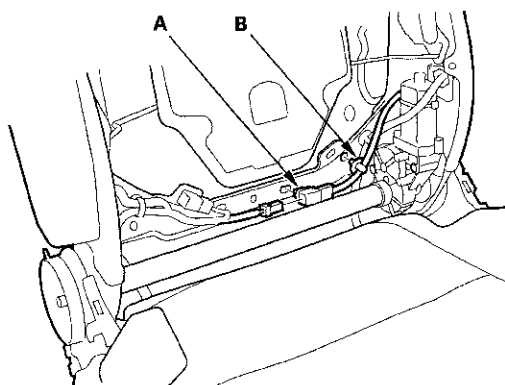

4. Release the push nut (A) from the motor side end of the connecting rod (B), then gently tap on the motor side of the connecting rod to remove it from the recline motor (C) and both recline adjusters (D). The driver's seat is shown; the passenger's seat is similar.


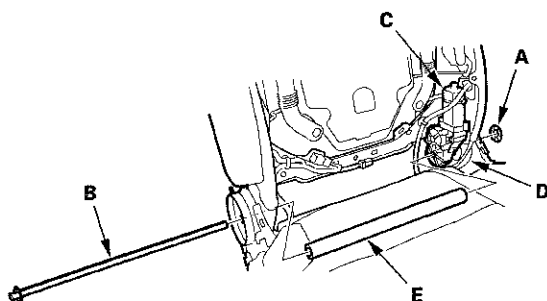


5. Remove the rod cover (E).

6. Remove the bolt, then remove the recline motor (A). The driver's seat is shown; the passenger's seat is similar.

Fastener Location

 ► : Bolt, 1

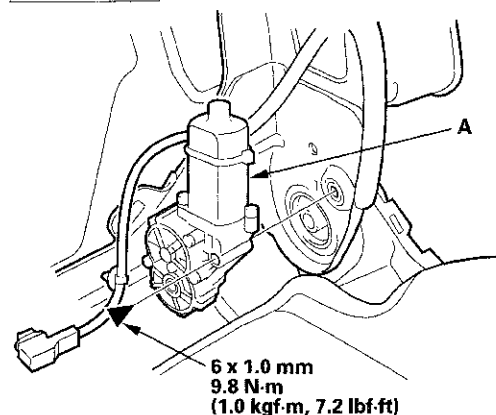

7. Install the motor in the reverse order of removal, and note these items:

- Replace the push nut with a new one. Make sure the push nut is installed correctly.
- Make sure the lumbar support motor connector is plugged in properly, and push the harness clip into place securely.
- Apply medium strength liquid thread lock to the mounting bolt before reinstallation.

Seats

Front Seat Lumbar Support Replacement


SRS components are located in this area. Review the SRS component locations (see page 24-12) and the precautions and procedures (see page 24-14) before doing repairs or service.

NOTE:


- Put on gloves to protect your hands.
- Take care not to tear or damage the seat covers.
- Take care not to kink the cable.

1. Remove the front seat (see page 20-114).
2. Remove the seat-back cover/pad (see page 20-128).
3. Release the hook strip as needed, then turn over the seat-back cover (see step 4 on page 20-129).

4. Release the upper wire (A) from both seat-back side frames (B) of inside the seat-back.

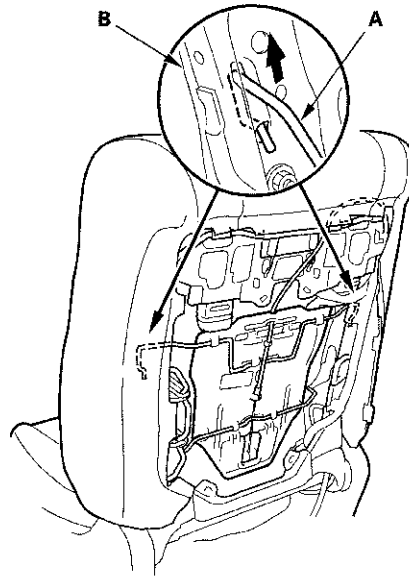

5. Release the lower wire (A) from both active head restraint links (B) of inside the seat-back.

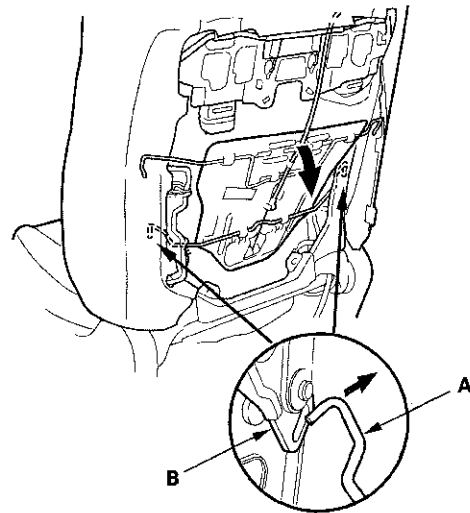





6. Remove the lumbar support motor cover (A).

- 1 Release the cover from the lower hooks (B).
- 2 Pull the cover upward to release it from the upper hooks (C).

Driver's seat

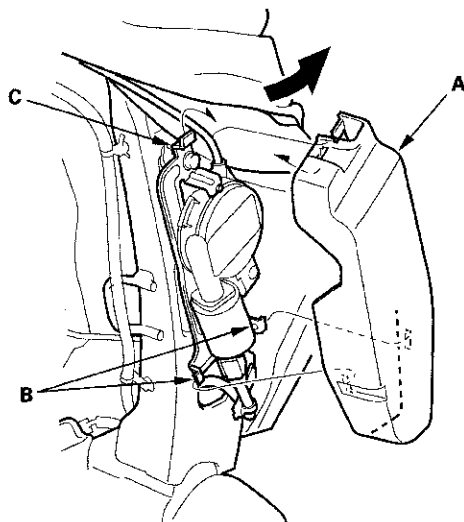

Passenger's seat

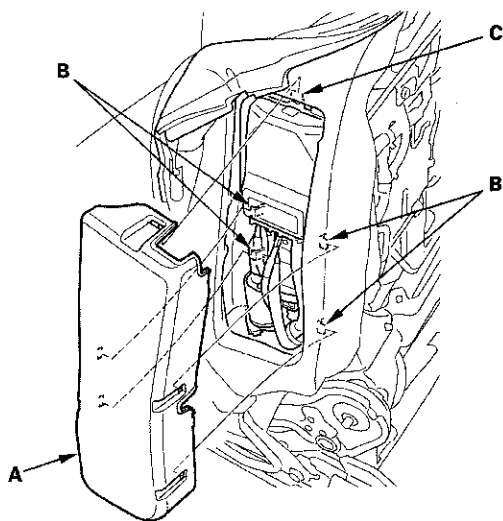

7. Disconnect the lumbar support motor connector (A), and detach the harness clip (B). Remove the bolts (C), nuts (D, E) and disconnect the ODS unit connector (F) (on passenger's seat), then remove the lumbar support motor (G).


Driver's seat

Fastener Locations

C ► : Bolt, 2




6 x 1.0 mm
6.3 N·m
(0.64 kgf·m,
4.6 lbf·ft)

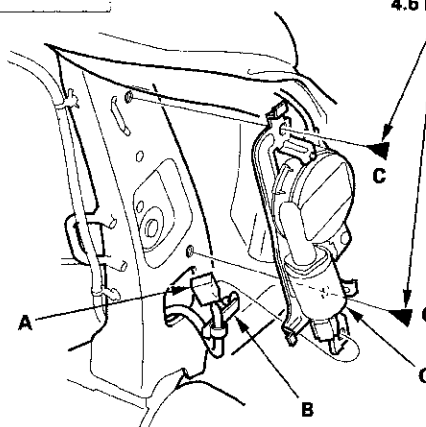

Passenger's seat

Fastener Locations

C ► : Bolt, 1 D ● : Nut, 2 E ● : Nut, 1

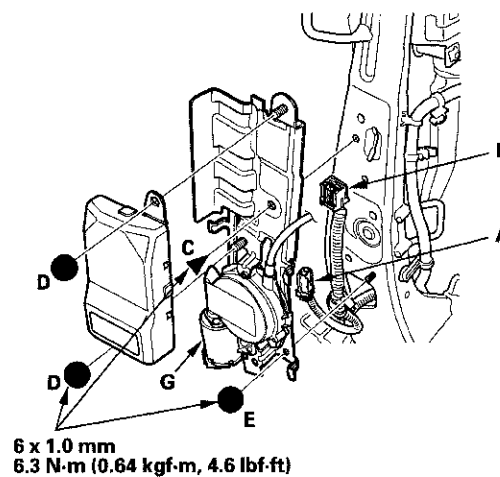

6 x 1.0 mm
6.3 N·m (0.64 kgf·m, 4.6 lbf·ft)

(cont'd)

Seats

Front Seat Lumbar Support Replacement (cont'd)

8. Install the lumbar support in the reverse order of removal, and note these items:
 - Make sure the connector is plugged in properly.
 - To prevent wrinkles when installing a seat-back cover, make sure the material is stretched evenly over the pad before securing the hook strips.
 - If the clips are damaged or stress-whitened, replace them with new ones.

Front Seat Slide Motor Replacement


SRS components are located in this area. Review the SRS component locations (see page 24-12) and the precautions and procedures (see page 24-14) before doing repairs or service.

NOTE:

- Put on gloves to protect your hands.
- Take care not to tear or damage the seat covers.

1. Remove the front seat (see page 20-114).
2. Remove the flex cable (A) and the cable housing (B).
 - 1 Release the housing from the hooks (C).
 - 2 Disconnect the cable from the worm gear (D) in the inner seat track by pulling out the housing.
 - 3 Disconnect the cable from the slide motor (E).

NOTE: Take care not to kink the cable.

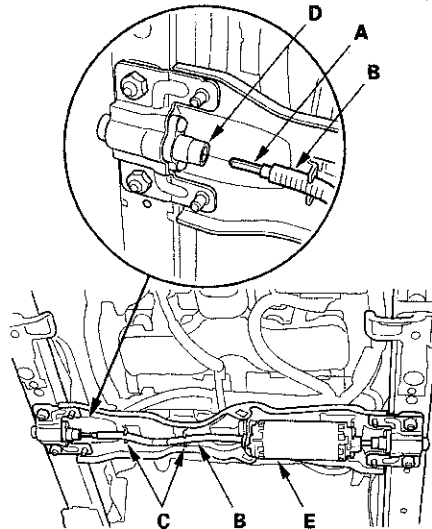





3. Disconnect the slide motor connector (A), and remove the screws, then remove the slide motor (B) from the slide motor bracket (C) while disconnecting the motor from the short flex cable (D).

Fastener Locations

► : Screw, 2

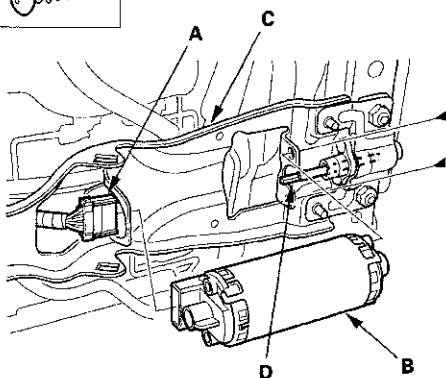

4. Pull out the short flex cable (A) from the worm gear (B) in the outer seat track.

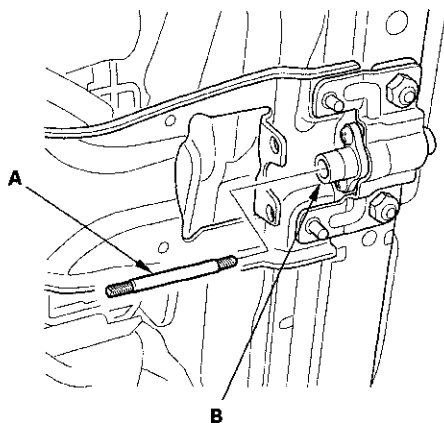

5. Install the motor in the reverse order of removal, and note these items:

- Apply multipurpose grease to the worm gear portions in both seat tracks.
- Before installing the slide motor to the slide motor bracket, install the short flex cable to the slide motor.
- Before installing the slide motor bracket to the seat tracks, make sure both seat tracks are located forward fully.
- Make sure the short flex cable and the flex cable are connected properly.

Seats

Front Seat Up-down Motor Replacement

Front Up-down Motor - 8-Way Power Seat

SRS components are located in this area. Review the SRS component locations (see page 24-12) and the precautions and procedures (see page 24-14) before doing repairs or service.


NOTE:

- Put on gloves to protect your hands.
- Take care not to tear or damage the seat covers.

1. Remove the front seat (see page 20-114).
2. Remove the seat cushion cover/pad (see page 20-133).
3. Remove the front up-down motor (A) and the front up-down motor bracket (B) as an assembly:
 - 1 Disconnect the motor connector (C).
 - 2 Using a TORX T30 bit, remove the motor bracket mounting bolts (D).
 - 3 Using a TORX T40 bit, remove the motor bracket mounting bolt (E).

Fastener Locations


D ► : TORX Bolt, 3 E ► : TORX Bolt, 1

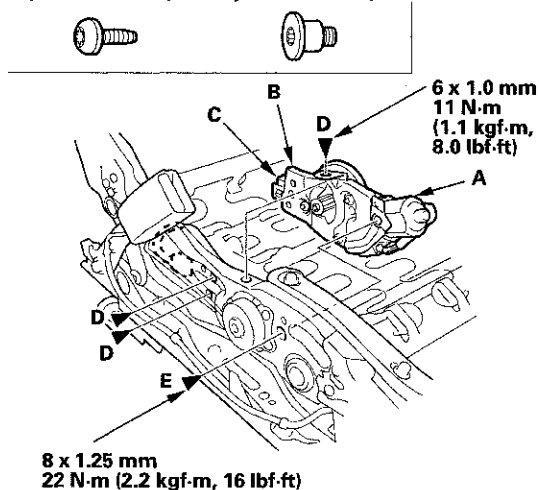

4. Detach the motor connector (A). Using a TORX T30 bit, remove the bolts, then remove the front up-down motor (B) from the front up-down motor bracket (C).


Fastener Locations

► : TORX Bolt, 3

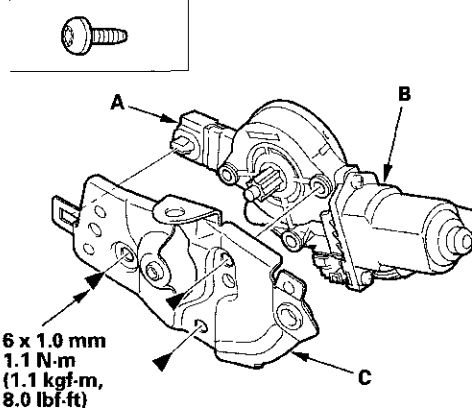

5. Install the motor in the reverse order of removal, and note these items:

- Apply multipurpose grease to the pivot portions of the up-down adjuster and the motor pinion.
- When installing the front up-down motor (A), adjust the gear (B) to the motor pinion (C) by slightly rotating the brake (D) with a 8 mm hex wrench.
- Make sure the motor connector is plugged in properly.
- Check the front seat up-down operation.

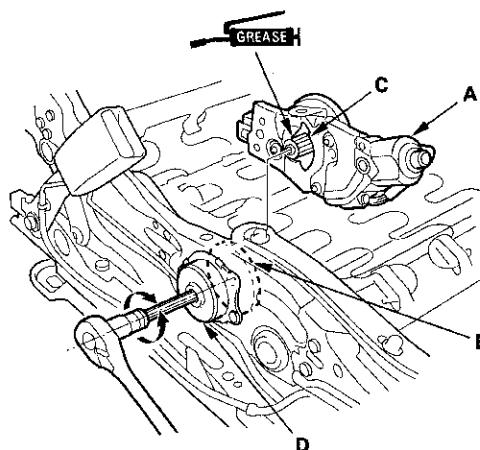



Rear Up-down Motor - 8-Way Power Seat

SRS components are located in this area. Review the SRS component locations (see page 24-12) and the precautions and procedures (see page 24-14) before doing repairs or service.

NOTE:


- Put on gloves to protect your hands.
- Take care not to tear or damage the seat covers.

Removal


1. Remove the front seat (see page 20-114).
2. Remove these items:
 - Seat-back cover/pad (see page 20-128)
 - Seat cushion cover/pad (see page 20-133)
3. Remove the rear brake (A) and the rear brake bracket (B) as an assembly.
 - 1 Using a TORX T30 bit, remove the brake bracket mounting bolts (C).
 - 2 Using a TORX T40 bit, remove the brake bracket mounting bolt (D).
 - 3 Pull the brake bracket back to remove the gear (E) from the brake gear axle.

Fastener Locations

C ► : TORX Bolt, 4 D ► : TORX Bolt, 1

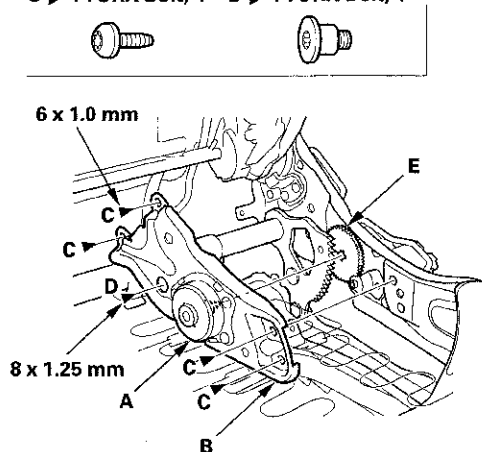


4. Remove the gear (A).

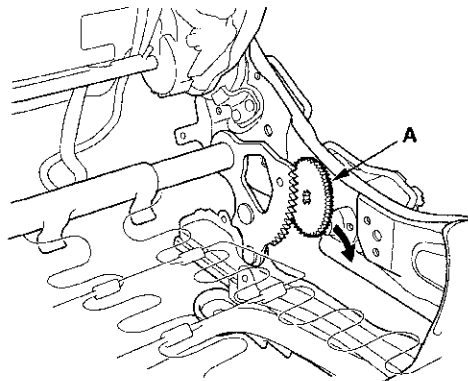

5. Manually lower the seat frame down fully to access the rear bolt securing the rear up-down motor.
6. Disconnect and detach the motor connector (A). Using a TORX T30 bit, remove the bolts, then remove the rear up-down motor (B).

Fastener Locations

► : TORX Bolt, 3

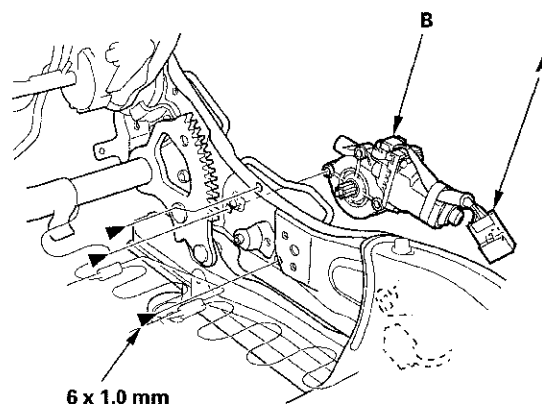

7. Apply multipurpose grease to the pivot portions of the up-down adjuster.

(cont'd)

Seats


Front Seat Up-down Motor Replacement (cont'd)

Installation

8. Using a TORX T30 bit, remove the bolts, then remove the rear brake (A) from the rear brake bracket (B).

Fastener Locations


► : TORX Bolt, 3

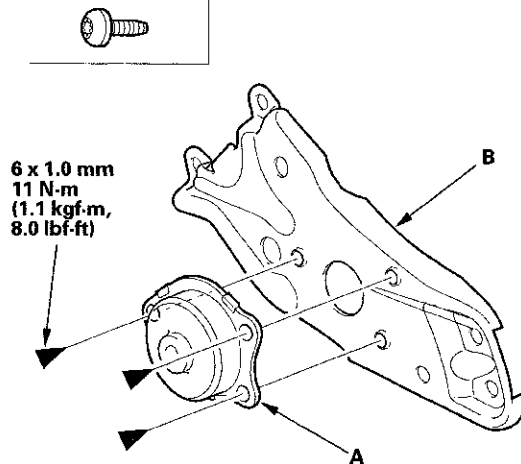


9. Apply multipurpose grease to the motor pinion.
10. Install the rear up-down motor (A). Using a TORX T30 bit, fasten the bolts. Connect the motor connector (B) and fasten the connector clip (C) to the seat frame. Make sure the connector is plugged in properly.

Fastener Locations

► : TORX Bolt, 3

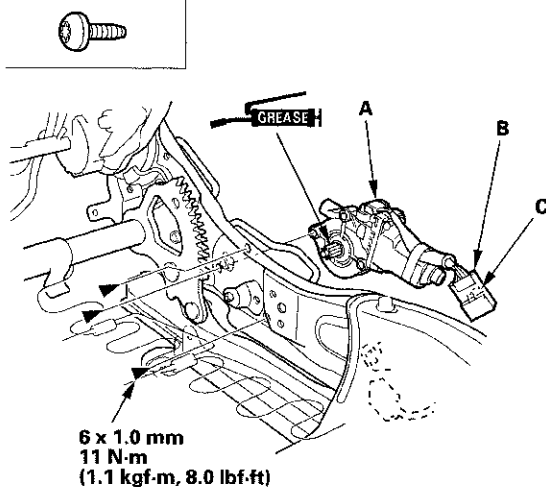


11. Manually raise the seat frame fully upward.
12. Install the gear (A) with its chamfered side faced the seat frame.

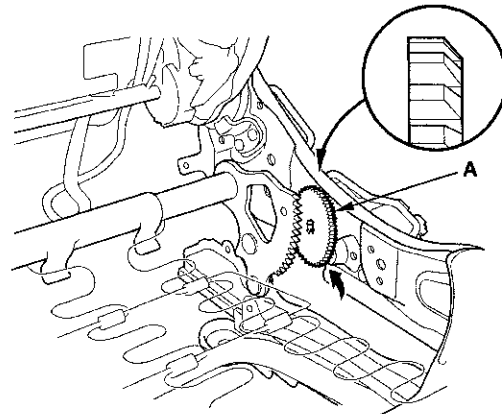

13. Install the rear brake bracket (A) without the rear brake to the seat frame. Using TORX T40 and T30 bits, lightly fasten all of the mounting bolts (B, C)

Fastener Locations

B ► : TORX Bolt, 4 C ► : TORX Bolt, 1

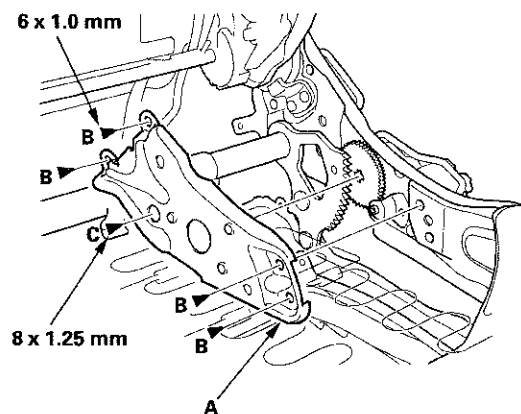


14. Carefully position the seat frame on its rear up-down motor side down.



15. Align the pinion (A) on the rear brake (B).


- 1 Engage the gear (C) with the motor pinion by hand, and center it.
- 2 Check the positions of the sector gear (D) and the cross-shaped hole (E) in the gear.
- 3 Using a 8 mm hex wrench, align the pinion on the rear brake with the sector gear, and align the fingers (F) around the axle with the cross-shaped hole in the gear.

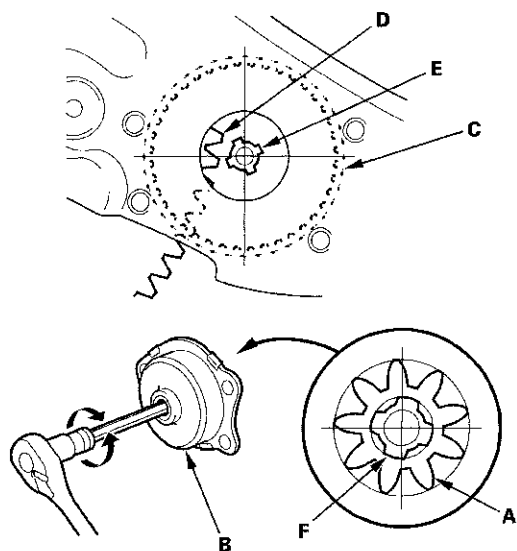

16. While holding the gear (A) perpendicular to the axle of the rear brake (B) by hand, install the rear brake on to the rear brake bracket (C).

NOTE:

- If you feel any interference between inside gears, remove the rear brake, and repeat step 15.
- If the rear brake seats fully on the rear brake bracket with no interference, go to step 17.

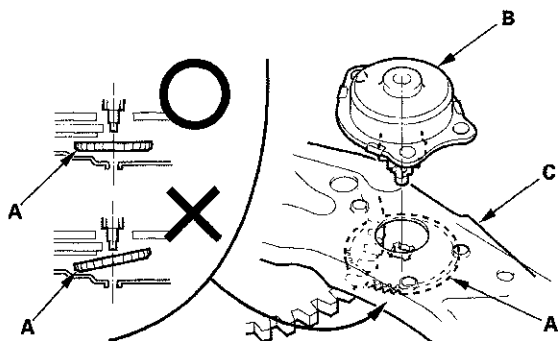

17. Install the rear brake mounting bolts (A), and using a TORX T30 bit, tighten them to their specified torque. Using TORX T40 and T30 bits, install the rear brake bracket mounting bolts (B, C) and tighten them to their specified torque.

Fastener Locations


A ▶ : TORX Bolt, 3



A
6 x 1.0 mm
11 N·m
(1.1 kgf·m, 8.0 lbf·ft)

C
6 x 1.0 mm
11 N·m
(1.1 kgf·m, 8.0 lbf·ft)

C
6 x 1.0 mm
11 N·m
(1.1 kgf·m, 8.0 lbf·ft)

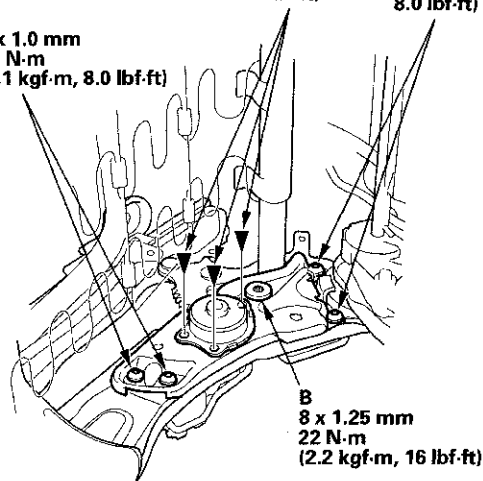

B
8 x 1.25 mm
22 N·m
(2.2 kgf·m, 16 lbf·ft)

18. Reinstall all of removed parts to the seat frame:

- Seat-back cover/pad (see page 20-128)
- Seat cushion cover/pad (see page 20-133)

19. Reinstall the front seat (see page 20-114).

20. Check the front seat up-down operation.

Seats

Front Seat Frame Removal/Installation

Special Tools Required

KTC trim tool set SOJATP2014 *

* Available through the Acura Tool and Equipment Program; 888-424-6857

SRS components are located in this area. Review the SRS component locations (see page 24-12) and the precautions and procedures (see page 24-14) before doing repairs or service.

- Check the operation of the driver's seat position sensor after any of these actions (see page 24-30):
 - Driver's seat position sensor replacement
 - Cover plate (front side of driver's seat slide rail) replacement
- Do the seat weight sensor initialization (see page 24-27) after front passenger's seat frame replacement.

NOTE:

- Put on gloves to protect your hands.
- Take care not to tear or damage the seat covers.
- Use the appropriate tool from KTC trim tool set to avoid damage when removing components.
- If the side airbag has deployed, replace the seat frame and related parts with new ones (see page 24-194).


Driver's seat

1. Remove the front seat (see page 20-114).
2. Remove these items:
 - Front seat-back cover/pad (see page 20-128)
 - Front cushion cover/pad (see page 20-133)
 - Seat belt buckle (see page 24-6)
 - Side airbag (see page 24-202)
 - Front seat ventilation blower motor/duct (see page 20-137)


3. Detach the clip and hooks (A), then remove the upper rail outer cover (B).

Fastener Location

▷ : Clip, 1

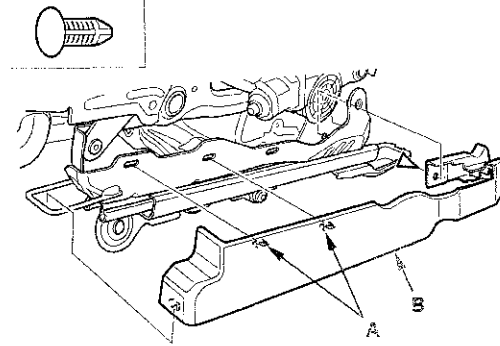

4. Remove the recline inner cover (A) and the center inner cover (B) from the seat frame (C).

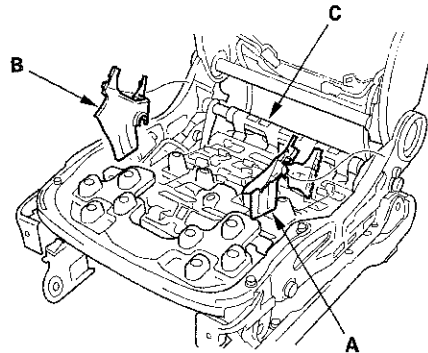




5. Detach the clip, then remove the rear inner cover (A).

Fastener Location

▷ : Clip, 1

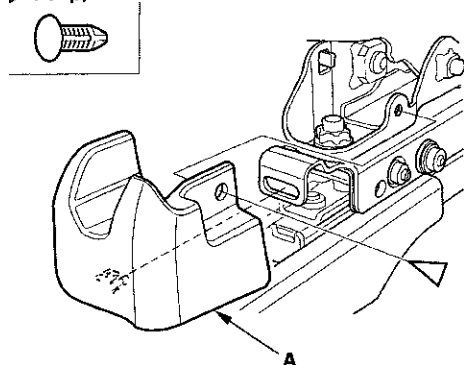

6. Install the new seat frame in the reverse order of removal, and note these items:

- If the clips are damaged or stress-whitened, replace them with new ones.
- Push the clips into place securely.


Passenger's seat

1. Remove the front seat (see page 20-114).

2. Remove these items:

- Front seat-back cover/pad (see page 20-128)
- Front cushion cover/pad (see page 20-133)
- Seat belt buckle (see page 24-6)
- Side airbag (see page 24-202)
- ODS unit (see page 24-220)

3. Remove the recline inner cover (A) and the center inner cover (B) from the seat frame (C).

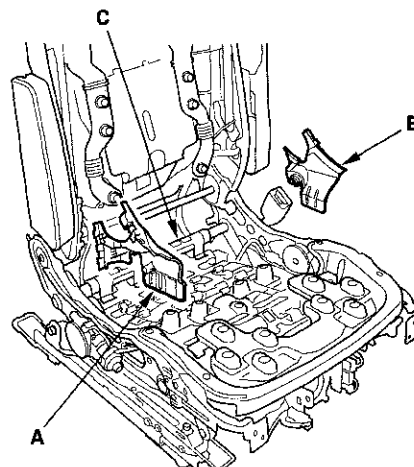

(cont'd)


Seats

Front Seat Frame Removal/Installation (cont'd)

4. Detach the clip, then remove the rear inner cover (A).

Fastener Location

▷ : Clip, 1

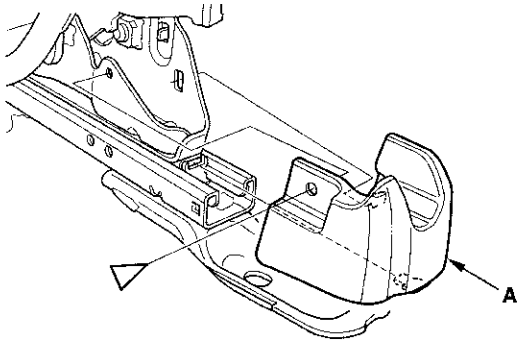

5. Install the new seat frame in the reverse order of removal, and note these items:
 - If the clips are damaged or stress-whitened, replace them with new ones.
 - Push the clips into place securely.

Front Seat-back Cover Replacement

Special Tools Required

- KTC trim tool set SOJATP2014 *
- Trim pad remover, Snap-on A 177A or equivalent, commercially available
- * Available through the Acura Tool and Equipment Program; 888-424-6857

SRS components are located in this area. Review the SRS component locations (see page 24-12) and the precautions and procedures (see page 24-14) before doing repairs or service.

- Check the operation of the driver's seat position sensor after any of these actions (see page 24-30):
 - Driver's seat position sensor replacement
 - Cover plate (front side of driver's seat slide rail) replacement
- Do the OPDS sensor initialization (see page 24-26) after front passenger's seat-back cover replacement.


NOTE:

- Put on gloves to protect your hands.
- Take care not to tear or damage the seat covers.
- On the passenger's seat, do not touch the OPDS sensor in the seat-back pad, and keep it away from oil. Oil can corrode the sensor causing it to fail.
- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.

1. Remove the front seat (see page 20-114).



2. From under the seat cushion, release the hook strap (A) from the seat cushion frame springs (B), then pull the undercover (C) of the back cover.

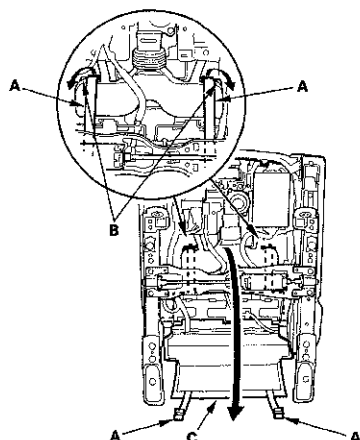


3. Insert a trim pad remover between the bottom of the back cover (A) and the seat frame until it squarely engages one of the clips. Gently pry on the clip until it detaches from the seat frame. Repeat for the other clip. Gently pull the back panel back to release the hooks (B), then pull the panel down to release the hooks (C).

NOTE:


- The clips usually break during removal. Always replace the clips with new ones.
- Detach the clips and the hooks in the numbered sequence as shown.
- Take care not to damage the seat-back panel or the clip mounting pads.

Fastener Locations

▷ Clip, 2

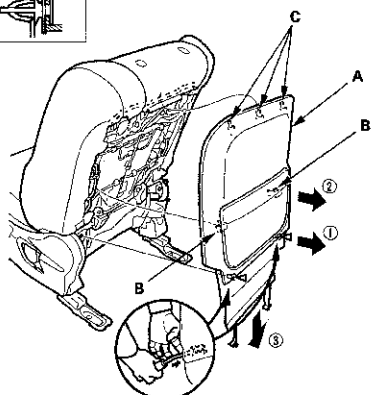

4. Release the Velcro fasteners (A) and the hook strips (B), then loosen the seat-back cover (C).

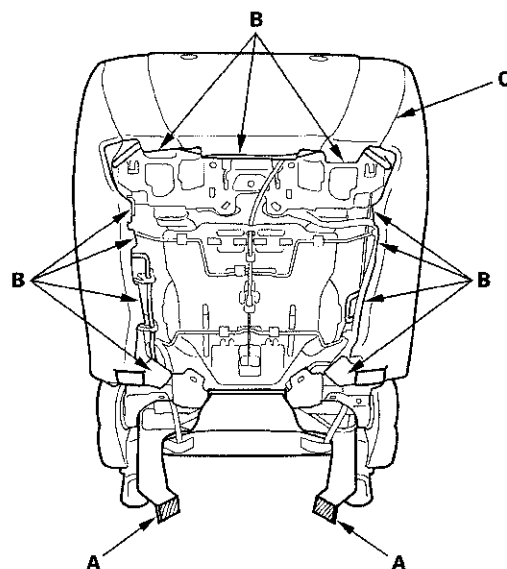


(cont'd)


Seats

Front Seat-back Cover Replacement (cont'd)


5. Driver's seat: Disconnect the seat-back heater connector (A), and detach the harness clip (B).

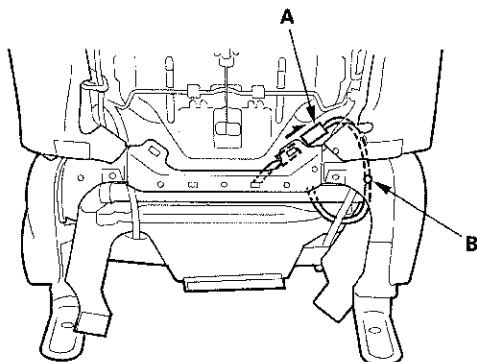

6. Pull out the seat-back ventilation duct (A) from the seat-back cushion (B) both sides.

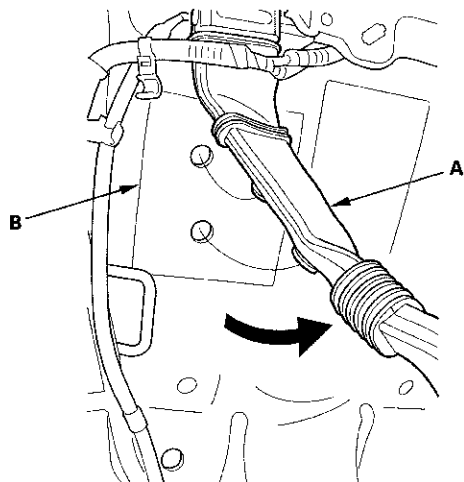


7. Release airbag attachment wire A and airbag attachment wire B from seat-back frame (C).

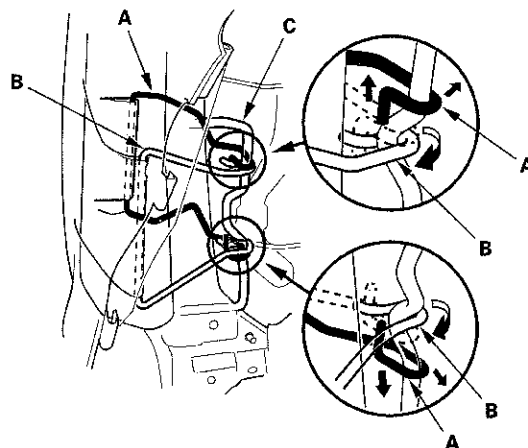

8. Passenger's seat: Remove the ODS unit cover (A).


- 1 Turn over the seat-back cover (B) and pad (C) as needed.
- 2 Release the cover from the lower hooks (D).
- 3 Pull the cover upward to release it from the upper hook (E).

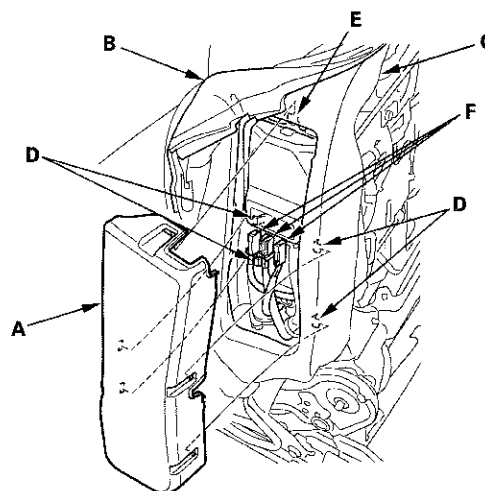


9. Passenger's seat: Disconnect the OPDS sensor connectors (F).




10. Passenger's seat: Detach the harness clips (A) fastening the OPDS sensor harnesses (B), and release the wire harness from the harness holder (C).

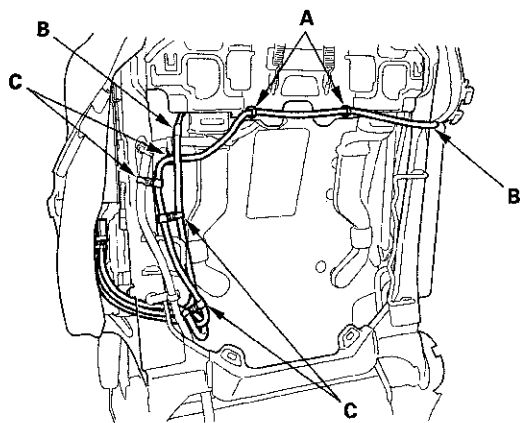


11. Pull out the head restraint guides (A) while pinching the tabs on the end of the guides, and remove them.

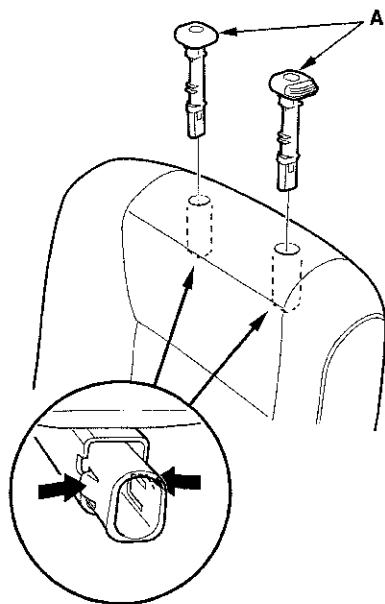

12. Remove the seat-back cover/pad (A) from the seat-back frame (B).

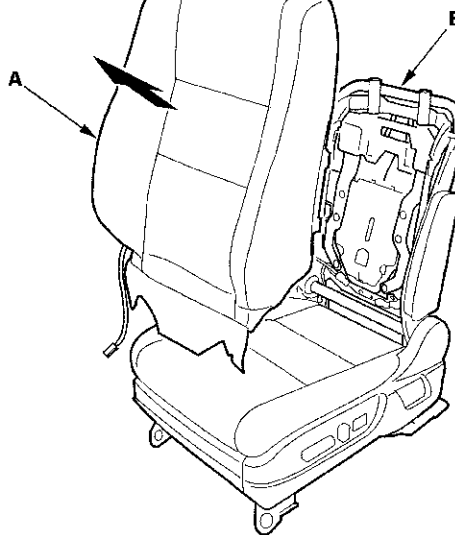

13. Pull back the edge of the seat-back cover all the way around, and release the upholstery rings (A), then remove the seat-back cover (B).

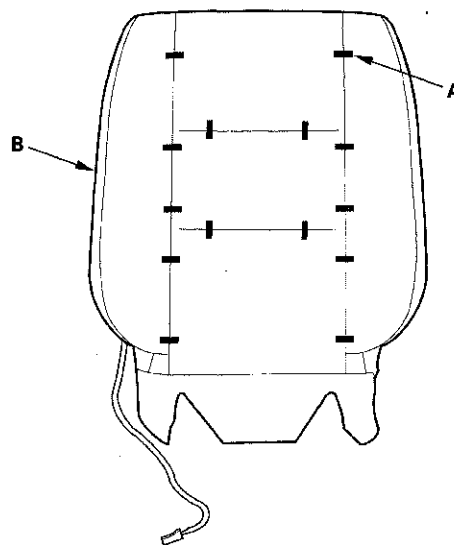


(cont'd)

Seats



Front Seat-back Cover Replacement (cont'd)

14. Remove airbag attachment wire B from the outside reinforcing cloths (C). Remove airbag attachment wire A and the inside reinforcing cloths (D), then remove the wires.

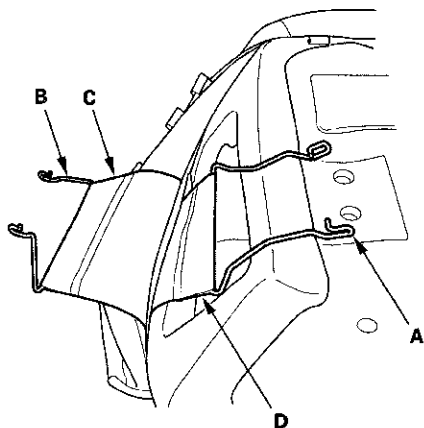

15. Install the cover in the reverse order of removal, and note these items:

- To prevent wrinkles when installing a seat-back cover, make sure the material is stretched evenly over the pad before securing the clips, the hooks, and the hook strips.
- Before installing the seat-back cover, make sure airbag attachment wires (A, B) are installed to the reinforcing cloths (C) correctly, and wires A and B are securely assembled.
- Replace any upholstery rings you removed with new ones (D). Install them with commercially available upholstery ring pliers (E).
- Use only original Honda replacement seat-back covers.
- Make sure the seat-back heater harness, and the OPDS sensor harness (passenger's seat) are routed properly.
- Replace the back cover clips with new ones.

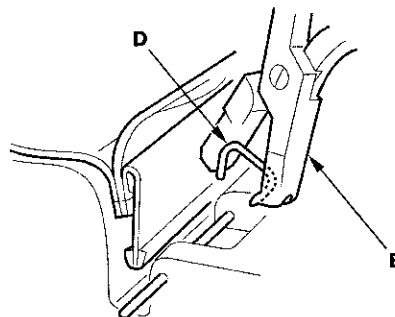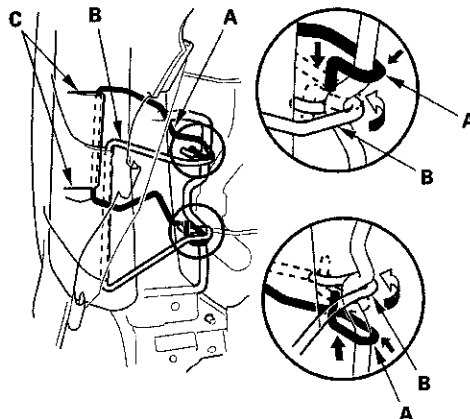



Front Seat Cushion Cover Replacement

Special Tools Required

KTC trim tool set SOJATP2014 *

* Available through the Acura Tool and Equipment Program; 888-424-6857

SRS components are located in this area. Review the SRS component locations (see page 24-12) and the precautions and procedures (see page 24-14) before doing repairs or service.


NOTE:

- Put on gloves to protect your hands.
- Take care not to tear or damage the seat covers.
- Use the appropriate tool from KTC trim tool set to avoid damage when removing components.

1. Remove the front seat (see page 20-114).
2. Remove the screw, and release the hook (A), the tabs (B), and the pin (C), then remove the front cover (D).

Fastener Location

► : Screw, 1


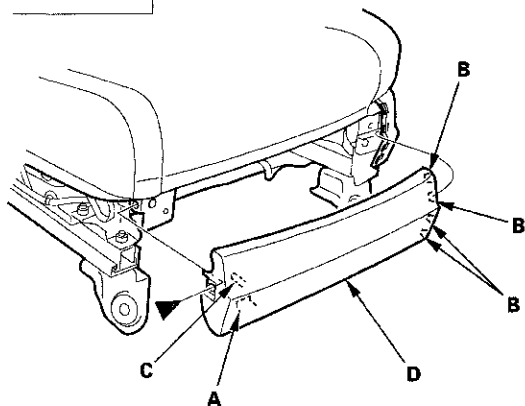


3. Remove the recline cover (A).

- 1 Remove the screw, and detach the clip.
- 2 Detach the tabs (B).
- 3 Pull up the cover, then release the hook (C) and the tab (D).
- 4 Remove the upper inner cover (E).
- 5 Disconnect the power seat adjustment switch connector (F) and the lumbar support switch connector (G).
- 6 Remove the wire harness (H) from the hooks (I).

Fastener Locations

 ► : Screw, 1 ▷ : Clip, 1

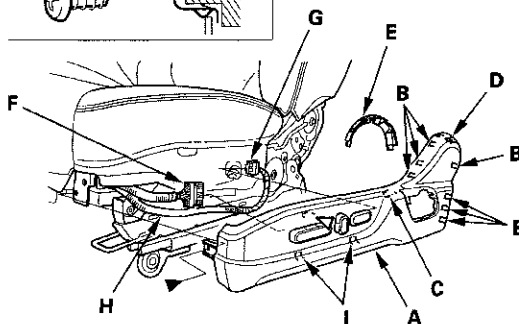


4. Remove the center cover (A).

- 1 Remove the screw.
- 2 Detach the tabs (B).
- 3 Pull up the cover, then release the tab (C).

Fastener Location

► : Screw, 1

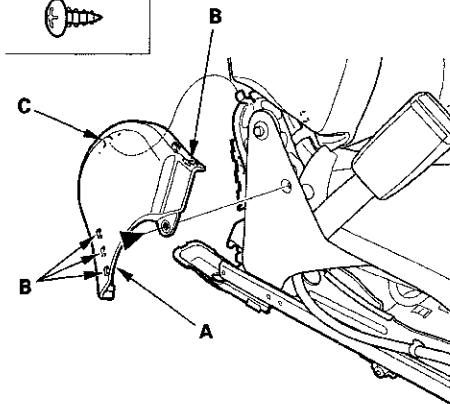


(cont'd)


Seats

Front Seat Cushion Cover Replacement (cont'd)


5. From under the seat cushion, release the hook strap (A) from the seat cushion frame springs (B), then pull the undercover (C) of the back cover back.

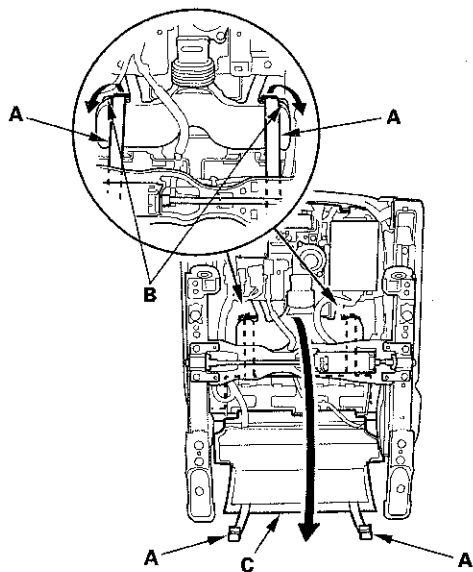

6. Disconnect the seat cushion heater connector (A) and detach the harness clip (B).

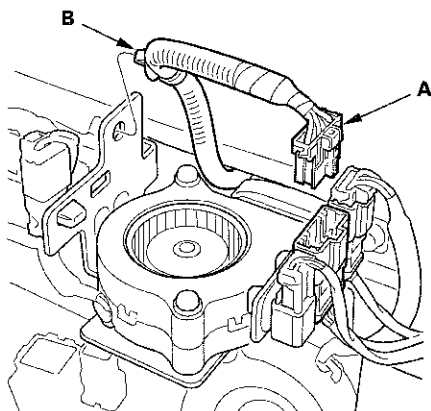

7. Release the Velcro fasteners (A), then pull back the harness holder covers (B) fastening the side airbag harness (C) and the seat wire harness (D).


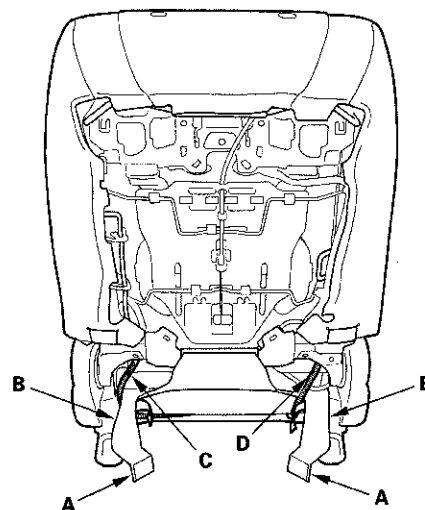





8. Remove the clip, then remove the cloth (A) of the seat cushion cover from the connecting rod (B) and release the hook strips (C) from both sides of the seat cushion frame.

Fastener Location

 
▷ : Clip, 1

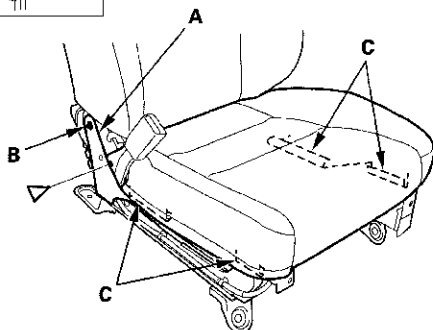


9. Release the hook strips (A) from the under the seat cushion.

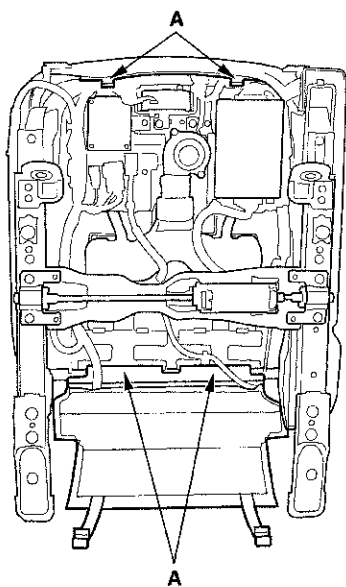

10. Remove the seat cushion cover/pad (A) from the seat frame (B).

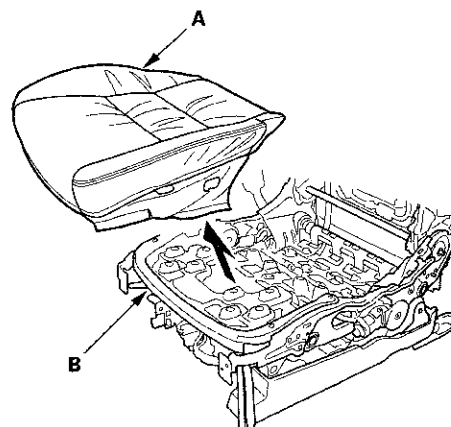

11. Release the hooks (A) from under the seat cushion (B).

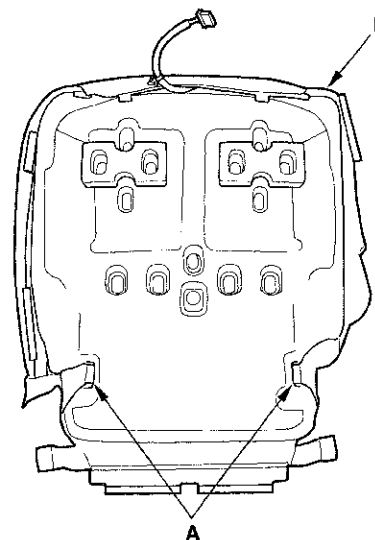


(cont'd)

Seats


Front Seat Cushion Cover Replacement (cont'd)

12. Pull back the edge of the seat cushion cover all the way around, and release the upholstery rings (A), then remove the seat cushion cover (B).

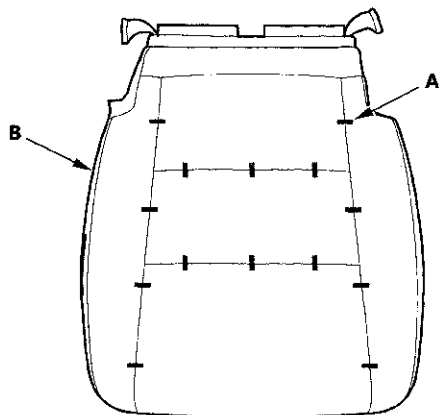

13. Install the cover in the reverse order of removal, and note these items:

- To prevent wrinkles when installing a seat-back cover, make sure the material is stretched evenly over the pad before securing the clips, the hooks, and the hook strips.
- Replace any upholstery rings you removed with new ones (A). Install them with commercially available upholstery ring pliers (B).

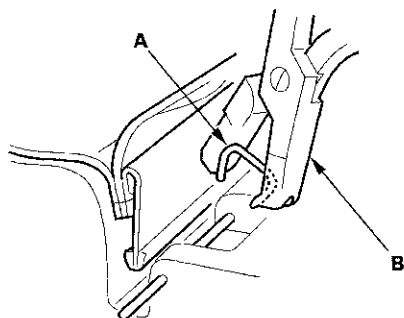



Front Seat Ventilation Blower Motor/Duct Replacement

Seat-back Blower Motor/Duct

SRS components are located in this area. Review the SRS component locations (see page 24-12) and the precautions and procedures (see page 24-14) before doing repairs or service.


NOTE:

- Take care not to tear or damage the seat covers.
- Put on gloves to protect your hands.

1. Remove the front seat (see page 20-114).
2. Remove the seat-back cover and the pad (see page 20-128).
3. Disconnect the connector (A) and remove the screws, then remove the blower motor/duct (B) from the seat-back frame.

Fastener Locations



► : Screw, 2

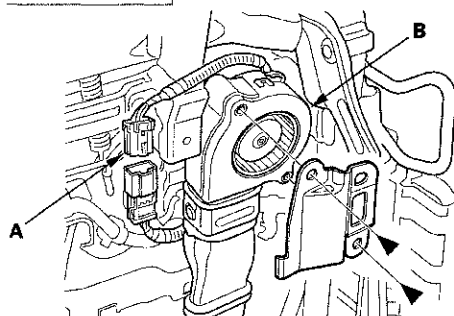

4. Remove the clips, then separate the duct (A, B) and the blower motor (C, D).

Fastener Locations

 ▷ : Clip, 4

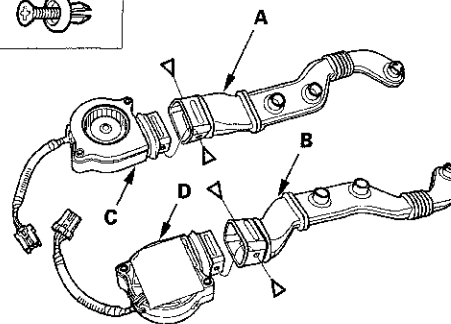

5. Install the blower motor/duct in the reverse order of removal.

NOTE: If the clips are damaged or stress-whitened, replace them with new ones.

(cont'd)

Seats

Front Seat Ventilation Blower Motor/Duct Replacement (cont'd)


Seat Cushion Rear Blower Motor/Duct

SRS components are located in this area. Review the SRS component locations (see page 24-12) and the precautions and procedures (see page 24-14) before doing repairs or service.


NOTE:

- Take care not to tear or damage the seat covers.
- Put on gloves to protect your hands.

1. Remove the front seat (see page 20-114).
2. Remove the front seat cushion cover (see page 20-133).
3. Disconnect the blower motor connector (A), then remove the connector from the bracket.

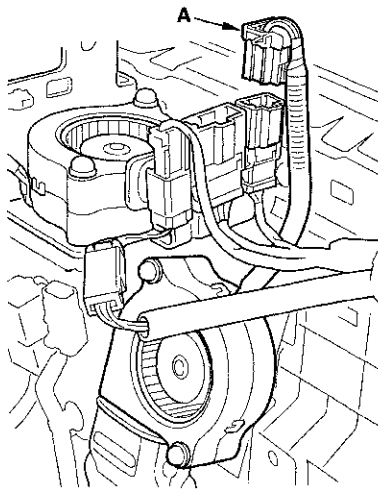


4. Release the wire bands (A) and clips (B) securing the blower duct (C) to the seat cushion springs (D).

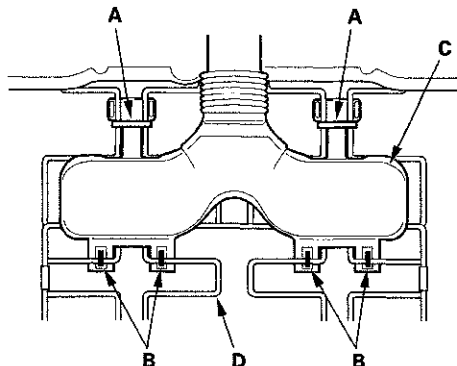

5. Remove the screws, and release the hooks (A) from the cushion frame wire, then remove the blower motor/duct (B).

Fastener Locations


► : Screw, 2

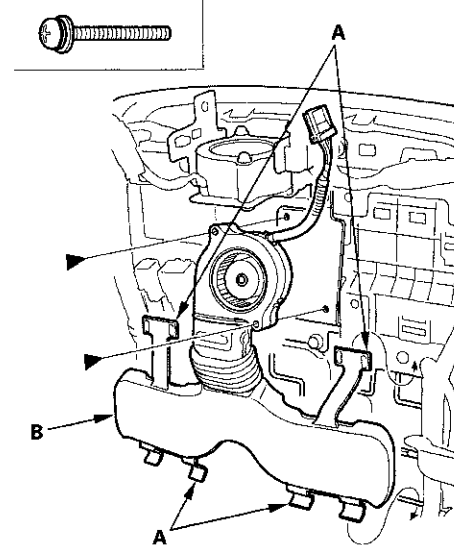

6. Remove the clips, then separate the duct (A) and the blower motor (B).

Fastener Locations

▷ : Clip, 2

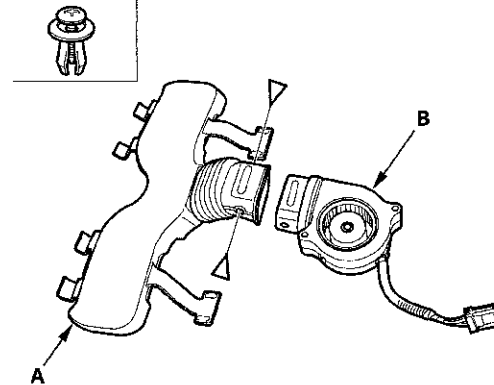

7. Install the blower motor/duct in the reverse order of removal.

NOTE: If the clips are damaged or stress-whitened, replace them with new ones.



Seat Cushion Front Blower Motor


NOTE:

- Take care not to tear or damage the seat covers.
- Put on gloves to protect your hands.

1. Remove the front seat (see page 20-114).
2. Remove the front seat cushion cover (see page 20-133).
3. Disconnect the blower motor connector (A), and remove the screws, then remove the blower motor (B) from the duct.

Fastener Locations

► : Screw, 2

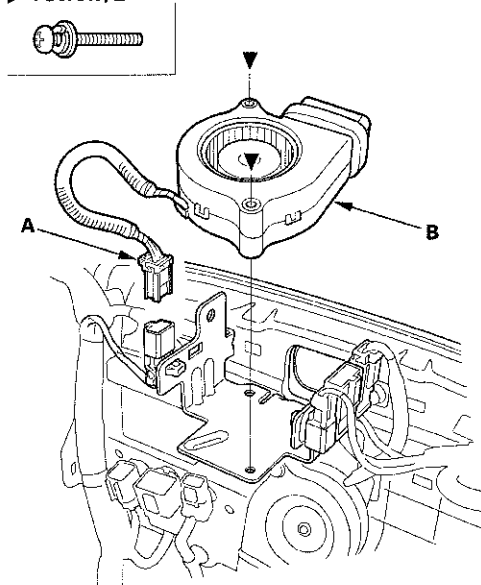

4. Install the blower motor in the reverse order of removal.

Seat Cushion Front Duct


NOTE:

- Take care not to tear or damage the seat covers.
- Put on gloves to protect your hands.

1. Remove the front seat (see page 20-114).
2. Remove the seat-back cover (see page 20-128).
3. Remove the front seat cushion cover/pad (see page 20-133).
4. Remove the screws, then remove the duct (A).

Fastener Locations

► : Screw, 2

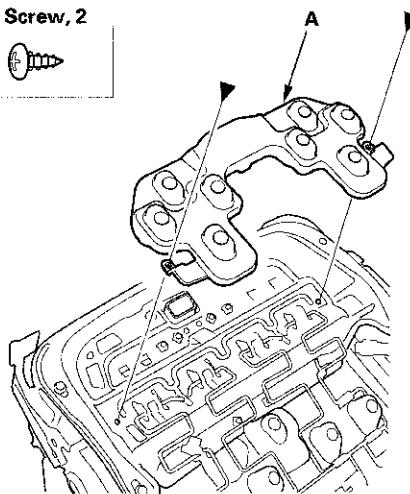


5. Install the duct in the reverse order of removal.

Seats


Rear Seat Removal/Installation

NOTE: Take care not to scratch the body or tear the seat covers.

1. While pushing down on the seat cushion (A), pull the seat hook handles (B) to release the hooks (C).

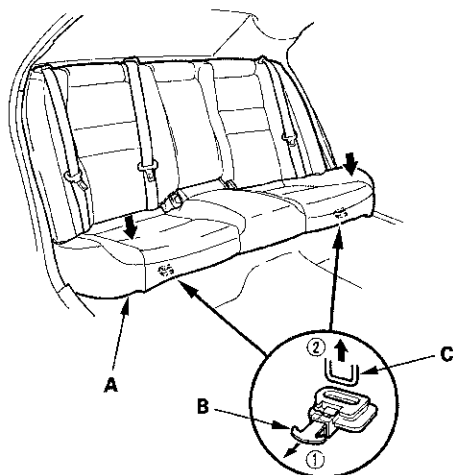


2. Remove the seat cushion (A), and release the center seat belt buckles (B) from their slits (C).

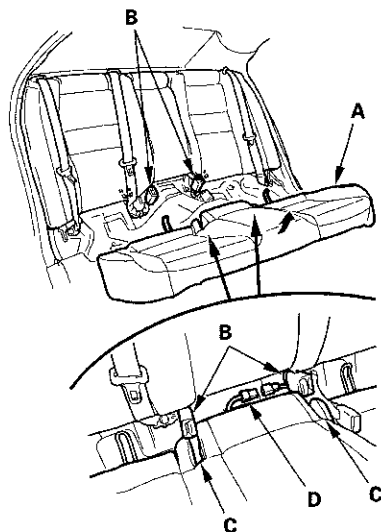

3. Disconnect the seat cushion heater connector (D) (if equipped).

4. Release the seat belt (A) from their guides (B).

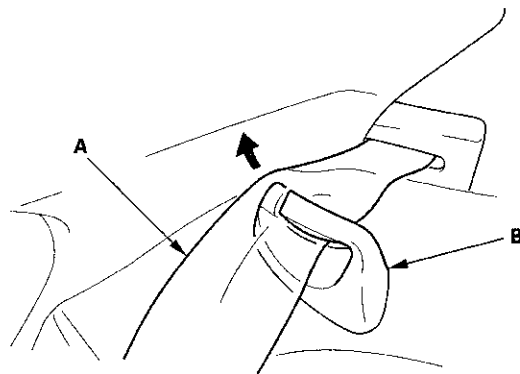

5. Remove the rear center seat belt and the rear seat belt buckles (see step 2 on page 24-9).


6. Remove the bolts from the base of the seat-back (A).

Fastener Locations

► : Bolt, 4




6 x 1.0 mm
9.8 N·m
(1.0 kgf·m, 7.2 lbf·ft)

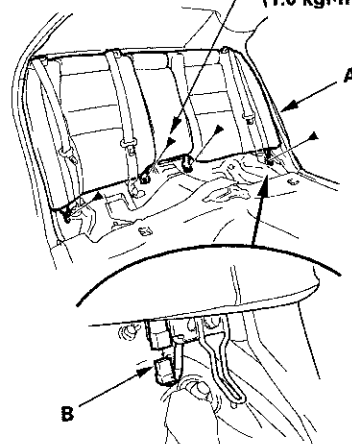

7. Disconnect the power head restraint and the seat-back heater (if equipped) connector (B).



8. Lift the seat-back (A) up to release the wire loops (B) from the hooks (C) on the body, then remove the seat-back.

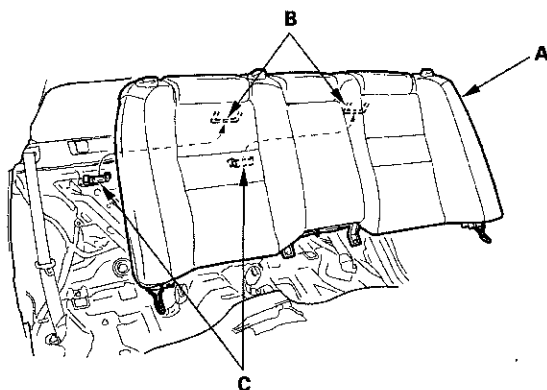

9. Install the seat in the reverse order of removal, and note these items:

- Guide the belts over the front of the seat-back as you install it.
- Before attaching the rear seat-back and the cushion, make sure there are no twists or kinks in the seat belts.
- When installing the seat cushion, slip the seat belt buckles through the slits in the seat cushion.
- Make sure the connector is plugged in properly.

Rear Seat Armrest Beverage Holder Replacement

Special Tools Required


KTC trim tool set SOJATP2014 *

* Available through the Acura Tool and Equipment Program; 888-424-6857

NOTE:

- Take care not to tear or damage the seat covers.
- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.



1. Detach the hooks (A), then remove the beverage holder cover (B).

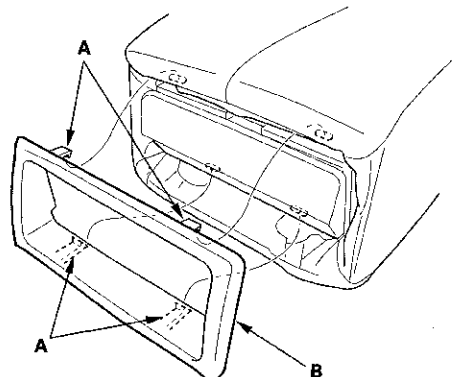

2. Remove the screws, then pull out on the beverage holder (A) to release the hooks (B).

Fastener Locations

 ► : Screw, 2

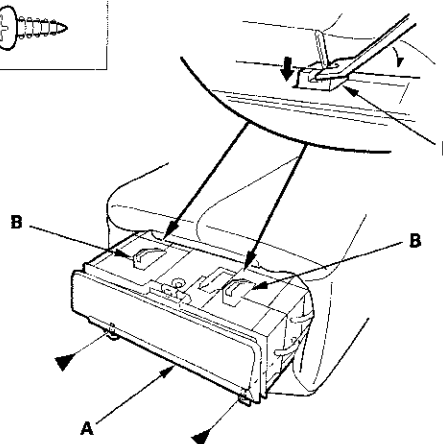

3. Install the beverage holder in the reverse order of removal.

Seats


 
Rear Seat Armrest Replacement

NOTE: Take care not to tear or damage the seat covers.

1. Remove the rear seat-back (see page 20-140).
2. Open the trunk pass-through cover (A), and remove the screws, then separate the armrest cover (B) from the trunk pass-through cover.

Fastener Locations



► : Screw, 2

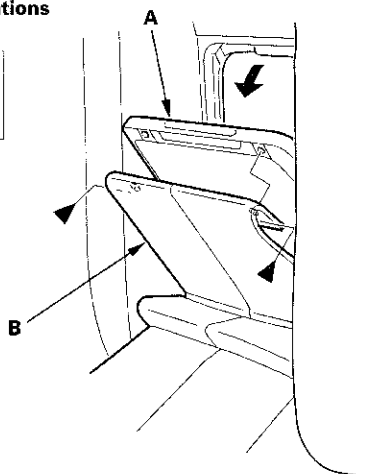

3. Remove the screws, and detach the hooks (A), then remove the upper cover (B). Remove the spring (C).

Fastener Locations


 
► : Screw, 2

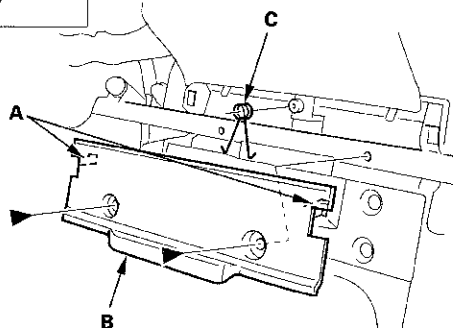

4. Release the Velcro fastener (A), then pull back the upper flap (B). Remove the screws, then remove the trunk pass-through cover (C).

Fastener Locations

 ► : Screw, 2

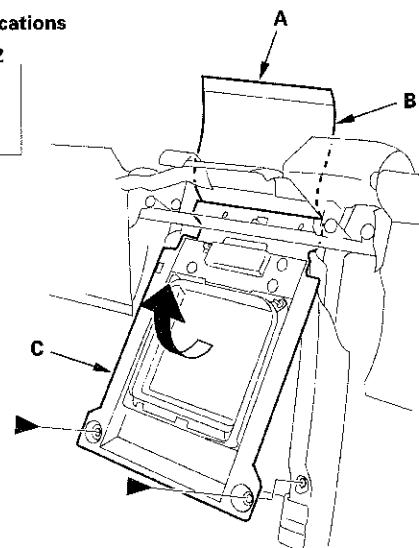


5. Remove the bolts (A) and the screws (B), and remove the armrest (C) from the seat-back frame.

Fastener Locations

A ► : Bolt, 4 B ► : Screw, 2



6 x 1.0 mm
9.8 N·m
(1.0 kgf·m,
7.2 lbf·ft)

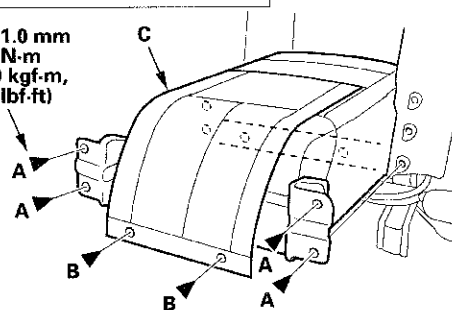

6. Install the armrest in the reverse order of removal.




 
Trunk Pass-through Cover Key Cylinder Replacement

NOTE: Take care not to tear or damage the seat covers.

1. Remove the rear seat-back (see page 20-140).
2. Remove the screws, and detach the hooks (A), then remove the upper cover (B).

Fastener Locations


► : Screw, 2

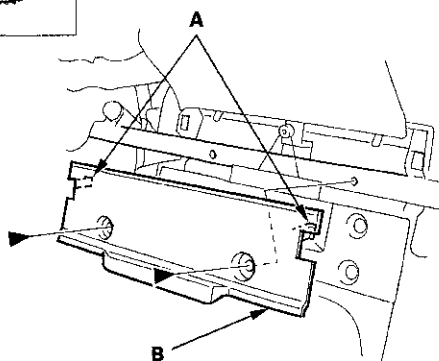

3. Remove the screws, and detach the hook (A), then remove the key cover (B), and release the hook (C).


Fastener Locations

► : Screw, 3

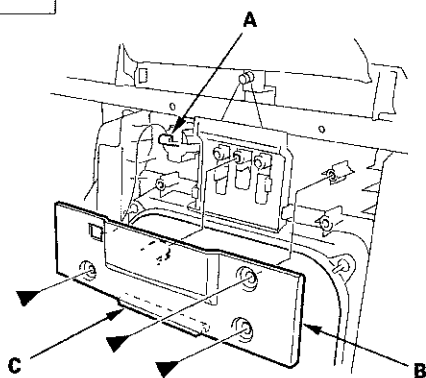

4. Remove the retainer clip (A), then remove the trunk pass-through cover key cylinder (B) from the lid (C).

NOTE: Wear eye protection when doing this step.

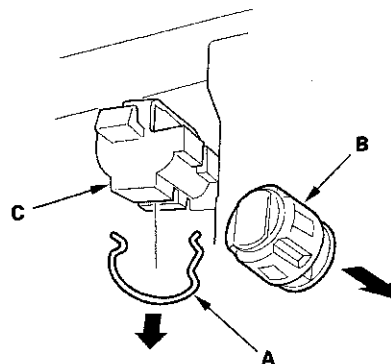


5. Install the key cylinder in the reverse order of removal, and make sure the trunk pass-through cover opens properly, and locks securely.

Seats


Rear Seat Head Restraint Replacement

NOTE: Take care not to tear or damage the seat covers.

1. Remove the rear seat-back (see page 20-140).
2. Remove the seat-back cover/pad (see page 20-146).
3. Disconnect the connector (A), and detach it from the seat-back frame. Detach the wire harness clip (B), and remove the harness band (C) (right side head restraint only).

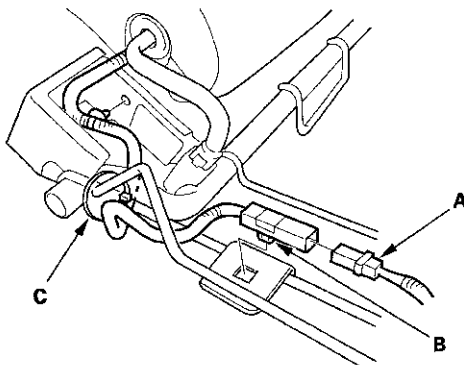

4. Remove the retainers (A) from both head restraint guides (B), then remove the head restraint (C). Remove both head restraint guides.

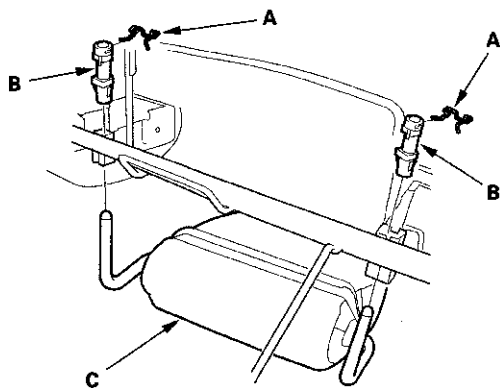


5. Install the head restraint in the reverse order of removal.


Rear Seat Head Restraint Actuator/Wire Harness Replacement

NOTE: Take care not to tear or damage the seat covers.

1. Remove the rear seat-back (see page 20-140).
2. Detach the hooks (A), and release the hooks (B), then remove the head restraint case (C) from the head restraint (D).

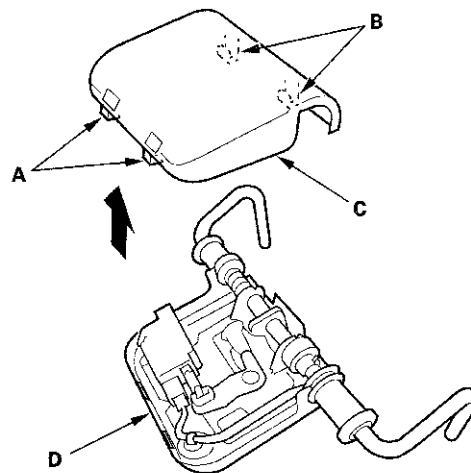

3. Remove the actuator wire harness (A).
 - 1 Detach the hooks (B), then remove the guide (C).
 - 2 Remove the connector clip (D) from the connector (E).
 - 3 Remove the head restraint pillar trim (F).
 - 4 Disconnect the actuator connector (G), and detach the harness clip (H) from the head restraint base (I).

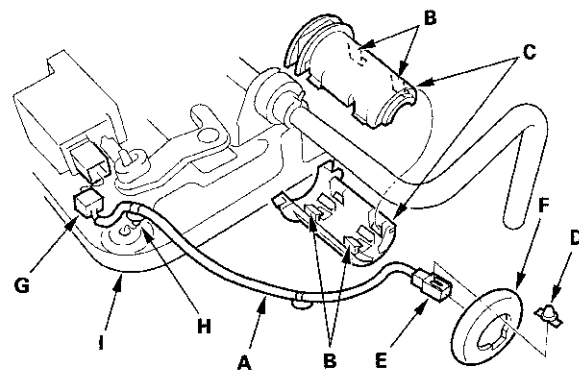




- Carefully remove the foam as needed from the frame. Remove the screws, and release the arm (A) from the hook (B), then remove the actuator (C).

Fastener Locations

► : Screw, 2

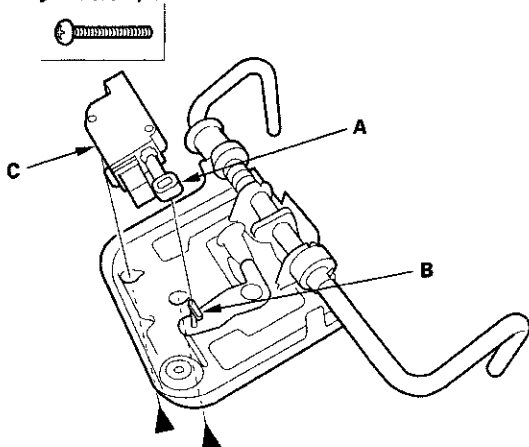

- Install the actuator and the wire harness in the reverse order of removal.


Rear Seat-back Upper Flap Replacement

NOTE: Take care not to tear or damage the seat covers.

- Remove the rear seat-back (see page 20-140).
- Release the Velcro fastener (A), then pull back the upper flap (B). Detach the clips, then remove the upper flap from the head restraint lid.

Fastener Locations

▷ : Clip, 2

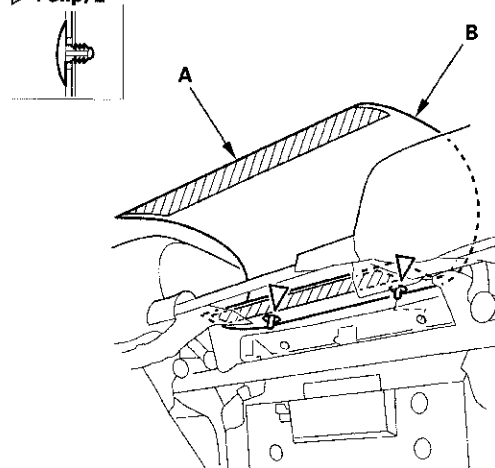

- Install the upper flap in the reverse order of removal.


Seats

Rear Seat-back Cover Replacement

NOTE:

- Take care not to tear or damage the seat covers.
- Put on gloves to protect your hands.



1. Remove the seat-back (see page 20-140).
2. Remove the armrest (see page 20-142).
3. Release the hooks (A), the Velcro fasteners (B), the hooks (C) and the clips (D).

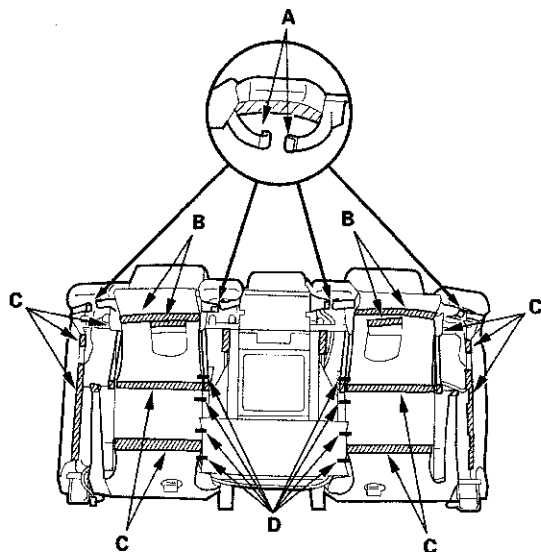


4. Remove the screws, then remove the center belt guide (A).

Fastener Locations

 
► : Screw, 2

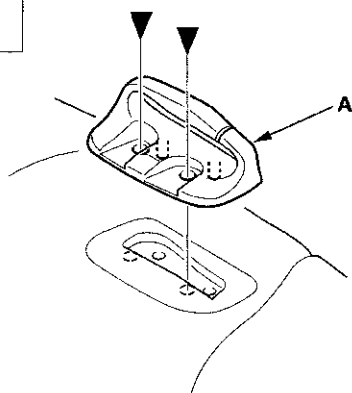

5. Separate the seat-back covers/pads (A) and the seat-back frame (B).

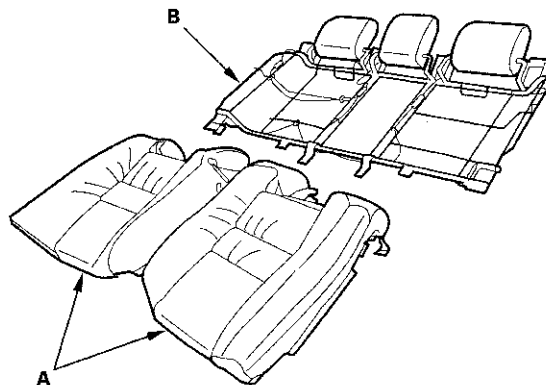

6. Pull back the edge of the seat-back cover (A) all the way around, and release the upholstery rings (B), then remove the seat-back cover.

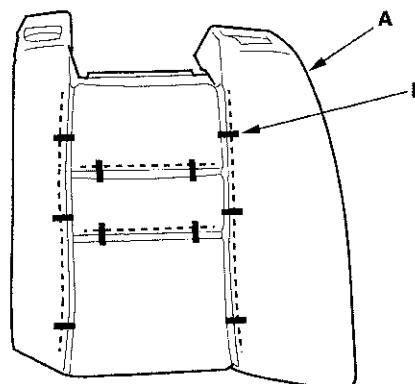


7. Install the cover in the reverse order of removal, and note these items:

- To prevent wrinkles when installing a seat-back cover, make sure the material is stretched evenly over the pad before securing the hook strips, and the clips.
- Replace any upholstery rings you removed with new ones. Install them with commercially available upholstery ring pliers.




Rear Seat Cushion Cover Replacement

1. Remove the rear seat cushion (see page 20-140).
2. Release all the upholstery rings (A) from under the seat cushion, and fold back the seat cushion cover.

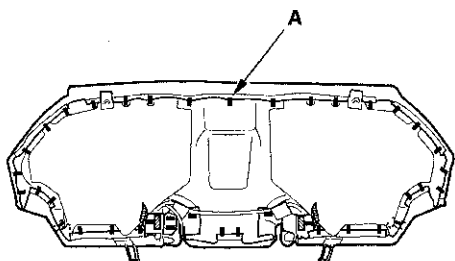


3. Pull back the edge of the seat cushion cover all the way around, and release the upholstery rings (A), then remove the seat cushion cover.

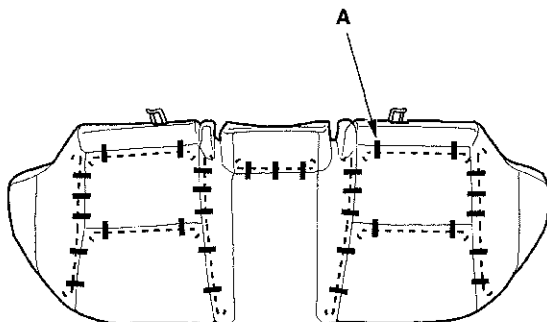

4. Install the cover in the reverse order of removal, and note these items:

- To prevent wrinkles, make sure the material is stretched evenly over the pad before securing the clips.
- Replace any upholstery rings (A) you removed with new ones. Install them with commercially available upholstery ring pliers (B).

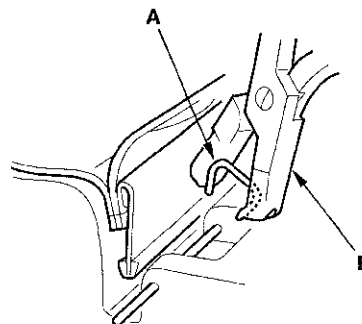


Seats


Rear Seat Head Restraint Cover/Pad Replacement

NOTE: Take care not to tear or damage the seat covers.

1. Remove the head restraint (see page 20-144).
2. Unzip the head restraint cover (A), pull it back, and remove it.

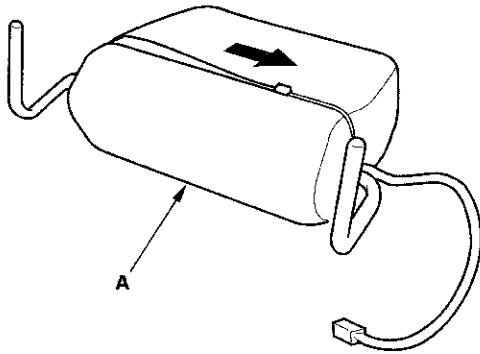

3. Separate the double-sided adhesive tapes (A), then remove the head restraint pad (B) and the head restraint pad molding (C) from the head restraint frame (D).

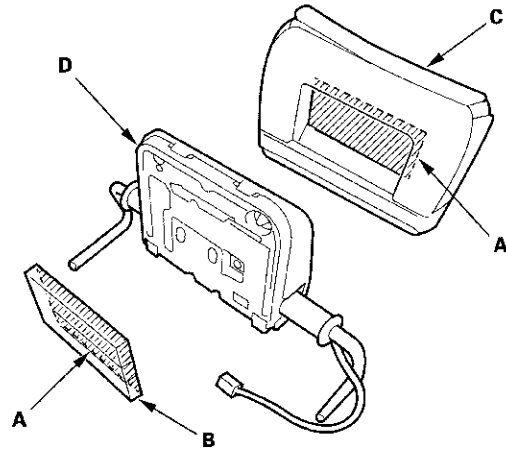

4. Scrape off the remaining double-sided adhesive tape from the head restraint frame, then clean its surface with a shop towel dampened with isopropyl alcohol.
5. Install the cover and pads in the reverse order of removal.