

2007-08 ACCESSORIES AND EQUIPMENT

Ignition Switch - TL

TEST

SRS components are located in this area. Review the SRS component locations (see **COMPONENT LOCATION INDEX**) and precautions and procedures (see **PRECAUTIONS AND PROCEDURES**) before performing repairs or servicing.

1. Make sure you have the anti-theft codes for the audio system and the navigation system (if equipped). Make sure the ignition switch is OFF.
2. Disconnect the battery negative cable.
3. Remove the left front door sill trim and left kick panel (see **TRIM REMOVAL/INSTALLATION - DOOR AREAS**).
4. Disconnect the 6P connector from the driver's under-dash fuse/relay box.

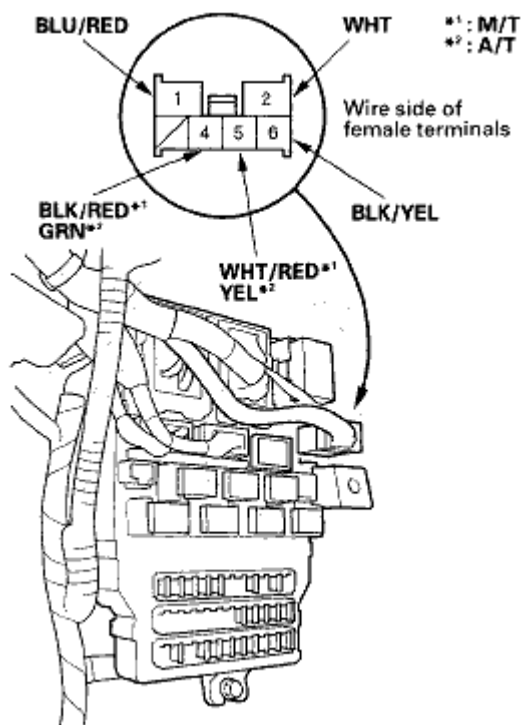


Fig. 1: Identifying Driver's Under-Dash Fuse/Relay Box 6P Connector Terminals

5. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	WHT/ RED* ¹ YEL* ² (ACC)	WHT (BAT)	BLK/ YEL (IG1)	BLK/ RED* ¹ GRN* ² (IG2)	BLU/ RED (ST)
O (LOCK)					
I (ACC)	○ — ○				
II (ON)	○ — ○ — ○ — ○				
III (START)		○ — ○ — ○ — ○			

*¹: M/T*²: A/T**Fig. 2: Terminals Continuity Chart**

6. If the continuity checks do not agree with the table, replace the steering lock.
7. After reconnecting the battery, enter the anti-theft codes for the audio system and the navigation system (if equipped), then set the clock (on vehicles without navigation).