

2007-2008 ACCESSORIES AND EQUIPMENT

Fenderwell - TL

FRONT STRAKE REPLACEMENT

NOTE: Take care not to scratch the body.

1. Remove the bolts (A) and release the hooks (B), then remove the front strakes (C).

Fastener Locations

A ► : Bolt, 4 D ► : Bolt, 5

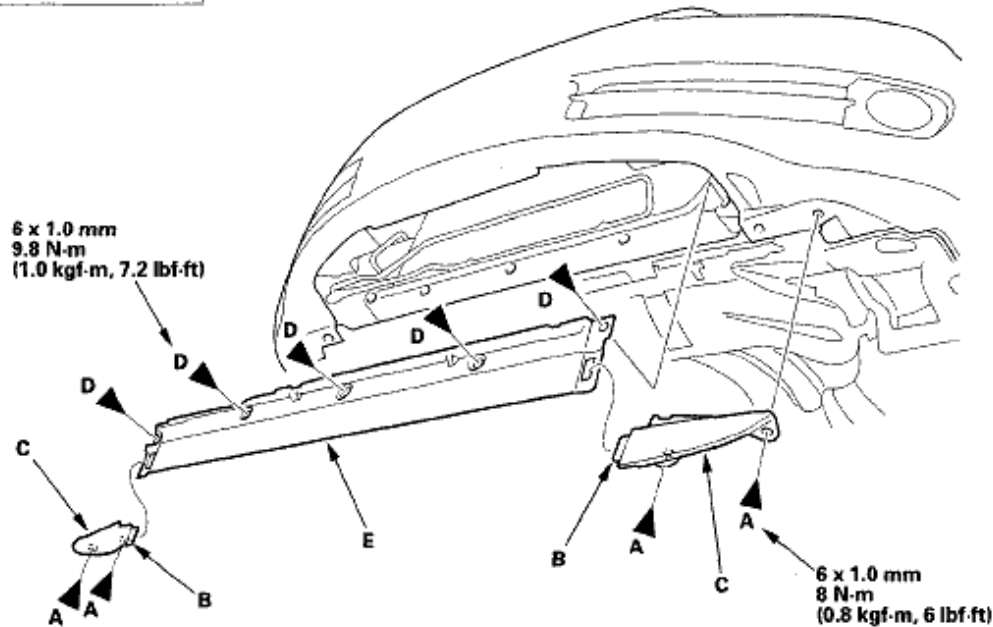
 


Fig. 1: Identifying Front Strakes Fastener Locations With Torque Specifications
Courtesy of AMERICAN HONDA MOTOR CO., INC.

2. Remove the bolts (D), then remove the front air guide plate (E).
3. Install the strakes and plate in the reverse order of removal.

FRONT INNER FENDER REPLACEMENT

NOTE:

- Put on gloves to protect your hands.
- Take care not to scratch the body.

1. Remove the front inner fender (A).
 1. On the back of the wheel arch, remove the screws (B).
 2. From under the front bumper (C), remove the bolts (D, E) securing the front bumper, front strake (F), and front inner fender, and remove the clip (G) securing the front bumper and front

inner fender.

3. From the wheel arch, remove the clips (H, I) securing the front inner fender (and splash shield) to the body.
4. Release the hook(J) of the splash shield, then remove the front inner fender.

Fastener Locations

B ► : Screw, 4 D ► : Bolt, 1 E ► : Bolt, 1 G, H ► : Clip, 4 I ► : Clip, 3

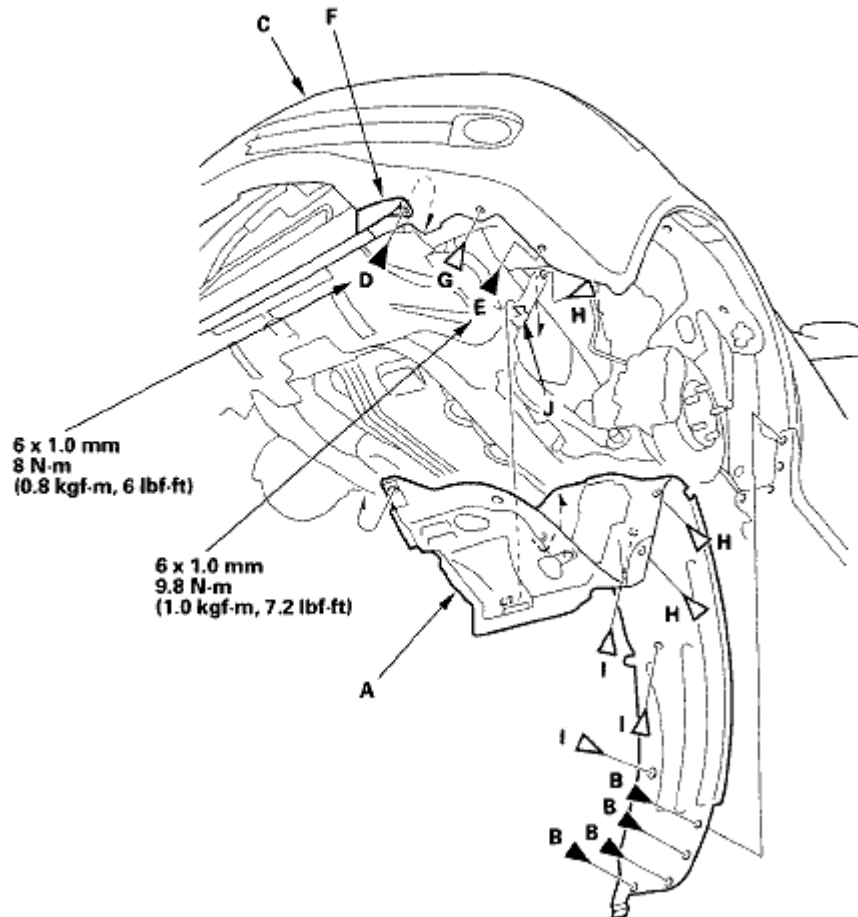


Fig. 2: Identifying Front Inner Fender Fastener Locations With Torque Specifications
Courtesy of AMERICAN HONDA MOTOR CO., INC.

2. Install the inner fender in the reverse order of removal, and note these items:
 - Check if the clips are damaged or stress-whitened, and if necessary, replace them with new ones.
 - Push the clips into place securely.

SPLASH SHIELD REPLACEMENT

NOTE:

- Put on gloves to protect your hands.
- Take care not to scratch the body.

1. Remove the splash shield (A).
 1. From both wheel arches, remove the clips (B) securing the front inner fender (C) and splash shield to the body.
 2. From under the front bumper (D), remove the clips (E), and bolts (F).
 3. Release the hooks (G) of the splash shield, then pull the splash shield out.

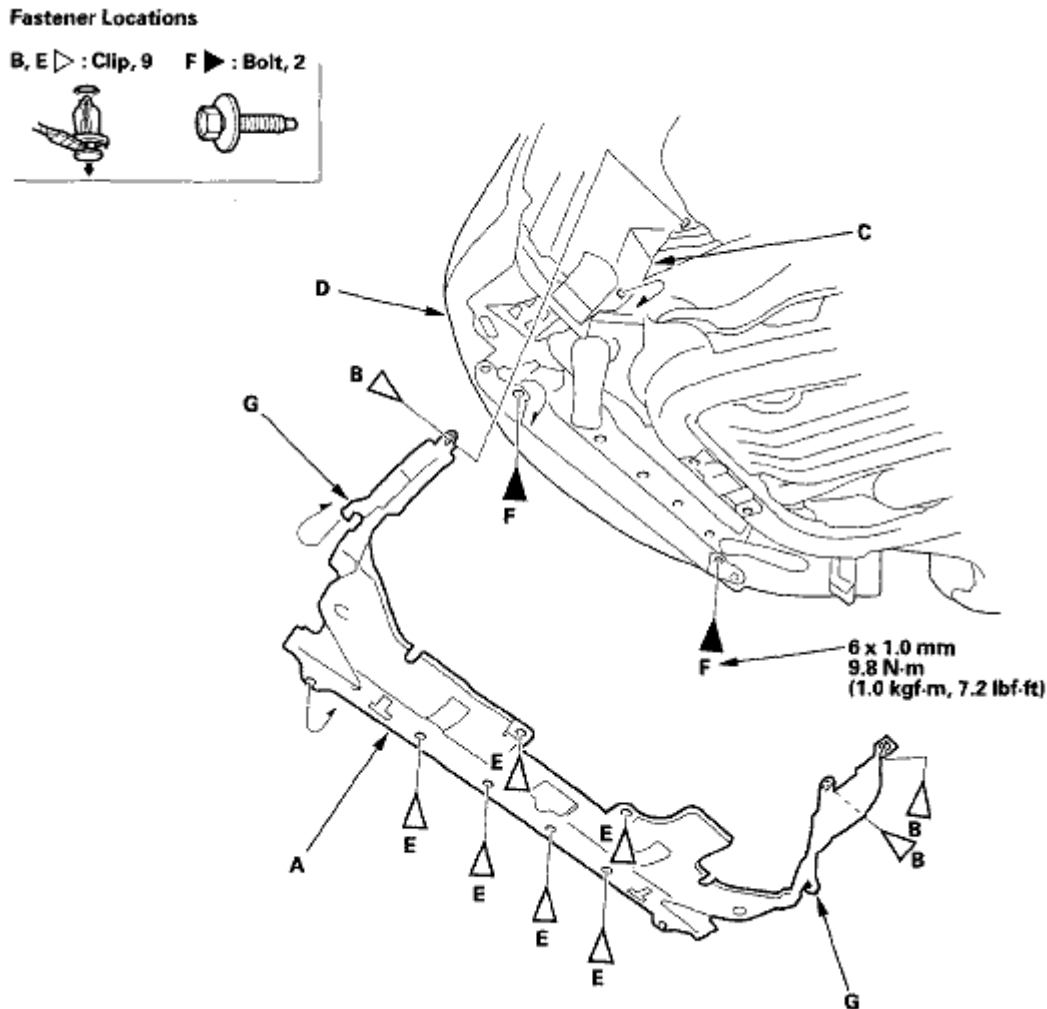


Fig. 3: Identifying Splash Shield Fastener Locations With Torque Specification
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

2. Install the splash shield in the reverse order of removal, and note these items:
 - Check if the clips are damaged or stress-whitened, and if necessary, replace them with new ones.
 - Push the clips into place securely.

FRONT FENDER FAIRING REPLACEMENT

NOTE:

- Put on gloves to protect your hands.
- Take care not to scratch the body.

1. Remove the front inner fender (see **FRONT INNER FENDER REPLACEMENT**).
2. Remove the side marker light connector (see **BULB REPLACEMENT**).
3. Pull out the front fender fairing (A) by pushing up and releasing the hook (B) from the bracket.

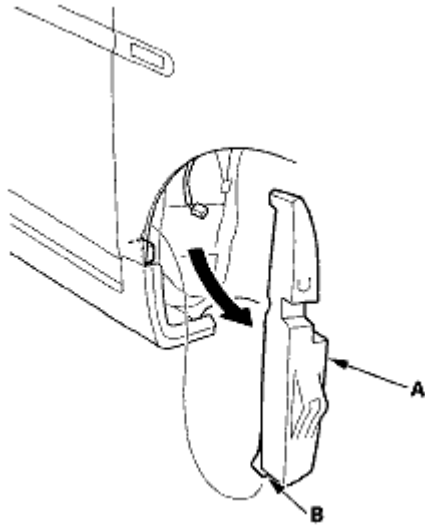


Fig. 4: Removing Front Fender Fairing
Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Install the fender fairing in the reverse order of removal.

FUEL PIPE PROTECTOR REPLACEMENT

NOTE:

- Put on gloves to protect your hands.
- Take care not to scratch the body.

1. Remove the clips, then remove the fuel pipe protector (A).

Fastener Locations

▷ : Clip, 3

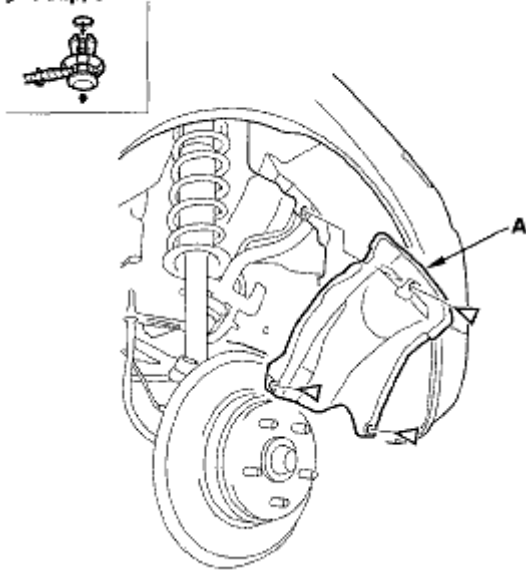


Fig. 5: Identifying Fuel Pipe Protector Fastener Locations
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

2. Install the protector in the reverse order of removal, and note these items:
 - Check if the clips are damaged or stress-whitened, and if necessary, replace them with new ones.
 - Push the clips into place securely.

REAR INNER FENDER REPLACEMENT

NOTE:

- Take care not to scratch the body.
- Put on gloves to protect your hands.

1. Remove the fuel pipe protector (see **FUEL PIPE PROTECTOR REPLACEMENT**).
2. Remove the rear inner fender (A).
 1. Remove the screws (B) from the front and rear of the rear inner fender.
 2. Remove the bolts (C) and clips (D, E, F).
 3. Pull out the rear inner fender.

NOTE: **Driver's side shown, passenger's side is similar.**

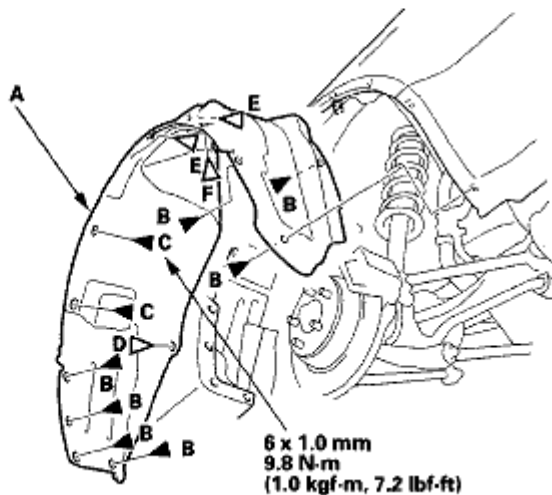
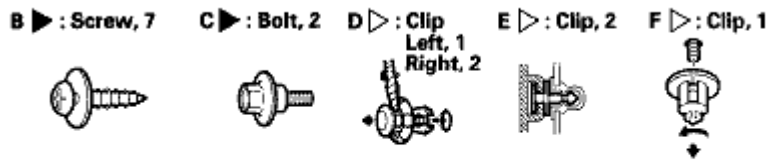
Fastener Locations

Fig. 6: Identifying Rear Inner Fender Fastener Locations With Torque Specification
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Install the inner fender in the reverse order of removal, and note these items:
 - Check if the clips are damaged or stress-whitened, and if necessary, replace them with new ones.
 - Push the clips into place securely.

REAR AIR OUTLET REPLACEMENT

NOTE:

- Put on gloves to protect your hands.
- Take care not to scratch the body.

1. Remove the rear bumper (see **REAR BUMPER REMOVAL/INSTALLATION**).
2. Release the hooks (A), then remove the rear air outlet (B).

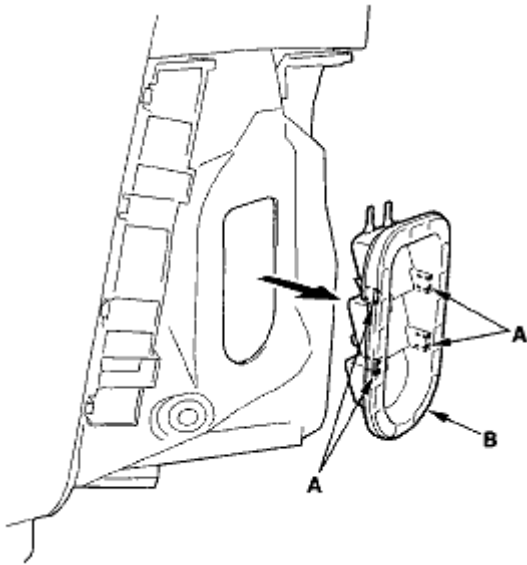


Fig. 7: Removing Rear Air Outlet

Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Install the air outlet by pushing on the hook portions until the hooks snap into place.