

HVAC (Heating, Ventilation and Air Conditioning)

*: Read [SRS precautions](#) before working in this area

Special Tools	22-2	Climate Control Unit		Sunlight Sensor		Leak Test	22-90
Component Location		Replacement	22-54	Removal	22-63	Charging	22-91
Index	22-3	Adjustment	22-55	Test	22-63	Heater-Evaporator Unit	
Heater-Evaporator Door		Air Mix Control Motor		Heater Core Temperature Sensor		*Replacement	22-74
Position	22-4	Replacement	22-56	Removal	22-64	Overhaul	22-76
Description		Test	22-57	Test	22-64	"DEF" Door Adjustment ...	22-77
Outline	22-6	Mode Control Motor		Evaporator Temperature Sensor		"HEAT" Door Adjustment ..	22-77
A/C Triple Pressure		Replacement	22-57	Removal	22-65	Condenser	
Switch	22-7	Test	22-58	Test	22-65	Description	22-78
Fan Control Unit	22-8	Recirculation Control Motor		Aspirator Fan Test	22-66	Replacement	22-79
Wiring/Connector		Test	22-59	Relay Test	22-66	Overhaul	22-80
Locations	22-9	Replacement	22-59	Blower Unit		Compressor	
Troubleshooting		Vent Door Control Motor		Replacement	22-67	Description	22-81
Self-diagnosis Circuit		Test	22-60	Overhaul	22-68	Component Location	
Check	22-12	Replacement	22-60	A/C Service Tips		Index	22-82
Function Selection and		In-car Temperature Sensor		and Precautions	22-69	Replacement	22-83
Operation Check	22-13	Replacement	22-61	A/C System Service		Clutch Inspection	22-85
Symptom-to-Component		Test	22-61	Performance Test	22-70	Clutch Overhaul	22-86
Chart	22-14	Outside Air Temperature Sensor		Pressure Test Chart	22-72	Relief Valve	
Climate Control Unit		Replacement	22-62	Refrigerant Recovery	22-73	Replacement	22-87
Input/Output Signals ...	22-15	Test	22-62	Evacuation	22-89	Belt Adjustment	22-88