

Body Electrical

*: Read [SRS precautions](#) before working in this area

Special Tools	23-2	Coolant Temperature Gauge		Key-in Reminder System		HID Inverter Unit Replacement	
Troubleshooting		Gauge Test		Ignition Key Switch Test	23-173	('02-05 Models)	23-47e
Tips and Precautions	23-3	'97-99 Models	23-136	Lighting System		HID Bulb Removal	
Five-step		'00-05 Models	23-34c	Component Location Index		('02-05 Models)	23-42e
Troubleshooting	23-5	Sending Unit Test	23-136	'97-01 Models	23-174	HID Lamp System Troubleshooting	
Relay and Control Unit Locations		Engine Oil Pressure Gauge		'02-05 Models	23-35e	('02-05 Models)	23-44e
Front Compartment		Test	23-137	Switches	23-179	Daytime Running Lights (Canada)	
'97-99 Models	23-7	Engine Oil Pressure Warning		Retractable Headlight Control Unit		Replacement	23-196
'00-01 Models	23-2c	System		Input Test	23-180	Front Turn Signal/Front Parking Lights	
'02-05 Models	23-2e	Switch Test	23-137	Daytime Running Lights Control Unit		Replacement	23-197
Dashboard	23-8	Brake Warning System		Input Test (Canada)		Front Side Marker Lights	
Dashboard, Door and		Parking Brake Switch		'97-01 Models	23-182	Replacement	23-197
Floor	23-9	Test	23-138	'02-05 Models	23-40e	Taillights	
Rear Bulkhead	23-10	Fluid Level Switch Test	23-138	Combination Light/Turn Signal Switch		Replacement	23-198
Engine Compartment		Seat Belt Reminder System		Test	23-183	Bulb Replacement	23-198
'97-99 Models	23-12	Seat Belt Switch Test	23-139	Headlight/Turn Signal Switch		Rear Side Marker Lights	
'00-05 Models	23-3c	Low Fuel Indicator		Replacement	23-184	Replacement	23-199
Battery		Indicator Light Test	23-139	Retractor Switch		License Plate Lights	
Component Location Index	23-67	Interlock System		Removal	23-186	Replacement	23-199
Replacement	23-67	*Component Location Index ...	23-140	Test	23-187	Glove Box Light	
Test		Control Unit Input		Bulb Replacement	23-187	Replacement/Test	23-200
'97-98 Model	23-68	Test	23-143	Retractor Motor		Ceiling/Courtesy/Trunk Lights	
'99-05 Models	23-2b	Key Interlock Solenoid Test ...	23-144	Replacement	23-188	Component Location	
Under-dash Fuse/Relay Box		Shift Lock Solenoid	23-145	Headlight Housing		Index	23-201
Removal/Installation	23-70	Parking Pin Switch	23-146	Adjustment	23-189	Ceiling Lights Test	23-203
Ignition Switch		Safety Indicator		Retractor Motor Test	23-190	Ceiling Light Replacement	23-205
Test	23-72	*Component Location		Headlight Relay Test	23-191	Courtesy Light Test/	
Electrical Switch		Index	23-147	Dimmer Relay Test	23-191	Replacement	23-206
Replacement	23-72	Description	23-147	Retractor Relay Test	23-192	Door Switch Test	23-206
Steering Lock Removal/		Indicator Input Test	23-152	Retractor Cut/Taillight		Trunk Light Test/	
Installation	23-73	Troubleshooting	23-154	Relay Test	23-192	Replacement	23-207
Gauge Assembly		Brake Light Failure Sensor		Headlight High Beam/Dimmer Relay		Latch Switch Test/	
Gauge/Terminal Location		Test	23-155	(USA) ('02-05 Models) Test .	23-45e	Replacement	23-207
Index		Roof Lock Switch Test	23-156	Headlight Low Beam Relay Test		Back-up Lights	
'97-99 Models	23-121	Roof Holder Switch Test ...	23-157	(('02-05 Models)	23-45e	Component Location	
'00-01 Models	23-29c	A/T Gear Position Indicator		Taillight Relay Test		Index	23-208
'02-05 Models	23-29e	Component Location		(('02-05 Models)	23-46e	Test	23-210
*Removal	23-126	Index	23-158	Dimmer Relay (Canada) Test		Brake Lights	
Bulb Locations		Indicator Input Test	23-160	(('02-05 Models)	23-46e	Component Location	
'97-01 Models	23-128	A/T Gear Position Switch		Headlights		Index	23-211
'02-05 Models	23-34e	Test	23-162	Description	23-193	Brake Switch Test	23-213
Disassembly	23-129	Replacement	23-163	Adjustment		High Mount Brake Light	
Speedometer/Trip Meter/Odometer		Bulb Replacement	23-163	'97-01 Models	23-194	Test	23-213
Troubleshooting	23-130	Integrated Control Unit		'02-05 Models	23-48e	Replacement	23-214
VSS Replacement	23-133	Input Test	23-166	Headlight Replacement		Rear Spoiler Replacement	23-214
Fuel Gauge		Lights-on Reminder System		'97-01 Models	23-195		
Gauge Test	23-134	Chime Test	23-172	'02-05 Models	23-47e		
Sending Unit Test	23-135			Bulb Replacement			
				'97-01 Models	23-196		
				'02-05 Models	23-49e		

Body Electrical (Cont'd)

Side Marker/Turn Signal/Hazard

Flasher System

Component Location

Index 23-215

Description 23-218

Turn Signal/Hazard Relay

Input Test 23-220

Cancel Unit Input Test 23-221

Hazard Warning Switch

Replacement 23-222

Hazard Warning Switch

Test 23-223

Dash Lights Brightness Controller

Component Location

Index 23-224

Control Unit Input Test 23-226

Controller Removal 23-227

Controller Test 23-228

Controller Light Bulb

Replacement 23-228

Entry Light Timer System

Component Location

Index 23-229

Foot Well Light

Replacement 23-231

Clock

Removal 23-233

Terminals 23-233

Cigarette Lighter

Replacement 23-235

Relay Test 23-236

Stereo Sound System

Component Location

Index 23-237

CD Changer ('04-05 Models)

Removal 23-32

Unit Removal 23-240

Unit Terminals 23-242

Power Amplifier Relay

Test 23-242

Power Antenna Motor

Test 23-243

Replacement 23-244

Antenna Mast

Replacement 23-244

Antenna Tube

Replacement 23-246

Front/Rear Speaker

Replacement 23-247

Foot Well Bass Speaker

Replacement 23-247

Horns

*Component Location Index

'97-01 Models 23-248

'02-05 Models 23-50e

Description

'97-01 Models 23-248

'02-05 Models 23-50e

Horn Test

'97-01 Models 23-250

'02-05 Models 23-52e

Relay Test

..... 23-251

High Horn Relay Test

('02-05 Models) 23-53e

Security/Low Horn Relay Test

('02-05 Models) 23-53e

*Switch Test 23-251

Trunk Opener

Component Location Index

..... 23-254

Main Switch Test 23-255

Opener Switch Test 23-256

Solenoid Test/Replacement 23-256

Power Mirrors

Component Location Index

..... 23-257

Function Test 23-259

Switch Removal 23-260

Switch Test 23-260

Door Mirror

Test 23-261

Replacement 23-261

Door Mirror Actuator

Replacement 23-262

Power Door Locks

Component Location

Index

'97-03 Models 23-263

'04-05 Models 23-13g

Troubleshooting 23-265

Control Unit Input Test

'97-03 Models 23-266

'04-05 Models 23-16g

Driver's Door Actuator

Test 23-268

Keyless Buzzer

Test/Replacement

('04-05 Models) 23-20g

Transmitter Test

('04-05 Models) 23-21g

Transmitter Programming .. 23-21g

Passenger's Door Actuator

Test 23-269

Door Lock Switch Test

..... 23-270

Power Windows

Component Location

Index 23-271

Description

..... 23-271

Troubleshooting

..... 23-273

Control Unit Input Test

'97-99 Models 23-274

'00-05 Models 23-39c

Master Switch Test

..... 23-275

Passenger's Switch

Test 23-276

Replacement 23-277

Master Switch

Replacement 23-276

Switch Light Bulb

Replacement 23-277

Driver's Window Motor

Test 23-278

Passenger's Window Motor

Test 23-278

Relay Test

..... 23-279

Power Seats

Component Location

Index 23-280

Seat Switch Test

..... 23-282

Motor Test

..... 23-283

Rear Window Defogger

Component Location

Index 23-284

Description

..... 23-284

Troubleshooting

..... 23-286

Switch Replacement

..... 23-287

Relay Test

..... 23-288

Switch Test

..... 23-289

Function Test

..... 23-290

Defogger Wire Repair

..... 23-290

Wiper/Washers

Component Location

Index 23-291

Description 23-291

Troubleshooting 23-293

Intermittent Wiper

Relay Test 23-293

High Relay/Washer

Relay Test 23-294

Low Relay Test 23-294

Windshield Wiper Motor

Test 23-295

Replacement 23-296

Windshield Wiper/Washer Switch

Replacement 23-296

Test 23-298

Washer Replacement

..... 23-299

Washer Motor Test

..... 23-299

Security Alarm System

Component Location

Index 23-312

Description 23-314

Wiring Connections 23-320

Troubleshooting 23-321

Control Unit Input Test

'97-01 Models 23-322

'02-03 Models 23-58e

'04-05 Models 23-26g

Trunk Latch Switch Test 23-325

Door Switch Test 23-325

Indicator Replacement 23-326

Trunk Key Cylinder Switch

Test 23-326

Engine Compartment Lid

Switch Test 23-327

Hood Switch Test 23-327

Ignition Key Switch Test 23-328

Immobilizer System

Component Location

Index 23-329

Description 23-330

Problems and Replacement

Parts 23-332

Control Unit Input Test 23-334

Immobilizer Receiver and

Transponder (Key) Test 23-335

Immobilizer Receiver

Replacement 23-336