

Supplemental Restraint System (SRS)

Special Tools	24-2	Inspection After Deployment	24-12	Cable Reel	
Components/Wiring Location Index	24-3	Troubleshooting		Removal	24-42
Description	24-4	Self-diagnosis Function	24-13	Installation	24-44
Precautions/Procedures		SRS Indicator Light		Dash Sensor	
General Precautions	24-6	Troubleshooting	24-13	Removal	24-47
Airbag Handling and Storage	24-6	Test Harness and Attachment		Installation	24-48
Seat Belt Tensioner Handling and		Points	24-14	SRS Unit	
Storage	24-7	Airbag Assembly		Removal	24-49
Steering-related Precautions	24-8	Removal	24-34	Installation	24-50
Sensor Inspection	24-9	Installation	24-35	Seat Belt Tensioner	
Wiring Precautions	24-9	Airbag/Seat Belt Tensioner		Removal	24-51
Short Connector Installation	24-10	Disposal	24-37	Installation	24-52