

Diagnostic Trouble Code (DTC)

Troubleshooting Index

DTC	ABS INDICATOR	DIAGNOSIS/SYMPTOM	DETECTION TIMING		PROBLEM LOCATION	REFER TO PAGE
			INITIAL DIAGNOSIS	REGULAR DIAGNOSIS		
—	OFF	ABS indicator does not come on				19-13
	ON	ABS indicator does not go off				19-15
11	ON	Wheel sensor (open/short to body ground/short to power)	○	○	FR	19-18
13					FL	
15					RR	
17					RL	
12	ON	Wheel sensor (electrical noise/intermittent interruption)		○	FR	19-19
14					FL	
16					RR	
18					RL	
21	ON	Pulser		○	FR	19-20
22					FL	
23					RR	
24					RL	
31	ON	Solenoid	○	○		19-21
32						
33						
34						
35						
36						
37						
38						
41	ON	Wheel lock		○	FR	19-22
42					FL	
43					RR	
44					RL	
51	ON	Motor lock		○		19-23
52	ON	Motor stuck OFF		○		19-24
53	ON	Motor stuck ON	○	○		19-25
54	ON	Fail-safe relay	○			19-26
61	ON	FSR +B voltage	○	○		19-27
62						
71	ON	Different diameter tire		○		19-28
81	ON	Central Processing Unit (CPU) diagnosis, and ROM/RAM diagnosis	○	○		19-28