

Follow the Severe Conditions Maintenance Schedule if the vehicle is driven MAINLY in Canada or under one or more of the Severe Driving Conditions (page 4-7):

Service at the indicated distance or time whichever comes first.	miles x 1,000	15	30	45	60	75	90	105	120	NOTE	SECTION and PAGE	
	km x 1,000	24	48	72	96	120	144	168	192			
	months	12	24	36	48	60	72	84	96			
Replace engine oil and oil filter	Every 3,750 miles (6,000 km) or 6 months									Capacity for change with filter: 5.0 ℓ (5.3 US qt, 4.4 Imp qt)	8-2* ₂	
Check engine oil and coolant	Check oil and coolant at each fuel stop									Check levels and check for leaks.	8-2* ₂ , 10-2* ₁	
Clean or replace air cleaner element Use the normal schedule except in dusty conditions	Clean: every 7,500 miles (12,000 km) or 6 months Replace: every 30,000 miles (48,000 km) or 24 months										11-149* ₁	
Inspect valve clearance	Adjust only if noisy							●		Intake: 0.15 – 0.19 mm (0.006 – 0.007 in)* ³ Exhaust: 0.17 – 0.21 mm (0.007 – 0.008 in)* ³ Measured when cold	6-10* ₁	
Replace spark plugs								●		NGK: PFR6L-11 DENSO: PK20PR-L11 Gap: 1.0 – 1.1 mm (0.039 – 0.043 in)* ⁴	23-96* ₁	
Replace timing belt** and inspect water pump								●			6-14* ₁ , 10-11* ₁	
Inspect and adjust drive belts		●			●		●		●	Check for cracks and damage. Check deflection and tension at center of the following belts pressing with 98 N (10 kgf, 22 lbf) tension: Alternator drive belt: 11.0 – 13.5 mm (0.43 – 0.53 in) A/C compressor belt: 10 – 12 mm (0.39 – 0.47 in)	22-88* ₁ 23-109* ₁	
Replace fuel filter*					●				●		11-138* ₁	
Inspect idle speed								●		800 ± 50 rpm (M/T: neutral) 780 ± 50 rpm (A/T: N or P position)	11-129* ₁	
Replace engine coolant	120,000 miles (192,000 km) or 120 months, thereafter every 60,000 miles (96,000 km) or 60 months									Capacity for change: 12.0 ℓ (12.7 US qt, 10.6 Imp qt) Check specific gravity for freezing point.	10-5* ₁	
Replace transmission fluid	M/T	Replace every 60,000 miles (96,000 km) or 36 months									Genuine Honda MTF 2.65 ℓ (2.80 US qt, 2.33 Imp qt) for change	13-3* ₁
	A/T	Replace at 60,000 miles (96,000 km) or 36 months, thereafter every 30,000 miles (48,000 km) or 24 months									2.9 ℓ (3.1 US qt, 2.6 Imp qt) for change. Use Honda ATF-Z1 (ATF)	14-105* ₁
Inspect front and rear brakes	Every 7,500 miles (12,000 km) or 6 months									• Check the brake pads, disc thickness, and free movement. • Check the calipers for leaks.	19-4* ₁ , 19-6, 19-7, 19-10, 19-11, 19-17, 19-19, 19-20, 19-21	
Replace brake fluid (Including ABS)	Every 36 months									Use Honda DOT3 brake fluid. Check that the brake fluid level is between the upper and lower marks on the reservoir.	19-11* ₁	
Check parking brake adjustment	●	●	●	●	●	●	●	●	●	Fully engaged 10 to 14 clicks.	19-5* ₁	

*1: Refer to Service Manual ('97 NSX, P/N 61SL006)

*2: Refer to Service Manual ('98 NSX, P/N 61SL007)

*3: Measured between the rocker arm and camshaft

*4: Do not adjust the gap, replace spark plug if it is out of specification

*5: Replace the timing belt at 60,000 miles (U.S.) 100,000 km (Canada) if the vehicle regularly is driven in one or more of these conditions:

- In very high temperatures (over 110°F, 43°C).
- In very low temperatures (under - 20°F, - 29°C).

Service at the indicated distance or time whichever comes first.	miles x 1,000	15	30	45	60	75	90	105	120	NOTE	SECTION and PAGE**
	km x 1,000	24	48	72	96	120	144	168	192		
	months	12	24	36	48	60	72	84	96		
Lubricate all door hinges, locks, and latches		●	●	●	●	●	●	●	●		4-2, 4-3
Clean antenna mast		●	●	●	●	●	●	●	●		23-244
Check tire inflation and condition at least once per month	Every 7,500 miles (12,000 km)									The suggested rotation method is shown in the diagram in the Owner's Manual.	_____
Visually inspect the following items:										• Check for correct installation and position, check for cracks, deterioration, rust, and leaks. • Check tightness of screws, nuts, and joints. If necessary, retighten.	_____
Tie-rod ends, steering gear box, and boots	Every 7,500 miles (12,000 km) or 6 months									Check steering linkage for looseness. Check condition of boots. Check for fluid leaks.	17-57
Suspension components										Check the bolts for tightness. Check the condition of ball joint boots.	18-14, 18-15. 18-30, 18-31
Driveshaft boots										Check condition of boots.	16-3
Brake hoses and lines (including ABS)										Check for damage or leakage.	19-4, 19-27
All fluid levels and condition of fluid										Check levels, condition of fluids, and check for leaks. If brake fluid is low, check brake pad thickness.	10-2, 13-3, 14-105 19-84
Cooling system hoses and connections										Check all hoses for damage, leaks, and deterioration. Check for proper fan operation.	10-2
Exhaust system*	●	●	●	●	●	●	●	●	●	Check the catalytic converter heat shield, exhaust pipe, and muffler for damage, leaks, and tightness.	9-6, 9-7
Fuel lines and connections*										Check for leaks. Retighten loose connections and replace any damaged parts.	11-130
Lights and controls										Check all lighting functions.	23-194
Vehicle underbody										Check for damage and fluid leaks.	_____

*1: Refer to Service Manual ('97 NSX, P/N 61SL006)

According to state and federal regulations, failure to perform maintenance on the items marked with an asterisk () will not void customer's emission warranties. However, Honda recommends that all maintenance services be performed at the recommended time or mileage period to ensure long-term reliability.

Severe Driving Conditions:

- Driving less than 5 miles (8 km) per trip or, in freezing temperatures, driving less than 10 miles (16 km) per trip.
- Driving in extremely hot [over 90°F (32°C)] conditions.
- Extensive idling or long periods of stop-and-go driving.
- Driving in mountainous conditions.
- Driving on muddy, dusty, or de-iced roads.

NOTE If the car is driven OCCASIONALLY under a "severe" condition, you should follow the Normal Conditions Maintenance Schedule for 2001 Model on pages 4-4 and 4-5.

