

Air Conditioning — Section 22

Electrical — Section 23

***2: Do not adjust the gap, replace spark plug if it is out of specification.**