




Component Locations


Index

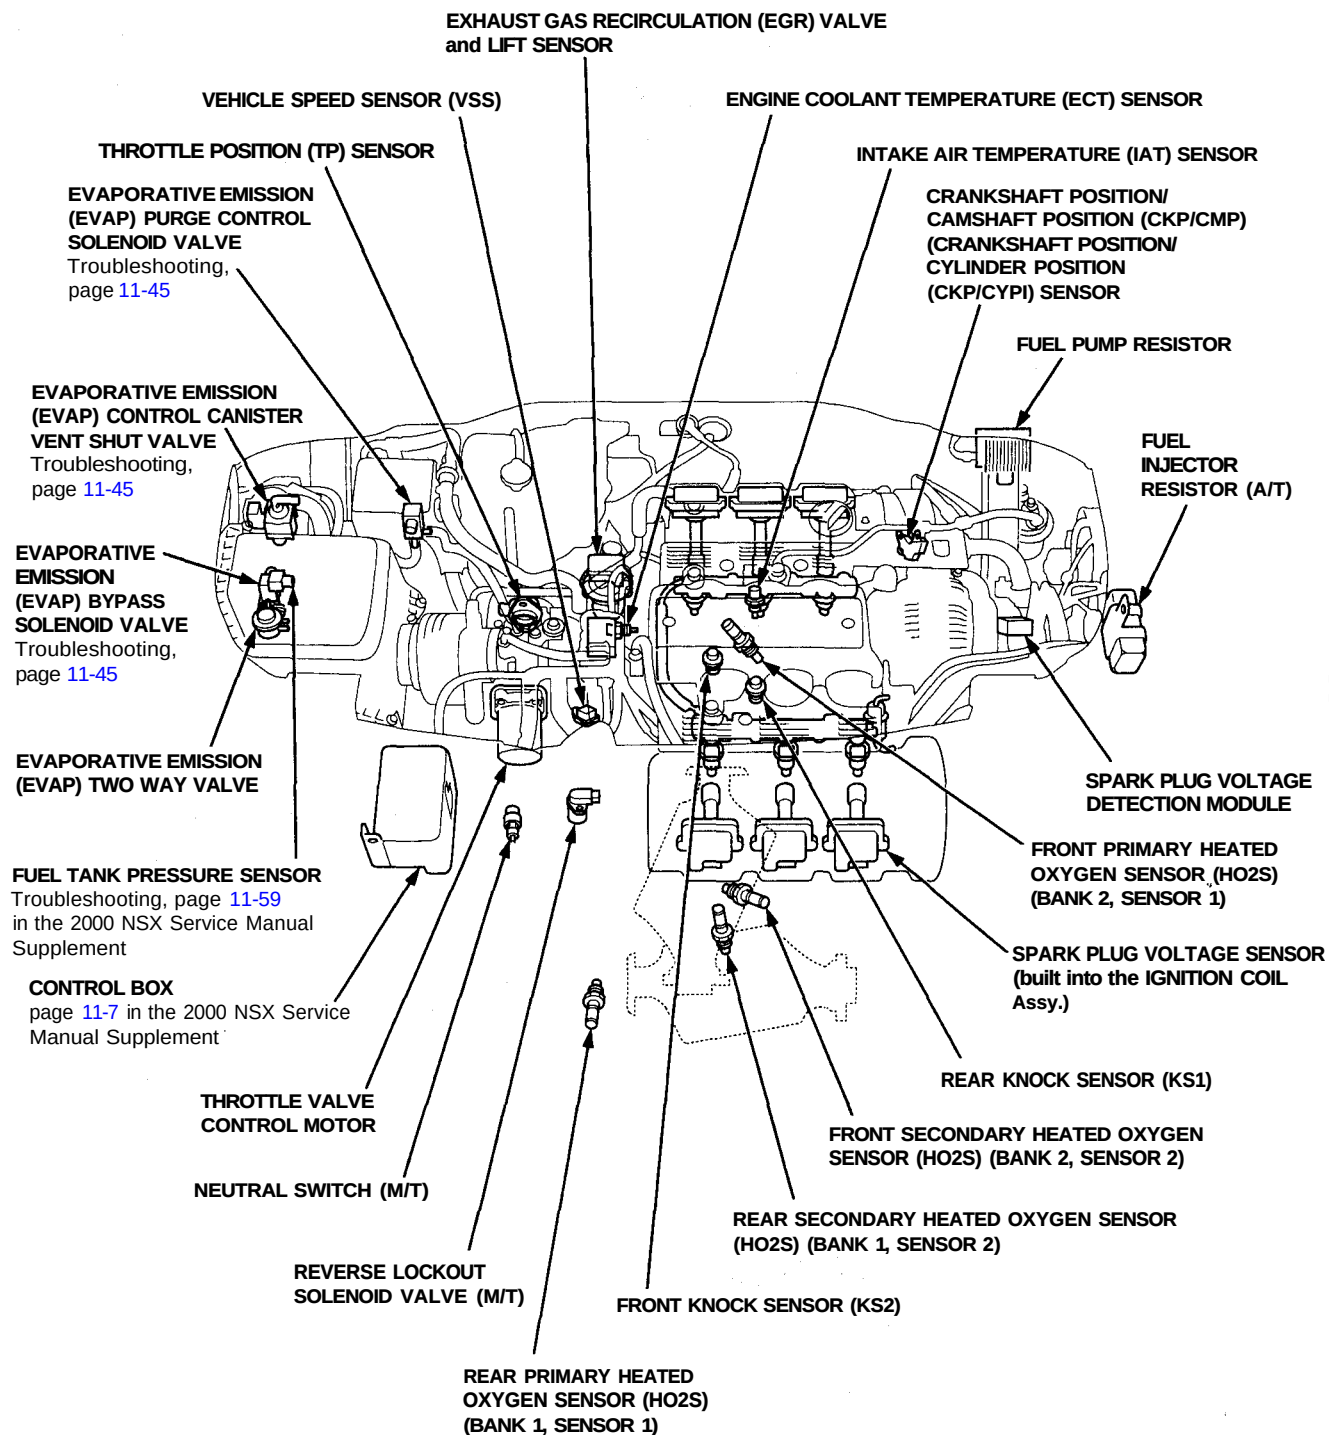

(cont'd)

Component Locations


Index (cont'd)

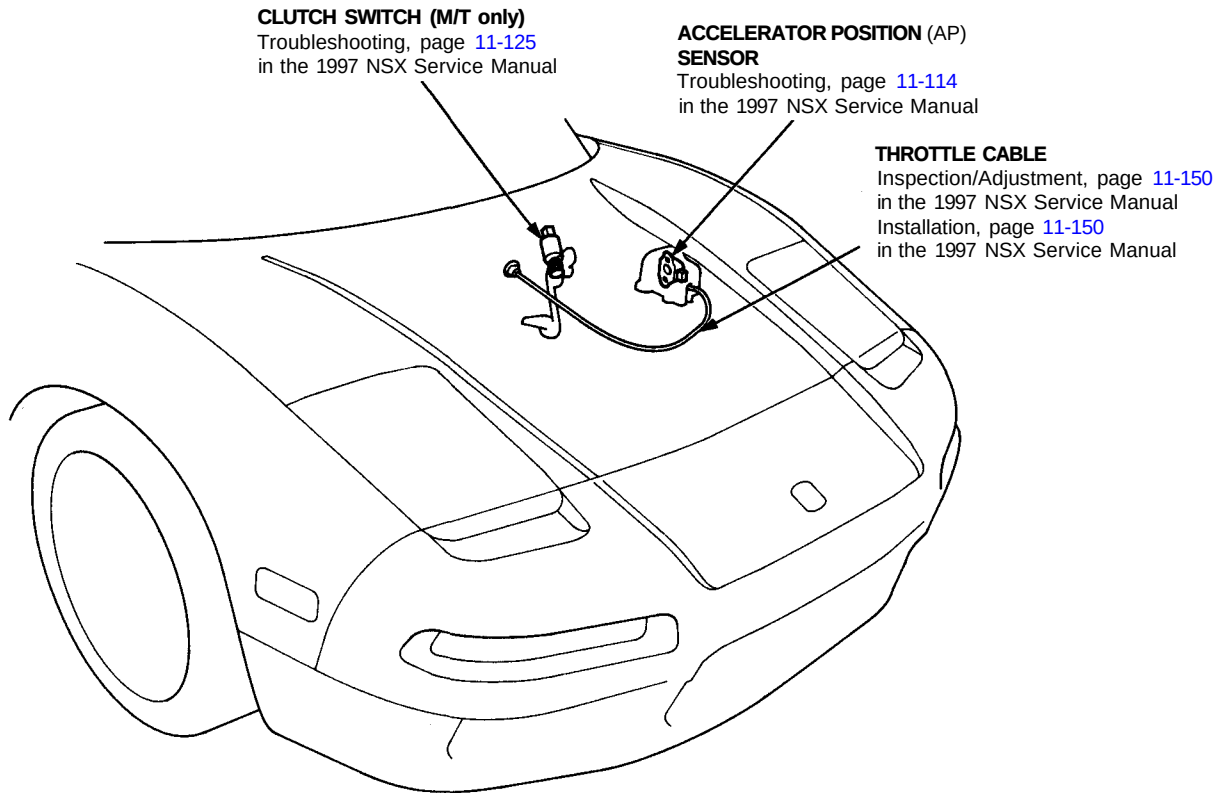

PGM-FI

MAIN RELAY

Relay Testing, page [11-143](#)
in the 1997 NSX Service Manual
Troubleshooting, page [11-144](#)
in the 1997 NSX Service Manual

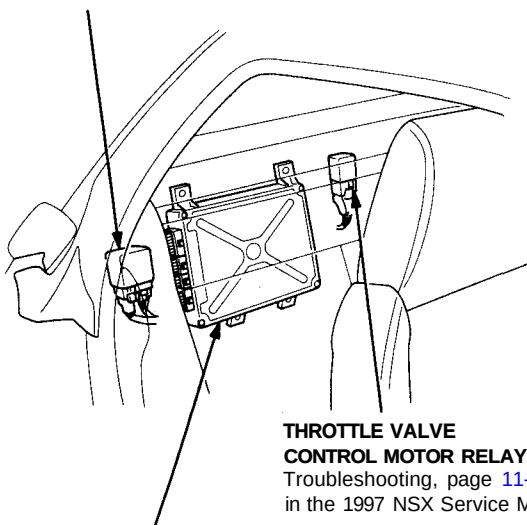



ENGINE CONTROL MODULE (ECM)

Self-diagnostic Procedures, page [11-38](#)
in the 1997 NSX Service Manual
Troubleshooting, page [11-61](#)
in the 1997 NSX Service Manual

SERVICE CHECK CONNECTOR (2P)

Self-diagnostic Procedures
page [11-38](#) in the 1997 NSX Service Manual

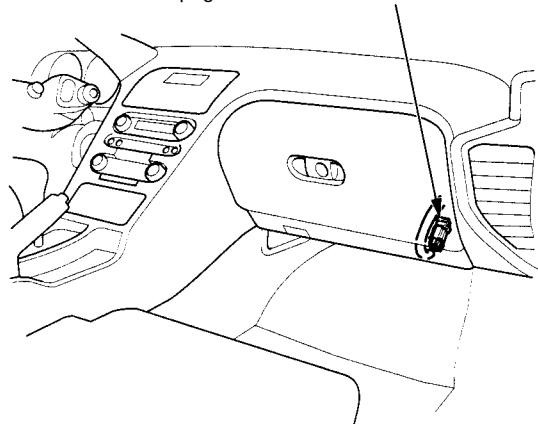

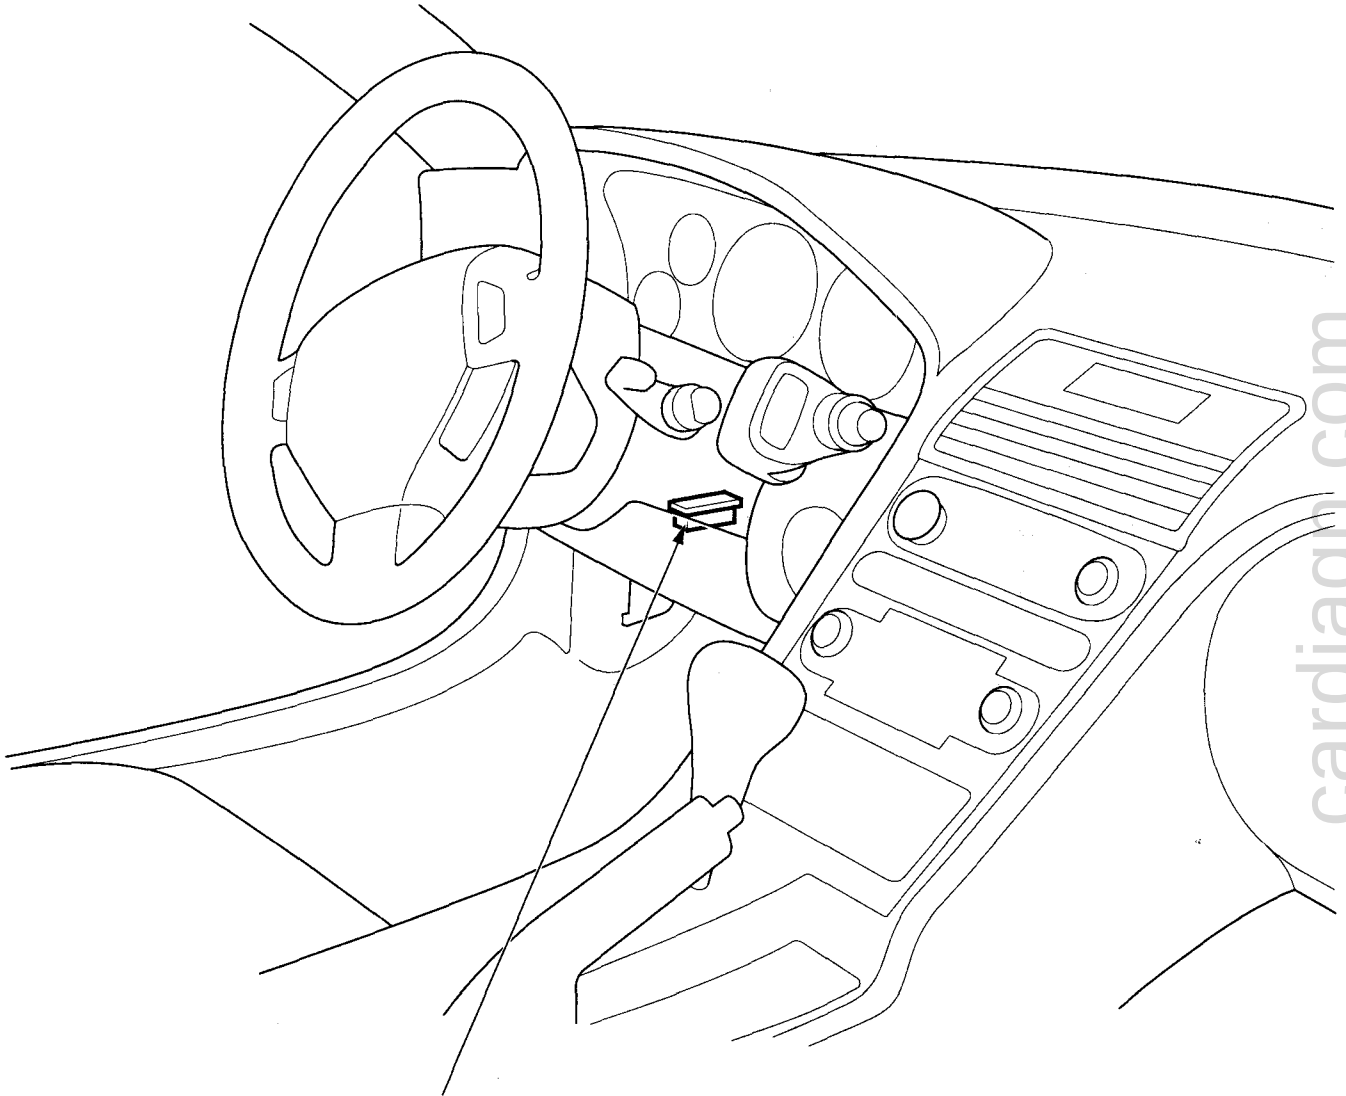

DATA LINK CONNECTOR (16P)
Self-diagnostic Procedures, page [11-38](#)
in the 1997 NSX Service Manual

(cont'd)

Component Locations


Index (cont'd)

THROTTLE BODY (TB)

Inspection, page [11-151](#)
in the 1997 NSX Service Manual
Disassembly, page [11-152](#)
in the 1997 NSX Service Manual

AIR CLEANER (ACL)

Disassembly, page [11-149](#)
in the 1997 NSX Service Manual

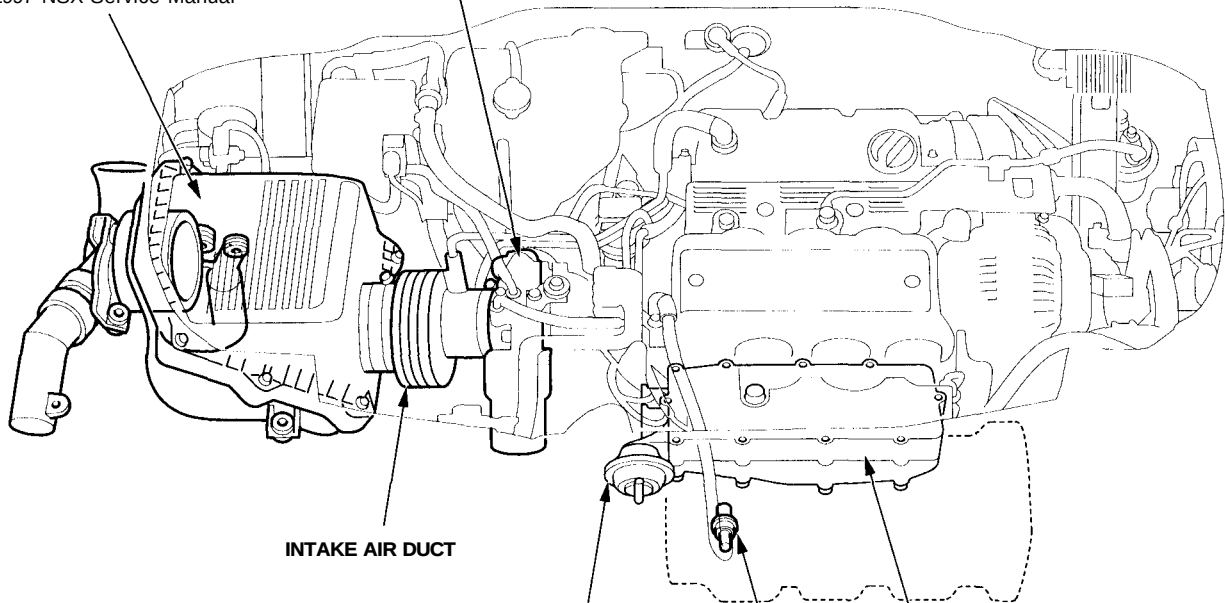

INTAKE AIR DUCT


INTAKE AIR BYPASS (IAB) CONTROL DIAPHRAGM

Troubleshooting, page [11-155](#)
in the 1997 NSX Service Manual
Test, page [11-157](#)
in the 1997 NSX Service Manual

INTAKE AIR BYPASS (IAB) VALVE BODY ASSEMBLY

POSITIVE CRANKCASE VENTILATION (PCV) VALVE

Troubleshooting, page [11-50](#)
Inspection, page [11-52](#)
Replacement, page [11-52](#)

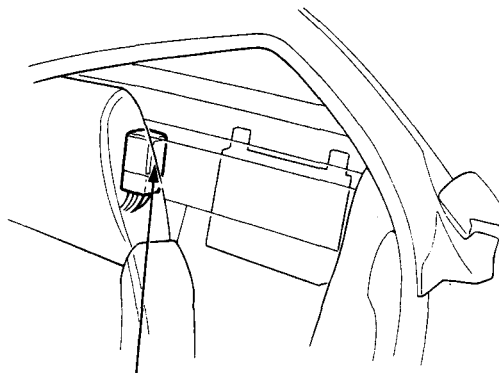**FUEL PUMP RELAY**

Troubleshooting, page [11-139](#)
in the 1997 NSX Service Manual

