


Illustrated Index

Transmission Housing



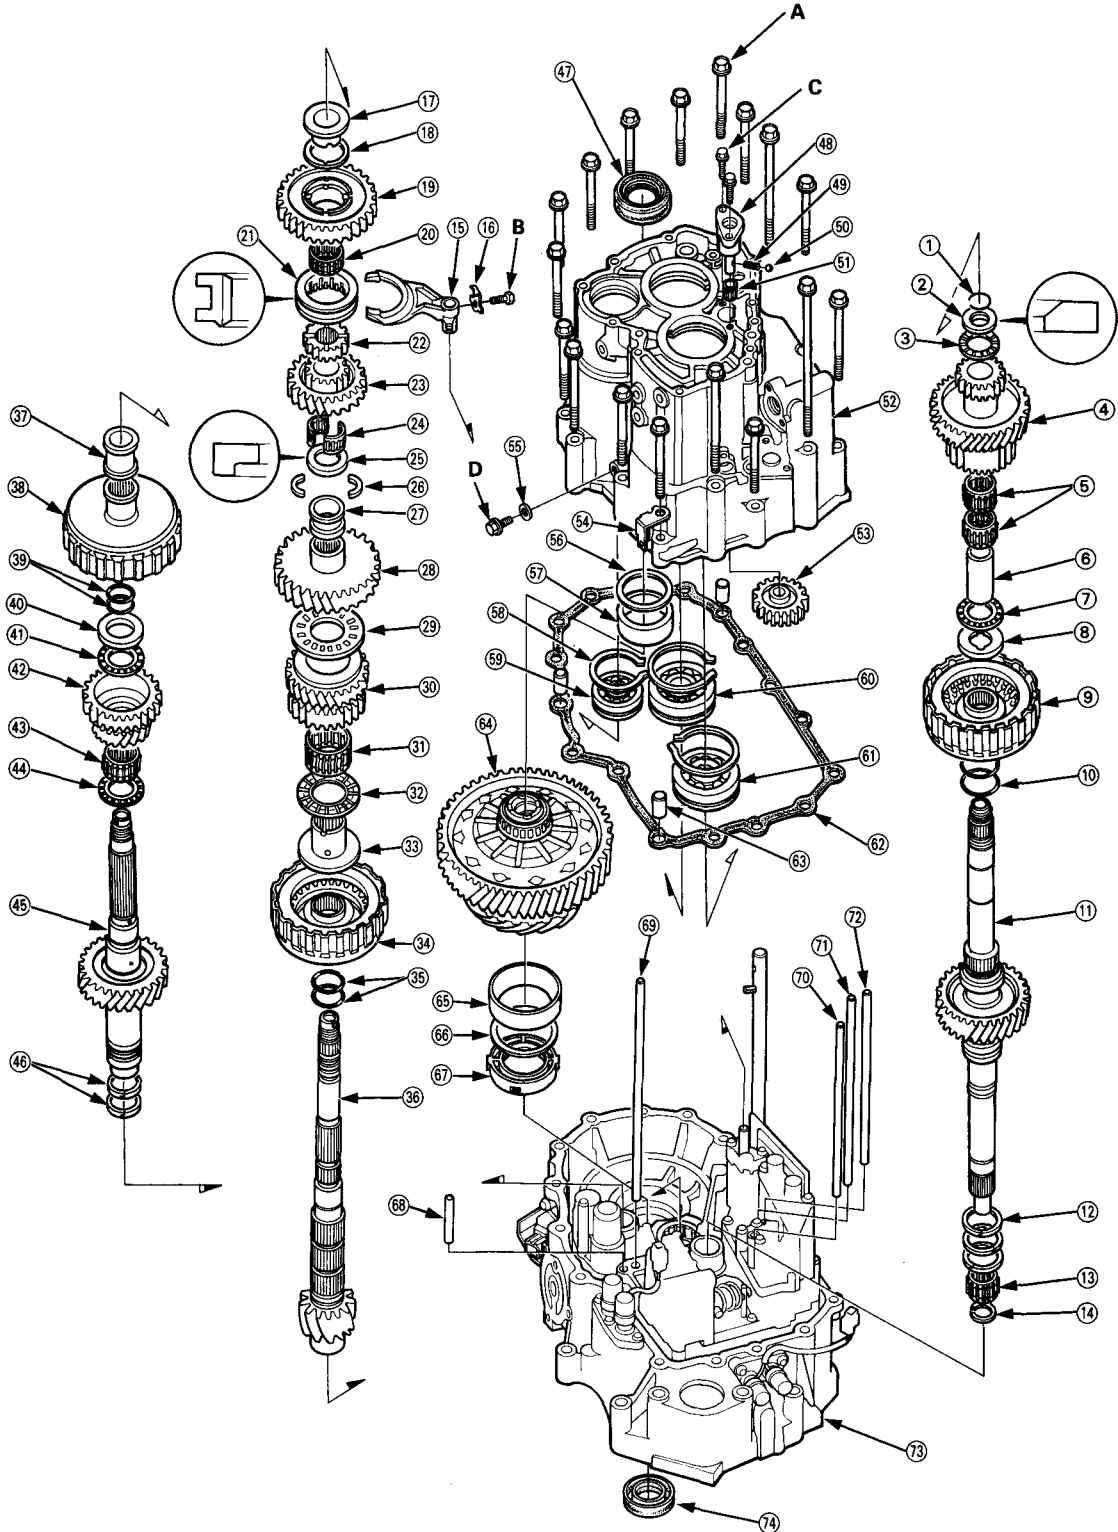

①	SNAP RING	③⑧	2ND CLUTCH ASSEMBLY
②	WASHER	③⑨	O-RINGS Replace.
③	THRUST NEEDLE BEARING	④①	THRUST WASHER
④	MAINSHAFT 4TH GEAR	④②	THRUST NEEDLE BEARING
⑤	NEEDLE BEARINGS	④③	SECONDARY SHAFT 2ND GEAR
⑥	MAINSHAFT 4TH GEAR COLLAR	④④	NEEDLE BEARING
⑦	THRUST NEEDLE BEARING	④⑤	THRUST NEEDLE BEARING
⑧	THRUST WASHER	④⑥	SECONDARY SHAFT
⑨	4TH CLUTCH ASSEMBLY	④⑦	SEALING RINGS 35 mm
⑩	O-RING Replace.	④⑧	DIFFERENTIAL OIL SEAL Replace.
⑪	MAINSHAFT	④⑨	REVERSE IDLER GEAR SHAFT/HOLDER
⑫	SEALING RING 37 mm	④⑩	REVERSE IDLER GEAR SHAFT SPRING
⑬	NEEDLE BEARING	⑤①	STEEL BALL (7/32) #7
⑭	SET RING	⑤②	NEEDLE BEARING
⑮	REVERSE SHIFT FORK	⑤③	TRANSMISSION HOUSING
⑯	LOCK WASHER Replace.	⑤④	REVERSE IDLER GEAR
⑰	COUNTERSHAFT REVERSE GEAR COLLAR	⑤⑤	CONNECTOR STAY
⑱	THRUST WASHER	⑤⑥	SEALING WASHER Replace.
⑲	COUNTERSHAFT REVERSE GEAR	⑤⑦	THRUST SHIM
⑳	NEEDLE BEARING	⑤⑧	BEARING OUTER RACE
㉑	REVERSE SELECTOR	⑤⑨	SNAP RING
㉒	REVERSE SELECTOR HUB	⑥①	SECONDARY SHAFT BALL BEARING
㉓	COUNTERSHAFT 4TH GEAR	⑥②	COUNTERSHAFT BALL BEARING
㉔	NEEDLE BEARING (Separate type)	⑥③	MAINSHAFT BALL BEARING
㉕	COTTER RETAINER	⑥④	GASKET Replace.
㉖	COTTERS	⑥⑤	DOWEL PIN
㉗	COUNTERSHAFT 2ND GEAR SPACER	⑥⑥	DIFFERENTIAL ASSEMBLY
㉘	COUNTERSHAFT 2ND GEAR	⑥⑦	BEARING OUTER RACE
㉙	THRUST NEEDLE BEARING	⑥⑧	THRUST SHIM
㉚	COUNTERSHAFT 3RD GEAR	⑥⑨	DIFFERENTIAL ATF GUIDE RING
㉛	NEEDLE BEARING	⑦①	2ND CLUTCH FEED PIPE
㉜	THRUST NEEDLE BEARING	⑦②	1ST-HOLD CLUTCH FEED PIPE
㉝	COUNTERSHAFT 3RD GEAR COLLAR	⑦③	4TH CLUTCH FEED PIPE
㉞	3RD CLUTCH ASSEMBLY	⑦④	1ST CLUTCH FEED PIPE
㉟	O-RINGS Replace.	⑦⑤	3RD CLUTCH FEED PIPE
㊱	COUNTERSHAFT	⑦⑥	TORQUE CONVERTER HOUSING
㊲	SPACER 31 mm	⑦⑦	DRIVESHAFT OIL SEAL Replace.

TORQUE SPECIFICATION

No.	TORQUE VALUE	BOLT SIZE	REMARKS
A	54 N·m (5.5 kgf·m, 40 lbf·ft)	10 x 1.25 mm	OIL PRESSURE CHECK BOLT
B	14 N·m (1.4 kgf·m, 10 lbf·ft)	6 x 1.0 mm	
C	12 N·m (1.2 kgf·m, 8.7 lbf·ft)	6 x 1.0 mm	
D	18 N·m (1.8 kgf·m, 13 lbf·ft)	8 x 1.25 mm	