


Illustrated Index

Torque Converter Housing/Valve Body

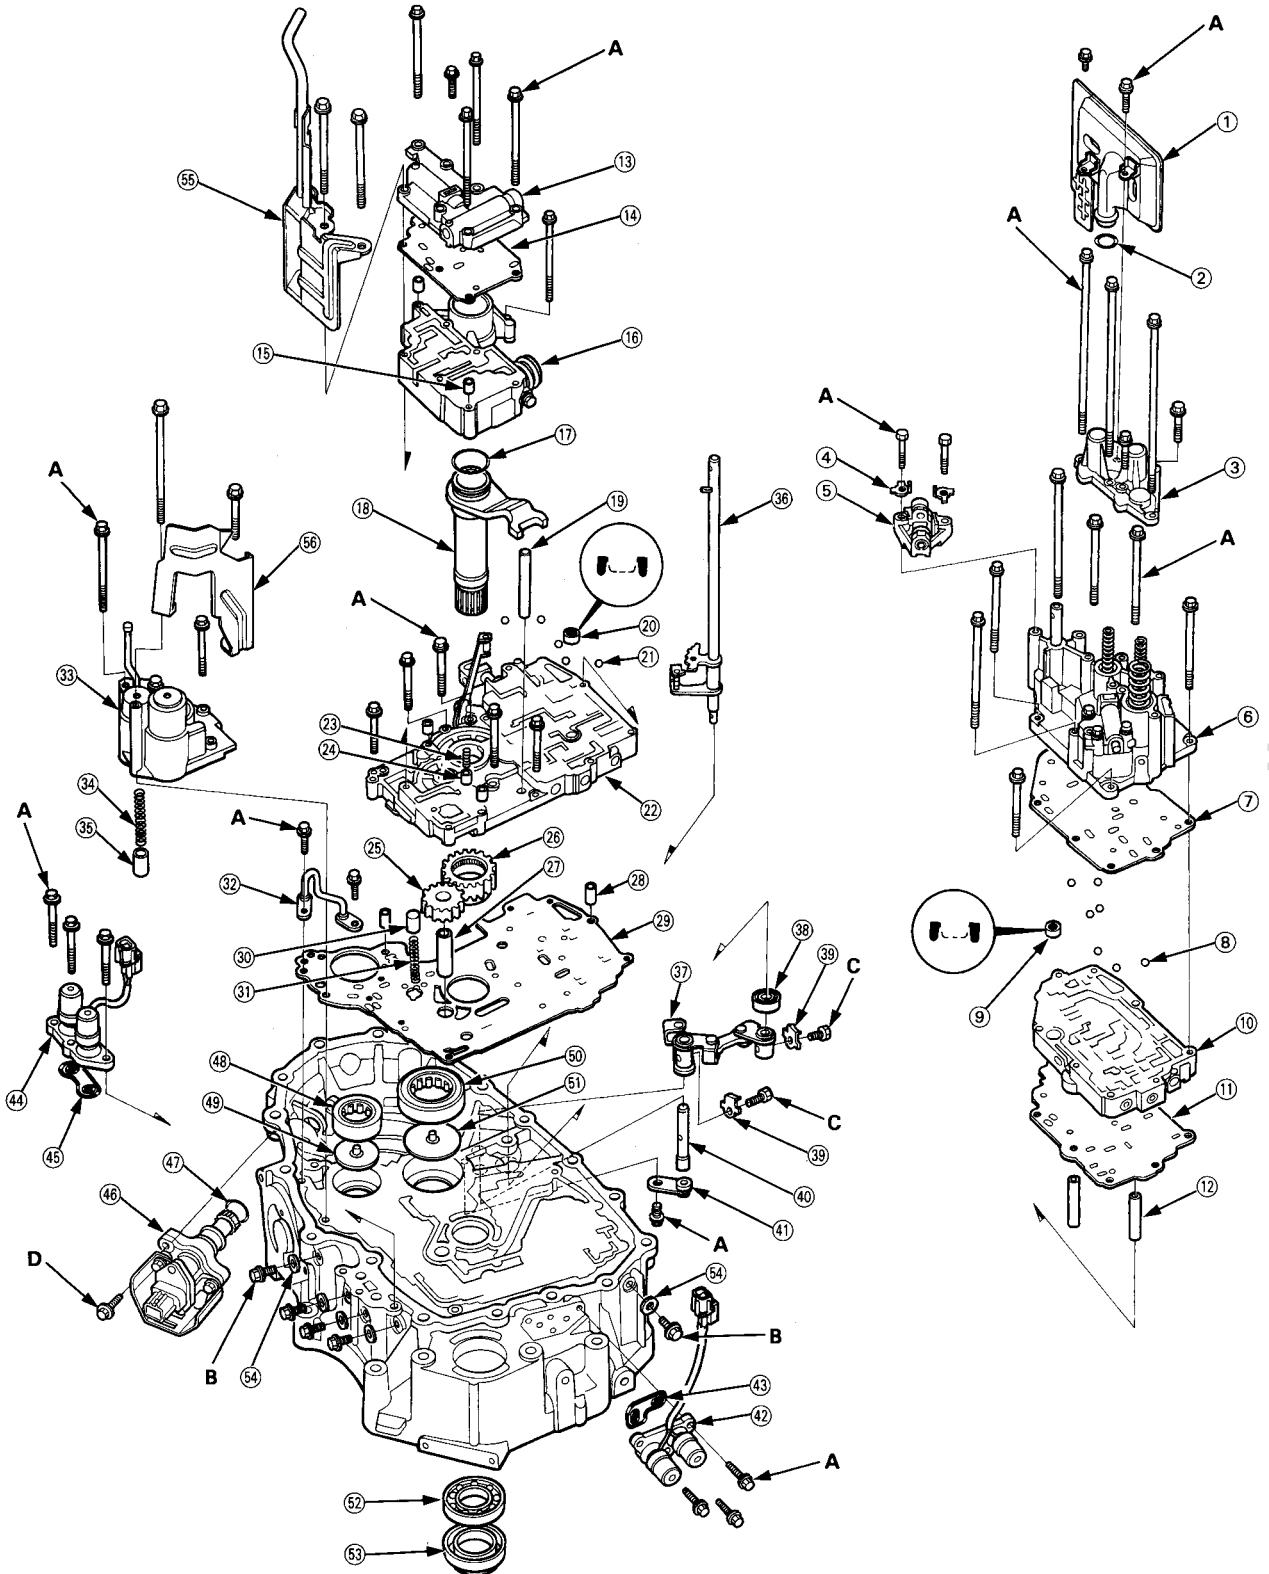

cardiagn.com



①	ATF STRAINER	②9	MAIN SEPARATOR PLATE
②	O-RING Replace.	③0	TORQUE CONVERTER CHECK VALVE
③	ACCUMULATOR COVER	③1	TORQUE CONVERTER CHECK VALVE SPRING
④	LOCK WASHER Replace.	③2	ATF LUBRICATION PIPE
⑤	SERVO DETENT BASE	③3	2ND ACCUMULATOR BODY
⑥	SERVO BODY	③4	LSD RELIEF VALVE SPRING
⑦	SERVO SEPARATOR PLATE	③5	LSD RELIEF VALVE
⑧	CHECK BALLS (7/32) #7	③6	CONTROL SHAFT
⑨	SECONDARY VALVE BODY FILTER Replace.	③7	CONTROL LEVER
⑩	SECONDARY VALVE BODY	③8	OIL SEAL Replace.
⑪	SECONDARY SEPARATOR PLATE	③9	LOCK WASHER Replace.
⑫	DOWEL PIN	④0	CHANGE SHAFT
⑬	LOCK-UP VALVE BODY	④1	CHANGE SHAFT CAP
⑭	LOCK-UP SEPARATOR PLATE	④2	SHIFT CONTROL SOLENOID VALVE ASSEMBLY
⑮	DOWEL PIN	④3	SHIFT CONTROL SOLENOID FILTER/GASKET Replace.
⑯	REGULATOR VALVE BODY	④4	LOCK-UP CONTROL SOLENOID VALVE ASSEMBLY
⑰	O-RING Replace.	④5	LOCK-UP CONTROL SOLENOID FILTER/GASKET Replace.
⑱	STATOR SHAFT ASSEMBLY	④6	VEHICLE SPEED SENSOR ASSEMBLY
⑲	STOPPER PIN	④7	O-RING Replace.
⑳	MAIN VALVE BODY FILTER Replace.	④8	SECONDARY SHAFT NEEDLE BEARING Replace.
㉑	CHECK BALLS (7/32) #7	④9	ATF GUIDE PLATE Replace.
㉒	MAIN VALVE BODY	⑤0	COUNTERSHAFT NEEDLE BEARING Replace.
㉓	ONE-WAY RELIEF VALVE SPRING	⑤1	ATF GUIDE PLATE Replace.
㉔	ONE-WAY RELIEF VALVE	⑤2	MAINSHAFT BALL BEARING Replace.
㉕	ATF PUMP DRIVEN GEAR	⑤3	MAINSHAFT OIL SEAL Replace.
㉖	ATF PUMP DRIVE GEAR	⑤4	SEALING WASHER Replace.
㉗	ATF PUMP DRIVEN GEAR SHAFT	⑤5	4TH ATF GUIDE PLATE/PIPE
㉘	DOWEL PIN	⑤6	3RD ATF GUIDE PLATE

TORQUE SPECIFICATION

No.	TORQUE VALUE	BOLT SIZE	REMARKS
A	12 N·m (1.2 kgf·m, 8.7 lbf·ft)	6 x 1.0 mm	OIL PRESSURE CHECK BOLT
B	18 N·m (1.8 kgf·m, 13 lbf·ft)	8 x 1.25 mm	
C	14 N·m (1.4 kgf·m, 10 lbf·ft)	6 x 1.0 mm	
D	29 N·m (3.0 kgf·m, 22 lbf·ft)	8 x 1.25 mm	