

Troubleshooting Index

DTC	ABS INDICATOR LIGHT	DIAGNOSIS/SYMPTOM	DETECTION TIMING		PROBLEM LOCATION	REFER TO PAGE
			INITIAL DIAGNOSIS	REGULAR DIAGNOSIS		
NO DTC	OFF	ABS indicator light does not come on when ignition switch is turned ON (II).				19-50
	ON	ABS indicator light does not go off after engine is started (No DTC).				19-52
1	ON	Pump motor over-run	○	○		19-54
1-4	ON	Pressure switch		○		19-58
2	ON	Parking brake		○		19-59
3-1	ON	Pulser(s)		○	FR	19-61
3-2					FL	
3-4					RR	
3-8					RL	
4-1	ON	Wheel sensor		○	FR	19-62
4-2					FL	
4-4					RR	
4-8					RL	
5	ON	Rear wheel lock		○	RR/RL	19-63
5-4					RR	
5-8					RL	
6	ON	Fail-safe relay	○	○	FRONT/REAR	19-64
6-1					FRONT	19-65
6-4					REAR	19-67
7-1	ON	Solenoid	○	○	FR	19-69
7-2					FL	
7-4					RR	19-71
7-8					RL	
8-2	ON	Electrical Noise		○		19-73
8-4	ON	ABS control unit	○	○		19-73