

Troubleshooting

Troubleshooting Guide

Diagnostic Trouble Code (DTC)	System Indicated	Related components										Refer to page
		CLOCK (7.5 A) fuse	BACK-UP LIGHTS (15 A) fuse	Parking brake switch	Lateral acceleration (Lg) sensor	Steering angle sensor	Engine Control Module (ECM)	ABS control unit	Transmission Control Module (TCM)	Wire harness	TCS control unit	
—	TCS indicator light does not come on when ignition switch is turned ON (II)		○							○	○	19-103
—	TCS indicator light does not go off after engine is started	○					○			○	○	19-105
1-2	TCS control unit										○	19-106
2	Parking brake			○						○	○	19-107
2-1	Steering angle sensor					○				○	○	19-110
2-3	Lateral acceleration (Lg) sensor				○					○	○	19-113
3-1	TCS serial data line (SDL)						○			○	○	19-116
3-2	Engine Speed Signal (NEP)						○		○	○	○	19-118
3-3	Incorrect engine control module (ECM) for a '97 model						○					—
4-1	Right-front wheel sensor											19-119
4-2	Left-front wheel sensor											
4-4	Right-rear wheel sensor							○		○	○	
4-8	Left-rear wheel sensor											
4-9	All wheel sensors							○		○	○	19-121
6-1	Transmission Control Module (TCM)								○	○	○	19-122