

Safety Indicator

Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Symptom	Item to be inspected										Open circuit, loose or disconnected terminals
	Blown No. 5 (15 A) fuse (In the under-dash fuse box)	Safety indicator input	Safety indicator (diodes)	Brake light failure sensor	Door switch	Trunk latch switch	Retractable headlight control unit (see page 23-180)	Roof holder switch	Roof lock switches	Poor ground	
No indicator operates.	1	2								G401 G402 G403	YEL
Indicator lights fail to come on when ignition switch is turned to ON (II).		1									
Door indicator lights are not on with doors open.		2			1						GRN/BLU or GRN/RED
Trunk indicator light is not on with trunk lid open.		2				1					GRN/BLK
Brake indicator light is not on with blown brake light bulb.		1									ORN/WHT or GRN
Brake indicator light remains on with good brake light bulbs.		2		1						G551	
Ceiling light is not on with door open (with switch in MIDDLE position).			1								BLK/WHT
Retractor motor indicator light remains on with good retractor motor.		1					2				
Retractor motor indicator light is not on with faulty retractor motor.		1					2				RED/YEL or RED/YEL ¹
Roof warning light is not on with the roof unlatched or off* ¹ .		1						2	3		RED/YEL ² BLU/GRN RED/GRN RED/YEL ³

*1: NSX-T (open top) only