



Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected Symptom		In the engine compartment fuse/relay box		In the under-hood fuse/relay box	Faulty indicator light (LED)	Horn circuit	Lighting system	Door key switch	Ignition key switch	Trunk key switch	Trunk latch switch	Hood switch	Engine compartment lid switch	Door switch	Roof lock switches*1	Control unit input	Poor ground	
		Blown No. 18 (20 A) fuse	Blown No. 5 (15 A) fuse															
Security alarm can't be set (indicator light does not flash).		1	2	3	4				5								G401 G402 G403 G404	YEL/BLU, YEL, WHT/GRN, GRN or BLU/GRN
Security alarm can be set, but alarm does not work when the trunk, hood or either door is unlocked without the key.	Horn alarm			1		2										3		WHT/GRN, ORN/BLK, YEL/GRN ¹ or LT GRN/WHT
	Headlight alarm						1									2		LT GRN/RED, BLU/RED ¹ or RED/YEL
	Both alarms															1		
Alarm not canceled when the door is unlocked with the key.								1								2	G401 G402 G403 G404	GRN/YEL ¹ , GRN/YEL ² , BLU/RED ² or BLU/RED ³
Alarm not canceled when the key is inserted in the ignition switch.			1						2							3		YEL
Alarm not canceled when the trunk lid is opened with the key.										1	2					3	G551	BRN/WHT or WHT
Alarm does not work when the hood is opened.												1				2	G301	YEL/GRN ²
Alarm does not work when the engine compartment lid is opened.													1			2	G401 G402 G403	BLU
Alarm does not work when the doors are opened.														1		2	G401 G402 G403	GRN/BLU or GRN/RED
Alarm does not work when the roof is unlatched*1.															1	2	G401 G402 G403	RED/GRN or RED/YEL

*1: NSX-T (open top)