

Supplemental Restraint System (SRS)

Components/Wiring Locations

CAUTION: Make sure all SRS ground locations are clean and grounds are securely attached.

NOTE:

- All SRS electrical wiring harness are covered with yellow insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

SRS INDICATOR LIGHT (In the gauge assembly)

Troubleshooting, page [24-13](#)

Gauge assembly, [Section 23](#).

**TO CRUISE CONTROL
SET/RESUME SWITCH**

**CABLE REEL to
DRIVER'S AIRBAG
3P Connector**

TO HORN SWITCH

CABLE REEL

Removal/Installation,
page [24-42/24-44](#)

PASSENGER'S AIRBAG ASSEMBLY

(Airbag and inflator)

Removal/Installation,

page [24-34/24-35](#)

Disposal, page [24-37](#)

**FLOOR WIRE HARNESS
to INDICATOR LIGHT in
GAUGE ASSEMBLY
30P Connector**

**SRS MAIN HARNESS to
PASSENGER'S AIRBAG
3P Connector**

RIGHT DASH SENSOR

Removal/Installation,
page [24-47/24-48](#)

**FLOOR WIRE
HARNESS**

**SRS MAIN HARNESS
to RIGHT DASH SENSOR
2P Connector**

**SRS MAIN HARNESS
to FLOOR WIRE HARNESS**

4P Connector

DRIVER'S AIRBAG ASSEMBLY

(Airbag and Inflator)

Removal/Installation,

page [24-34/24-35](#)

Disposal, page [24-37](#)

**CABLE REEL to
SRS MAIN HARNESS**

6P Connector

LEFT DASH SENSOR

Removal/Installation,

page [24-47/24-48](#)

**UNDER-DASH
FUSE BOX**

**SRS MAIN HARNESS
to UNDER-DASH
FUSE BOX**

2P Connector

**LEFT DASH SENSOR
to SRS MAIN HARNESS
2P Connector**

**SRS MAIN HARNESS
to FLOOR WIRE HARNESS
3P Connector**

**DRIVER'S SEAT BELT
TENSIONER to
FLOOR WIRE HARNESS
3P Connector**

**PASSENGER'S SEAT BELT
TENSIONER**

Removal/Installation,

page [24-51/24-52](#)

Disposal, page [24-37](#)

**PASSENGER'S SEAT BELT
TENSIONER to
FLOOR WIRE HARNESS
3P Connector**

**FLOOR WIRE
HARNESS**

**DRIVER'S SEAT BELT
TENSIONER**

Removal/Installation,

page [24-51/24-52](#)

Disposal, page [24-37](#)

SRS UNIT

(Including safing sensor)

Removal/Installation,
page [24-49/24-52](#)

**TEST HARNESS
SOCKET
16P Connector**

**SRS MAIN
HARNESS SOCKET
18P Connector**