

2007-2008 ACCESSORIES AND EQUIPMENT

Bumpers - TL

FRONT BUMPER REMOVAL/INSTALLATION

Special Tools Required

KTC trim tool set SOJATP2014 *

* Available through the American Honda Tool and Equipment Program; call 888-424-6857

NOTE:

- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.
- Put on gloves to protect your hands.
- Have an assistant help you when removing and installing the front bumper.
- Take care not to scratch the front bumper and body.

1. Remove these items:
 - Front bulkhead cover (see FRONT GRILLE LOWER MOLDING REPLACEMENT)
 - Front strake (see FRONT STRAKE REPLACEMENT)
2. Remove the bolts (A), screws (B), and clips (C) securing the front bumper (D).

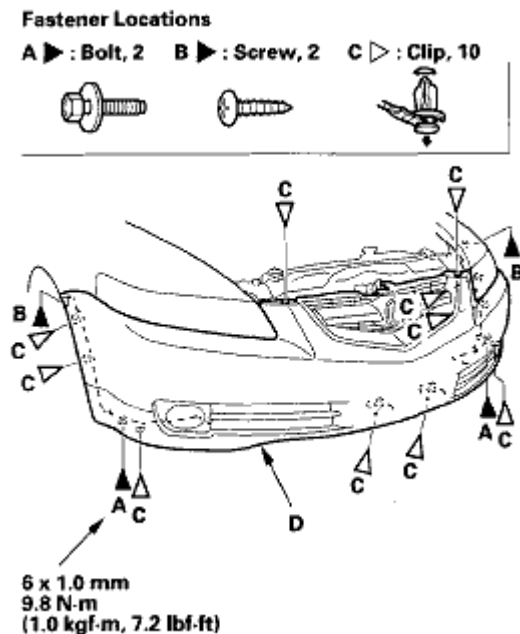


Fig. 1: Identifying Front Bumper With Torque Specification
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Pull on the front bumper (A) at the wheel arch areas to release it from the hooks (B) on the side spacers (C).

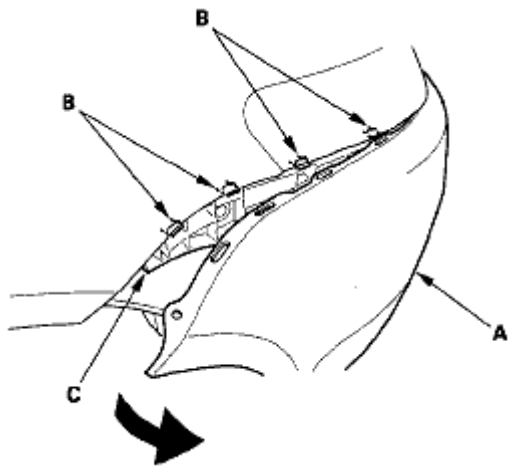


Fig. 2: Pulling On Front Bumper

Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. With the help of an assistant, pull the wheel arch portion away from the side spacer (A) while pulling the front bumper to release the bumper from the hooks (B) on the corner upper beam (C).

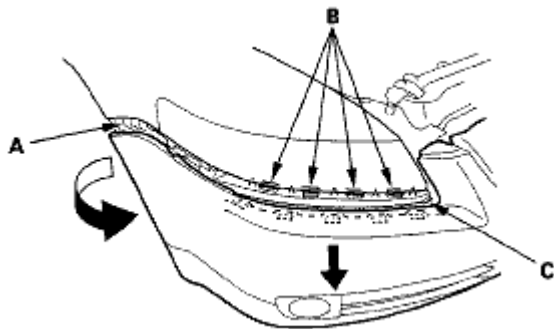


Fig. 3: Identifying Hooks On Corner Upper Beam

Courtesy of AMERICAN HONDA MOTOR CO., INC.

5. Disconnect the fog light connectors (A), then remove the front bumper (B).

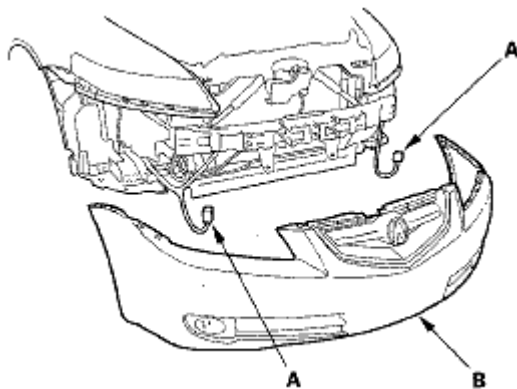


Fig. 4: Identifying Fog Light Connectors And Front Bumper

Courtesy of AMERICAN HONDA MOTOR CO., INC.

6. Release the hooks, then remove the front bumper absorber (A) from the front bumper beam (B).

Fastener Locations

▷ : Hook, 8

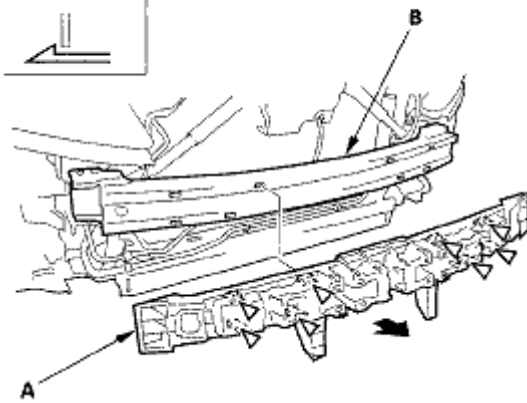


Fig. 5: Identifying Front Bumper Absorber And Front Bumper Beam
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

7. Install the bumper in the reverse order of removal, and note these items:
 - Make sure the front bumper engages the hooks (of both corner upper beams and side spacers) on each side securely.
 - Check if the clips are damaged or stress-whitened, and if necessary, replace them with new ones.
 - Make sure the fog light connectors are plugged in properly.
 - Push the clips and hooks into place securely.

LOWER FRONT BUMPER GRILLE REPLACEMENT

Special Tools Required

KTC trim tool set SOJATP2014 *

* Available through the American Honda Tool and Equipment Program; call 888-424-6857

NOTE:

- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.
- Put on gloves to protect your hands.
- Take care not to scratch the front bumper.

1. Remove the front bumper (see **FRONT BUMPER REMOVAL/INSTALLATION**).
2. Remove the screws from back of the front bumper (A), and release the hooks (B), then remove the lower front bumper grille (C) and the fog housing (D).

Except Type-S model

Fastener Locations

► : Screw, 2

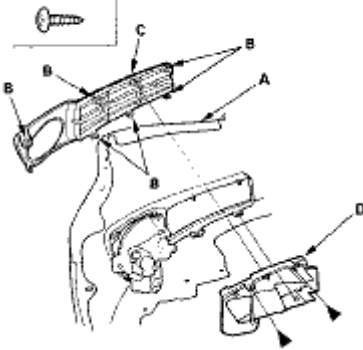


Fig. 6: Identifying Lower Front Bumper Grille - Except Type-S Model
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

Type-S model

Fastener Locations

► : Screw, 2

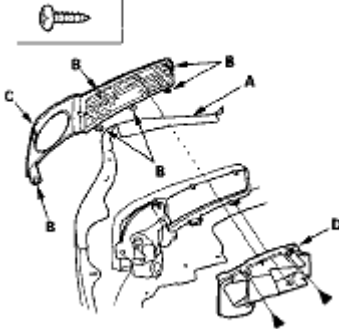


Fig. 7: Identifying Lower Front Bumper Grille - Type-S Model
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Release the hooks (A) from back of the lower front bumper grille (B), then remove the lower grille cross bar (C).

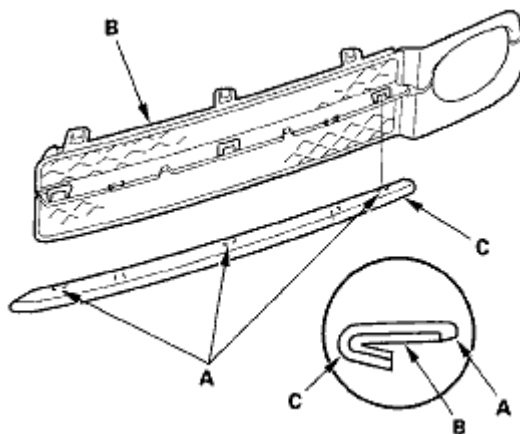


Fig. 8: Identifying Lower Grille Cross Bar
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. Install the lower grille in the reverse order of removal, and push the hooks into place securely.

FRONT BUMPER BEAM DYNAMIC DAMPER REPLACEMENT

NOTE:

- Put on gloves to protect your hands.
- Take care not to scratch the front bumper beam and body.

1. Remove the front bumper (see **FRONT BUMPER REMOVAL/INSTALLATION**).
2. Remove the nuts, then remove the front bumper beam dynamic damper (A) from the front bumper beam (B).

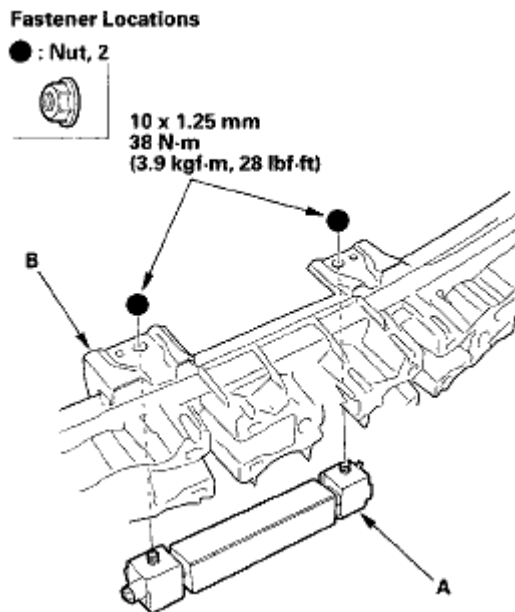


Fig. 9: Identifying Front Bumper Beam Dynamic Damper And Front Bumper Beam With Torque Specification

Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Install the dynamic damper in the reverse order of removal.

REAR BUMPER REMOVAL/INSTALLATION

Special Tools Required

KTC trim tool set SOJATP2014 *

* Available through the American Honda Tool and Equipment Program; call 888-424-6857

NOTE:

- Put on gloves to protect your hands.
- Have an assistant help you when removing and installing the rear bumper.
- Take care not to scratch the rear bumper and body.

- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.

1. Type-S model: Remove the rear bumper trim (see **REAR BUMPER TRIM REPLACEMENT**).
2. Remove the caps (A). Remove the clips (B), screws (C, D), and bolts (E) securing the rear bumper (F).

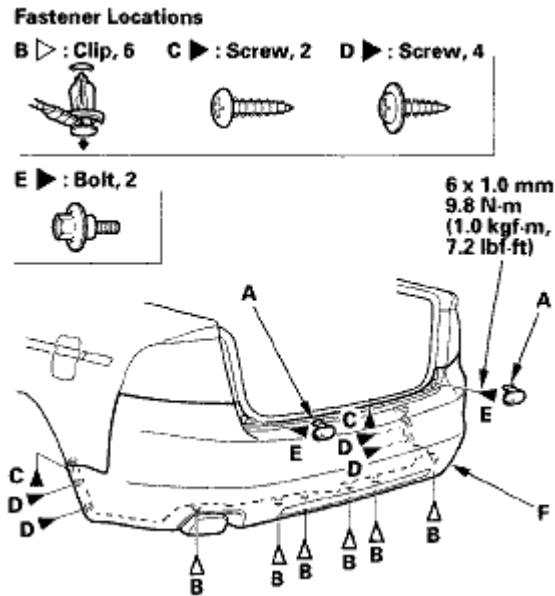


Fig. 10: Identifying Rear Bumper With Torque Specification
Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Pull on the rear bumper (A) at the wheel arch areas to release it from the hooks (B) on the side spacers (C).

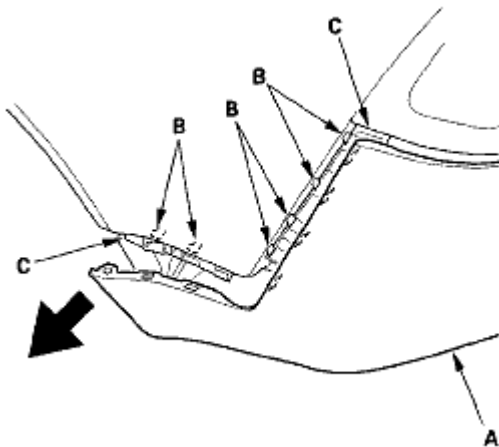


Fig. 11: Pulling On Rear Bumper
Courtesy of AMERICAN HONDA MOTOR CO., INC.

4. With the help of an assistant, pull the wheel arch portion away from the side spacer (A) while pulling the rear bumper to release the bumper from the hooks (B) on the side bracket (C).

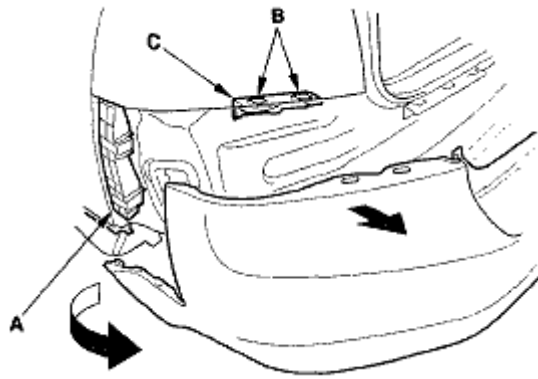


Fig. 12: Identifying Hooks And Bracket

Courtesy of AMERICAN HONDA MOTOR CO., INC.

5. With the help of an assistant, pull the rear bumper to release the bumper (A) from the hooks (B) on the upper brackets (C).

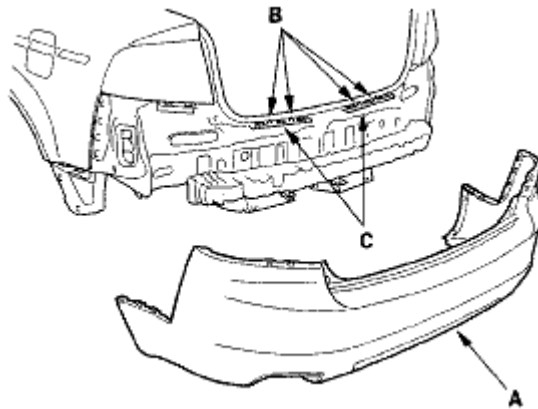


Fig. 13: Identifying Rear Bumper And Upper Brackets With Hooks

Courtesy of AMERICAN HONDA MOTOR CO., INC.

6. Release the hooks (A, B), then remove the rear bumper absorber (C) from the rear bumper beam (D).

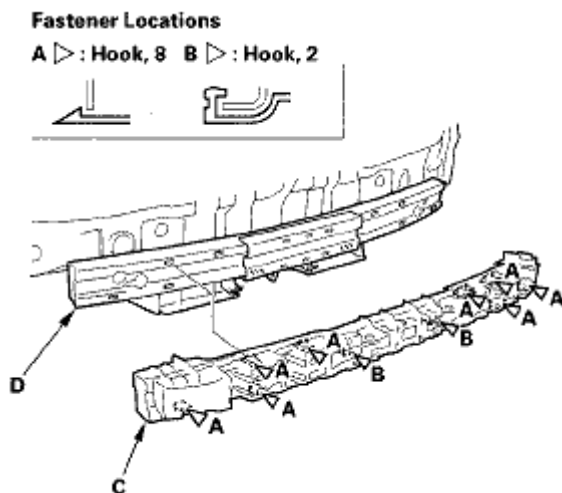


Fig. 14: Identifying Rear Bumper Absorber And Rear Bumper Beam

Courtesy of AMERICAN HONDA MOTOR CO., INC.

7. Install the bumper in the reverse order of removal, and note these items:
 - Make sure the rear bumper engages the hooks (of both the side bracket and side spacers) on each side securely.
 - Check if the clips are damaged or stress-whitened, and if necessary, replace them with new ones.
 - Push the clips and hooks into place securely.

REAR BUMPER TRIM REPLACEMENT

Special Tools Required

KTC trim tool set SOJATP2014 *

* Available through the American Honda Tool and Equipment Program; call 888-424-6857

NOTE:

- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.
- Put on gloves to prevent damage.
- Take care not to scratch the rear bumper and body.

1. Remove the clips. Pull the rear bumper trim (A) back to release the hooks (B), then remove the trim from the rear bumper (C).

Except Type-S model

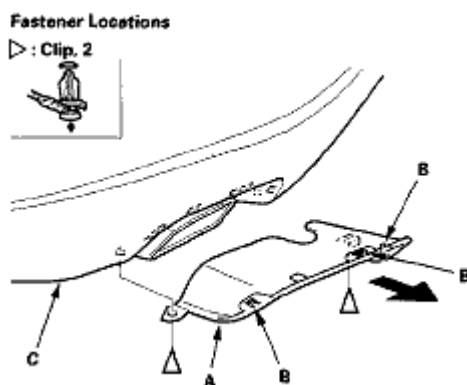


Fig. 15: Identifying Rear Bumper Trim - Except Type-S Model
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

Type-S model

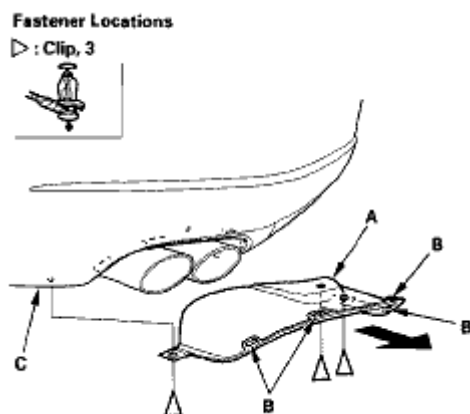


Fig. 16: Identifying Rear Bumper Trim - Type-S Model
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

2. Install the cover in the reverse order of removal, and note these items:
 - Check if the clips are damaged or stress-whitened, and if necessary, replace them with new ones.
 - Push the clips into place securely.

REAR BUMPER LOWER TRIM REPLACEMENT

Special Tools Required

KTC trim tool set SOJATP2014 *

* Available through the American Honda Tool and Equipment Program; call 888-424-6857

NOTE:

- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.
- Take care not to scratch the rear bumper.
- Put on gloves to prevent damage.

1. Remove the rear bumper (see [REAR BUMPER REMOVAL/INSTALLATION](#)).
2. Remove the bolts and release the hooks from back of the rear bumper, then remove the rear bumper lower trim.

Except Type-S model

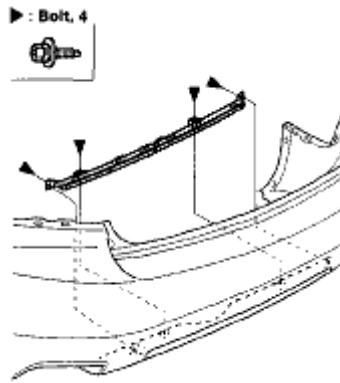


Fig. 17: Identifying Rear Bumper Lower Trim - Except Type-S Model
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

Type-S model

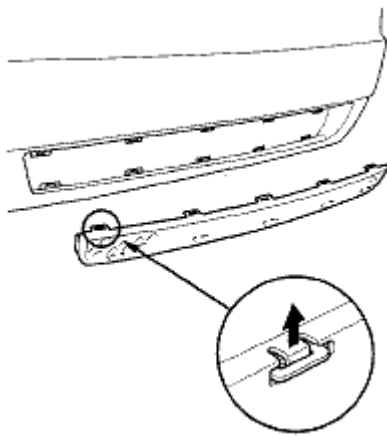


Fig. 18: Identifying Rear Bumper Lower Trim - Type-S Model
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

3. Install the trim in the reverse order of removal.