

GROUP 15

 
INTAKE AND EXHAUST

GENERAL

OUTLINE OF CHANGES

- The service procedures of exhaust pipe have been changed to correspond to the addition of the oxygen sensor <rear>.

SPECIAL TOOL


Tool	Number	Name	Use
	MD998770	Oxygen sensor wrench	Removal/Installation of oxygen sensor

EXHAUST PIPE AND MAIN MUFFLER

REMOVAL AND INSTALLATION

Pre-removal and Post-installation Operation

- Under Cover Removal and Installation

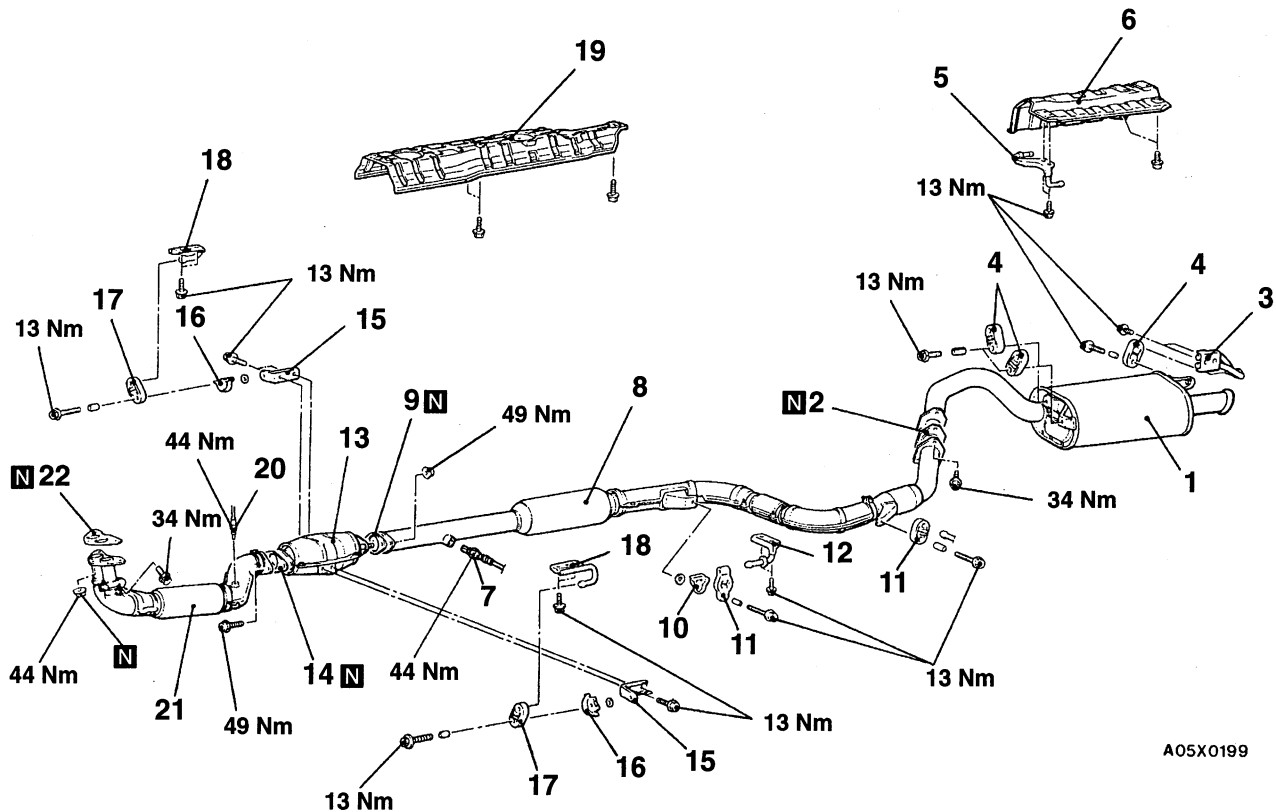

A05X0199

Main muffler removal steps

1. Main muffler assembly
2. Gasket
3. Hanger
4. Hanger
5. Rear hanger
6. Rear floor heat protector panel

Catalytic converter removal steps


13. Catalytic converter
14. Gasket
15. Catalytic converter bracket
16. Hanger protector
17. Hanger
18. Front hanger
19. Front floor heat protector panel

Center exhaust pipe removal steps

7. Oxygen sensor <rear>
8. Centre exhaust pipe
9. Gasket
10. Hanger protector
11. Hanger
12. Center hanger

Front exhaust pipe removal steps

20. Oxygen sensor <front>
21. Front exhaust pipe
22. Gasket

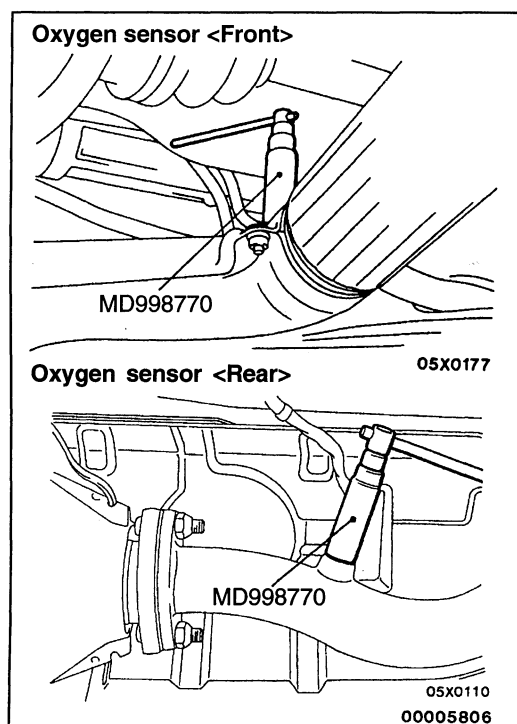

REMOVAL SERVICE POINT

◀A▶ OXYGEN SENSOR <REAR>/OXYGEN SENSOR <FRONT> REMOVAL

INSTALLATION SERVICE POINT

▶A◀ OXYGEN SENSOR <FRONT>/OXYGEN SENSOR <REAR> INSTALLATION