

GROUP 16

ENGINE ELECTRICAL


GENERAL

OUTLINE OF CHANGES

- The following service procedures have been changed to correspond to the change of the camshaft position sensor
 1. Camshaft position sensor
 2. Crankshaft position sensor

CAMSHAFT POSITION SENSOR AND CRANKSHAFT POSITION SENSOR

REMOVAL AND INSTALLATION

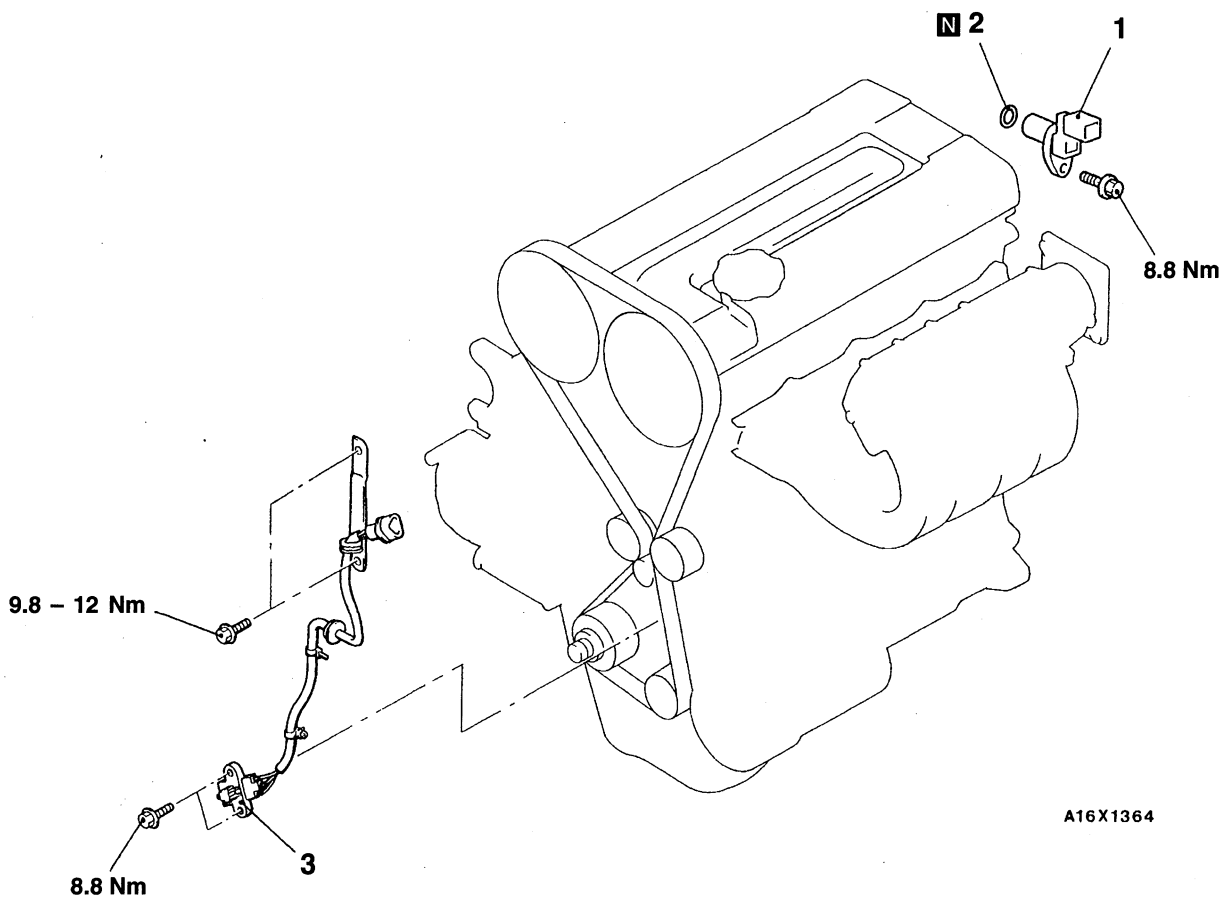

A16X1364

Removal steps

1. Camshaft position sensor
2. O-ring
 - Timing belt
3. Crankshaft position sensor