


GROUP 51

EXTERIOR

GENERAL

OUTLINE OF CHANGES

- The inspections of wiper and washer switch and headlamp washer switch have been changed to correspond to the change of the column switch.

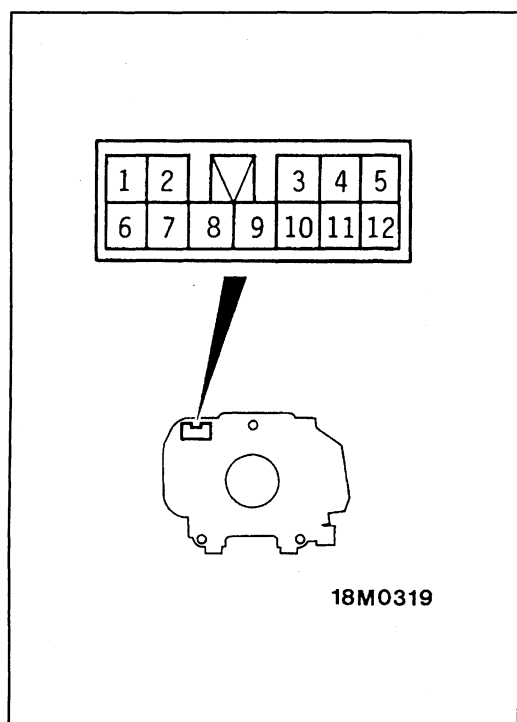

WINDSHIELD WIPER AND WASHER

INSPECTION

COLUMN SWITCH

Wiper and Washer Switch Continuity Check

Switch position		Terminal No.				
		6	7	8	9	10
Wiper switch	OFF		○—○			
	INT		○—○			
	1 (LO)			○—○		
	2 (HI)				○—○	
Washer switch	ON	○				○


Intermittent Wiper Relay (Intermittent Operation Inspection)

- Connect the column switch connector.
- Turn the ignition switch to ACC.
- Check the intermittent operation time when the wiper switch is turned to INT.

Variable intermittent control

FAST: Approx. 2 seconds

SLOW: Approx. 15 seconds

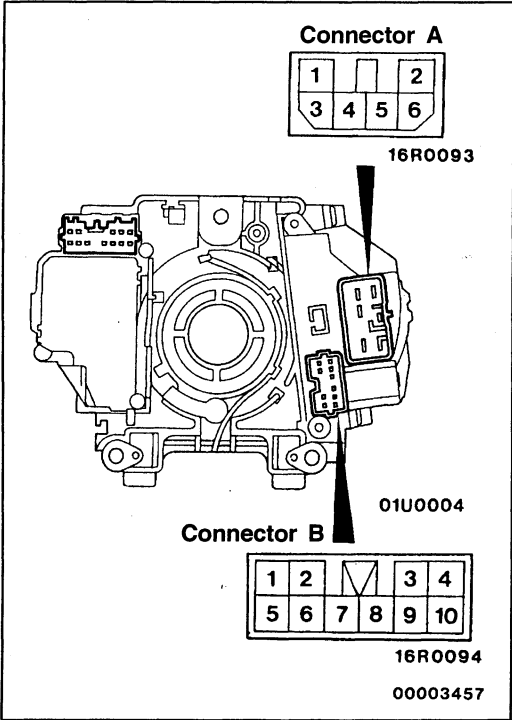

HEADLAMP WASHER

INSPECTION

HEADLAMP WASHER SWITCH CHECK

Switch position		Connector A Terminal No.1	Connector B Terminal No.2
Washer switch	OFF		
	ON		