


GROUP 54

CHASSIS ELECTRICAL

GENERAL

OUTLINE OF CHANGES

- The inspections of lighting switch, dimmer/passing switch and turn-signal lamp switch have been changed to correspond to the change of the column switch.
- The removal and installation procedures have been established to correspond to the addition of the clock to the vehicle without radio.

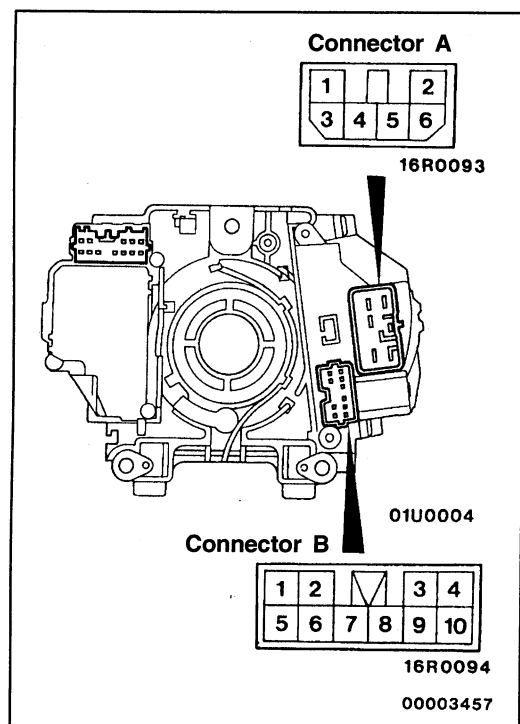

HEADLAMP AND FRONT TURN-SIGNAL LAMP ASSEMBLY


INSPECTION

COLUMN SWITCH CONTINUITY CHECK

Switch position		Connector A-terminal No.				Connector B-terminal No.				
		1	2	3	4	6	3	5	6	7
LIGHTING SWITCH	OFF									
	TAIL									
	HEAD									
DIMMER/ PASSING SWITCH	LOWER									
	UPPER									
	PASSING									
TURN-SIGNAL LAMP SWITCH	RH									
	OFF									
	LH									

NOTE

1. *1 indicates continuity when the dimmer switch is in the lower position.
2. *2 indicates continuity when the dimmer switch is in the upper position.

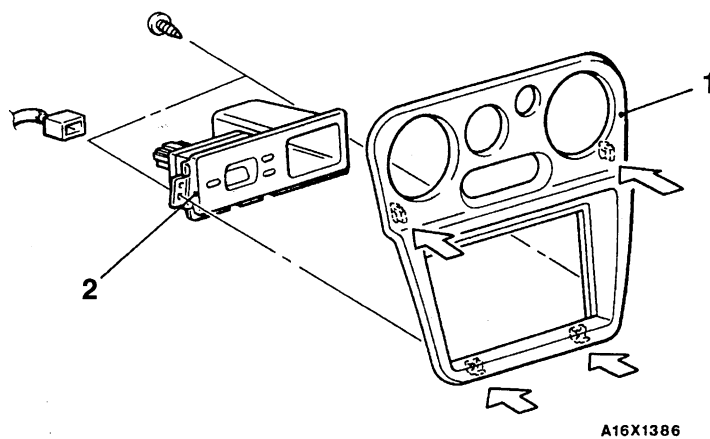CLOCK**REMOVAL AND INSTALLATION****NOTE**

⇐ :Metal clip position

Removal steps

1. Center console panel
2. Clock