

GROUP 51

EXTERIOR

GENERAL

OUTLINE OF CHANGES

- The service procedure have been changed because of the reshaped front bumper, rear bumper and side garnish.


SEALANT AND ADHESIVE

Items	Specified sealant and adhesive
Door garnish, side garnish	Double-sided tape [4 mm wide and 1.5 mm thick]
	3M ATD Part No. 8608 Super Fast Urethane Primer

FRONT BUMPER

REMOVAL AND INSTALLATION

Pre-removal and Post-installation Operation
Splash Shield Removal and Installation

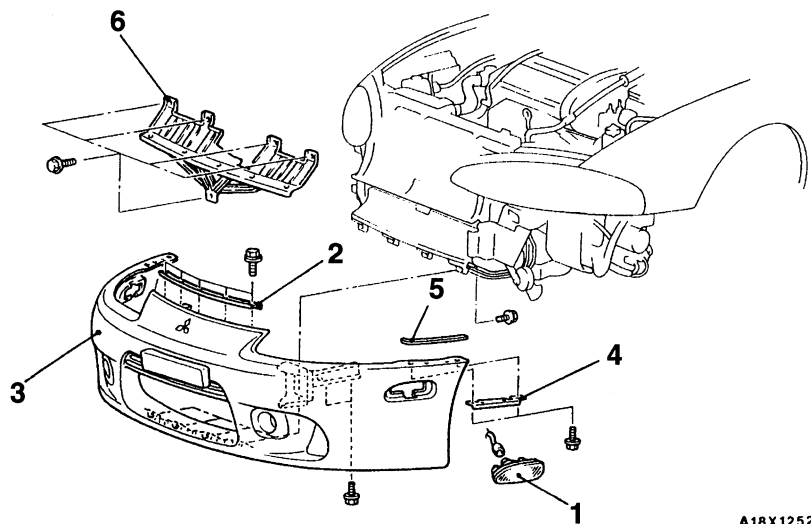


A18X1252

Removal steps

1. Reflector
2. Front bumper center plate
3. Front bumper assembly
4. Front bumper corner plate
5. Pad
6. Front fascia bracket

DISASSEMBLY AND REASSEMBLY

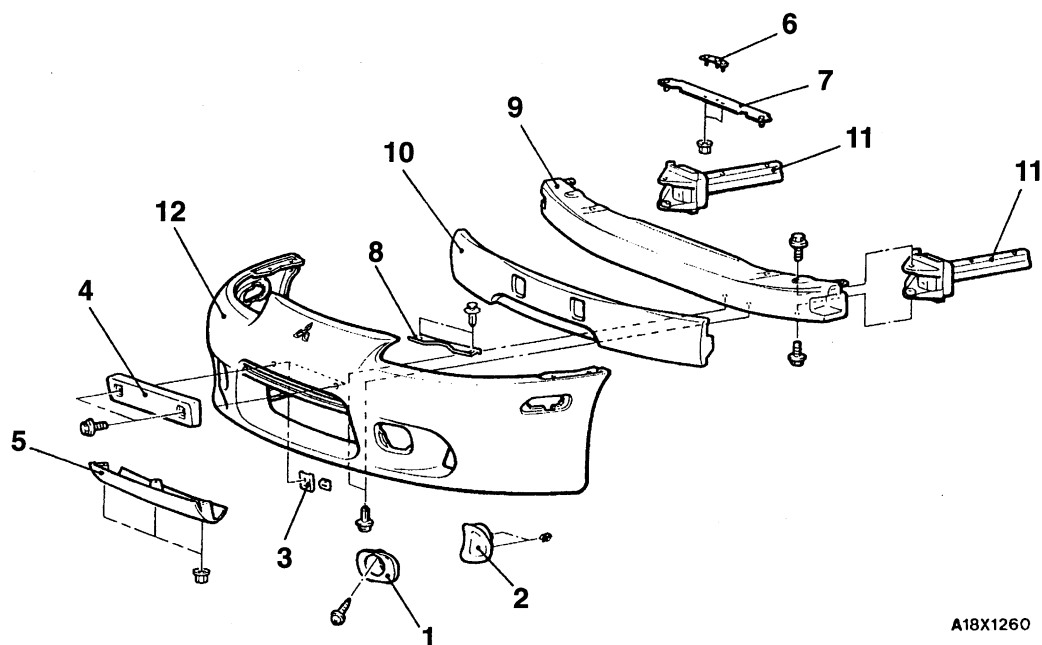

A18X1260

Removal steps


1. Front fog lamp bezel
2. Air intake cover
3. Licence plate support bracket
4. Front licence plate garnish
5. Front fascia air guide upper panel
6. Bolt plate

7. Bolt plate
8. Front bumper side plate
9. Front bumper reinforcement
10. Front bumper core
11. Front bumper stay assembly
12. Front bumper face

REAR BUMPER

REMOVAL AND INSTALLATION

Pre-removal and Post-installation Operation
Rear End Trim and Rear Side Trim Removal and Installation

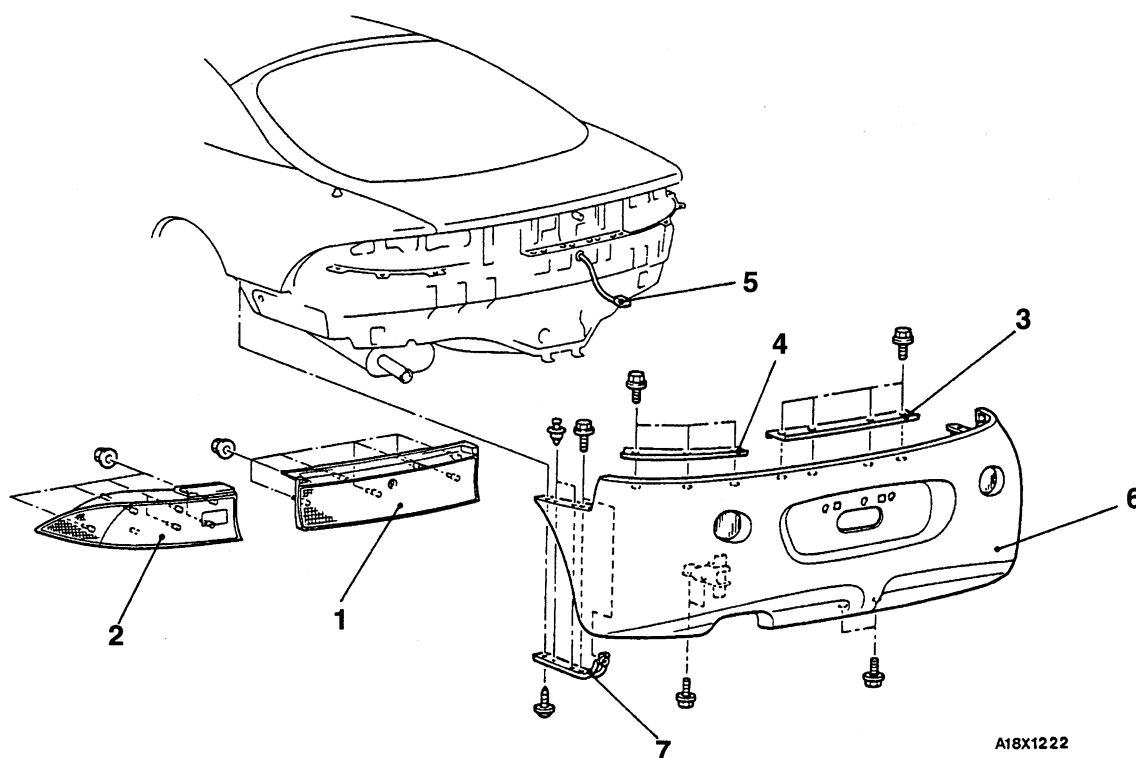


A18X1222



Removal steps

1. Rear panel garnish
2. Rear combination light
3. Rear bumper upper plate (A)
4. Rear bumper upper plate (B)
5. Connector harness
6. Rear bumper assembly
7. Rear bumper side plate

DISASSEMBLY AND REASSEMBLY

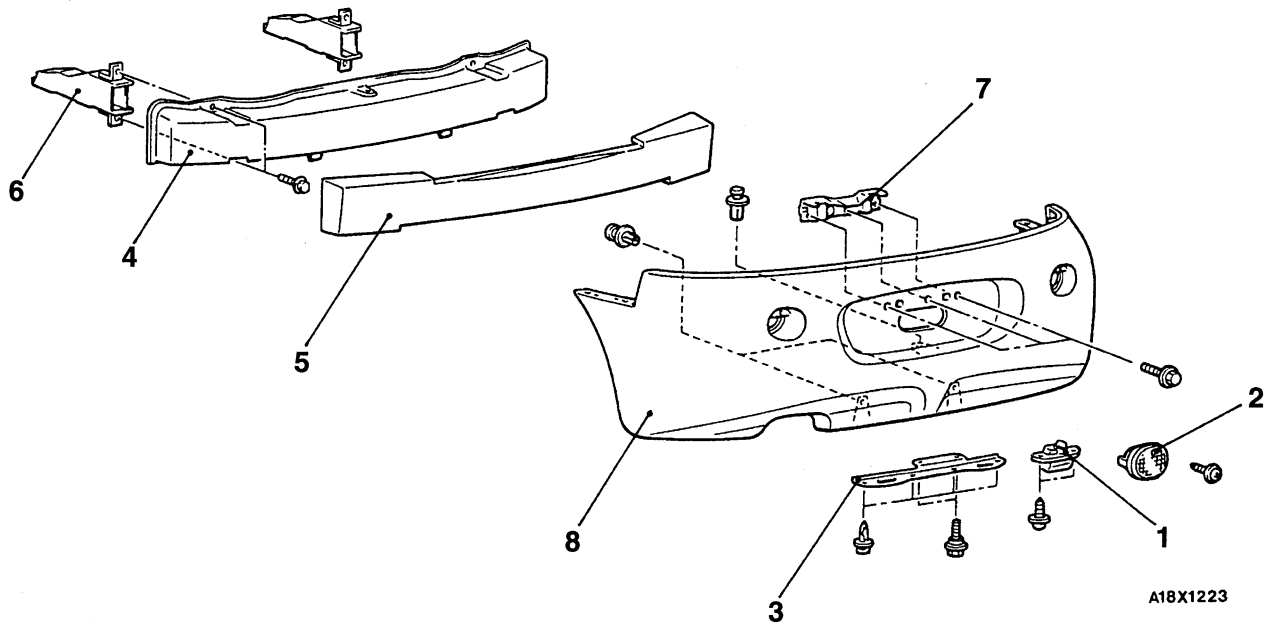**Disassembly steps**

1. Licence plate lamp
2. Back-up lamp
3. Rear bumper lower plate
4. Rear bumper reinforcement
5. Rear bumper core
6. Rear bumper stay assembly
7. Licence plate lamp bracket
8. Rear bumper face

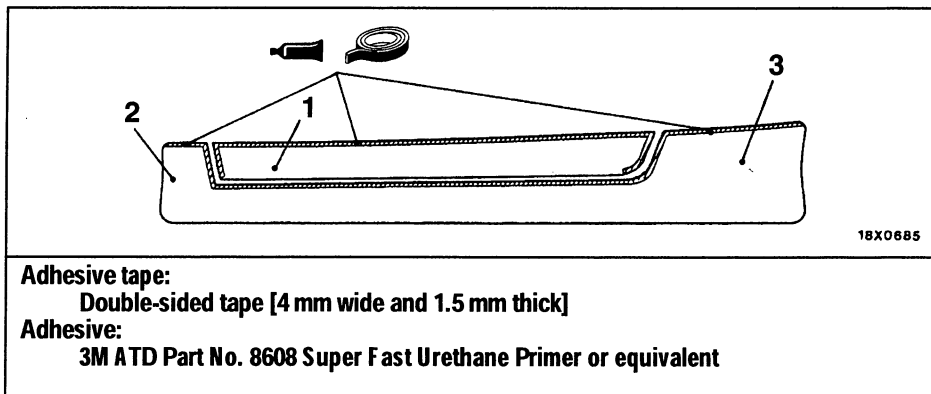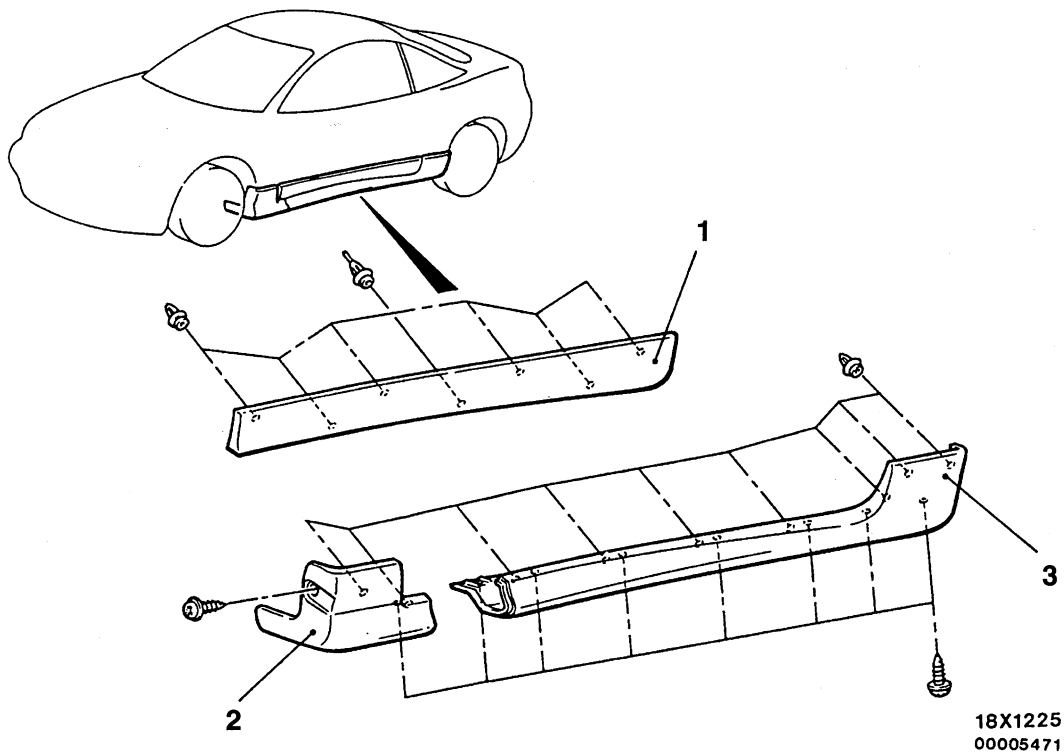AERO PARTS**REMOVAL AND INSTALLATION****Door garnish removal**

1. Door garnish

Side garnish removal steps2. Front side garnish
3. Rear side garnish**NOTE**

For service point, refer to Basic Manual.