



VOLVO S60 (11-)

WIRING DIAGRAM 2013



TP 39255202 Structure week 12w20

Vehicles with SRS (Airbag)/SIPS bag/IC (Inflatable curtain)

Warning!

Extra caution must be exercised when working on vehicles equipped with SRS/SIPS bag/IC in order to avoid:

1. Personal injuries when performing repair work.
2. Damage or malfunction of the SRS/SIPS bag/IC system.

Work involving the SRS/SIPS bag/IC systems or other components in the vehicle that may affect the SRS/SIPS bag/IC systems must always be performed by an authorized Volvo workshop.

In case of doubt, consult the SRS and SIPS bag/IC service manual.

Is the vehicle equipped with SRS/SIPS bag/IC?

Vehicles with SRS are most easily recognized by the letters SRS in the center of the steering wheel. If the vehicle also has a passenger side airbag, the letters SRS are stamped on the dashboard above the glove compartment. SRS vehicles from 1993 and onward also have explosive seat belt tensioners. SIPS bags are only installed on SRS vehicles from 1995 and onward. SIPS bag decals are located on the windshield and seat compartment. Vehicles with IC can be recognized by the letters IC on the C/D panel (4 door) or the B panel (5 door).

General recommendations

- Be especially careful when working on or around SRS, SIPS, and IC components.
- Make sure that no wires are pinched, frayed, or pierced.
- Never fit accessories by the sensors.
- Where applicable, work on the steering wheel, steering shaft, or steering gear must be done in accordance with the methods in the SRS section of VIDA.
- Certain components of the aforementioned systems must be grounded while working. Read the appropriate sections in VIDA.
- Do not install any accessories in the areas between the A and B-posts, the B and C-posts, and the C and D-posts.

Test terminal

Fuse in cargo compartment auxiliary fuse box

Changes introduced up to and including structure week 12w20

Any changes made to the vehicle after this date are not included in the manual. If necessary, refer to service bulletins.

Volvo models are sold in versions adapted for different markets. These adaptations depend on factors such as legal requirements, taxation, and market demands.

This manual may therefore include illustrations and text that do not apply to the vehicles in your country.

Ordering:

Electronic Wiring Diagrams (EWD) can be ordered from the Technical Information Shop (TIS)
We retain the right to make modifications.

Table of Contents 1:3

Vehicles with SRS (Airbag)/SIPS bag/IC (Inflatable curtain)	2
Explanations & Abbreviations	6
How to use the wiring diagrams 1:2.....	7
Electrical distribution	9
Overview without Start/stop function	9
Overview with Start/stop function	10
Overview, Distribution box in engine compartment	11
Overview, Distribution box in passenger compartment	12
Overview, Distribution box in cargo compartment	13

Fuses

Distribution box in engine compartment F1 - F7	14
Distribution box in engine compartment F8 - F23	15
Distribution box in engine compartment F27 - F36	16
Distribution box in engine compartment F37 - F38	17
Distribution box in engine compartment F39 - F44	18
Central Electronic Module (CEM) F1 - F8	19
Central Electronic Module (CEM) F9 - F19	20
Central Electronic Module (CEM) F20 - F24	21
Distribution box in passenger compartment F1 - F17	22
Distribution box in passenger compartment F18 - F30	23
Distribution box in engine compartment, cold zone	24
Distribution box in cargo compartment FA1 - FA11	25
Battery PF1 - PF2	26

Relays

Relays in the engine compartment	27
Relays in the engine compartment and passenger compartment	28
Relays in cargo compartment	29

Ground connections

Overview	30
31/1 - 31/7	31
31/10 - 31/15 continues	32
31/15 - 31/68	33
31/83 - 31/89	34
31/90 - 31/XX4	35
31/XX10 - 31/TRM	36

Control modules

Overview locations	37
Overview designations	38
Central Electronic Module (CEM) 1:3	39
Data communication, High speed CAN	42
Data communication intermediate speed CAN, LHD	43
Data communication intermediate speed CAN, RHD	44
Data communication Local CAN	45
Data communication, LIN 1:2	46
Data communication MOST	48
Steering Wheel Module (SWM)	49

Group 26 Cooling system

Cooling fan, 4-Cyl. Turbo	50
Cooling fan, 4-Cyl. Diesel	51
Cooling fan, 5-Cyl. Diesel	52
Cooling fan, 5-Cyl. Turbo & 6-Cyl.	53

Group 27 Engine controls

Cruise control 4-Cyl. Turbo 1.6l	54
Cruise control 4-Cyl. Turbo 2.0l	55
Cruise control 4-Cyl. Diesel	56
Cruise control 5-Cyl. Diesel	57
Cruise control 5-Cyl. Turbo & 6-Cyl.	58
Start-/Stop function 4-Cyl. 1.6l Turbo	59
Start-/Stop function 4-Cyl. 1.6l Diesel DV6C	60
Start-/Stop function 5-Cyl. Diesel VED5	61

Group 28 Ignition and control system

Engine management system 4-Cyl. 1.6l Turbo 1:2	62
Engine management system 4-Cyl. 2.0l Turbo 1:2	64
Engine management system, 5-Cyl. Turbo 1:2	66
Engine management system, 6-Cyl. Turbo 1:2	68
Engine management system, 4-Cyl. Diesel 1:3	70
Engine management system, 5-Cyl. Diesel 1:3	73
Emission control 4-Cyl. 1.6l Turbo	76
Emission control 4-Cyl. 2.0l Turbo	77
Emission control 5-Cyl. Turbo	78
Emission control 6-Cyl.	79

Table of Contents 2:3

Group 32 Alternator and voltage regulator

Power supply 4-Cyl. without Start/Stop	80
Power supply 5-Cyl. & 6-Cyl. without Start/Stop.....	81
Power supply 4-Cyl. & 5-Cyl. with Start/Stop.....	82

Group 33 Starting system

Starting system 4-Cyl.....	83
Starting system, 5-Cyl. & 6-Cyl.....	84

Group 35 Lighting

High and low beam	85
High and low beam (Dual Xenon).....	86
Beam length adjustment, manual	87
Running/Parking light, Tail lights S60	88
Running/Parking light, Tail lights V60	89
Fog lights S60.....	90
Fog lights V60.....	91
Brake lights S60.....	92
Brake lights V60.....	93
Reversing lights S60.....	94
Reversing lights V60.....	95
Follow-me-home lighting LHD	96
Follow-me-home lighting RHD	97
Interior lighting, LHD 1:2	98
Interior lighting, RHD 1:2	100
Active headlight	102
Lighting in door sill trims	103
Auxiliary lights.....	104

Group 36 Additional electrical equipment

Rain sensor.....	105
Direction indicator and hazard warning flashers LHD S60	106
Direction indicator and hazard warning flashers LHD V60	107
Direction indicator and hazard warning flashers RHD S60.....	108
Direction indicator and hazard warning flashers RHD V60.....	109
Wiper/washer windshield	110
Washer headlights	111
Wiper/Washer rear windowV60	112
Horn	113
Keyless vehicle 1:2	114
Anti-theft alarm	116
Parking assistance.....	117
Collision warning with power brake booster	118
Tire pressure monitoring system (TPMS).....	119
Alcohol lock.....	120

Group 37 Wiring and fuses

Diagnostics system	121
Outlet 12V	122
Outlet 12V, V60	123
12 V outlet, V60	124
Cable harness towbar/tow hitch 13-pin S60	125
Cable harness towbar/tow hitch 13-pin V60	126

Group 38 Instruments

Seat belt reminder	127
Driver information module.....	128

Group 39 Other

Audio Premium 1:3	129
Audio 1:2.....	132
Cellular phone 1:2.....	134
DAB Radio	136
Multimedia monitor with DVD, Dual Screen (RSE)....	137
TV receiver / TV control module S60	138
TV receiver / TV control module V60	139
Bluetooth Handsfree	140
Navigation system and Traffic information, portable..	141
Satellite radio	142
Parking camera rear	143
Parking camera rear	144
Parking camera wide angle front	145

Group 43 Transmission

Transmission M66.....	146
Automatic transmission AWF21	147
Automatic transmission MPS6.....	148
Differential Electronic Module (DEM).....	149

Group 55 Parking brake

Electric parking brake	150
------------------------------	-----

Group 59 Brake system

Brake control system & DSTC	151
-----------------------------------	-----

Group 64 Steering

Speed dependent power steering.....	152
-------------------------------------	-----

Table of Contents 3:3

Group 76 Shock absorbers

Four-C	153
--------------	-----

Group 83 Doors and openings

Central locking front doors LHD	154
Central locking front doors RHD	155
Central locking rear doors	156
Central locking tailgate S60	157
Central locking tailgate V60	158
Central locking fuel filler flap	159
Signal receiver central locking	160
Power windows front doors LHD	161
Power windows front doors RHD	162
Power windows rear doors	163
Power sunroof	164

Group 84 Exterior decorative elements, etc.

Power door mirrors LHD	165
Power door mirrors RHD	166
Heated door mirrors LHD	167
Heated door mirrors RHD	168
Blind spot information system LHD	169
Blind spot information system RHD	170
Heated rear window	171

Group 85 Interior equipment

Power driver's seat with memory function, LHD	172
Power driver's seat with memory function, RHD	173
Power passenger seat, LHD	174
Power passenger seat, RHD	175
Heated front seats with fans	176
Heated front seats without fans	177
Heated rear seat	178

Group 87 Climate control system

Climate control system PTC-elements	179
Climate control system, 4-Cyl. 1:2	180
Climate control system 4-Cyl. Diesel 1:2	182
Climate control system 5-Cyl. & 6-Cyl. 1:2	184
Parking heater, auxiliary heater	186
Parking heater, remote start	187

Group 88 Internal equipment

Supplemental restraint system 1:2	188
Rear-view mirror with automatic dimming	190
Remote control opener garage door	191
Power folding headrest	192

Group 89 Body other

Radiator masking blind	193
------------------------------	-----

Connectors..... 194

Branching points229

Cable harness routing in vehicle

Harness engine 4-Cyl. Turbo	249
Harness engine, 6-Cyl. Turbo	249
Harness engine, 2.0L Diesel	250
Harness engine, 2.4L Diesel	250
Engine compartment harness LHD	251
Engine compartment harness RHD	252
Harness dashboard, LHD	253
Harness Dashboard, RHD	254
Harness Floor, LHD S60	255
Harness Floor, RHD S60	256
Floor Harness, LHD V60	257
Harness Floor, RHD V60	258
Harness infotainment, LHD S60	259
Harness infotainment, RHD S60	260
Harness infotainment, LHD V60	261
Harness infotainment, RHD V60	262
Roof harness, S60	263
Roof harness V60	263
Center console harness	264
Tunnel harness	264
Harness front door, left	265
Harness front door, right	265
Harness rear door, left	266
Harness rear door, right	266
Trunk lid/tailgate harness, S60	267
Trunk lid/tailgate harness, V60	267
Harnesses rear axle	268

Component illustrations269

Index 1:2326

List of components 1:6328

Explanations & Abbreviations

Groups

Group 26	= Cooling system
Group 27	= Engine controls
Group 28	= Ignition and control system
Group 32	= Alternator and voltage regulator
Group 33	= Starting system
Group 35	= Lighting
Group 36	= Additional electrical equipment
Group 37	= Wiring and fuses
Group 38	= Instruments
Group 39	= Other
Group 43	= Transmission
Group 55	= Parking brake
Group 59	= Brake system
Group 64	= Steering
Group 76	= Shock absorbers
Group 83	= Doors and openings
Group 84	= Exterior decorative elements, etc.
Group 85	= Interior equipment
Group 87	= Climate control system
Group 88	= Internal equipment
Group 89	= Body other

Designations ignition switch

X	= Accessories (audio position)
S	= Powered upon insertion of key
15	= The switch remains connected during start
15I	= Contact is broken while starting
30	= Constant power from the battery
50	= Start

Countries/Markets

A	= Austria
AUS	= Australia
B	= Belgium
CDN	= Canada
CH	= Switzerland
D	= Germany
DK	= Denmark
E	= Spain
EU/OS	= Markets outside USA and Canada
FIN	= Finland
GB	= Great Britain
ISR	= Israel
J	= Japan
KOR	= Korea
N	= Norway
NL	= Netherlands
S	= Sweden
USA	= United States of America
WEU	= Western Europe

Other

ACC	= Adaptive Cruise Control
Ag	= Silver plated
Au	= Gold plated
AUTO	= Automatic transmission
BLIS	= Blind Spot Information System
CAN	= CAN communication
DPY	= Display
ECC	= Electronic climate control system
ETA	= Throttle unit
EXC	= Exclusive
GDL	= Gas discharge lamp
HS	= High speed data bus
KEYLESS	= Keyless vehicle
IR	= Infrared sensor
LIN	= LIN communication
LH	= Left-hand side
LHD	= Left-hand drive
MAN	= Manual transmission
MEMORY	= Memory driver's seat
MIRCAM	= Parking camera in rear-view mirror
MS	= Midspeed data bus
MMS	= Mass Movement Sensor
PANROOF	= Panoramic roof
PETROL	= Gasoline
RH	= Right-hand side
RHD	= Right-hand drive
RTI	= Road Traffic Information
SCR	= Screened
SRS	= Airbag
T	= Turbo engine
W/O	= Without
2WD	= Two-wheel drive
4CYL, I4	= 4-cylinder engine
5CYL, I5	= 5-cylinder engine
6CYL, I6	= 6-cylinder engine

Colors

BK, SB	= Black
BN	= Brown
BU, BL	= Blue
GN	= Green
GY, GR	= Gray
LGN	= Light Green
NL	= Natural
OG, OR	= Orange
PK, P	= Pink
RD, R	= Red
VT, VO	= Violet
WH, W	= White
YE, Y	= Yellow

How to use the wiring diagrams 1:2

The descriptions below apply in general to all wiring diagram manuals, although not all sections are necessarily contained in this manual.

A. Component designation

Every component has a component designation that consists of two parts.

The first part is a type number that describes the type of component in question, for example 3/xx.

The second part of the designation is a serial number, for example x/2.

Combined these give a component designation, for example 3/2.

At the end of the manual is a list of components, where, with the help of the component designation, you can read off the name of the component, for example, 3/2 = light switch.

List of type numbers

The list shows which type of component that respective type numbers refer to, for example, 3/x = switch, 6/x = electric motor, etc.

1	Battery
2	Relay
3	Switch
4	Control module
5	Driver Information Module
6	Electric motor
7	Sensor
8	Actuator
9	Heating element
10	Light
11	Fuse
15	Electrical distribution rail/box
16	Audio
17	Service/diagnostics
18	Contact reel
19	Meter
20	Ignition component/shunt
27	Optics
31	Ground connection
73	Branching point
74	Connector

The systems are shown in non-active status.i.e. with "key removed" and when the doors, hatches and hood are closed.

B. Branching points

The wiring diagrams contain numbered branching points, for example 73/5035.

This manual contains a section with a list of branching points. This list shows all the components which are connected to each branching point.

The location of the branching points is shown in the "Cable harness routing in vehicle" section.

C. Connectors

Connectors provide a bridge between two cable harnesses and are described in the "Connectors" section.

D. Electrical distribution

Operation of the fuses and relays is shown in the "Electrical distribution" section.

E. Data communication

Today's cars contain CAN, LIN and MOST networks that transfer information. Connections to these networks are not shown in their entirety in the respective wiring diagram. Complete information on CAN, LIN and MOST communication is found in the section "Control modules".



F. Abbreviations

A number of different abbreviations are used in the manual. These are explained in the section "Abbreviations".

G. Component location

There is a section at the end of the manual in which the appearance and location of components is described in numerical order.

How to use the wiring diagrams 2:2

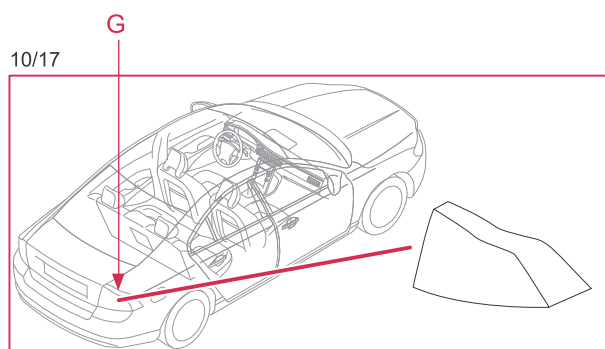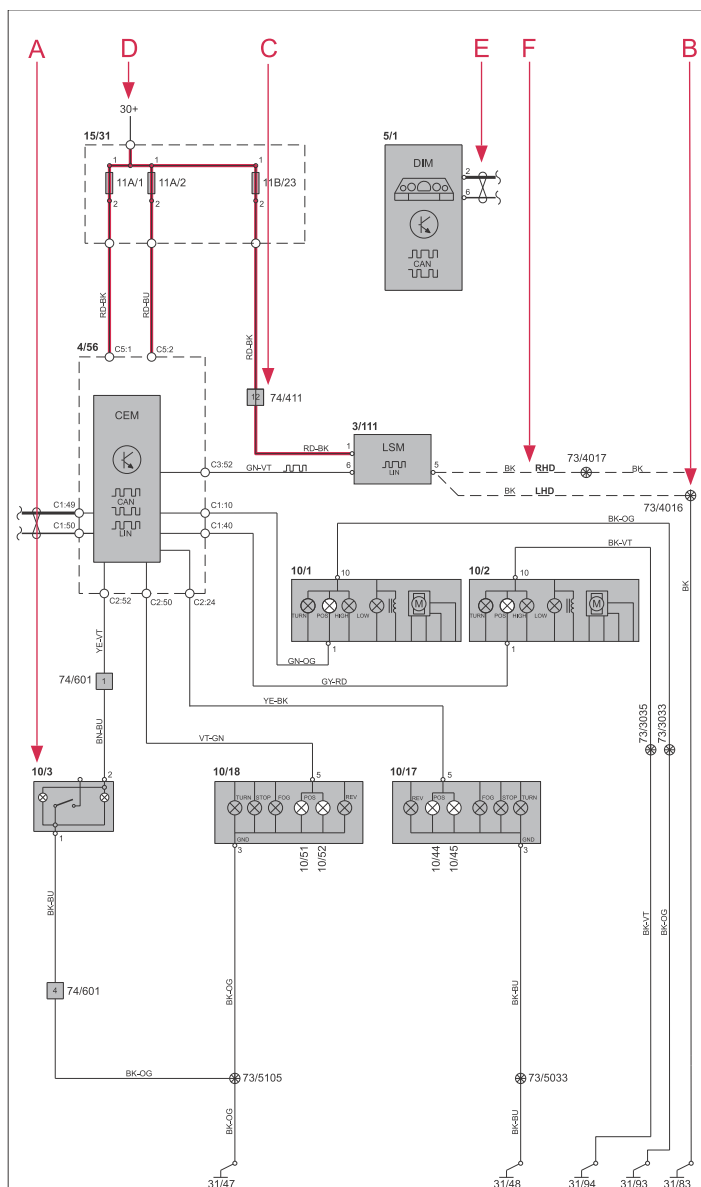


Explanation of symbols

- = System voltage
- = Ground connection via wiring
- = Ground connection in component/chassis
- = Screened wire
- = Branching point
- = Twisted cable
- = Electrical connection
- = Variant
- = CAN communication
- = CAN high data signal (CAN H)
- = CAN low data signal (CAN L)
- = LIN communication
- = LIN communication
- = DIN cable, coaxial cable, etc.
- = Data communication
- = CAN communication
- = MOST communication
- = MOST communication
- = Connection with distribution box
- = Further connection to...
- = Connector between cable harnesses
- = Connector connected in component

G029147

Electrical distribution

Overview without Start/stop function

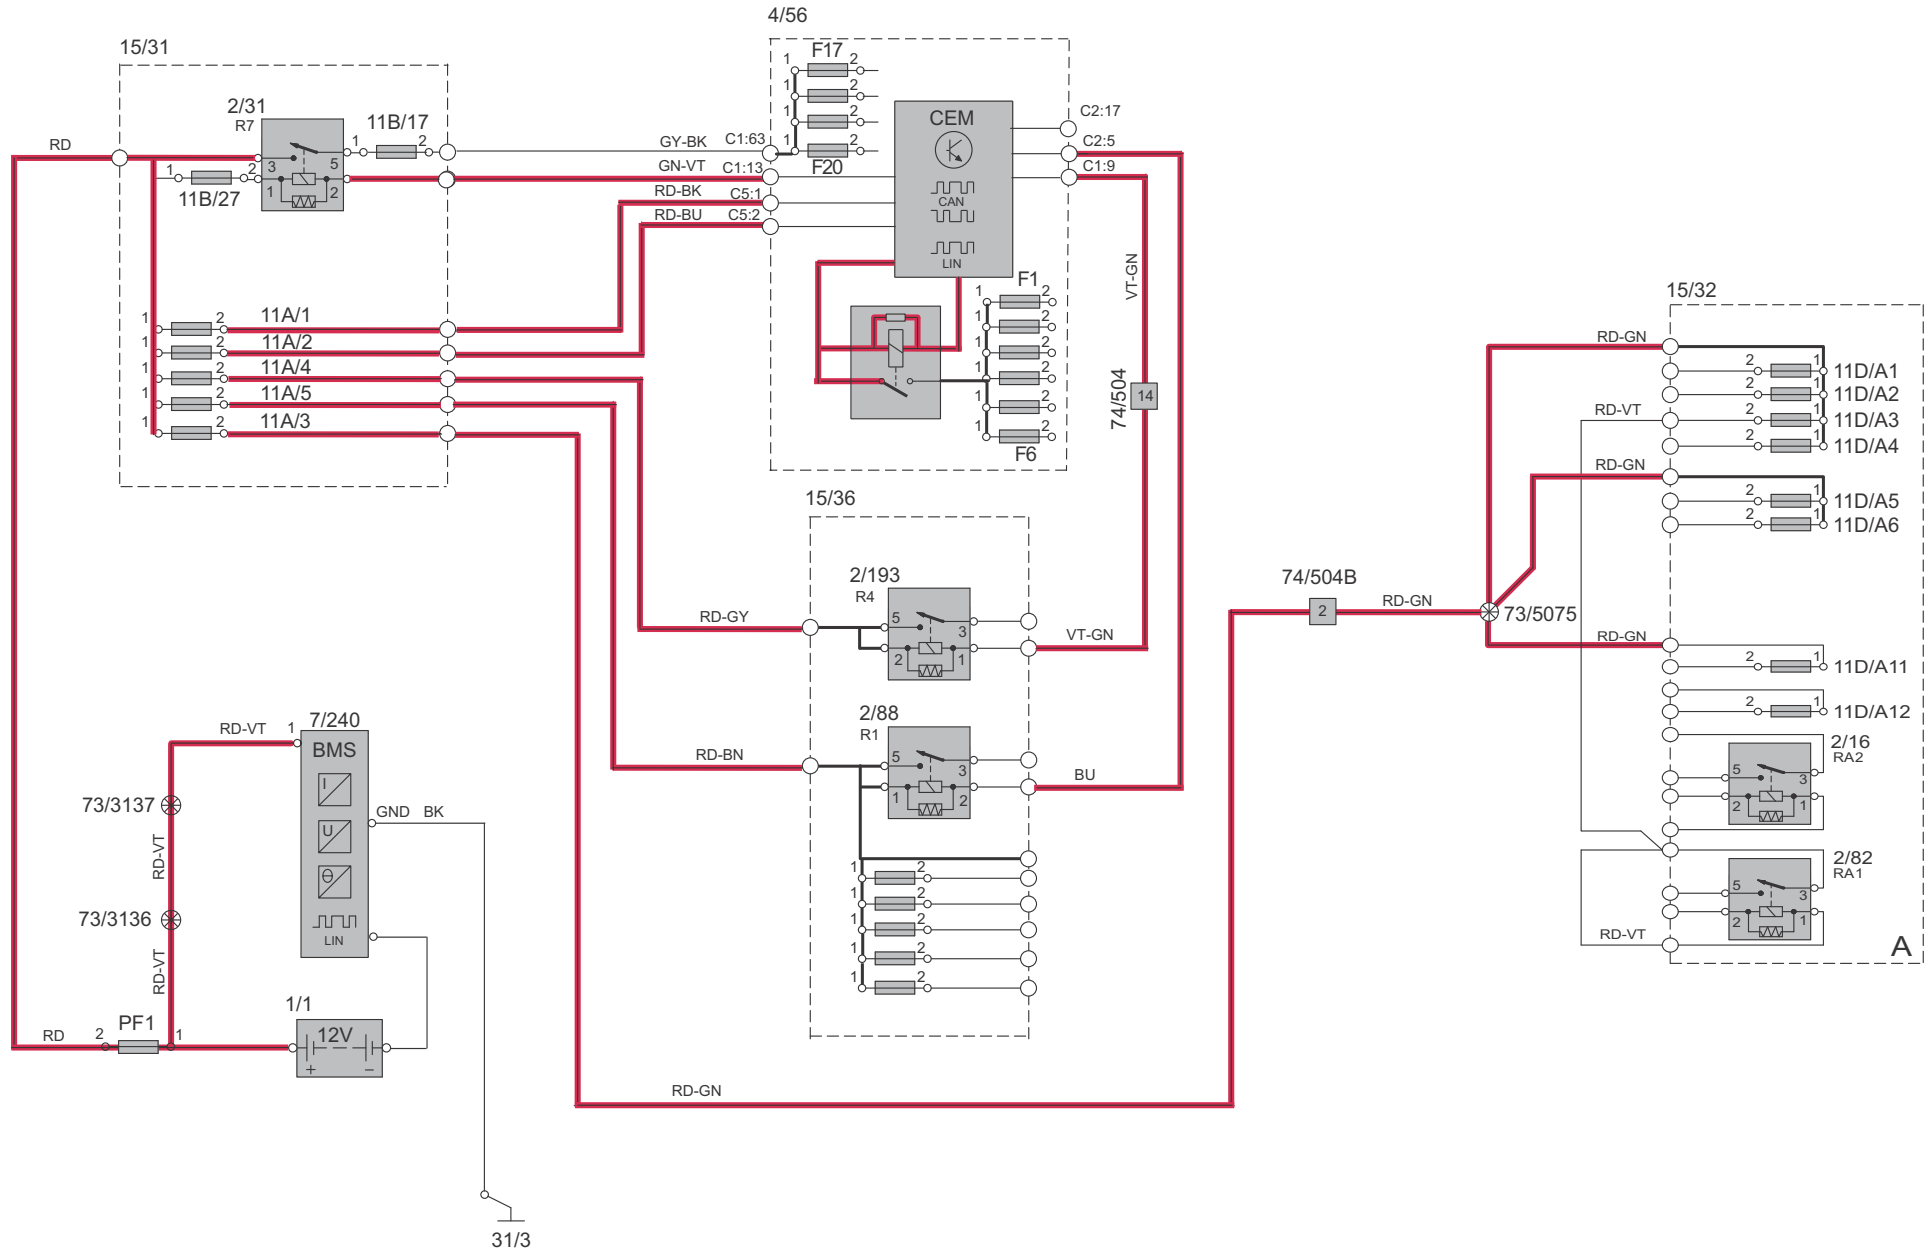


Overview with Start/stop function




Electrical distribution 1:3

Overview, Distribution box in engine compartment

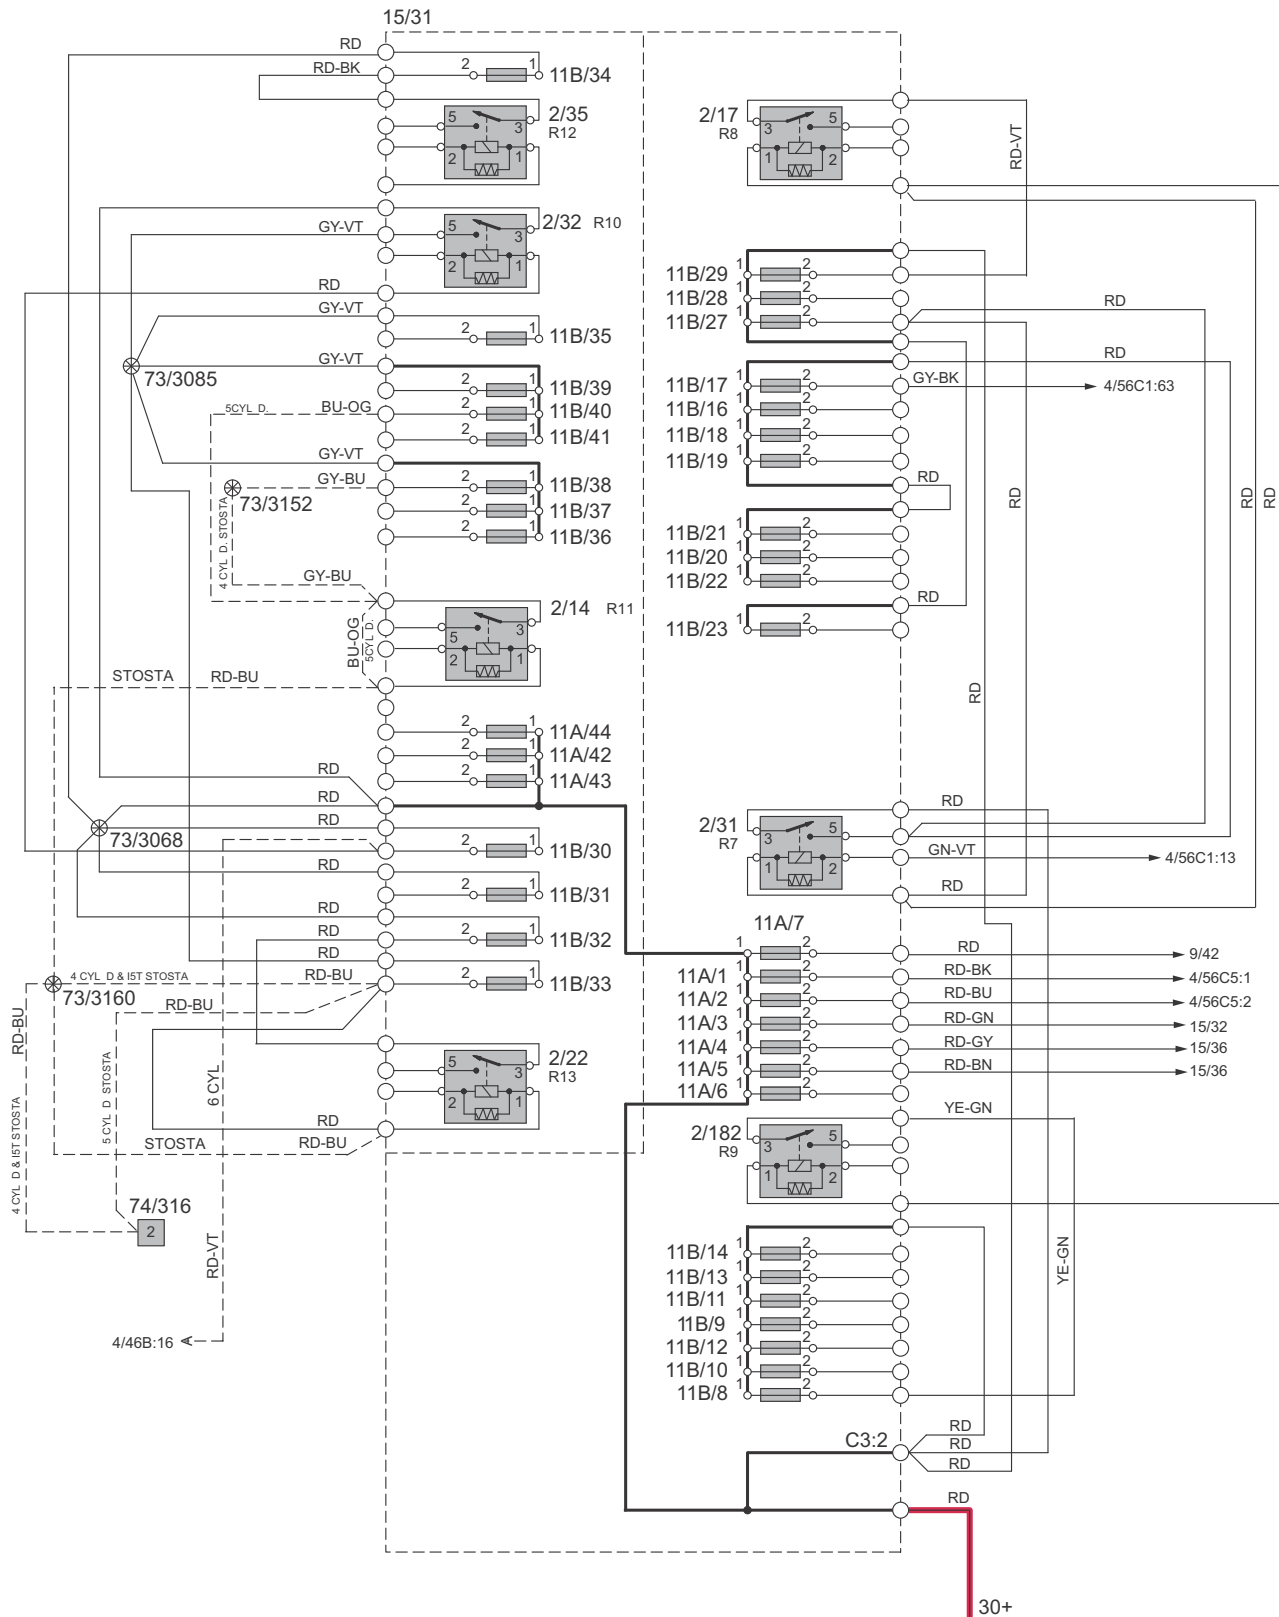


Electrical distribution 2:3

Overview, Distribution box in passenger compartment

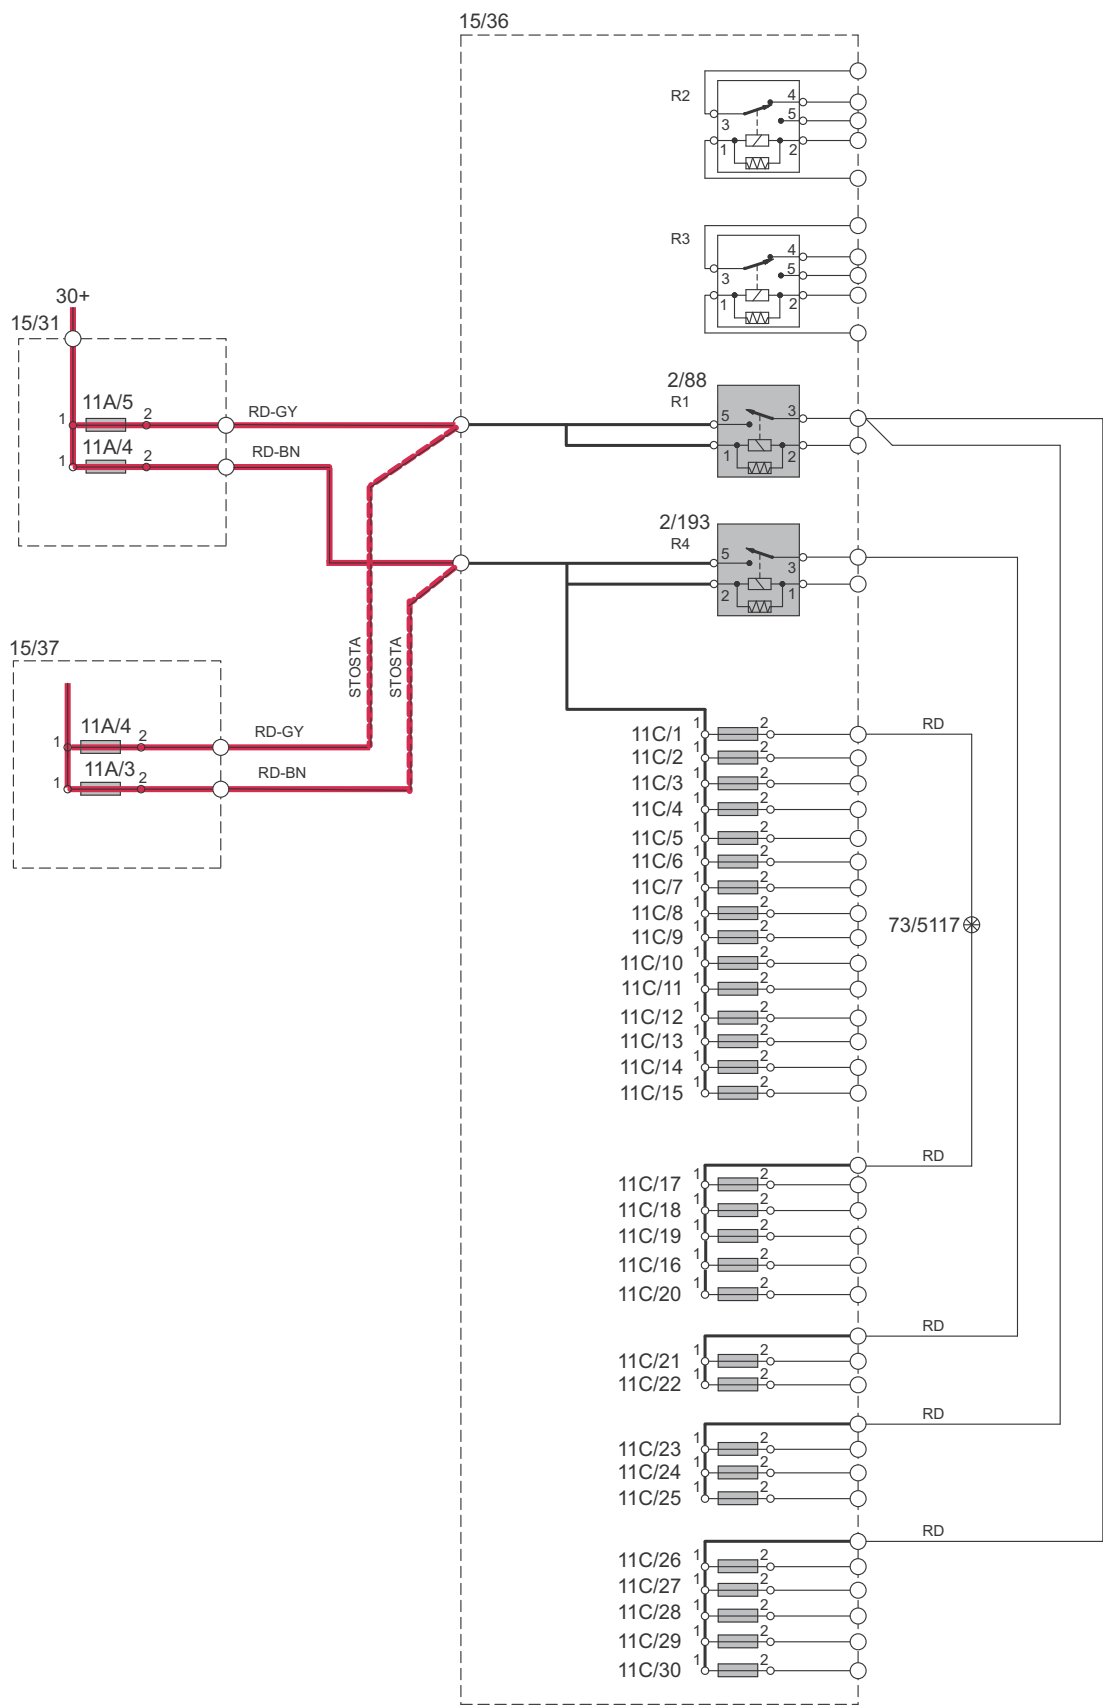

1012227


Electrical distribution 3:3
Overview, Distribution box in cargo compartment

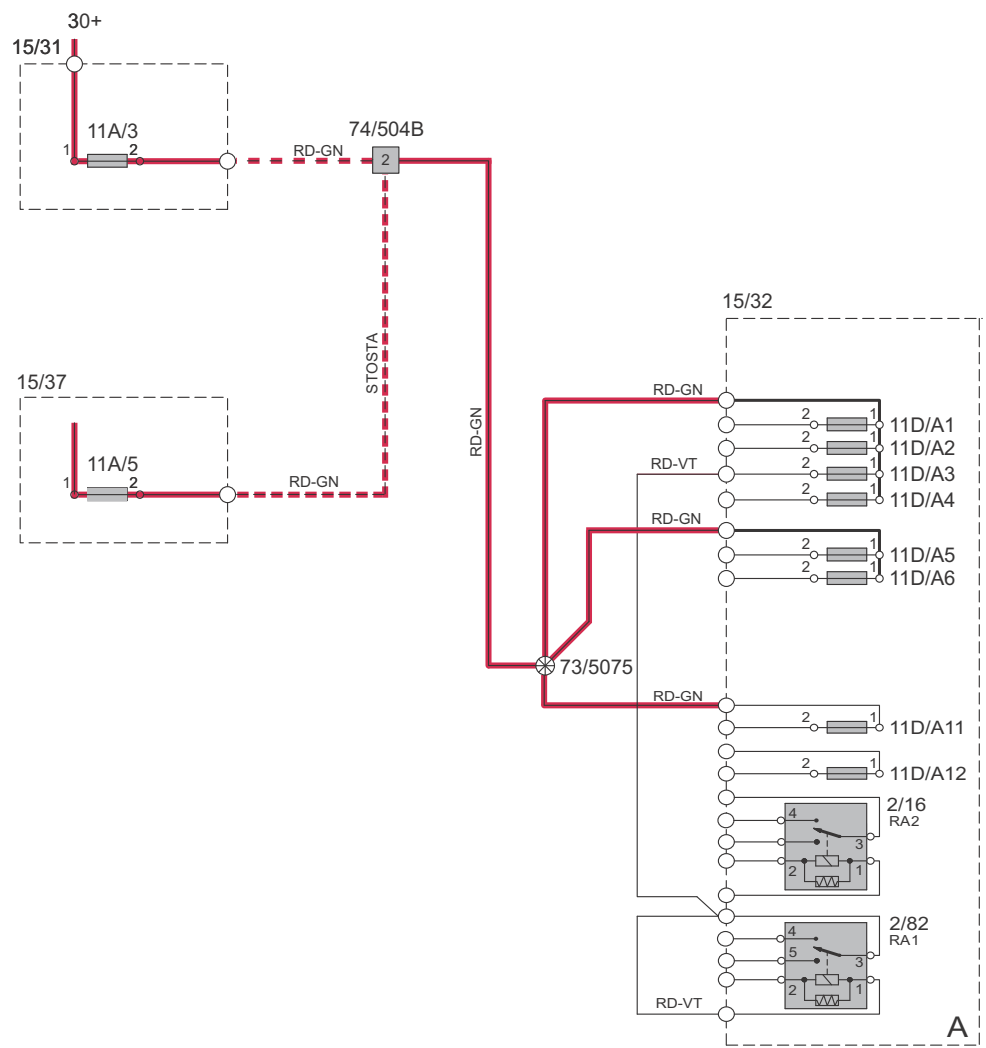

N00006

Fuses

Distribution box in engine compartment F1 - F7

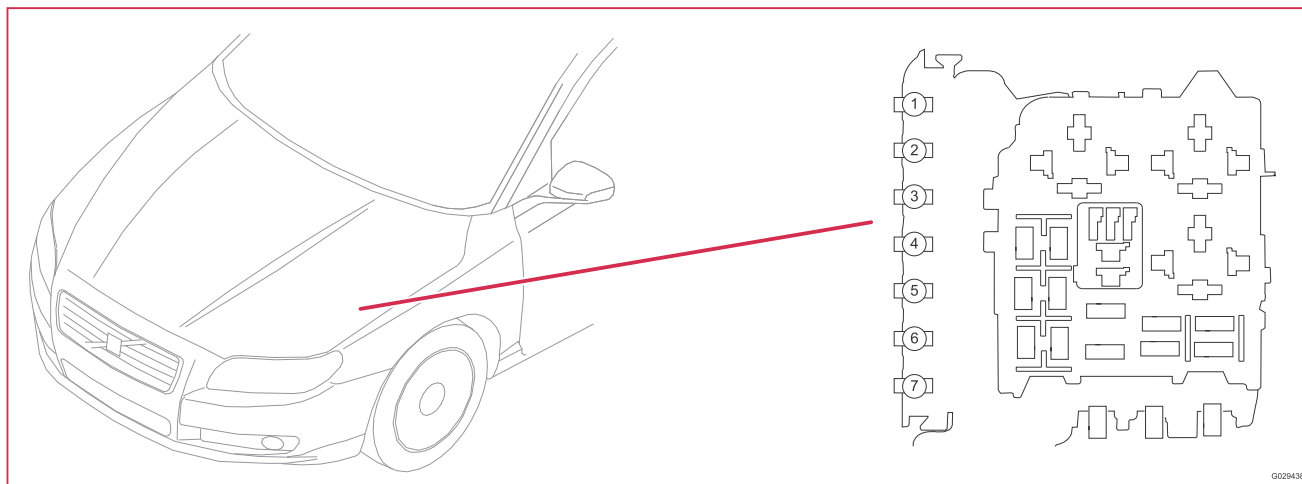


15/31 Distribution box in engine compartment

No.	No.	Fuse function	via	A
F1	11A/1	4/56 Central Electronic Module (CEM) F7 Fuse in the Central Electronic Module (CEM) F9-F10 Fuses in the Central Electronic Module (CEM) F21 Fuse in the Central Electronic Module (CEM) F23 Fuse in the Central Electronic Module (CEM)	- - relay in CEM - -	50
F2	11A/2	4/56 Central Electronic Module (CEM) F1 Fuse in the Central Electronic Module (CEM) F3-F6 Fuses in the Central Electronic Module (CEM) F8 Fuse in the Central Electronic Module (CEM) F11-F12 Fuse in the Central Electronic Module (CEM) F13-F16 Fuses in the Central Electronic Module (CEM) F22 Fuse in the Central Electronic Module (CEM) F24 Fuses in the Central Electronic Module (CEM)	- relay in CEM relay in CEM relay in CEM relay in CEM - - -	50
F3	11A/3	11D/A1-11D/A6 Fuses in distribution box cargo compartment 11D/A11-11D/A12 Fuses in distribution box cargo compartment	- -	60
F4	11A/4	2/193 Relay, comfort functions 11C/1-11C/15 Fuses in distribution box passenger compartment 11C/21-11C/22 Fuses in distribution box passenger compartment	- - 2/193	60
F5	11A/5	2/88 Relay, 15-feed 11C/23-11C/25 Fuses in distribution box passenger compartment 11C/26-11C/30 Fuses in distribution box passenger compartment	- 2/88 -	60
F7	11A/7	9/42 PTC element without start/stop	-	100
continues				

Fuses

Distribution box in engine compartment F8 - F23

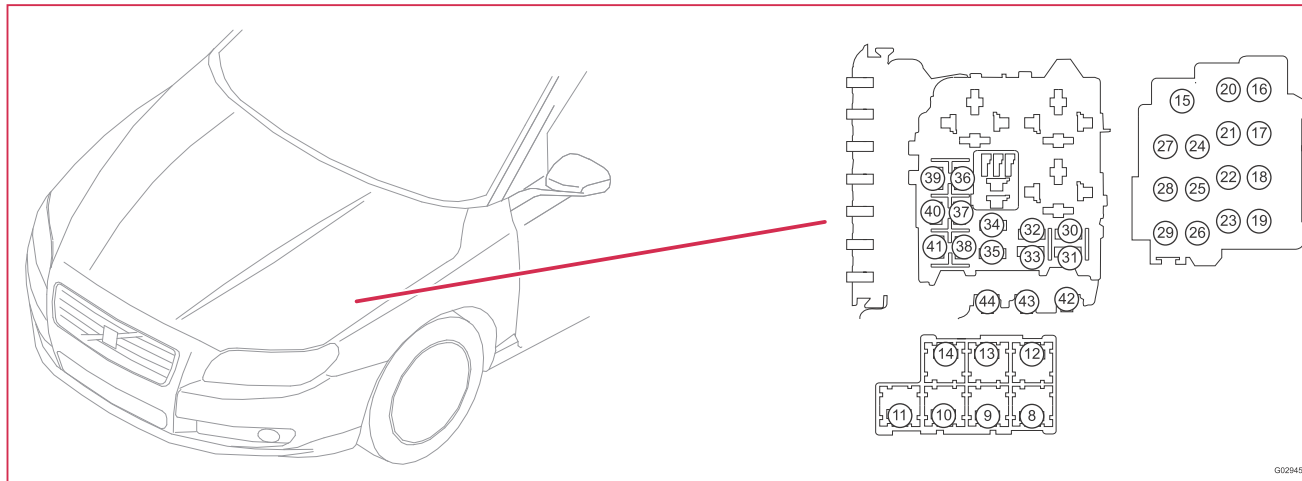


15/31 Distribution box in engine compartment

No.	No.	Fuse function	via	A
F8	11B/8	6/104 Washer motor headlights	2/182	20
F9	11B/9	6/1 Wiper motor module (WMM)	-	30
F10	11B/10	4/7 Combustion Preheater Module (CPM)	-	25
		4/106 Control module, remote parking heater start	-	
F11	11B/11	4/31 Fan control module	-	40
		6/28 Motor, passenger compartment fan	-	
F13	11B/13	4/16 Brake Control Module (BCM), pump	-	40
F14	11B/14	4/16 Brake Control Module (BCM), valves	-	20
F16	11B/16	6/38 Left-hand headlight level adjustment motor	-	10
		6/39 Right-hand headlight level adjustment motor	-	
		10/1 Left-hand front lamp housing	-	
		10/2 Right-hand front lamp housing	-	
F17	11B/17	4/56 Central Electronic Module (CEM)	-	20
		F17-F20 Fuses in the Central Electronic Module (CEM)		
F18	11B/18	4/16 Brake Control Module (BCM)	-	5
F19	11B/19	4/99 Electronic power steering control module	-	5
		6/164 Electrical power steering module (EHPS)	-	
F20	11B/20	4/9 Supplemental Restraint System (SRS)	-	10
		4/28 Transmission Control Module (TCM)	-	
		4/46 Engine Control Module (ECM)	-	
F21	11B/21	9/43 Heated windshield washer nozzle, left	-	10
		9/44 Heated windshield washer nozzle, right	-	
F23	11B/23	3/111 Light Switch Module (LSM)	-	5
continues				

Fuses

Distribution box in engine compartment F27 - F36

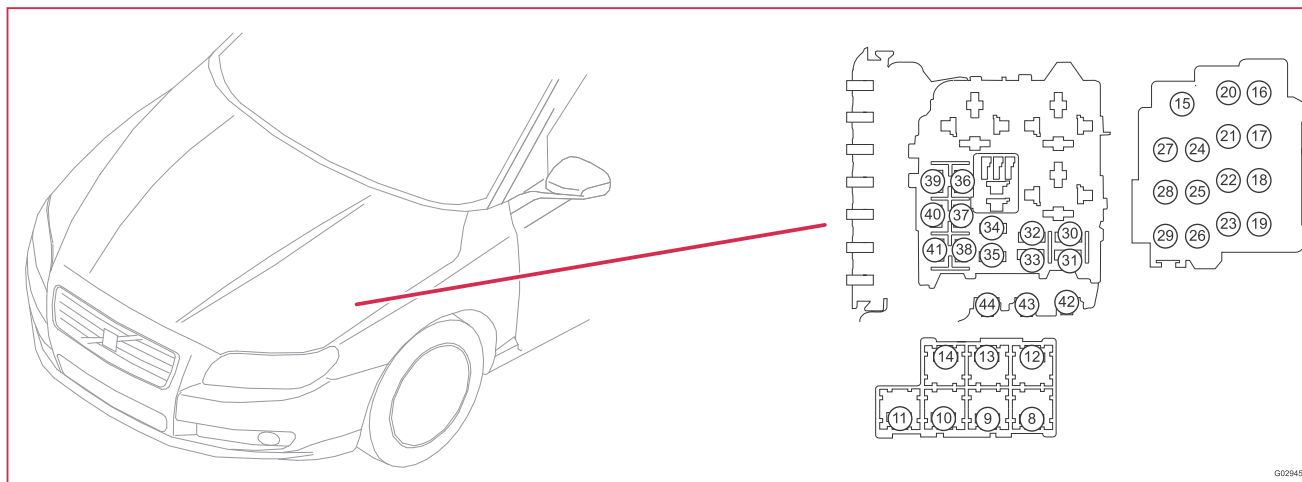


15/31 Distribution box in engine compartment

No.	No.	Fuse function		via	A
F27	11B/27	2/17	Relay, horn	-	5
		2/31	Relay, 15-feed	-	
		2/182	Relay, headlight washer motor	-	
F28	11B/28	2/64	Relay auxiliary lights	-	20
		10/65	Auxiliary light, front right	2/64	
		10/69	Auxiliary light, front left	2/64	
F29	11B/29	16/10	Horn 1	2/17	15
		16/11	Horn 2	2/17	
F30	11B/30	2/32	Main relay, engine management system	-	10
		4/46	Engine Control Module (ECM)	2/32	
F31	11B/31	4/28	Transmission Control Module (TCM)	-	15
F32	11B/32	6/73	Coolant pump, Start/Stop	2/22	15
		8/3	Electromagnetic clutch, climate control system	2/22	
F33	11B/33	2/14	Relay, glow plug system	-	5
		2/22	Relay, climate control system	-	
F34	11B/34	6/25	Starter motor	2/35	30
F35	11B/35	4/109	Glow plug control module, 5-Cyl. Diesel	-	10
		20/3-6	Spark plug with ignition coil, 4-Cyl	-	
		20/3-7	Spark plug with ignition coil, 5-Cyl. Turbo	-	20
		20/3-8	Spark plug with ignition coil, 6-Cyl. Turbo	-	
		20/16	Capacitor, 6-Cyl. Turbo	-	
F36	11B/36	4/46	Engine Control Module (ECM), 4-Cyl. & 5-Cyl. Diesel	-	15
		4/46	Engine control module (ECM), 4-Cyl., 5-Cyl. & 6-Cyl. Turbo	-	10
continues					

Fuses

Distribution box in engine compartment F37 - F38

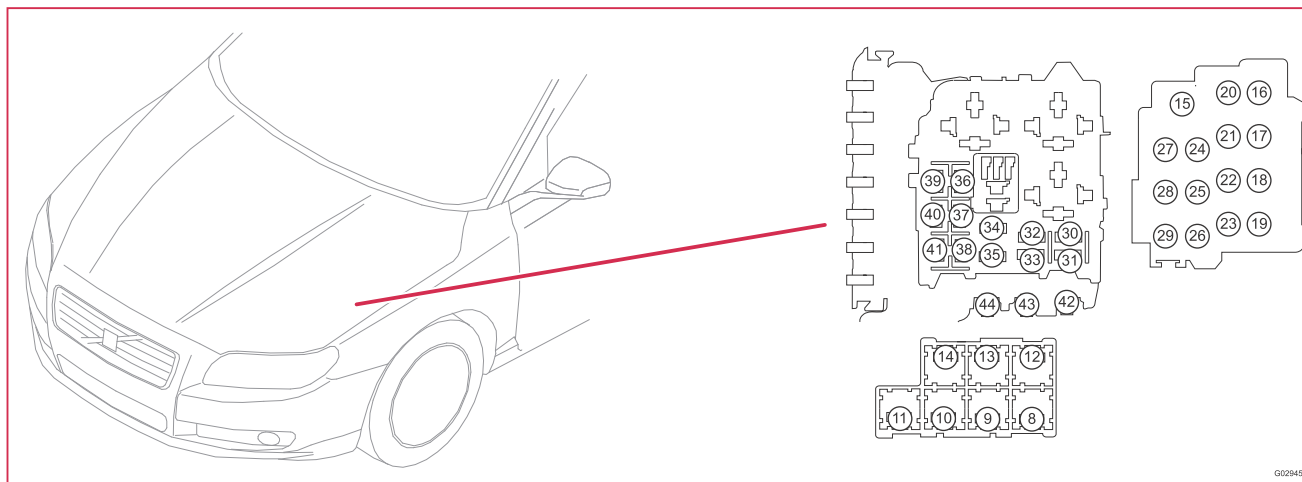


15/31 Distribution box in engine compartment

No.	No.	Fuse function		via	A
F37	11B/37	7/17	Mass air flow sensor MAF, 4-Cyl. 1.6l Turbo	-	10
		8/121	Bypass valve charge air cooler, 4-Cyl. 1.6l Turbo	-	
		8/167	Bypass Solenoid, 4-Cyl. 1.6l Turbo	-	
		7/17	Mass air flow sensor MAF, 4-Cyl. 1.6l Diesel	-	15
		8/111	Control valve fuel flow, 4-Cyl. 1.6l Diesel	-	
		8/6-10	Injection valves, 5-Cyl. Turbo	-	
		7/17	Mass air flow sensor MAF, 5-Cyl. Diesel	-	
		8/98	Control valve fuel pressure, 5-Cyl. Diesel	-	
		8/111	Control valve fuel flow, 5-Cyl. Diesel	-	
		4/46	Engine Control Module (ECM), 6-Cyl. Turbo	-	
7/17	Mass air flow sensor MAF, 6-Cyl. Turbo	-			
8/6-11	Injection valves, 6-Cyl. Turbo	-			
F38	11B/38	7/17	Mass air flow sensor MAF, 4-Cyl. Turbo	-	10
		8/18	EVAP valve, 4-Cyl. Turbo	-	
		8/19	Solenoid, variable valve timing, intake, 4-Cyl. Turbo	-	
		8/28	Turbocharger control valve, 4-Cyl. Turbo	-	
		8/81	Solenoid, variable valve timing, exhaust, 4-Cyl. Turbo	-	
		8/159	Bypass valve, 4-Cyl. Turbo	-	
		2/14	Relay, glow plug system, 4-Cyl. Diesel, Start/Stop	-	2/14
		6/73	Coolant pump, 4-Cyl. Diesel, Start/Stop	-	
		8/111	Control valve fuel flow, 4-Cyl. Diesel	-	
		8/113	Bypass valve, EGR cooling, 4-Cyl. Diesel	-	
		7/17	Mass air flow sensor MAF, 5-Cyl. Turbo	-	
		7/35	Oil level sensor, 5-Cyl. Turbo	-	
		8/28	Turbocharger control valve, 5-Cyl. Turbo	-	
		8/81	Solenoid, variable valve timing, exhaust, 5-Cyl. Turbo	-	
		8/117	Solenoid, variable valve timing, intake, 5-Cyl. Turbo	-	
		7/35	Oil level sensor, 5-Cyl. Diesel	-	
		8/3	Electromagnetic clutch, climate control system, 5-Cyl. Diesel	-	
		8/113	Bypass valve, EGR cooling, 5-Cyl. Diesel	-	
		8/164	Electric piston cooling valve, 5-Cyl. Diesel	-	
		4/46	Engine Control Module (ECM), 6-Cyl. Turbo	-	
		8/3	Electromagnetic clutch climate control system, 6-Cyl. Turbo	-	
		8/28	Turbocharger control valve, 6-Cyl. Turbo	-	
		8/68	Relief valve, 6-Cyl. Turbo	-	
		8/117	Solenoid, variable valve timing, intake, 6-Cyl. Turbo	-	
		8/125	Solenoid front cam profile, 6-Cyl W/O Turbo	-	
		8/126	Solenoid rear cam profile, 6-Cyl W/O Turbo	-	
continues					

Fuses

Distribution box in engine compartment F39 - F44

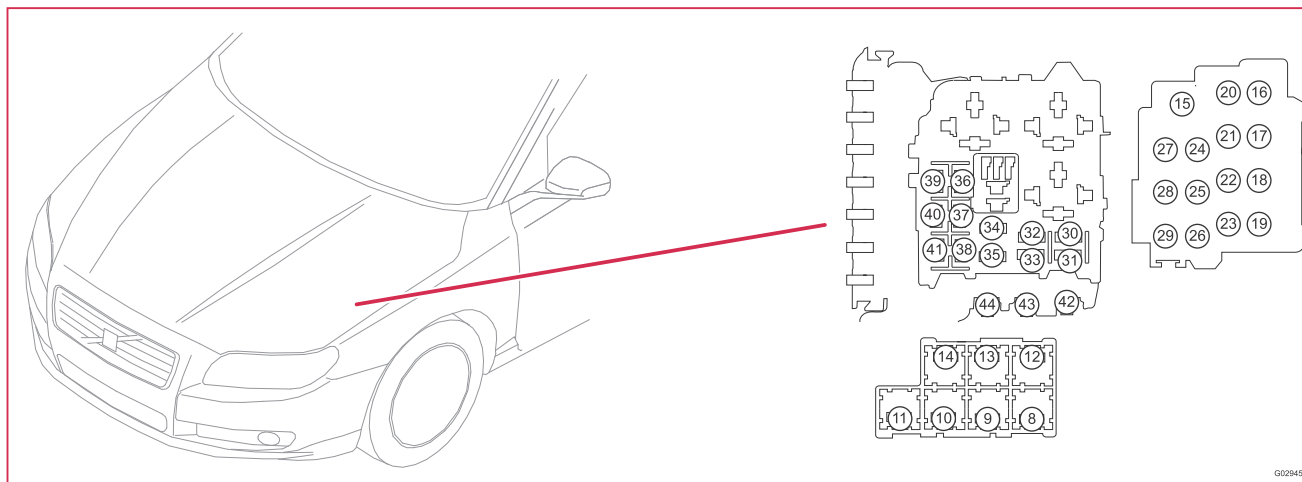


15/31 Distribution box in engine compartment

No.	No.	Fuse function	via	A
F39	11B/39	7/15 Front heated oxygen sensor, 4-Cyl. Turbo	-	10
		7/82 Rear heated oxygen sensor bank 1, 4-Cyl. Turbo	-	
		7/15 Front heated oxygen sensor, 4-Cyl. Diesel	-	
		4/136 Radiator masking blind	-	
		7/15 Front heated oxygen sensor, 5-Cyl. Diesel	-	15
		7/15 Front heated oxygen sensor, bank 1, 5-Cyl. Turbo	-	
		7/215 Rear heated oxygen sensor, 5-Cyl. Turbo	-	
		8/18 EVAP valve, 5-Cyl. Turbo	-	
		7/103 Front heated oxygen sensor, bank 2, 6-Cyl.	-	
		7/104 Front oxygen sensor, bank 2, 6-Cyl.	-	
F40	11B/40	7/15 Front heated oxygen sensor bank 1, 6-Cyl. Turbo	-	10
		7/82 Rear heated oxygen sensor bank 1, 6-Cyl. Turbo	-	
		8/18 EVAP valve, 6-Cyl. Turbo	-	
		6/73 Coolant pump, 4-Cyl. Turbo, Start/Stop	2/14	
		6/73 Coolant pump, 5-Cyl. Turbo, Start/Stop	2/14	20
F41	11B/41	6/179 Electric oil pump, 5-Cyl. & 6-Cyl.	-	
		9/32 PTC resistor crankcase ventilation, 5-Cyl. Turbo	-	
		9/38 Electrically heated fuel filter, 4-Cyl. Diesel	-	5
F42	11A/42	6/67 Pump, fuel leakage control 6-Cyl.	-	
		9/32 PTC resistor crankcase ventilation, 5-Cyl. Diesel	-	
		6/179 Electric transmission oil pump, Diesel	-	70
F43	11A/43	4/109 Glow plug control module	-	
		20/22-26 Glow plug, 5-Cyl. Diesel	4/109	80
F44	11A/44	4/71 Control module cooling fan 4-Cyl. Turbo	-	
		4/71 Cooling fan control module, 5-Cyl. Diesel & 6-Cyl.	-	100
F44	11A/44	6/164 Electrical power steering module (EPS)	-	

Fuses

Central Electronic Module (CEM) F1 - F8

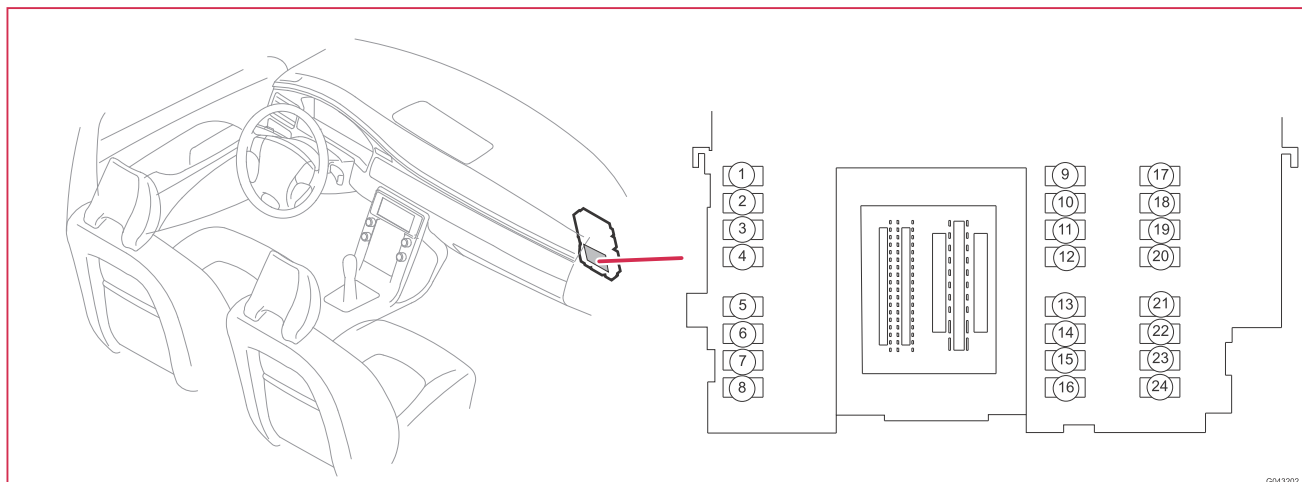


G043202

4/56 Central Electronic Module (CEM)

No.	Fuse function	via	A
F1	2/16 Relay, rear window wiper 6/32 Rear window wiper motor	- 2/16	15
F3	3/26 Switch unit, power driver's seat 3/27 Switch unit, power passenger seat 3/176 Power window switches, driver's door 4/52 Power Seat Module (PSM) 10/25 Ceiling light, cargo compartment 10/29 Glove compartment lighting 10/125 Left-hand front courtesy lighting 10/126 Right-hand front courtesy lighting 10/127 Lighting, cargo compartment, left-hand side, S60 17/45 Alcohol lock outlet 26/6 Converter/control module, sill moldings, driver's side 26/7 Converter/control module, sill moldings, passenger side 26/8 Alcohol lock charging cradle	- - - - - - - - - - - - -	7,5
F4	5/1 Driver Information Module (DIM)	-	5
F5	4/80 Forward Sensing Module (FSM) 7/203 Forward-aimed radar (FLR)	- -	10
F6	4/76 Remote control opener garage door 7/149 Rain Sensor Module (RSM) 10/22 Ceiling light 10/114 Left-hand vanity mirror lighting 10/115 Right-hand vanity mirror lighting 10/150A Rear reading light	- - - - - -	7,5
F7	3/4 Steering wheel switch left (SWSL) 3/131 Steering wheel switch right (SWSR)	3/130 3/130	7,5
F8	6/37 Lock motor, fuel filler cover	relay in CEM	10
continues			

Fuses

Central Electronic Module (CEM) F9 - F19

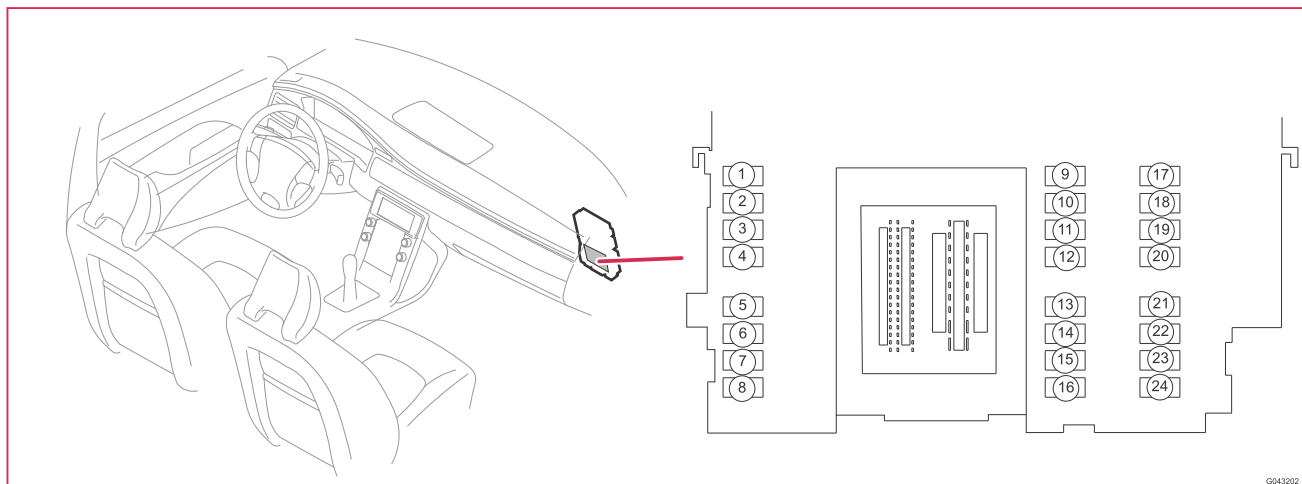


G043202

4/56 Central Electronic Module (CEM)

No.	Fuse function		via	A
F9	6/127	Washer motor	-	15
F10	6/127	Washer motor	-	15
F11	6/8	Central locking motor, trunk lid	-	10
F12	6/141	Motor folding head restraint left	-	10
	6/142	Motor folding head restraint right	-	
	8/59	Rear left head restraint solenoid	-	
	8/60	Rear right head restraint solenoid	-	
F13	4/83	Fuel pump control module	relay in CEM 4/83	20
	6/33	Fuel pump		
F14	4/6	Climate Control Module (CCM)	-	5
	4/119	Remote Keyless Entry (TRX)	-	
	4/119.2	Signal receiver (LRX)	-	
F15	4/102	Steering column lock module (SCL)	relay in CEM	15
F16	16/35	Siren Control Module (SCM)	-	5
	17/13	Data link connector	-	
F18	4/9	Supplemental Restraint System (SRS)	-	10
	7/93	Occupant Weight Sensor (OWS)	-	
F19	4/80	Forward Sensing Module (FSM)	-	5
	4/125	Closing velocity module (CVM)	-	
	7/203	Forward-aimed radar (FLR)	-	
continues				

Fuses

Central Electronic Module (CEM) F20 - F24

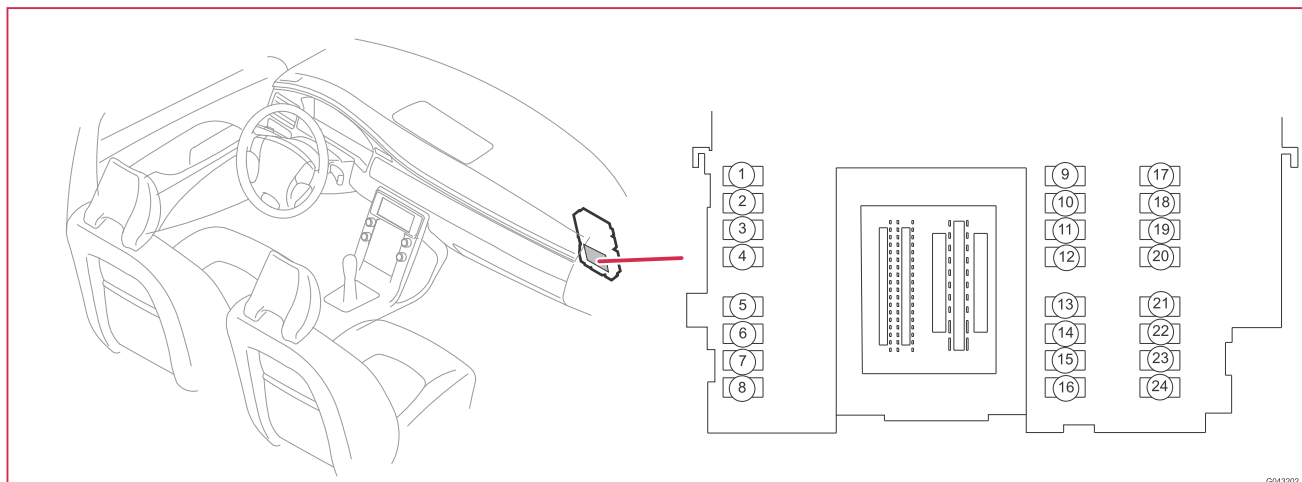


4/56 Central Electronic Module (CEM)

No.	Fuse function		via	A
F20	3/65	Switch, heated rear seat	-	7,5
	7/51	Accelerator pedal sensor	-	
	8/48	Auto-dimming rearview mirror	-	
	9/42	PTC-element	-	
F22	3/9	Brake light contact	-	5
F23	4/33	Sunroof Module (SRM)	-	20
F24	3/1	Ignition switch	-	5
	16/65	Immobilizer antenna unit (IAU)	-	

Fuses

Distribution box in passenger compartment F1 - F17

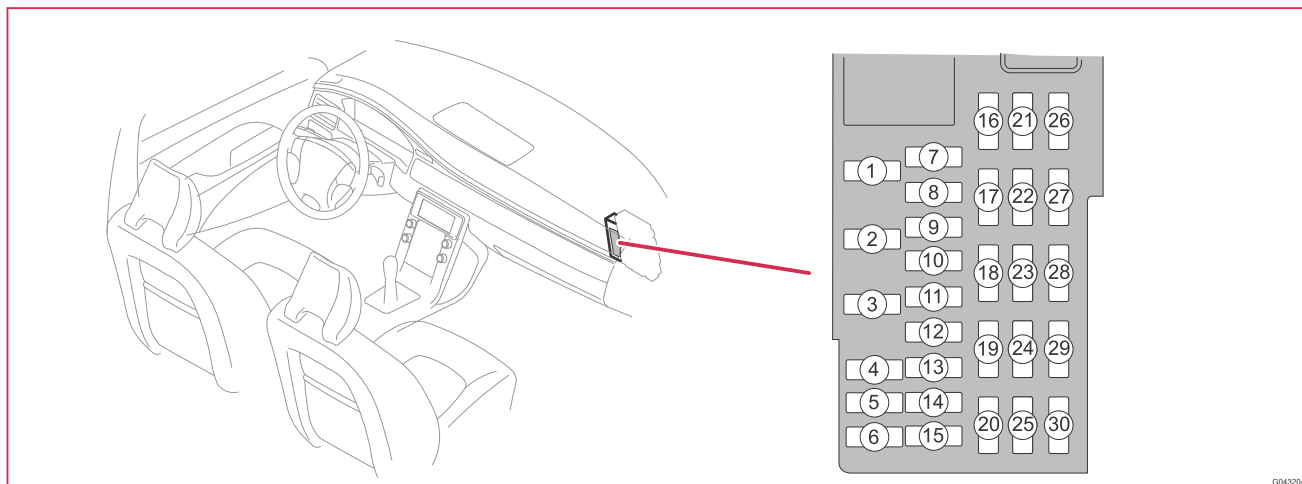


G043204

15/36 Distribution box in passenger compartment

No.	No.	Fuse function	via	A
F1	11C/1	16/105 Audio module (AUD) 11C/17-11C/20 Distribution box in passenger compartment	- -	40
F2	11C/2	Spare	-	-
F3	11C/3	Spare	-	-
F4	11C/4	Spare	-	-
F6	11C/6	3/273 Lock contact, LH front door 3/274 Lock contact, RH front door 3/275 Lock contact, left rear door 3/276 Lock contact, RH rear door	- - - -	5
F8	11C/8	3/126 Driver door module (DDM)	-	20
F9	11C/9	3/127 Passenger door module (PDM)	-	20
F10	11C/10	3/129 Right rear door module (RDM)	-	20
F11	11C/11	3/128 Left rear door module (LDM)	-	20
F12	11C/12	4/93 Keyless vehicle module (KVM)	-	7,5
F13	11C/13	3/26 Switch unit, power driver's seat 4/52 Power Seat Module (PSM)	- -	20
F14	11C/14	3/27 Switch unit, power passenger seat	-	20
F16	11C/16	3/281 Infotainment control module (ICM)	-	5
F15	11C/15	Spare	-	-
F17	11C/17	16/36 Television module (TVM) 16/105 Audio module (AUD) 16/145 Remote Digital Audio Receiver (RDAR) 16/162 Digital Audio Broadcast Module (DABM)	- - - -	10
continues				

Fuses

Distribution box in passenger compartment F18 - F30

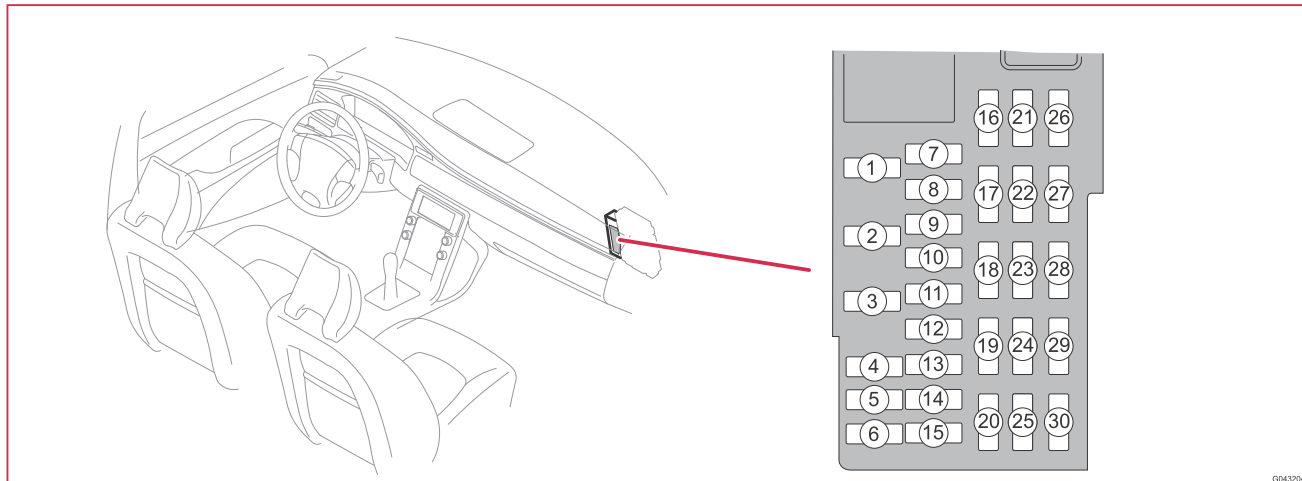


G043204

15/36 Distribution box in passenger compartment

No.	No.	Fuse function	via	A
F18	11C/18	16/1 Integrated Audio Module (IAM) 16/159 Control module, cellular phone handsfree (accessory)	- -	15
F19	11C/19	16/60 Phone Module (PHM)	-	5
F20	11C/20	-	-	7,5
F21	11C/21	4/33 Panoramic roof control module 6/48 Damper Motor Module (DMM), recirculation 6/95 Damper Motor Module (DMM), temperature, left side 6/96 Damper Motor Module (DMM), temperature, right side 6/102 Damper Motor Module (DMM), defroster 6/103 Damper Motor Module (DMM), floor/ventilation 7/159 Air Quality Sensor (AQS) 10/22 Ceiling light 16/159 Control module, mobile phone handsfree	- - - - - - - 4/56 -	5
F22	11C/22	9/1 Outlet 12V front 9/25 Outlet 12V rear	- -	15
F23	11C/23	9/15 Control module, rear right seat heater	-	15
F24	11C/24	9/14 Control module, rear left seat heater	-	15
F26	11C/26	9/13 Seat Heating Module (SHM), passenger side	-	15
F27	11C/27	9/12 Seat Heating Module (SHM), driver's side	-	15
F28	11C/28	4/86 Parking Assistance Module (PAM) 4/110 Trailer Module (TRM) 4/120 Parking Assistance Camera (PAC) 6/62 Left-hand power door mirror 6/63 Right-hand power door mirror	- - - - -	5
F29	11C/29	4/82 Differential Electronic Module (DEM)	-	15
F30	11C/30	4/84 Suspension Module (SUM)	-	10

Fuses

Distribution box in engine compartment, cold zone

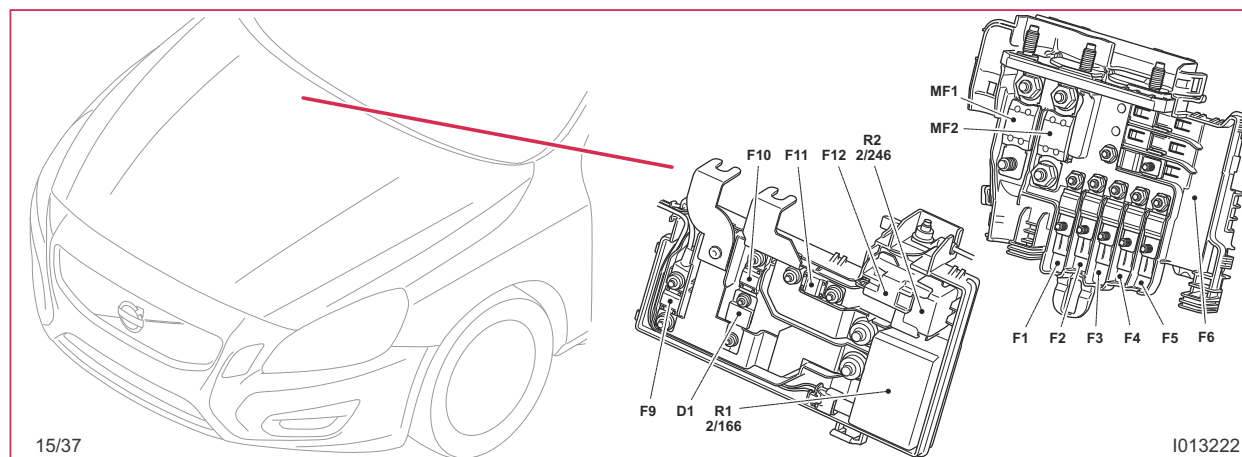


15/37 Distribution box in cold zone engine compartment, Start/Stop function

No.	No.	Fuse function	via	A
F1	11A/1	9/42 PTC-element	-	100
F2	11A/2	4/56C5:1 Central Electronic Module (CEM)	-	50
F3	11A/3	2/88 Relay, 15-feed rear 11C/23-11C/30 Fuses in distribution box passenger compartment	- 2/88	60
F4	11A/4	2/193 Relay, comfort functions 11C/1-11C/15 Fuses in distribution box passenger compartment 11C/17-11C/20 Fuses in distribution box passenger compartment	- 2/193 2/193	60
F5	11A/5	15/32 Distribution box in cargo compartment	-	60
F6	11A/6	4/31 Fan control module 6/28 Motor, passenger compartment fan	- -	40
F7	11A/7	Spare	-	-
F8	11A/8	Spare	-	-
F9	11A/9	6/25 Starter motor	2/35	30
F10	11A/10	Diode D1	-	50
F11	M11	Secondary battery	2/246	70
F12	11B/12	4/56 Central Electronic Module (CEM)	-	5
MF1	MF1	11A/1-11A/8 Main fuses in engine compartment fuse box (15/31)	-	175
MF2	MF2	11A/1-11A/8 Fuses in fuse box cold zone engine compartment (15/37)	-	175

Fuses

Distribution box in cargo compartment FA1 - FA11

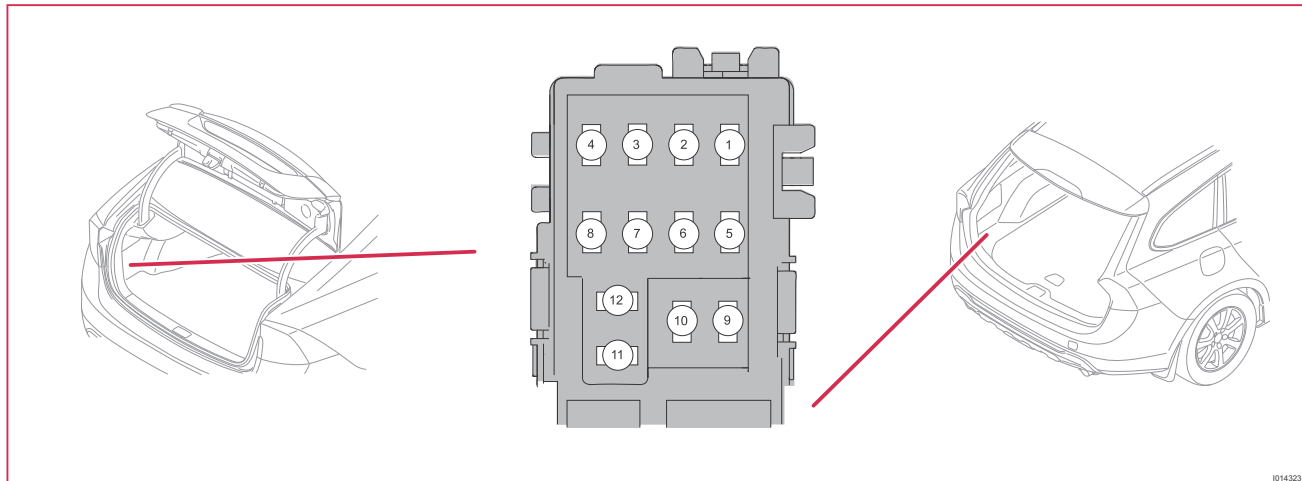


15/32 Distribution box in cargo compartment

No.	No.	Fuse function	via	A
FA1	11D/A1	4/115 Park Brake Module (PBM)	-	30
FA2	11D/A2	4/115 Park Brake Module (PBM)	-	30
FA3	11D/A3	2/82 Relay, heated rear window 9/2 Heated rear window	- 2/82	30
FA4	11D/A4	17/39 13-pin outlet, cable harness towbar/tow hitch	-	15
FA5	-	-	-	-
FA6	11D/A6	17/19 12 V outlet, cargo compartment	-	15
FA11	11D/A11	4/110 Trailer Module (TRM)	-	40

Fuses

Battery PF1 - PF2

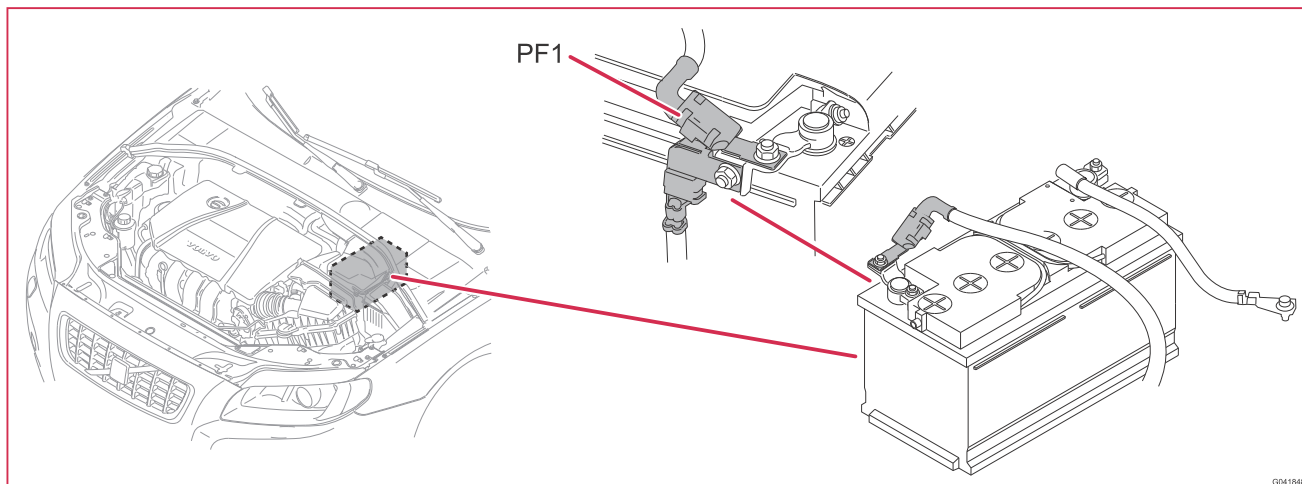


1/1 Battery

No.	Fuse function		via	A
PF1	11A/1-11A/7	Main fuses in distribution box engine compartment	-	150
	11A/42-11A/44	Main fuses in distribution box engine compartment	-	
	11B/8-11B/14	Fuses in the engine compartment distribution box	-	
	11B/16-11B/22	Fuses in the engine compartment distribution box	2/31	
	11B/23	Fuses in the engine compartment distribution box	-	
	11B/27-11B/32	Fuses in the engine compartment distribution box	-	
	11B/33	Fuses in the engine compartment distribution box	2/32	
	11B/34	Fuses in the engine compartment distribution box	-	
	11B/35-11B/41	Fuses in the engine compartment distribution box	2/32	
	15/37	Distribution box cold zone in engine compartment	-	
PF2	6/25	Starter motor	-	150
	6/26	Alternator Control Module (ACM)	-	


Relays

Relays in the engine compartment

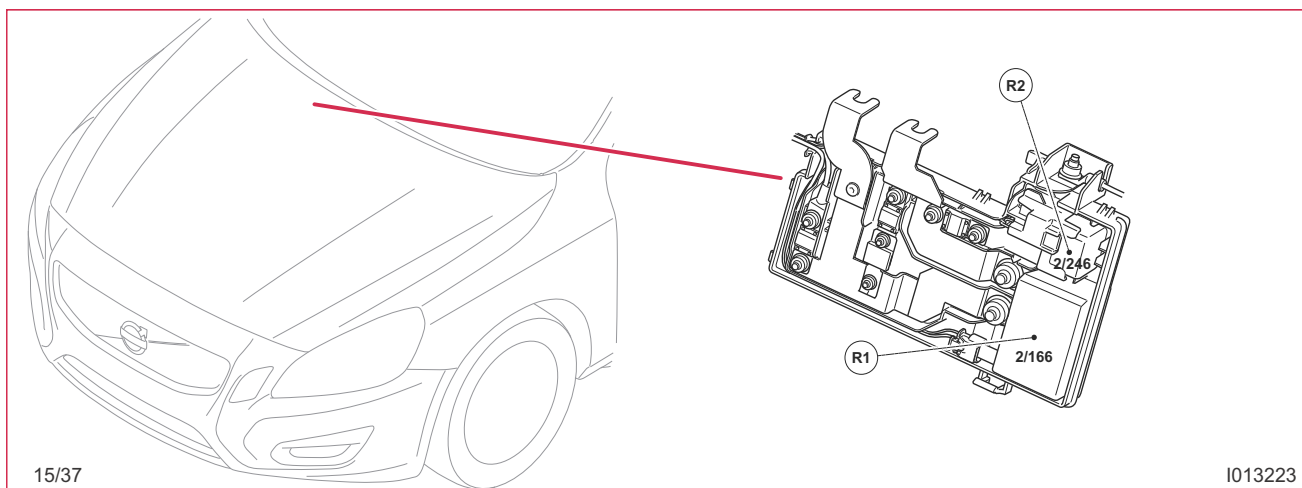

15/37 Distribution box in cold zone engine compartment

Pos	Relay function	
R1	2/166	Battery relay
R2	2/246	Secondary battery relay

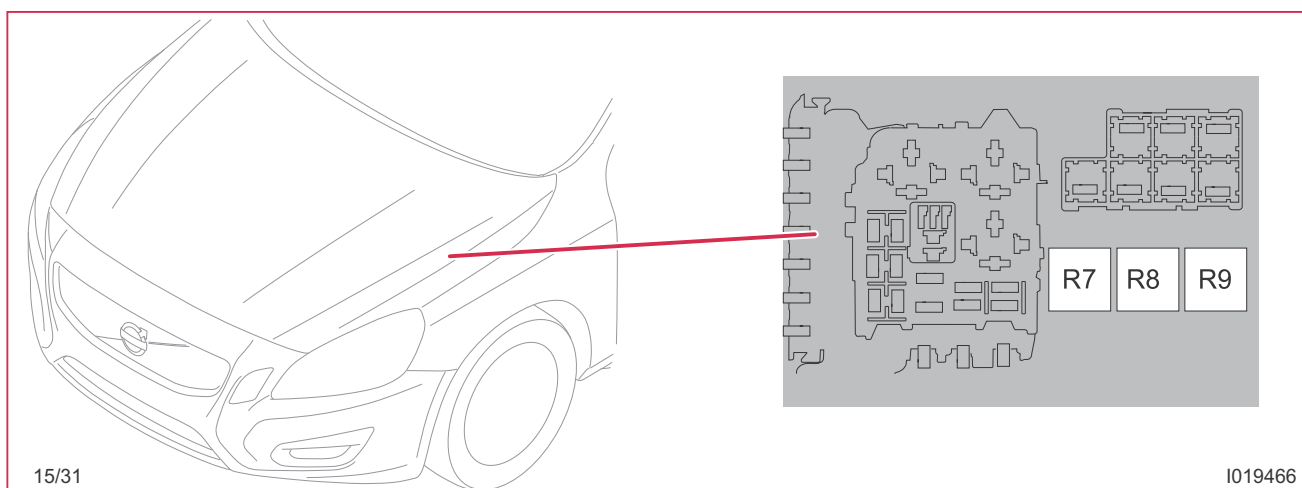


15/31 Distribution box in engine compartment

Pos	Relay function	
R7	2/31	Relay, 15-feed
R8	2/17	Relay, horn
R9	2/182	Relay, headlight washer motor


Relays

Relays in the engine compartment and passenger compartment

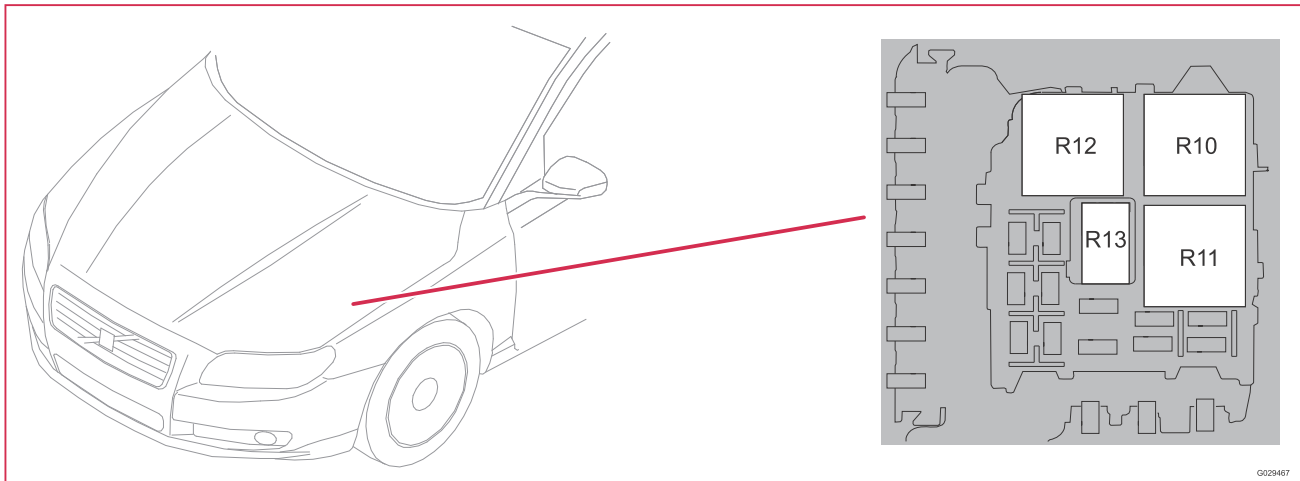

15/31 Distribution box in engine compartment

Pos	Relay function	
R10	2/32	Main relay, engine management system
R11	2/14	Relay, glow plug system
R12	2/35	Starter motor relay
R13	2/22	Relay, climate control system

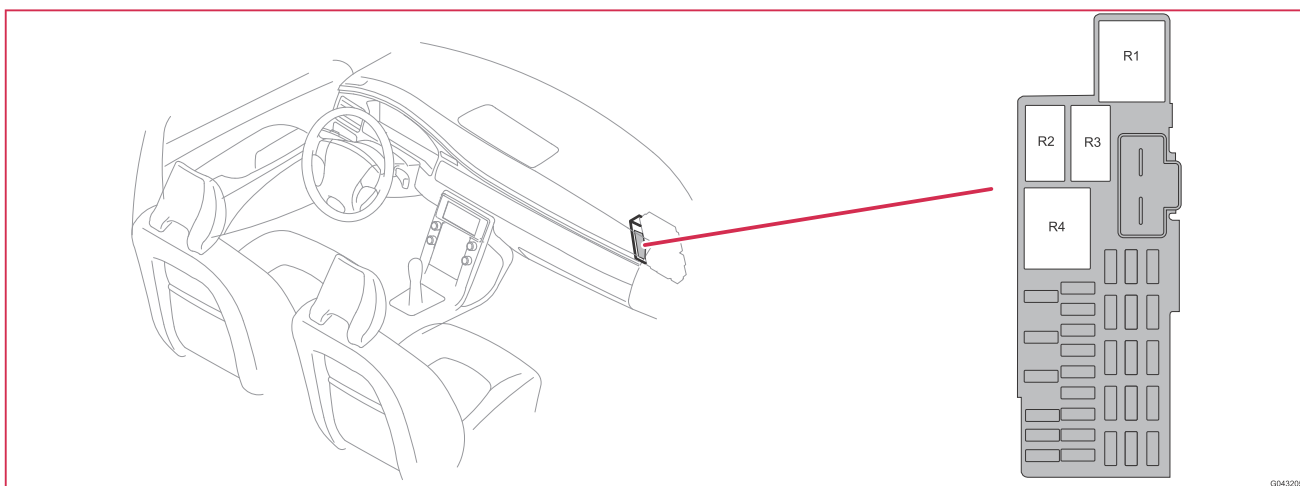


15/36 Distribution box in passenger compartment

Pos	Relay function	
R1	2/88	Relay, 15-feed
R4	2/193	Relay, comfort functions

Relays


Relays in cargo compartment

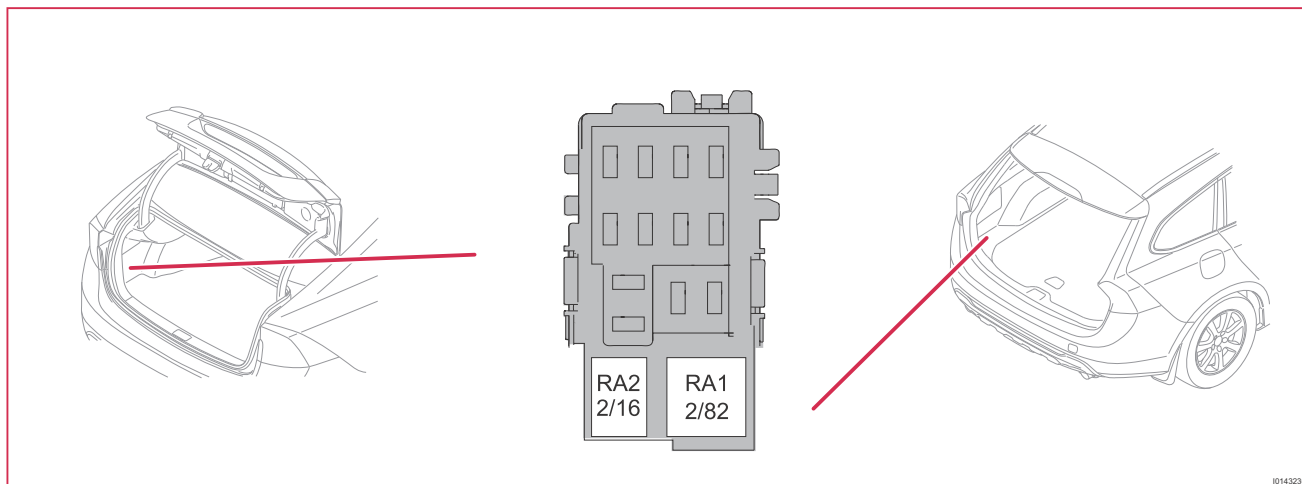

15/32 Distribution box in cargo compartment

Pos	Relay function	
RA1	2/82	Relay, heated rear window
RA2	2/16	Relay, rear window wiper

Ground connections Overview

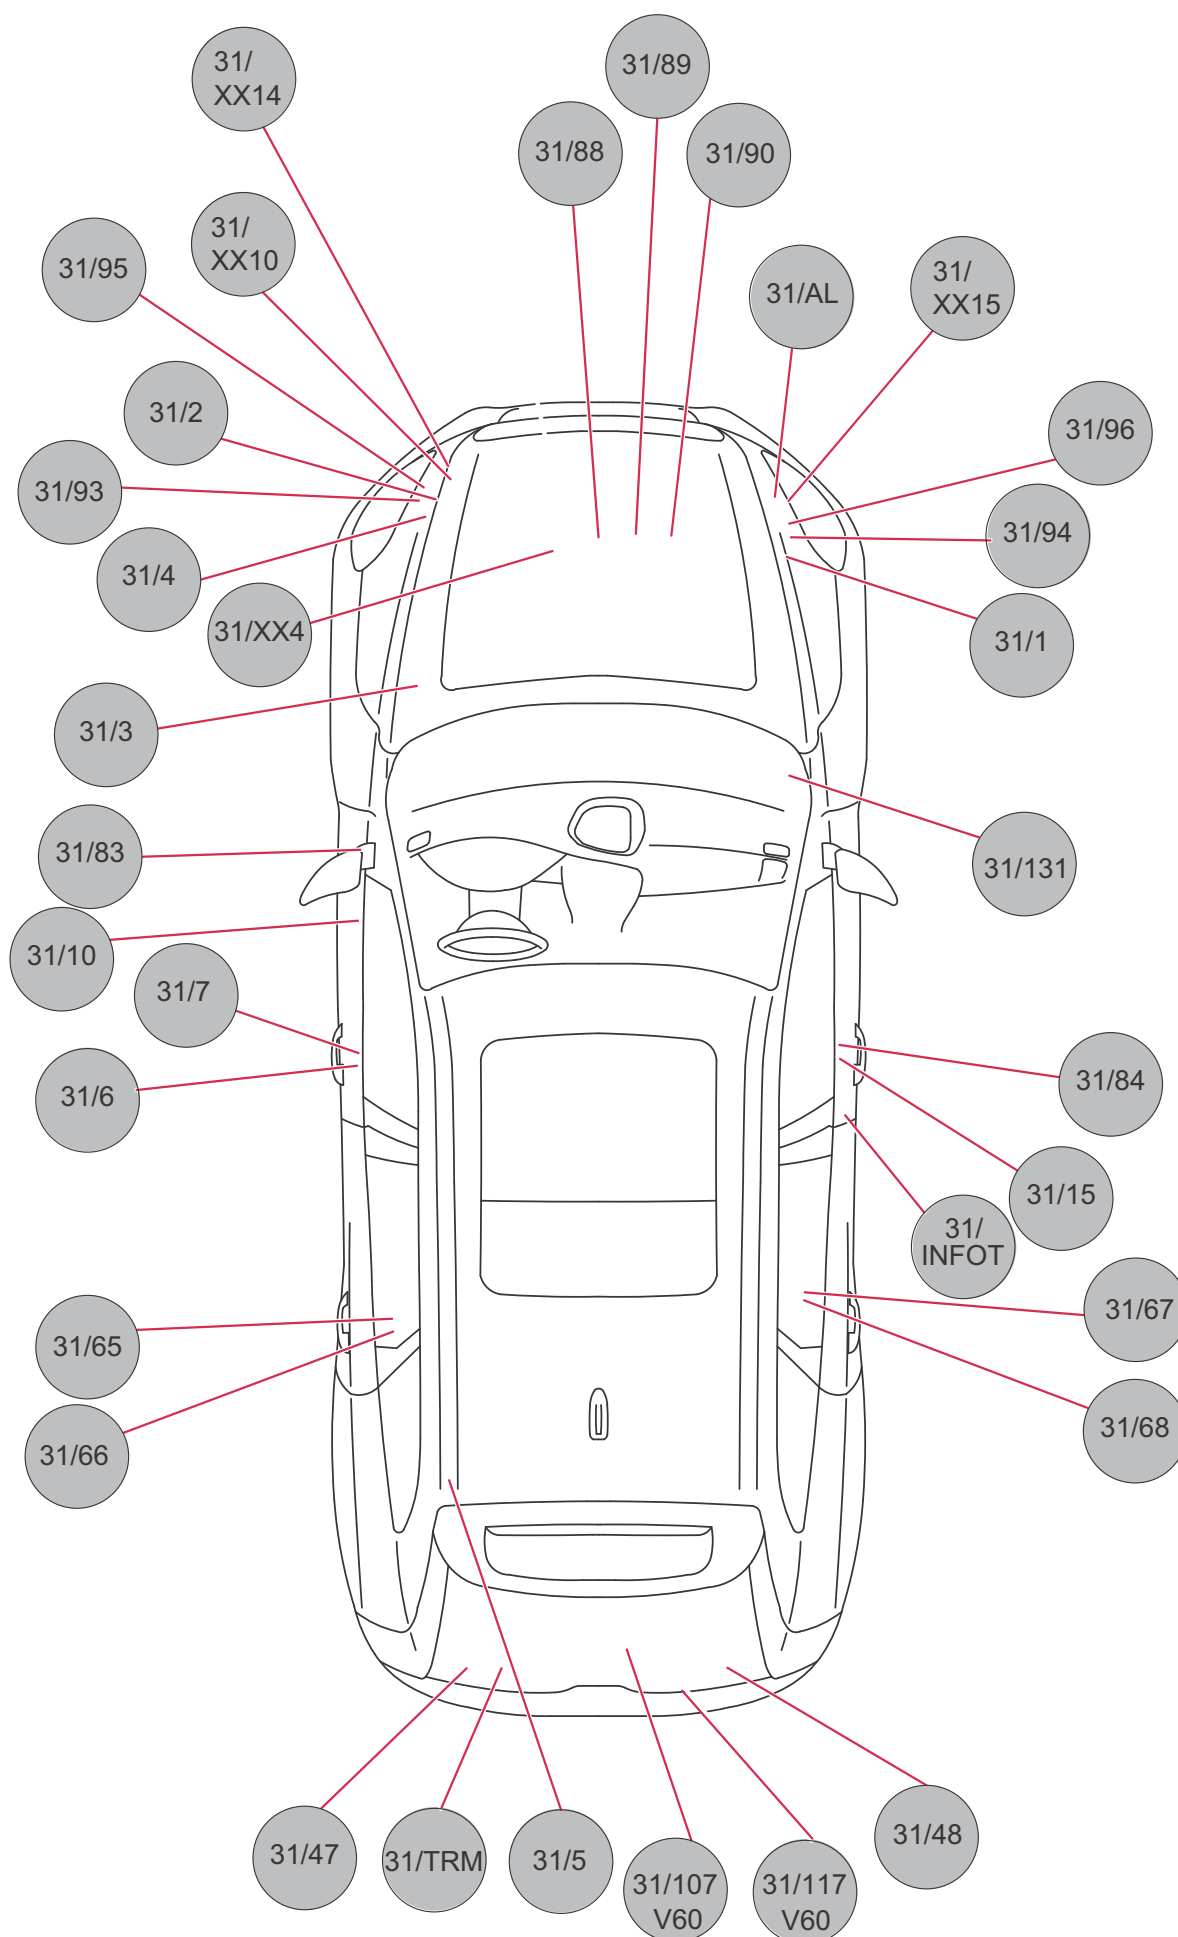

Ground connections

31/1 - 31/7

31/1	Ground connection, PTC
9/42	PTC-element

31/2	LH wheel housing
4/71	Cooling fan control module

31/3	Body, battery
1/1	Battery
7/240	Battery monitoring sensor

31/4	Engine
31/XX4	Ground connection

31/5	Rear edge roof
9/2	Heated rear window, V60

31/6	Bottom rail, left
3/27	Switch unit, power passenger seat, RHD
3/126	Driver Door Module (DDM), LHD
3/127	Passenger Door Module (PDM), RHD
3/128	Left rear door module (LDM)
3/176	Switch, driver's door power window, LHD
4/52	Power Seat Module (PSM), LHD
9/12	Seat Heating Module (SHM), driver's side, LHD
9/13	Seat Heating Module (SHM), passenger side, RHD

31/7	Bottom rail, left
3/271	Contact, immobilizer, clutch pedal, LHD
3/281	Infotainment Control Module (ICM), RHD
3/284	Diagnostic contact, brake light, LHD
4/56	Central Electronic Module (CEM), RHD
4/120	Parking Assistance Camera (PAC), RHD
7/51	Accelerator pedal sensor, LHD
7/93	Occupant Weight Sensor (OWS)
7/175	Weight sensor passenger seat, seat belt reminder, RHD
8/51	Igniter side airbag front left, LHD
8/52	Igniter side airbag front right, RHD
16/1	Integrated Audio Module (IAM), RHD
16/36	Television module (TVM)
16/145	Remote Digital Audio Receiver (RDAR), RHD
16/159	Control module, cellular phone handsfree, RHD
16/162	Digital Audio Broadcast Module (DABM), RHD

Ground connections

31/10 - 31/15 continues

31/10	Bottom rail, left
3/6	Hazard warning flasher switch
3/117	Switch unit, dome light
3/130	Steering Wheel Module (SWM)
3/173	Switch, trunk lid private lock
4/31	Fan control module
4/33	Sunroof control module
4/76	Remote control unit for garage door opener
4/80	Forward Sensing Module
4/102	Steering column lock module (SCL)
4/119	Remote Keyless Entry (TRX)
4/119.2	Signal receiver (LRX)
4/125	Closing velocity module (CVM)
6/48	Damper Motor Module (DMM), recirculation
6/95	Damper Motor Module (DMM), temperature, left side
6/96	Damper Motor Module (DMM), temperature, right side
6/102	Damper Motor Module (DMM), defroster
6/103	Damper Motor Module (DMM), floor/ventilation
7/149	Rain Sensor Module (RSM)
7/159	Air Quality Sensor (AQS)
7/199	Ultrasonic sensor (IMS)
8/48	Auto-dimming rearview mirror
10/22	Ceiling light
10/29	Glove compartment lighting
10/114	Left-hand vanity mirror lighting
10/115	Right-hand vanity mirror lighting
10/150A	Rear reading light
17/13	Data link connector
17/45	Alcohol lock outlet
26/8	Alcohol lock charging cradle

31/15	Bottom rail, right
3/27	Switch unit, power passenger seat, LHD
3/65	Switch, heated rear seat
3/126	Driver Door Module (DDM), RHD
3/127	Passenger Door Module (PDM), LHD
3/129	Right rear door module (RDM)
3/156	Gear Selector Module (GSM), RHD
4/52	Power Seat Module (PSM), RHD
8/134	Solenoid, reverse interlock, manual, RHD
9/1	Outlet 12V front
9/12	Seat Heating Module (SHM), driver's side, RHD
continues	

Ground connections

31/15 - 31/68

31/15	Bottom rail, right
9/13	Seat Heating Module (SHM), passenger side, LHD
9/25	Outlet 12V rear
10/72	Front ashtray lighting
16/45	Portable navigation system
16/181	Rear headphone sockets
27/8	Camera, wide angle front

31/47	Rear bumper abutment, left
2/16	Relay, rear window wiper
3/35	Trunk handle switch
4/110	Trailer Module (TRM)
4/115	Park Brake Module (PBM)
6/8	Central locking motor, trunk lid
6/32	Rear window wiper motor
10/3	License plate lighting
10/17	Lamp housing, rear right
10/18	Lamp housing, rear left
10/19	Auxiliary brake light
17/19	12 V outlet, Cargo compartment

31/48	Rear bumper abutment, right
4/93	Keyless vehicle module (KVM)
6/37	Lock motor, fuel filler cover
10/17	Lamp housing, rear right
10/46	Fog light, right rear
10/53	Fog light, left rear

31/65	Rear seat riser, left-hand side 1
4/82	Differential Electronic Module (DEM)
6/141	Motor folding head restraint left
8/59	Rear left head restraint solenoid
9/14	Control module, rear left seat heater

31/66	Rear seat riser, left-hand side 2
4/83	Fuel pump control module
6/33	Fuel pump

31/67	Rear seat riser, RH side 1
4/84	Suspension Module (SUM)
4/86	Parking Assistance Module (PAM)
6/142	Motor folding head restraint right
8/60	Rear right head restraint solenoid
9/15	Control module, rear right seat heater

31/68	Rear seat riser, RH side 2
6/35	Fuel pump, auxiliary heater
9/38	Electrically heated fuel filter

Ground connections

31/83 - 31/89

31/83	Bottom rail, left
3/111	Light Switch Module (LSM)
3/130	Steering Wheel Module (SWM)
3/272	Switch, parking brake
4/6	Climate Control Module (CCM)
5/1	Driver Information Module (DIM)
9/42	PTC-element
10/1	Left-hand front lamp housing
10/2	Right-hand front lamp housing
10/19	Auxiliary brake light
16/60	Phone Module (PHM)
16/65	Immobilizer antenna unit (IAU)
17/13	Data link connector

31/84	Bottom rail, right
3/271	Contact, immobilizer, clutch pedal, RHD
3/281	Infotainment Control Module (ICM), LHD
3/284	Diagnostic contact, brake light, RHD
4/56	Central Electronic Module (CEM), LHD
4/120	Parking Assistance Camera (PAC), LHD
7/51	Accelerator pedal sensor, RHD
7/93	Occupant Weight Sensor (OWS)
7/175	Weight sensor passenger seat, seat belt reminder, LHD
8/51	Igniter side airbag front driver's seat, RHD
8/52	Igniter side airbag front passenger seat, LHD
16/1	Integrated Audio Module (IAM), LHD
16/36	TV receiver, LHD
16/145	Remote Digital Audio Receiver (RDAR), LHD
16/162	Digital Audio Broadcast Module (DABM), LHD

31/88	Engine ignition coils
20/3	Spark plug with ignition coil, 4- & 5-Cyl. Turbo
20/4	Spark plug with ignition coil, 4- & 5-Cyl. Turbo
20/5	Spark plug with ignition coil, 4- & 6-Cyl. Turbo
20/6	Spark plug with ignition coil, 4- & 6-Cyl. Turbo

31/89	Engine ignition coils
20/5	Spark plug with ignition coil, 5-Cyl. Turbo
20/6	Spark plug with ignition coil, 5-Cyl. Turbo
20/7	Spark plug with ignition coil, 5- & 6-Cyl. Turbo
20/8	Spark plug with ignition coil, 6-Cyl. Turbo

Ground connections

31/90 - 31/XX4

31/90	Engine ignition coils
20/3	Spark plug with ignition coil, 6-Cyl. Turbo
20/4	Spark plug with ignition coil, 6-Cyl. Turbo
20/16	Capacitor, 6-Cyl. Turbo

31/93	LH wheel housing 2
4/56	Central Electronic Module (CEM), RHD
4/99	Electronic power steering control module
6/104	Washer motor headlights
7/4	Brake fluid level sensor
7/5	Washer fluid level sensor
9/43	Heated windshield washer nozzle, left
9/44	Heated windshield washer nozzle, right
10/1	Left-hand front lamp housing
16/10	Horn 1
16/11	Horn 2
16/35	Siren Control Module (SCM)

31/94	RH wheel housing 2
10/2	Right-hand front lamp housing

31/95	LH wheel housing 3
6/164	Electrical power steering module (EPS)

31/96	RH wheel housing 3
3/62	Hood alarm contact
4/56	Central Electronic Module (CEM), LHD
4/136	Active Grillshutter Module (AGM)
7/73	Coolant level sensor
7/203	Forward-aimed radar (FLR)
10/2	Right-hand front lamp housing
10/11	Front left running/parking light
10/12	Front right running/parking light

31/107	Trunk lid/tailgate upper edge V60
31/117	Trunk lid/tailgate lower edge V60

31/117	Tailgate upper, V60
31/107	Ground connection, V60

31/130	Start/stop function
10/19	Auxiliary brake lights, S60,V60

31/131	Start/stop function
1/2	Secondary battery

31/XX4	Engine - Body
31/4	Ground connection

Ground connections

31/XX10 - 31/TRM

31/XX10 LH wheel housing 1	
3/10	Reversing light contact
3/282	Switch indicator 1st gear, I5D
4/28	Transmission Control Module (TCM)
4/46	Engine Control Module (ECM)
4/109	Control module glow plug, 4-Cyl. Diesel
6/73	Coolant pump
6/179	Electric catch motor
7/243	Gear position sensor neutral position
8/3	Electromagnetic clutch, climate control system, 4-Cyl.
8/78	Pressure monitor power steering, 4-Cyl. Turbo
8/84	Switch vacuum pump 4- & 5-Cyl. Turbo
9/32	PTC resistor, crankcase ventilation
9/38	Electrically heated fuel filter
20/3-6	Spark plug with ignition coil, 4-Cyl. Turbo

31/XX14 LH wheel housing 3	
4/16	Brake Control Module (BCM)


31/XX15 RH wheel housing	
4/7	Combustion Preheater Module (CPM)
4/106	Control module, remote parking heater start
6/1	Wiper motor module (WMM)

31/AL Auxiliary lights	
10/65	Auxiliary light, front right
10/69	Auxiliary light, front left

31/INFOT Infotainment	
16/105	Audio module (AUD)

31/TRM Accessories	
17/39	13-pin outlet, tow hitch cable harness
4/110	Trailer Module (TRM)

Control modules
Overview locations

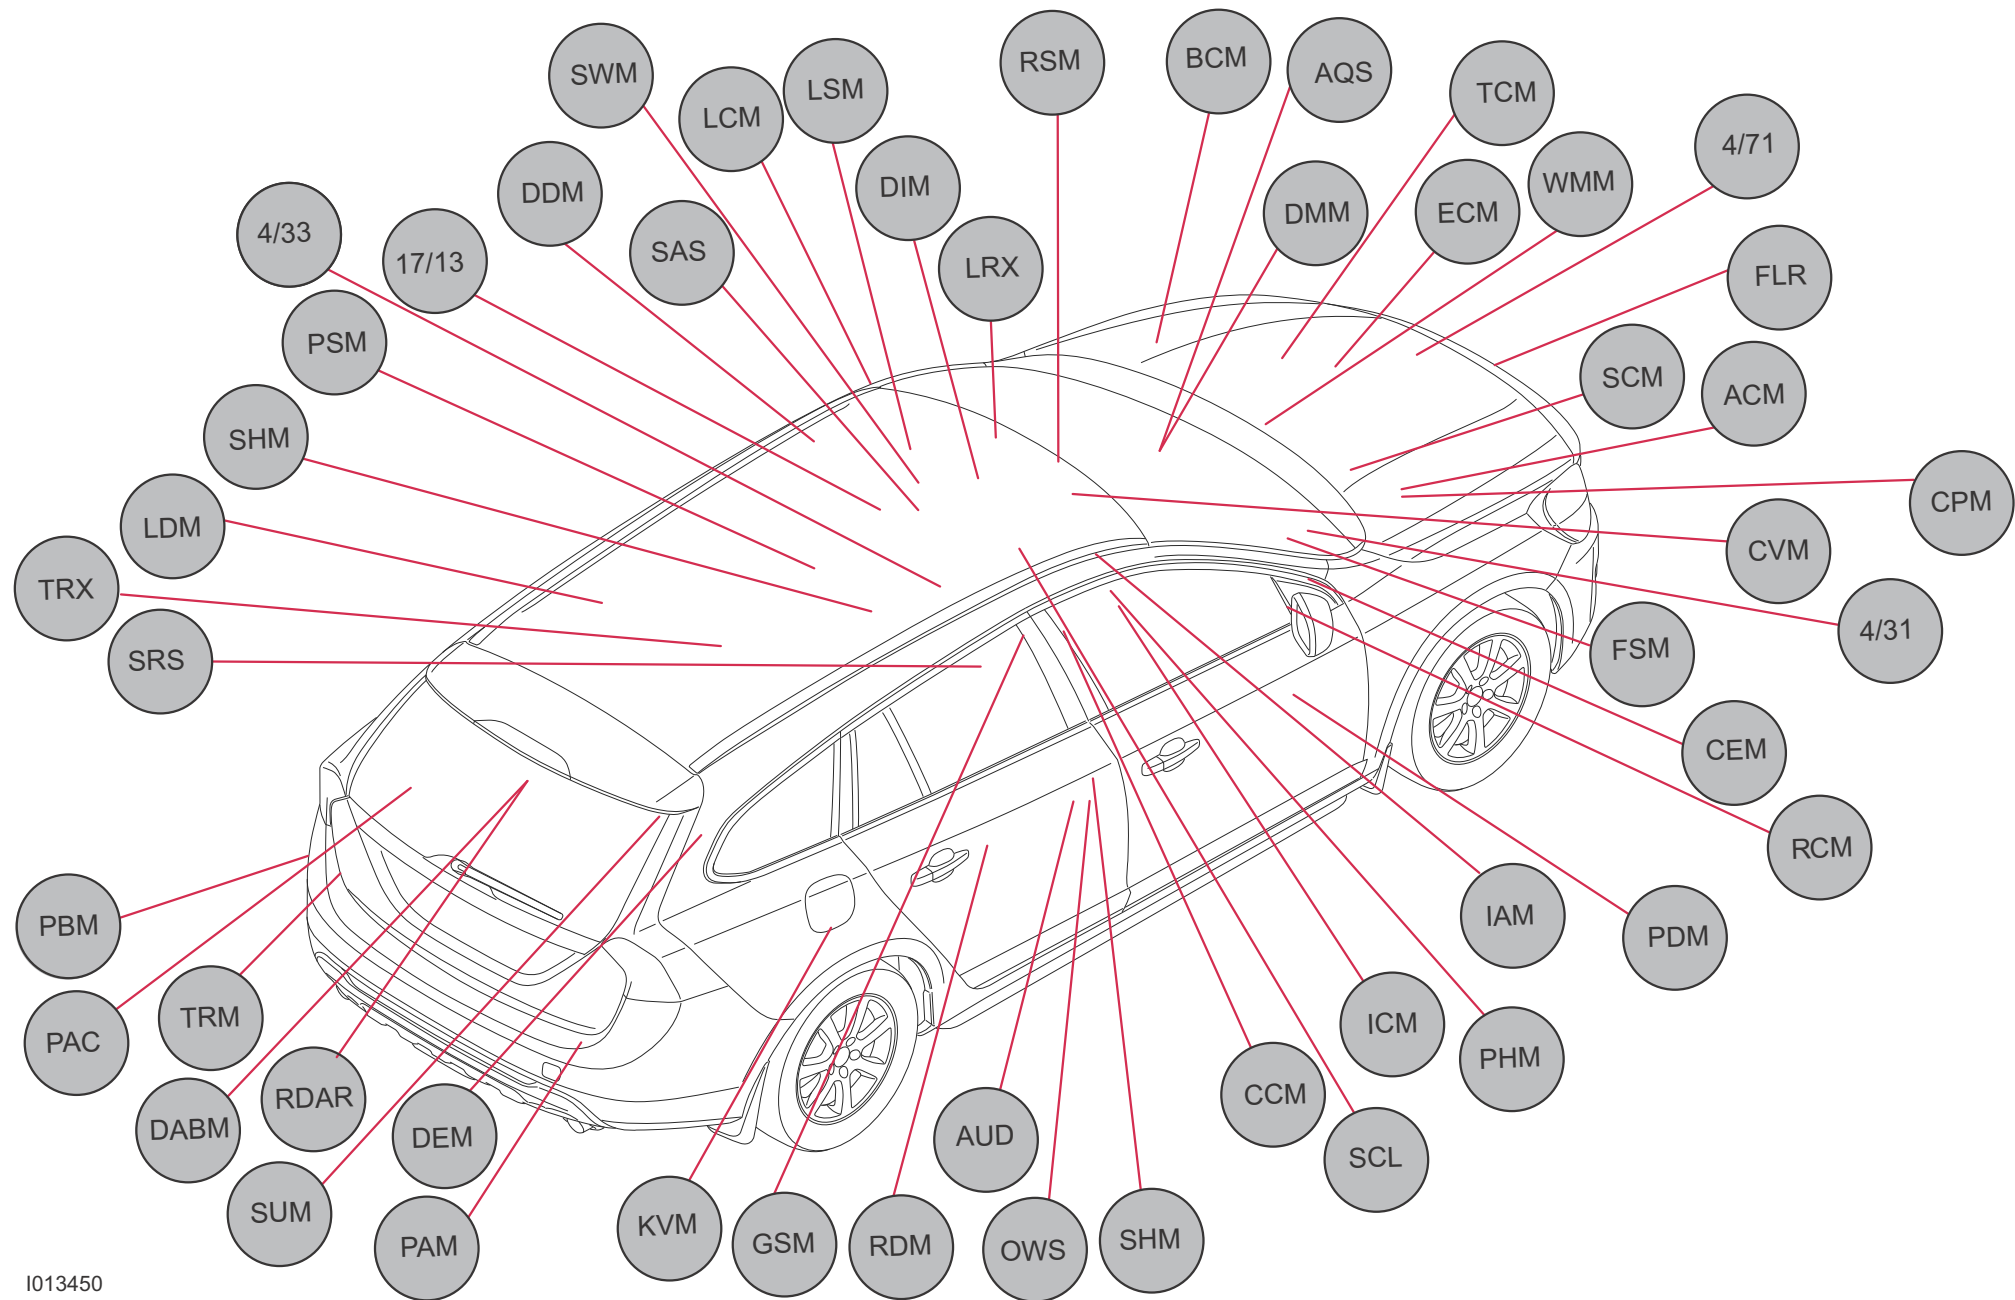


I013450

Control modules

Overview designations


Unit	Designation		Unit	Designation	
ACM	6/26	Alternator Control Module (ACM)	PBM	4/115	Park Brake Module (PBM)
AQS	7/159	Air Quality Sensor (AQS)	PDM	3/127	Passenger door module (PDM)
AUD	16/105	Audio module (AUD)	PHM	16/60	Phone Module (PHM)
BCM	4/16	Brake Control Module (BCM)	PSM	4/52	Power Seat Module (PSM)
CCM	4/6	Climate control module (CCM)	RCM	27/4	Right Camera Module (RCM)
CEM	4/56	Central Electronic Module (CEM)	RDAR	16/145	Remote Digital Audio Receiver (RDAR)
CPM	4/7	Combustion Preheater Module (CPM)	RDM	3/129	Right rear door module (RDM)
CVM	4/125	Closing velocity module (CVM)	TRX	4/119	Remote Keyless Entry (TRX)
DABM	16/162	Digital Audio Broadcast Module (DABM)	LRX	4/119.2	Signal receiver (LRX)
DDM	3/126	Driver door module (DDM)	RSM	7/149	Rain Sensor Module (RSM)
DEM	4/82	Differential Electronic Module (DEM)	SAS	4/68	Steering Wheel Angle Sensor Module (SAS)
DIM	5/1	Driver Information Module (DIM)	SCL	4/102	Steering column lock module (SCL)
DMM		Damper Motor Module (DMM)	SCM	16/35	Siren Control Module (SCM)
ECM	4/46	Engine Control Module (ECM)	SHM	9/12	Seat Heating Module (SHM) driver's side
FLR	7/203	Forward-aimed radar (FLR)		9/13	Seat Heating Module (SHM) passenger side
FSM	4/80	Forward Sensing Module (FSM)	SRS	4/9	Supplemental Restraint System (SRS)
GSM	3/156	Gear Selector Module (GSM)	SUM	4/84	Suspension Module (SUM)
IAM	16/1	Integrated Audio Module (IAM)	SWM	3/130	Steering Wheel Module (SWM)
ICM	3/281	Infotainment control module (ICM)	TCM	4/28	Transmission Control Module (TCM)
KVM	4/93	Keyless vehicle module (KVM)	TRM	4/110	Trailer Module (TRM)
LCM	27/3	Left Camera Module (LCM)	WMM	6/1	Wiper motor module (WMM)
LDM	3/128	Left rear door module (LDM)	4/31	4/31	Fan control module
LSM	3/111	Light Switch Module (LSM)	4/33	4/33	Sunroof control module
OWS	7/93	Occupant Weight Sensor (OWS)	4/71	4/71	Cooling fan control module
PAC	4/120	Parking Assistance Camera (PAC)	17/13	17/13	Data link connector
PAM	4/86	Parking Assistance Module (PAM)			

Control modules
Central Electronic Module (CEM) 1:3

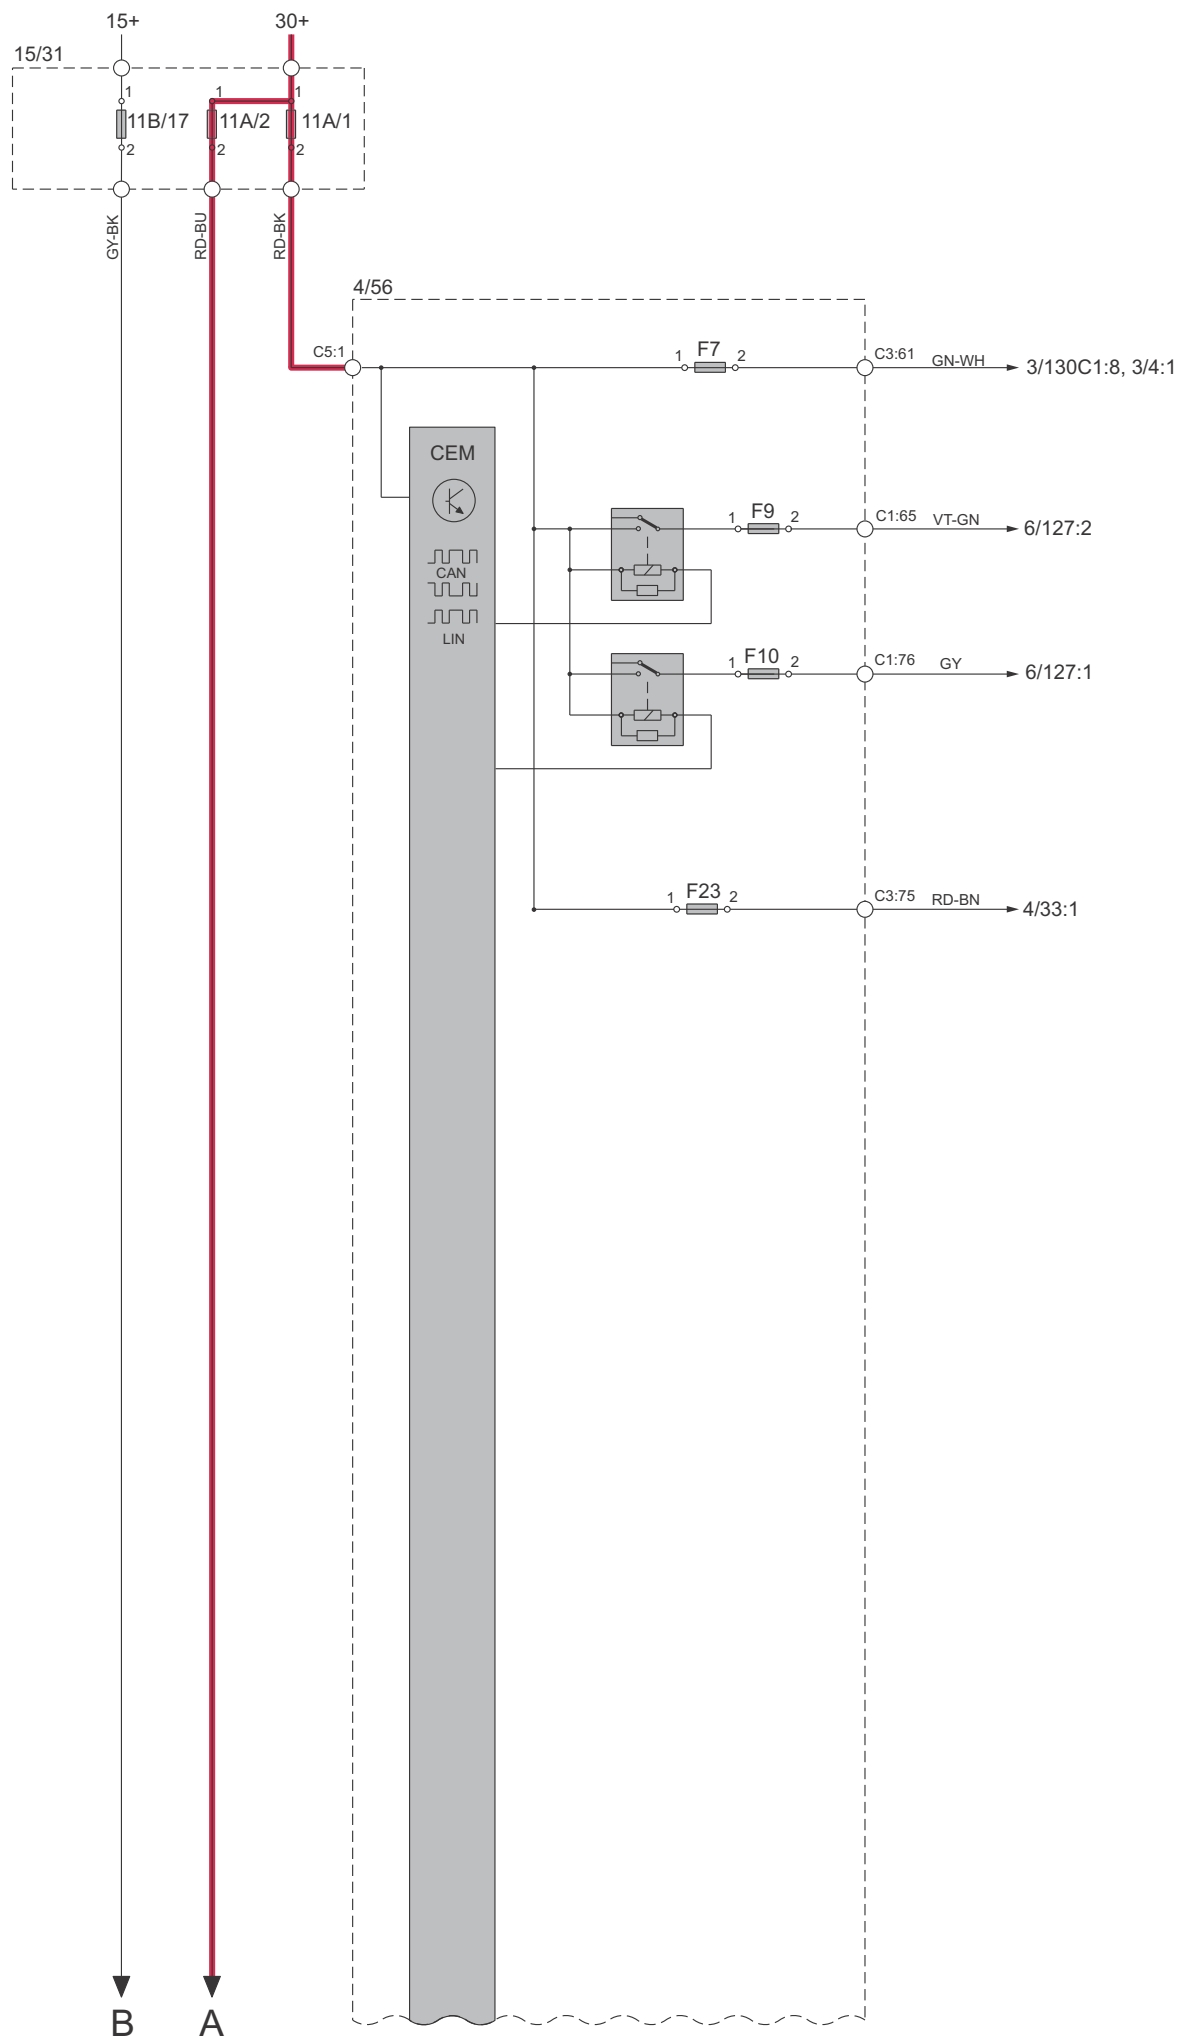

Control modules

Central Electronic Module (CEM) 2:3

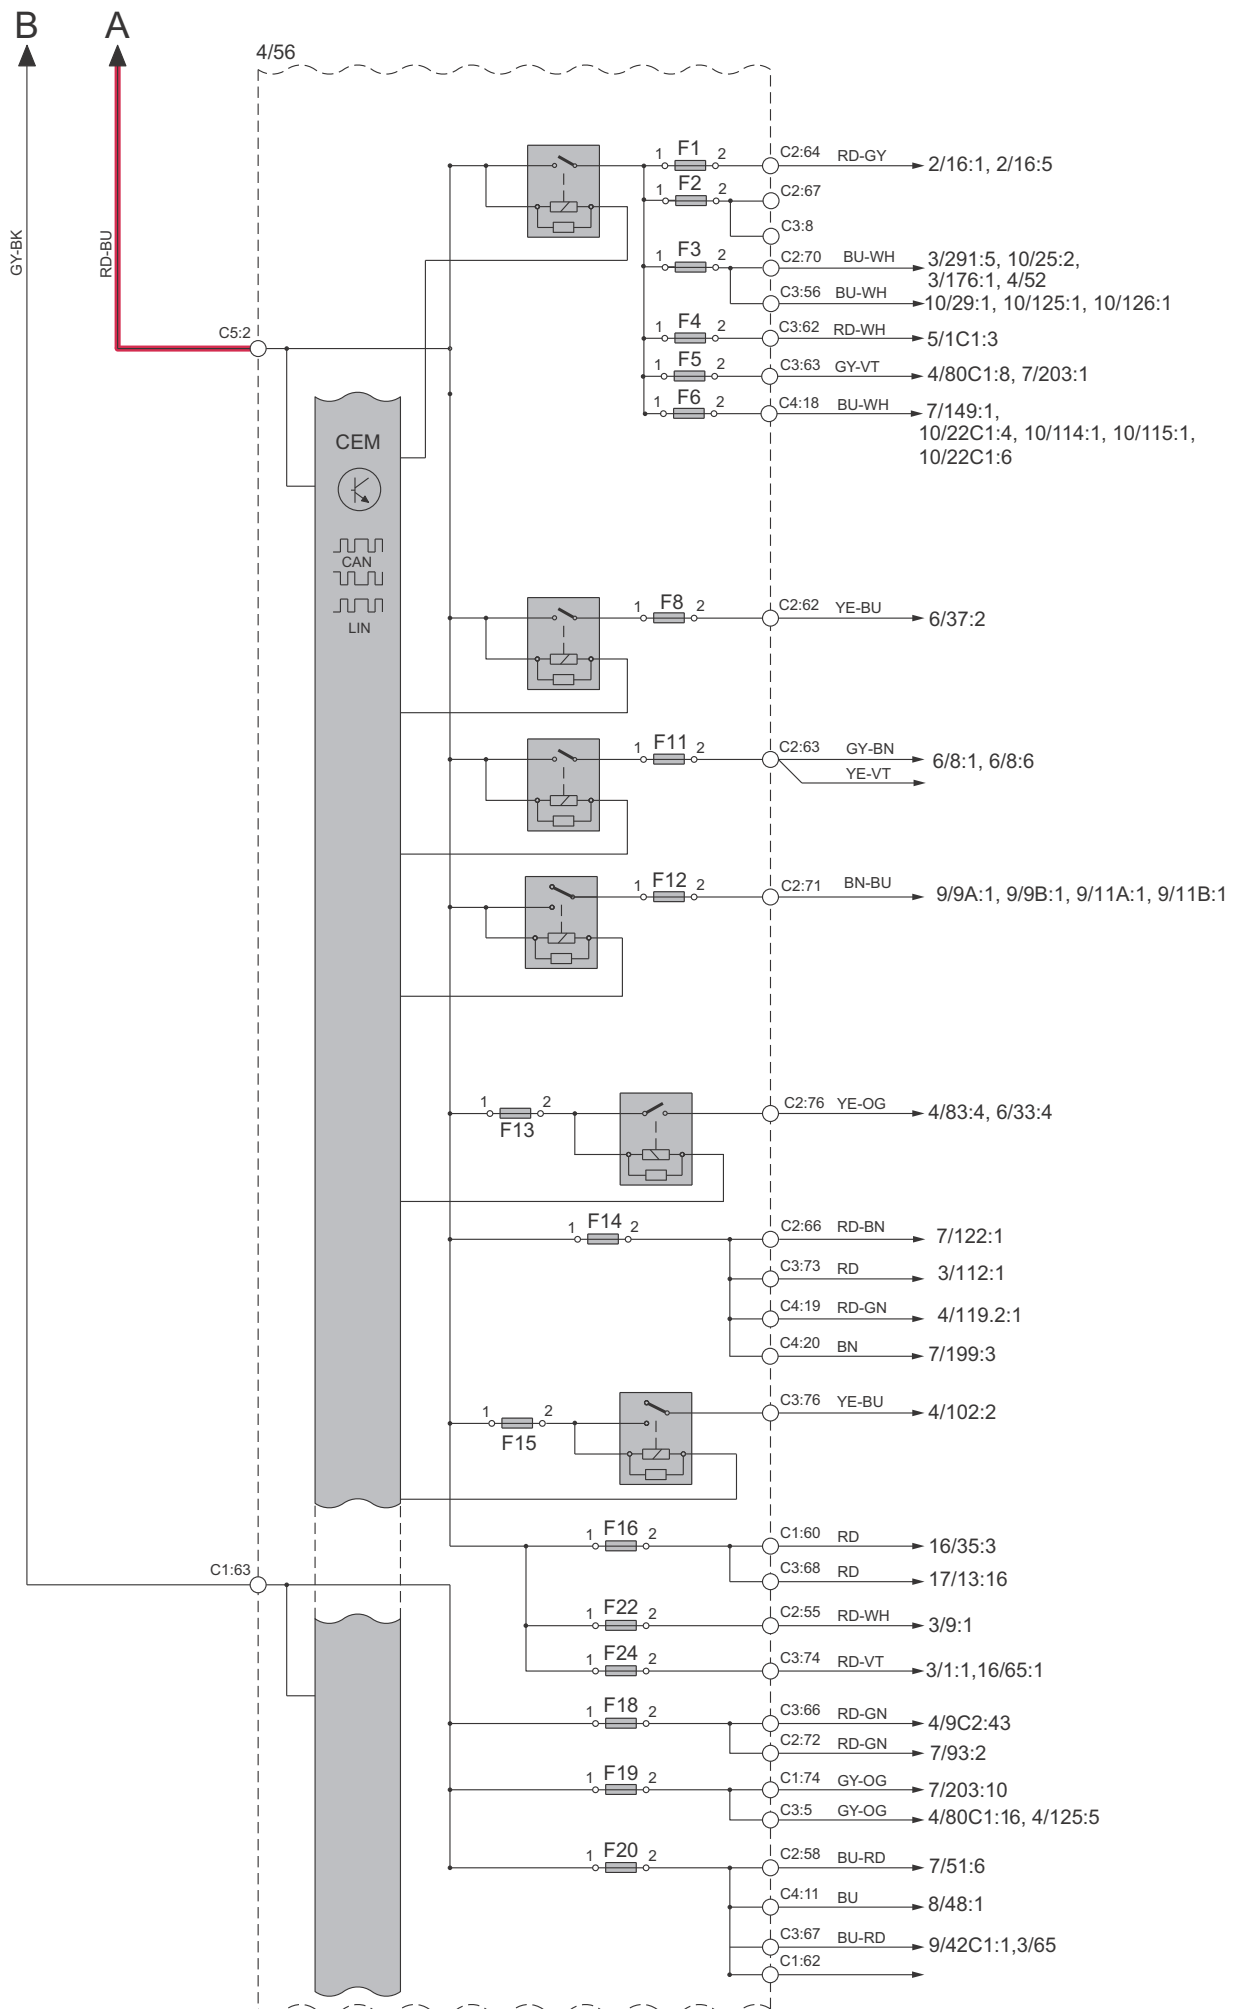


N000008

Central Electronic Module (CEM) 3:3




Data communication, High speed CAN

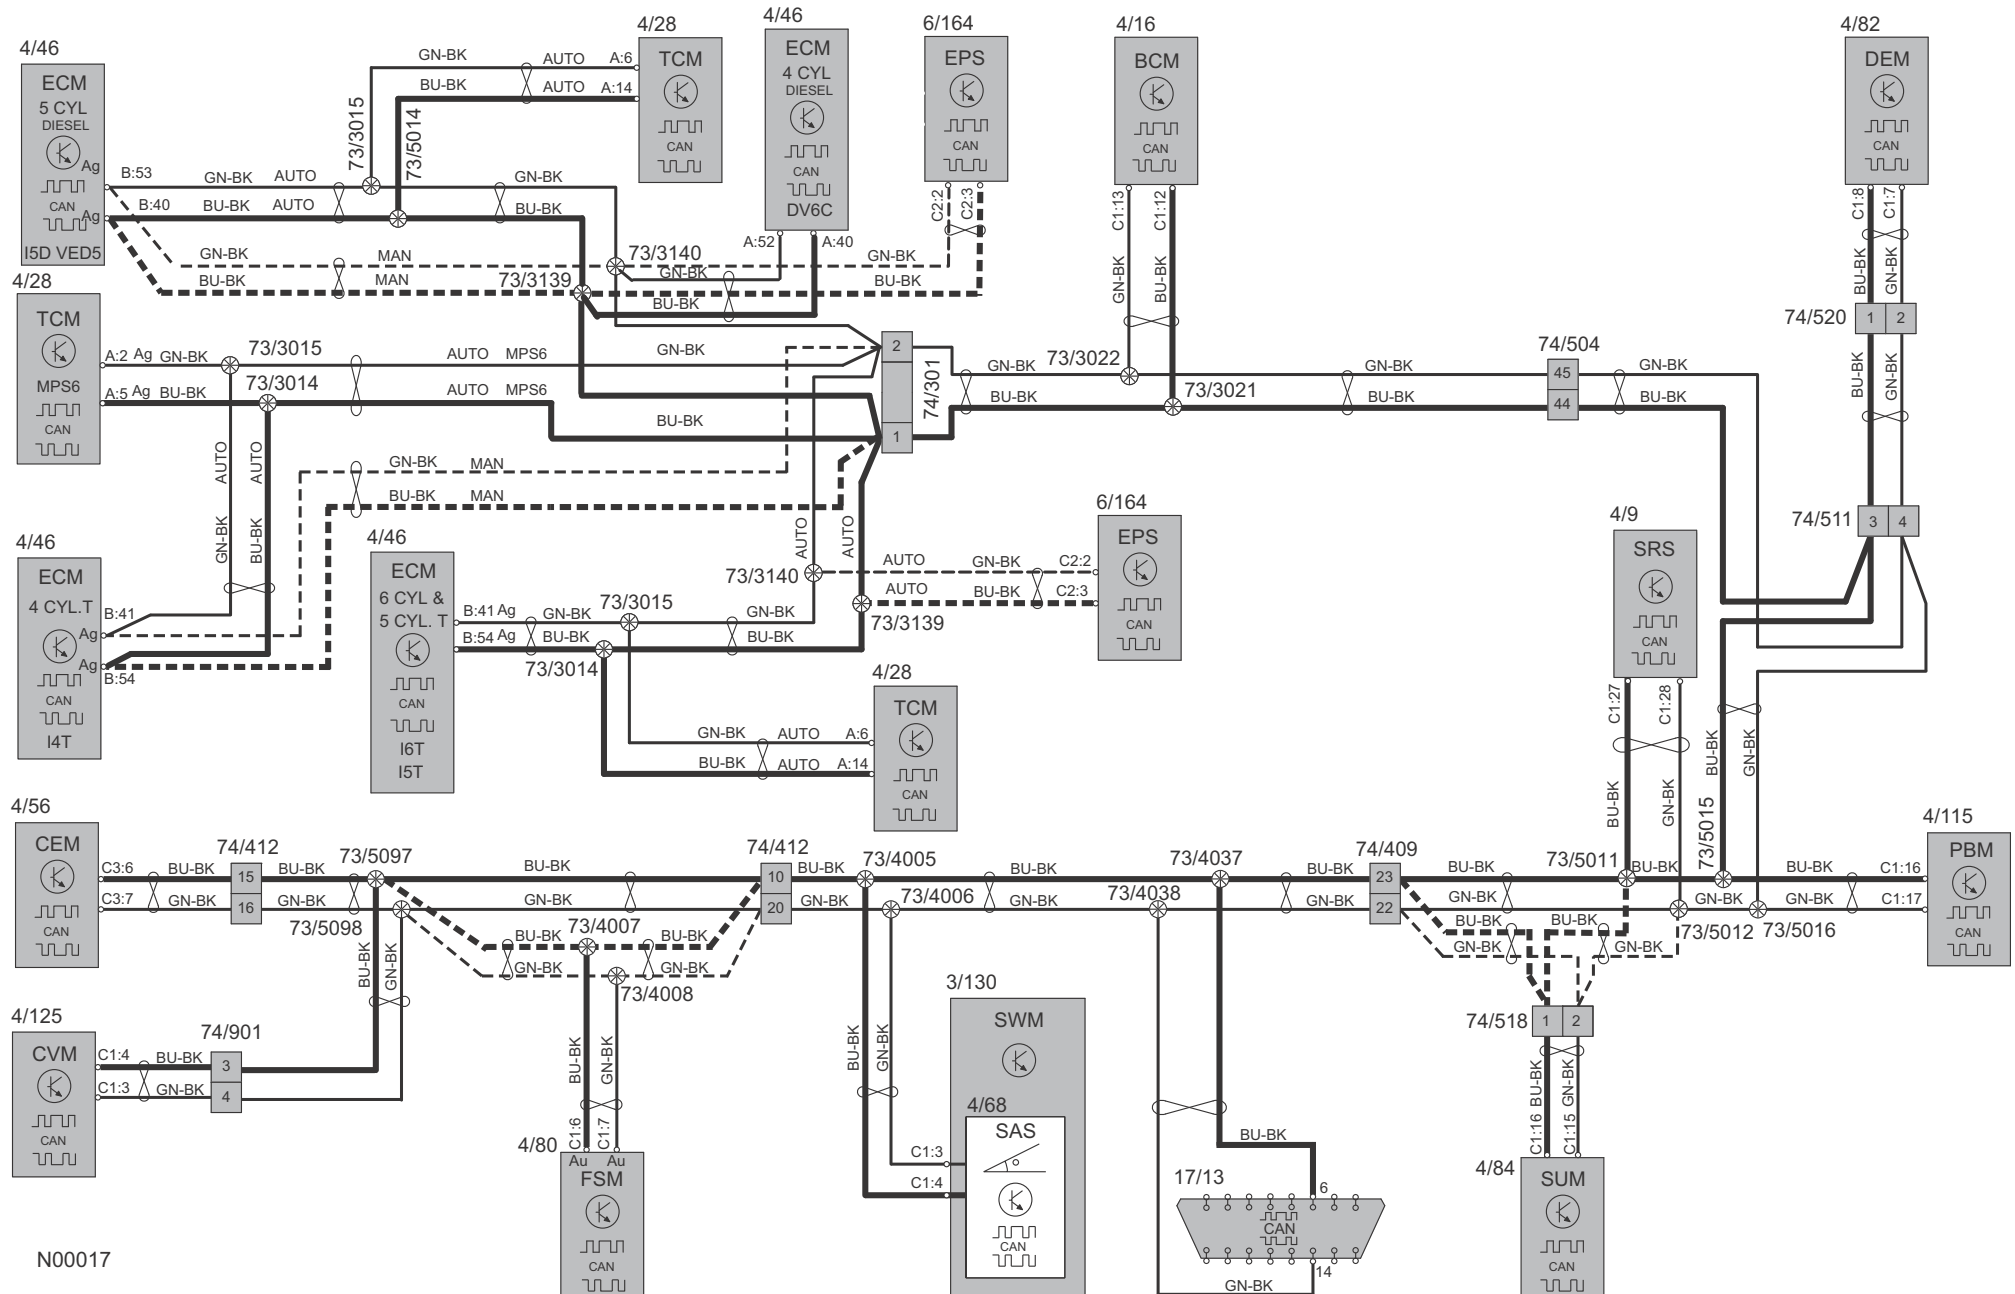

N00017


Control modules

Data communication intermediate speed CAN, LHD

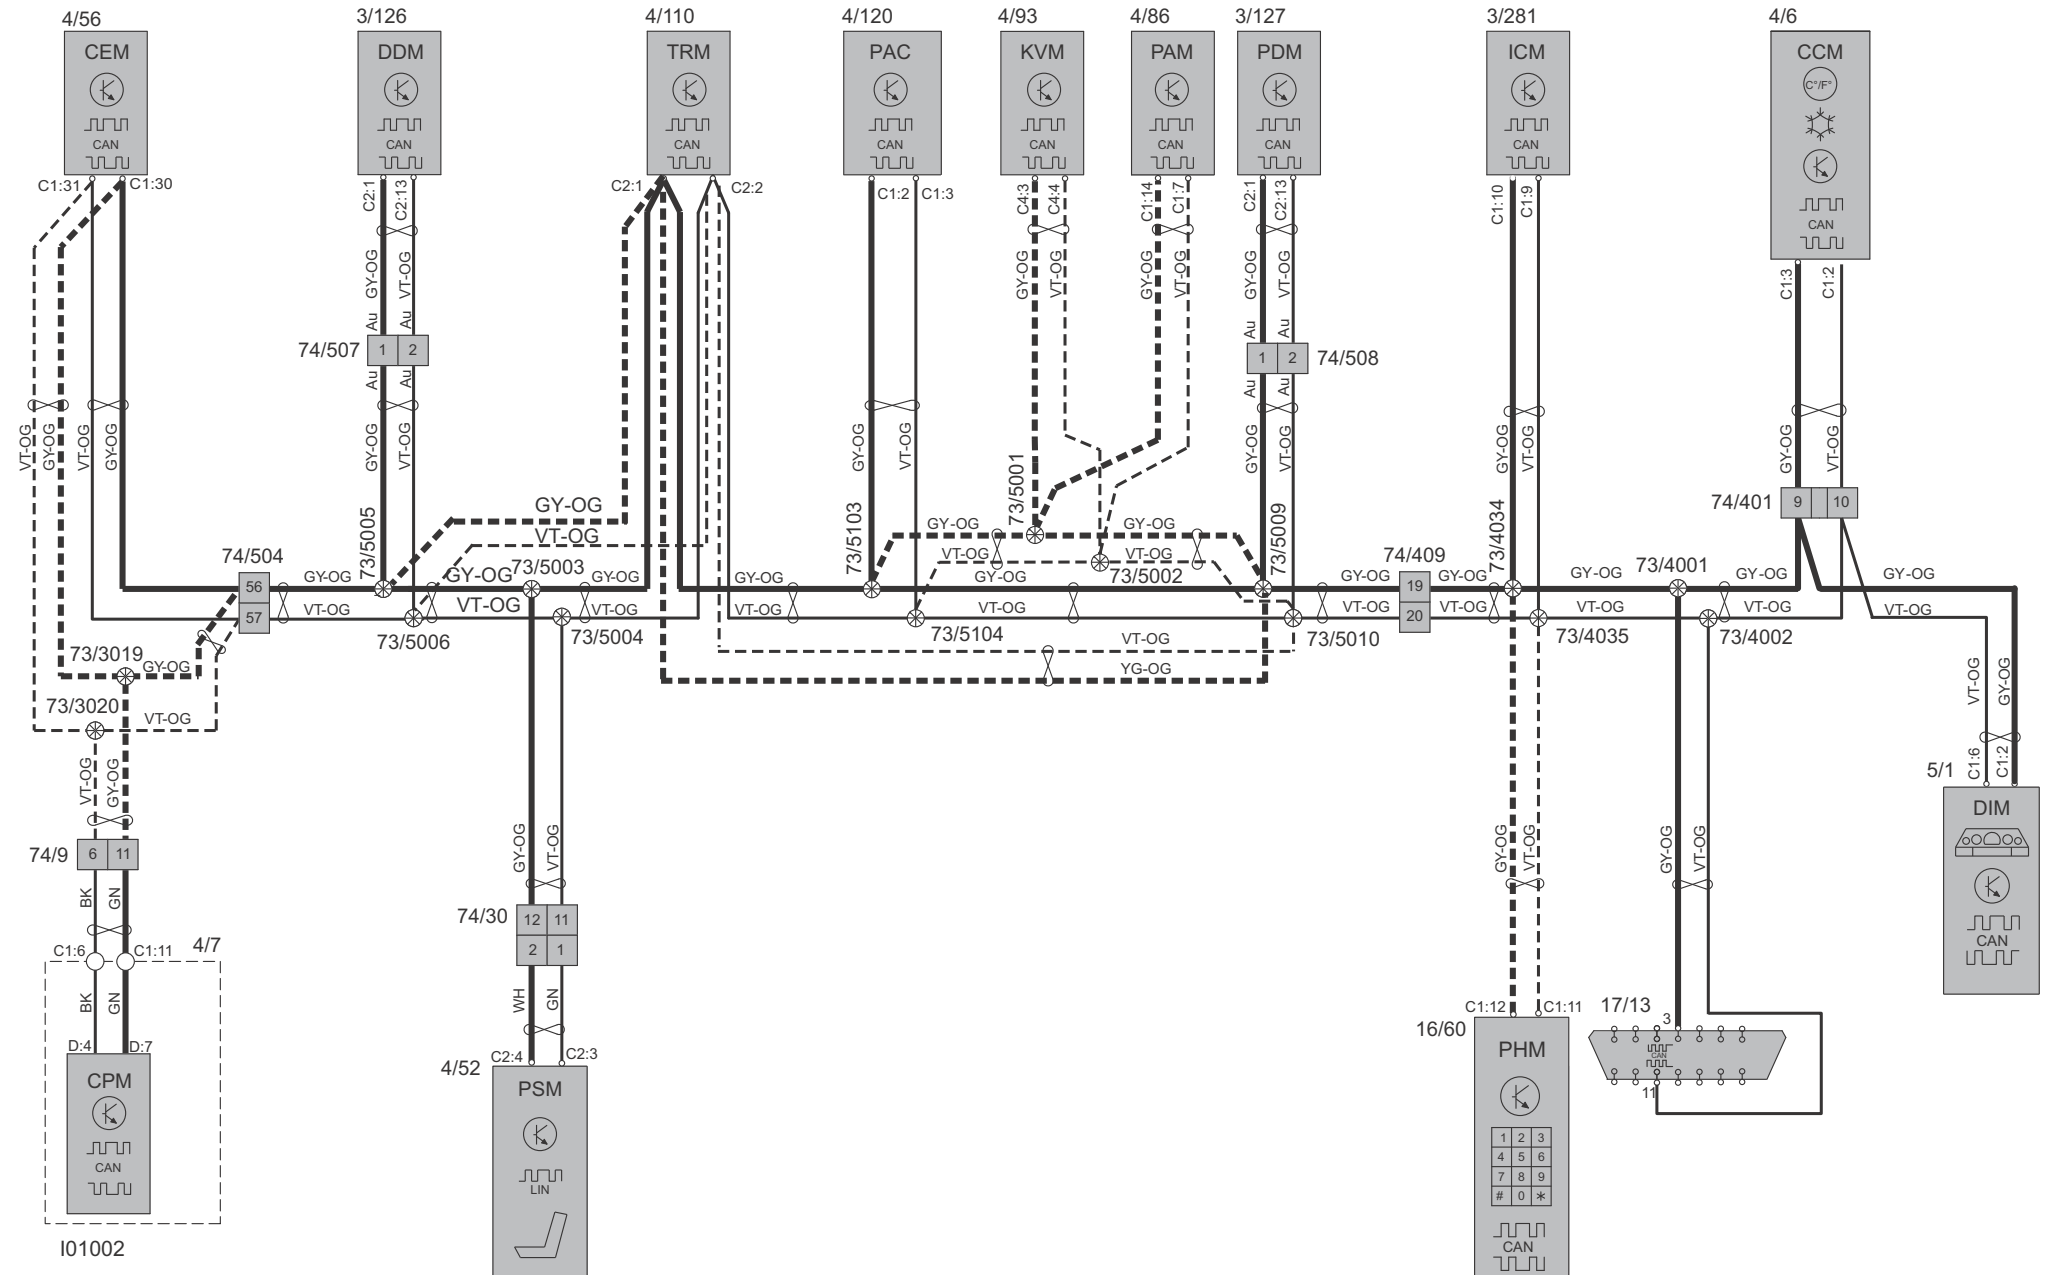

Control modules


Data communication Local CAN

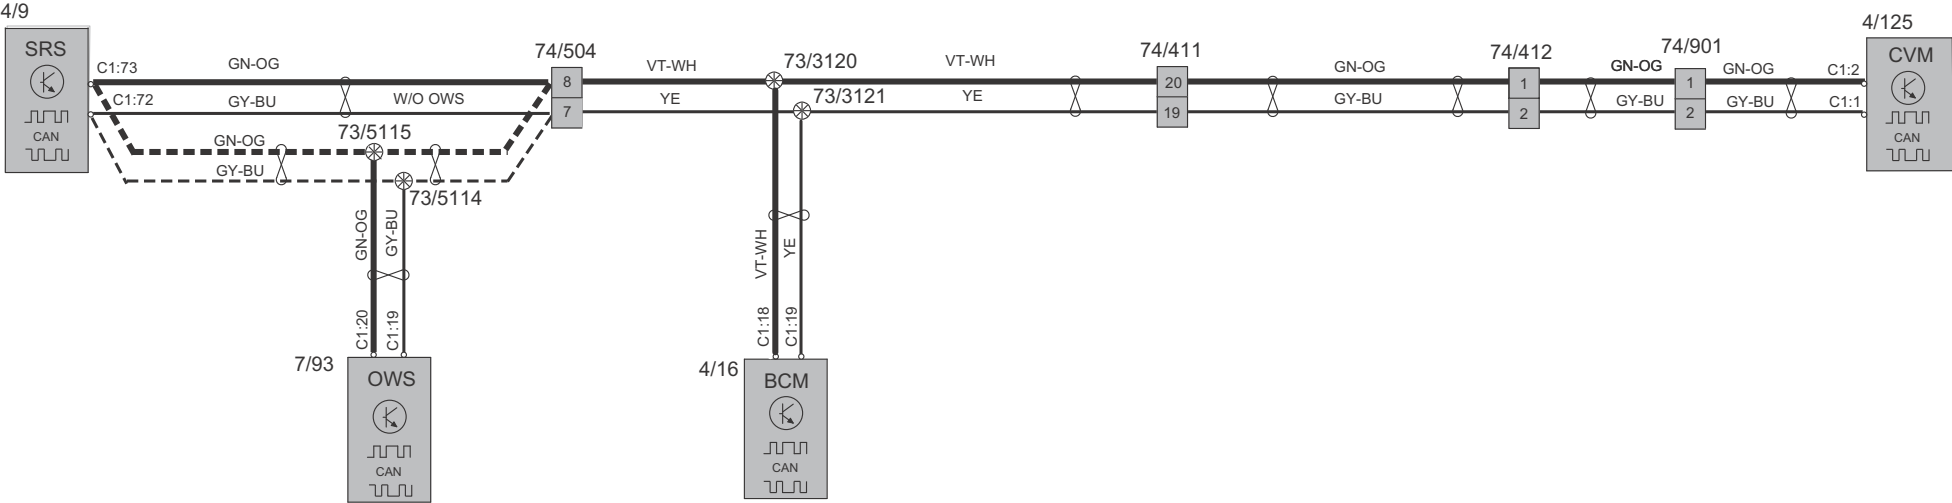

J00037

Control modules


Data communication, LIN 1:2

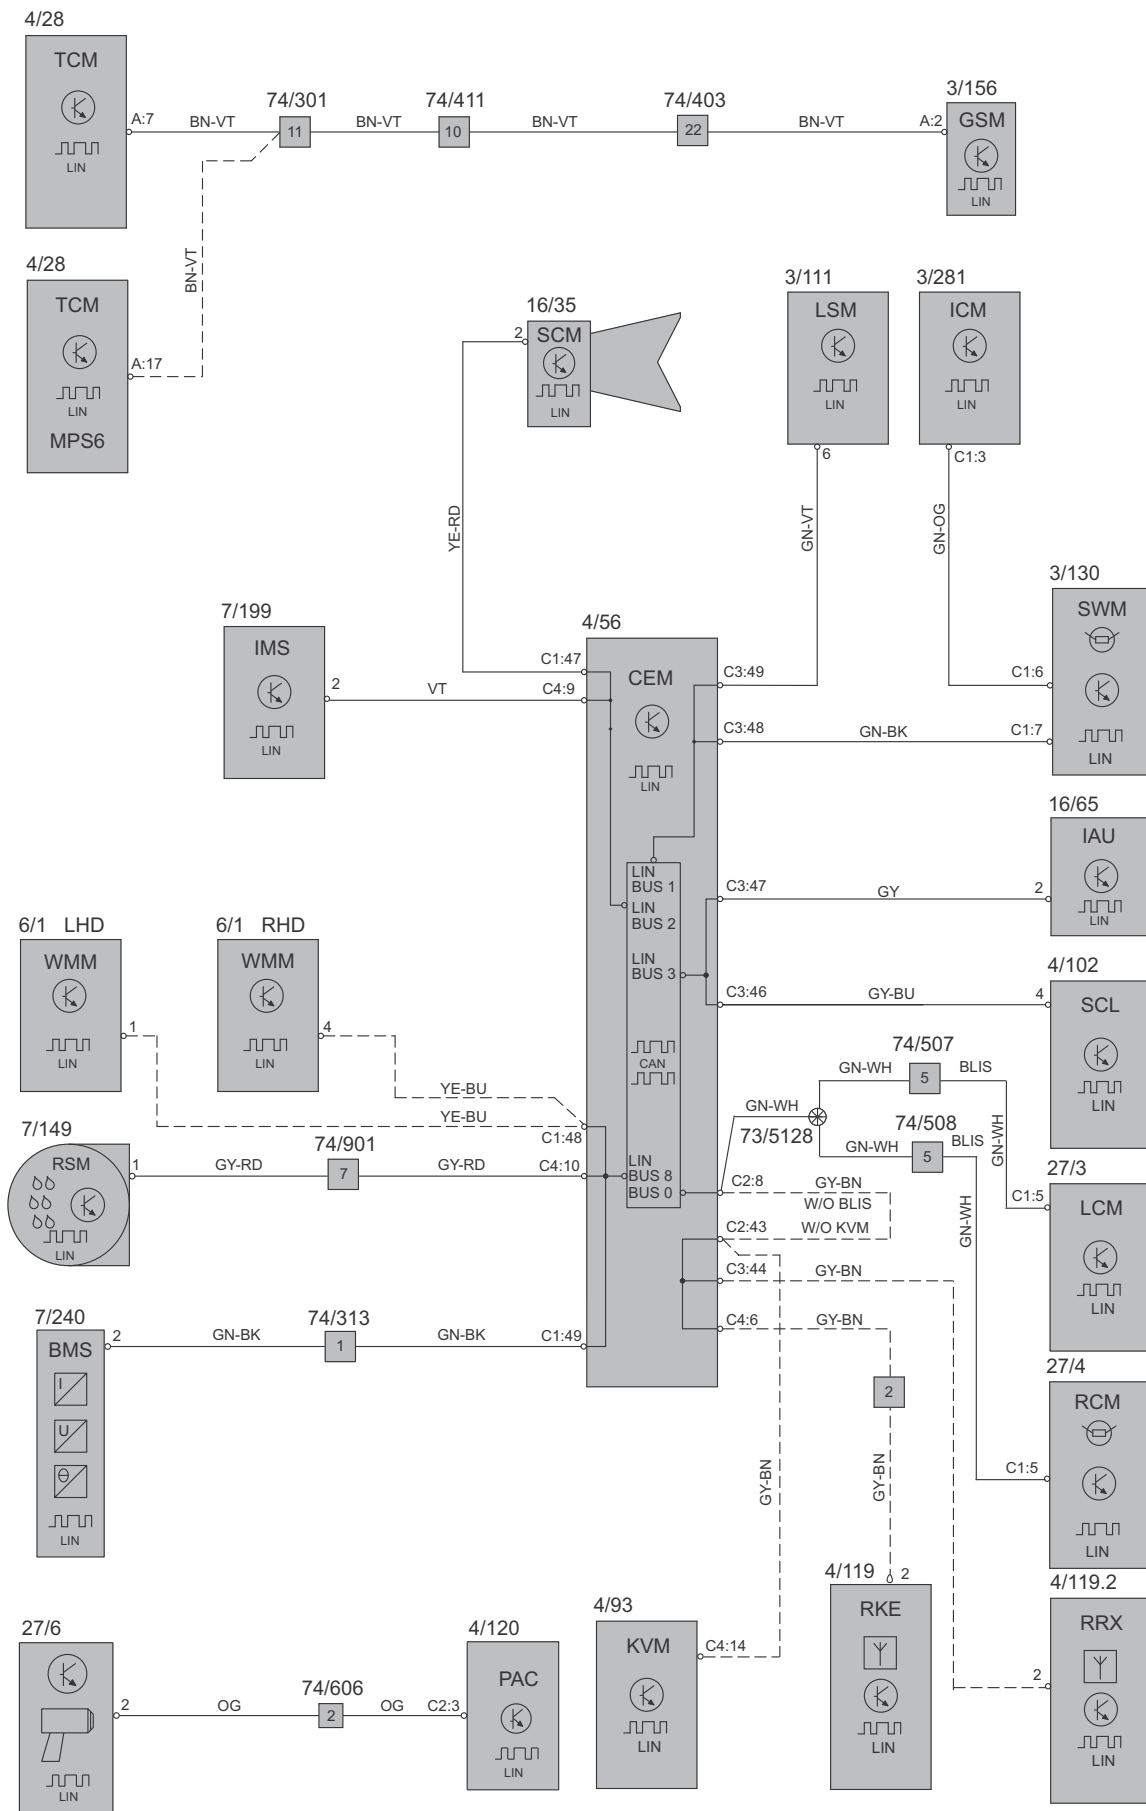

I01005

Control modules


Data communication, LIN 2:2

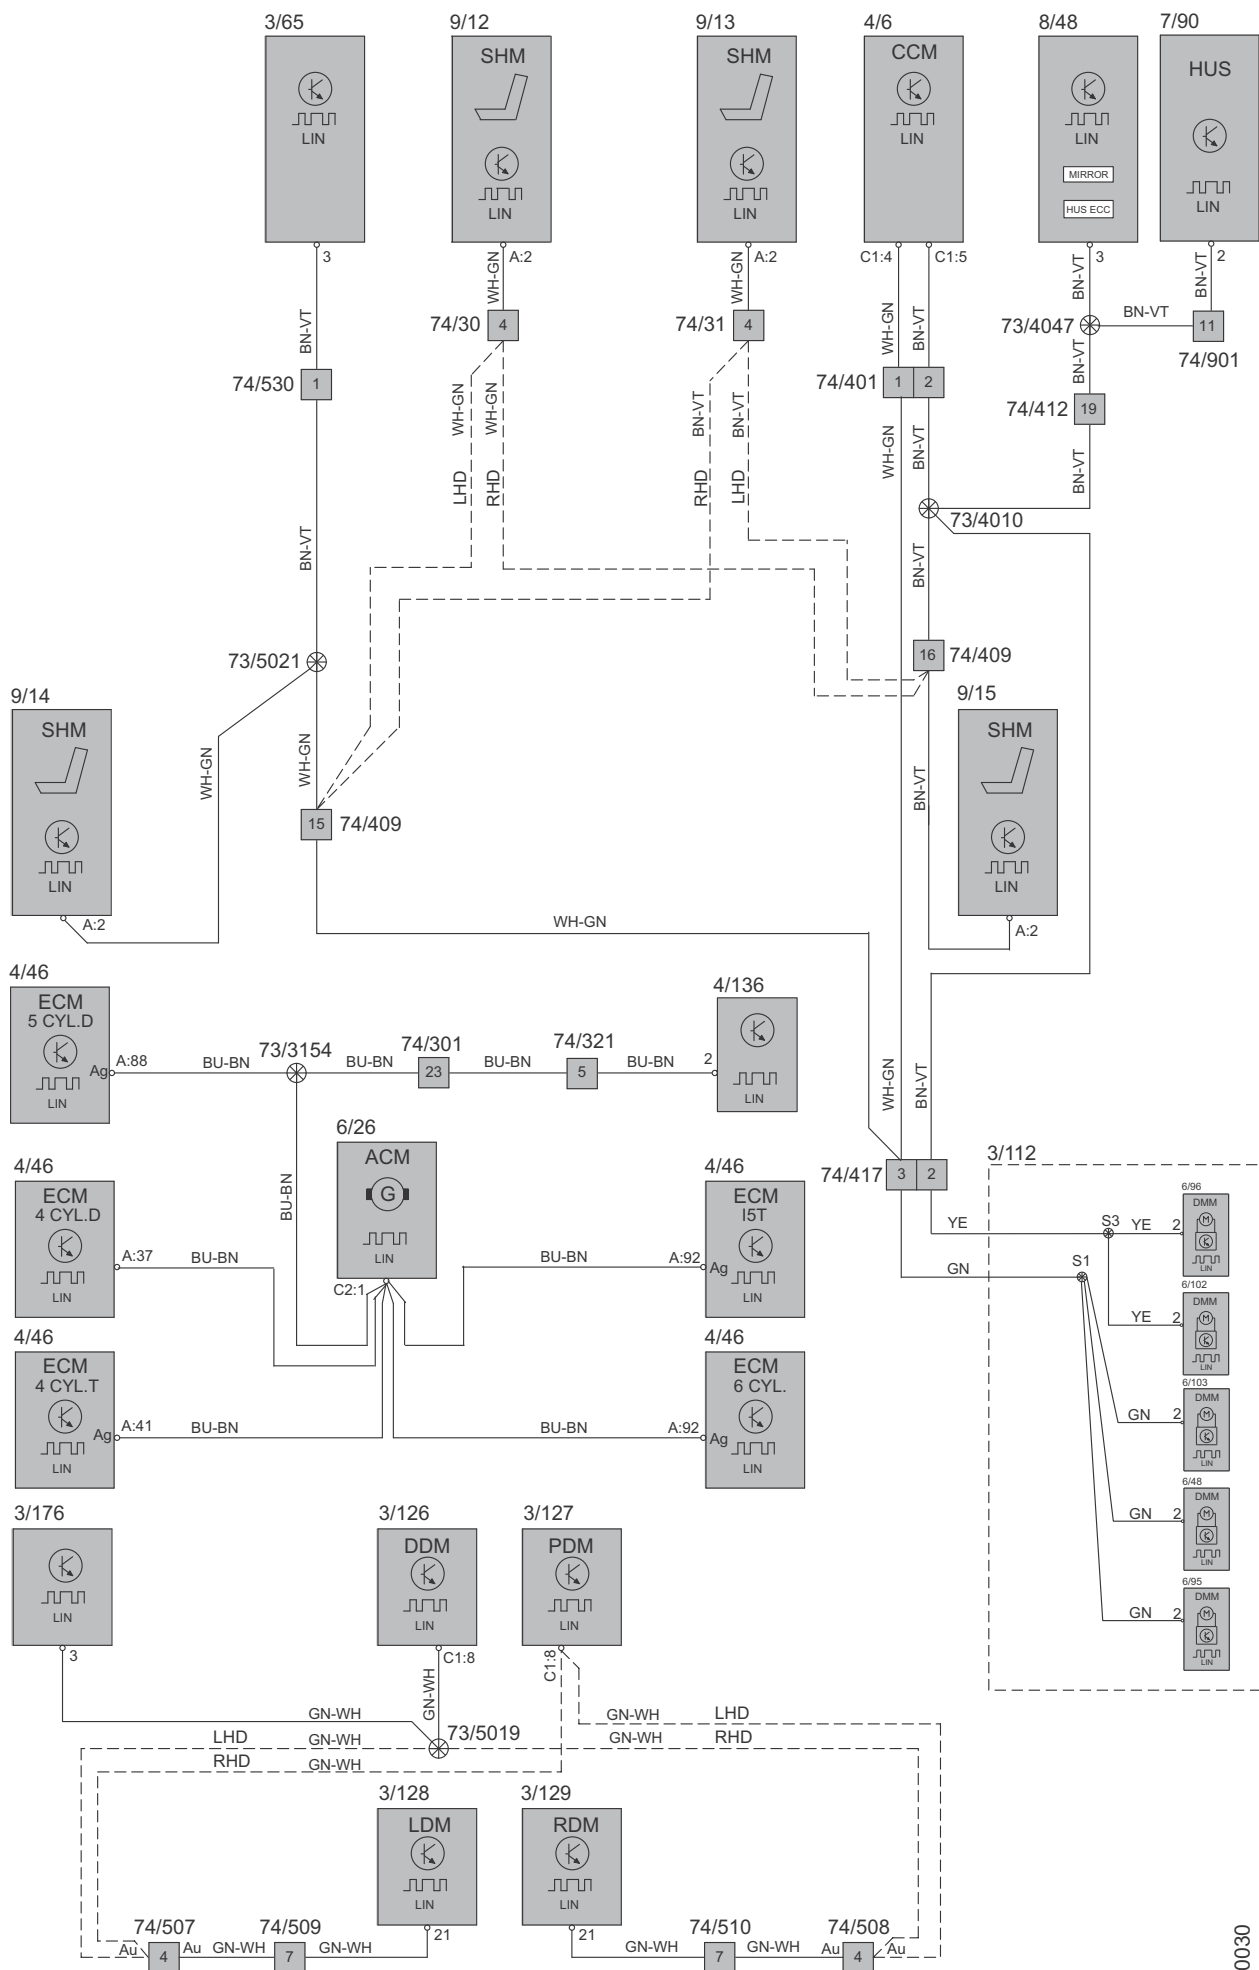

N00030


Control modules

Data communication MOST

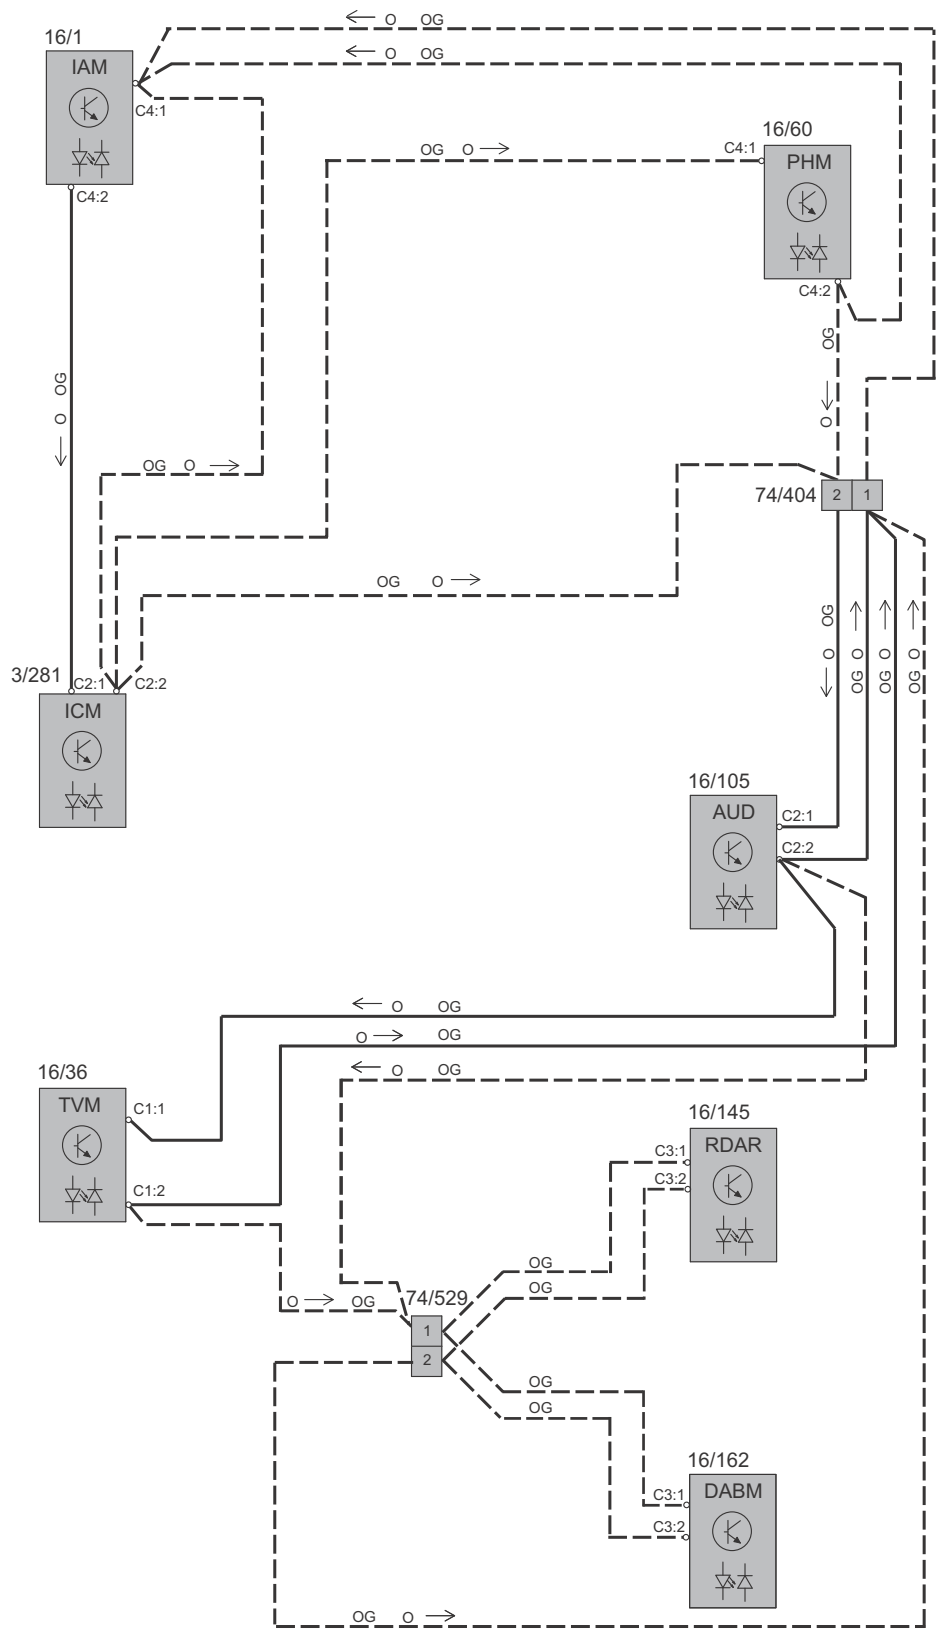


Control modules

Steering Wheel Module (SWM)

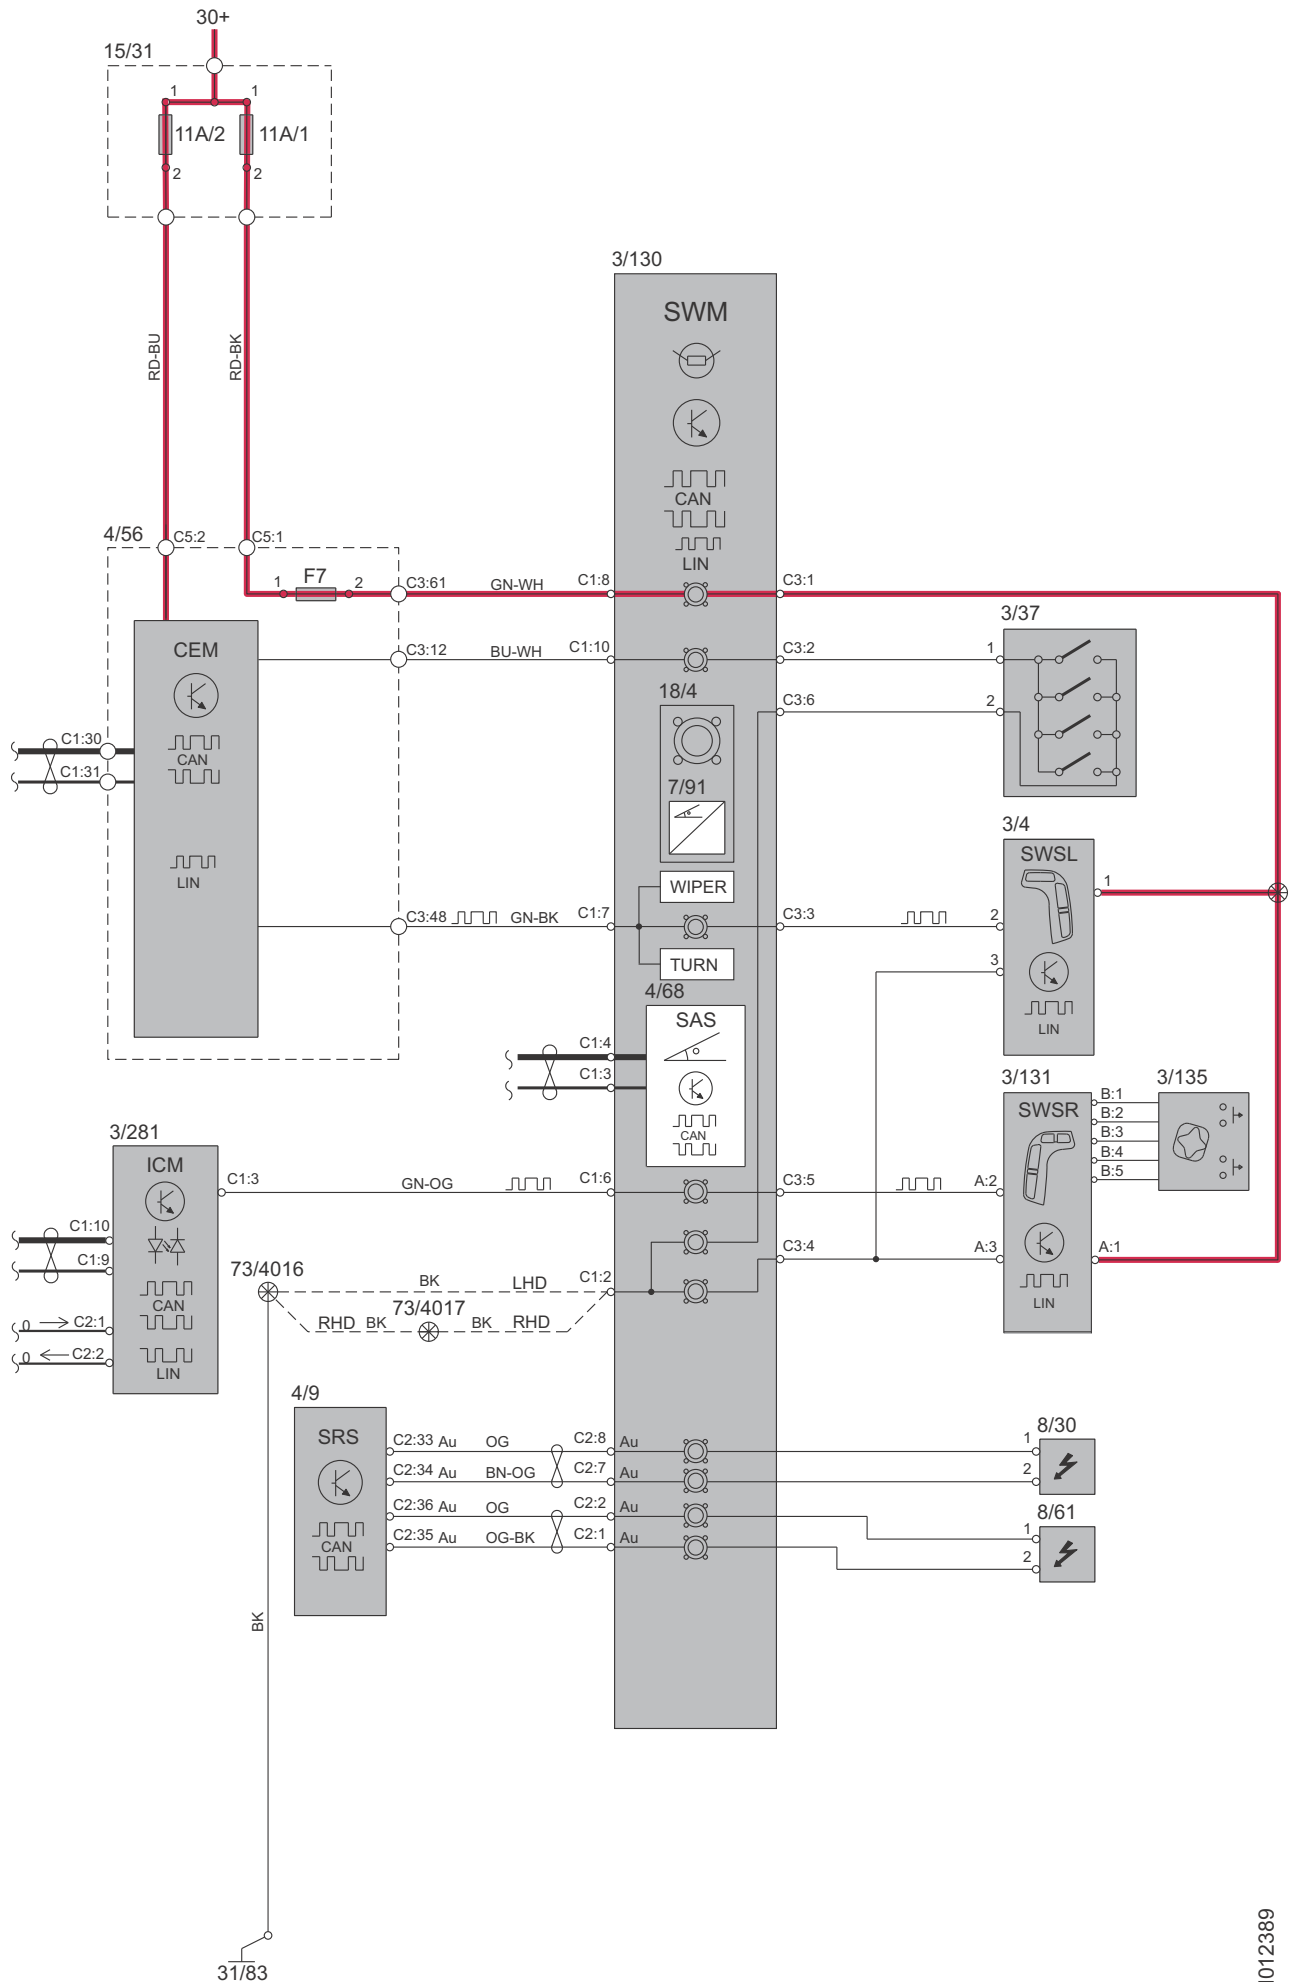


I012389

Group 26 Cooling system
Cooling fan, 4-Cyl. Turbo

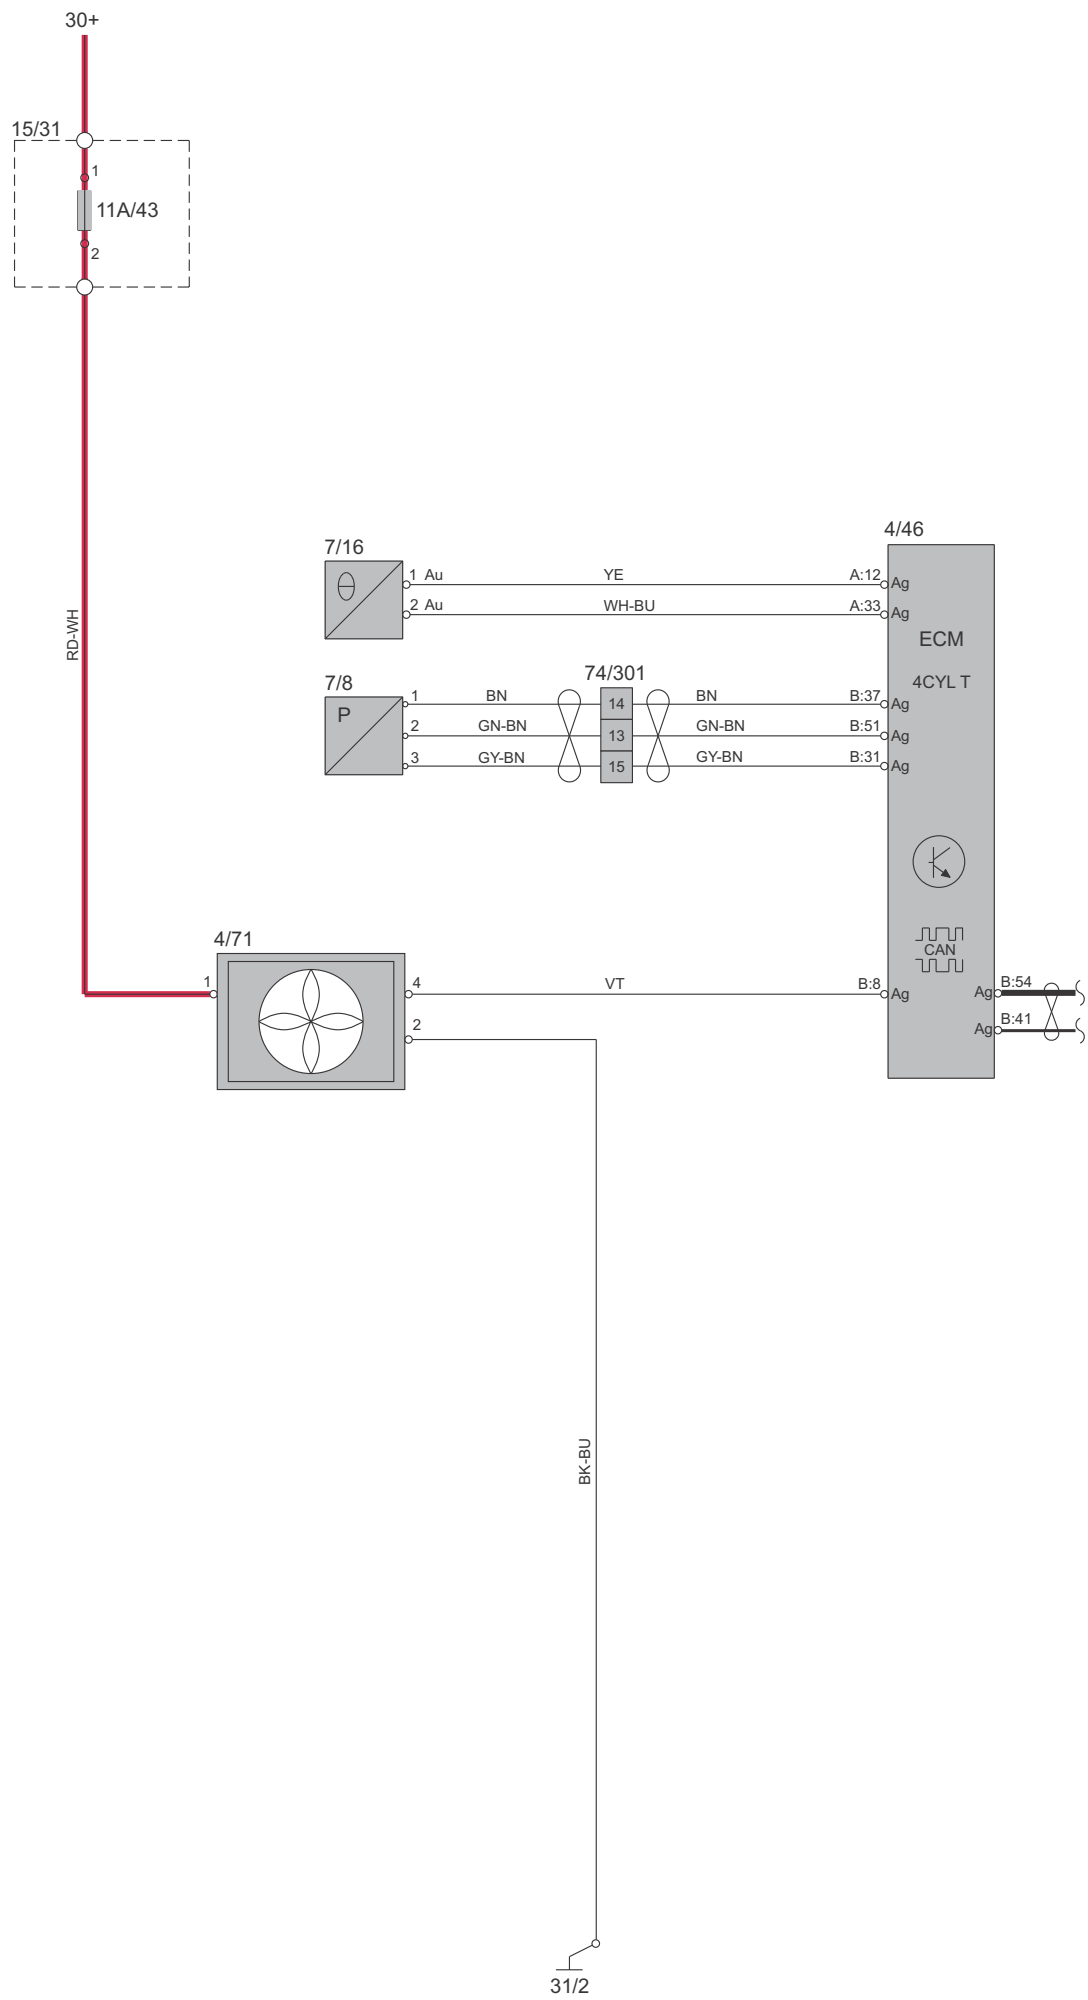


N00011

Group 26 Cooling system
Cooling fan, 4-Cyl. Diesel

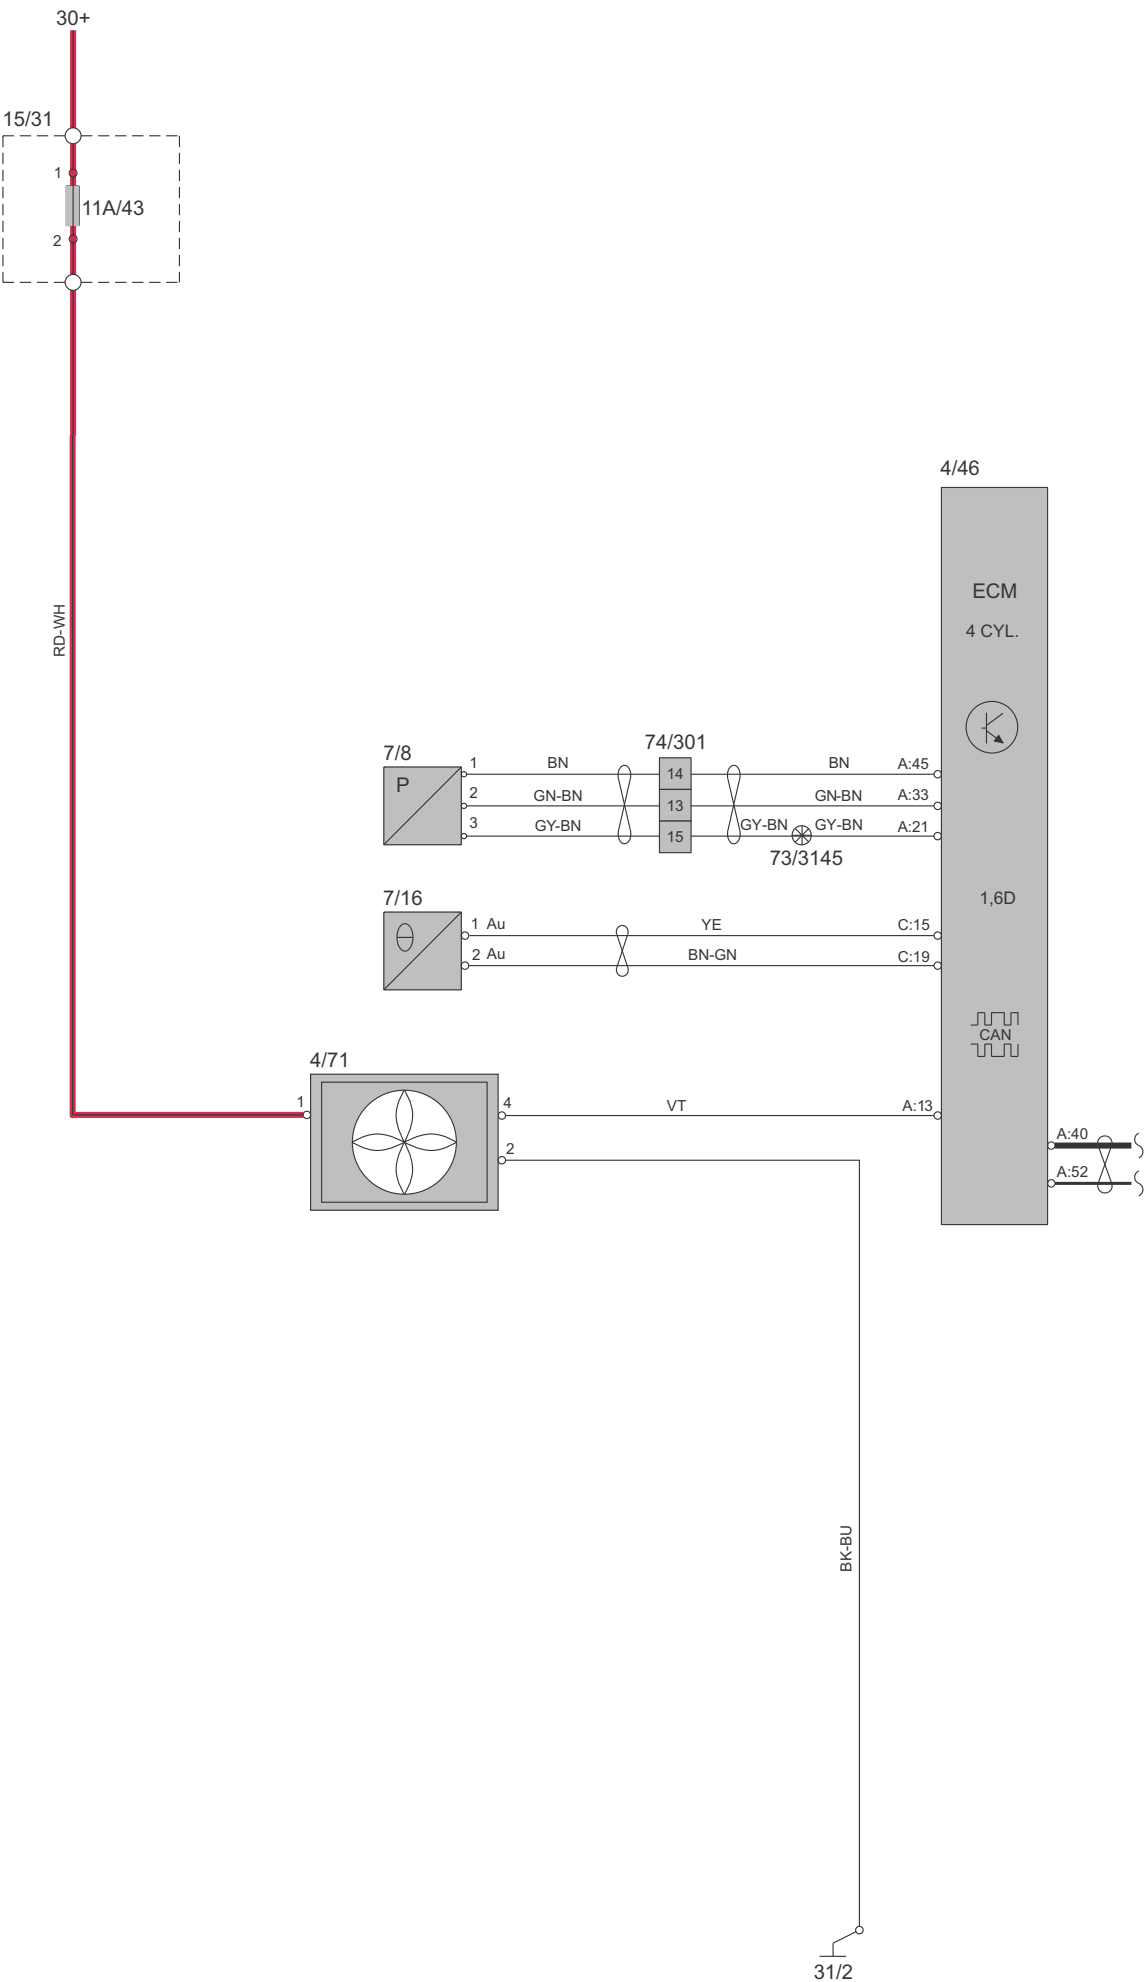


N00014

Group 26 Cooling system
Cooling fan, 5-Cyl. Diesel

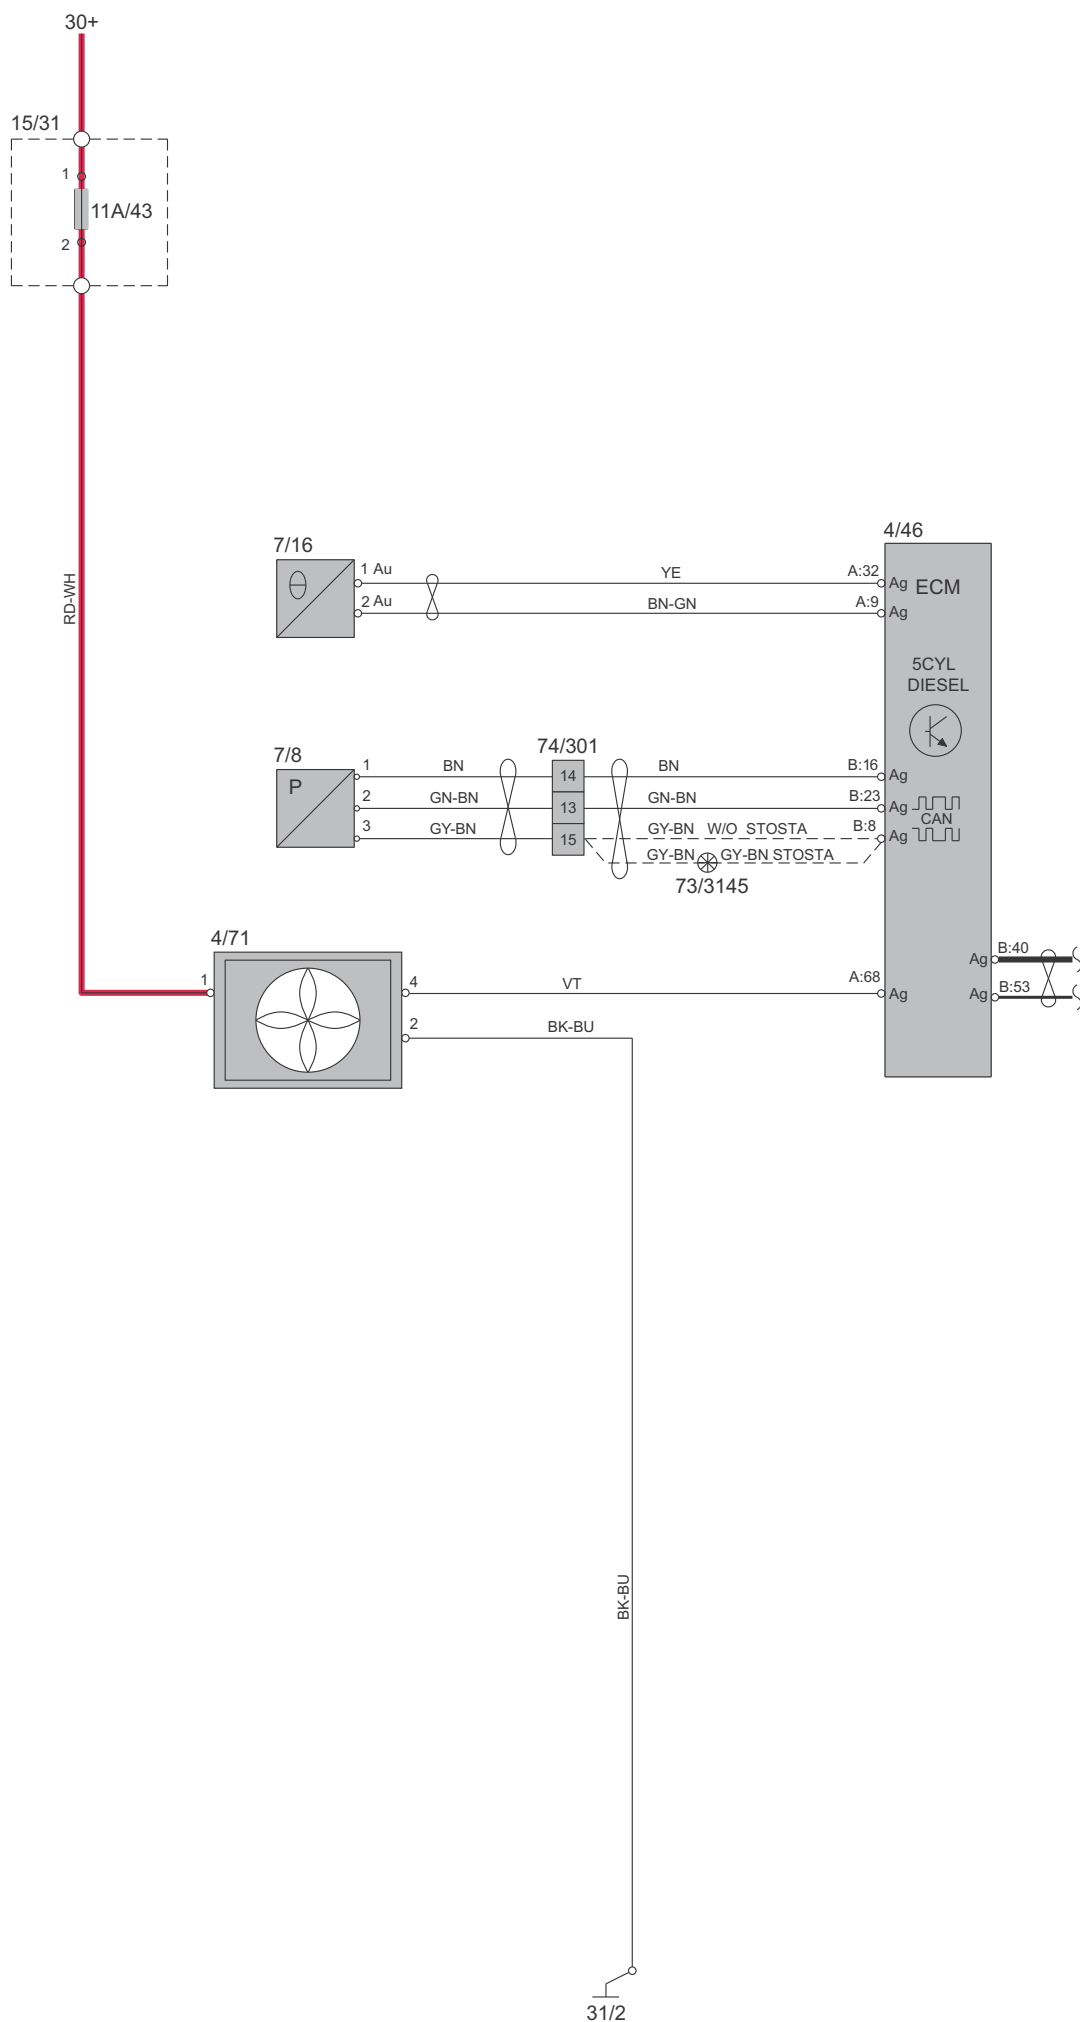


Group 26 Cooling system

Cooling fan, 5-Cyl. Turbo & 6-Cyl.

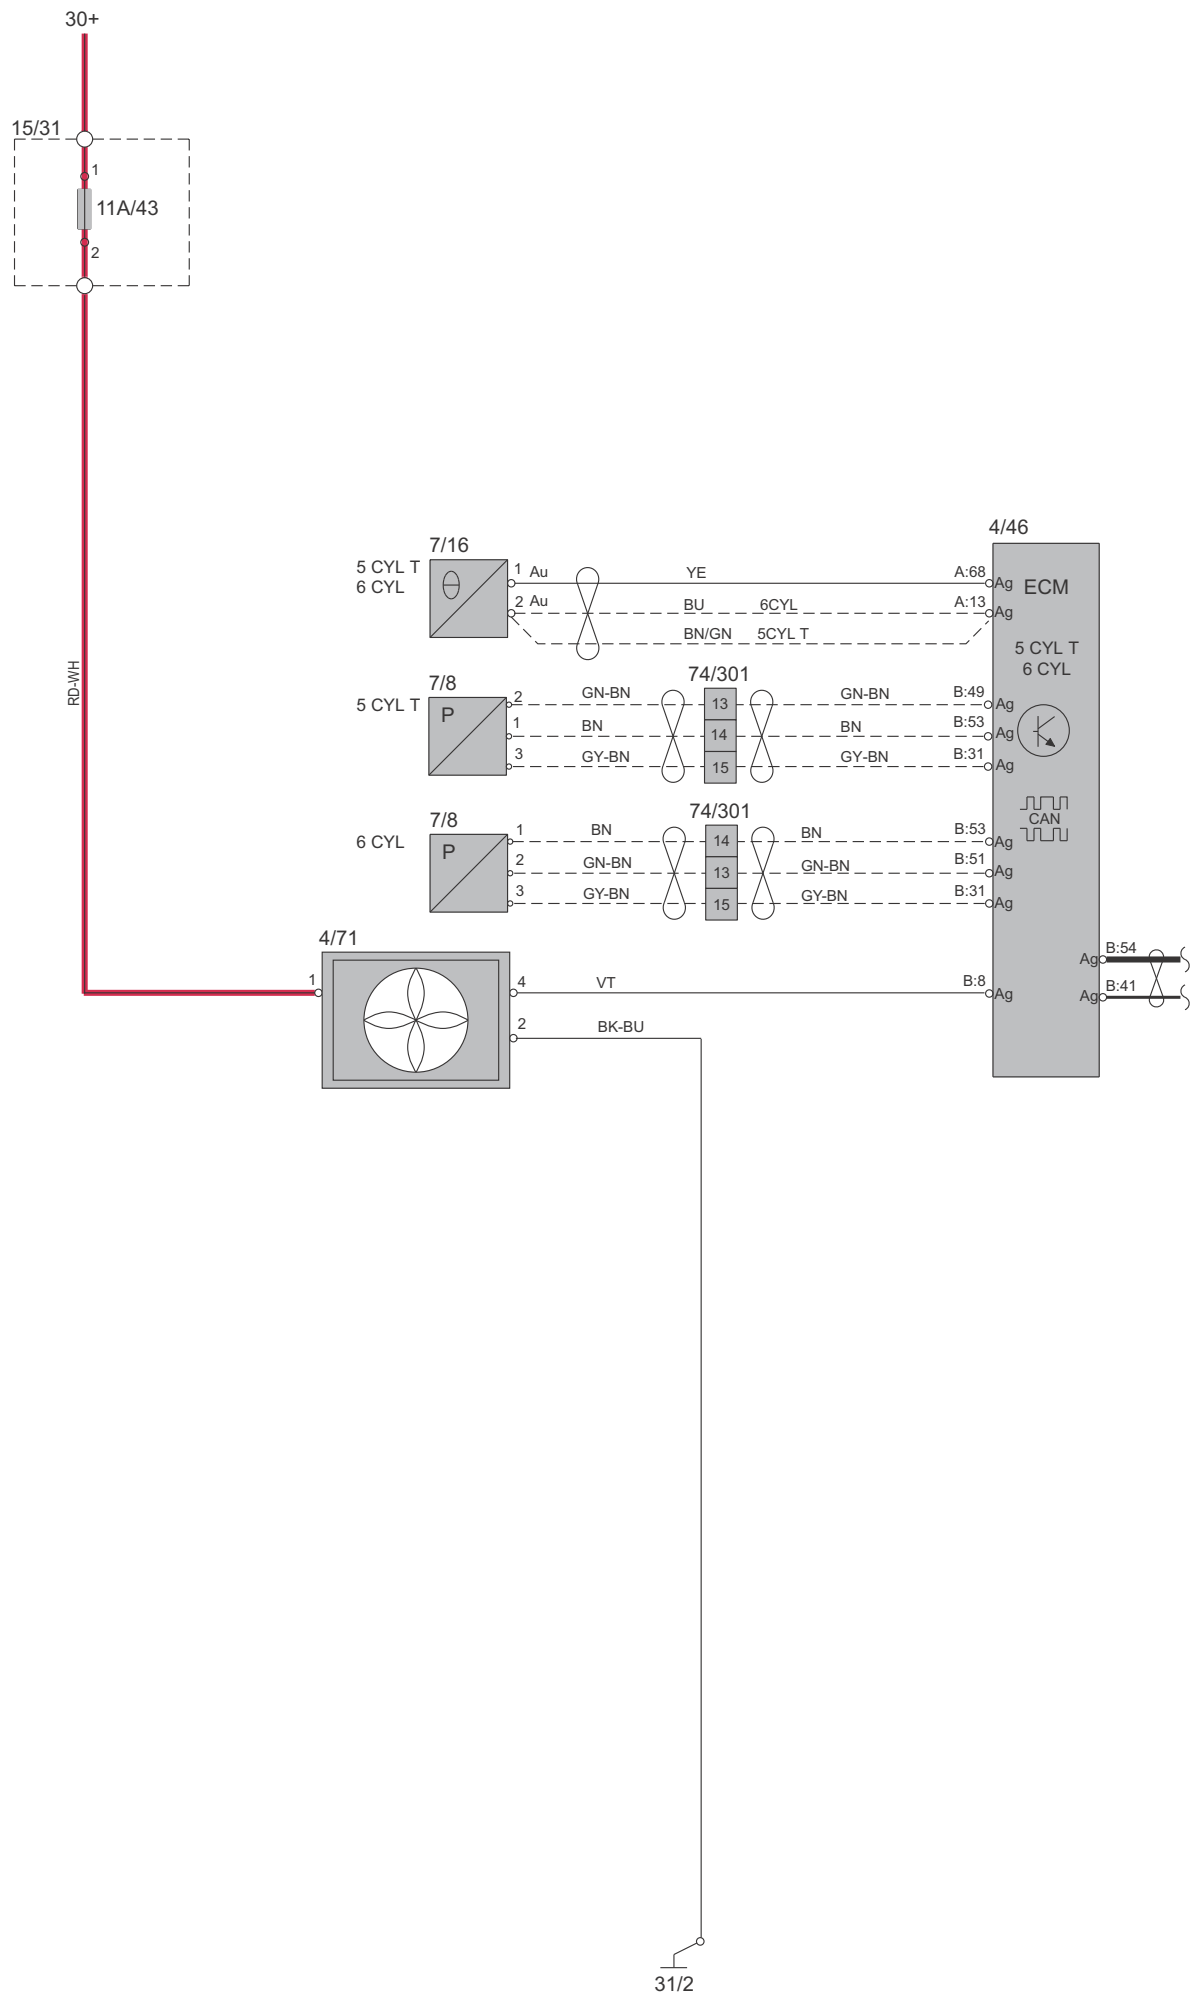


Group 27 Engine controls
Cruise control 4-Cyl. Turbo 1.6l

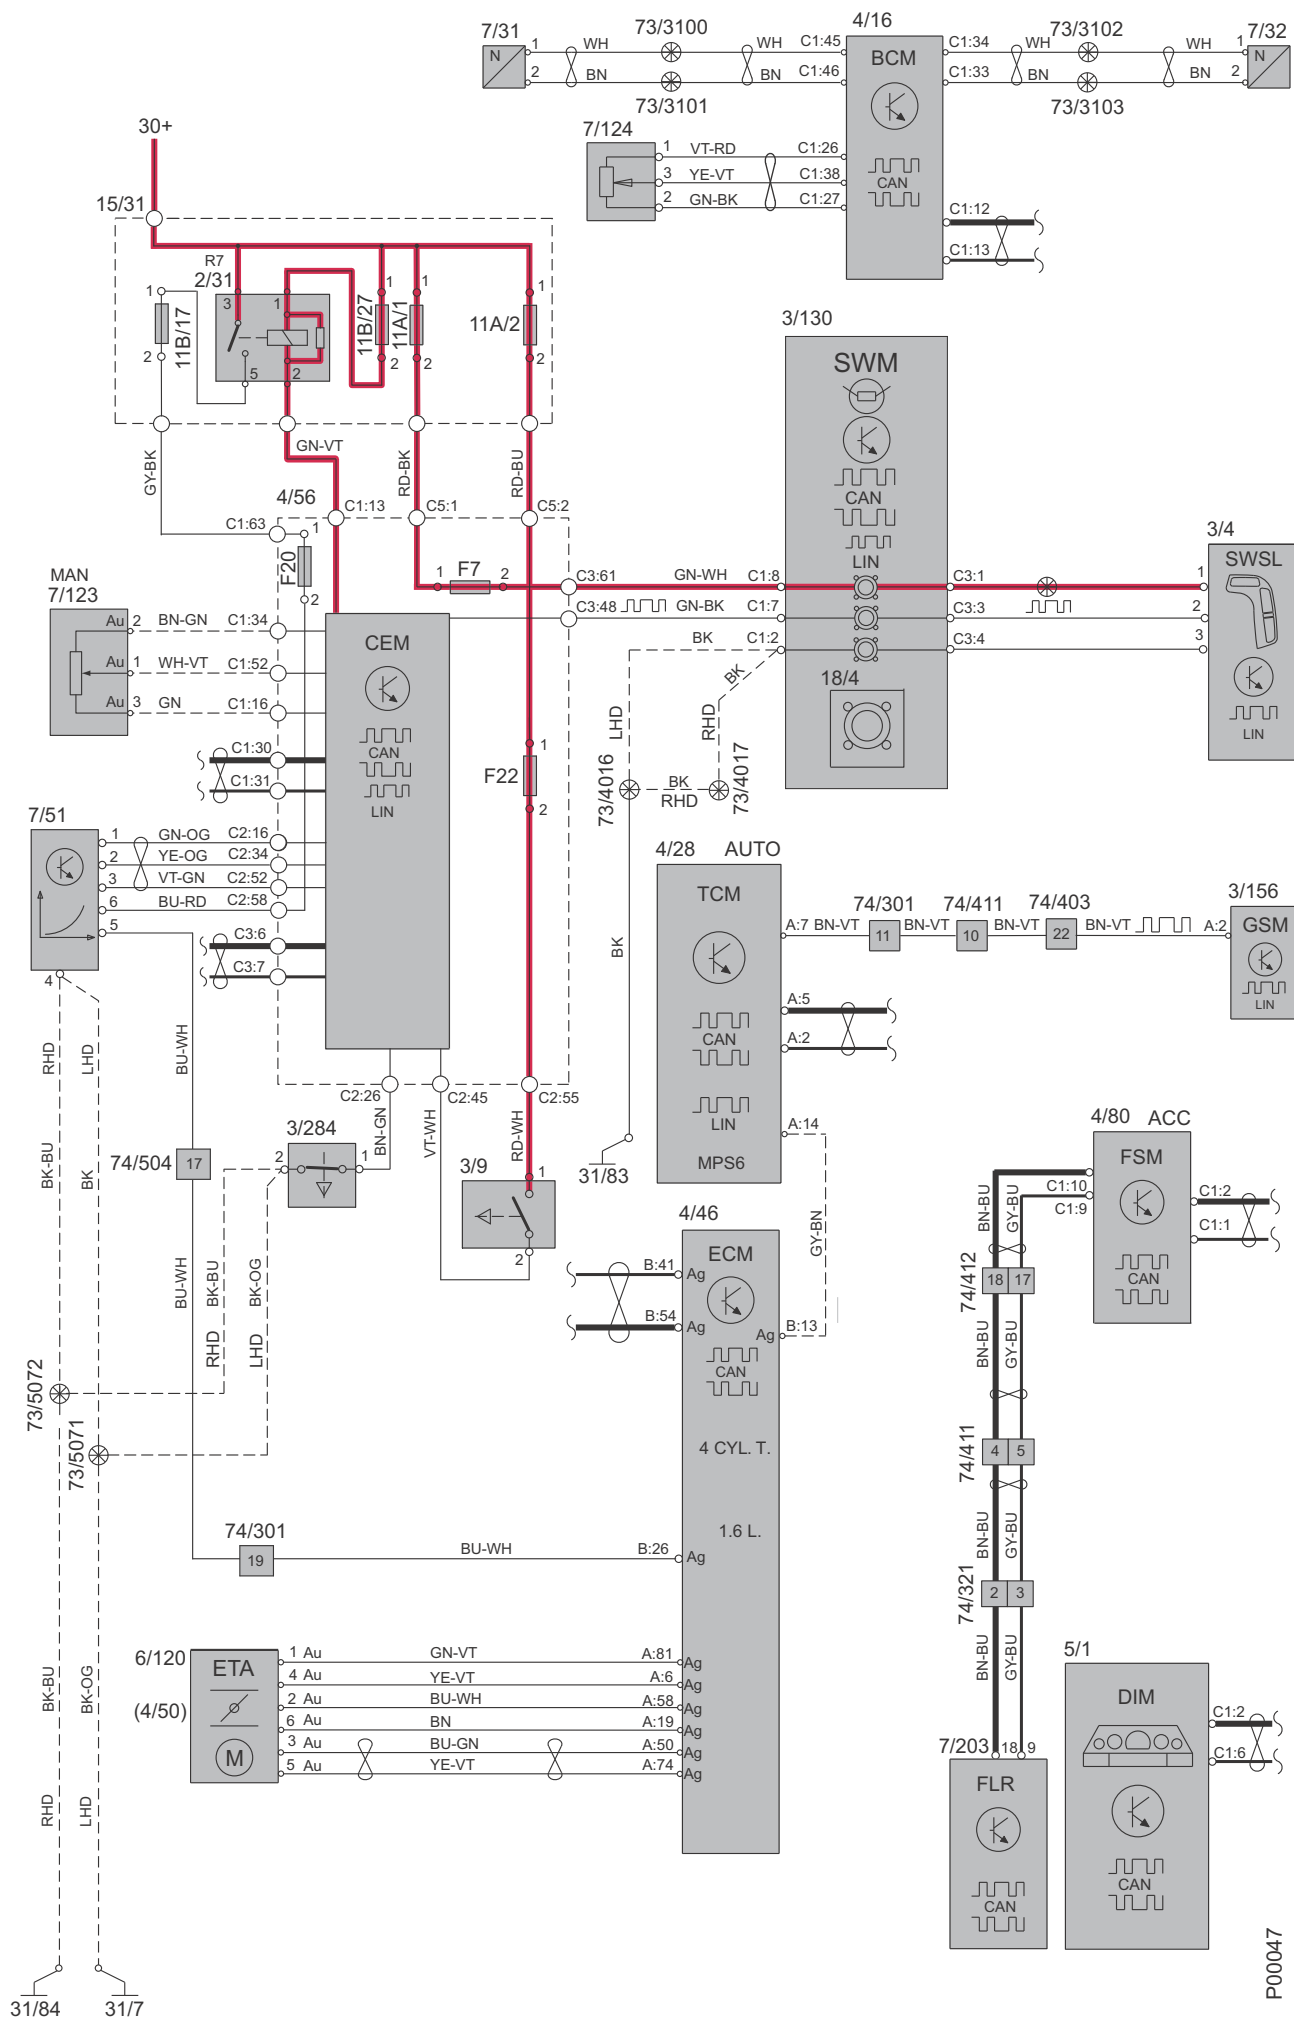

Group 27 Engine controls


Cruise control 4-Cyl. Turbo 2.0l

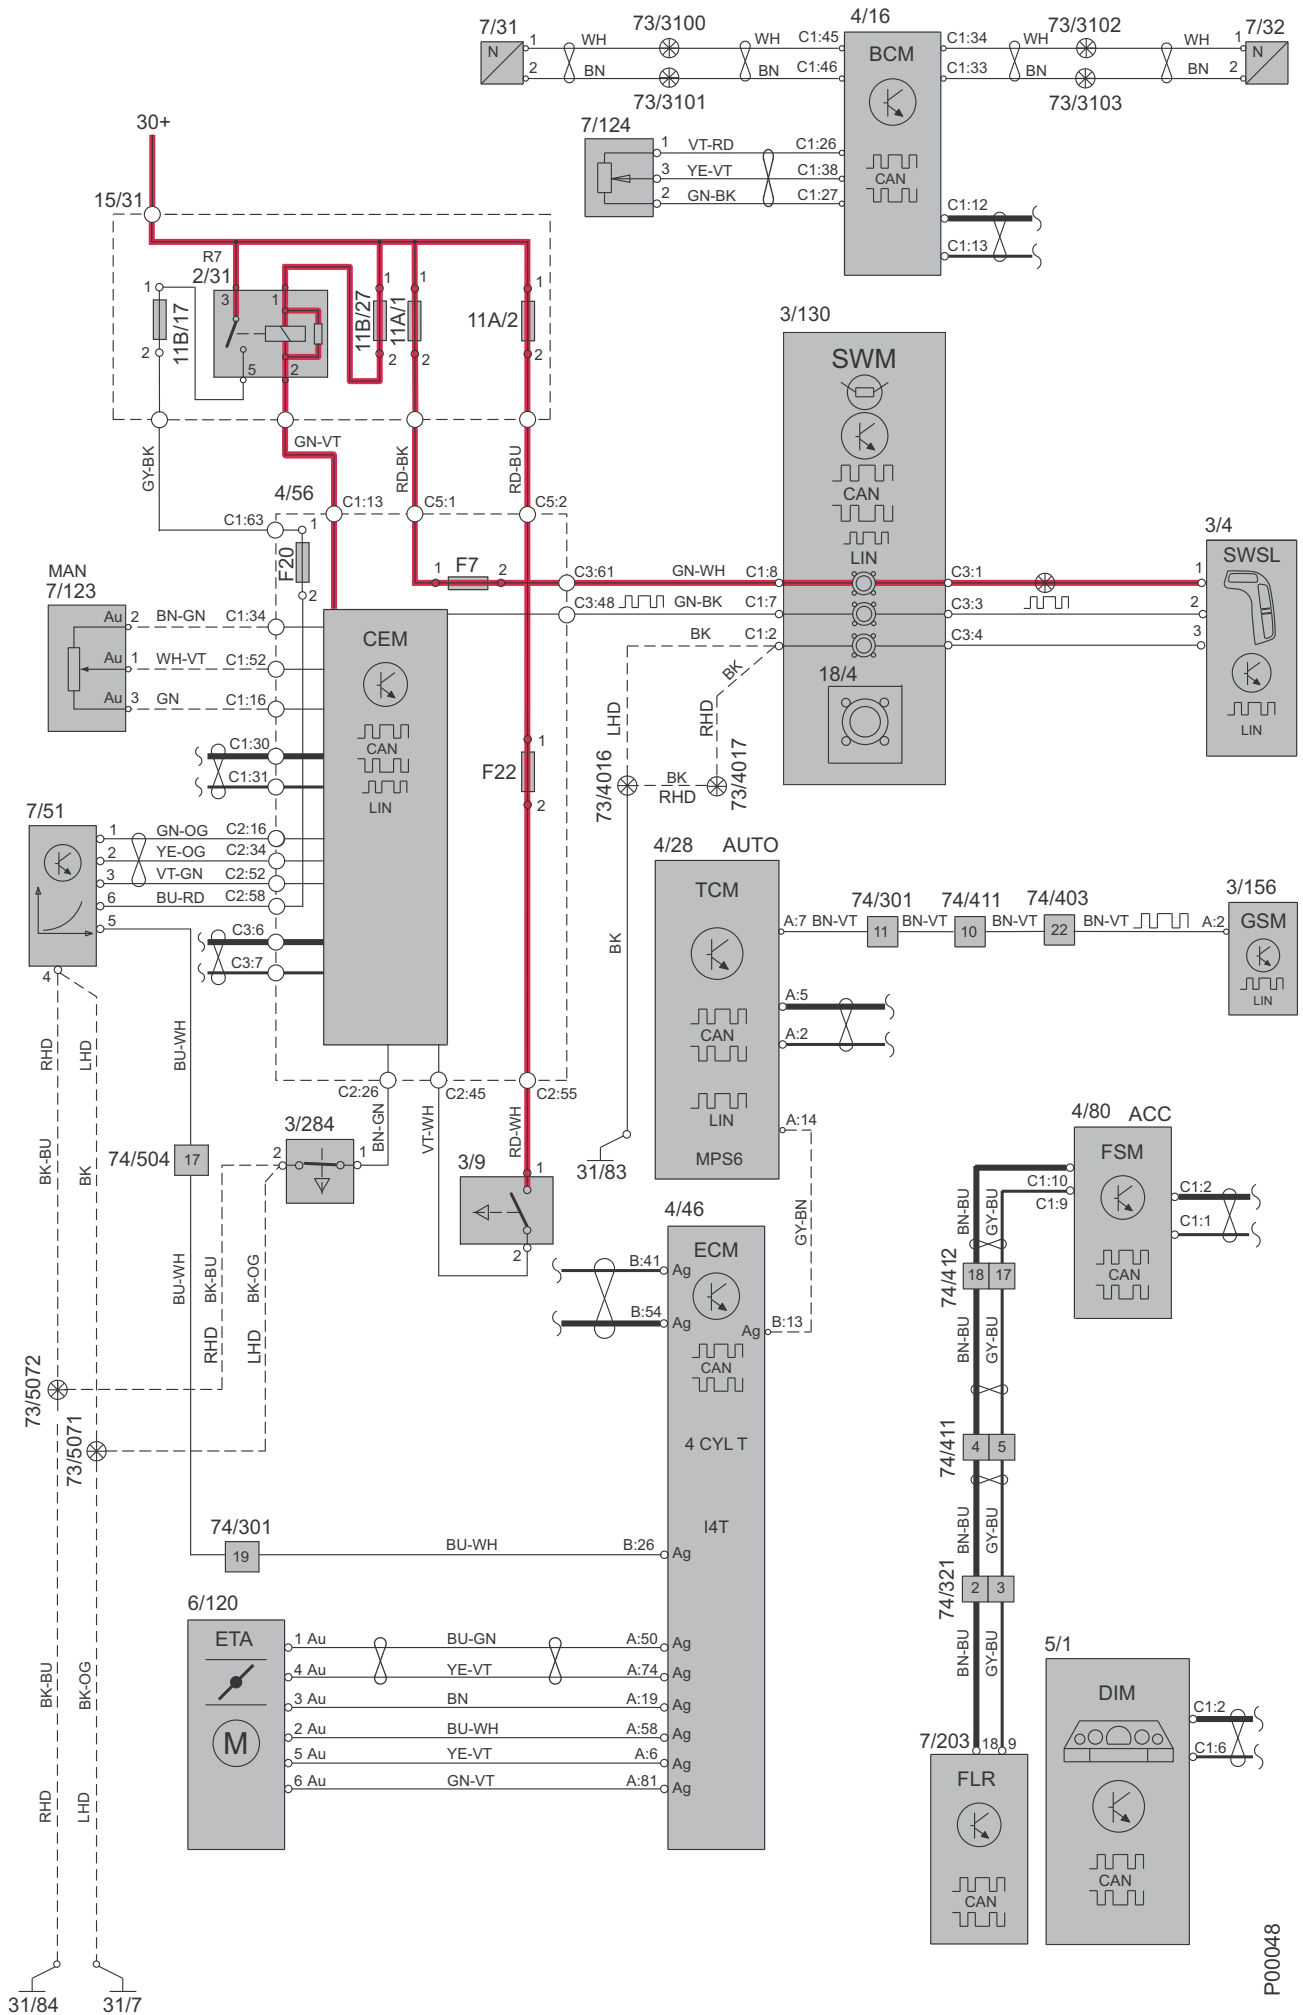

P00048

Group 27 Engine controls


Cruise control 4-Cyl. Diesel

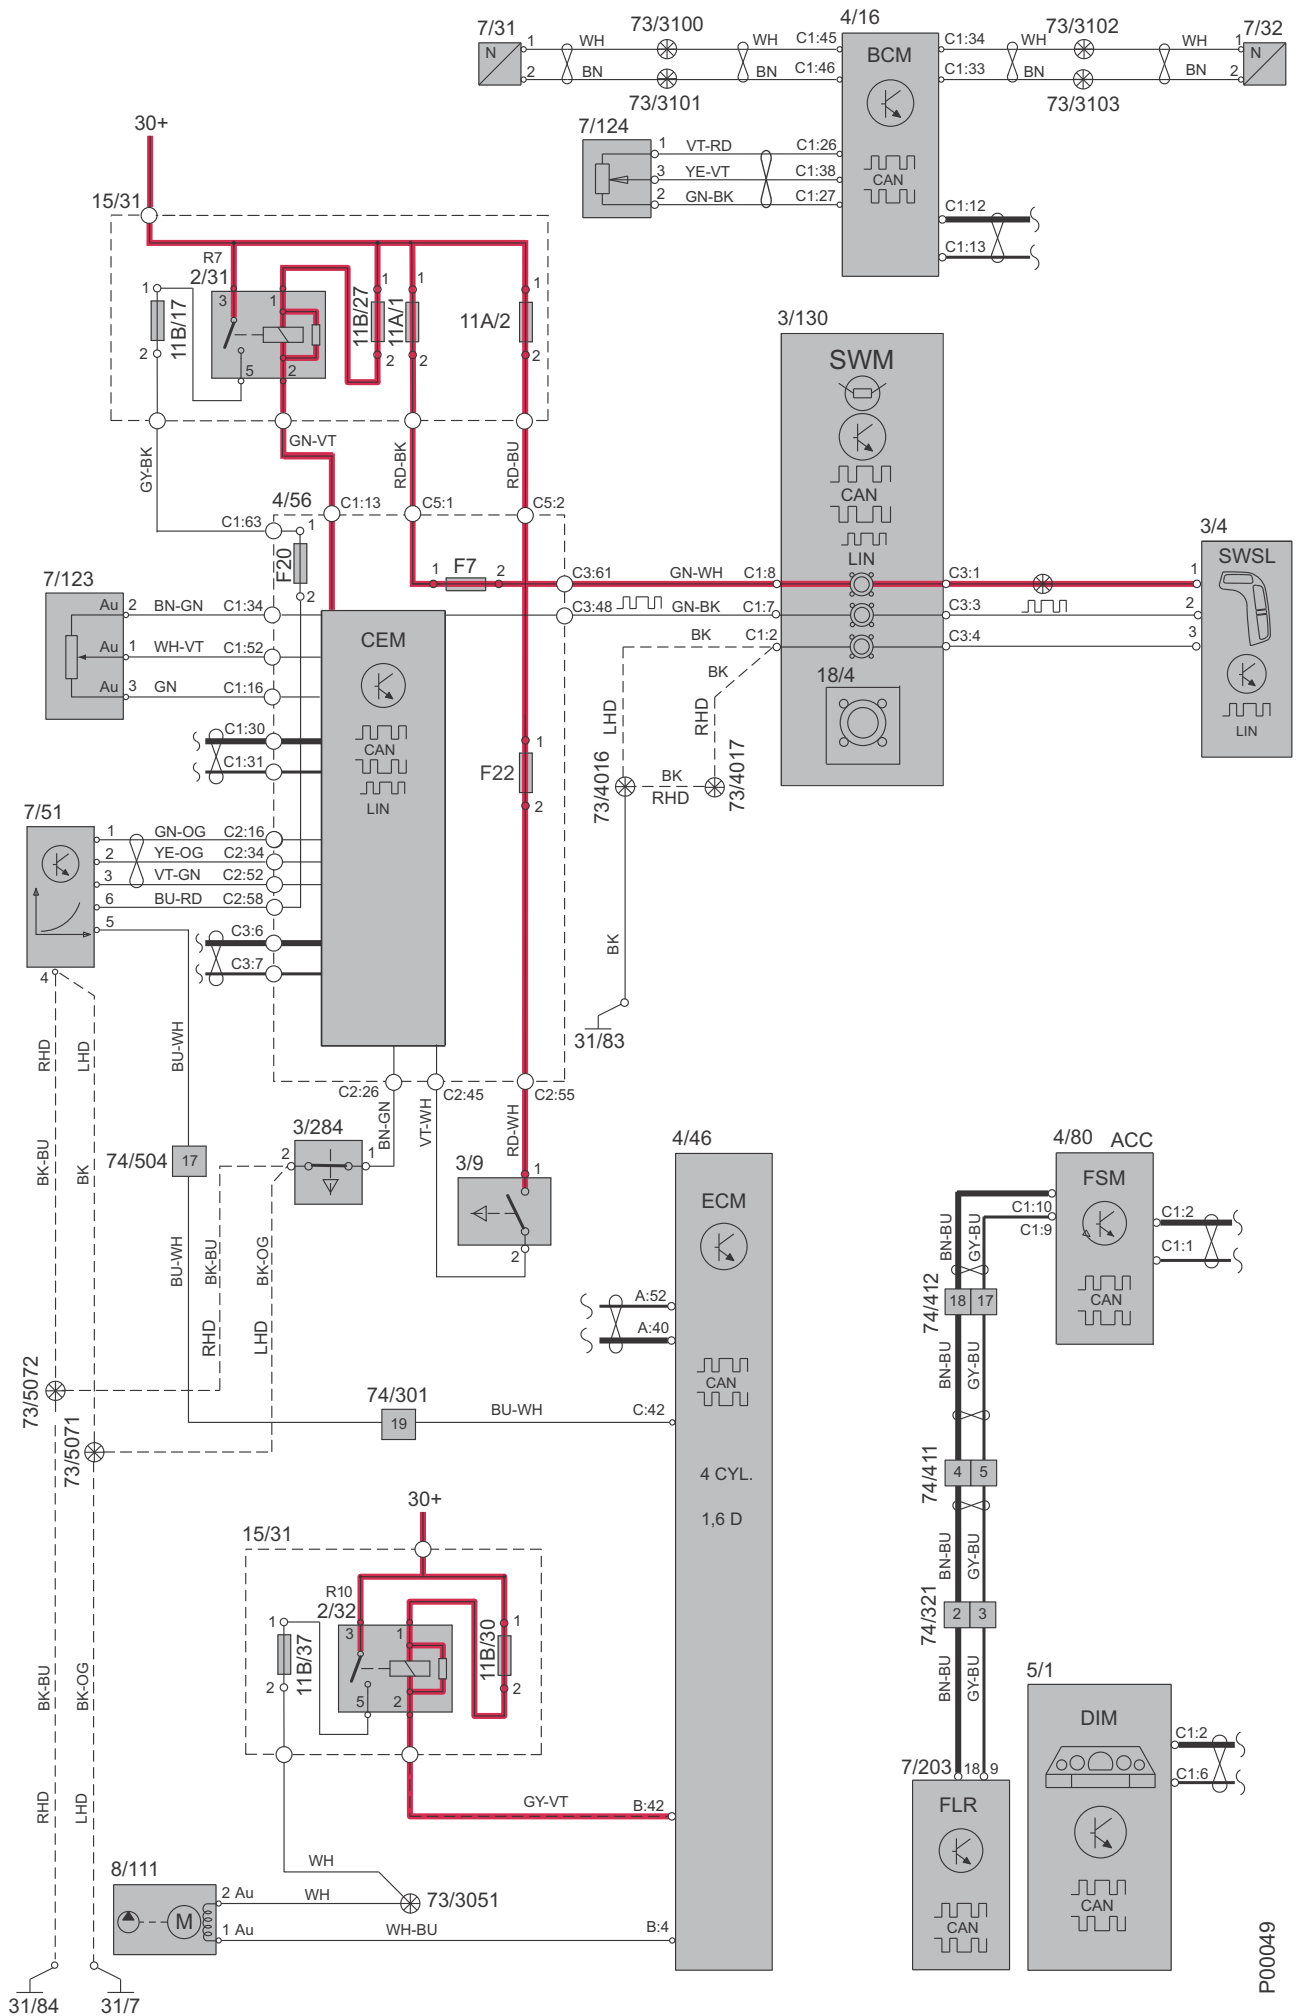


P00049

Group 27 Engine controls

Cruise control 5-Cyl. Diesel

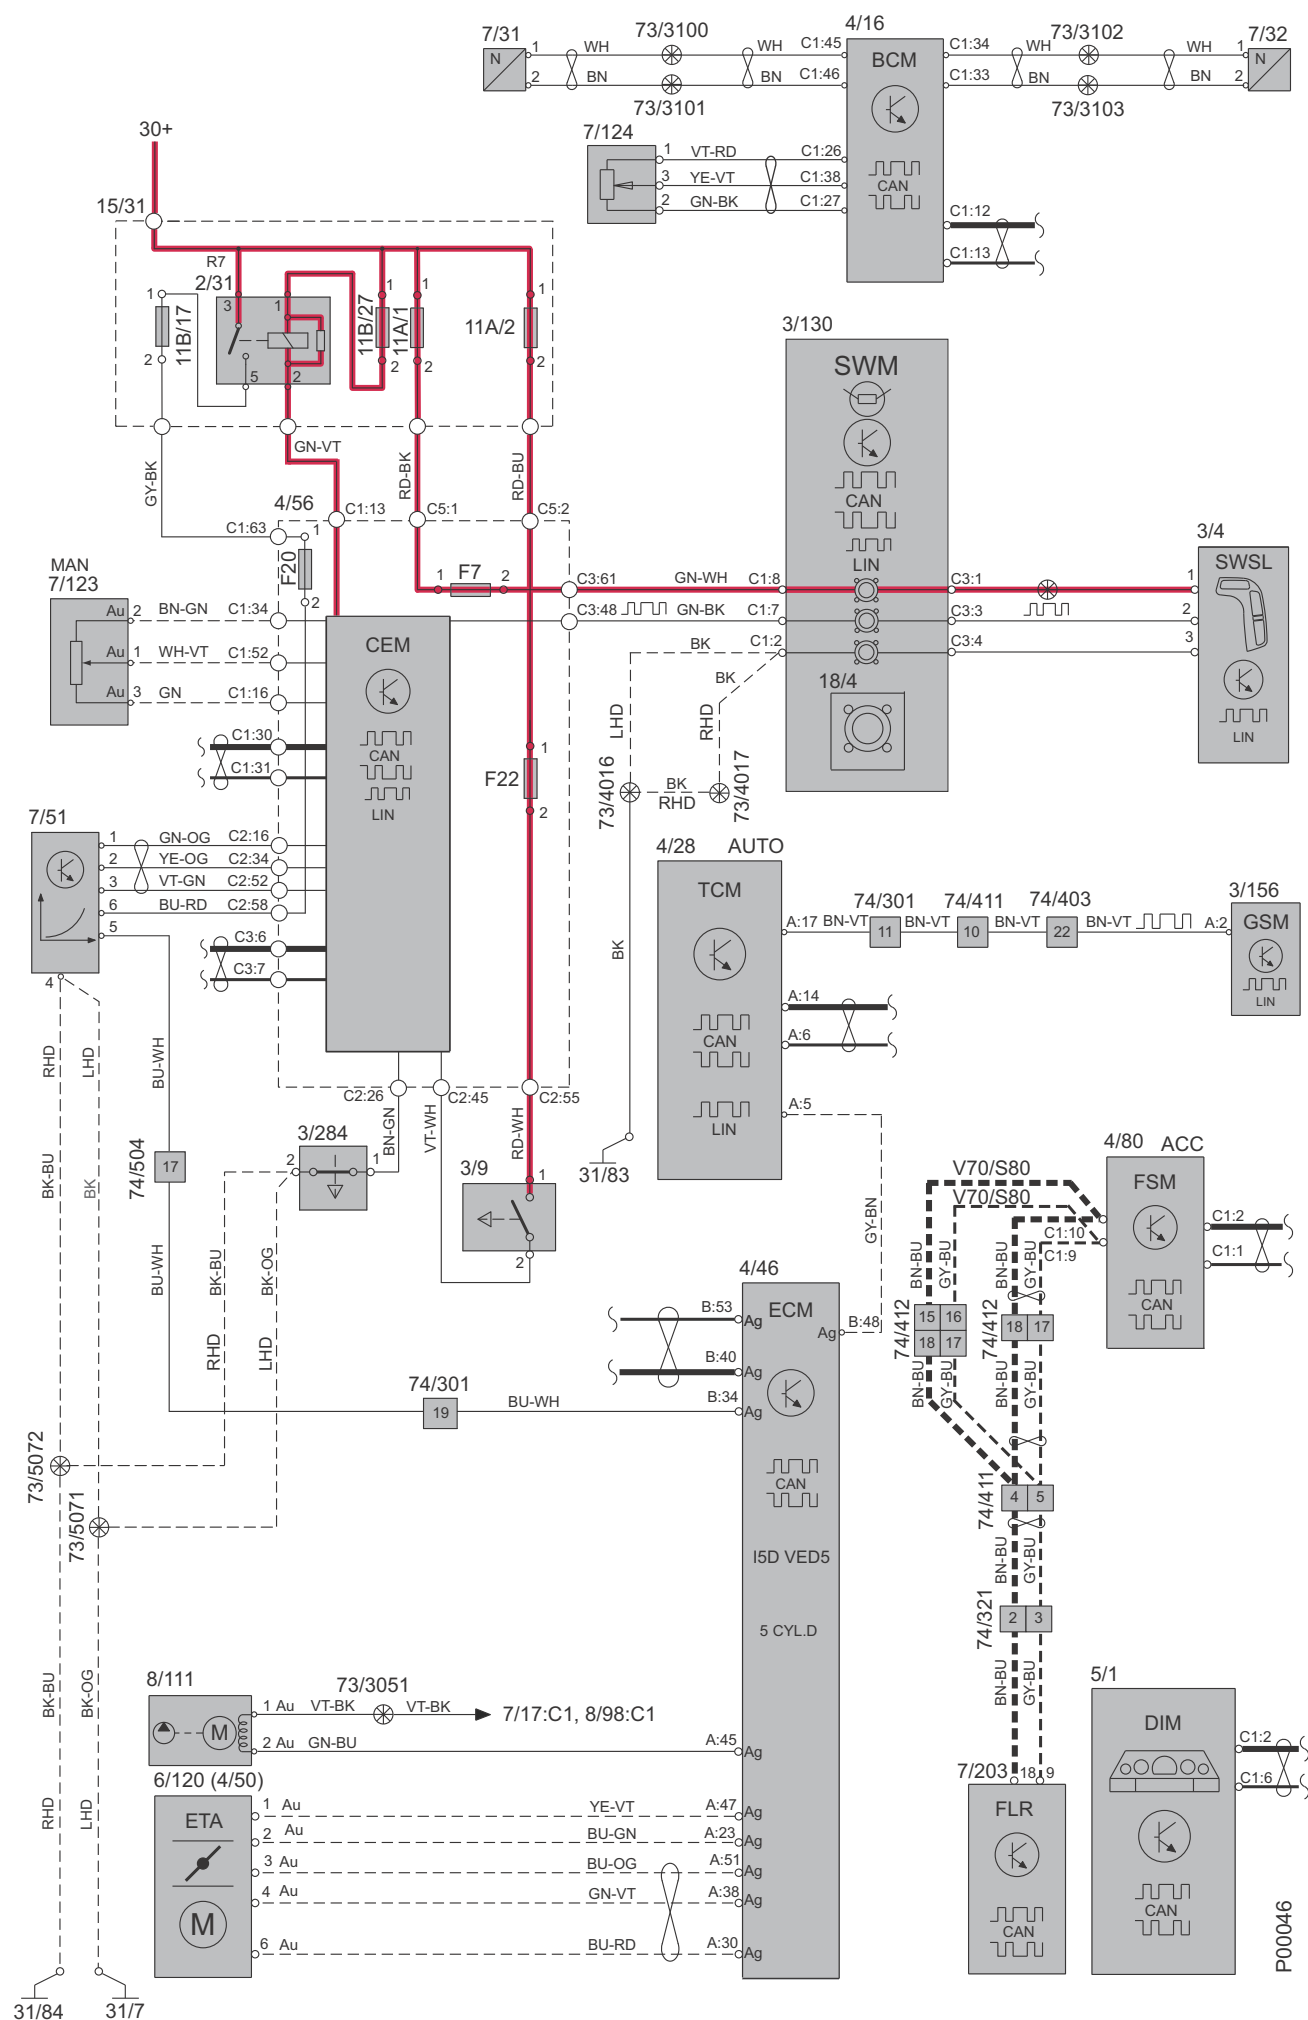


Group 27 Engine controls **Cruise control 5-Cyl. Turbo & 6-Cyl.**

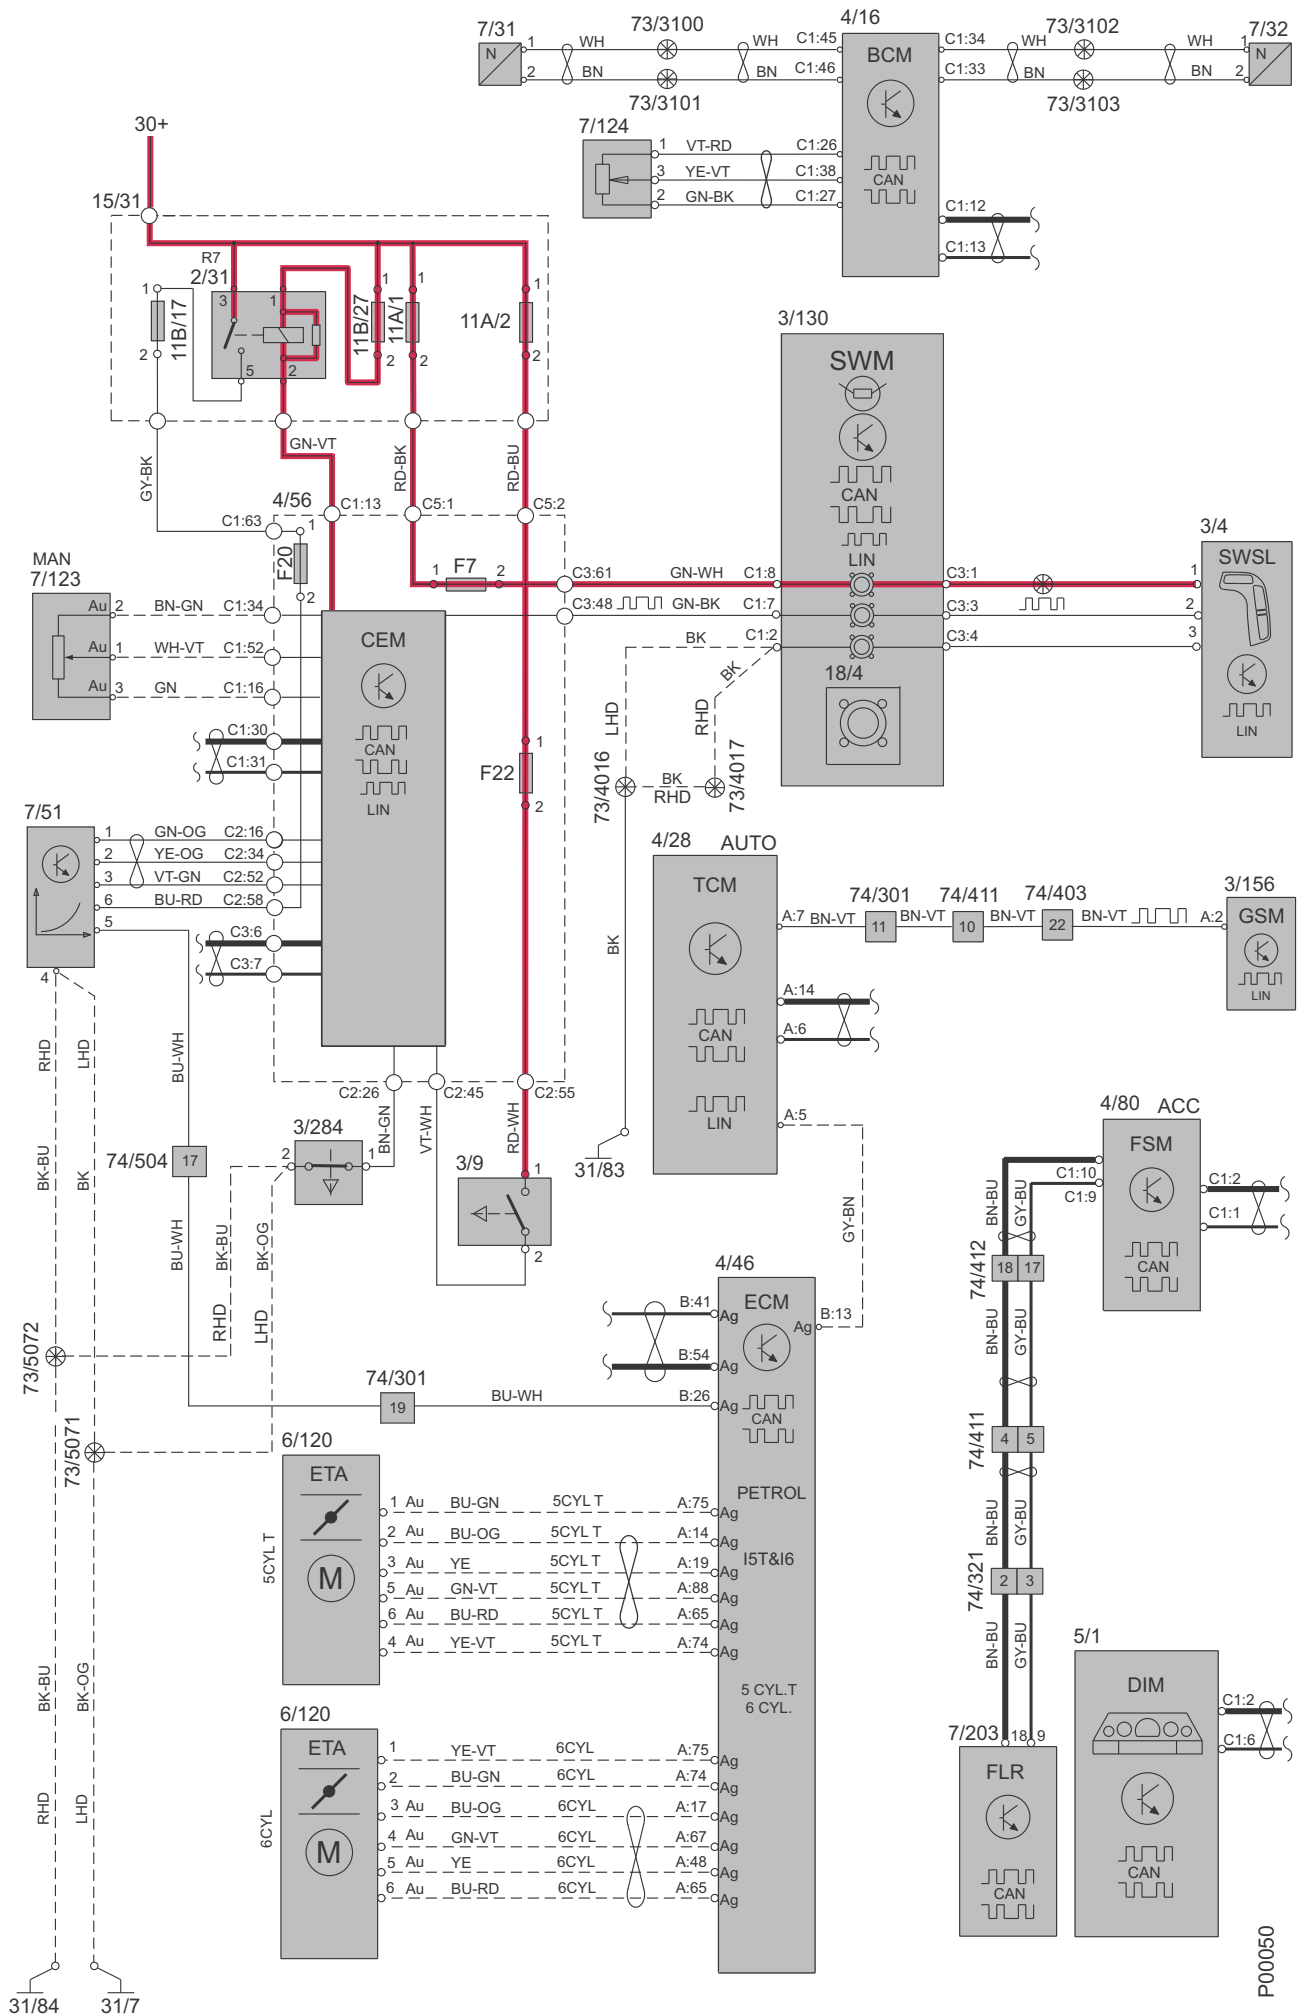

Group 27 Engine controls


Start-/Stop function 4-Cyl. 1.6l Turbo

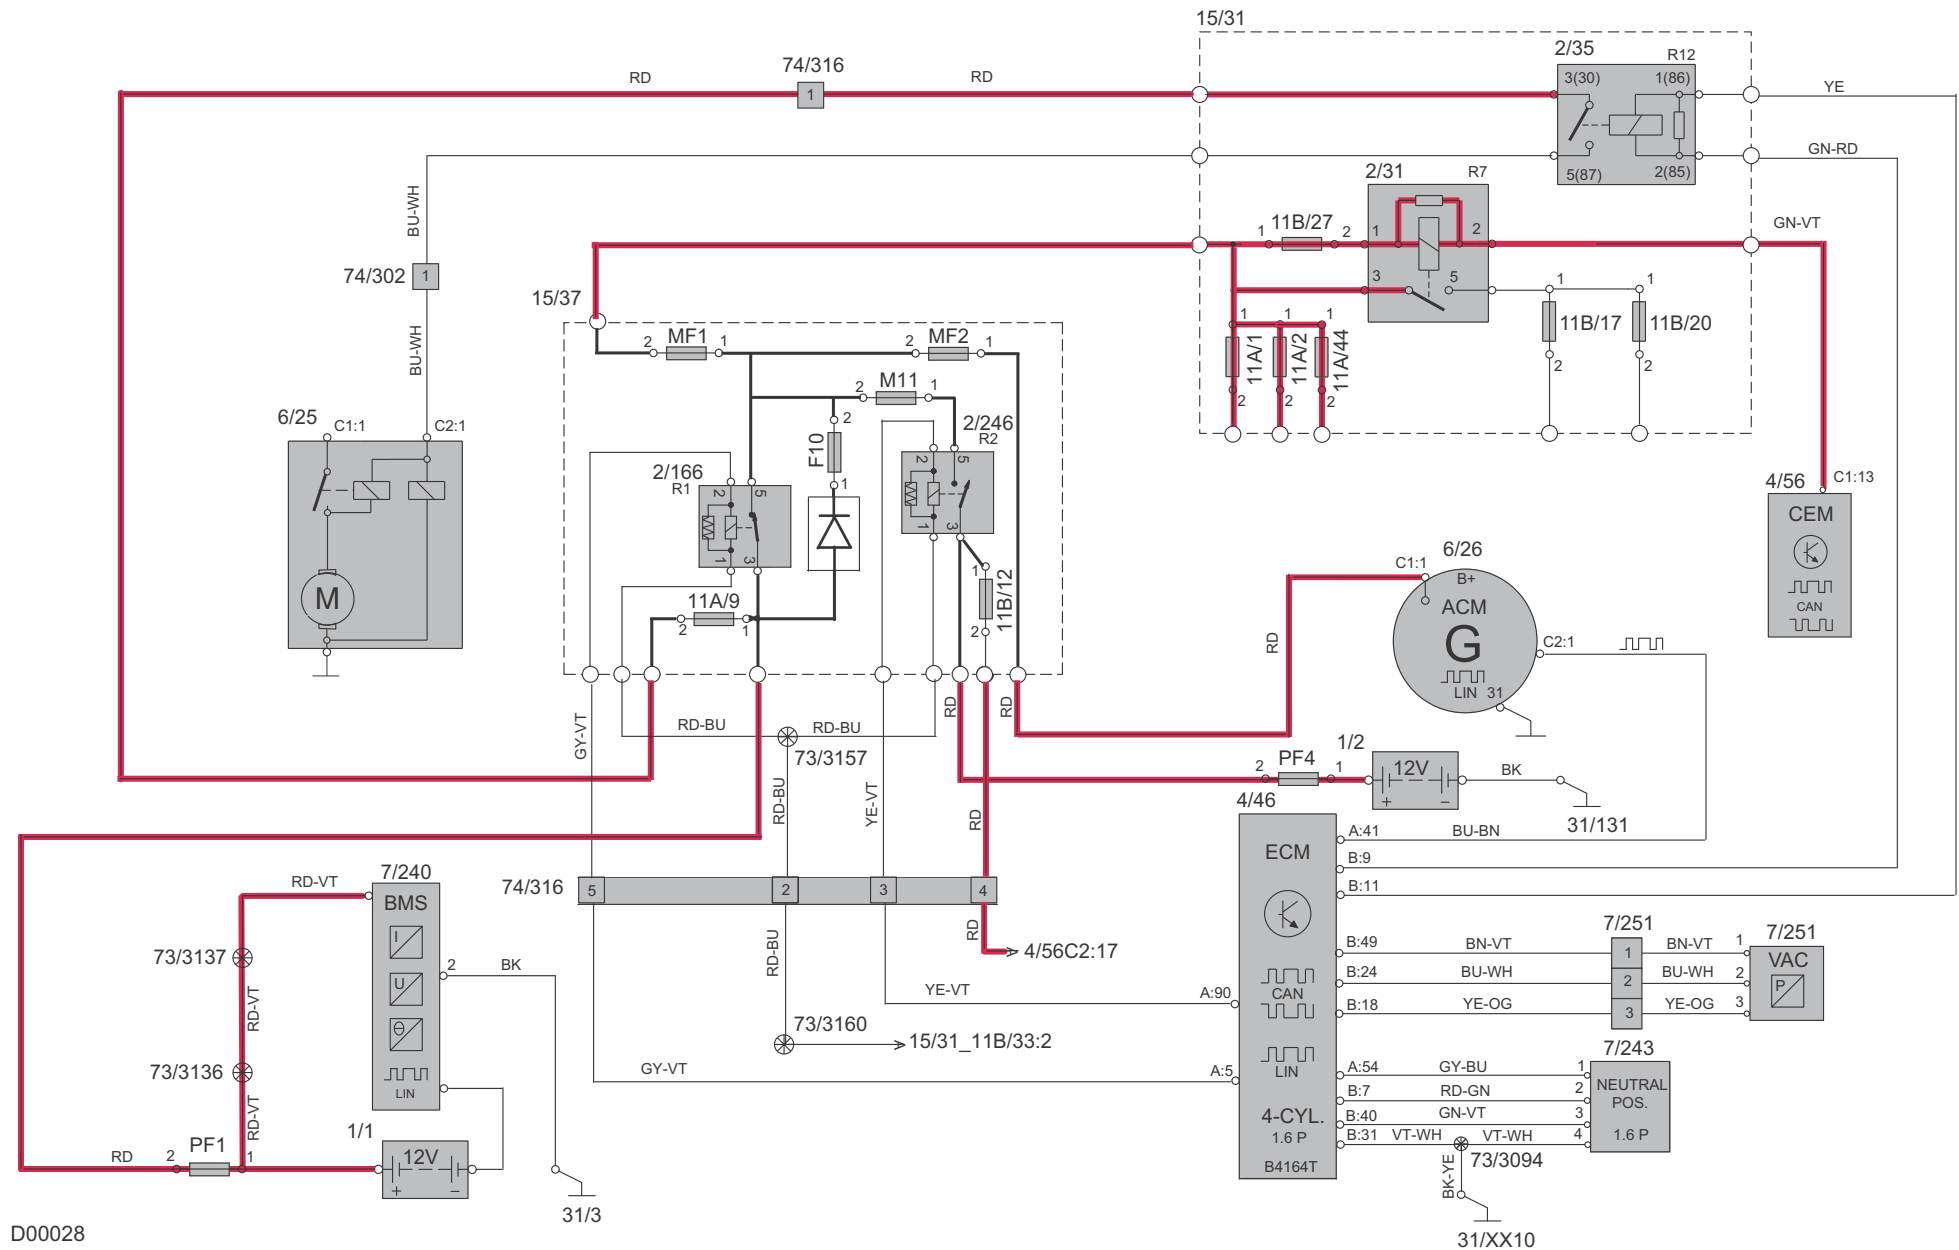

D00028

TP39255202 S60 (11-)


Group 27 Engine controls
Start-/Stop function 4-Cyl. 1.6l Diesel DV6C

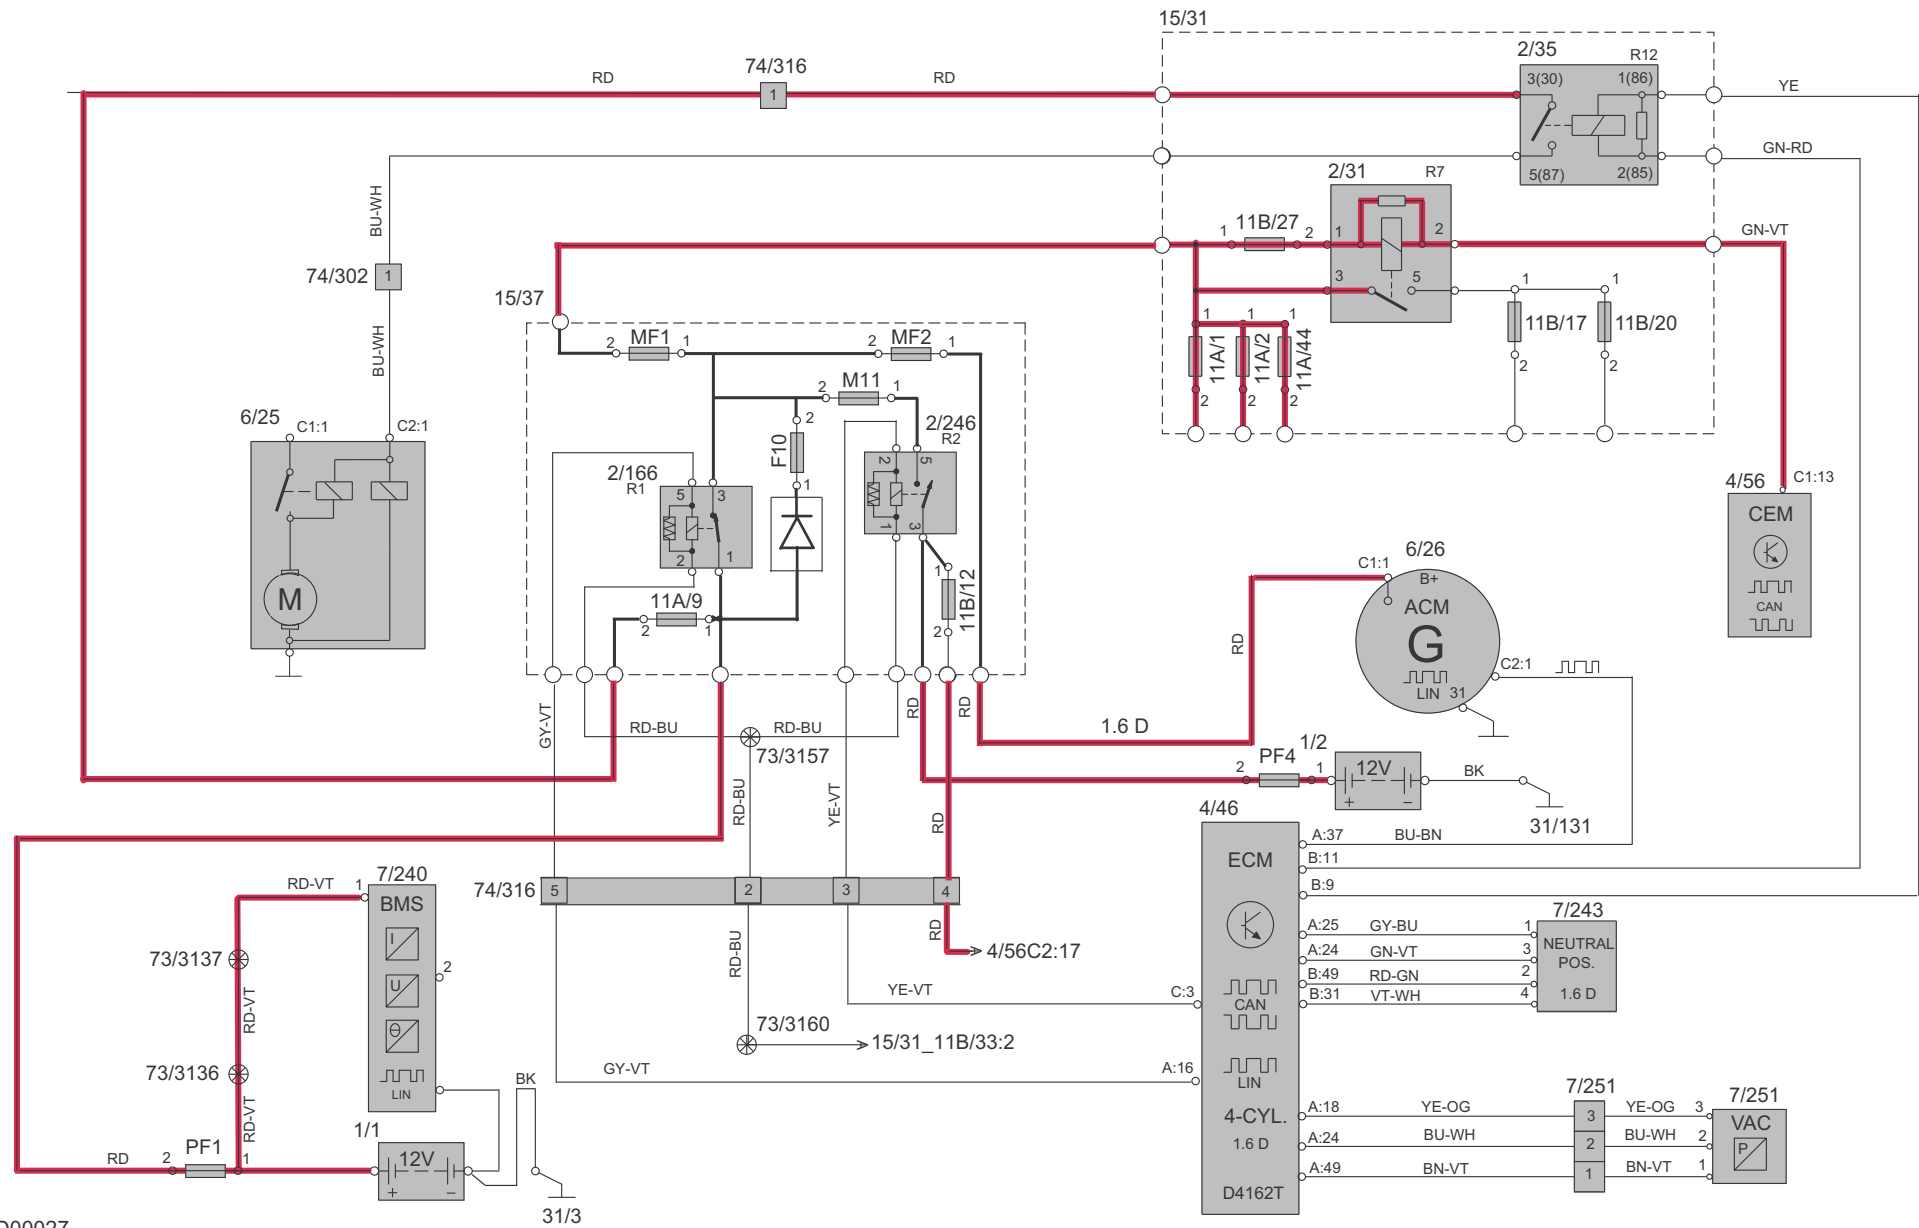

D00027

Group 27 Engine controls


Start-/Stop function 5-Cyl. Diesel VED5

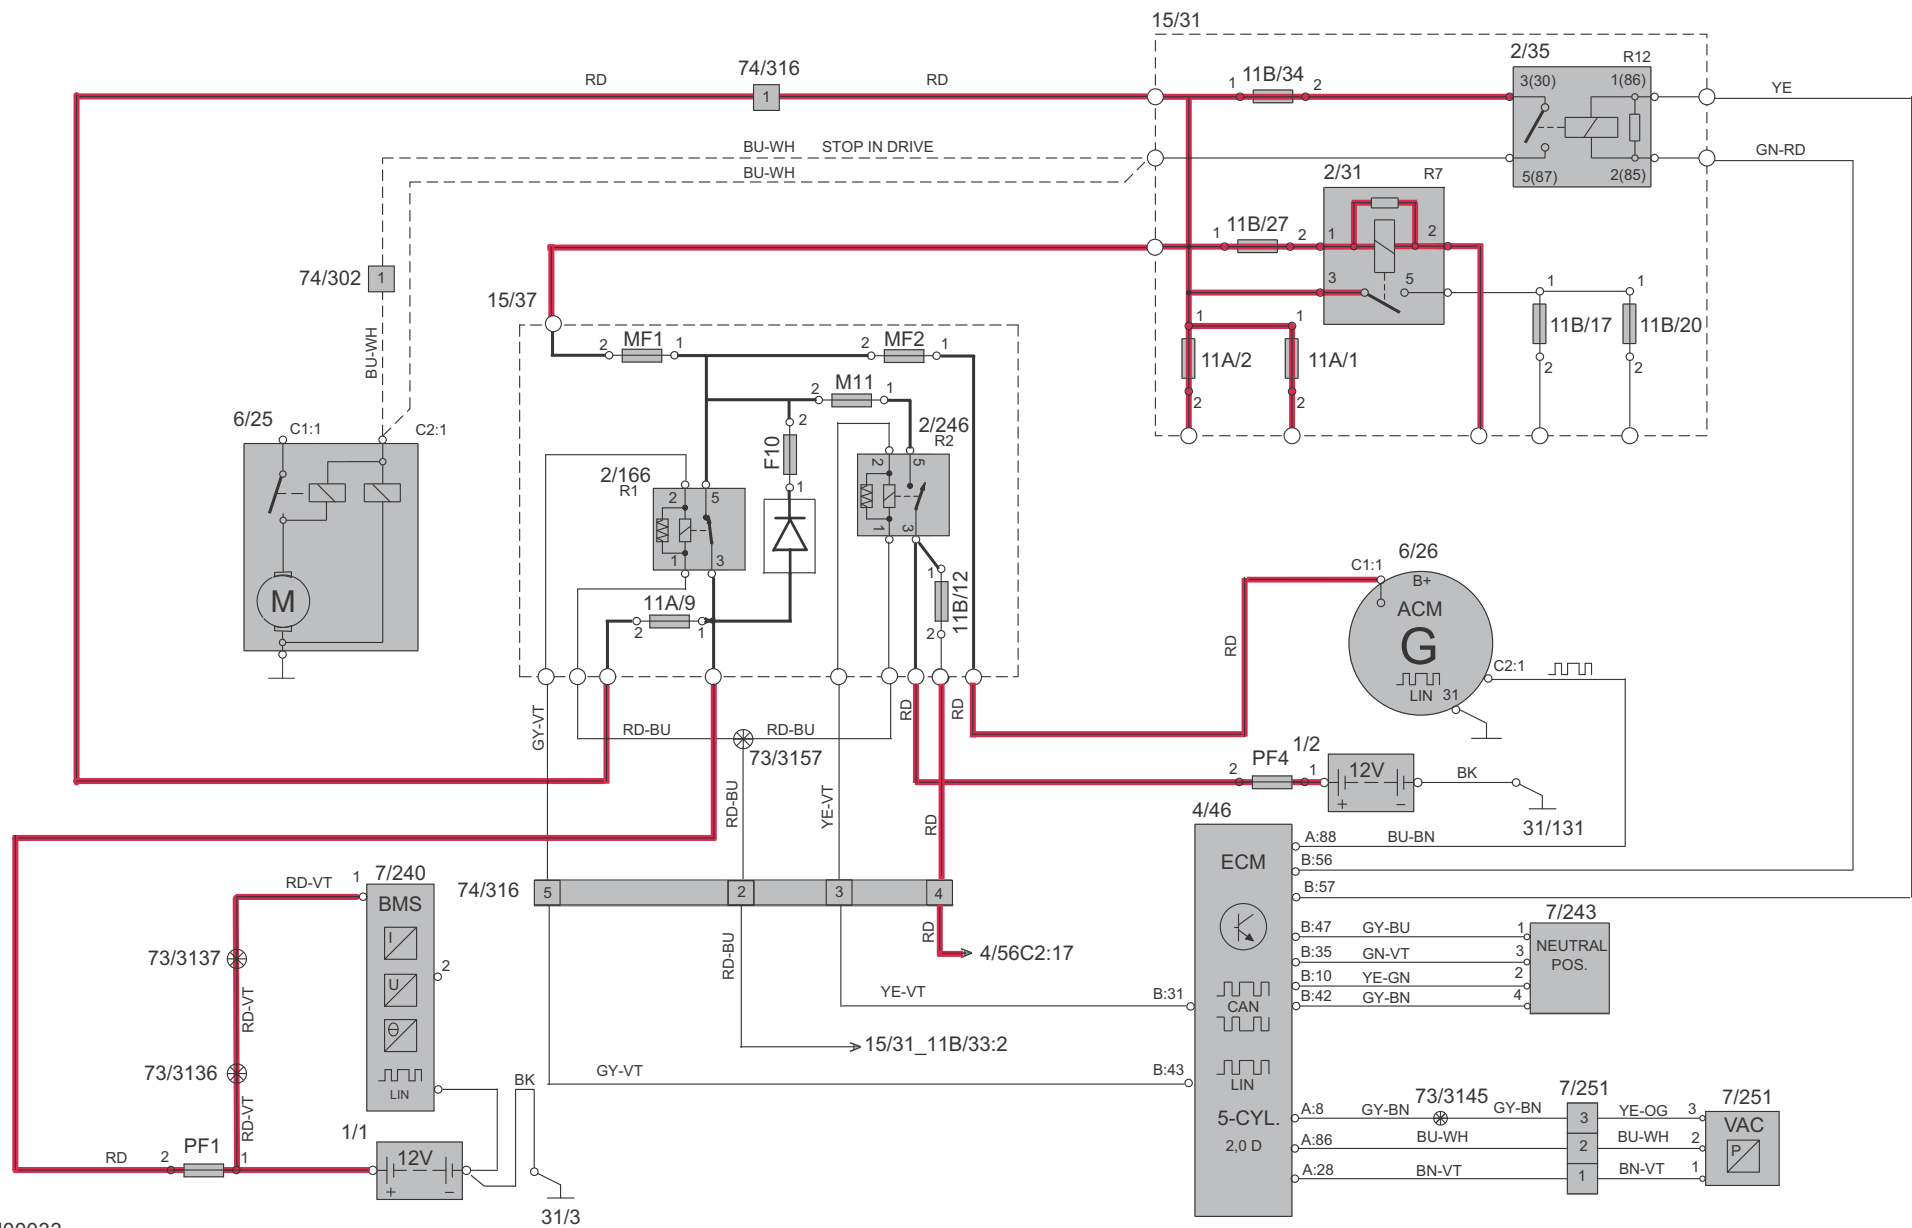

N00033


Group 28 Ignition and control system

Engine management system 4-Cyl. 1.6l Turbo 1:2

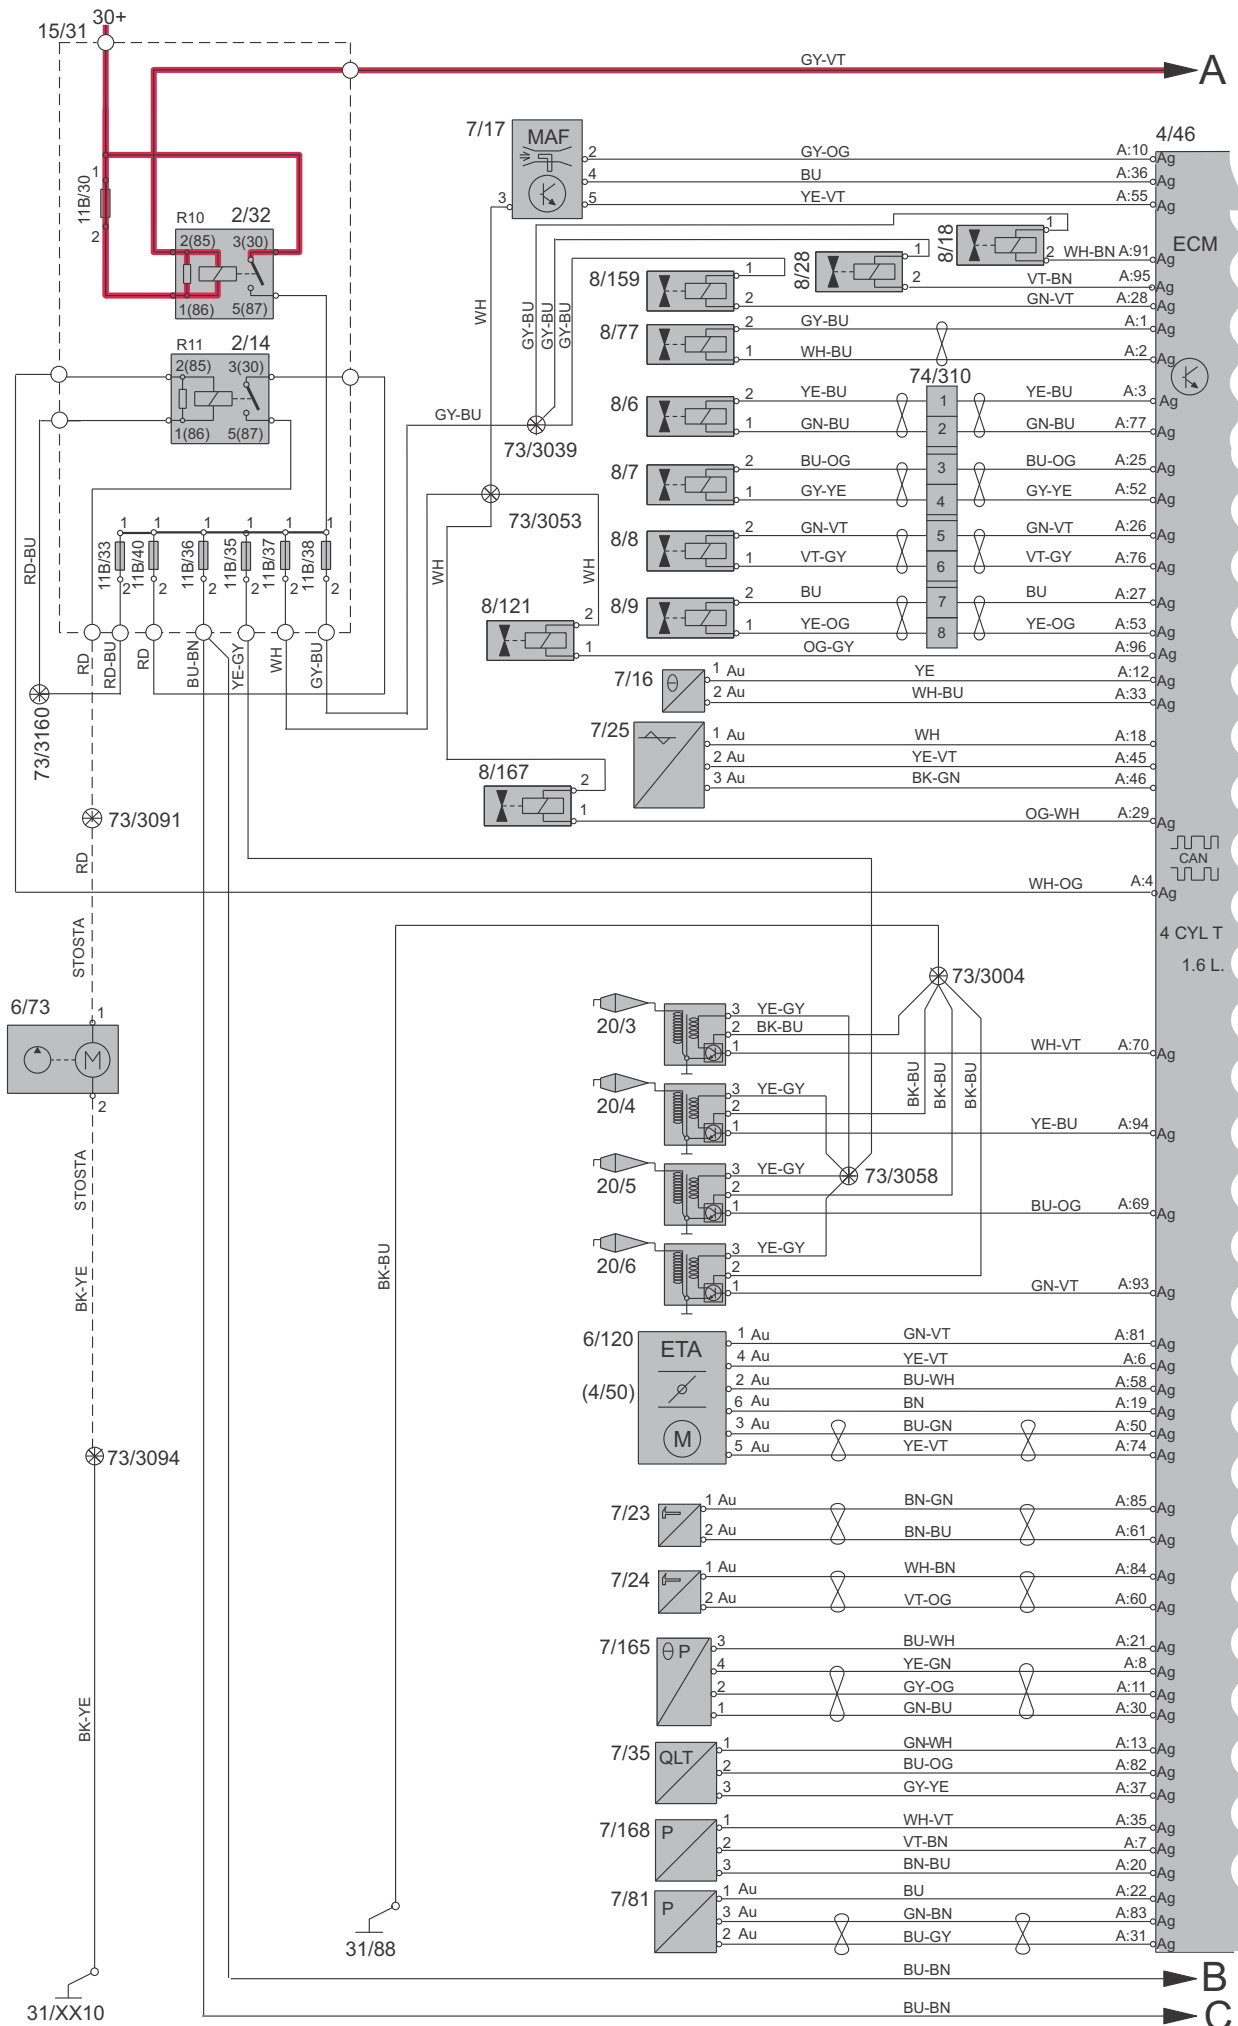


Group 28 Ignition and control system

Engine management system 4-Cyl. 1.6l Turbo 2:2

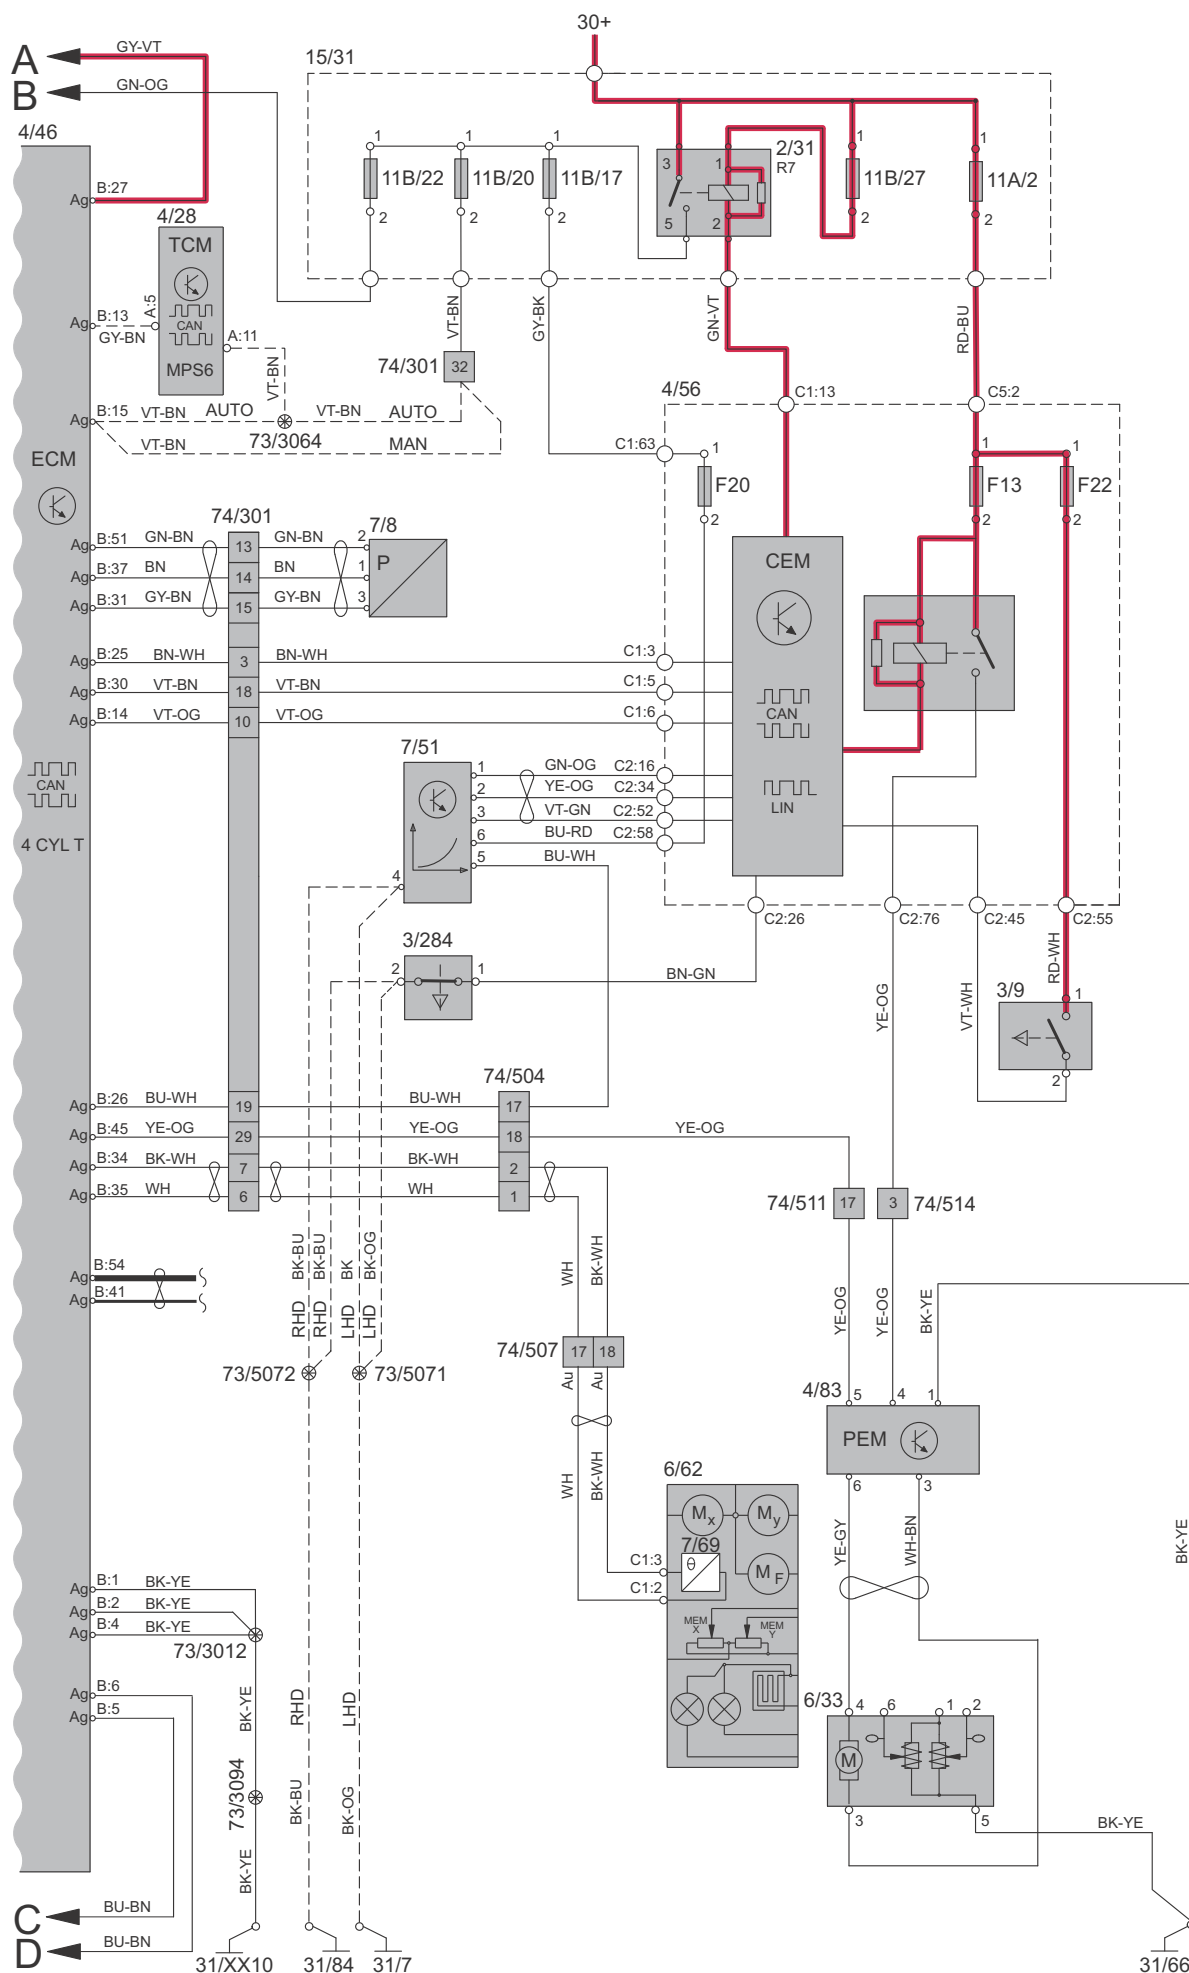


Group 28 Ignition and control system

Engine management system 4-Cyl. 2.0l Turbo 1:2

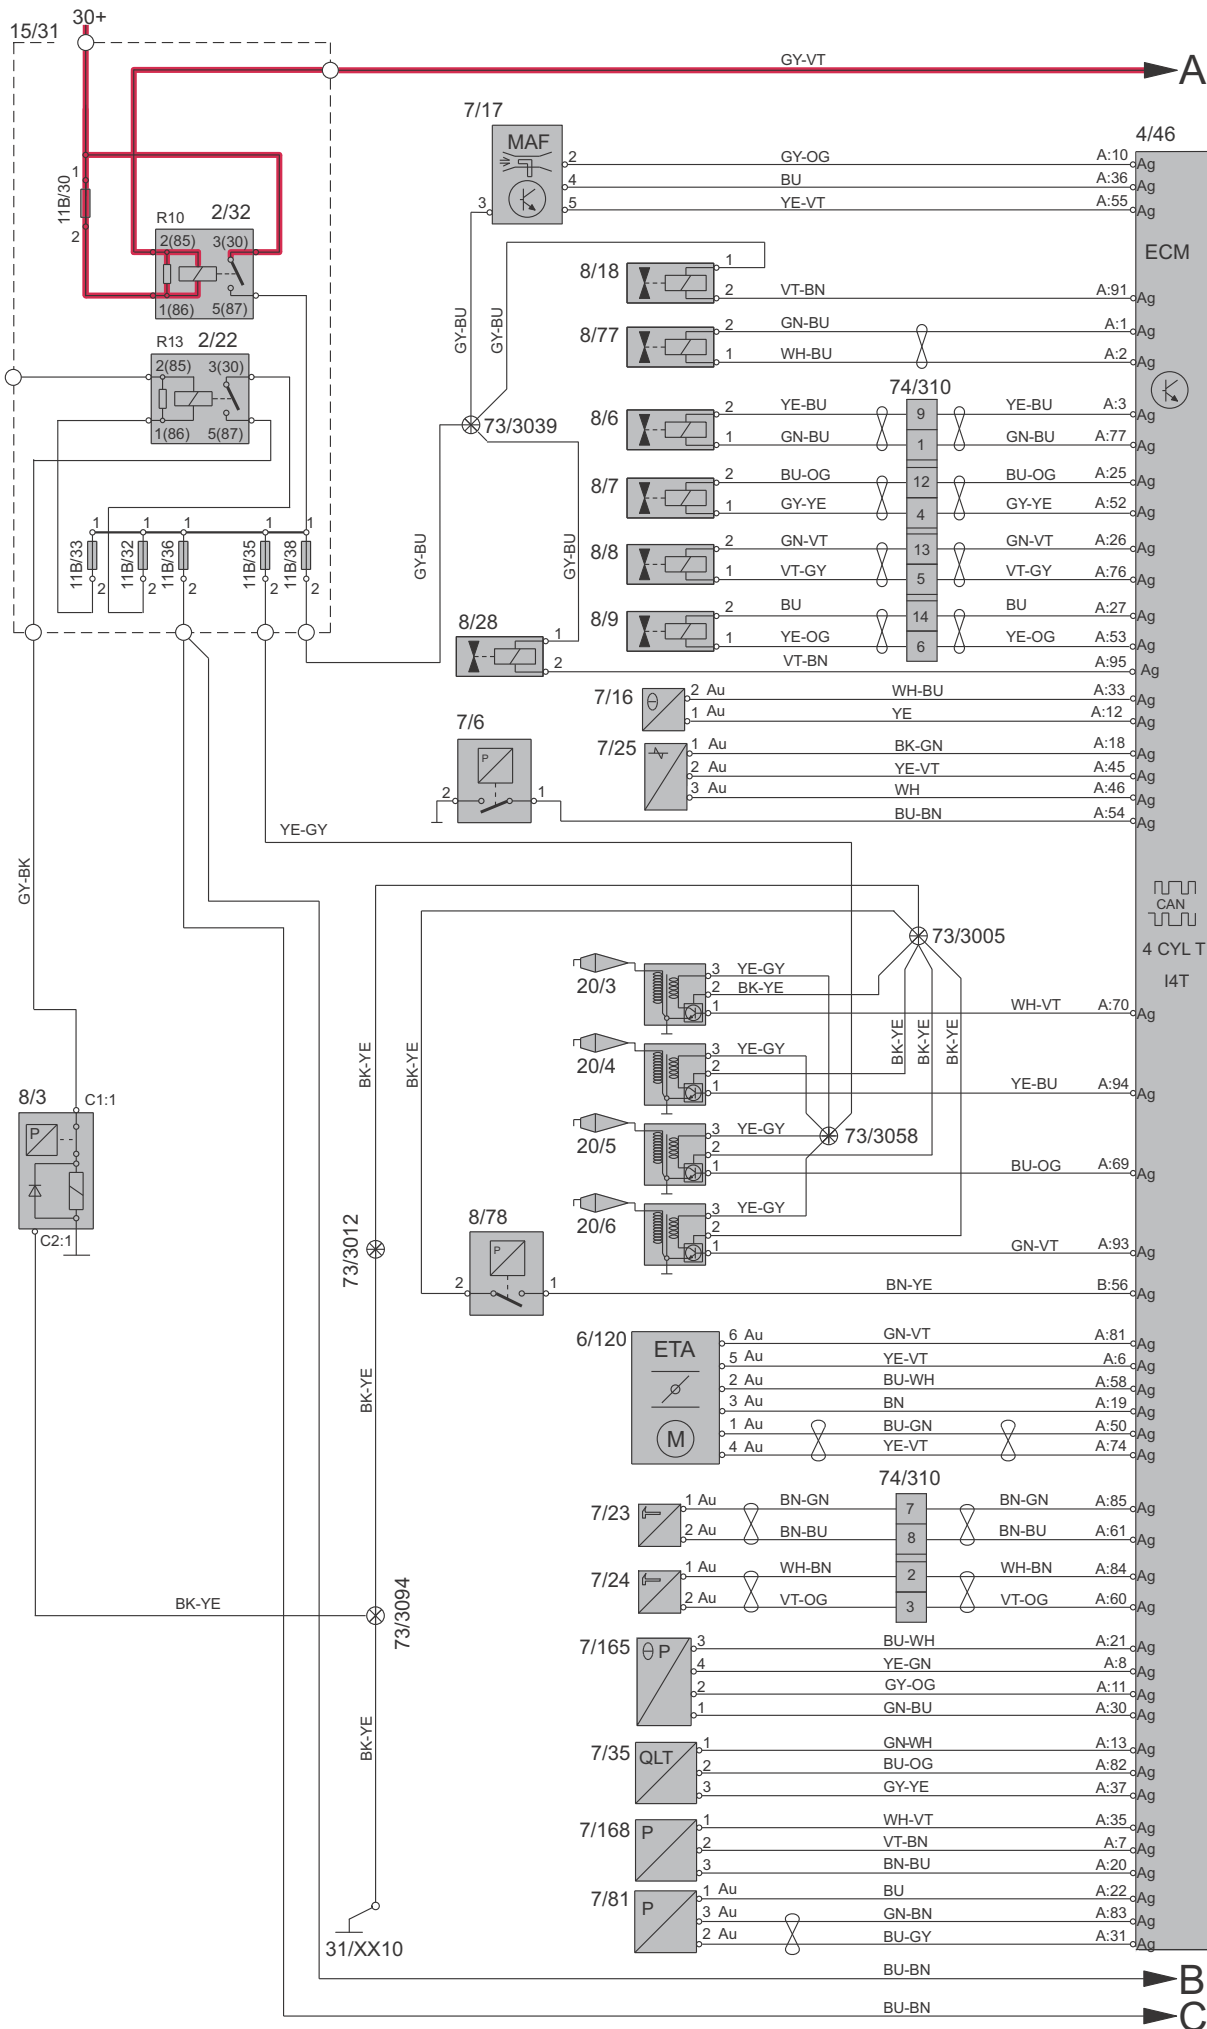


Group 28 Ignition and control system

Engine management system 4-Cyl. 2.0l Turbo 2:2

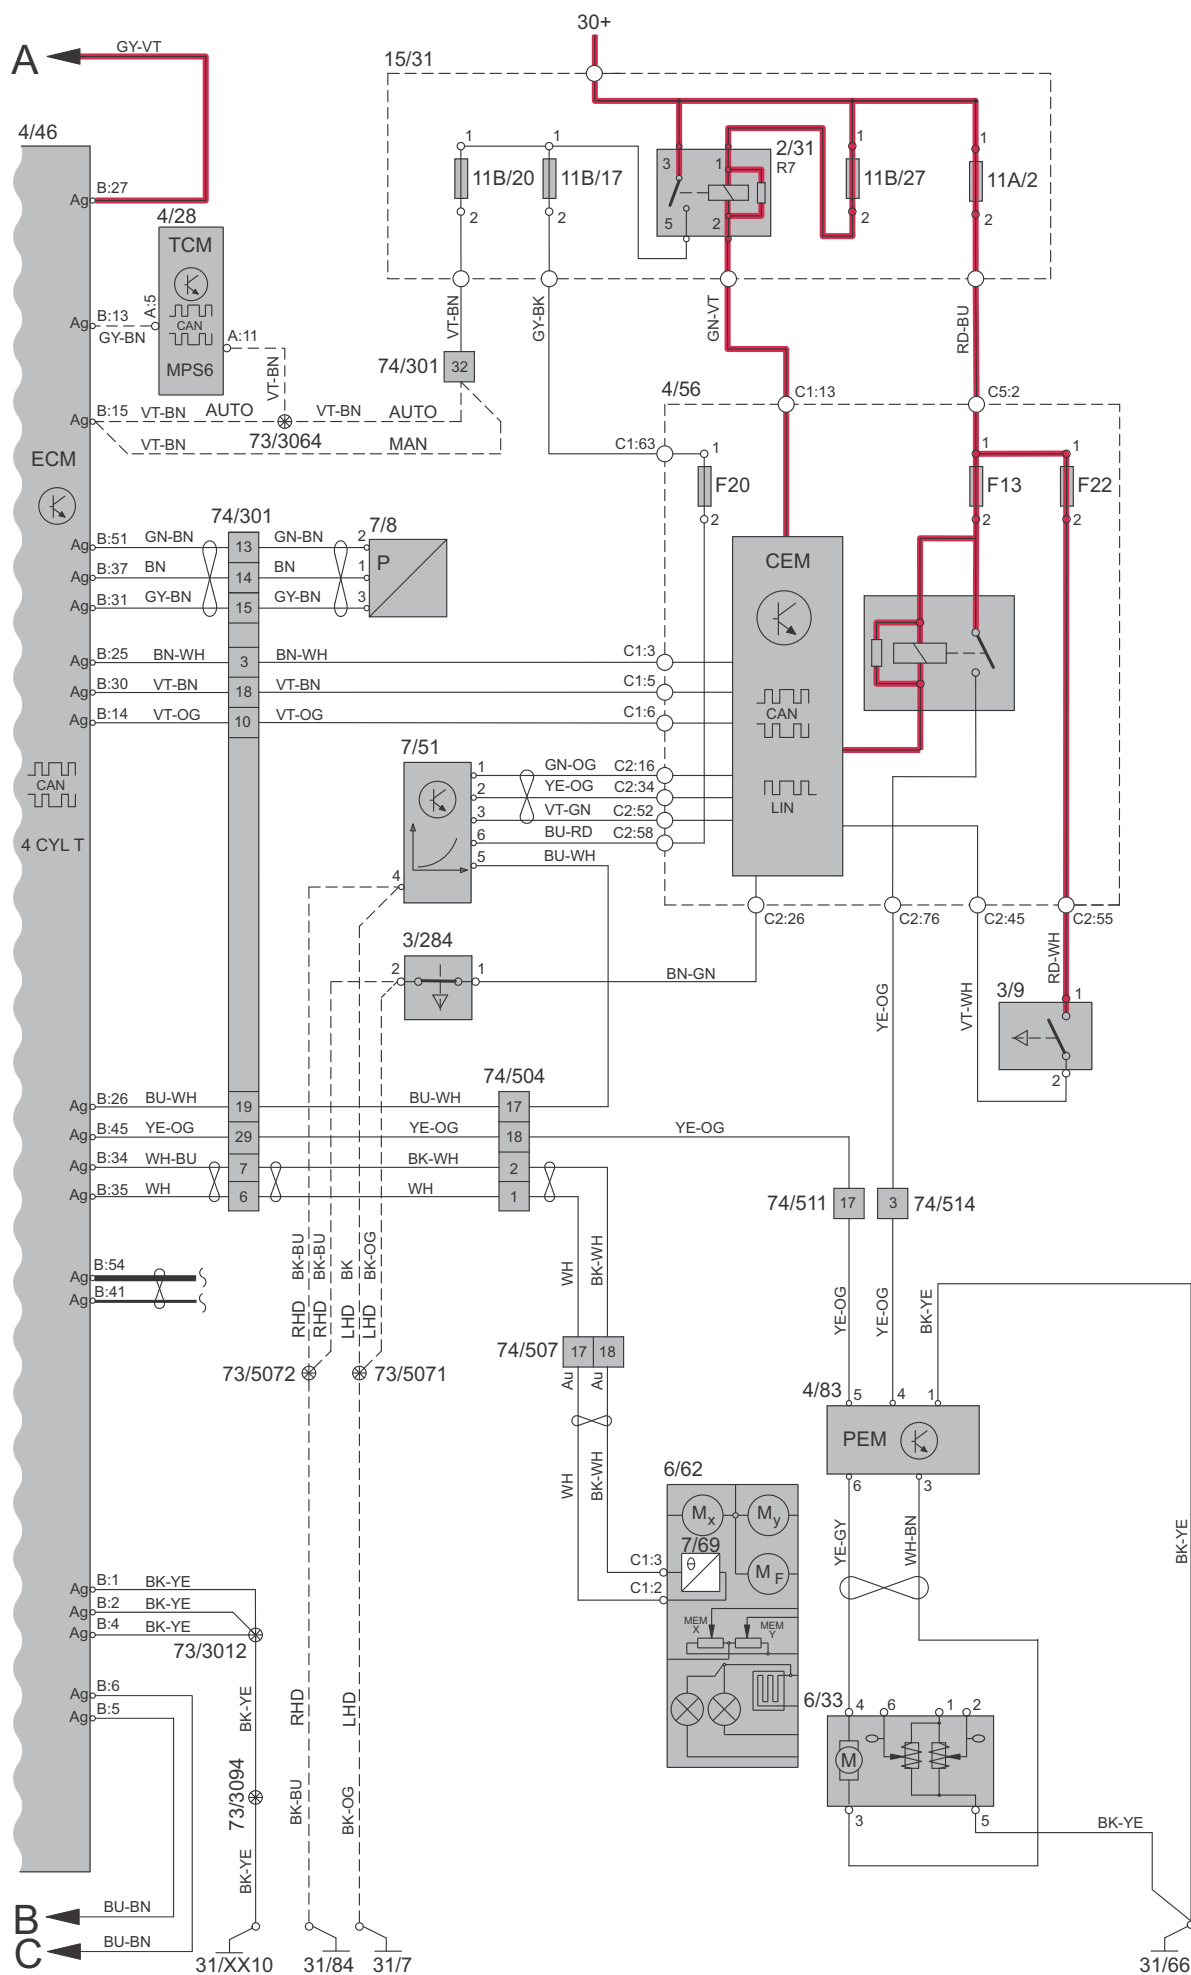


Group 28 Ignition and control system

Engine management system, 5-Cyl. Turbo 1:2

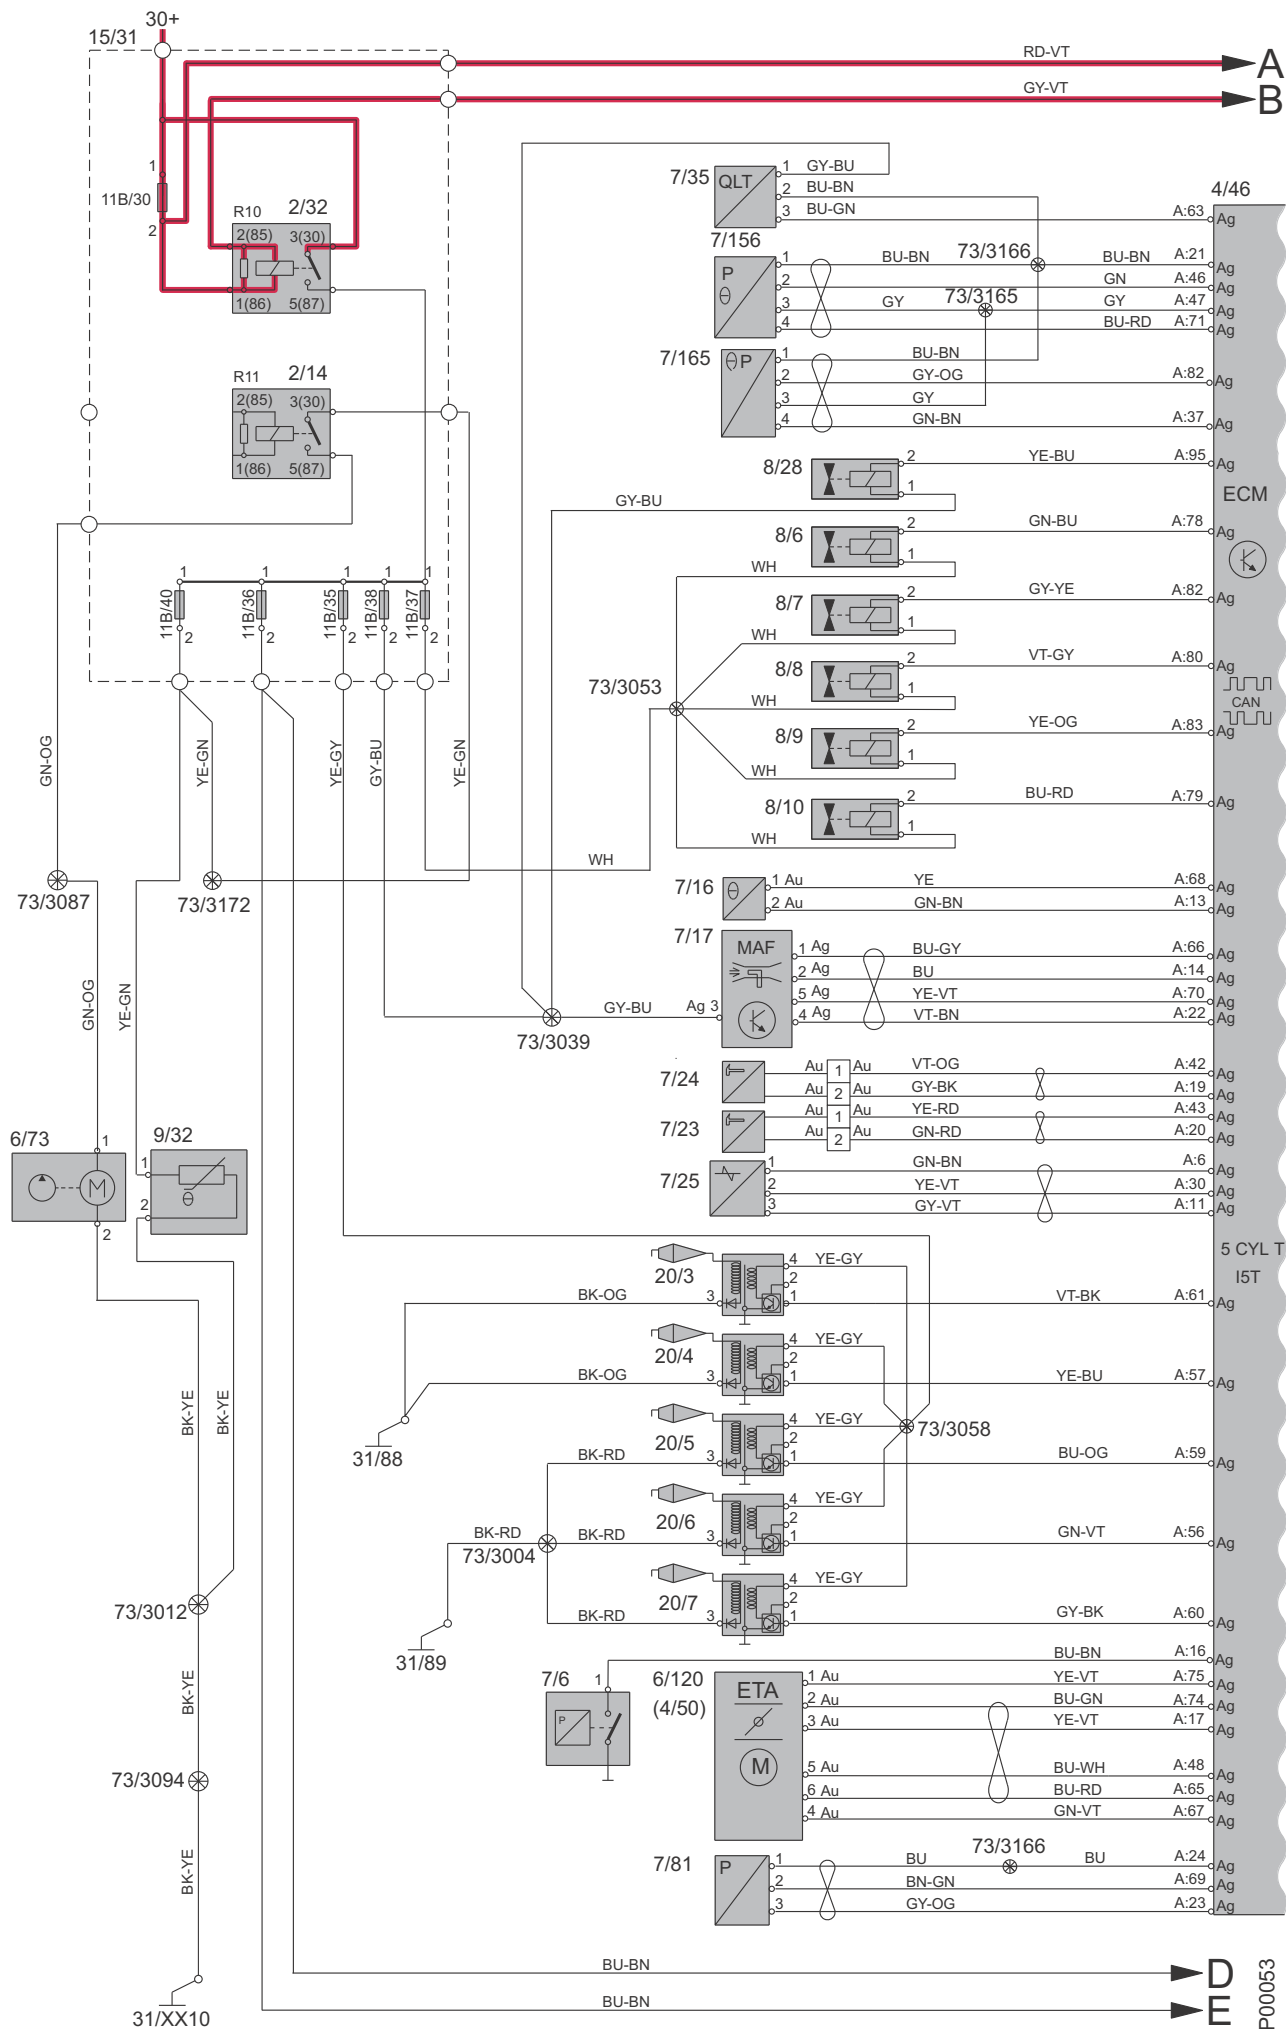


Group 28 Ignition and control system

Engine management system, 5-Cyl. Turbo 2:2

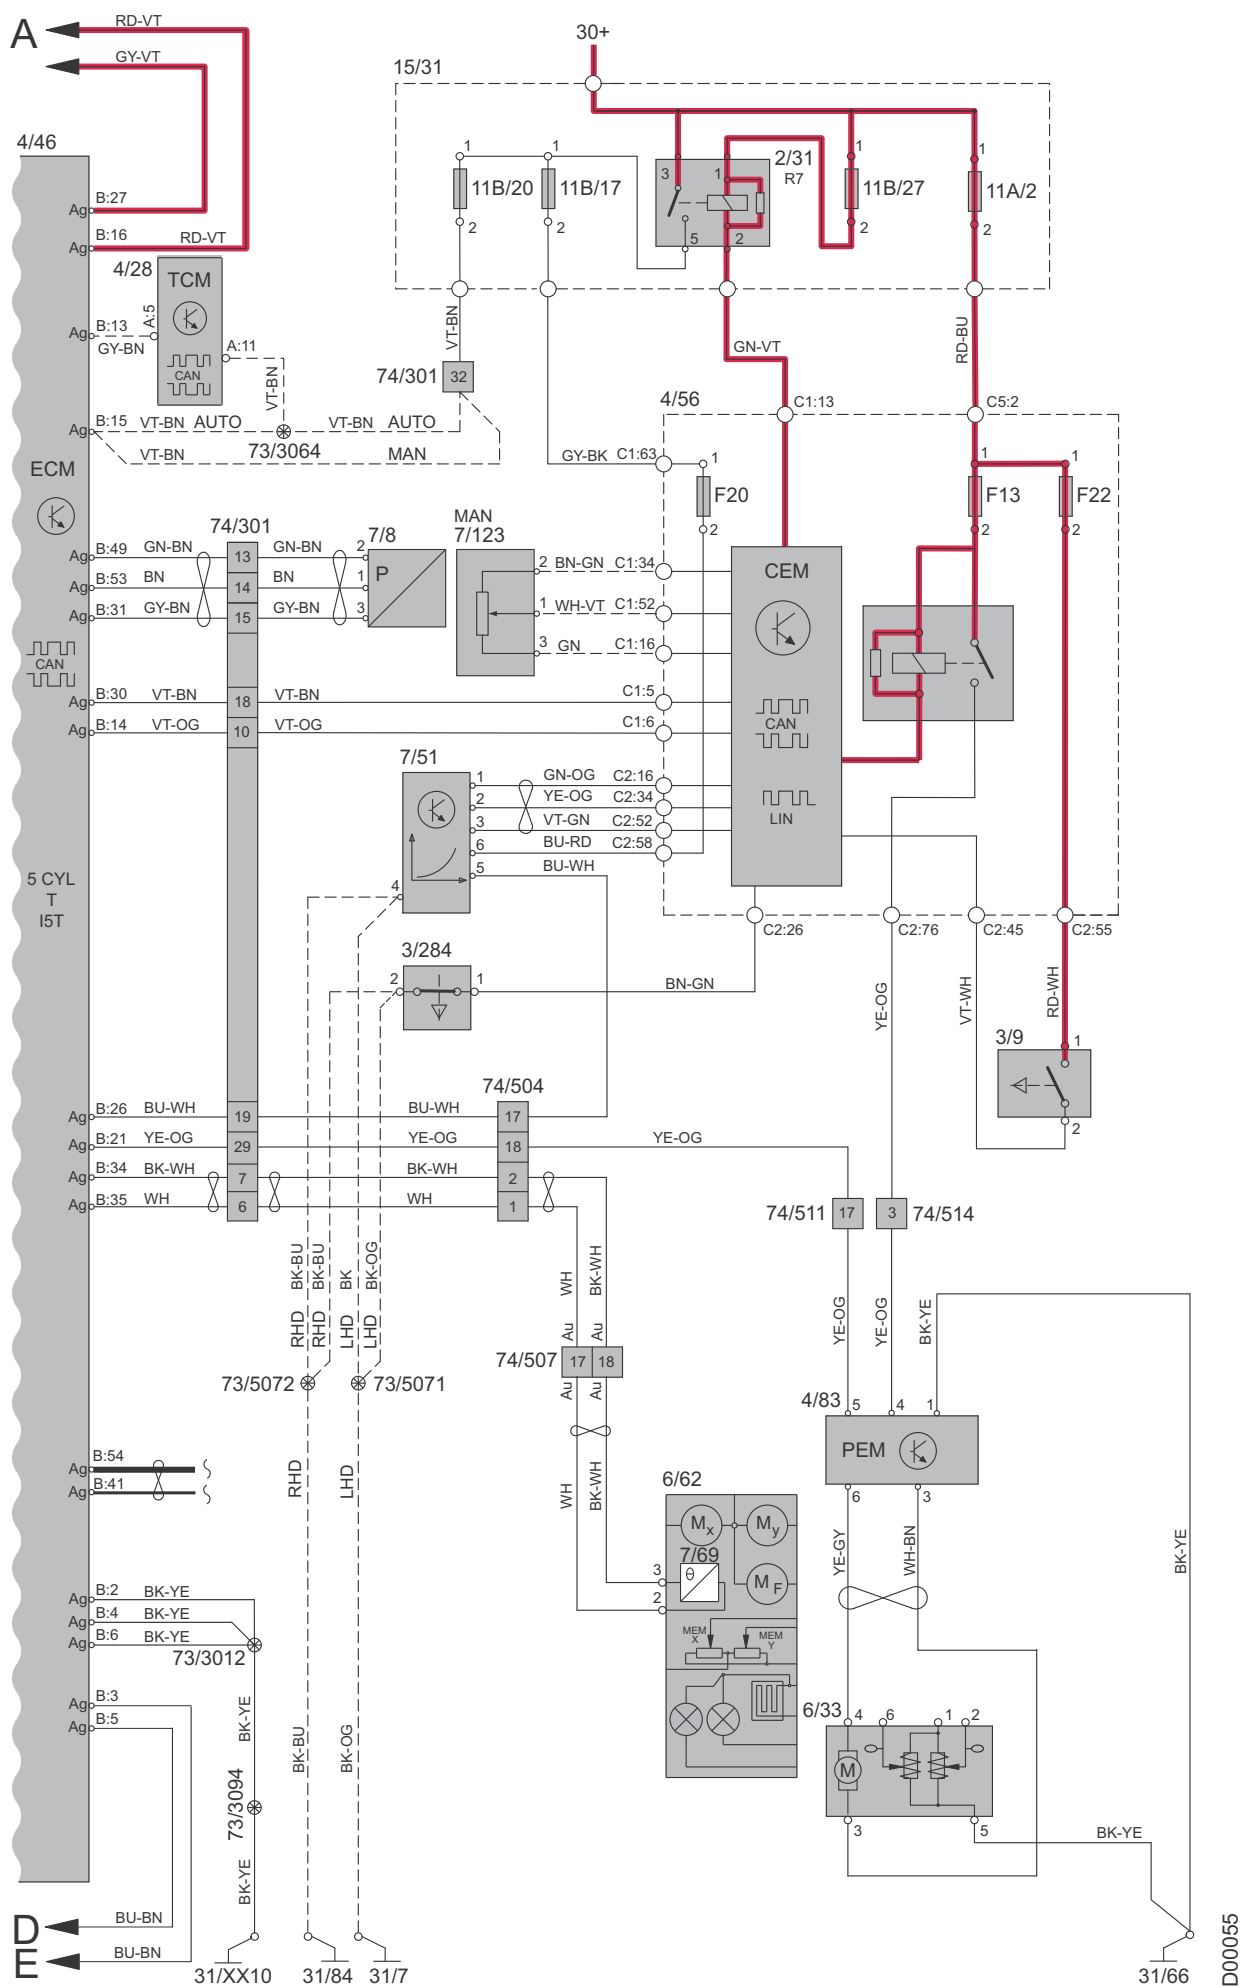


Group 28 Ignition and control system

Engine management system, 6-Cyl. Turbo 1:2

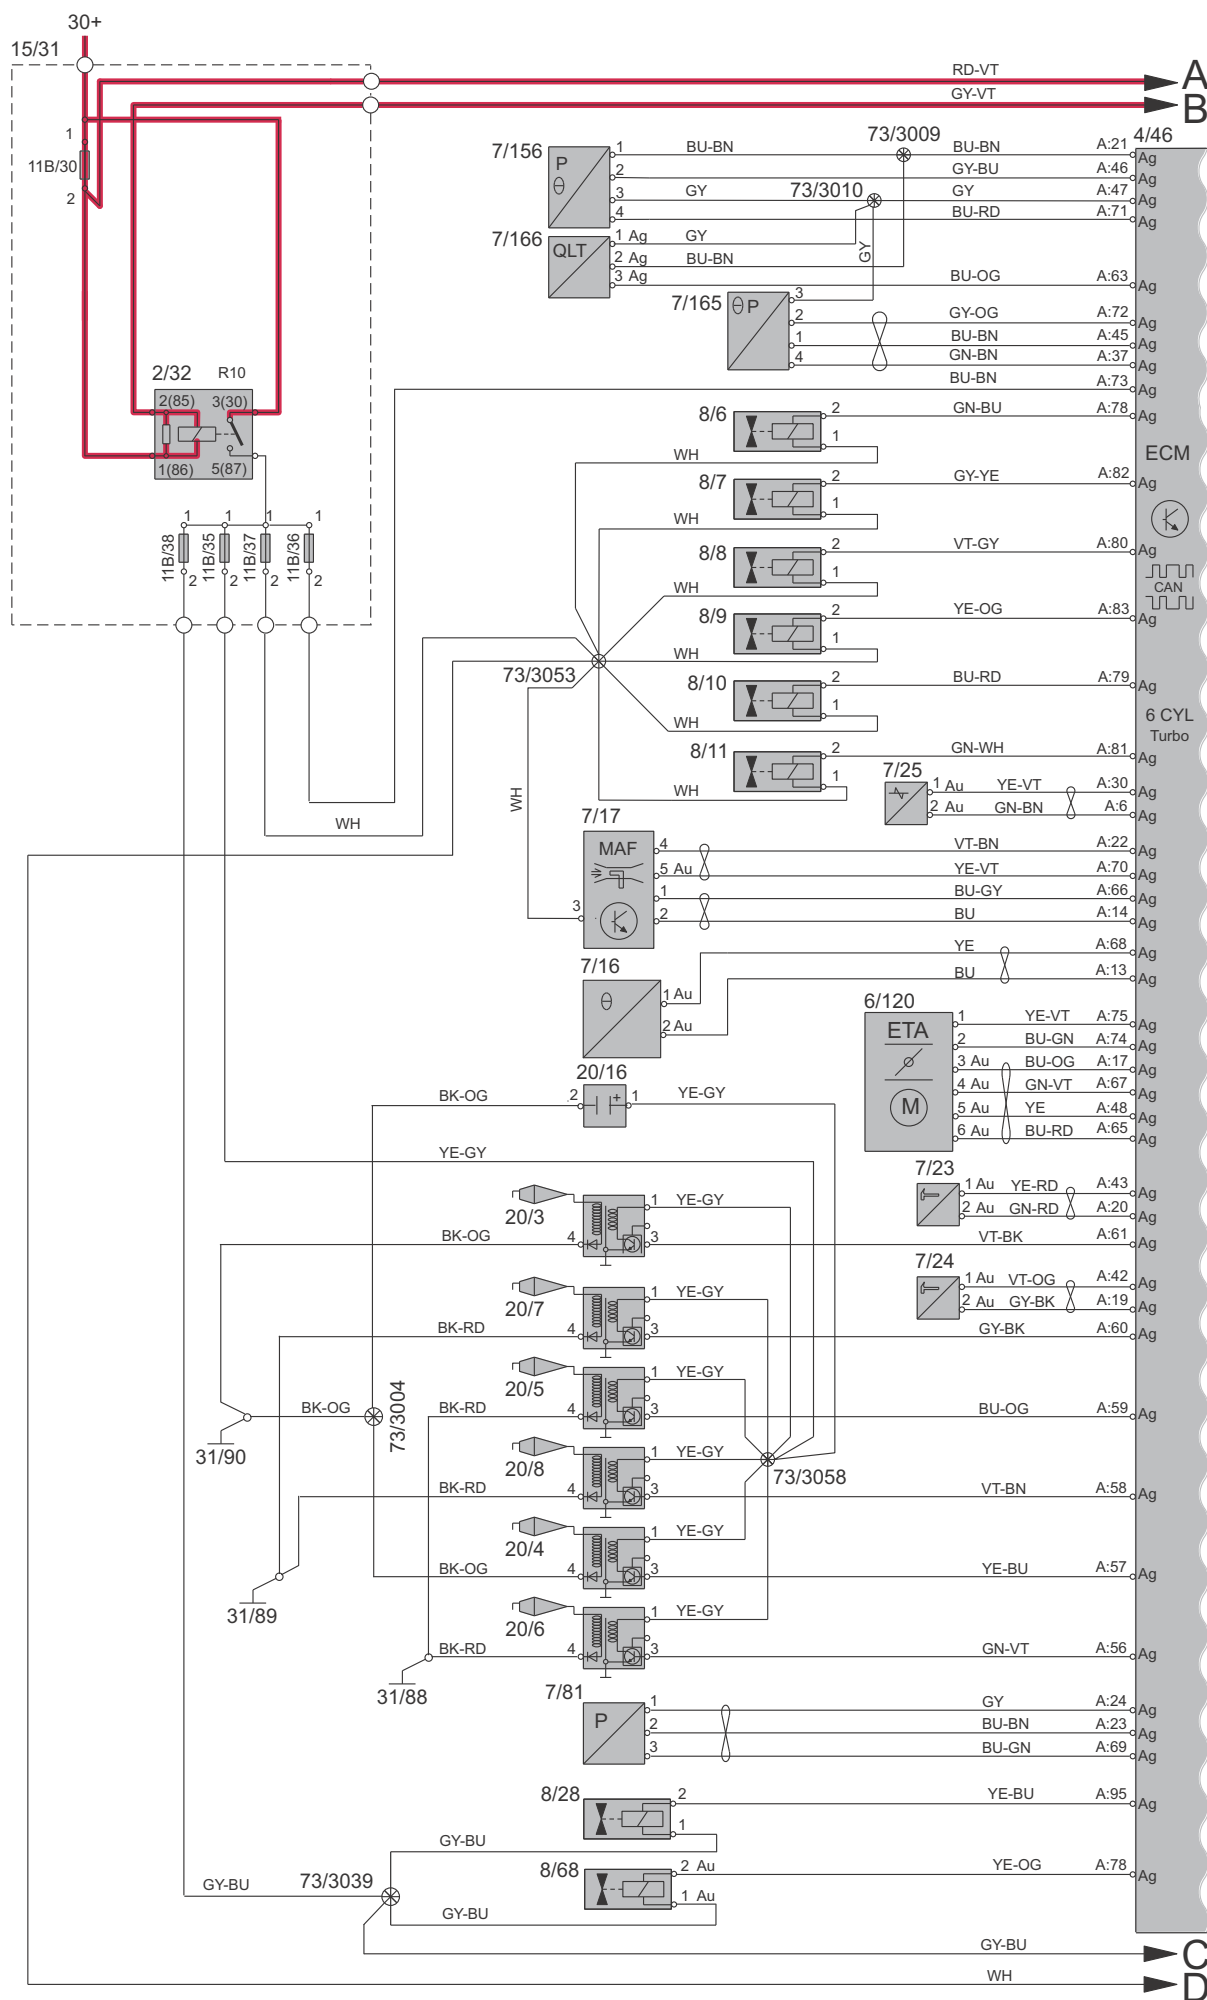


Group 28 Ignition and control system

Engine management system, 6-Cyl. Turbo 2:2

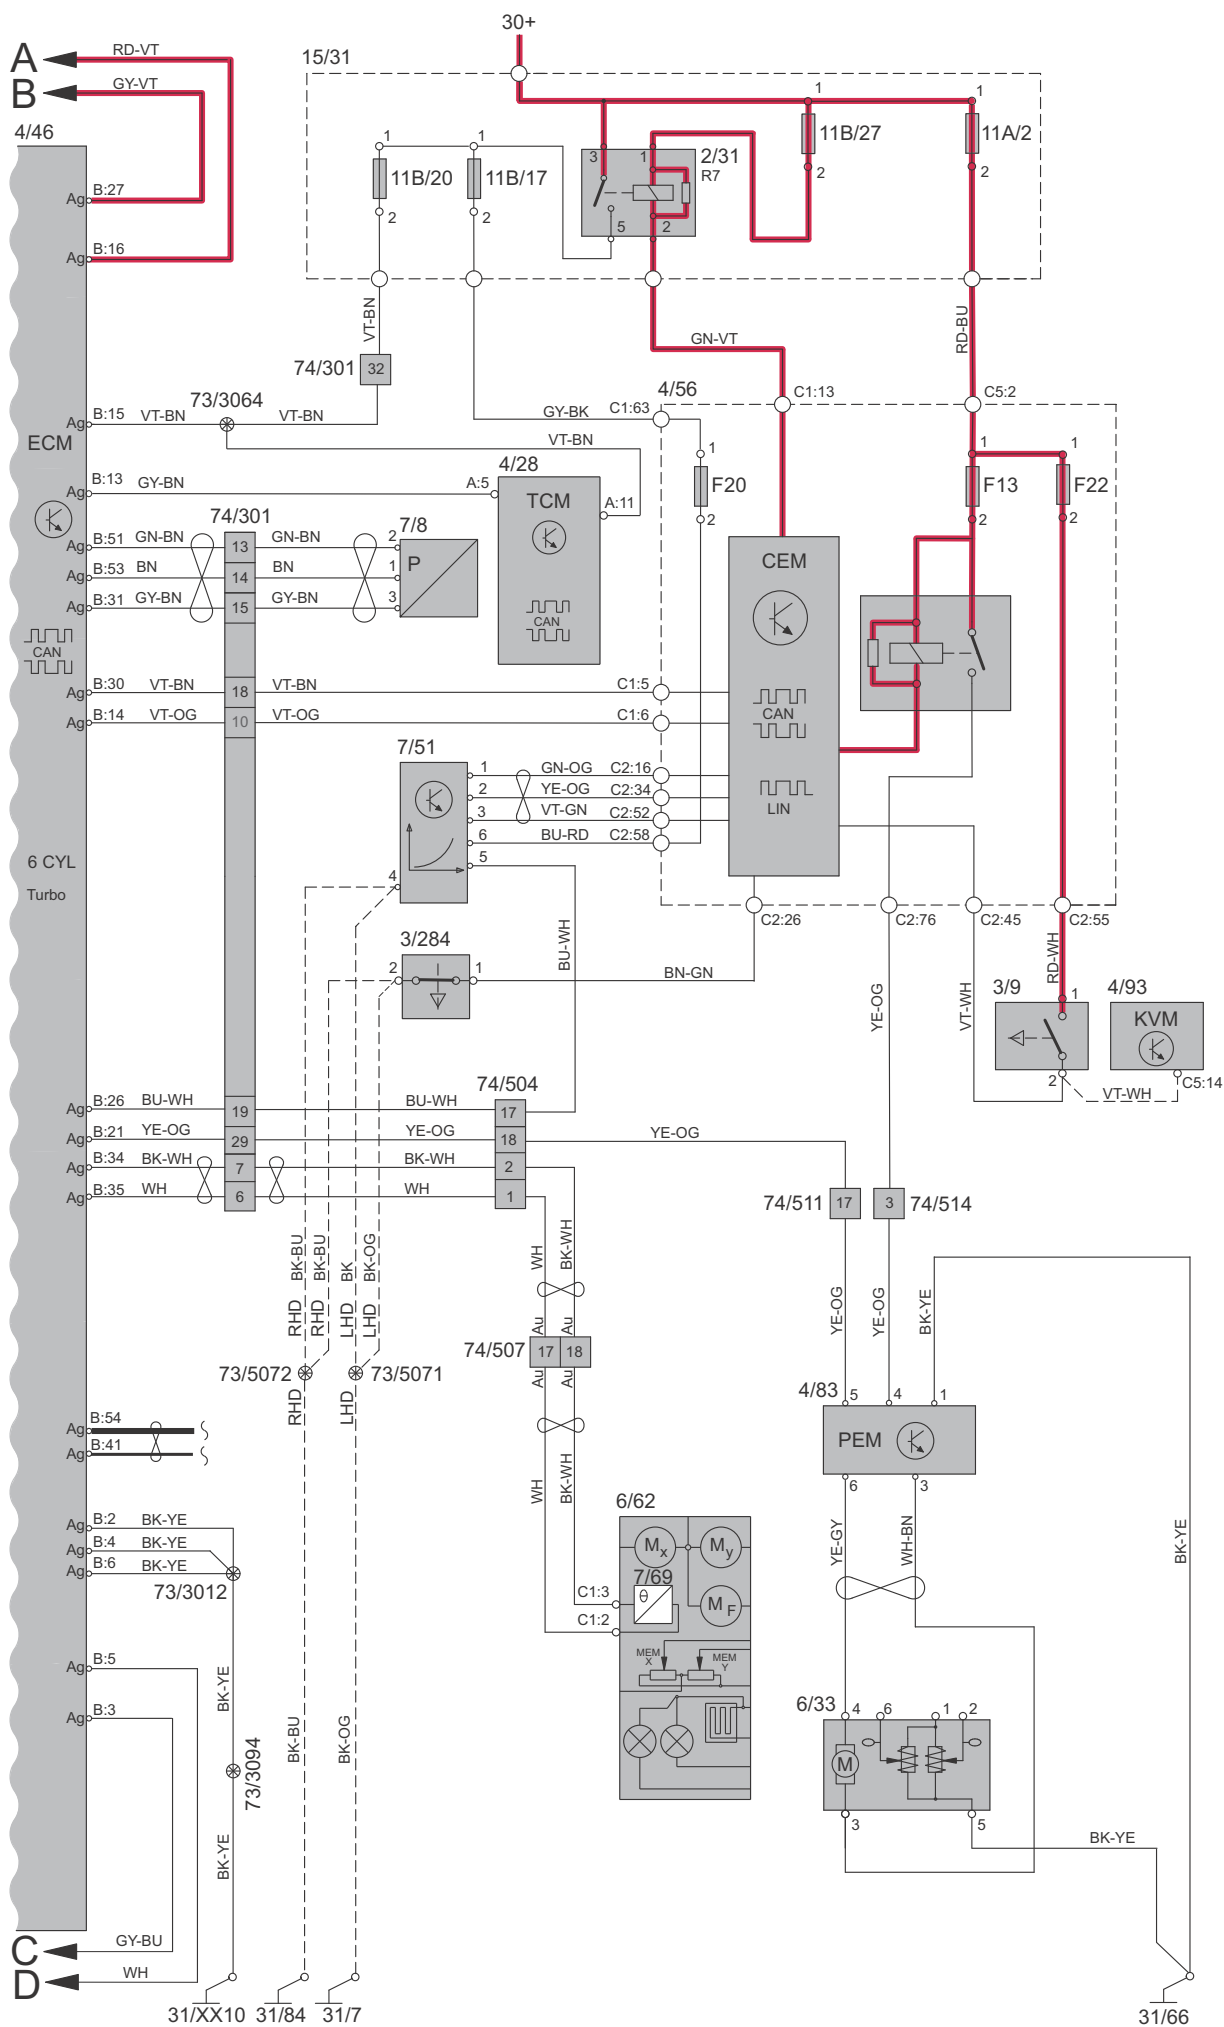


Group 28 Ignition and control system

Engine management system, 4-Cyl. Diesel 1:3

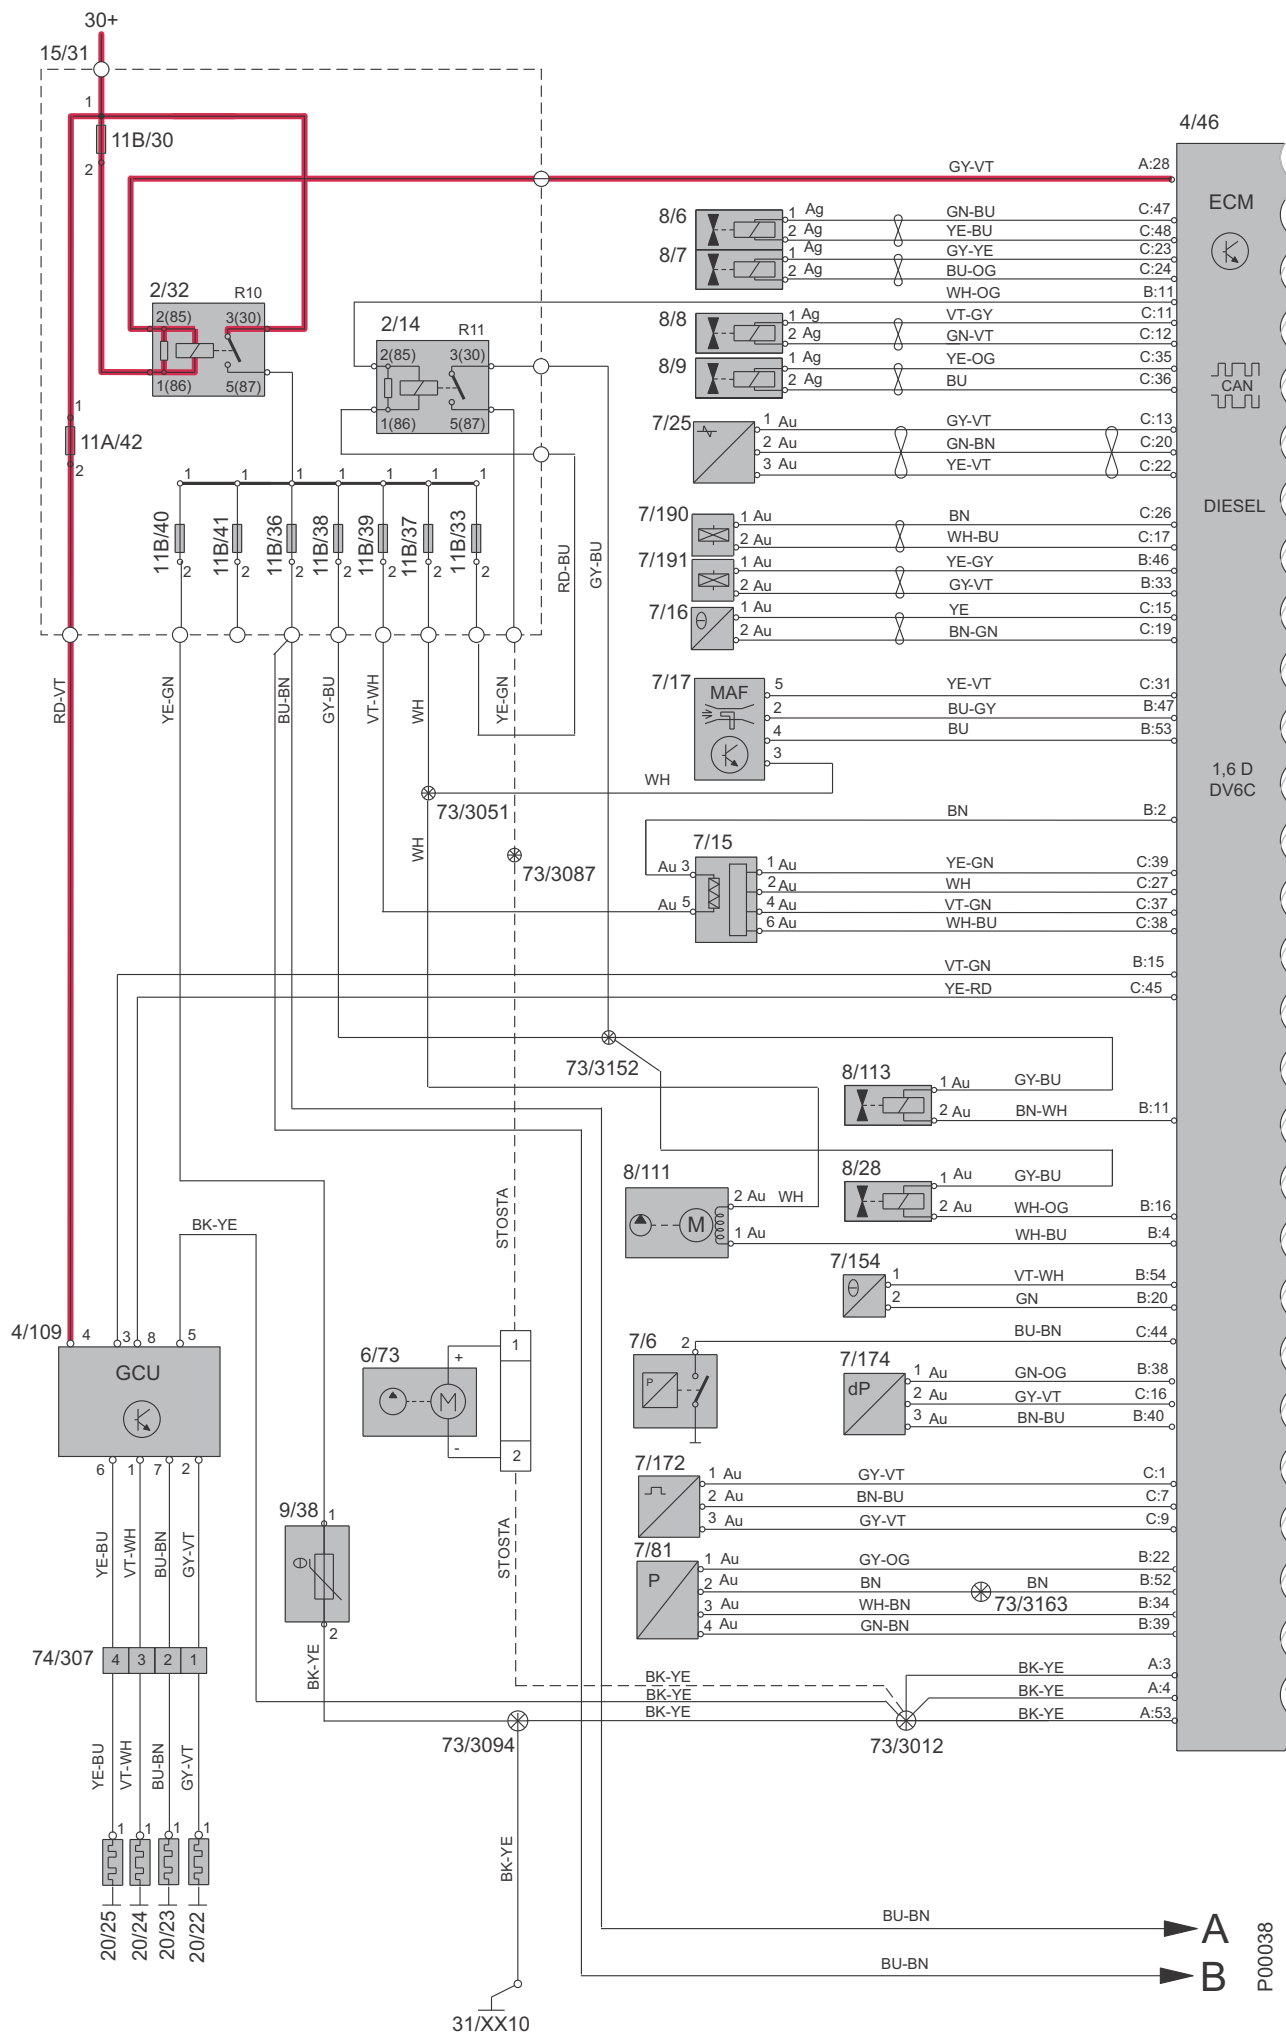


Group 28 Ignition and control system

Engine management system, 4-Cyl. Diesel 2:3

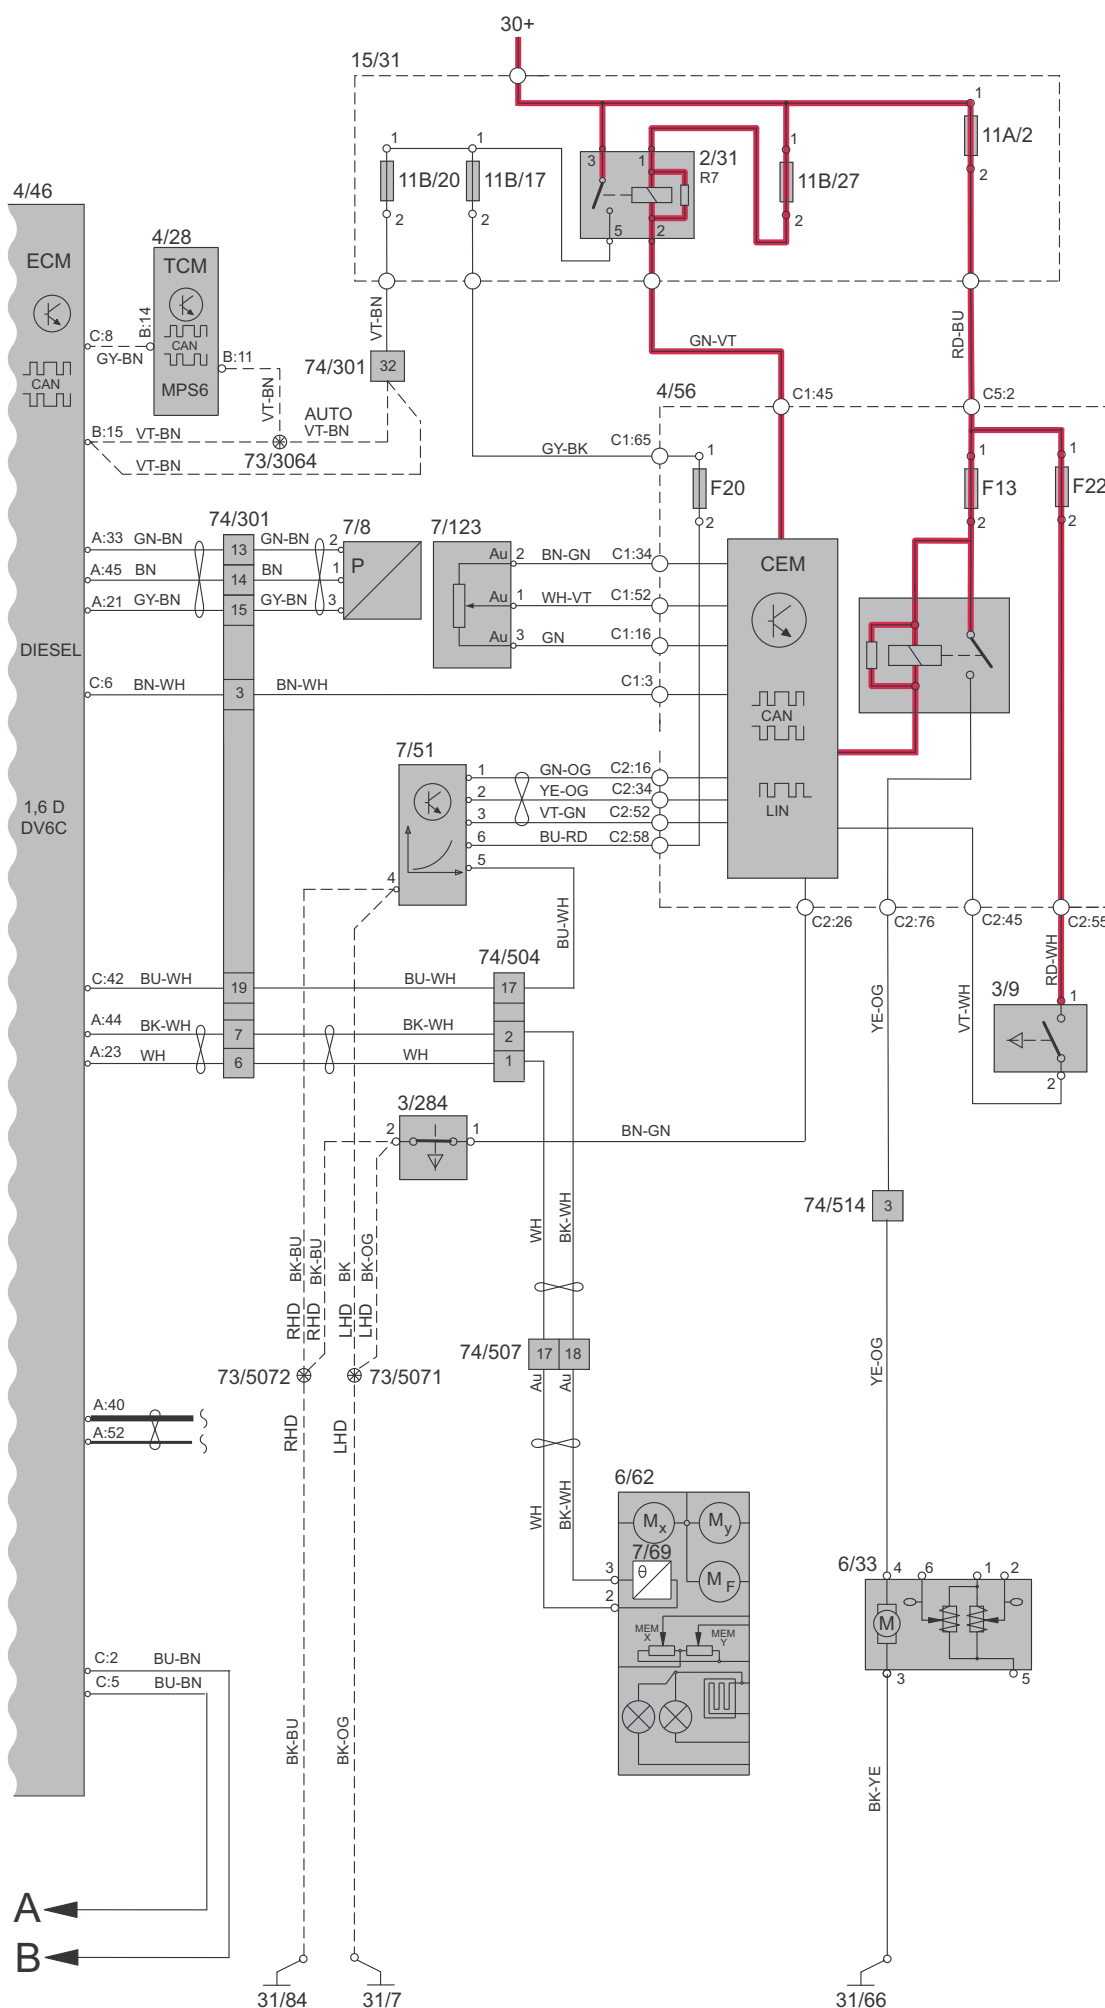


Group 28 Ignition and control system
Engine management system, 4-Cyl. Diesel 3:3

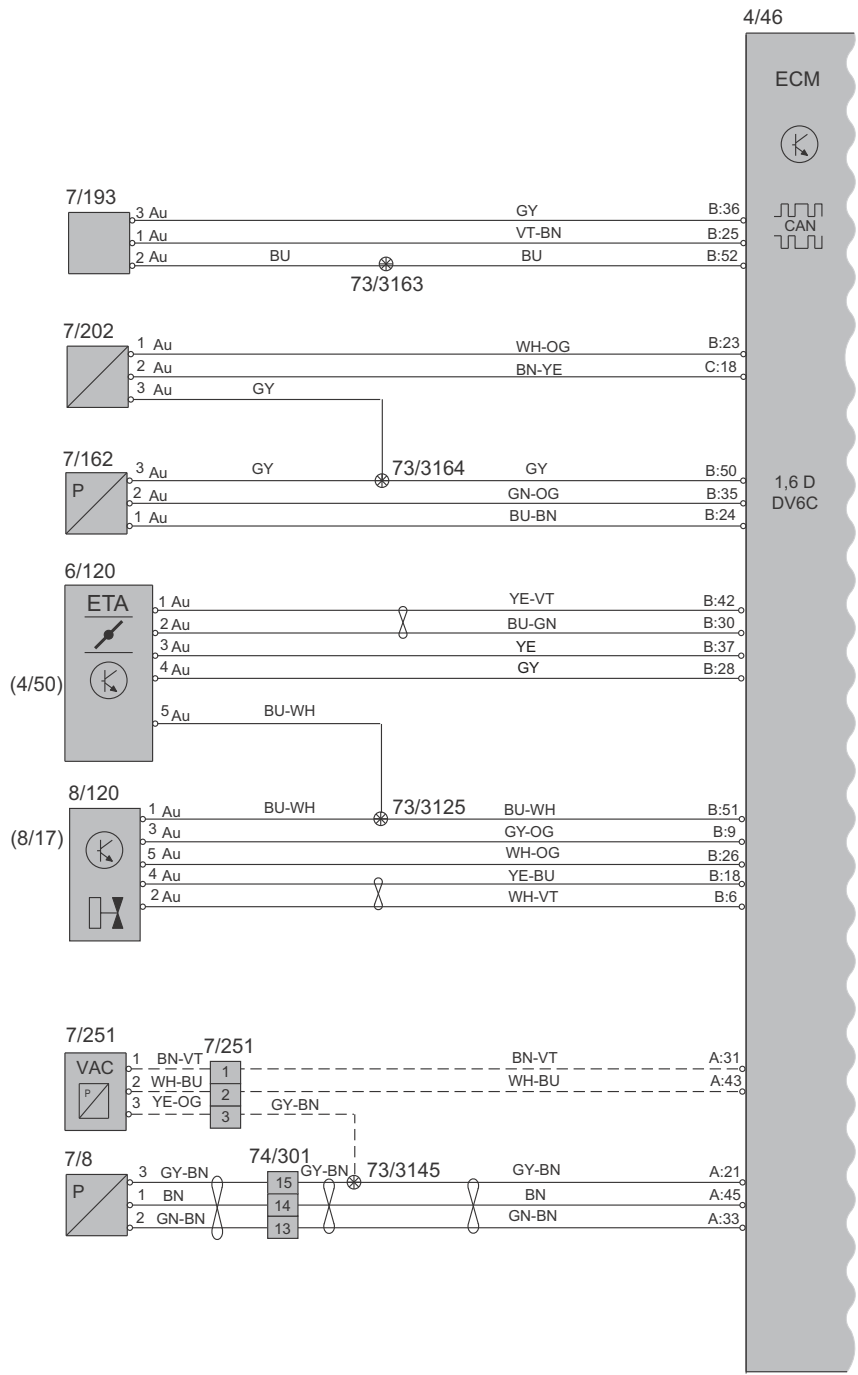


Group 28 Ignition and control system

Engine management system, 5-Cyl. Diesel 1:3

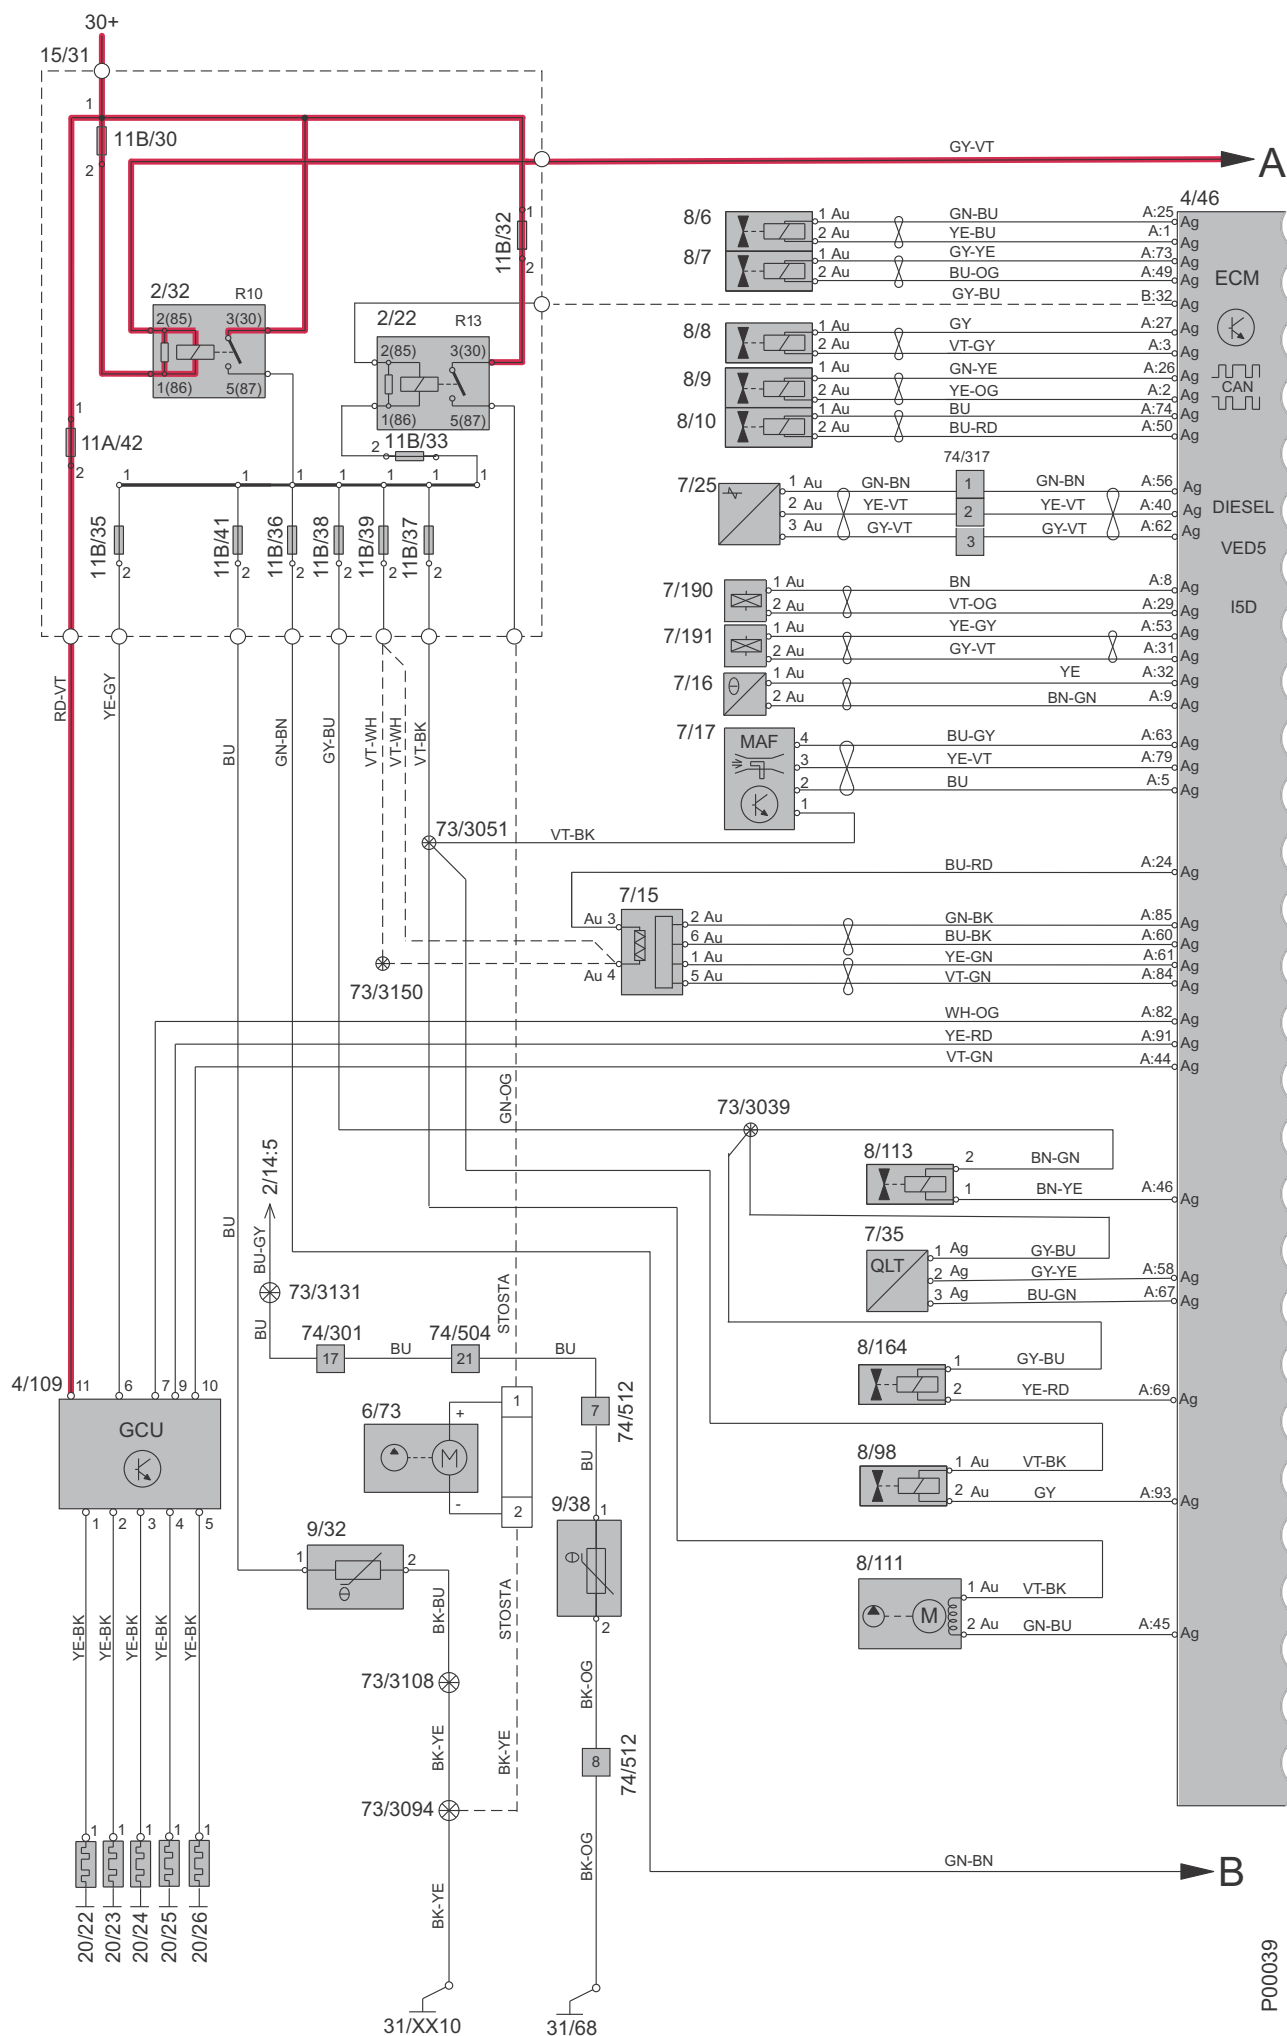


Group 28 Ignition and control system

Engine management system, 5-Cyl. Diesel 2:3

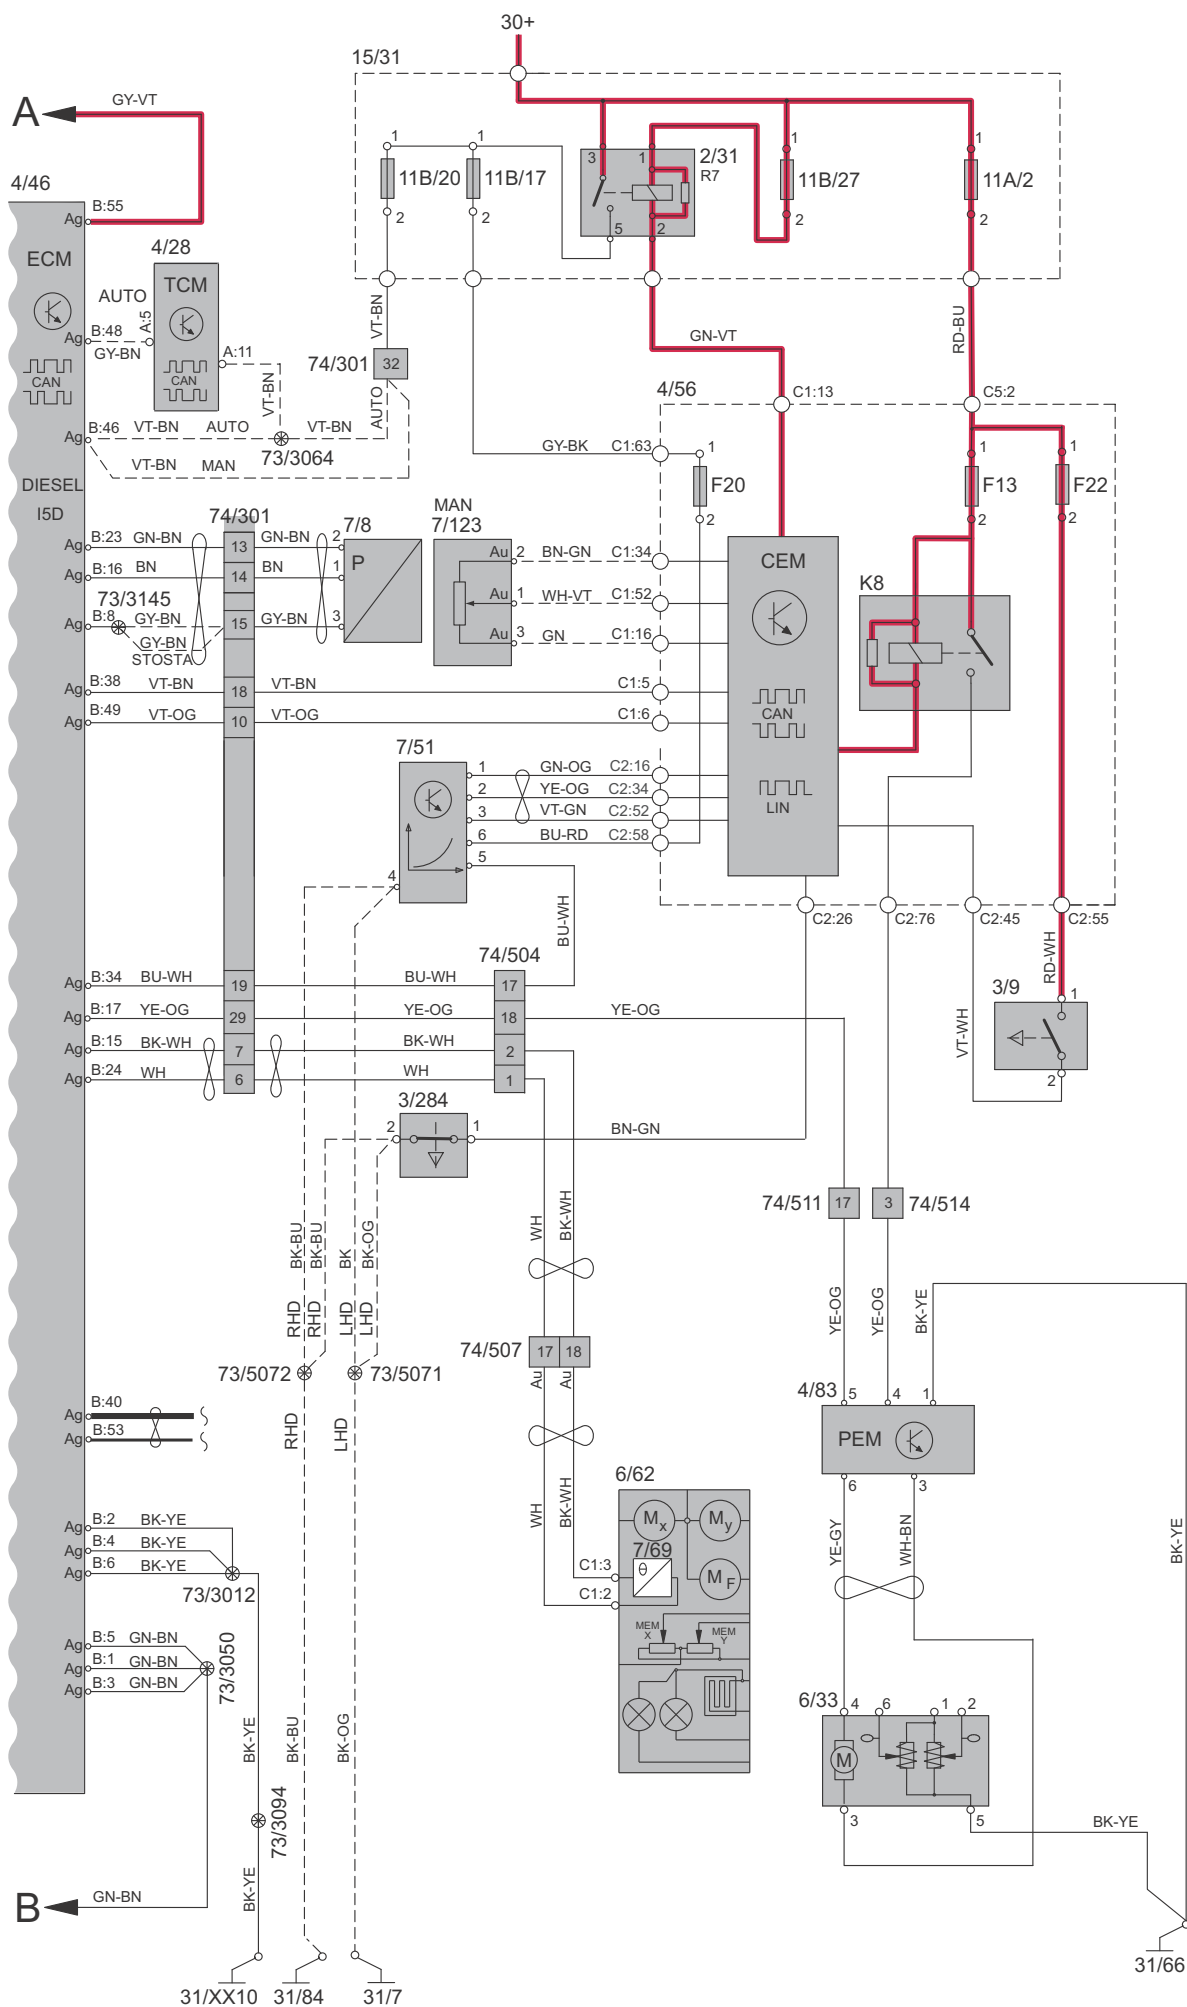

N00032


Group 28 Ignition and control system
Engine management system, 5-Cyl. Diesel 3:3

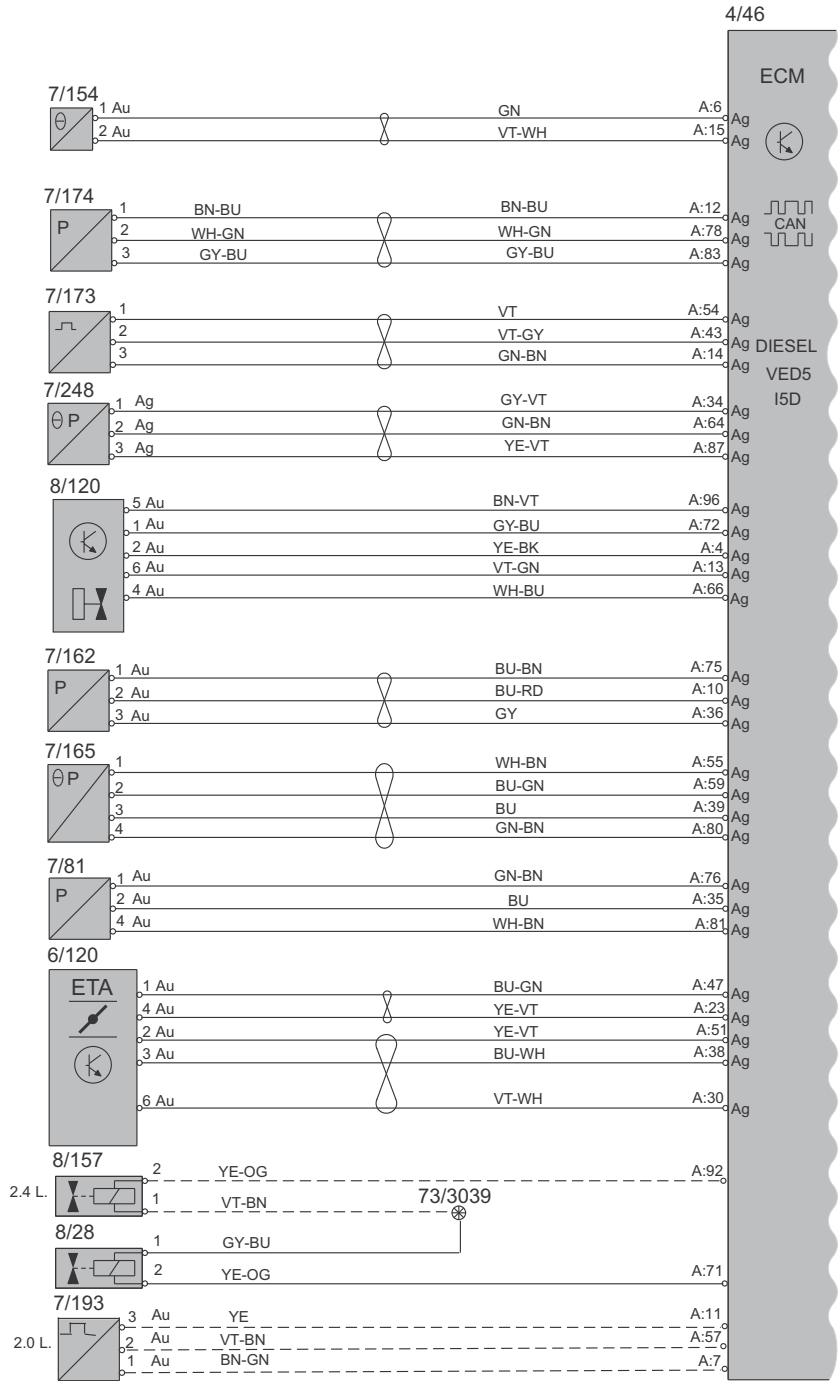


D00009

Group 28 Ignition and control system


Emission control 4-Cyl. 1.6l Turbo

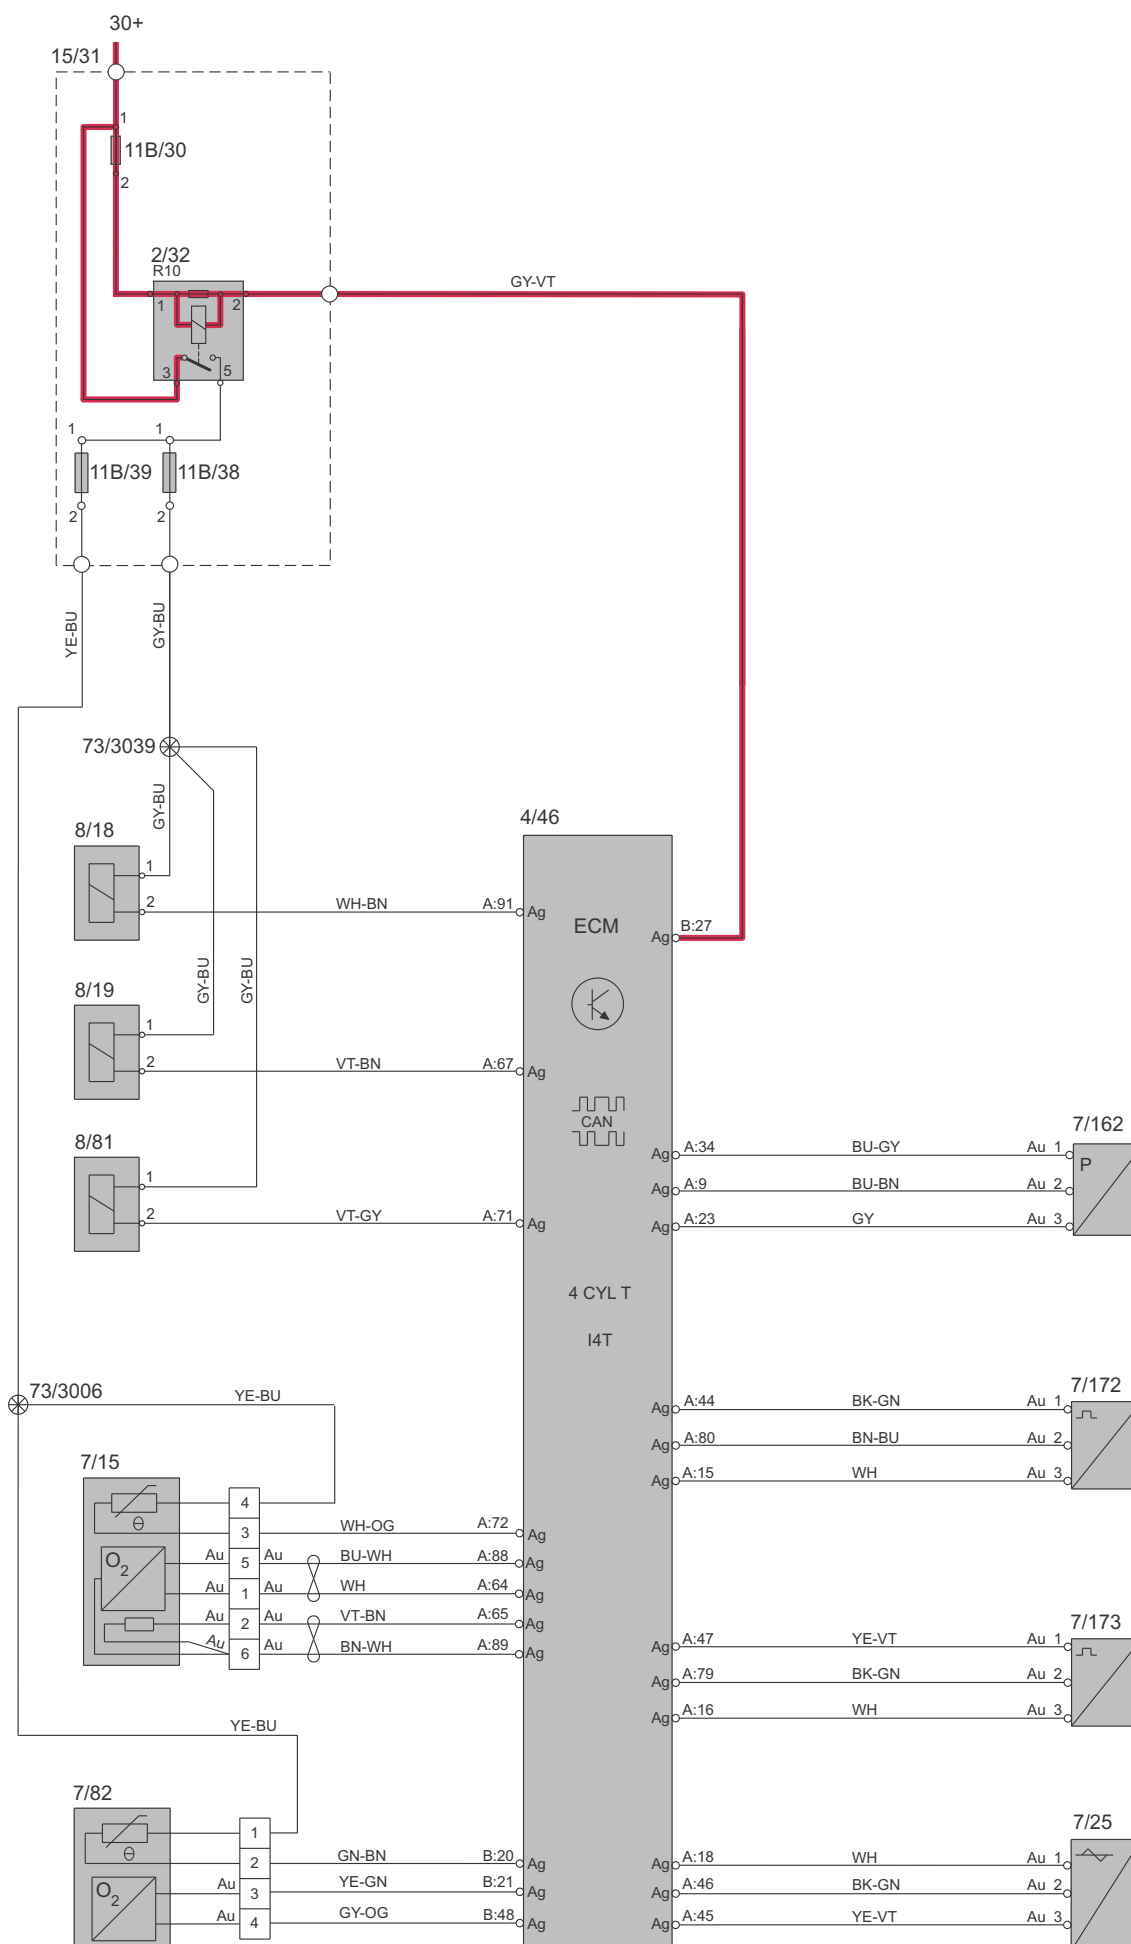


Group 28 Ignition and control system
Emission control 4-Cyl. 2.0l Turbo

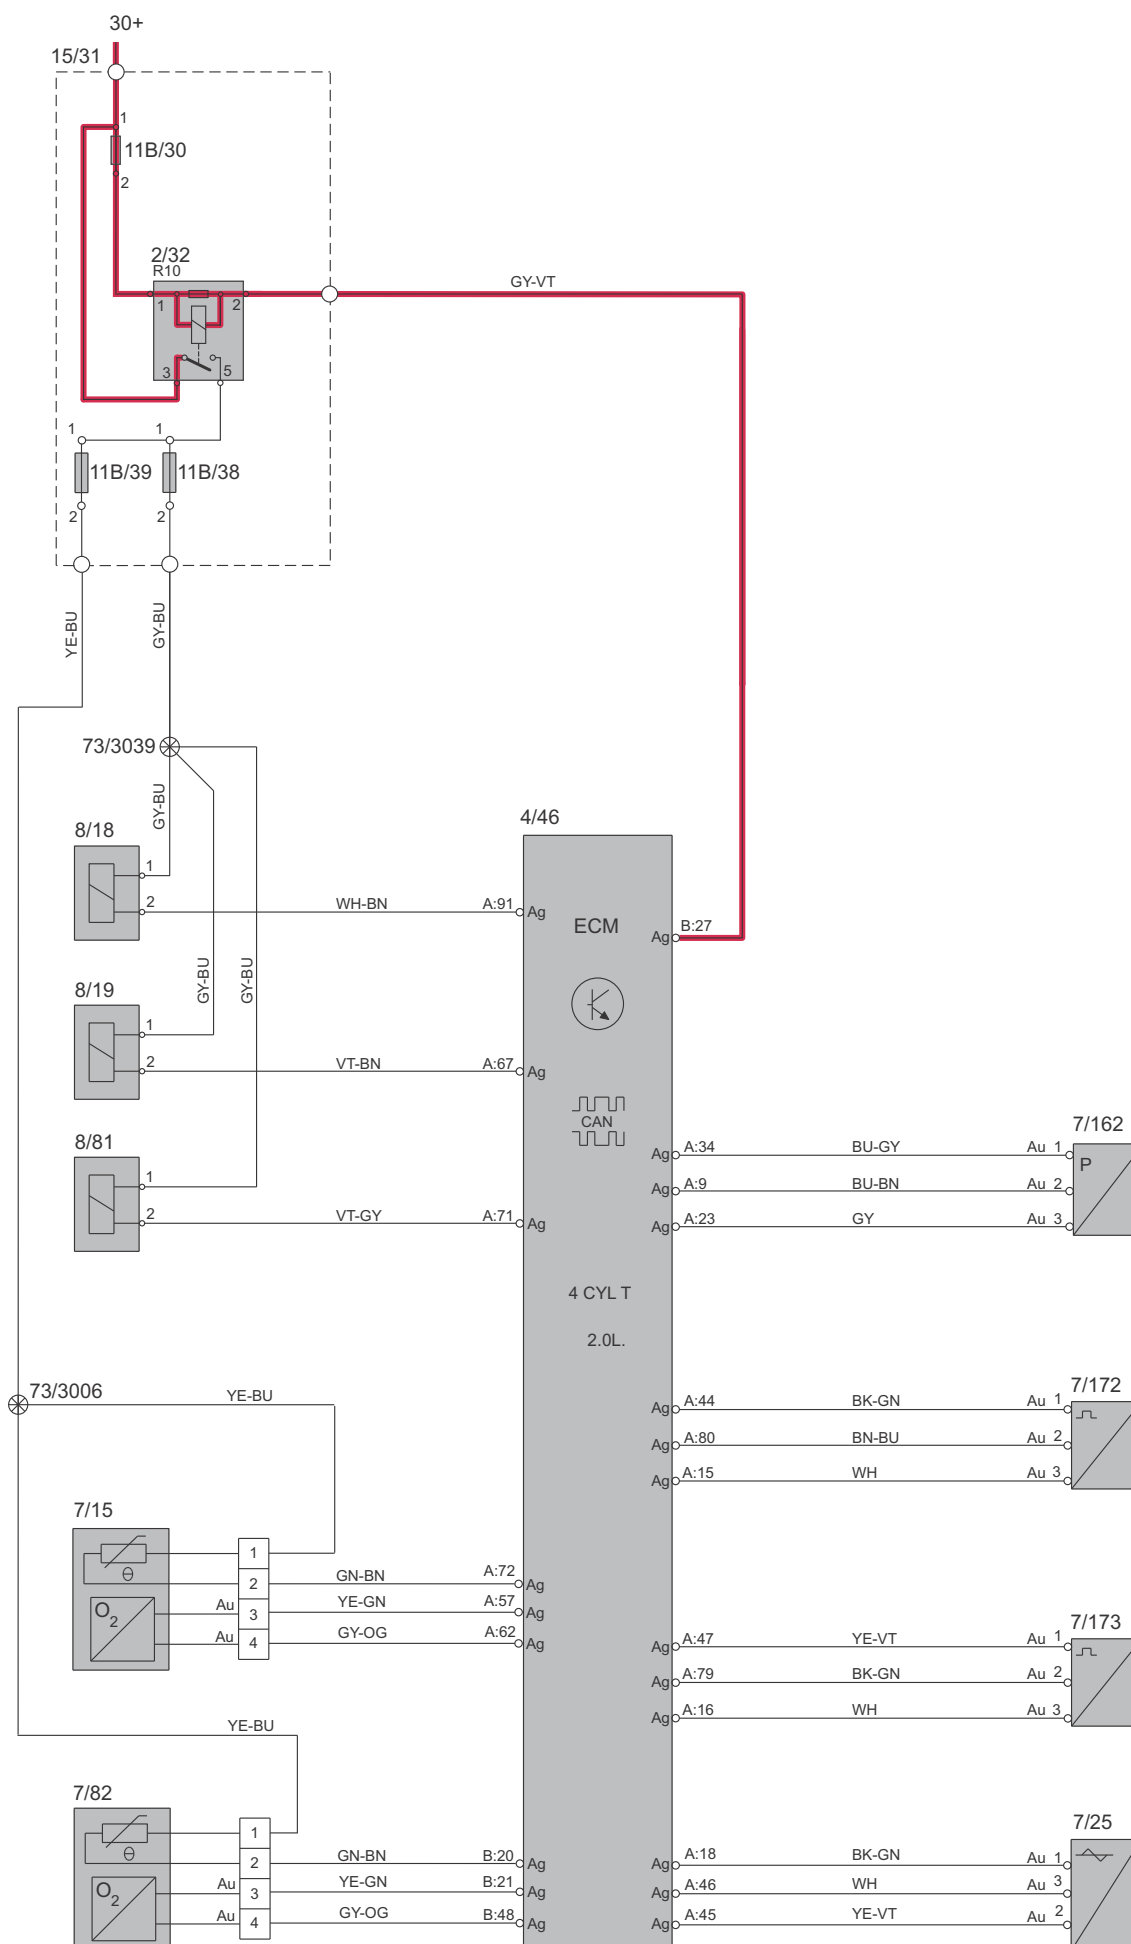


Group 28 Ignition and control system Emission control 5-Cyl. Turbo

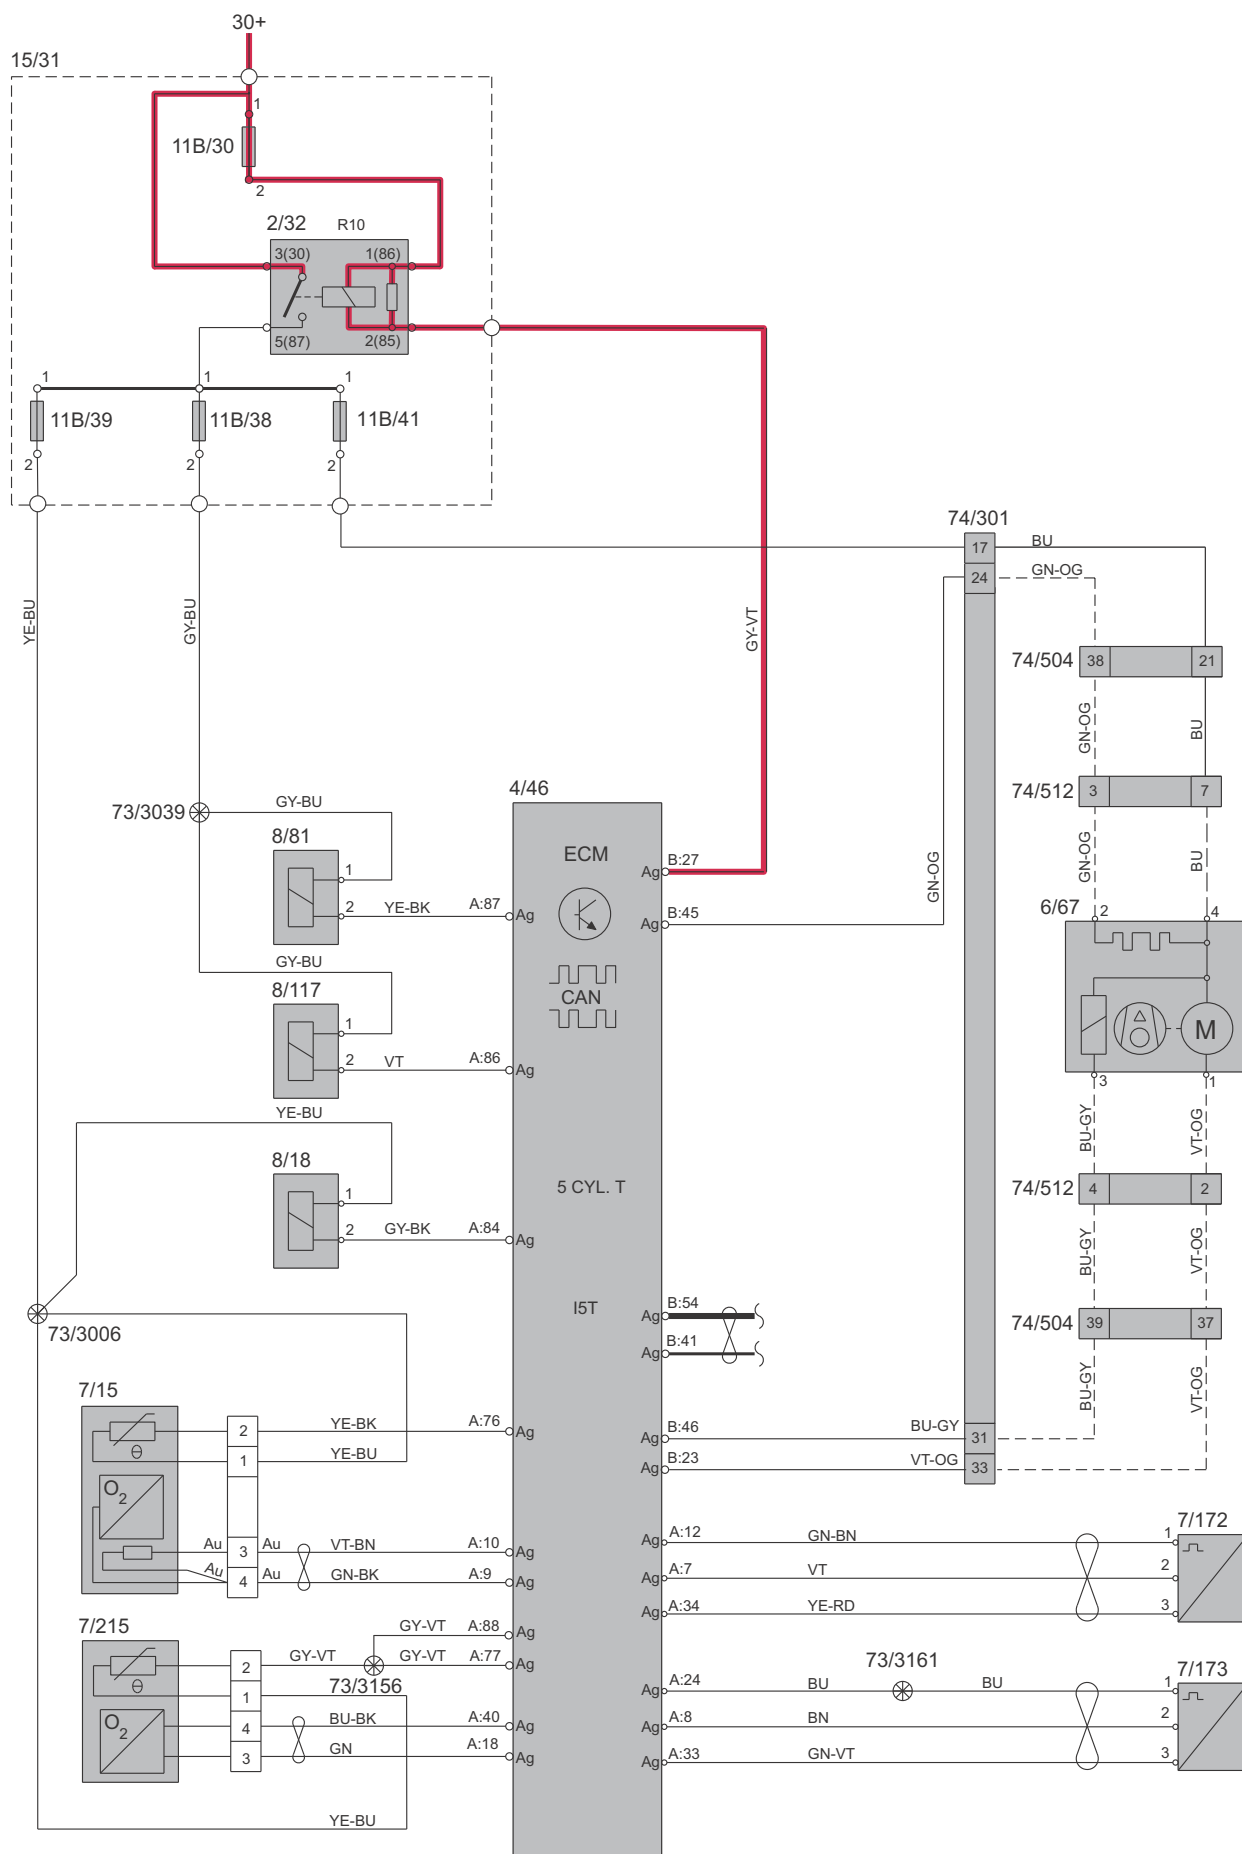


Group 28 Ignition and control system
Emission control 6-Cyl.

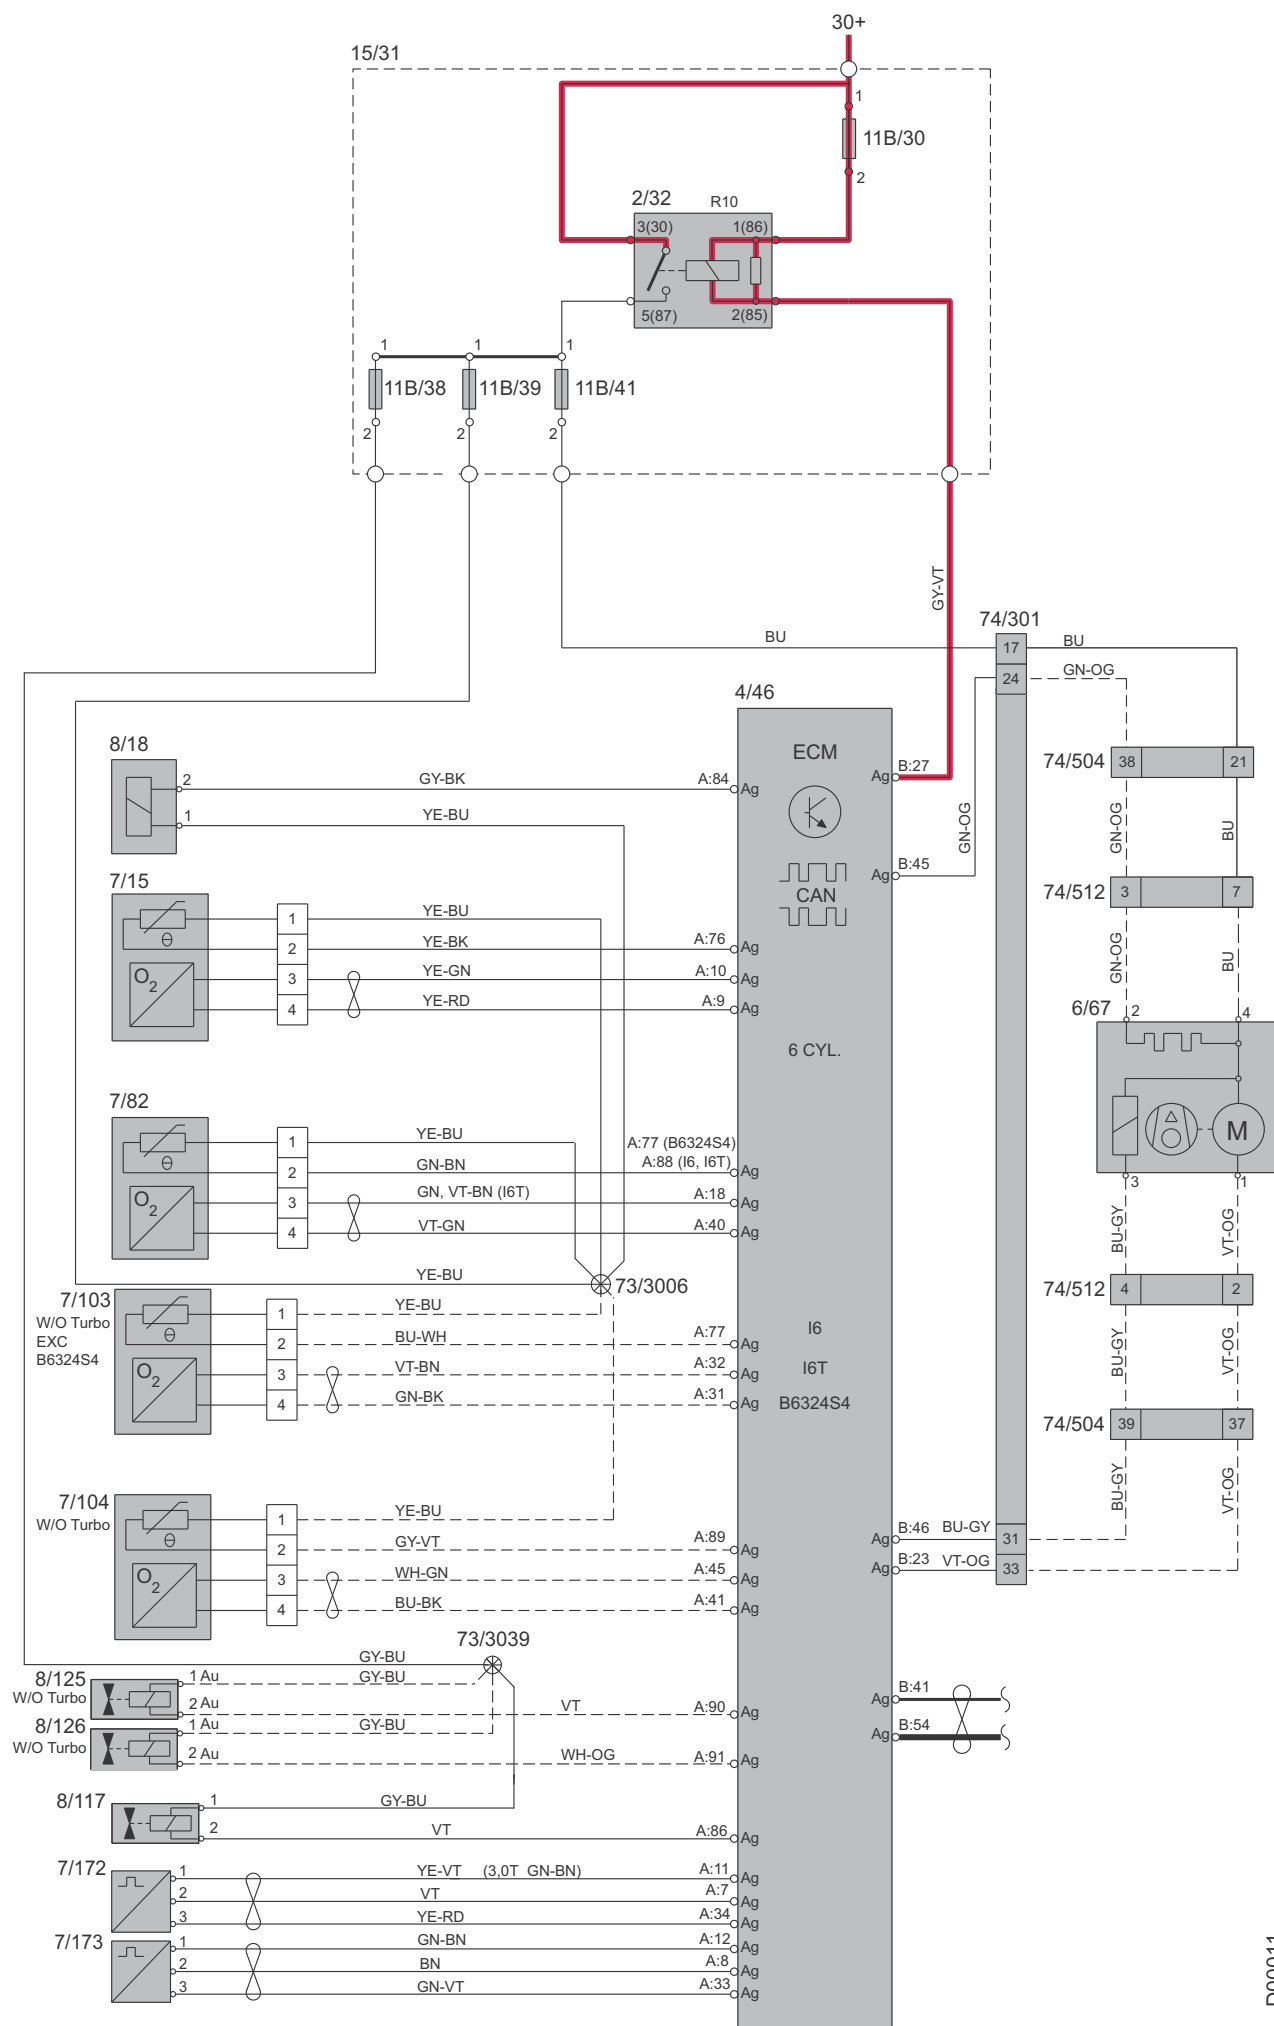

Group 32 Alternator and voltage regulator
Power supply 4-Cyl. without Start/Stop

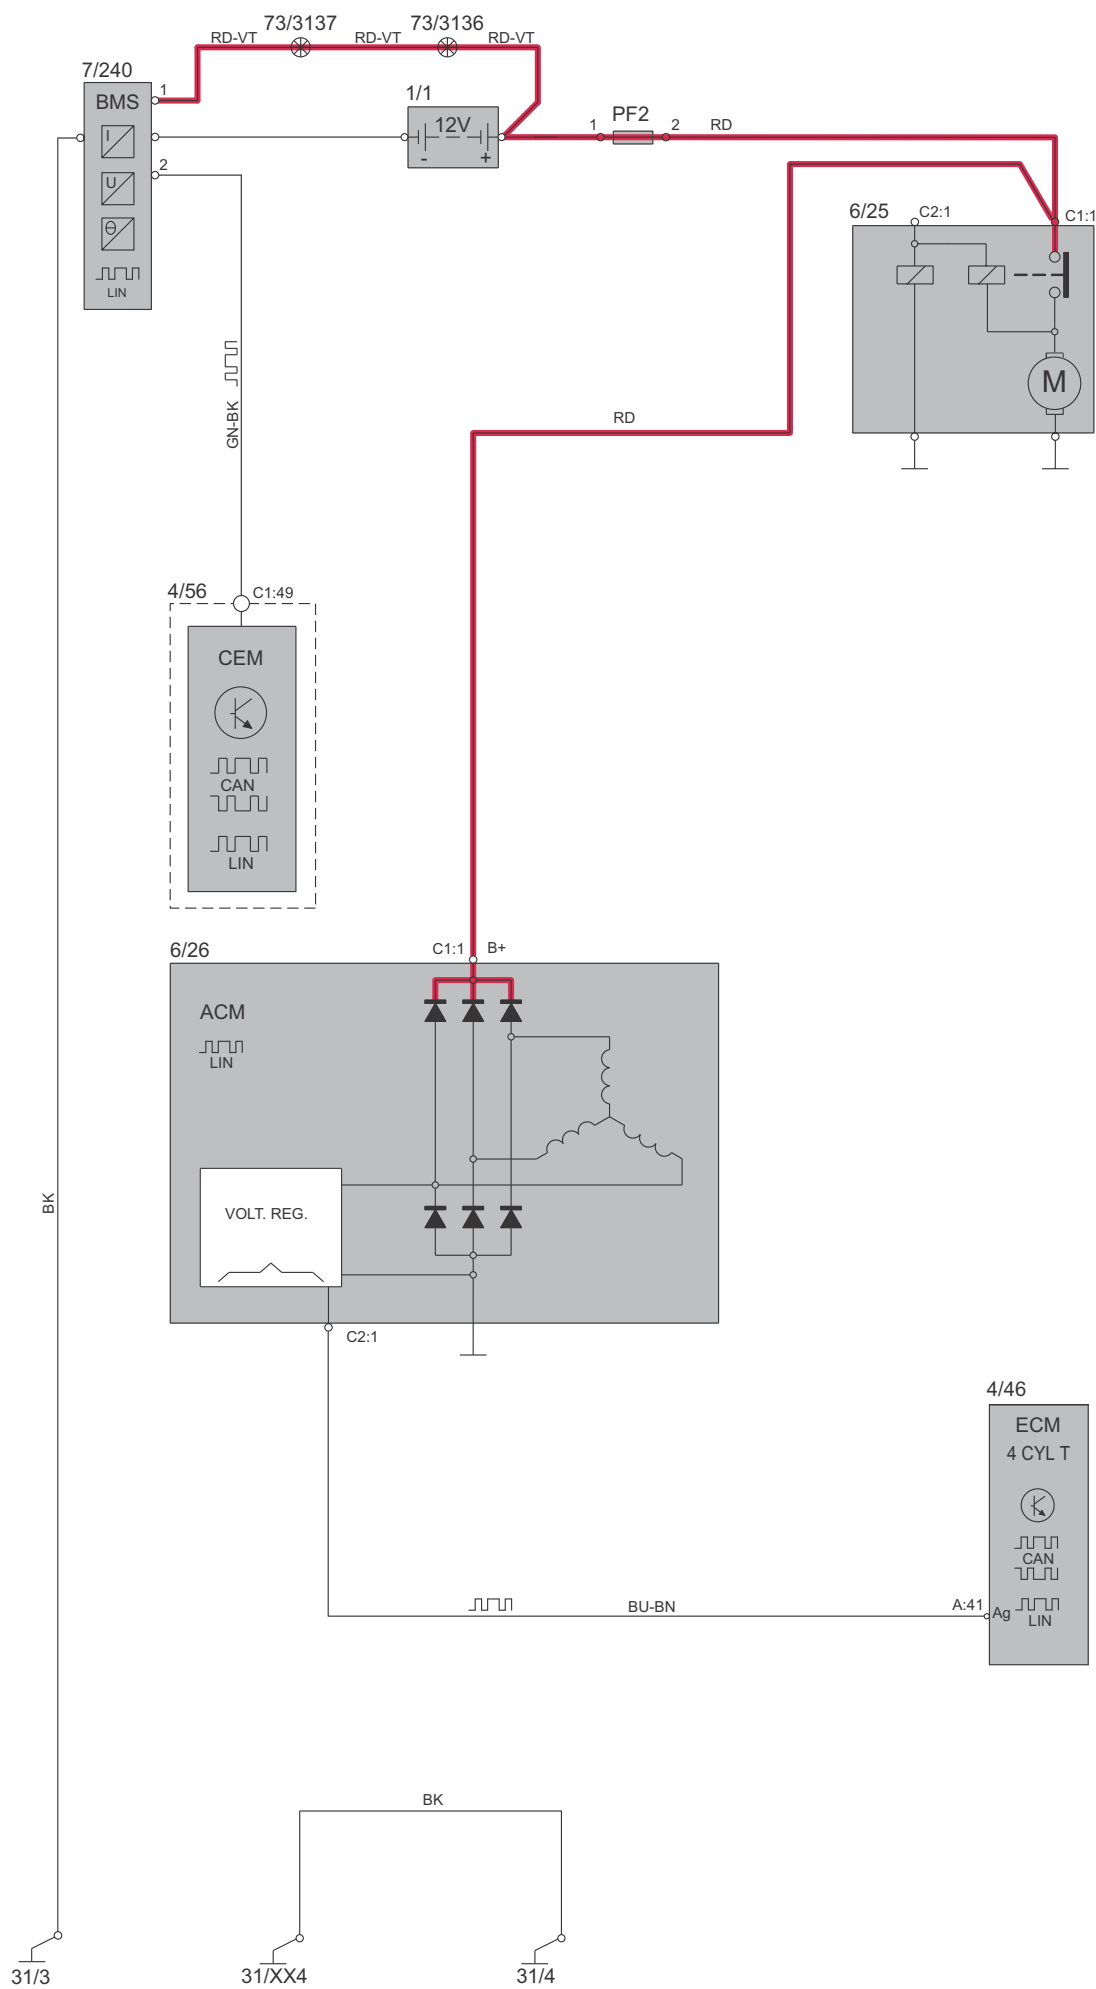


Group 32 Alternator and voltage regulator **Power supply 5-Cyl. & 6-Cyl. without Start/Stop**

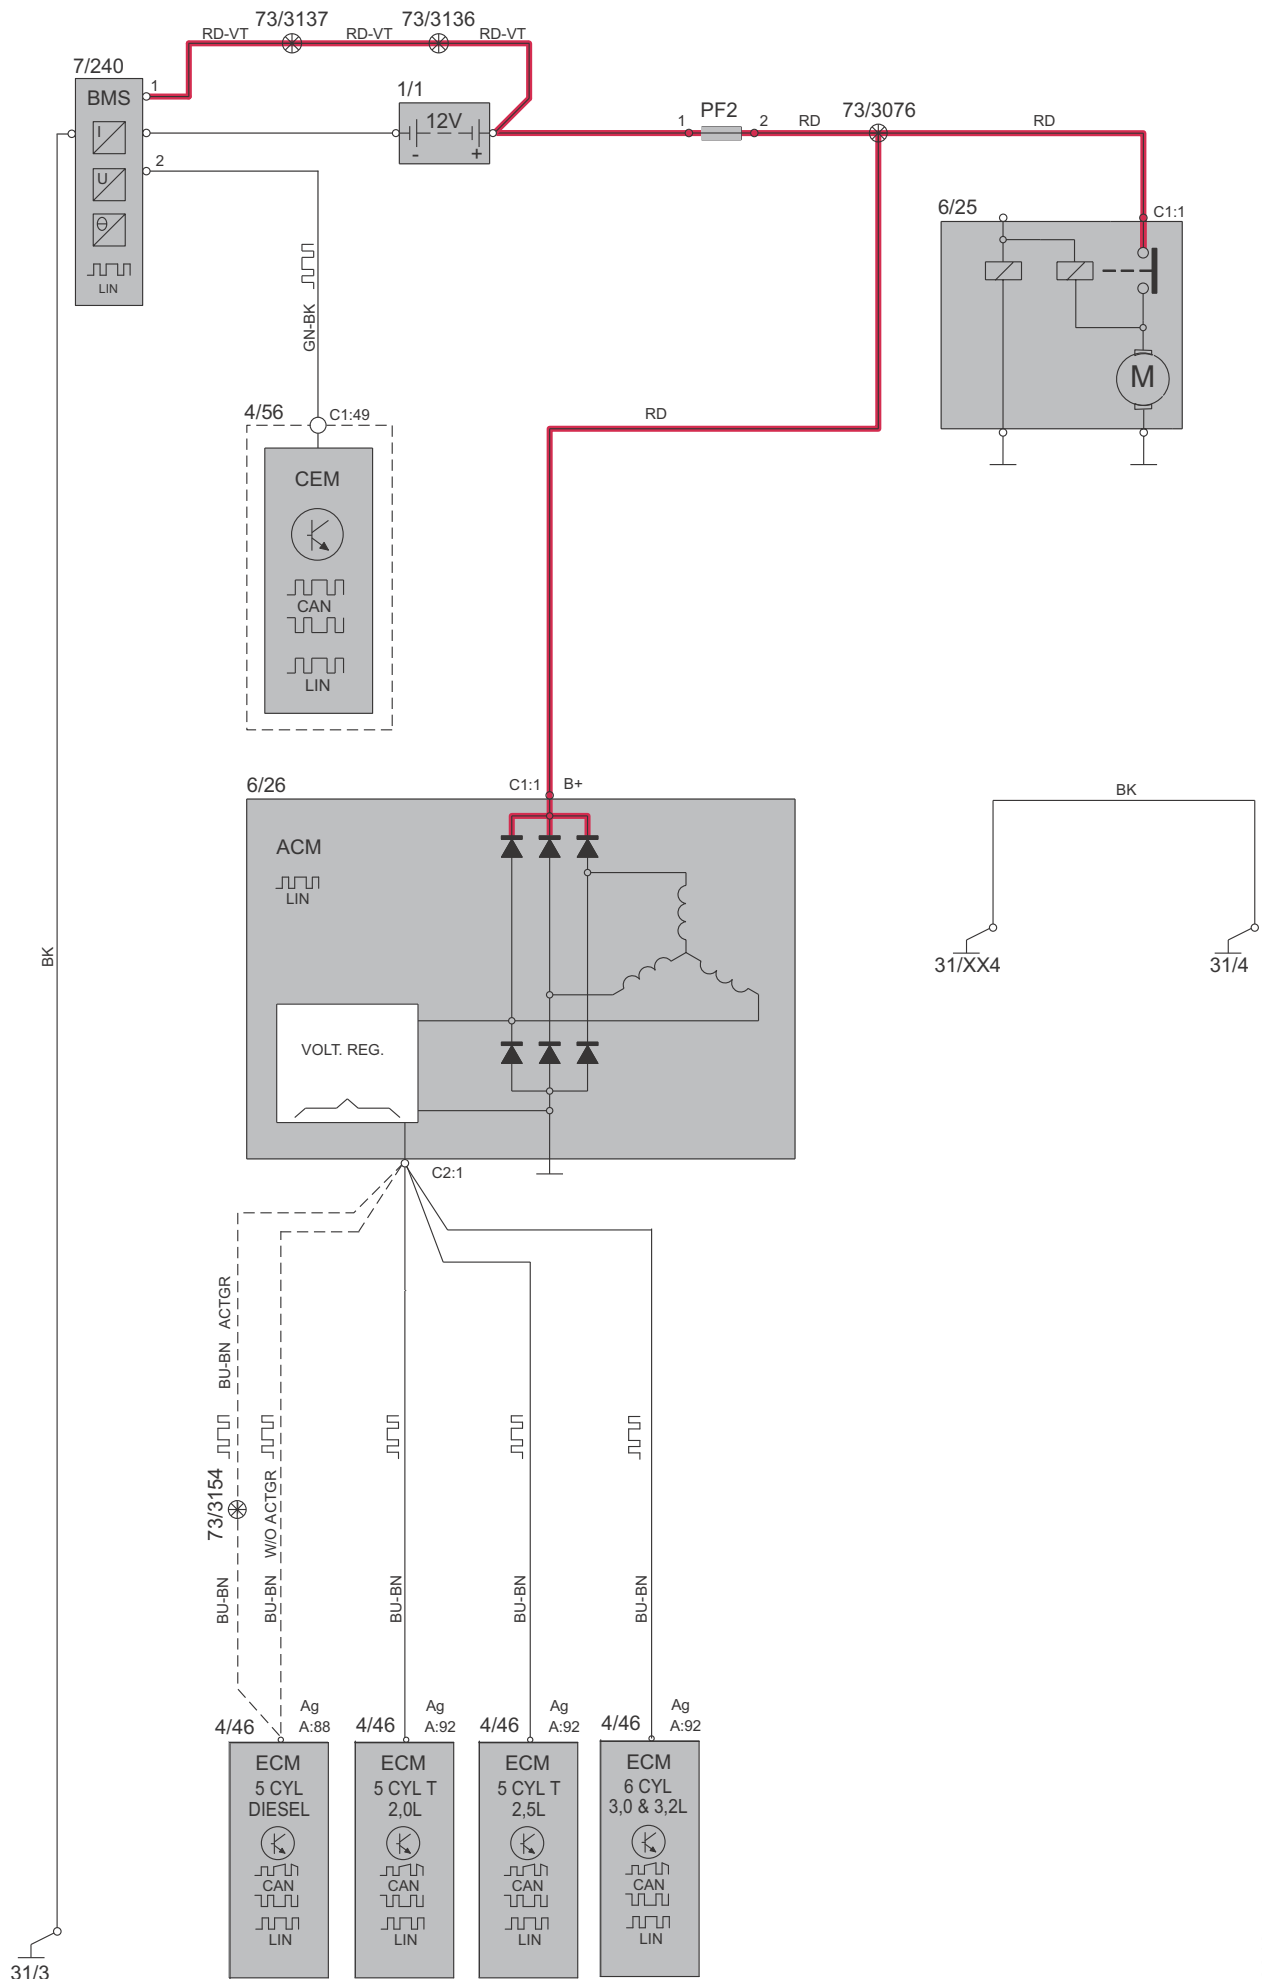

N00016


Group 32 Alternator and voltage regulator

Power supply 4-Cyl. & 5-Cyl. with Start/Stop

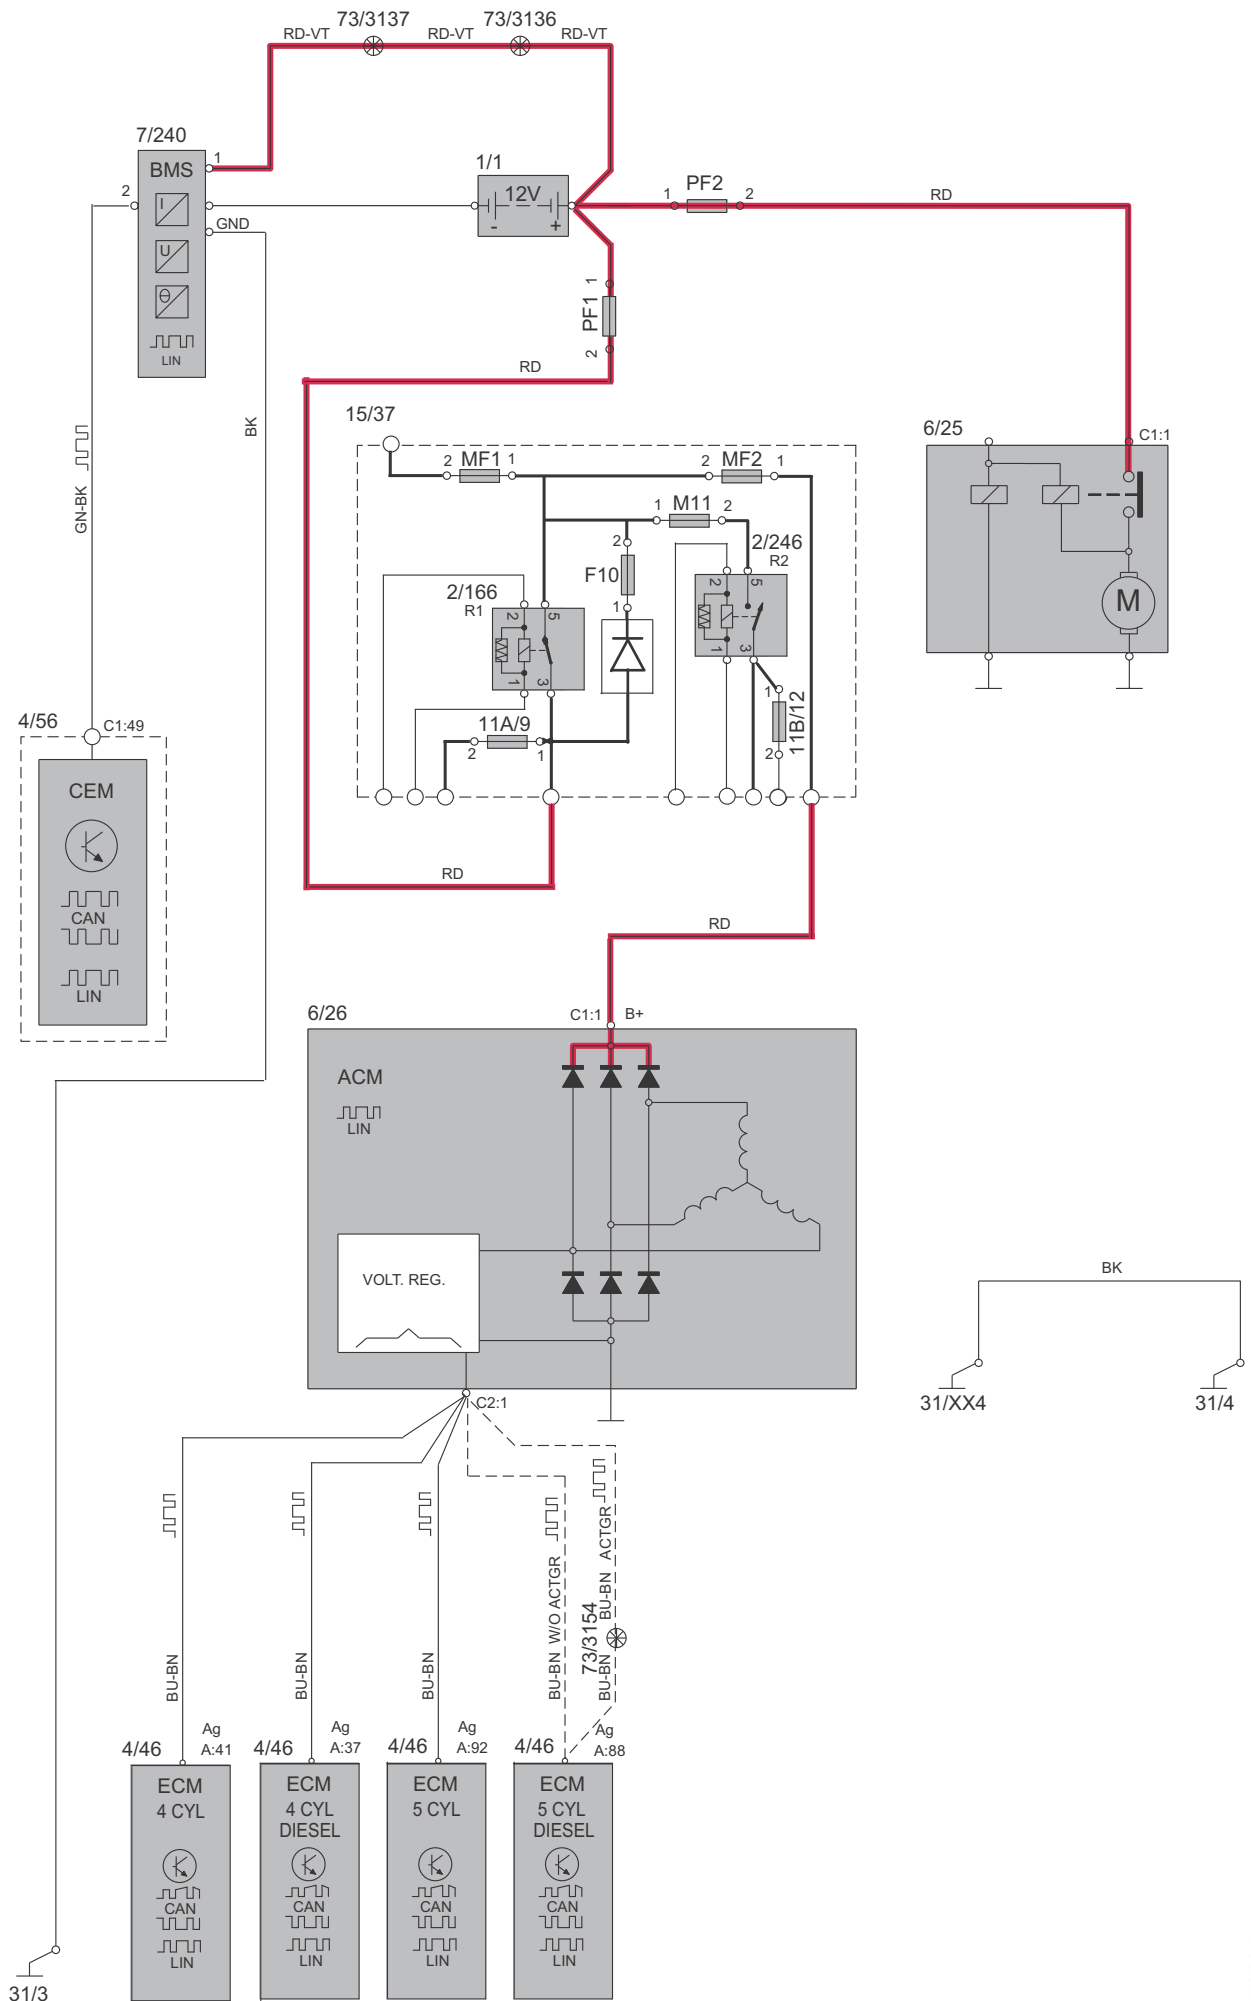


N00015


Group 33 Starting system
Starting system 4-Cyl.

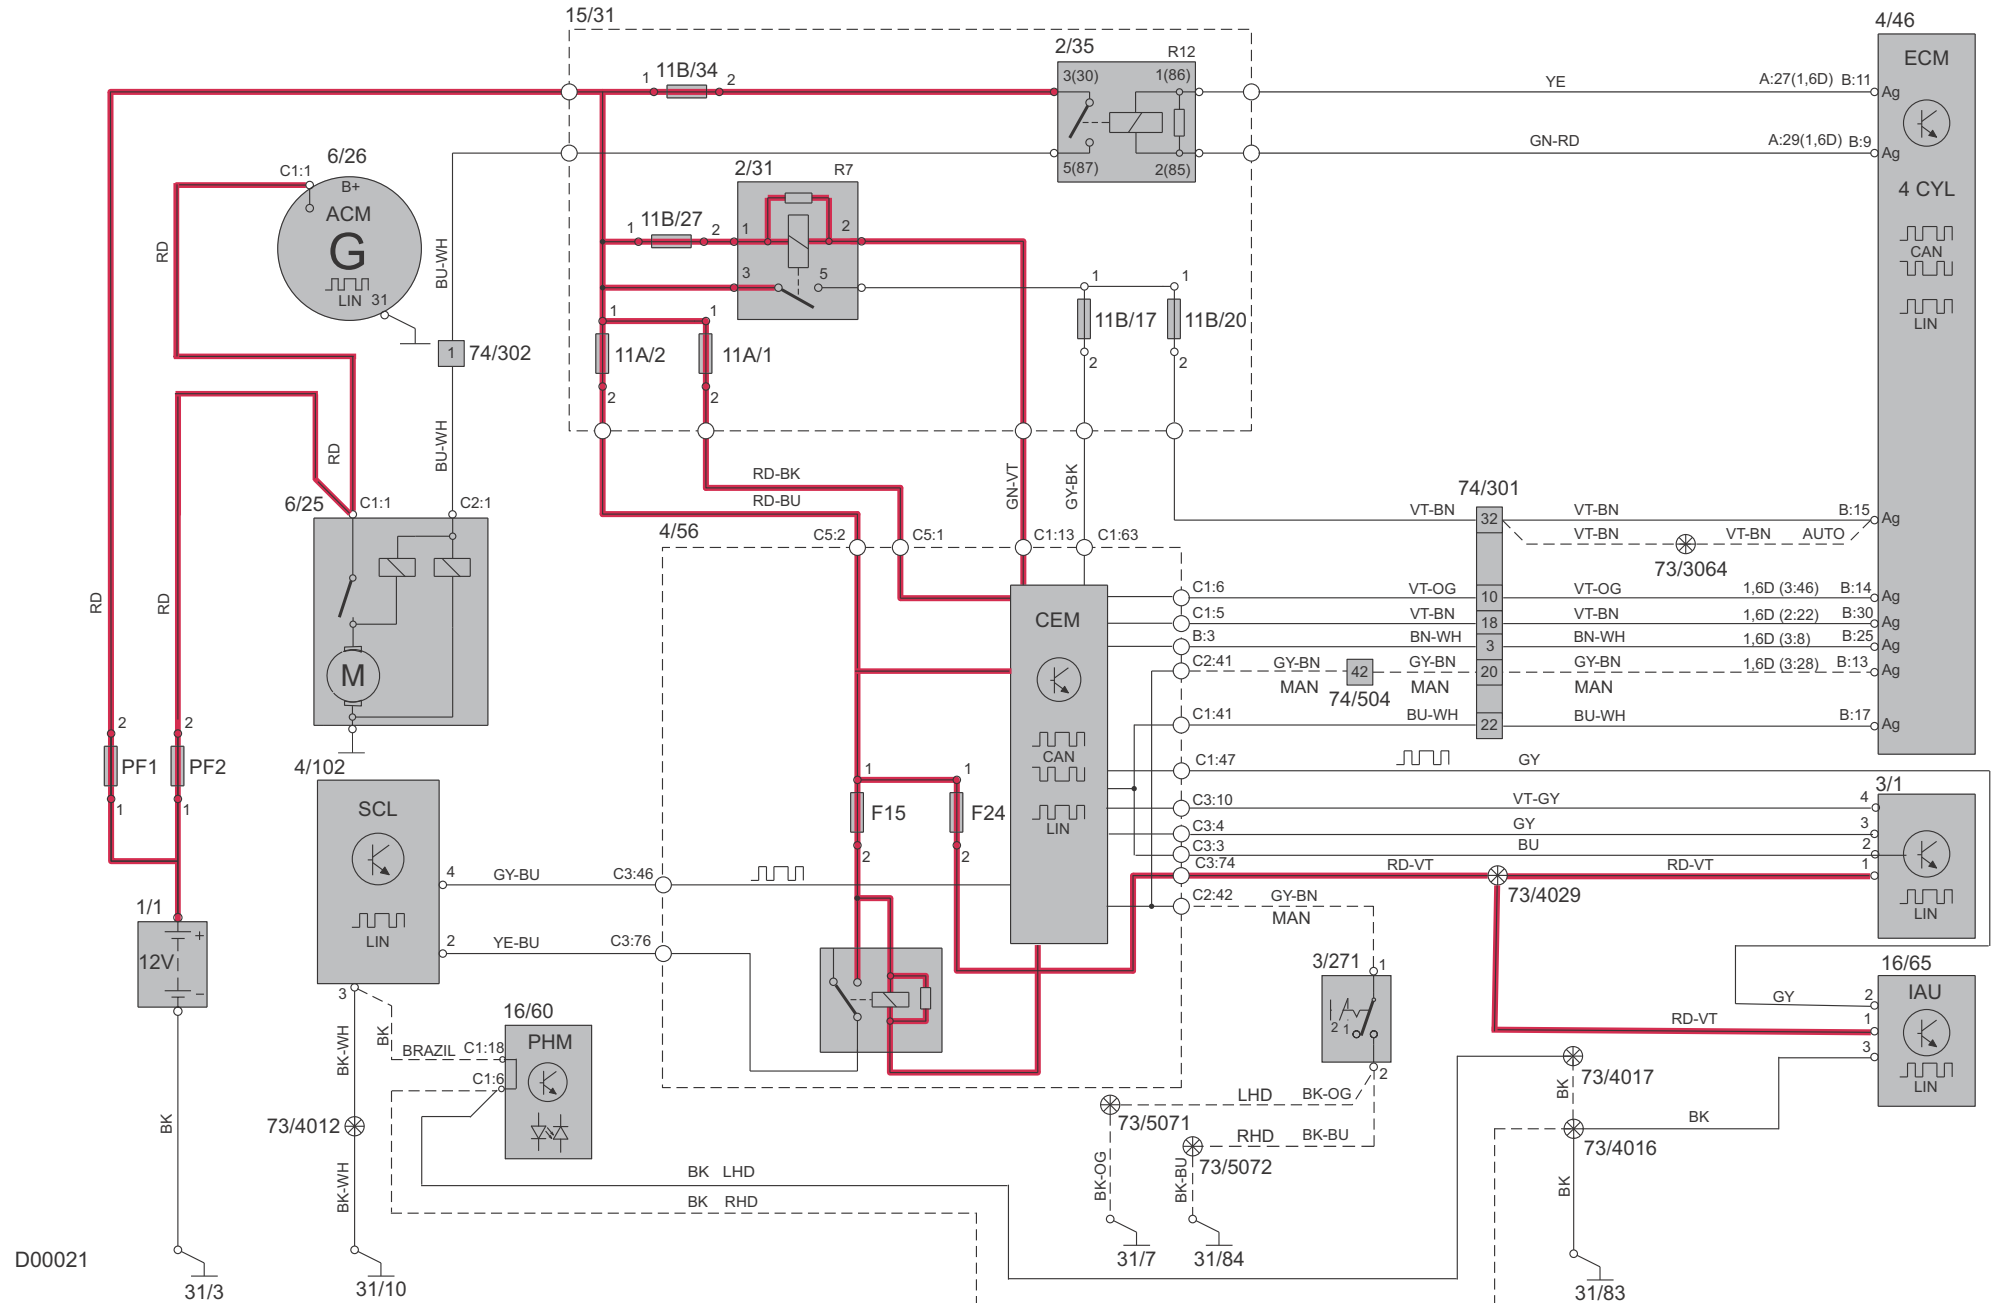

Group 33 Starting system
Starting system, 5-Cyl. & 6-Cyl.

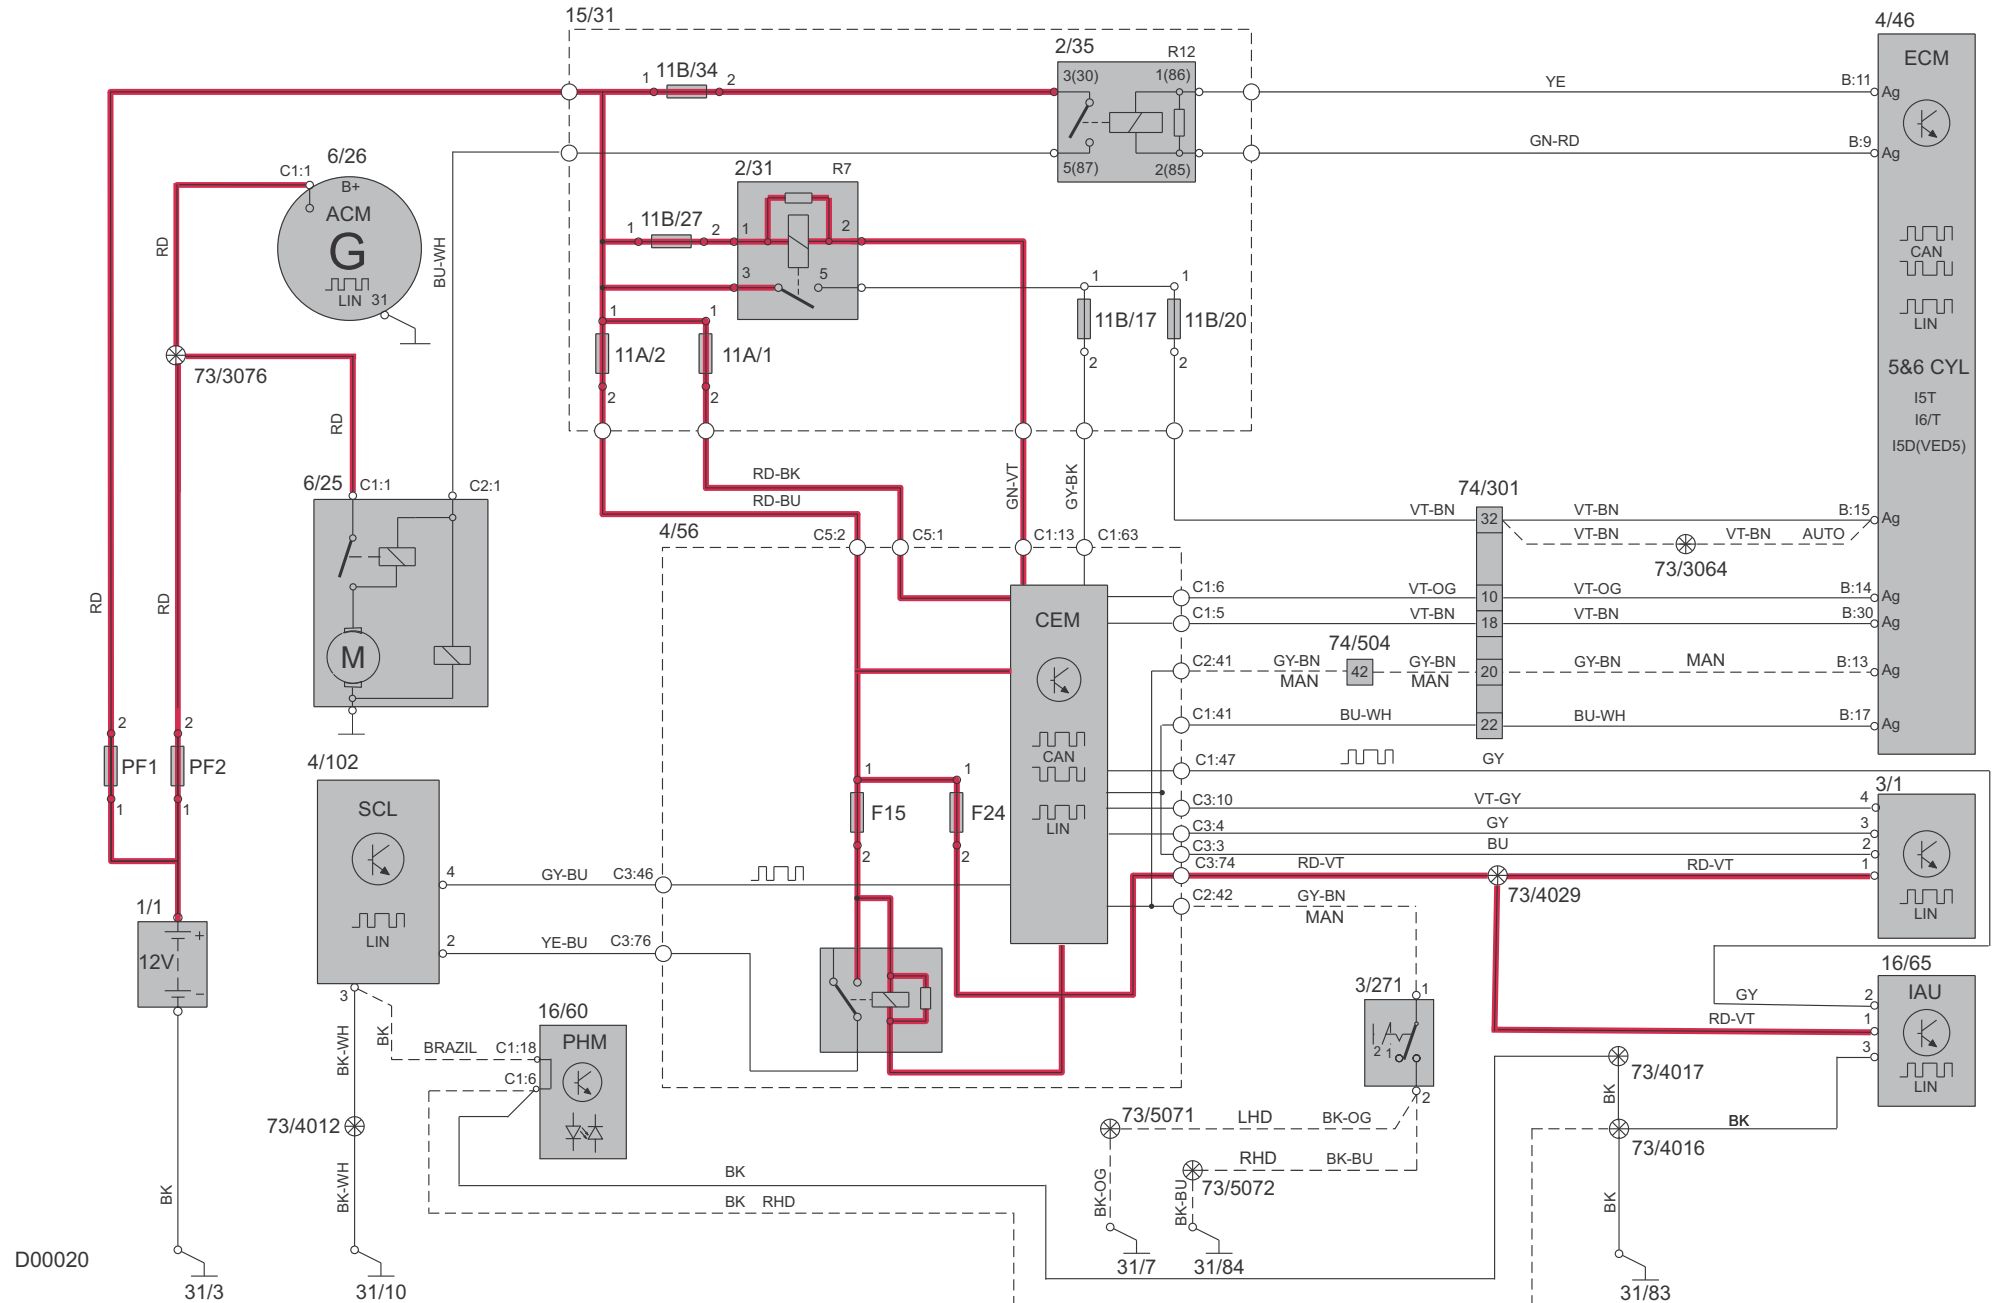


Group 35 Lighting High and low beam

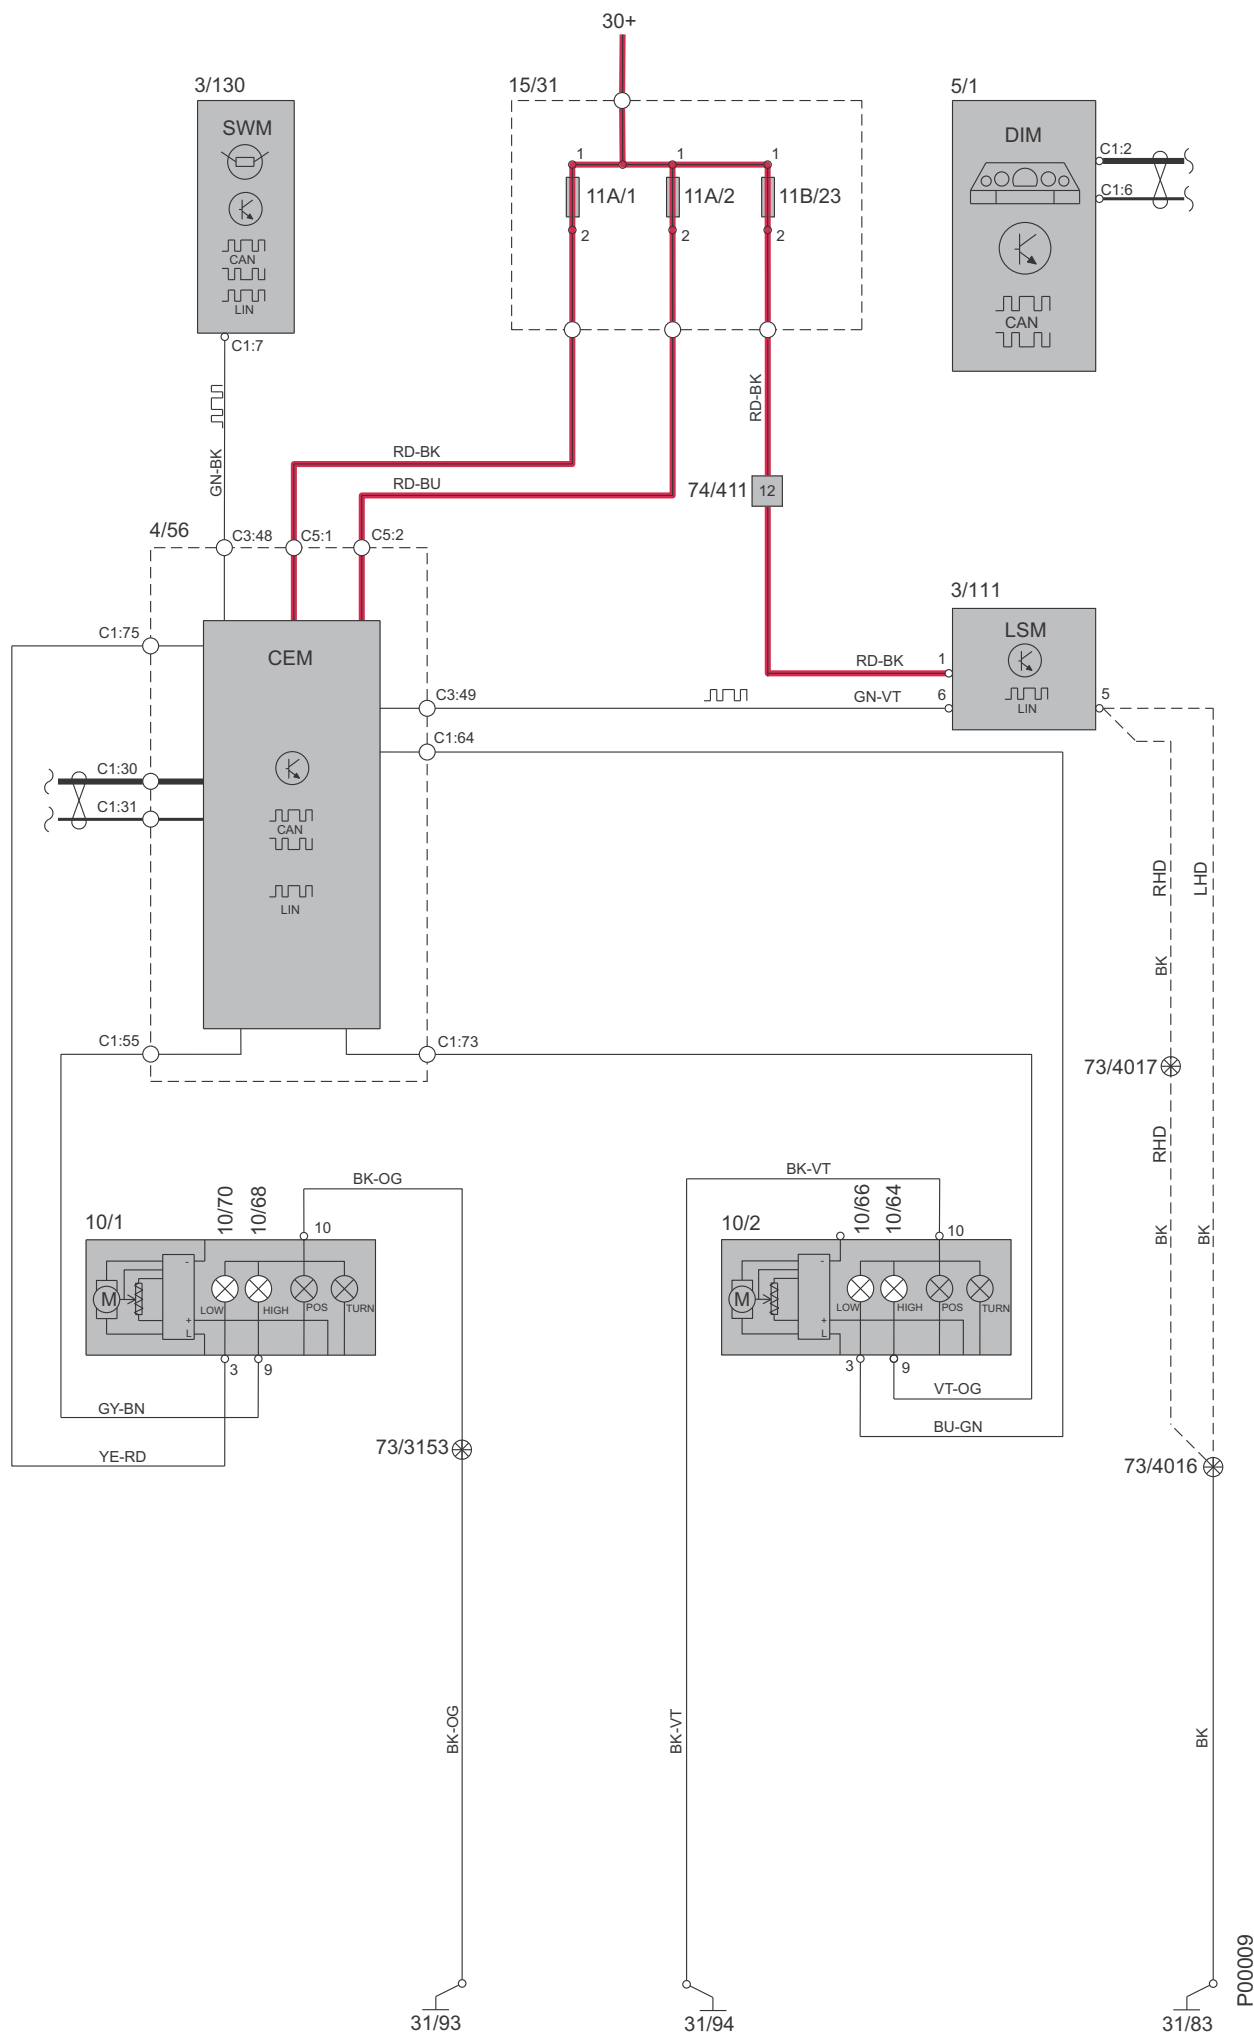


Group 35 Lighting

High and low beam (Dual Xenon)

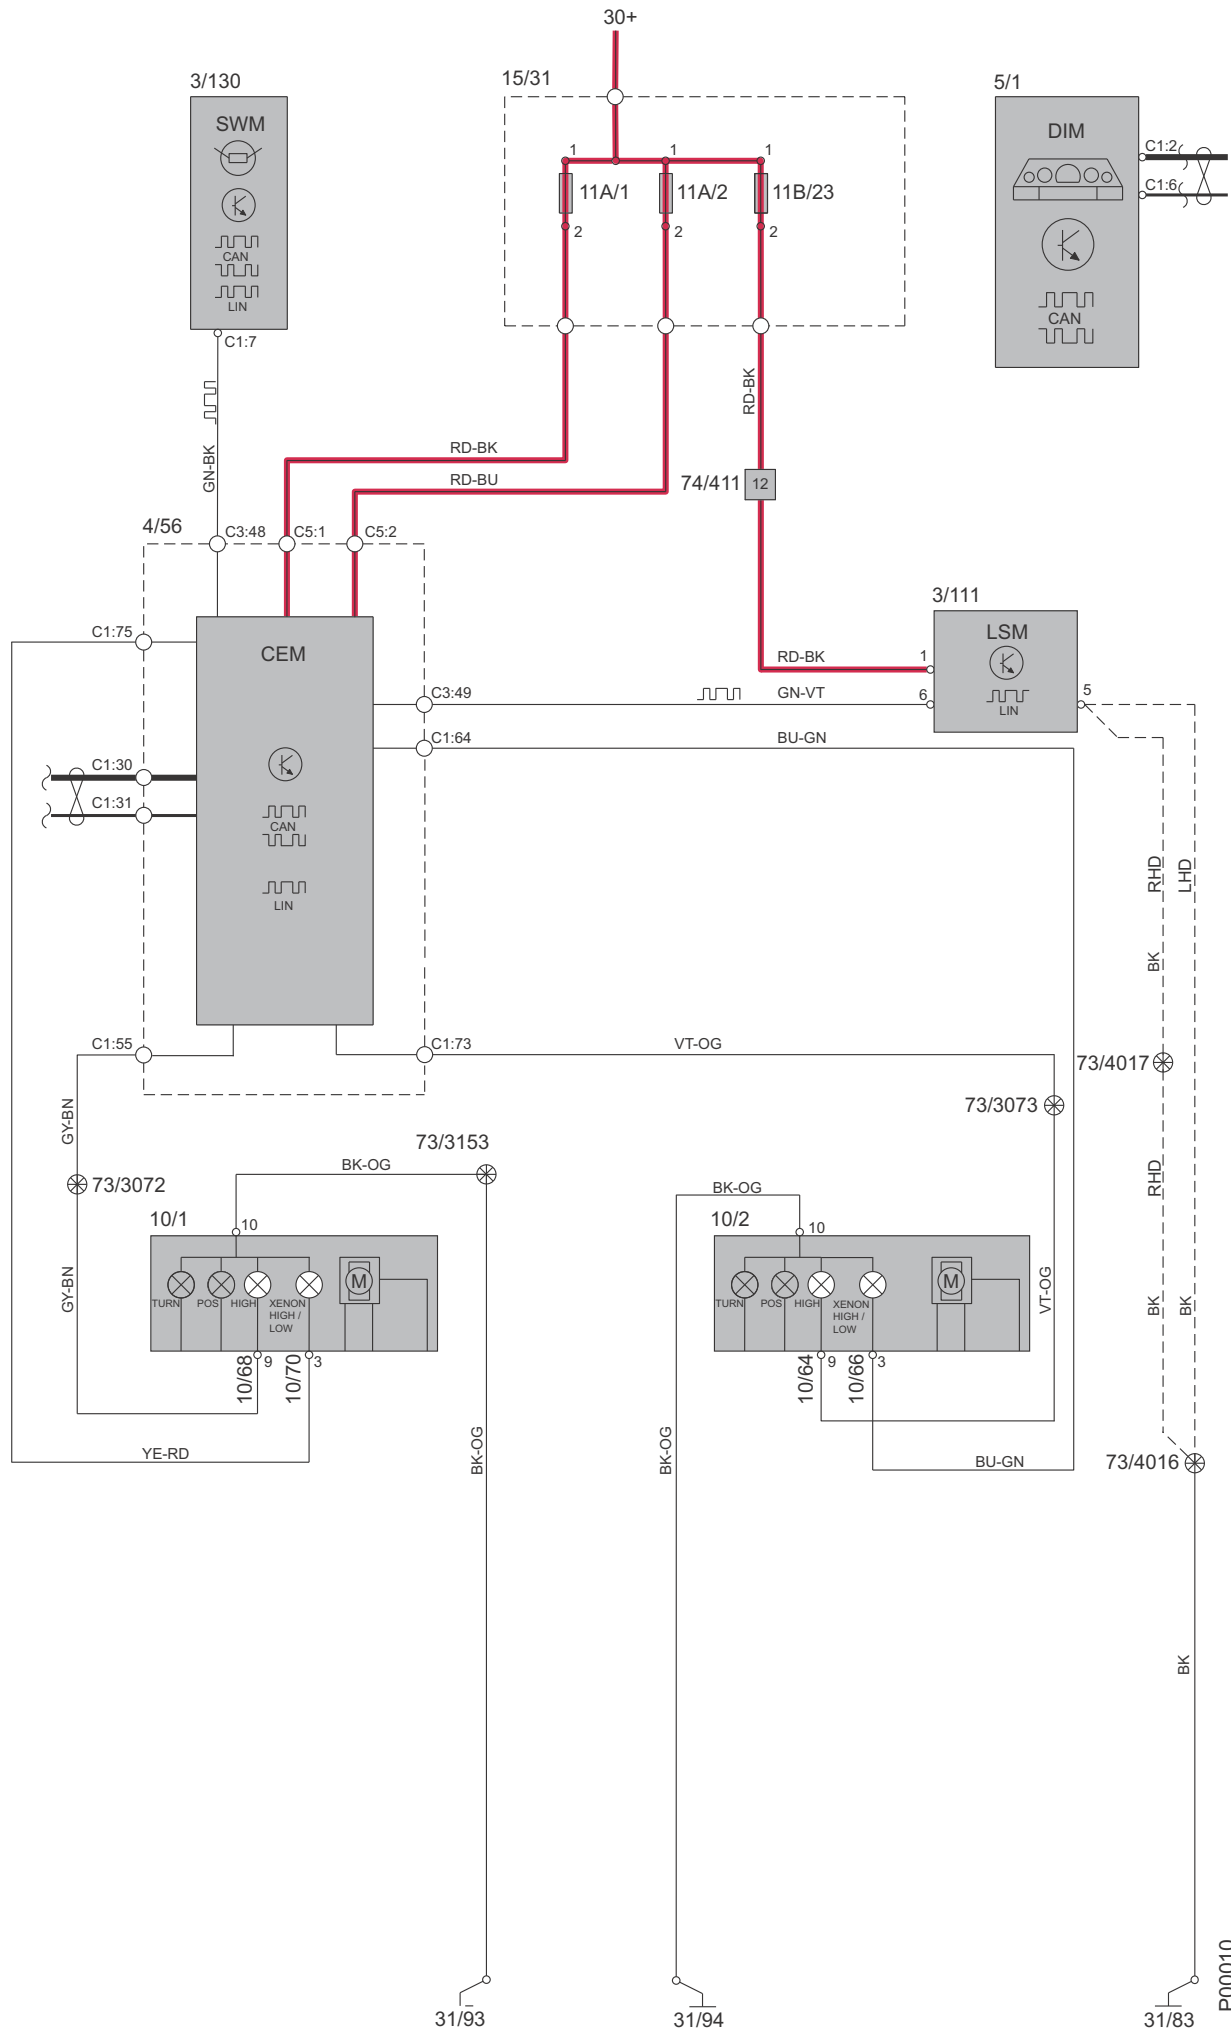

Group 35 Lighting


Beam length adjustment, manual

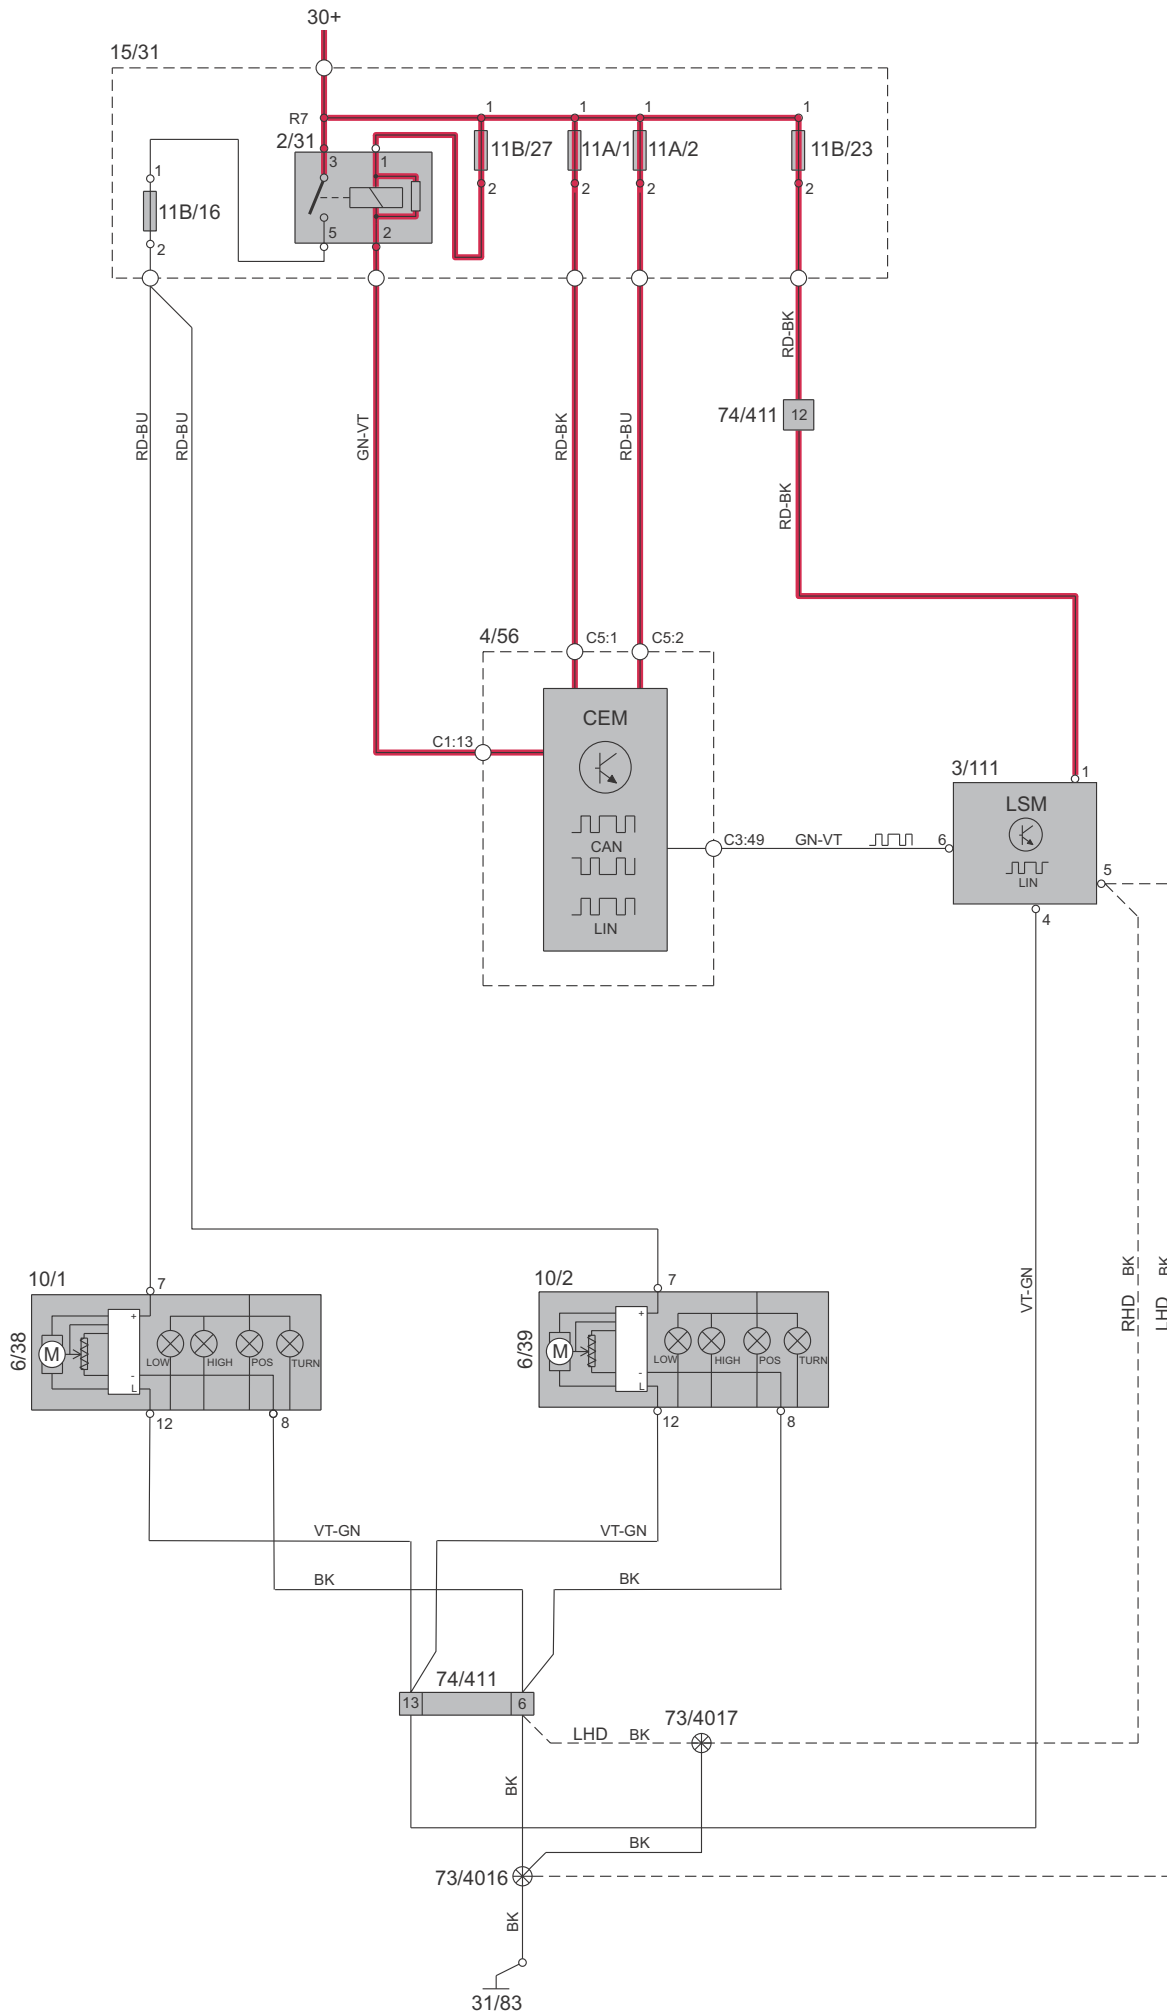

I01022


Group 35 Lighting

Running/Parking light, Tail lights S60

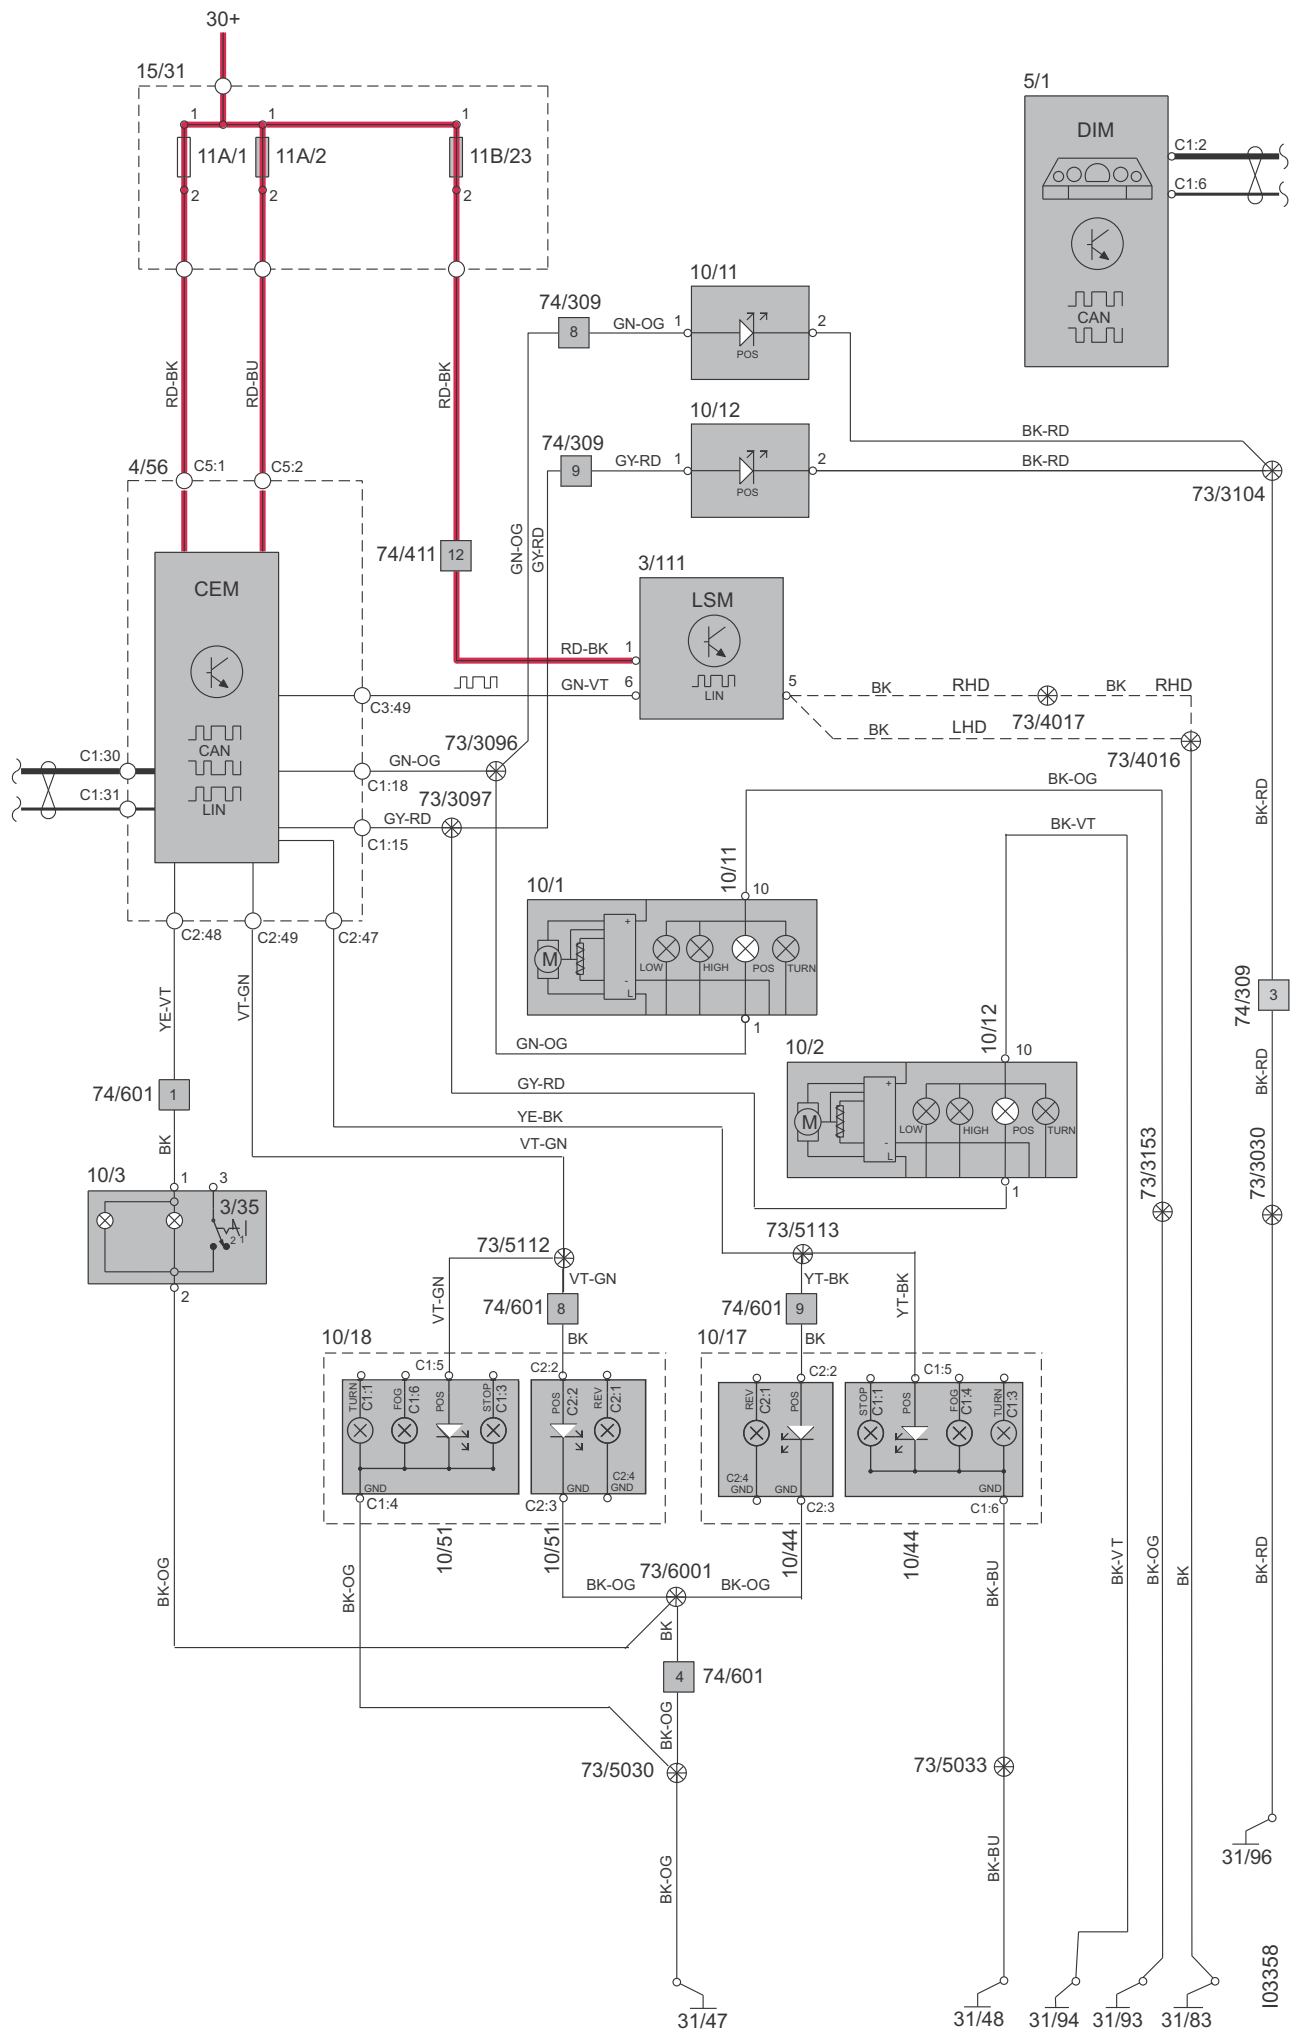


Group 35 Lighting


Running/Parking light, Tail lights V60

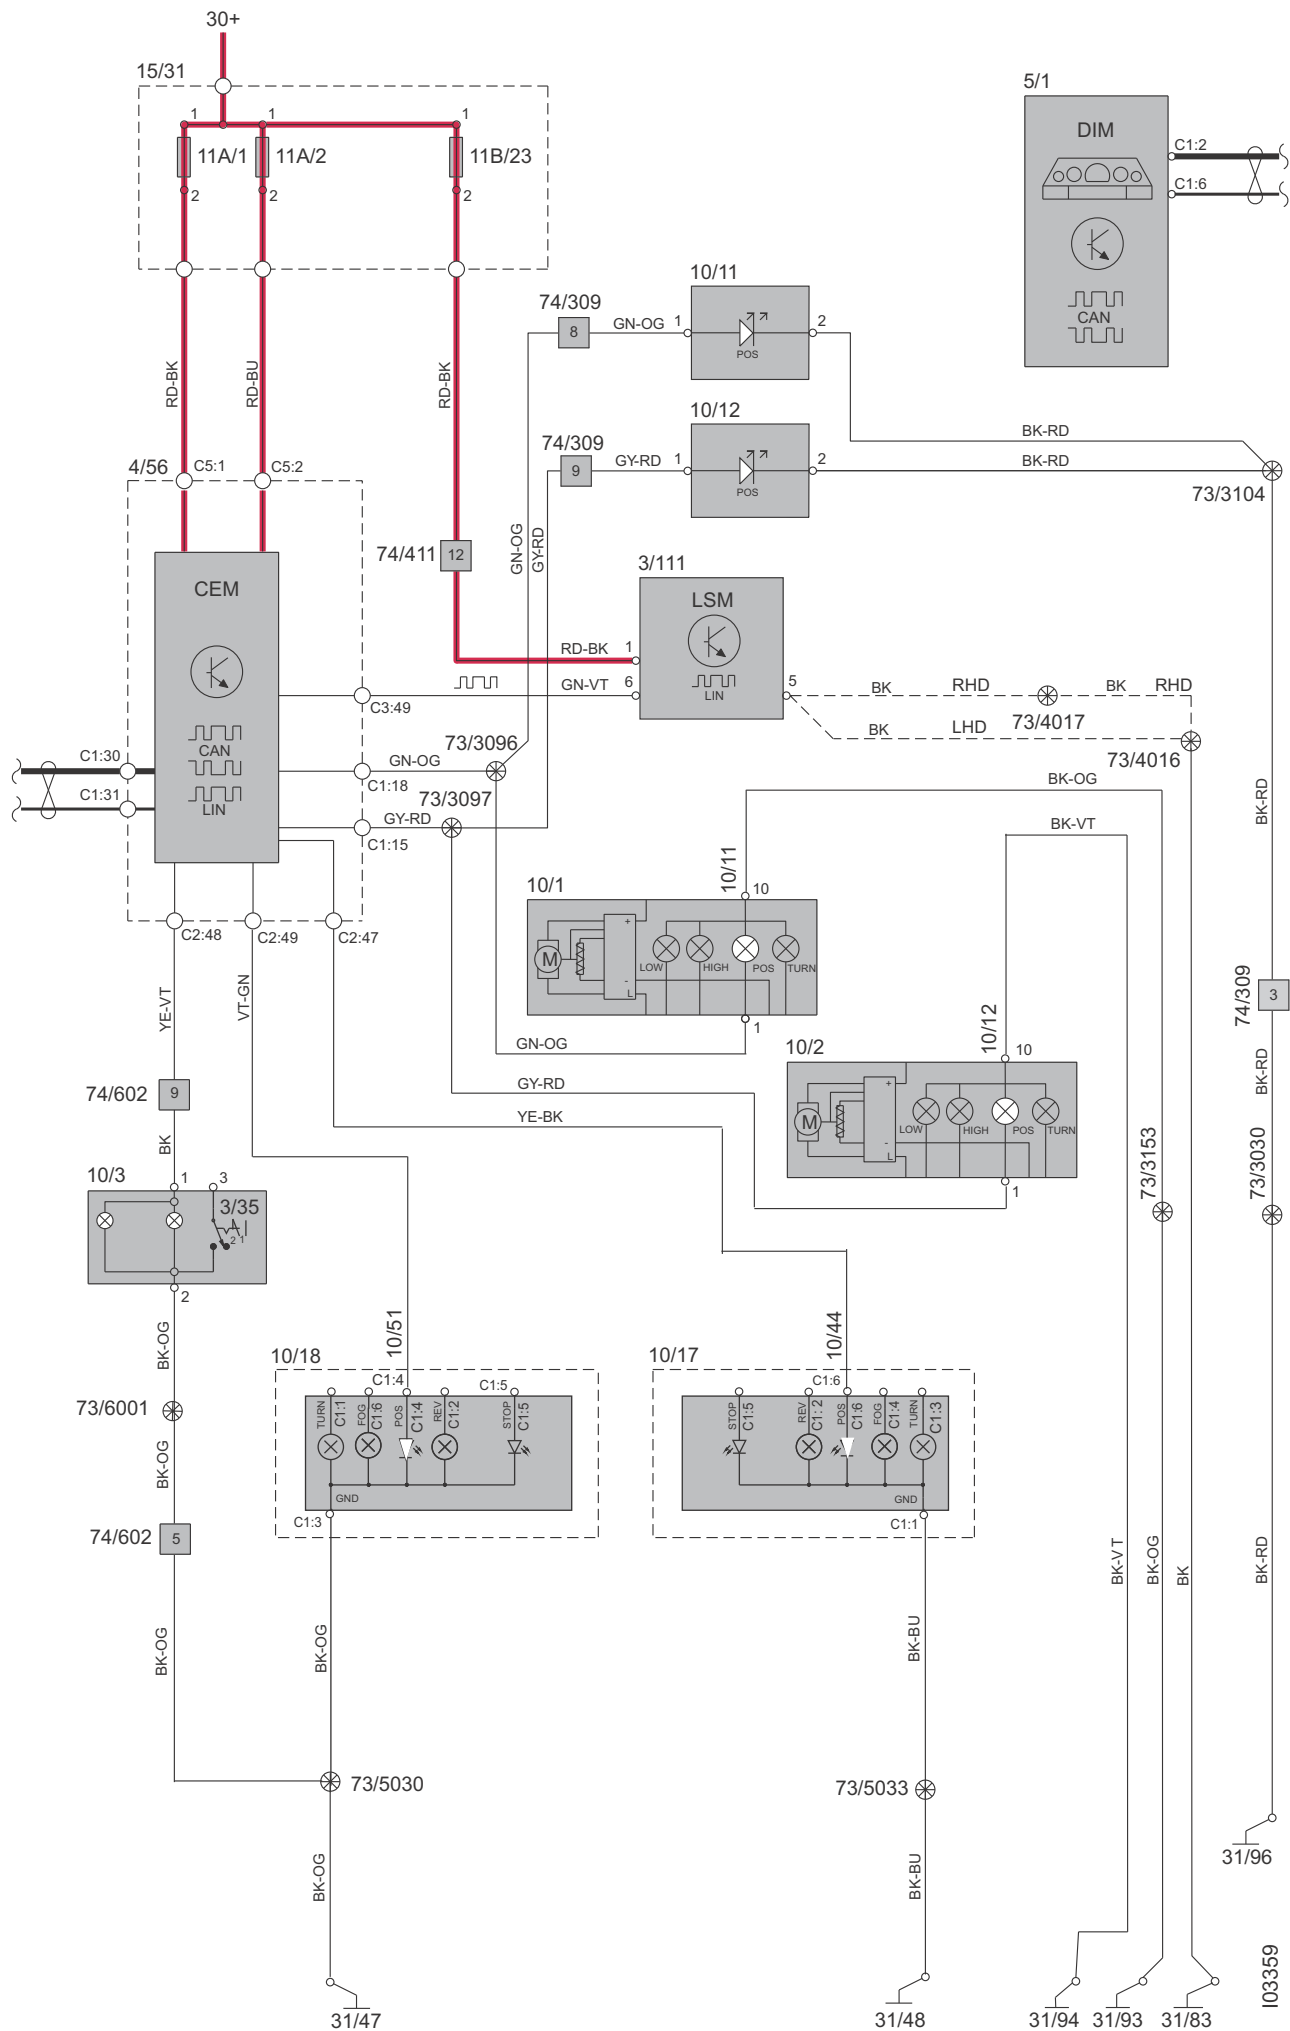


Group 35 Lighting Fog lights S60

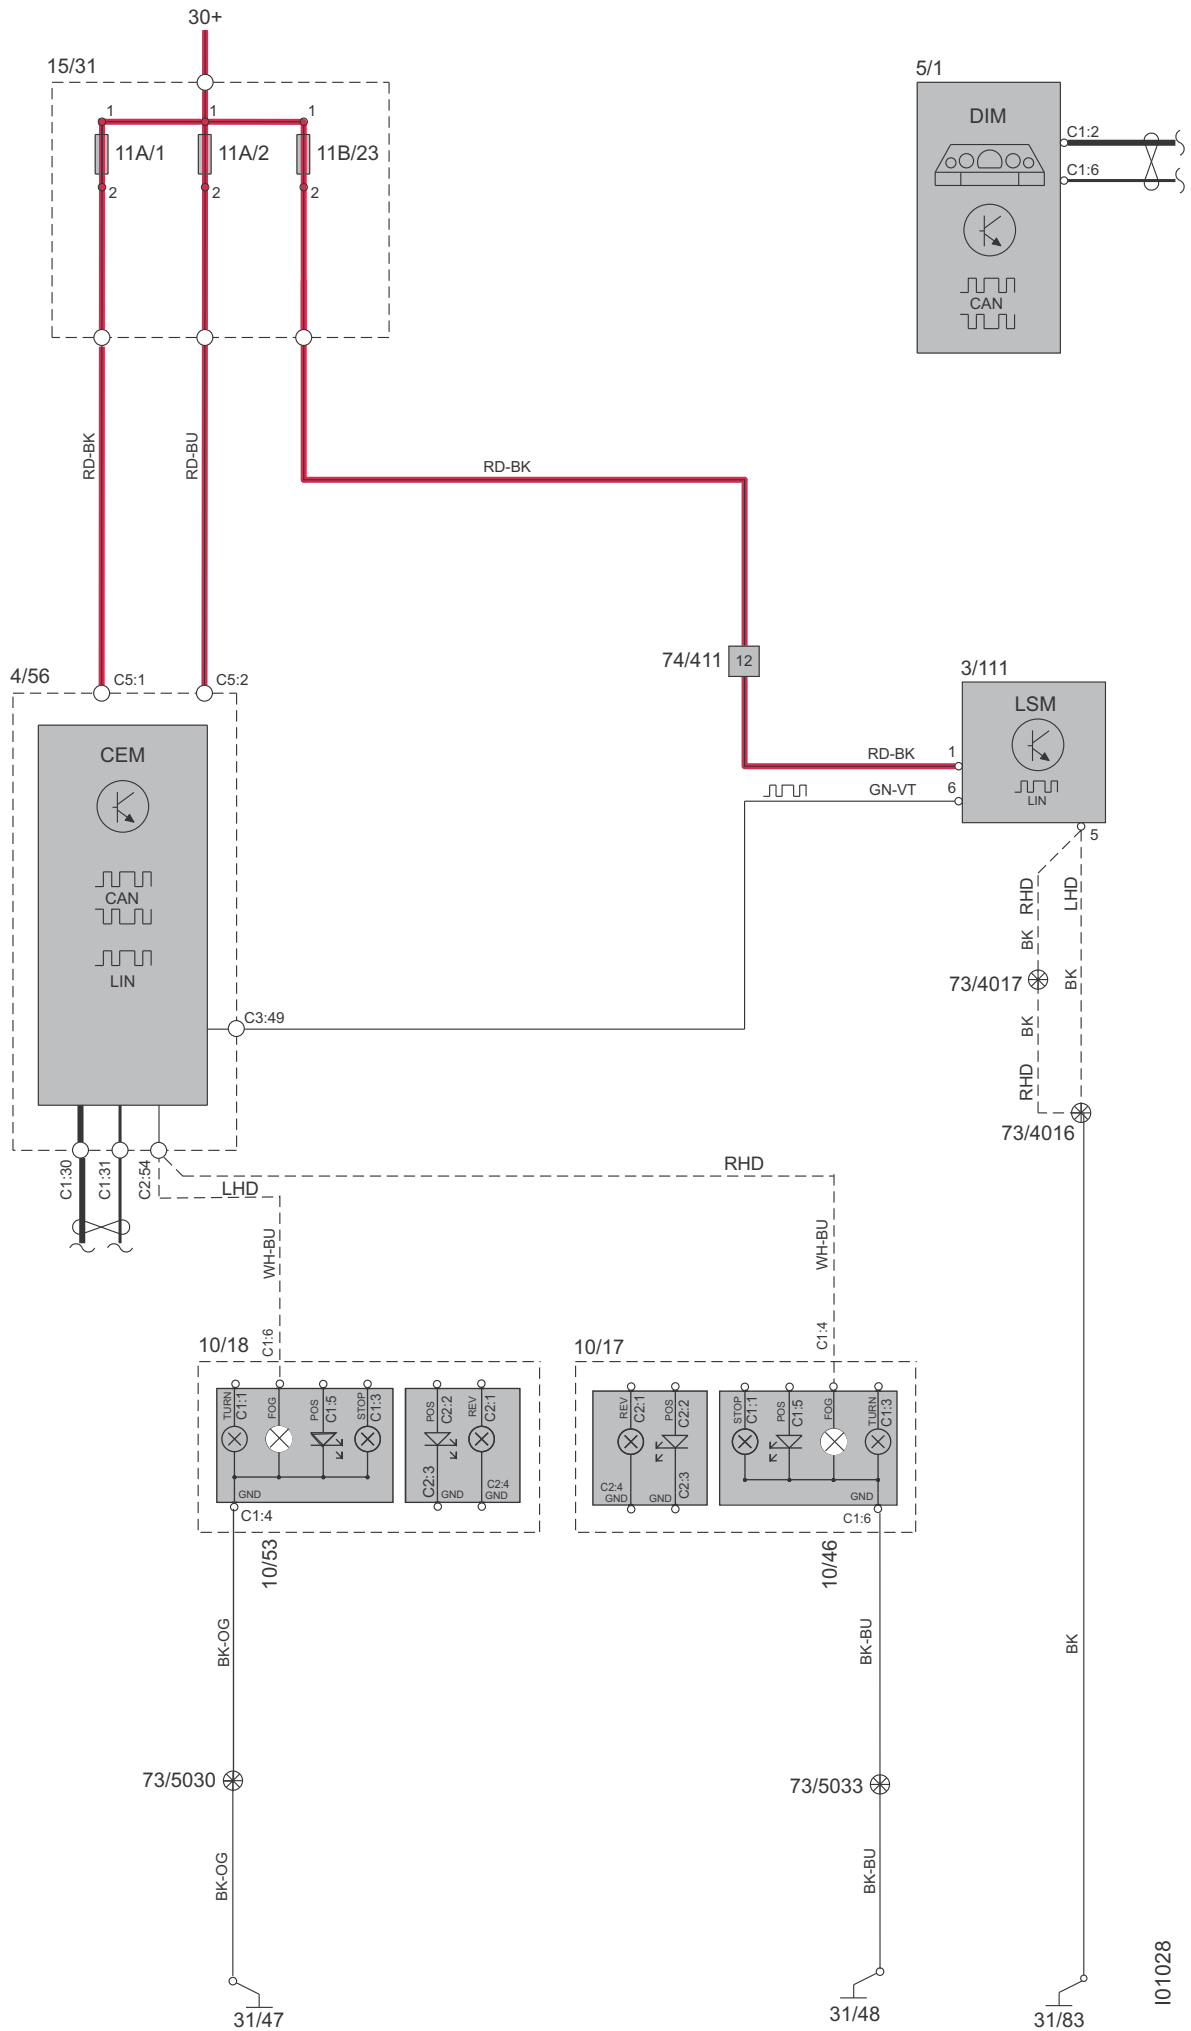


Group 35 Lighting Fog lights V60

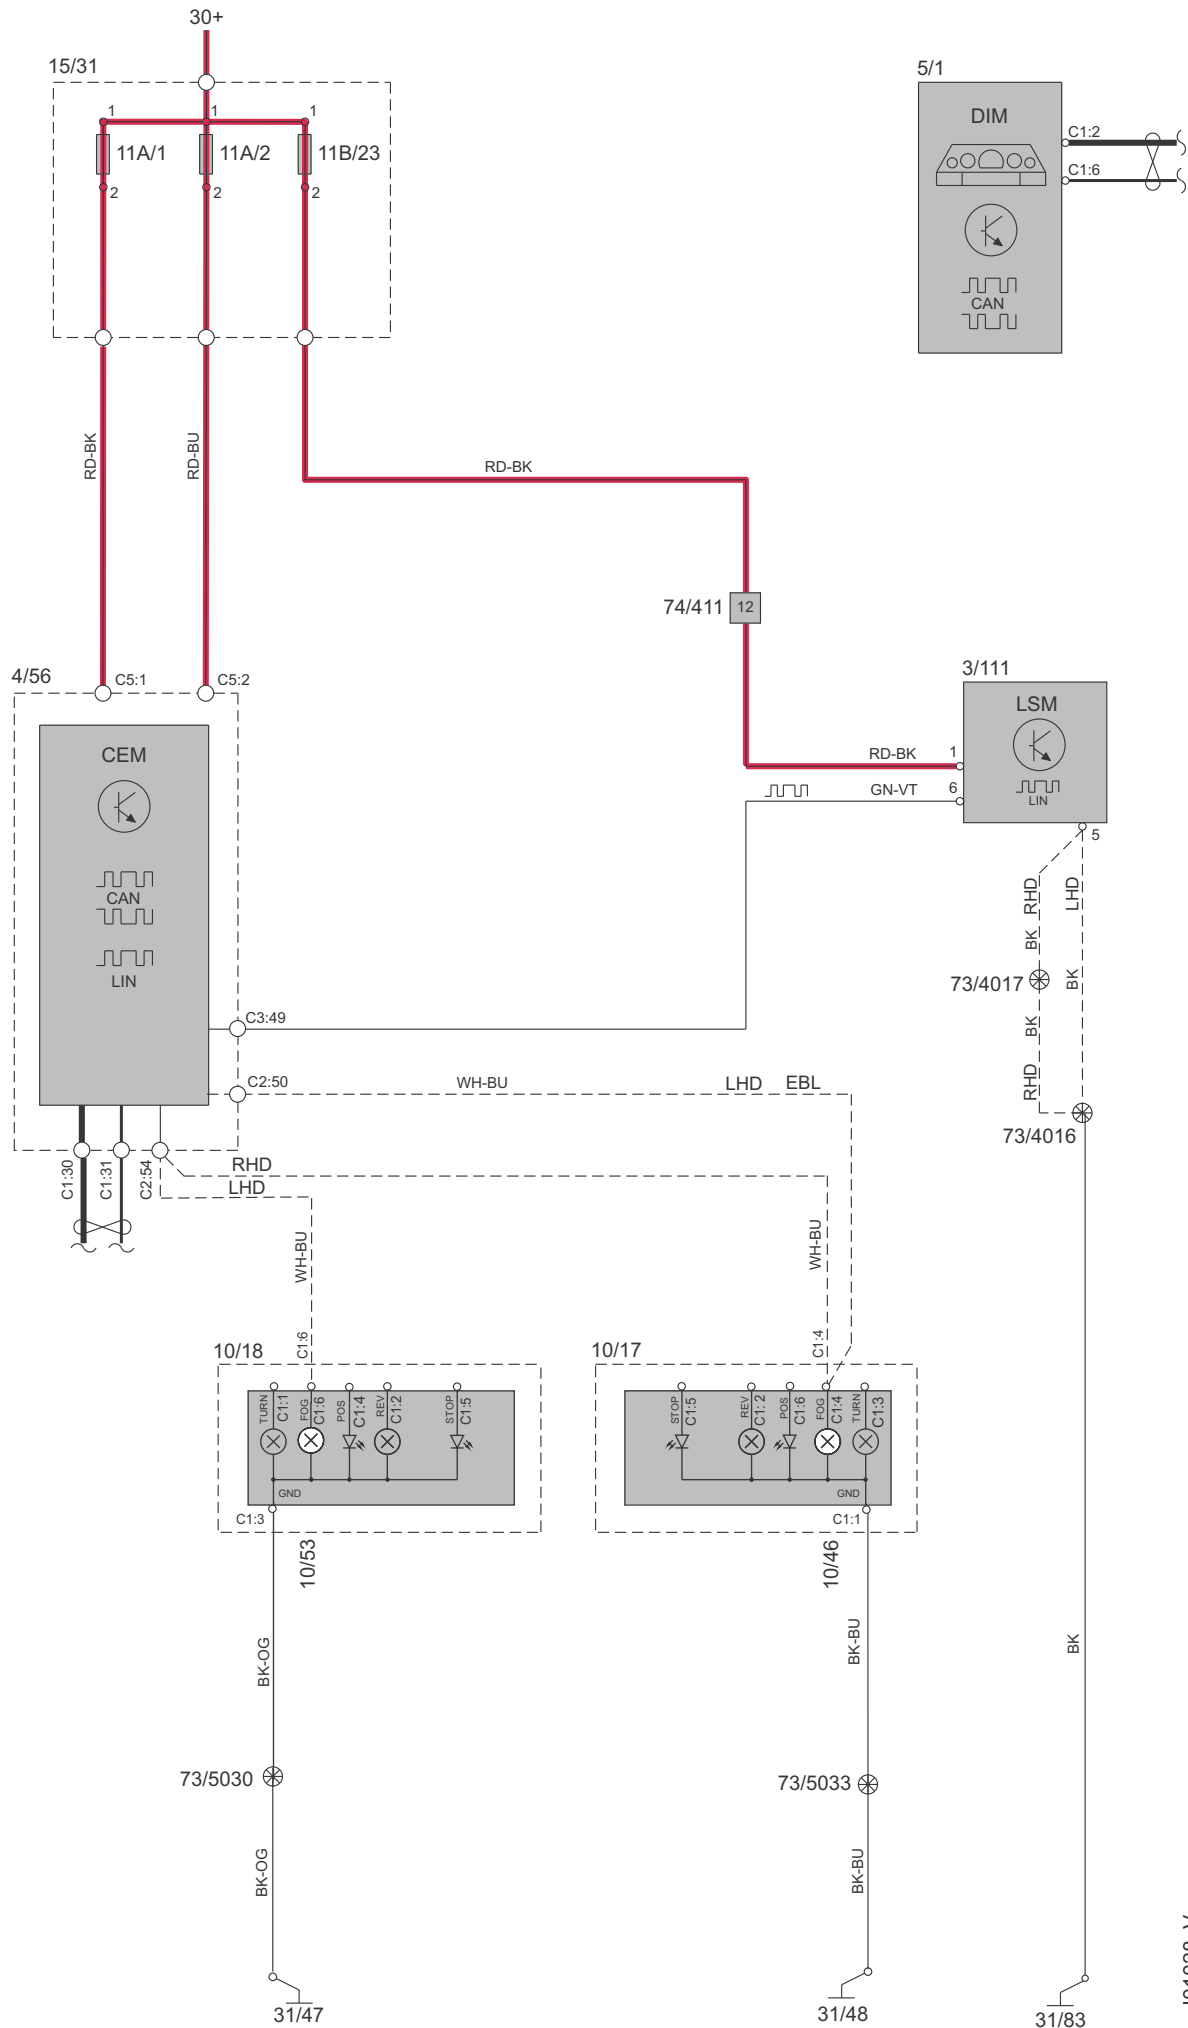


Group 35 Lighting Brake lights S60

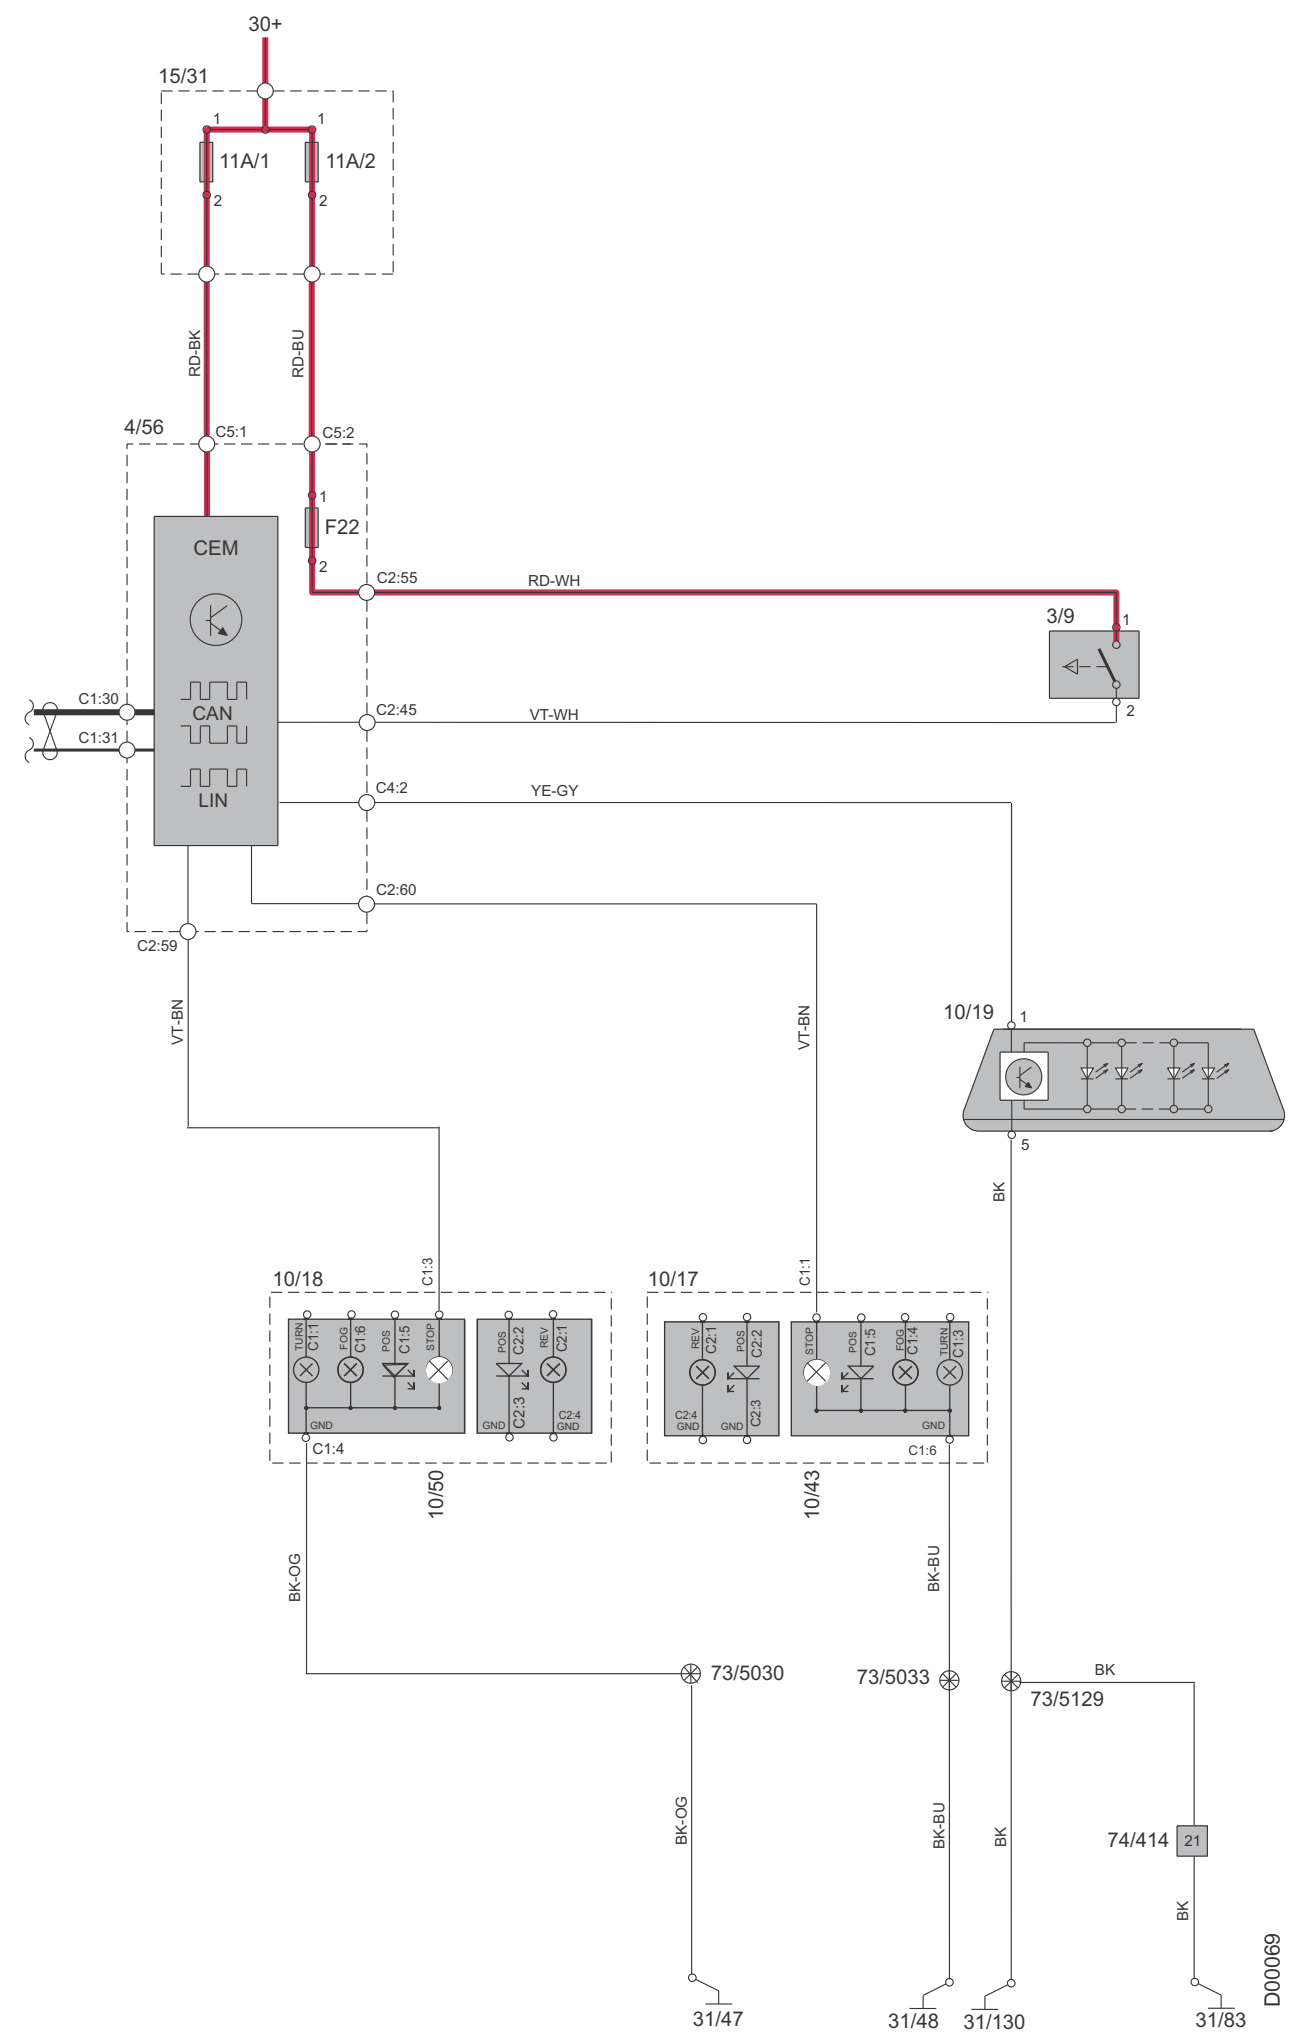

Group 35 Lighting Brake Lights V60

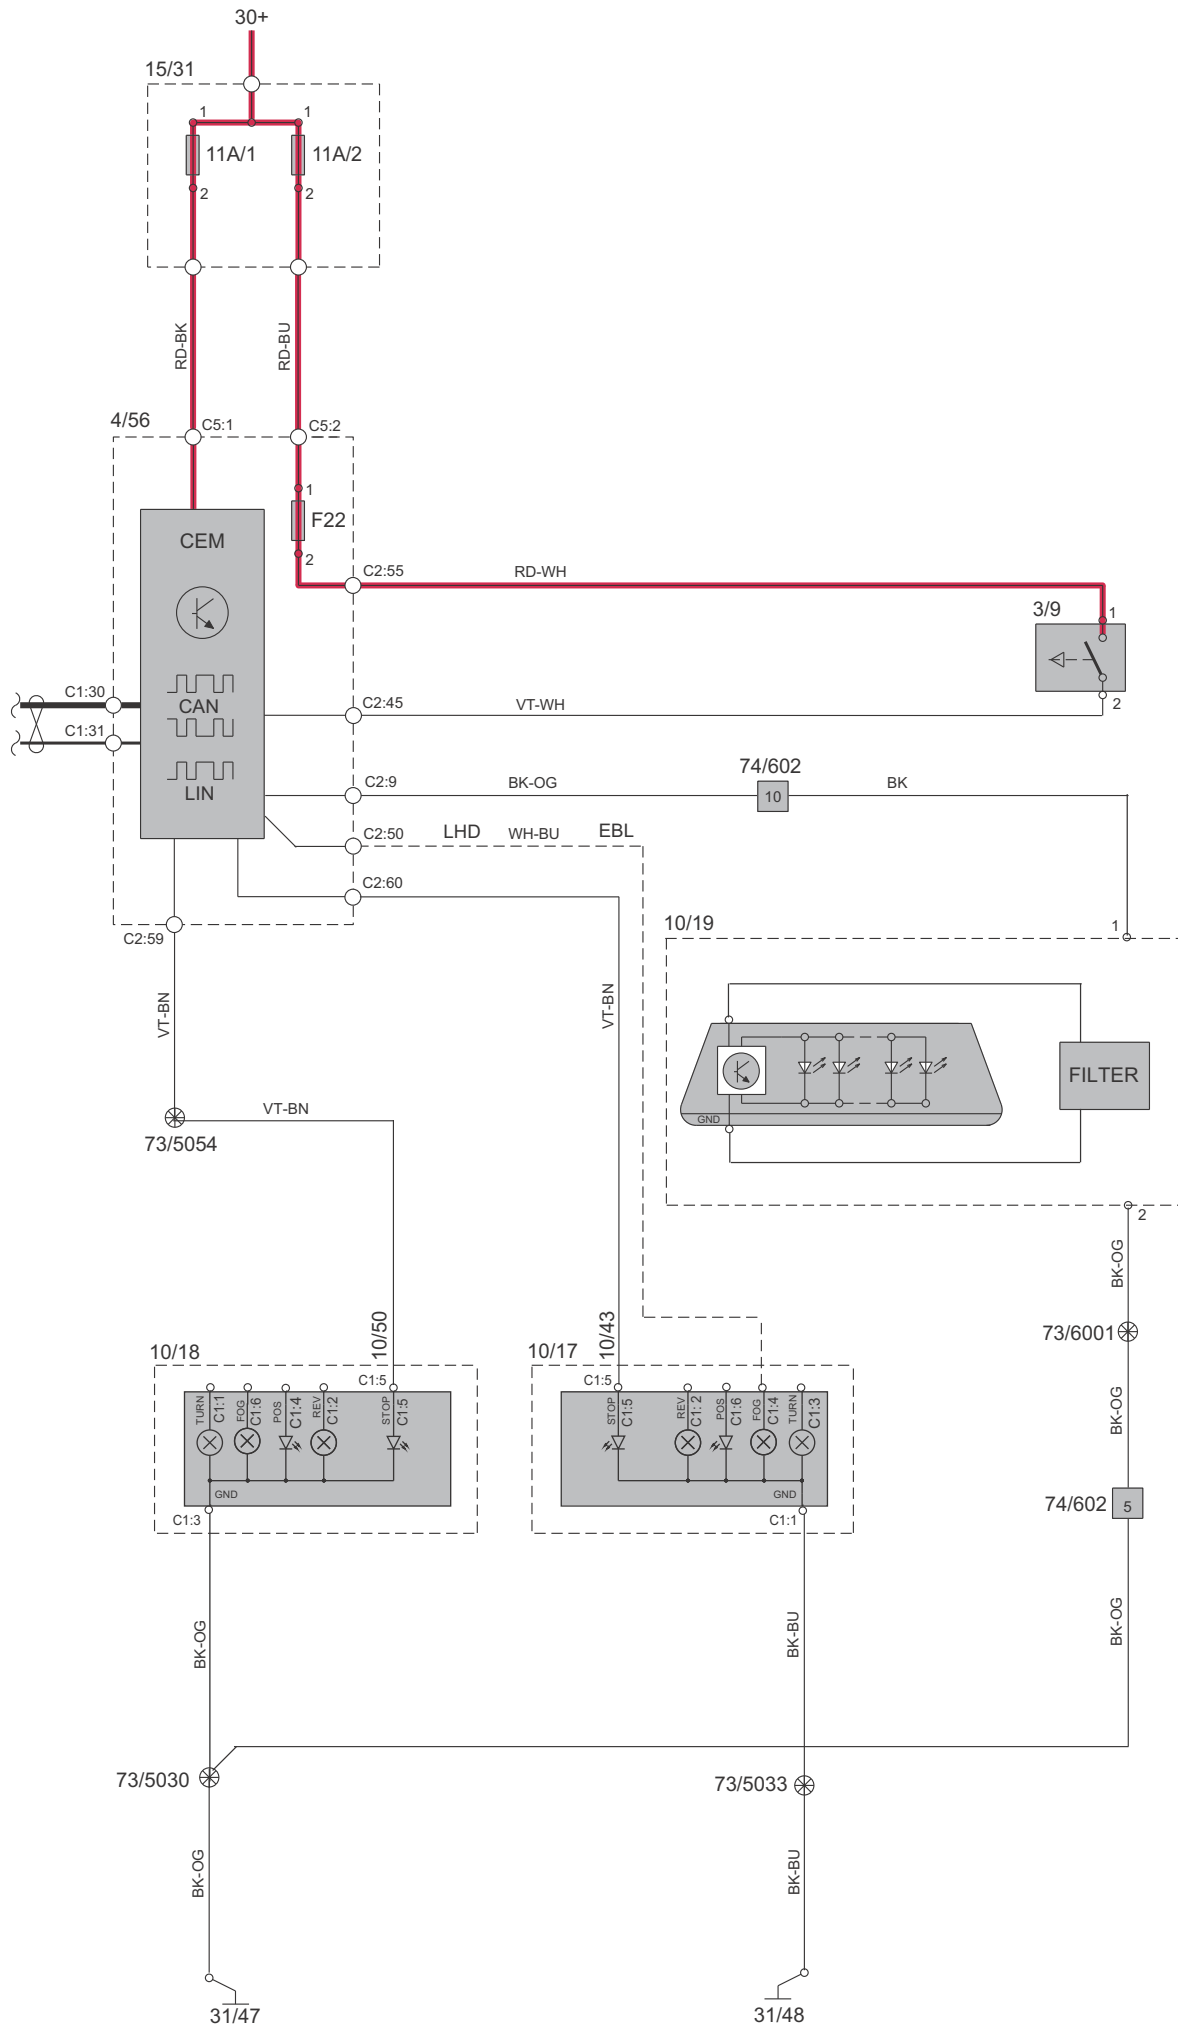


Group 35 Lighting Reversing lights S60

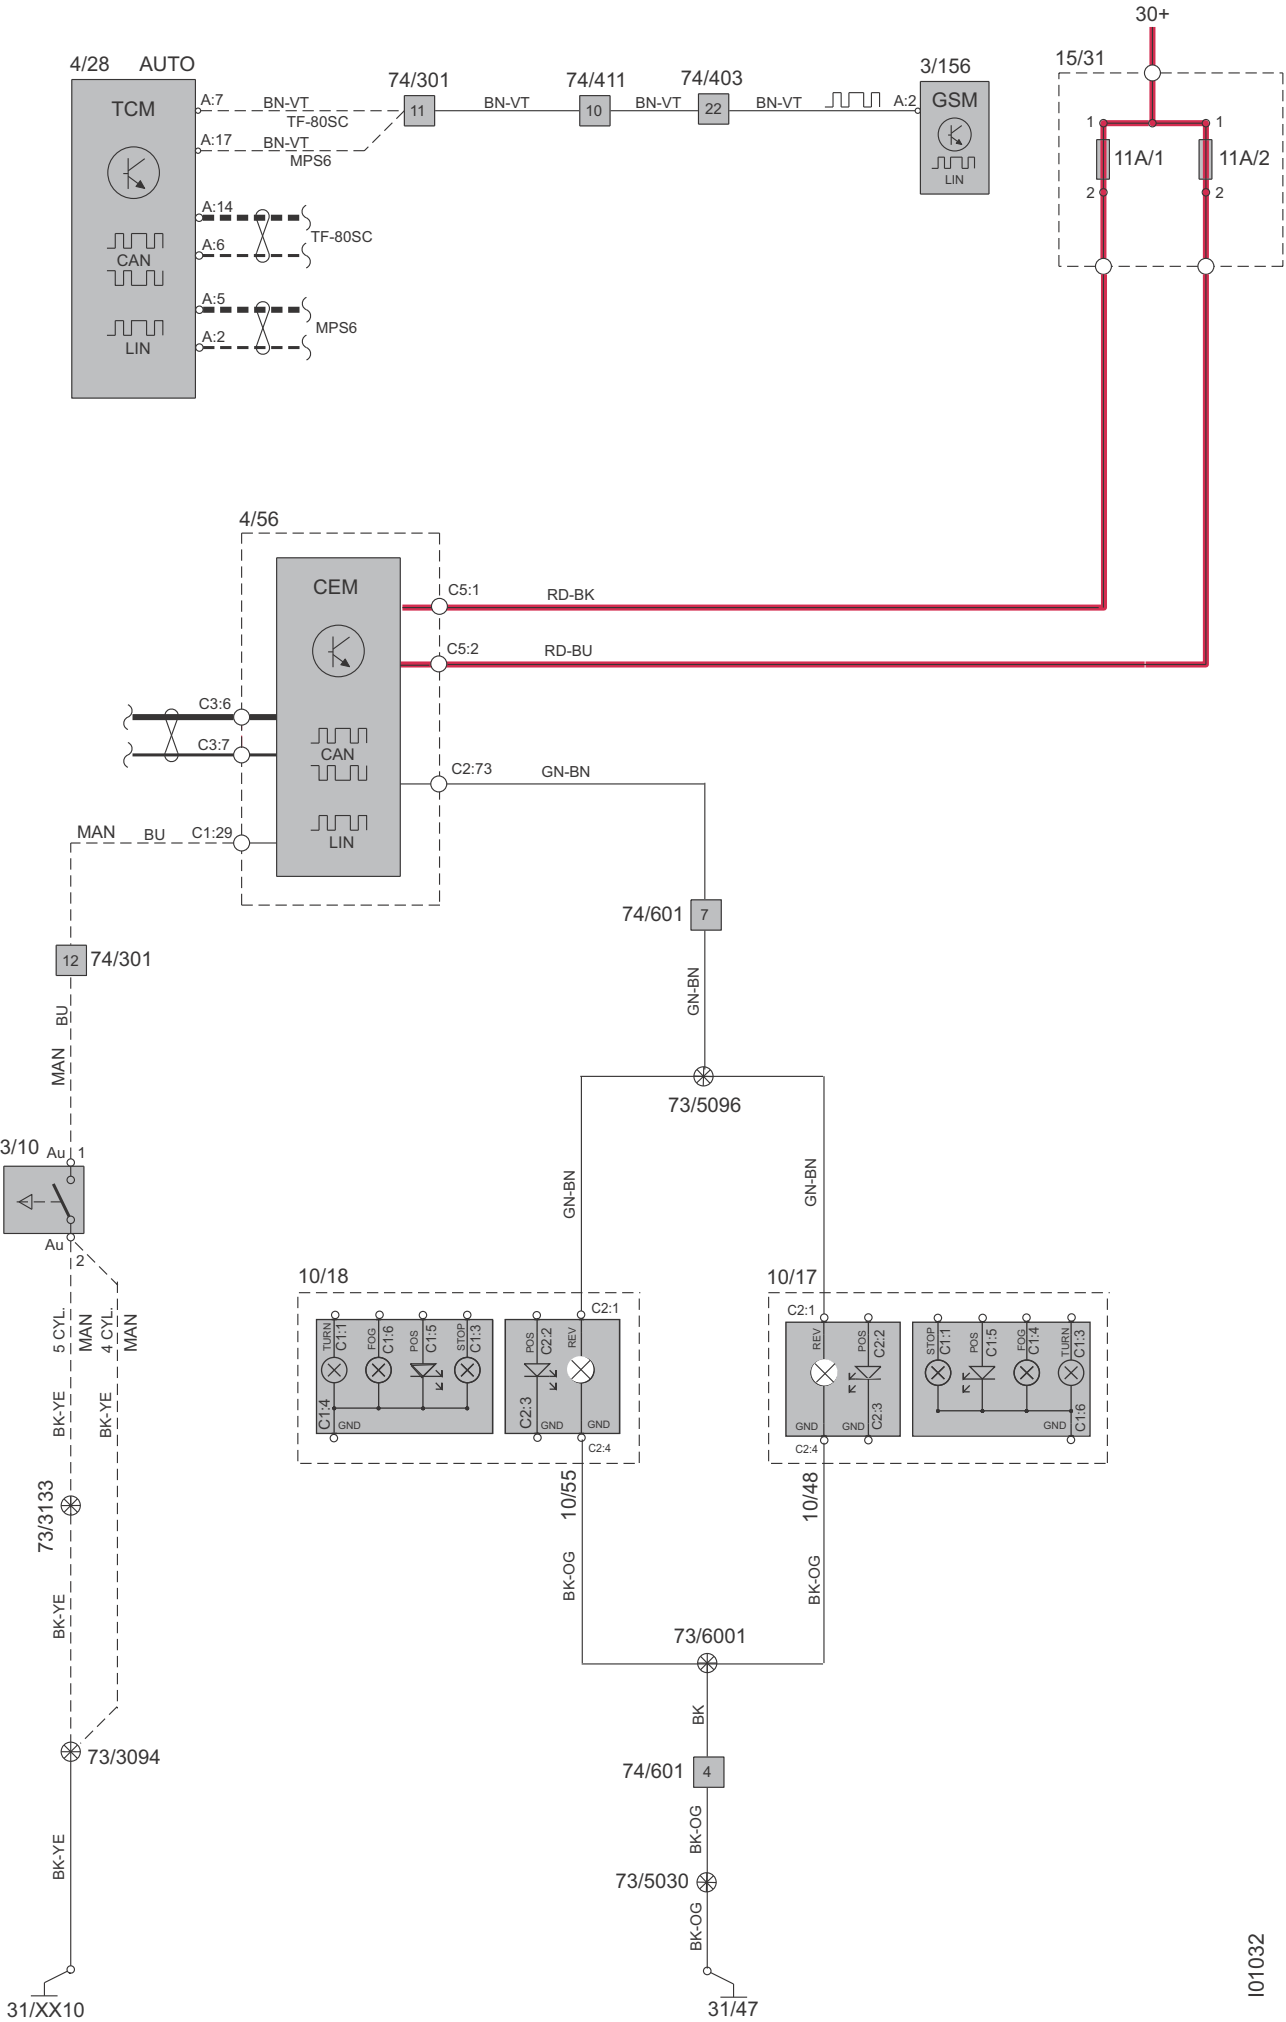


I01032

Group 35 Lighting Reversing lights V60

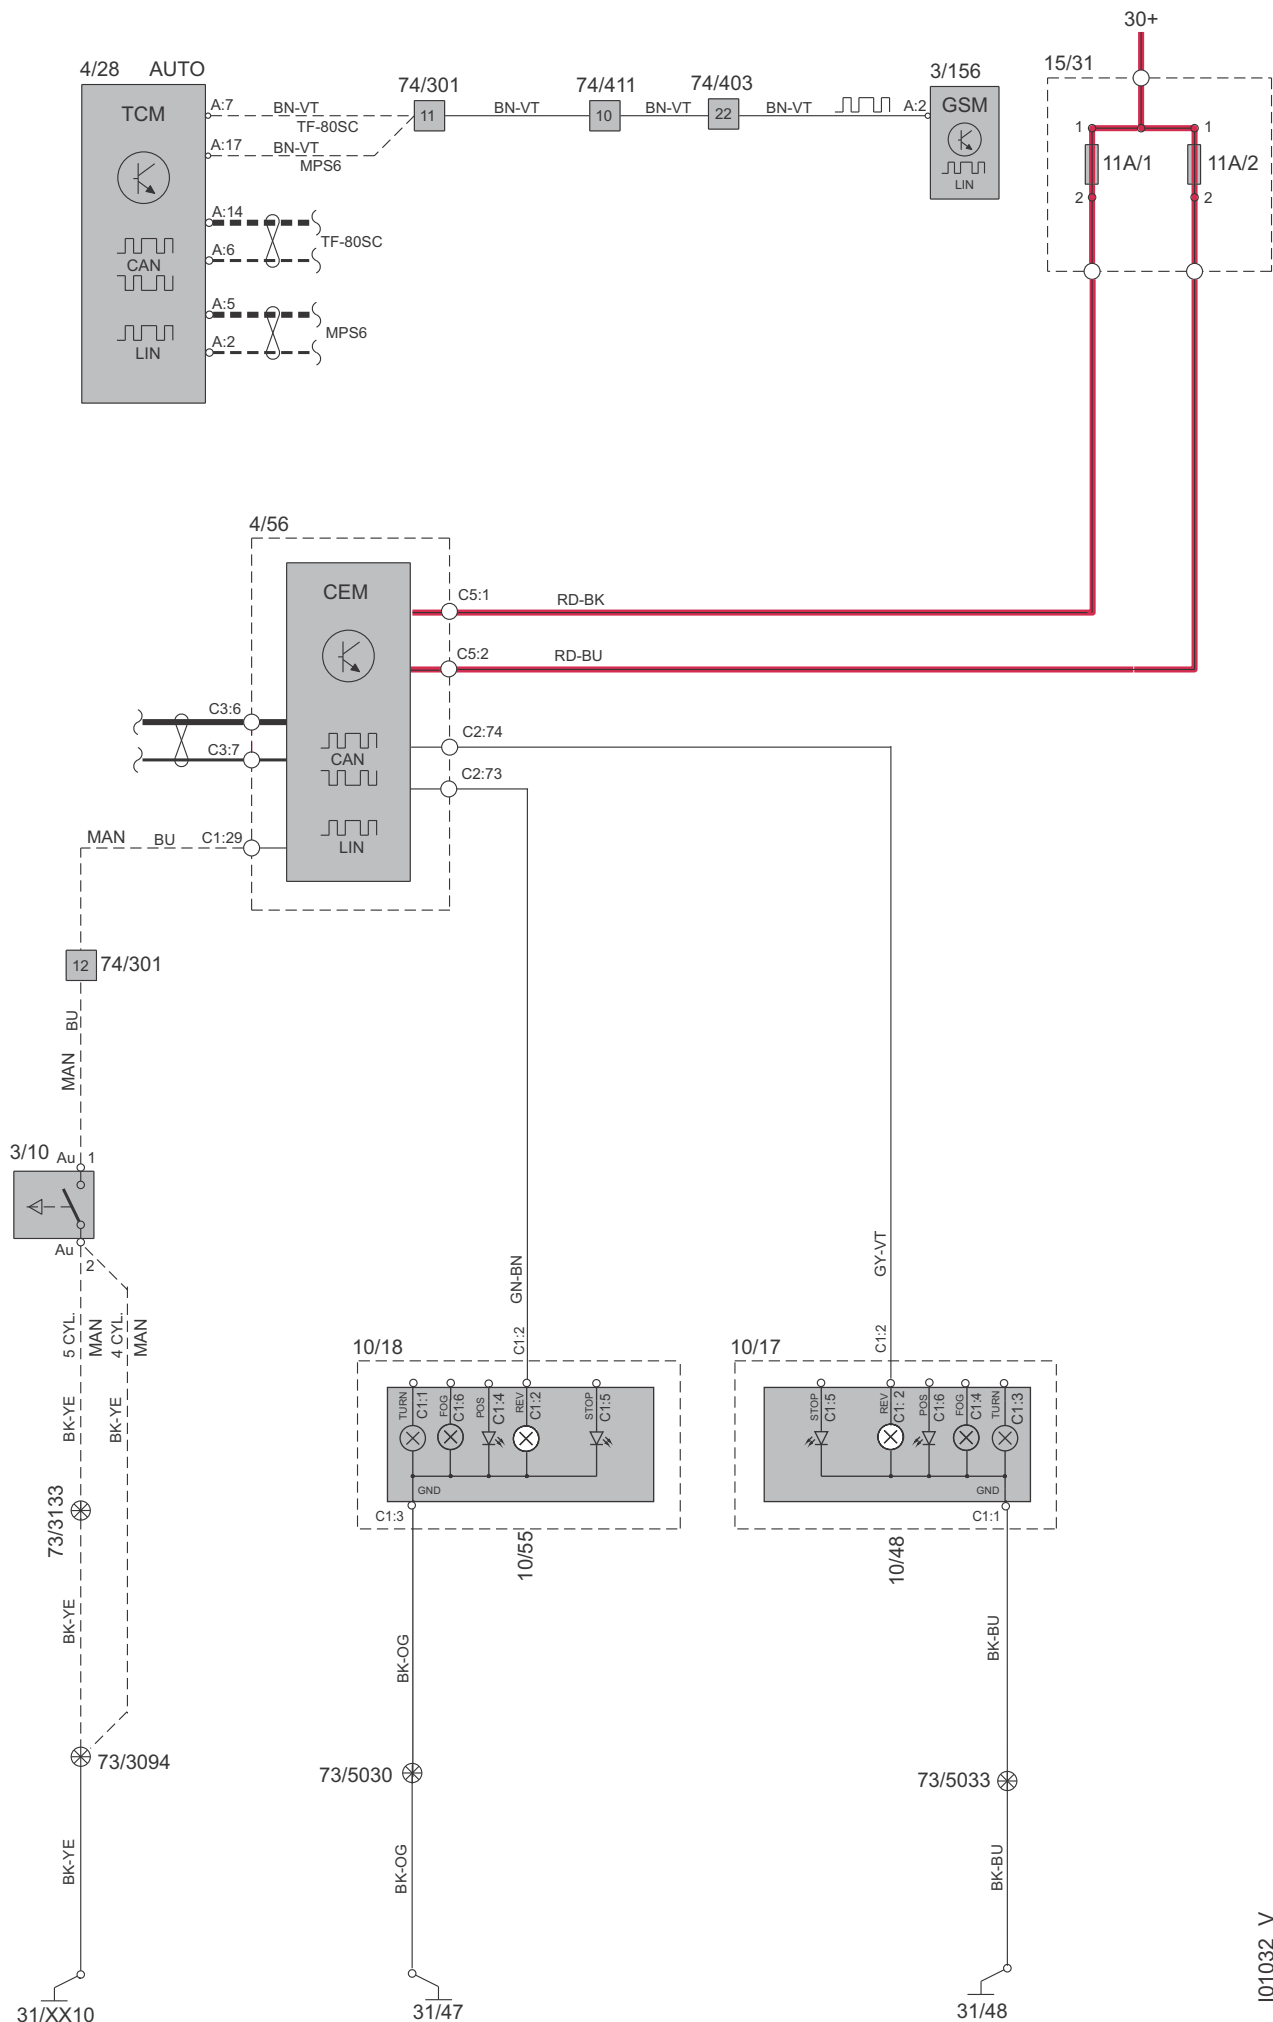


I01032_V

Group 35 Lighting
Follow-me-home lighting LHD

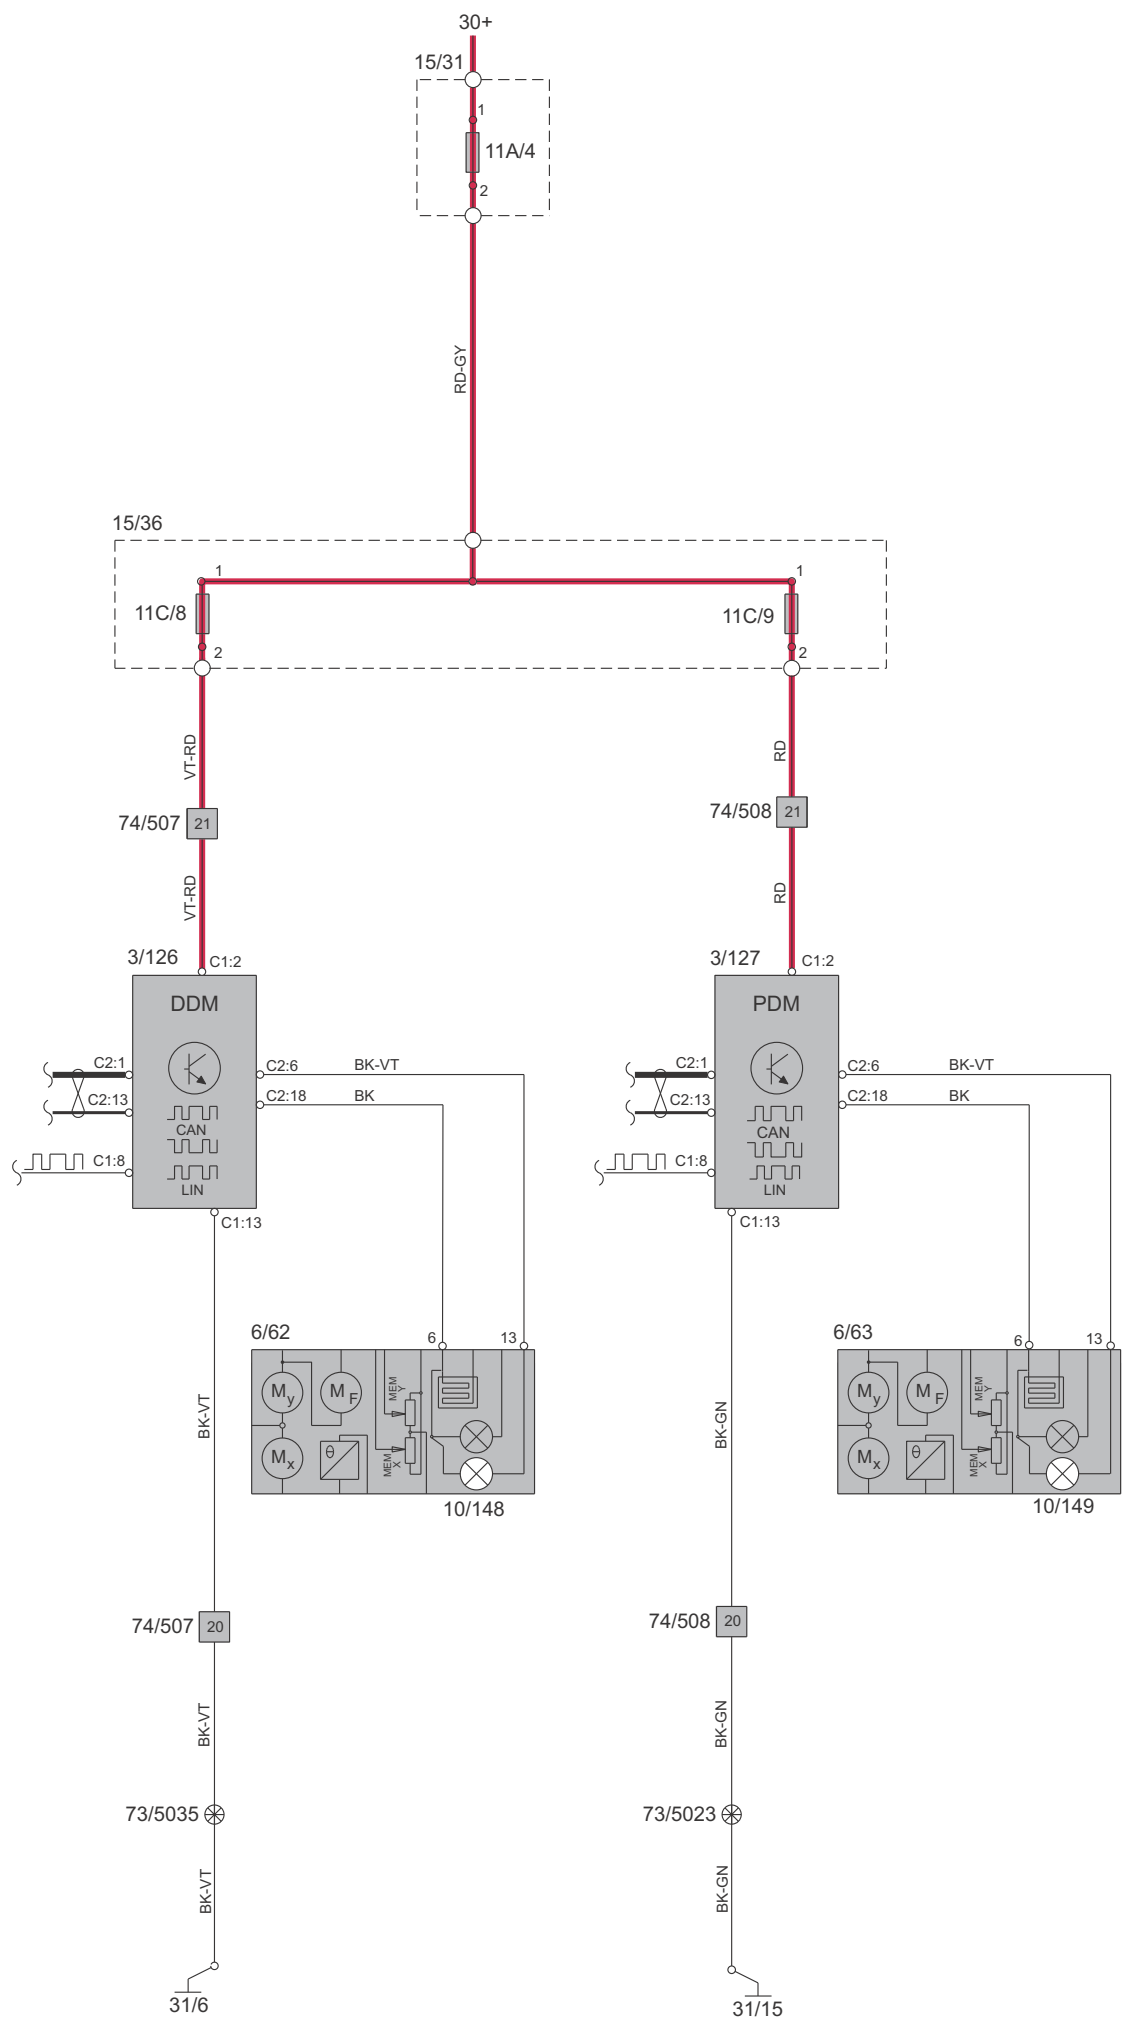

Group 35 Lighting Follow-me-home lighting RHD

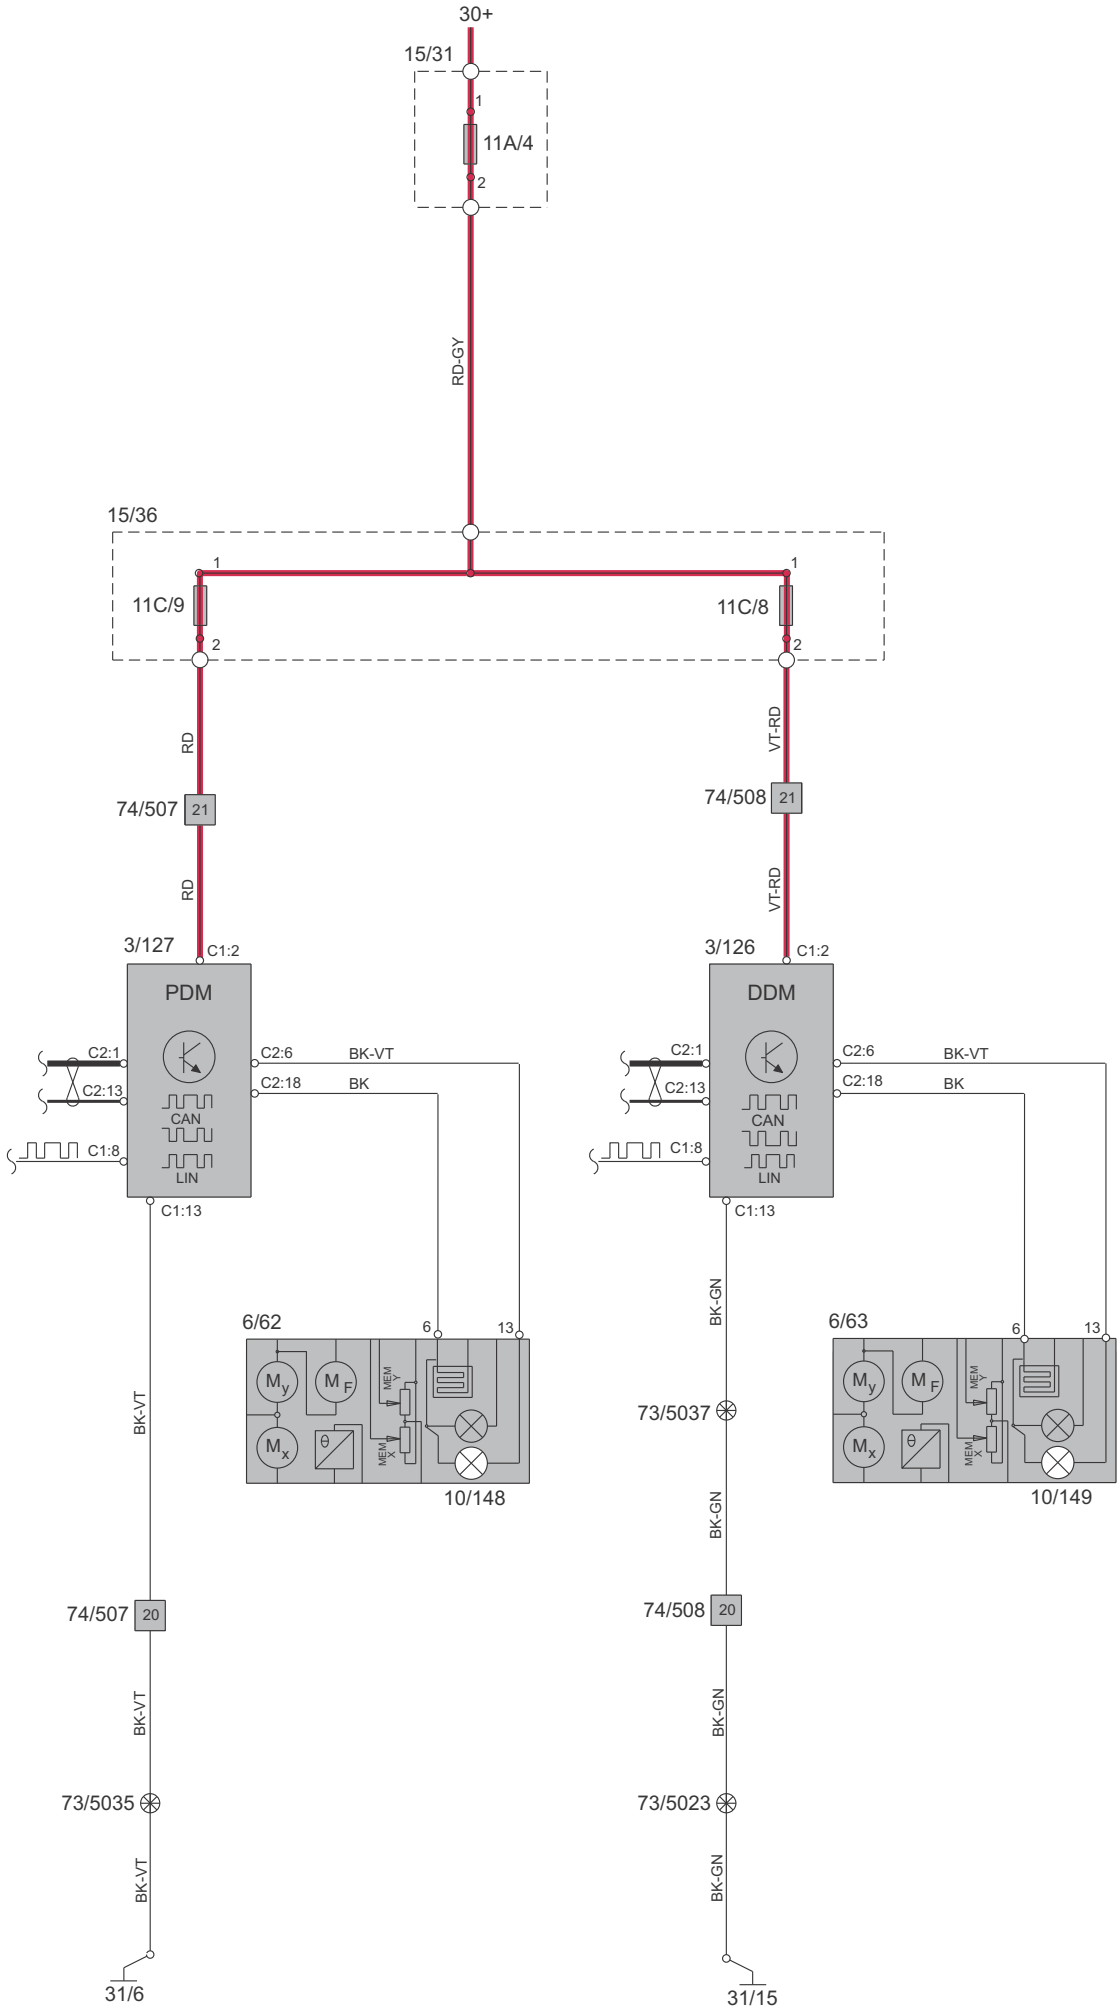


Group 35 Lighting

Interior lighting, LHD 1:2




Group 35 Lighting

Interior lighting, LHD 2:2

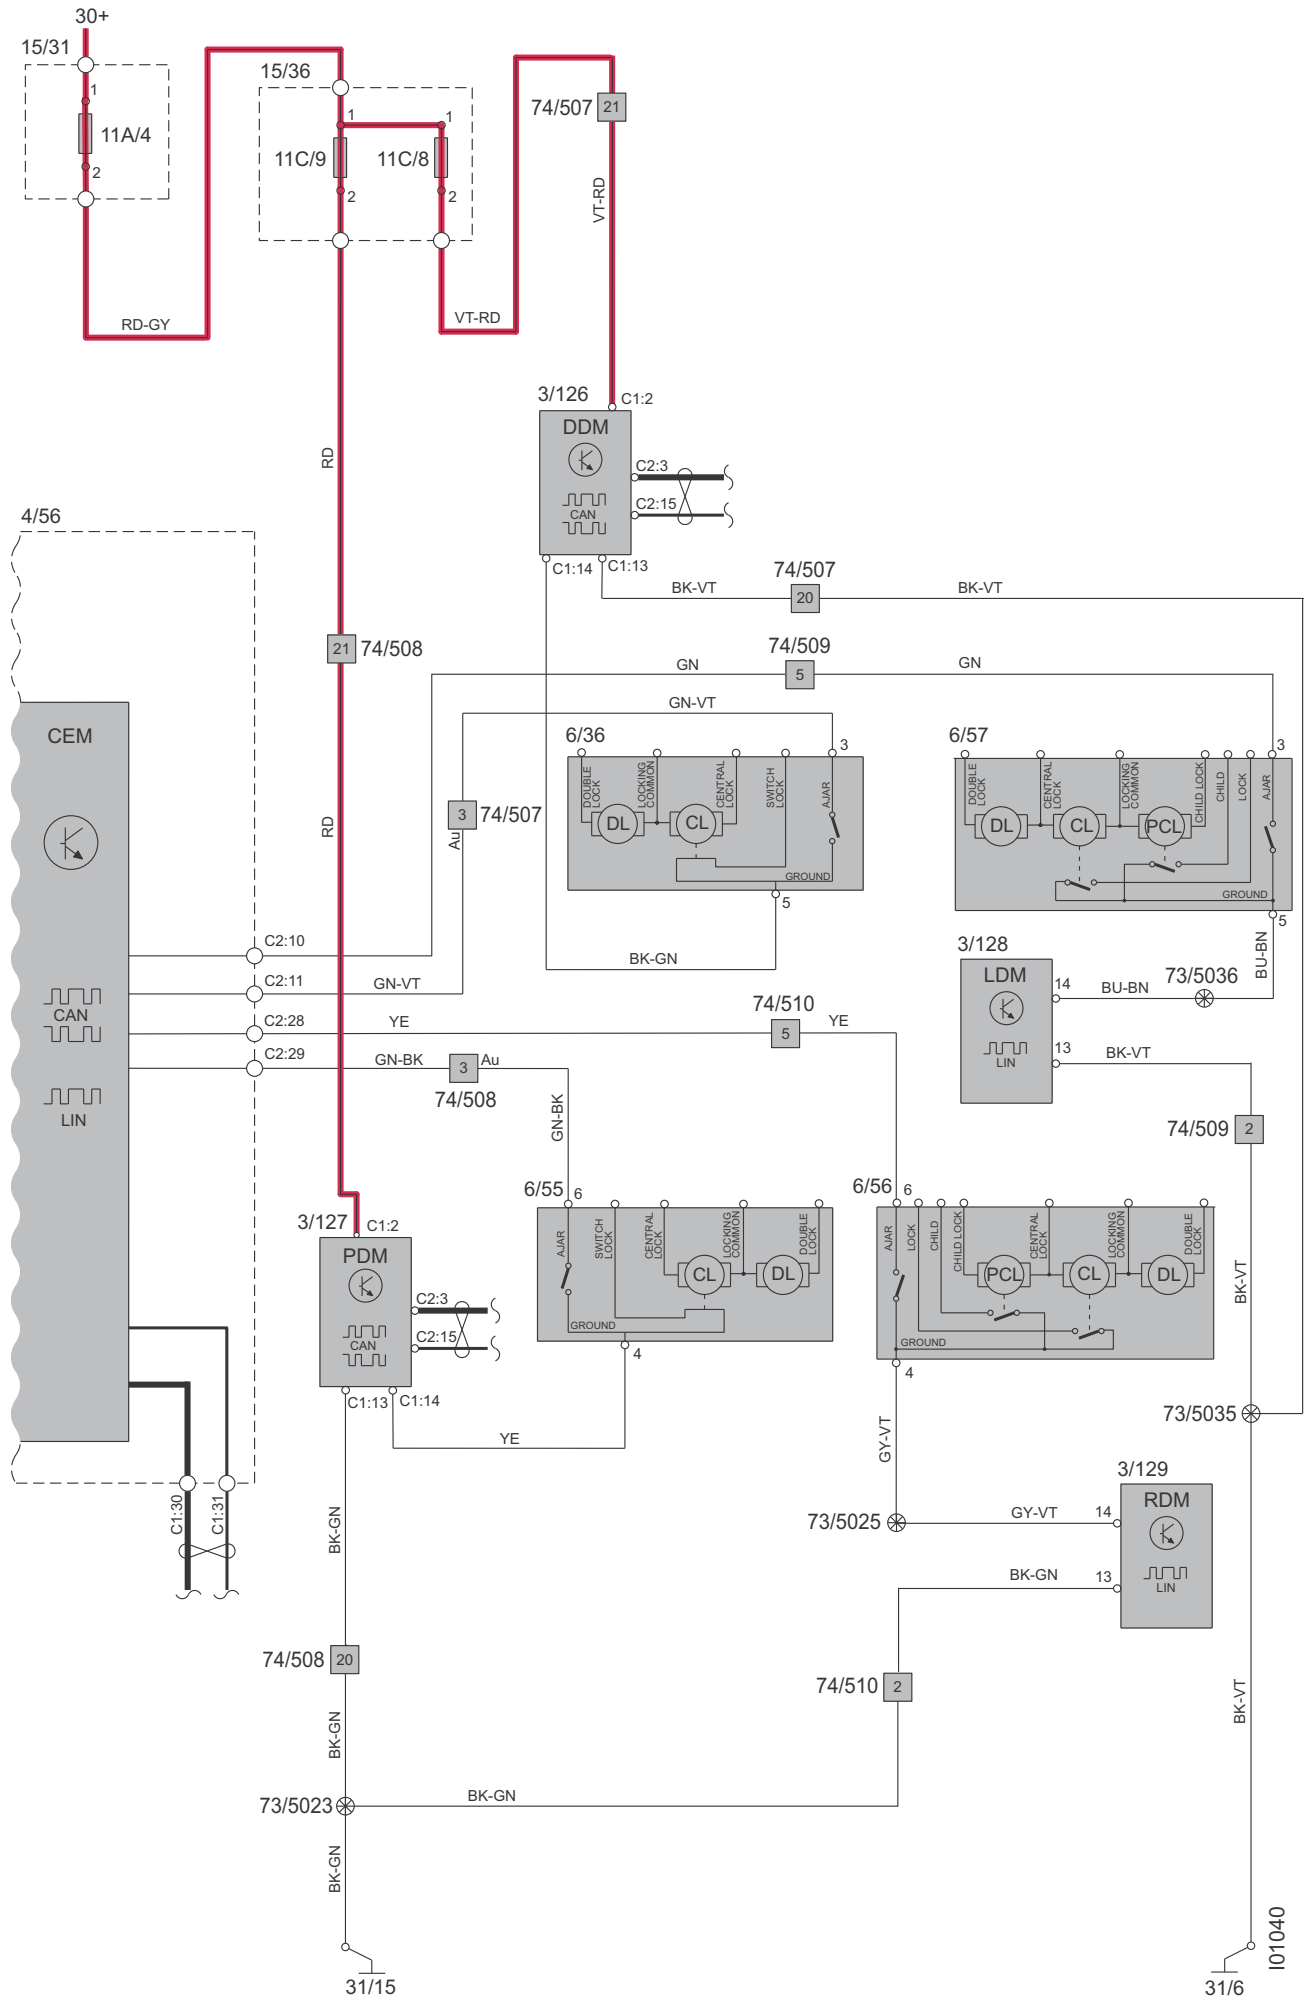


Group 35 Lighting

Interior lighting, RHD 1:2

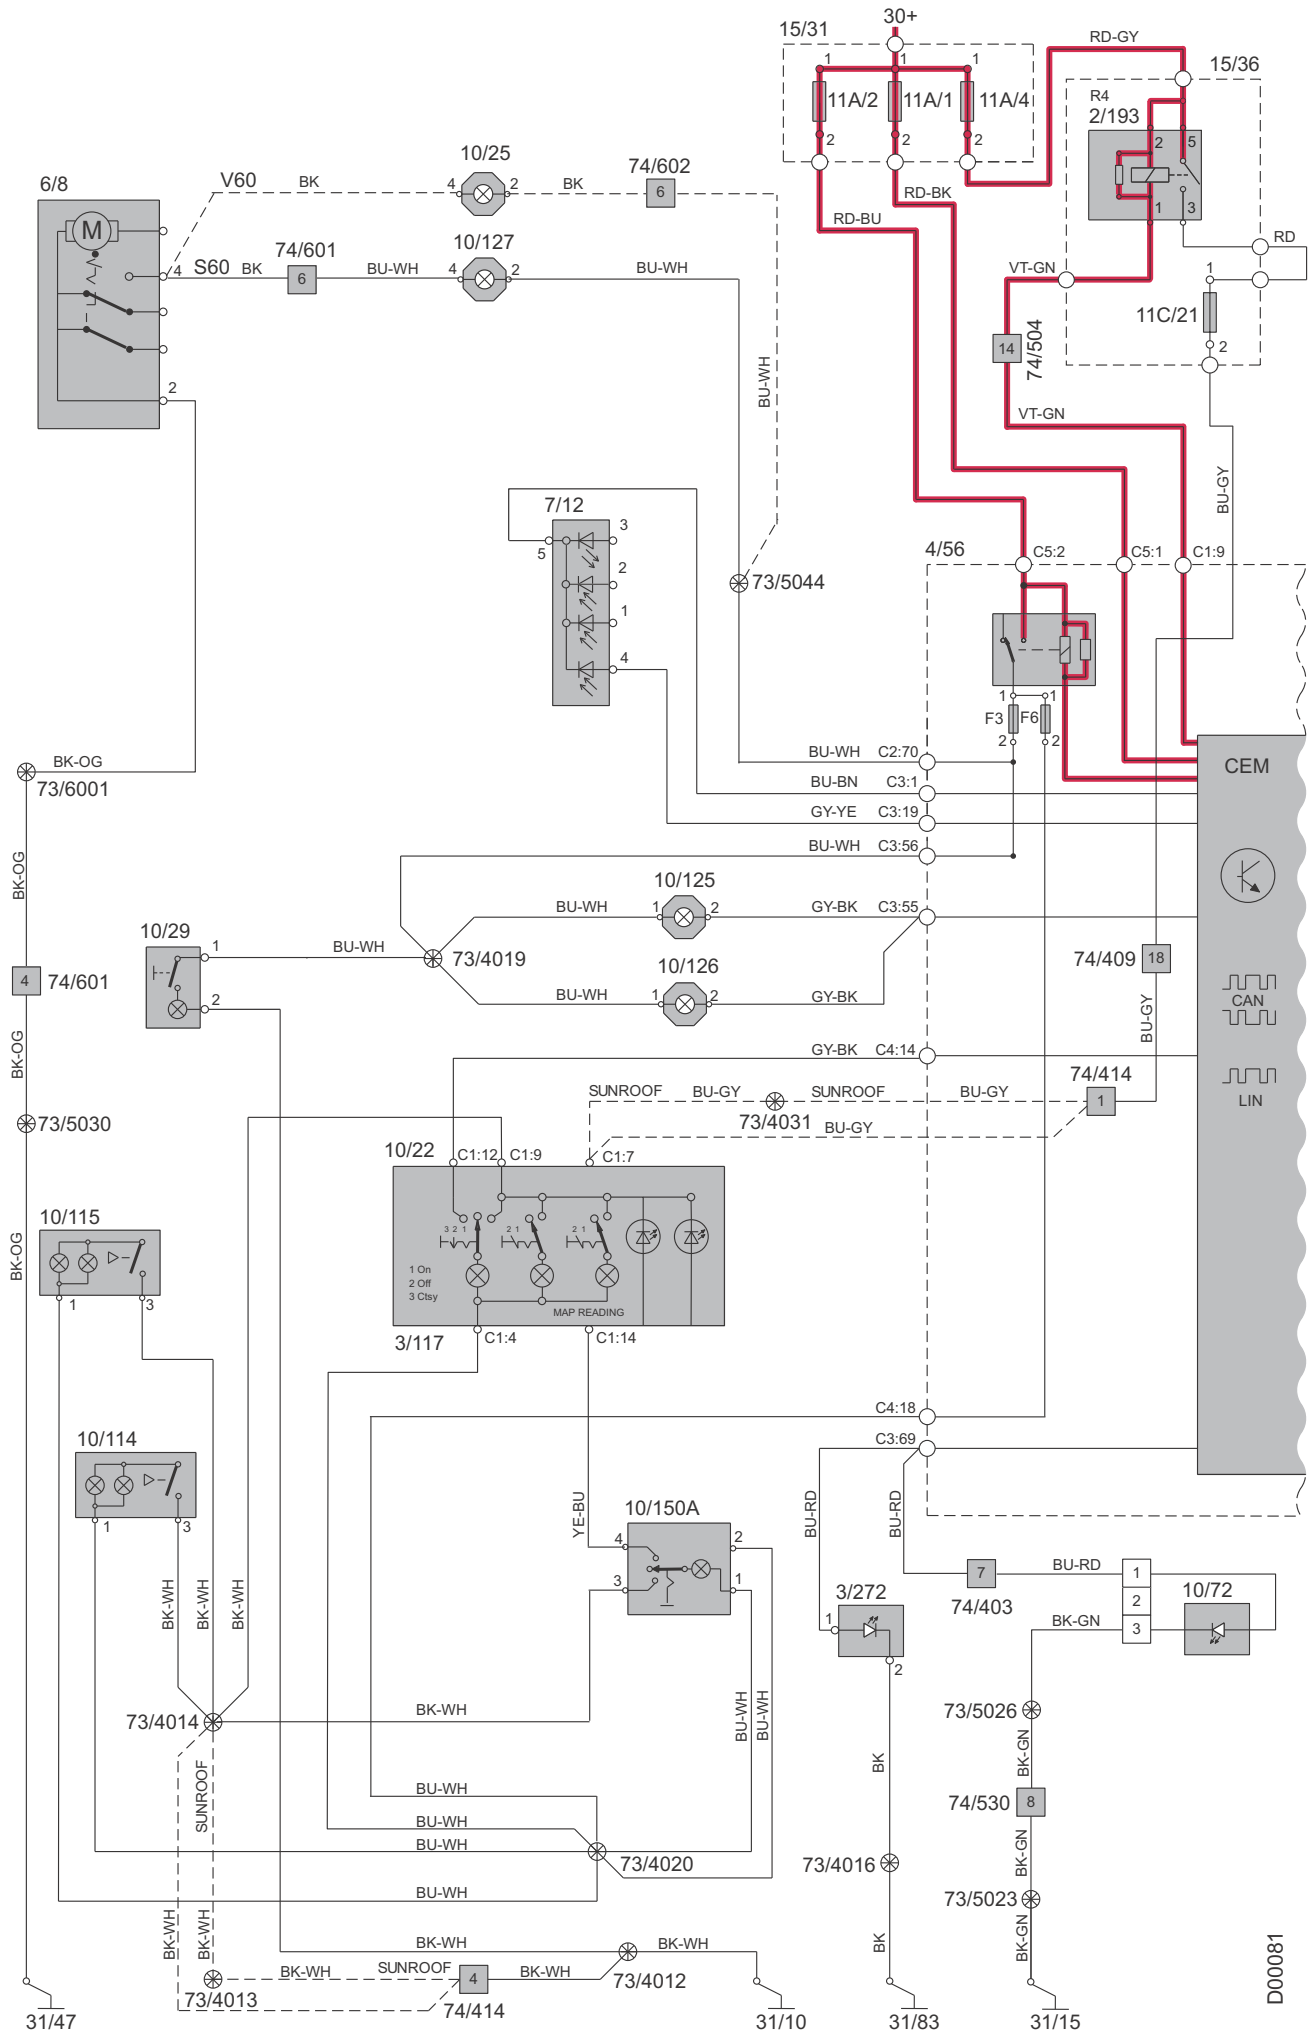


Group 35 Lighting

Interior lighting, RHD 2:2

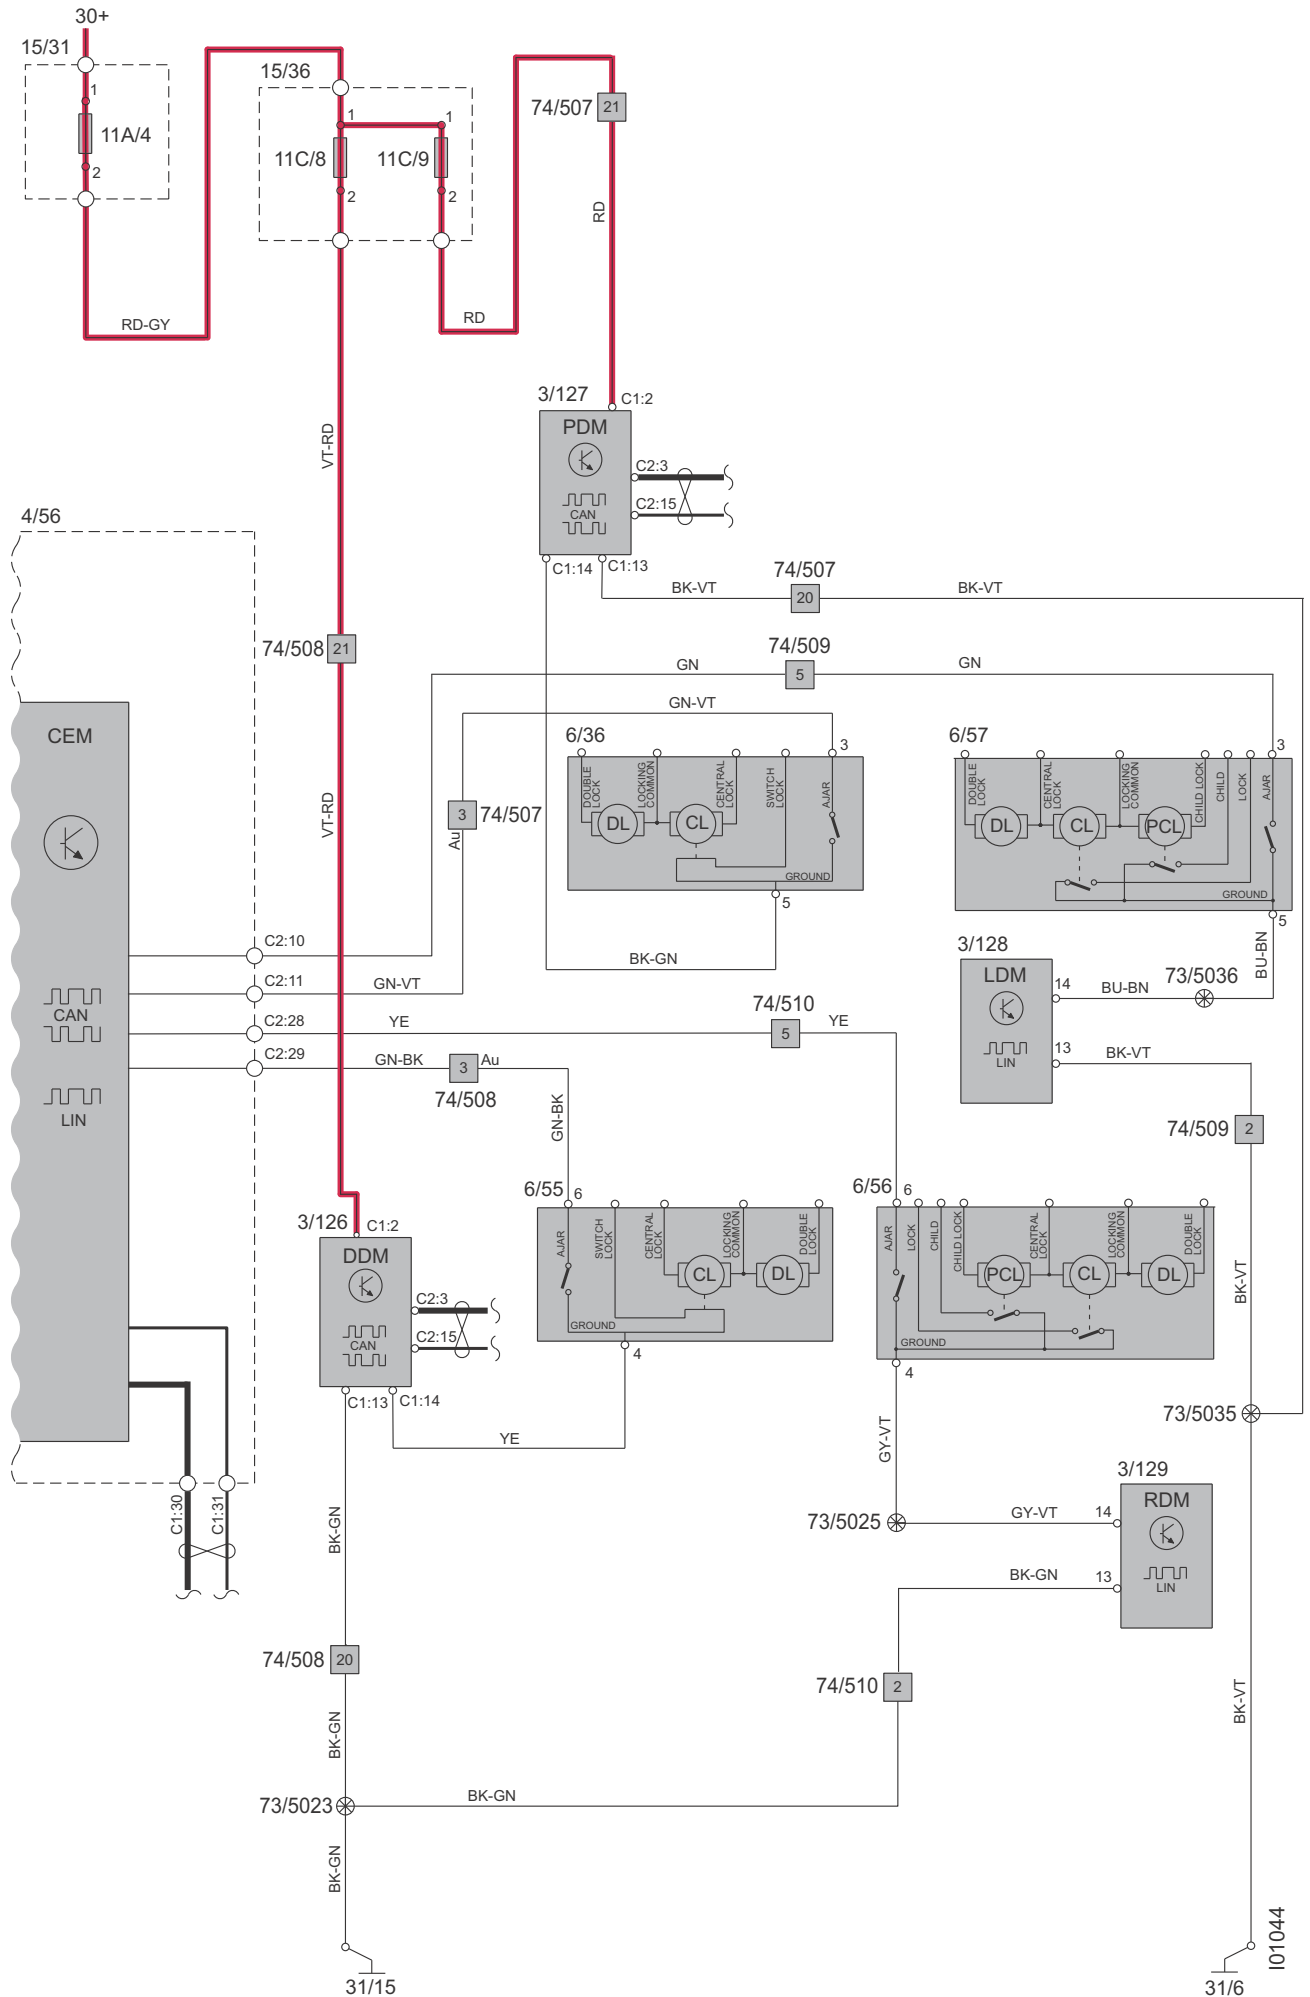


Group 35 Lighting

Active headlight

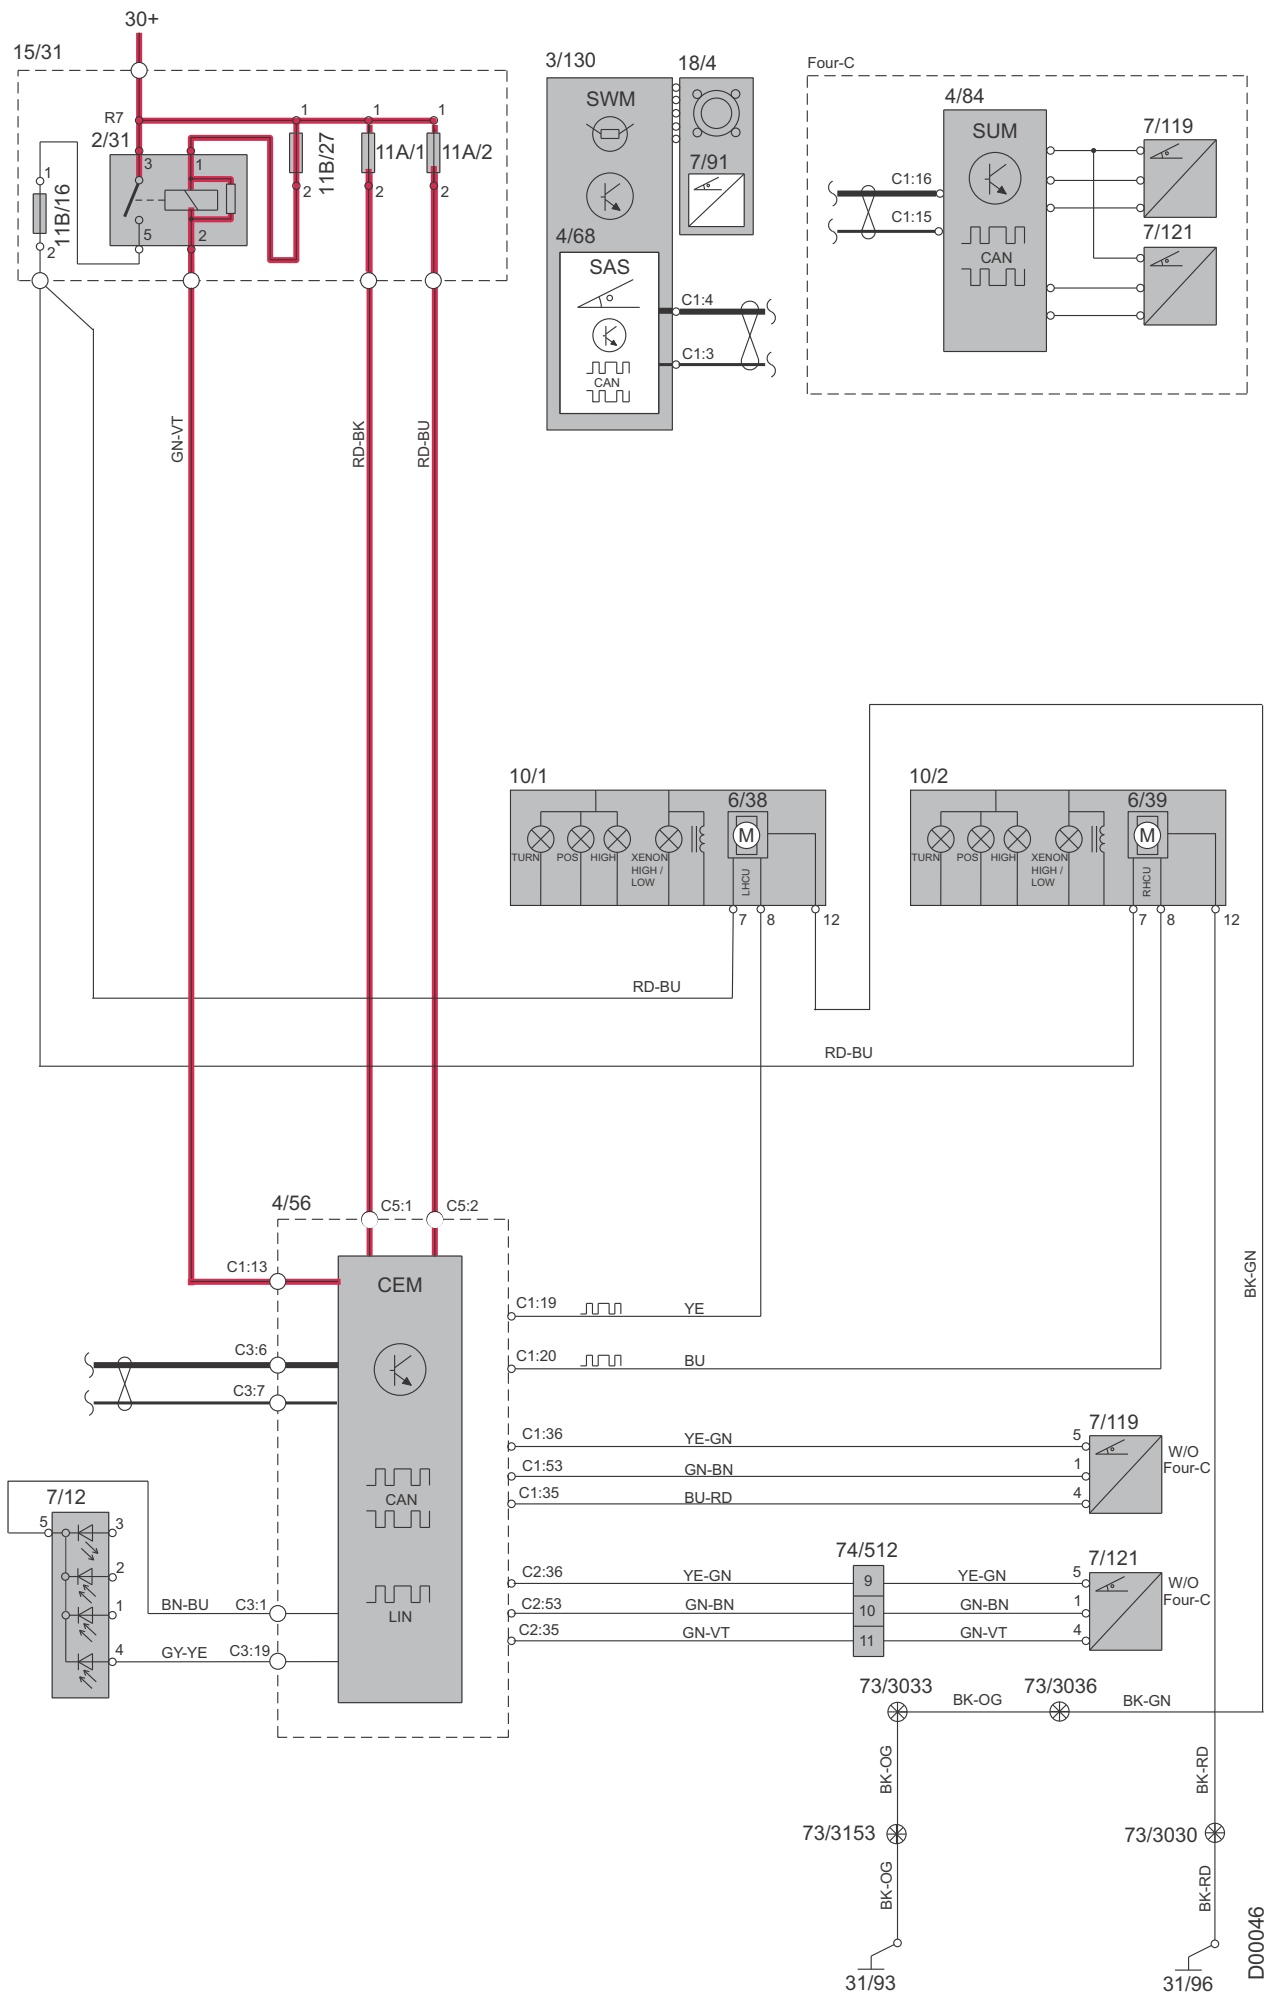

Group 35 Lighting


Lighting in door sill trims

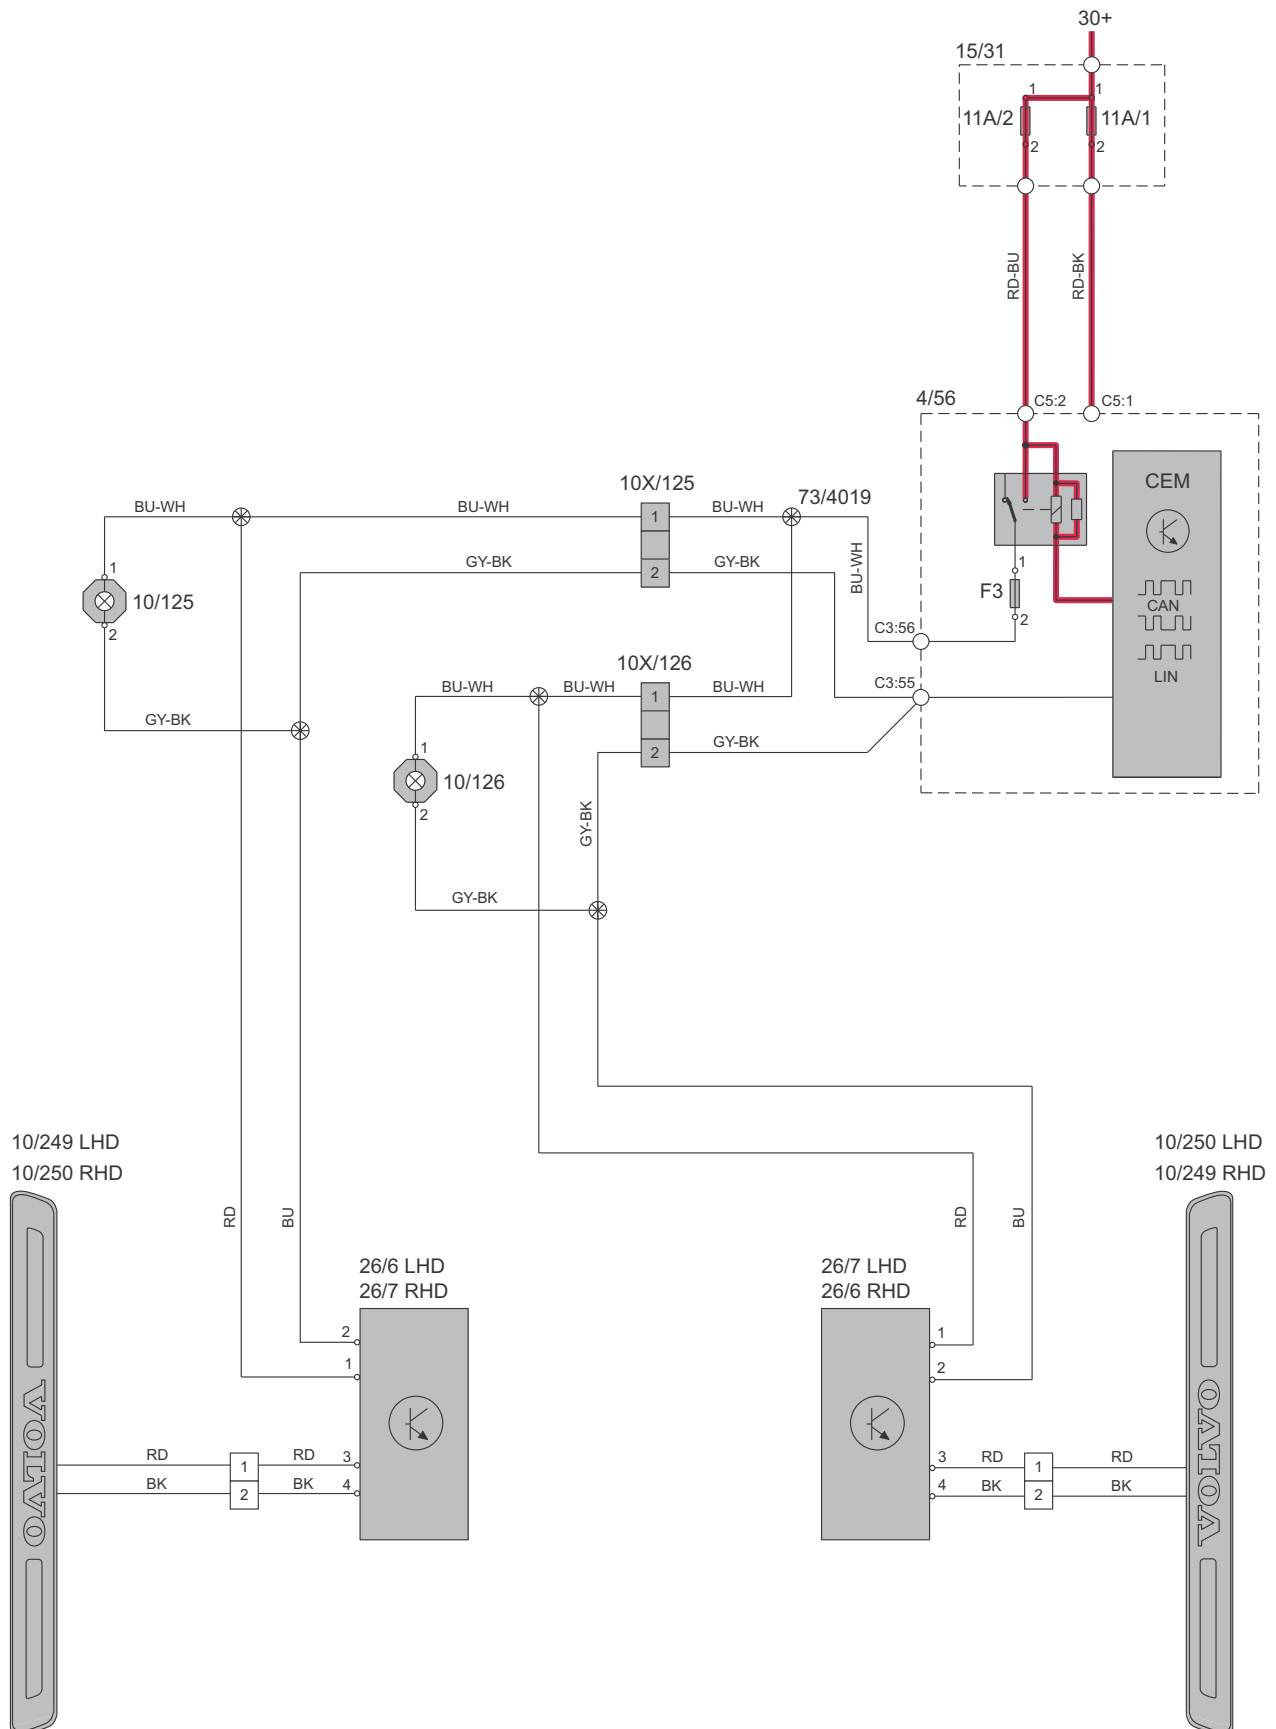

I012768


Group 35 Lighting, Accessories

Auxiliary lights

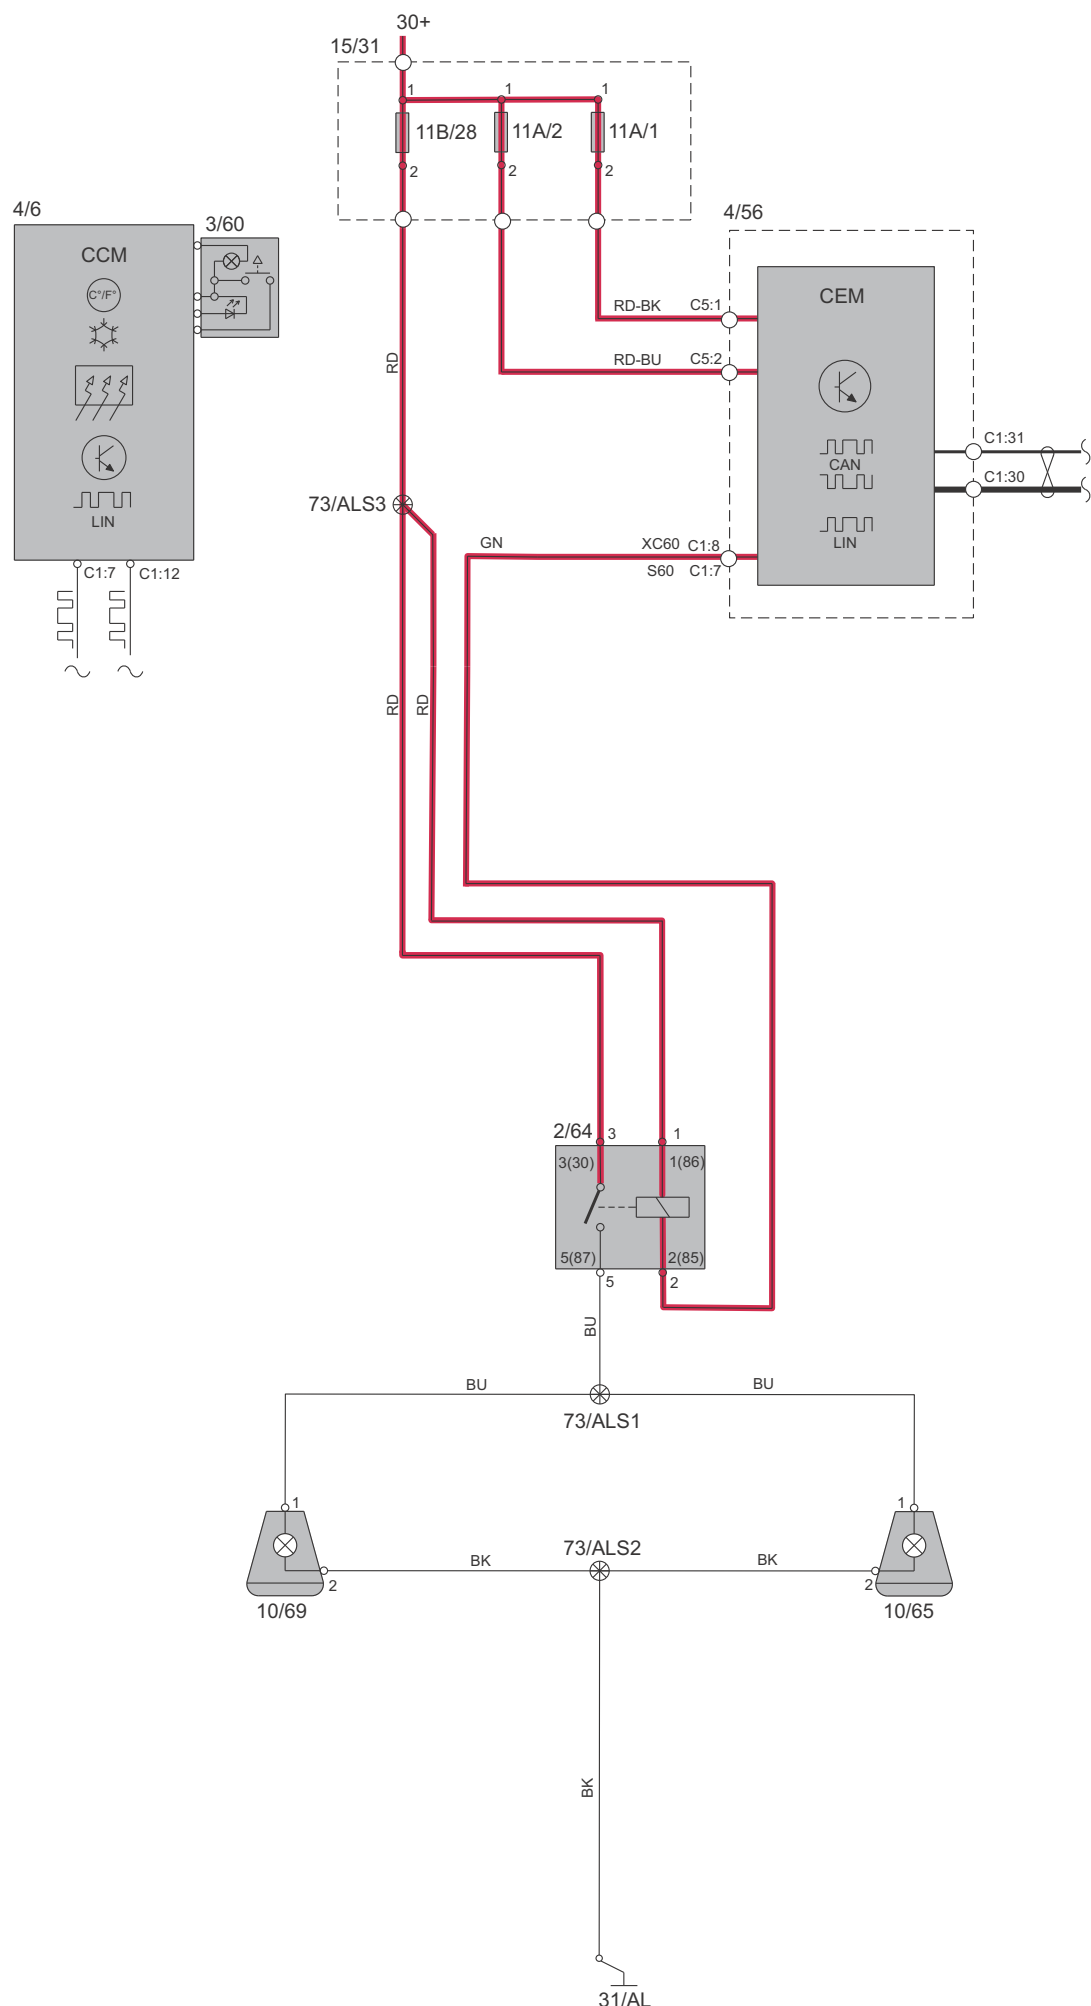


Group 36 Additional electrical equipment

Rain sensor

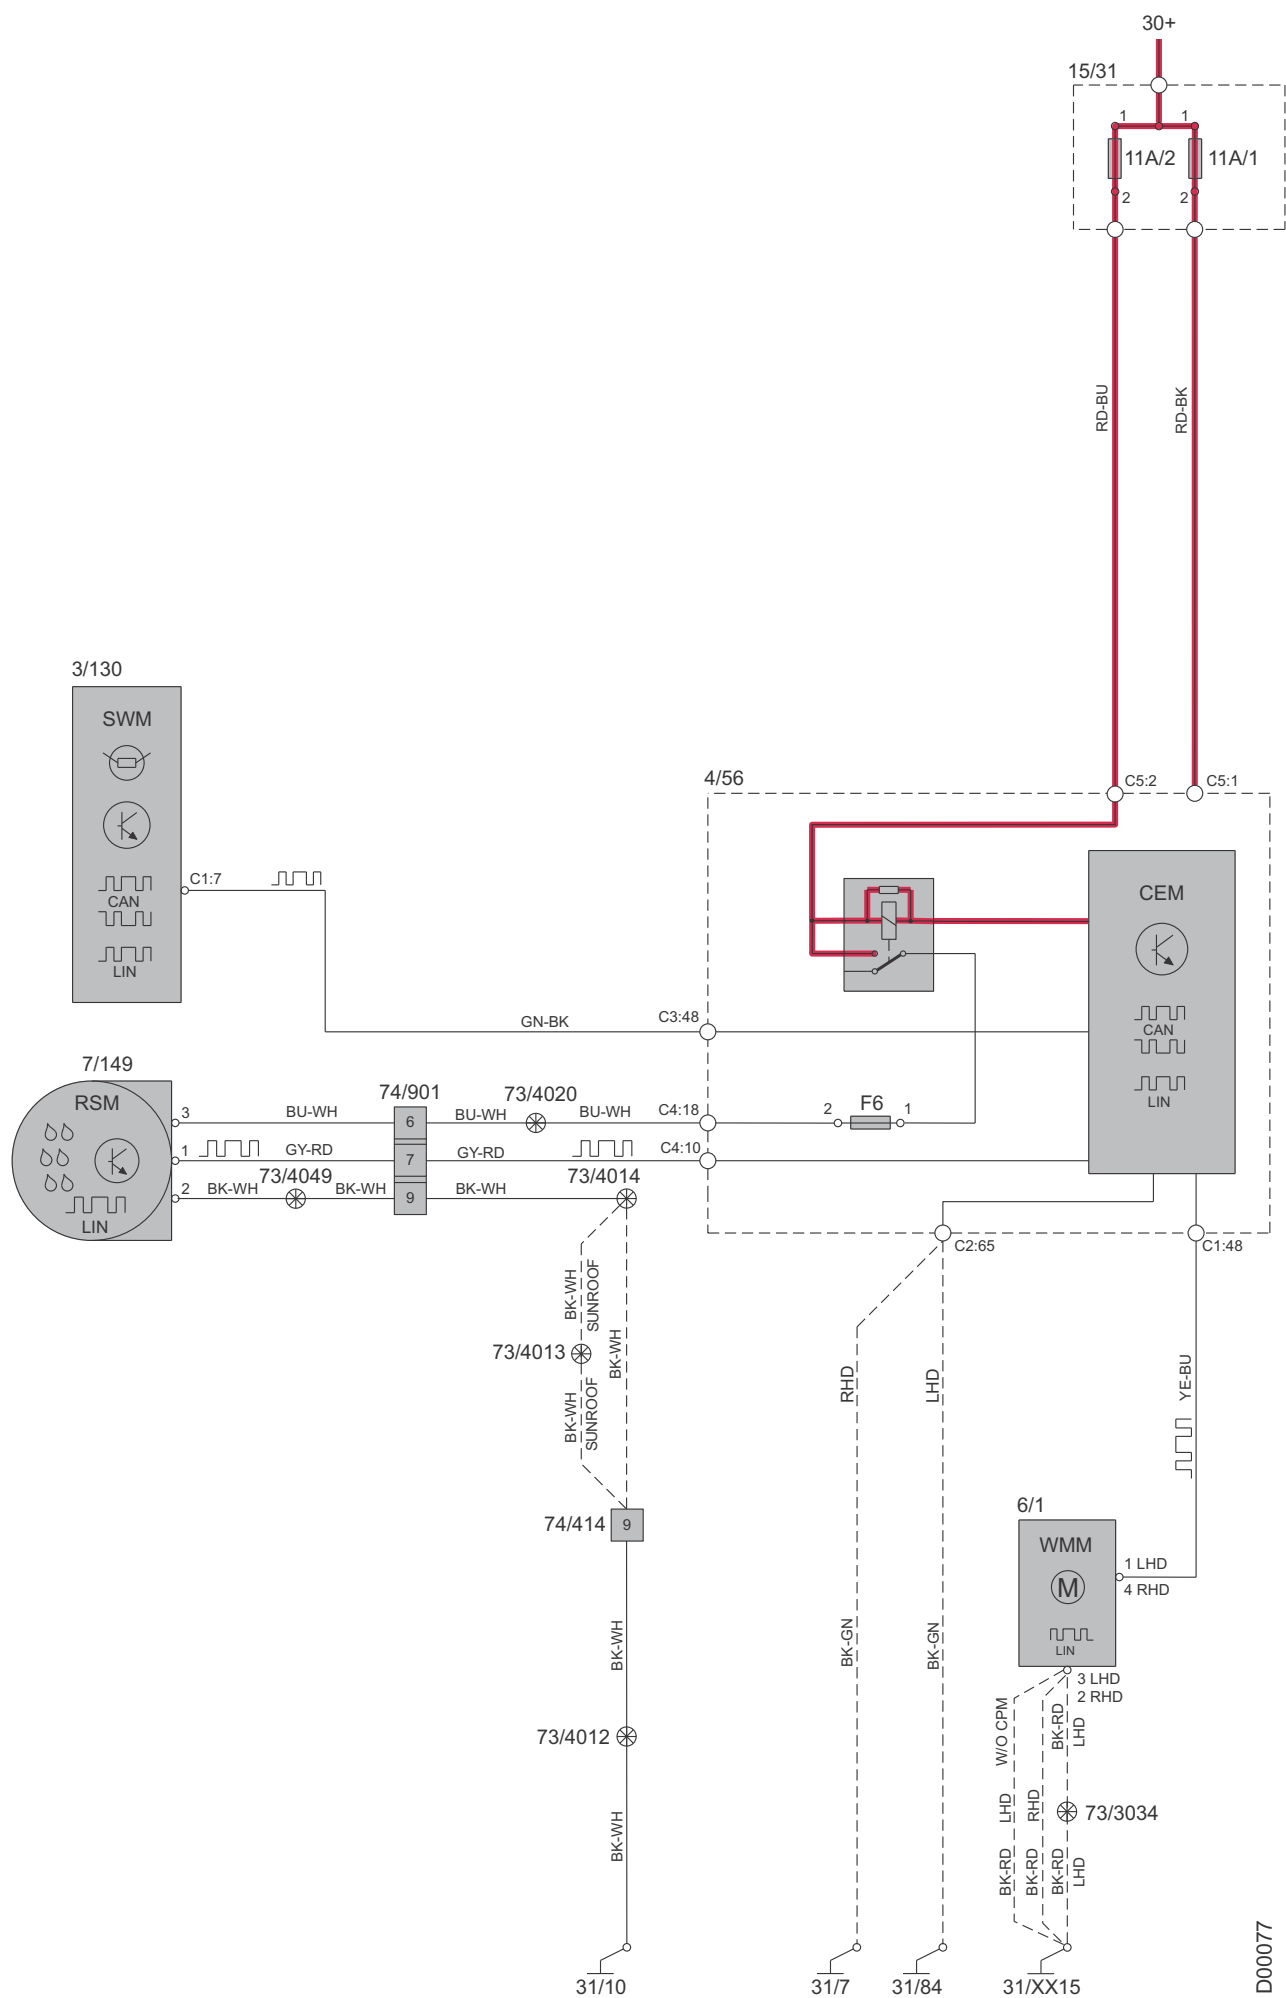


D00077

Direction indicator and hazard warning flashers LHD S60

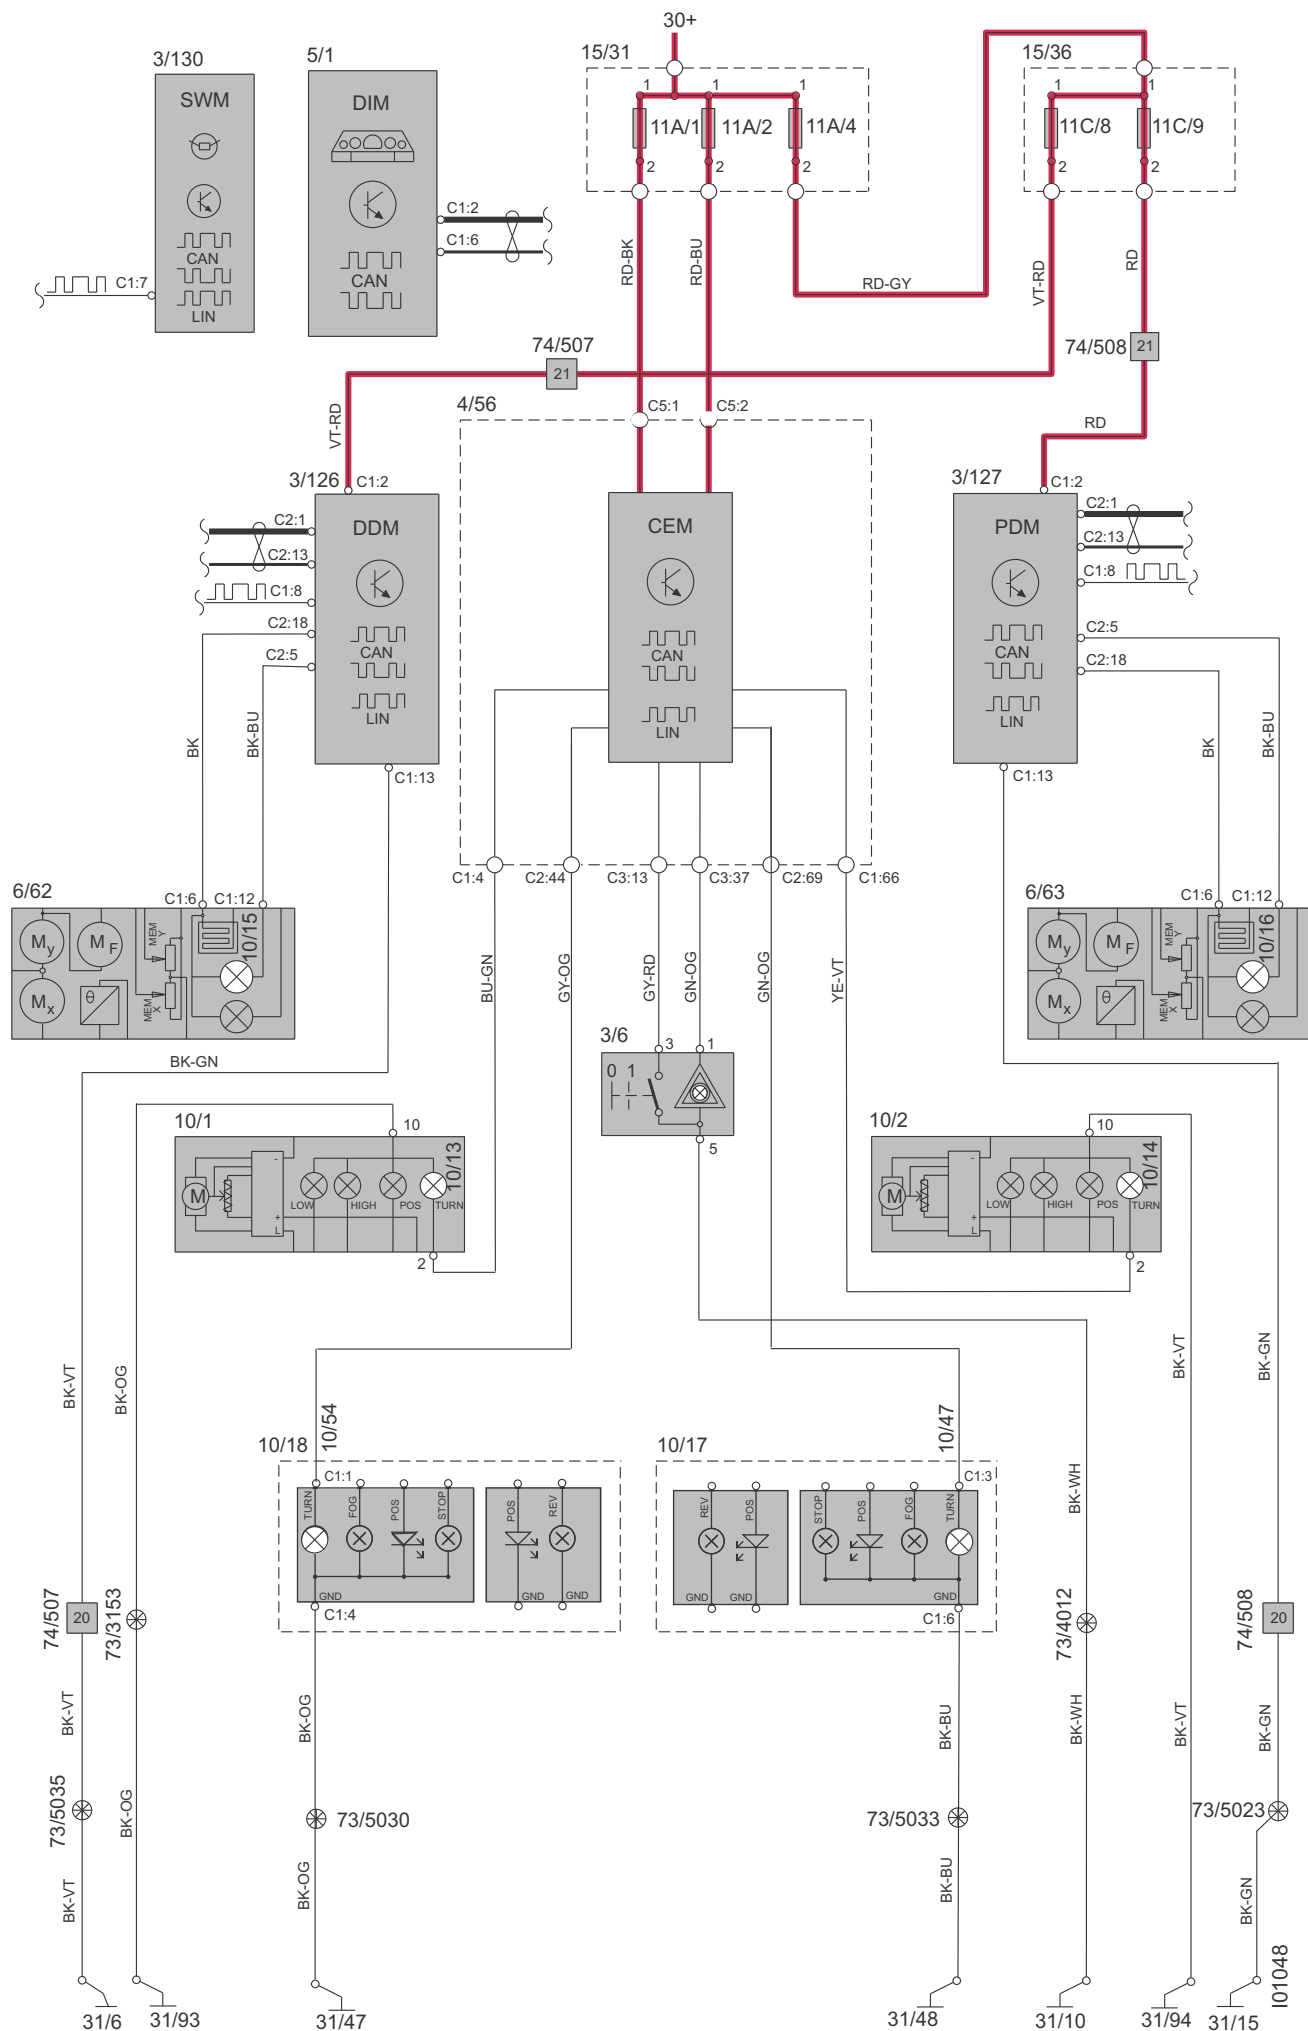


Direction indicator and hazard warning flashers LHD V60

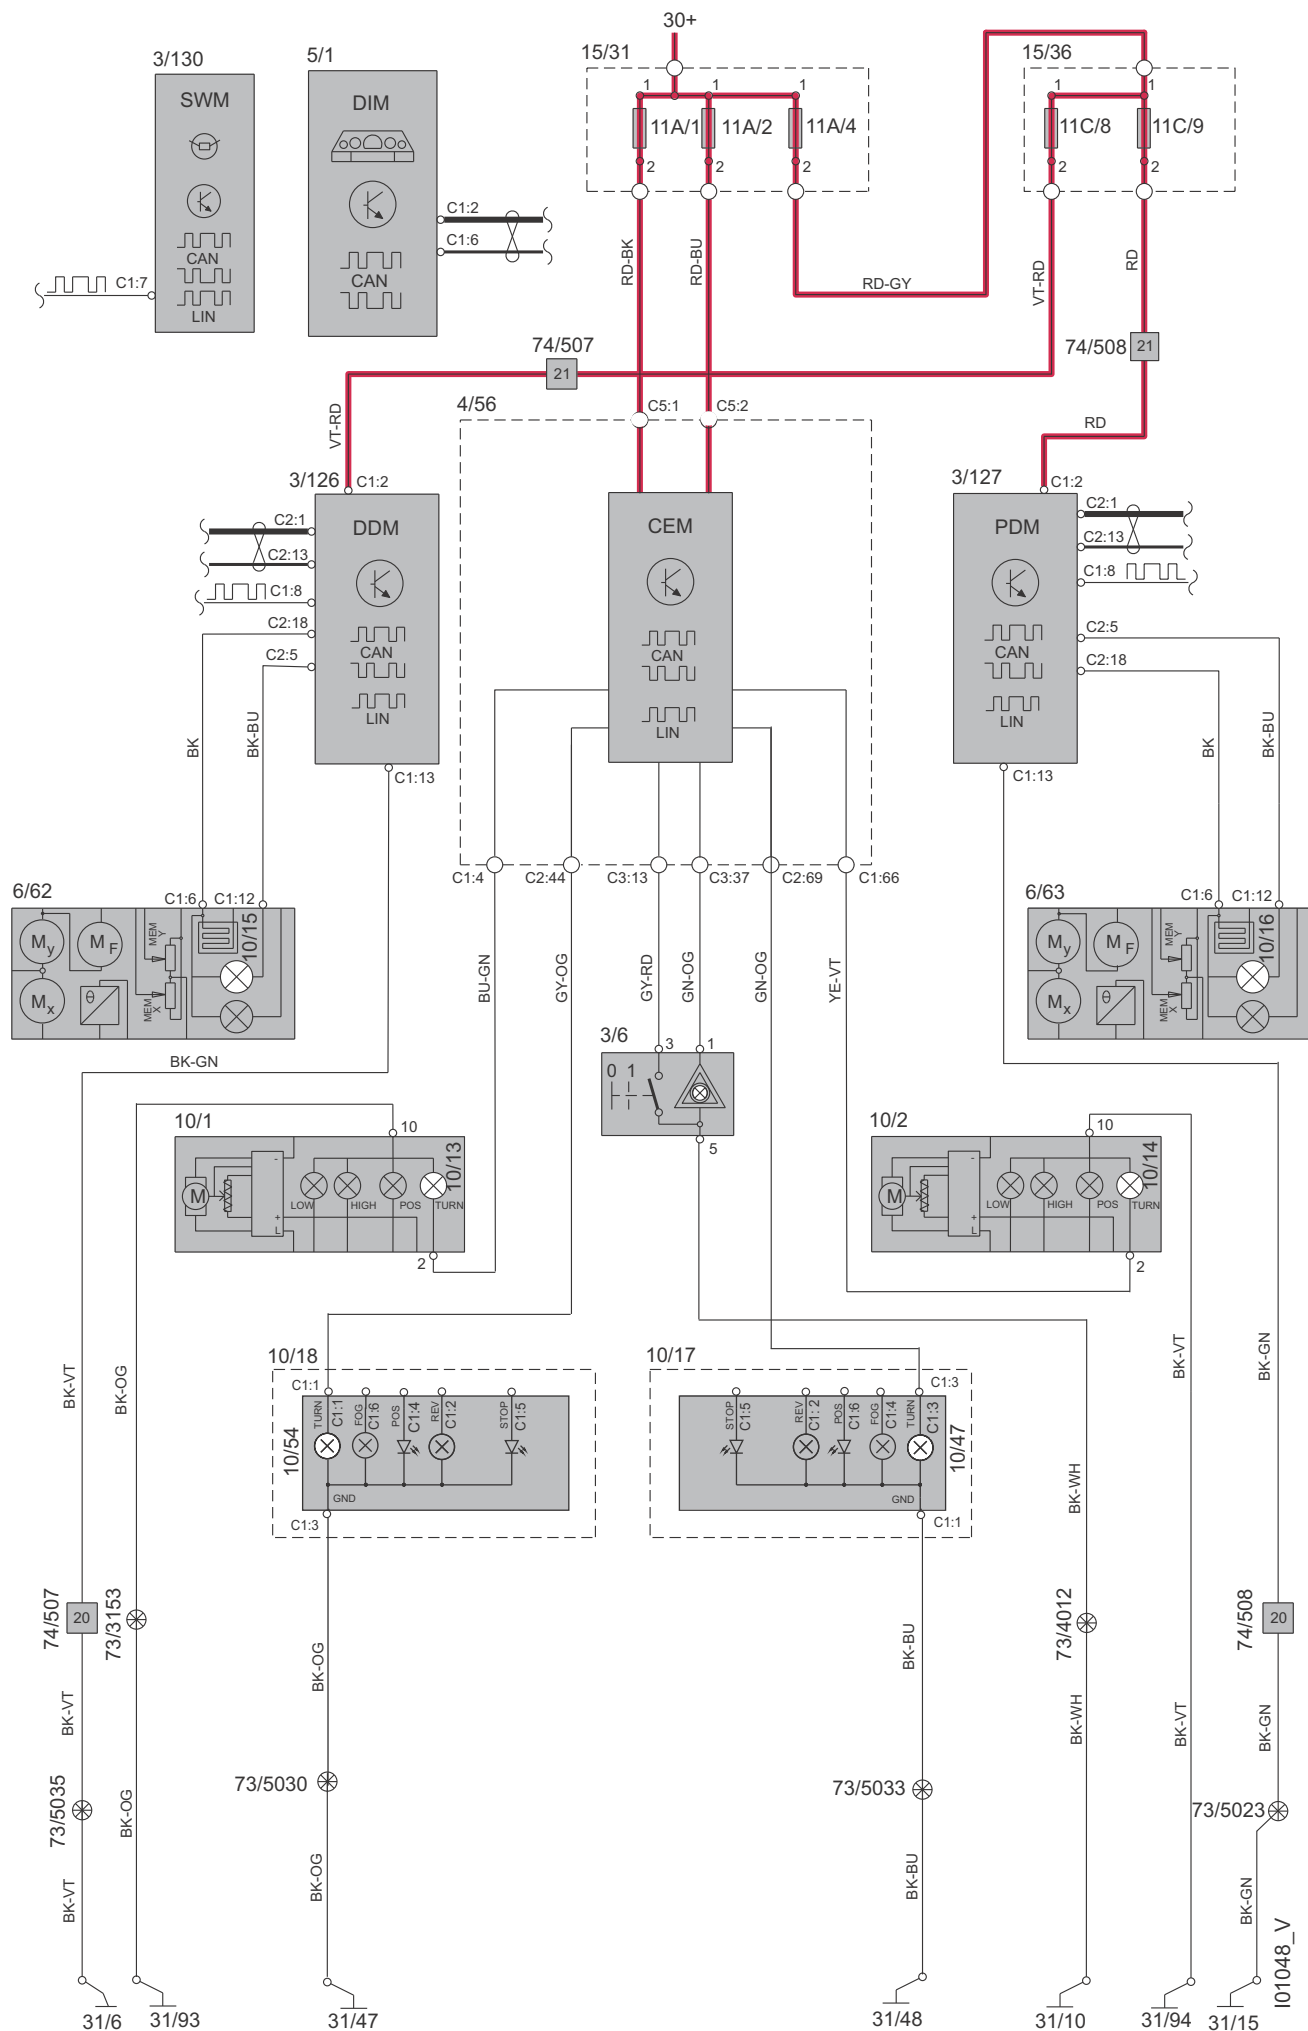


Group 36 Additional electrical equipment

Direction indicator and hazard warning flashers RHD S60

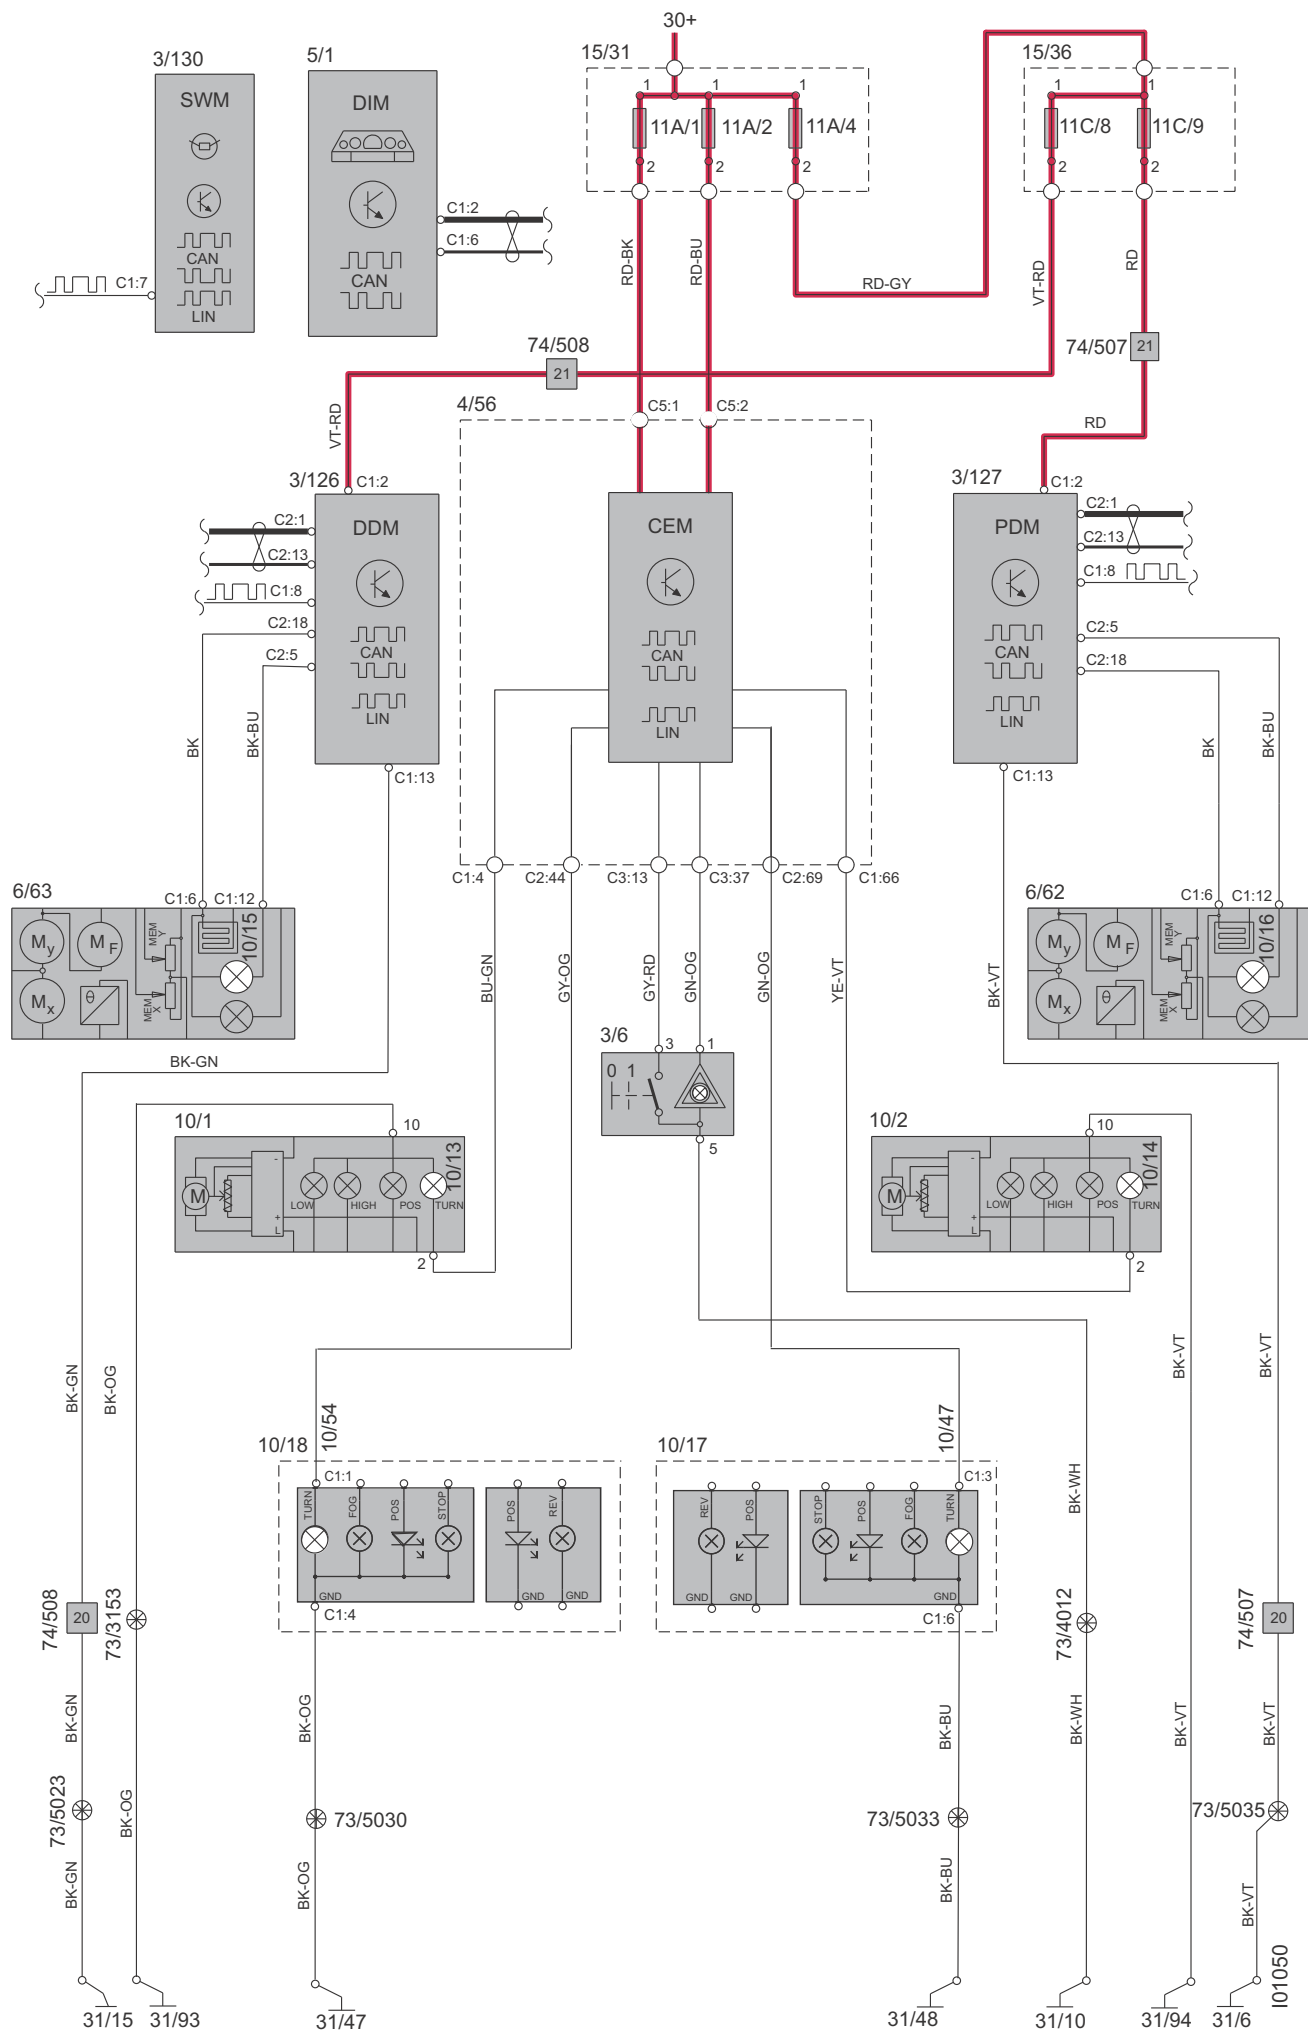


Group 36 Additional electrical equipment


Direction indicator and hazard warning flashers RHD V60

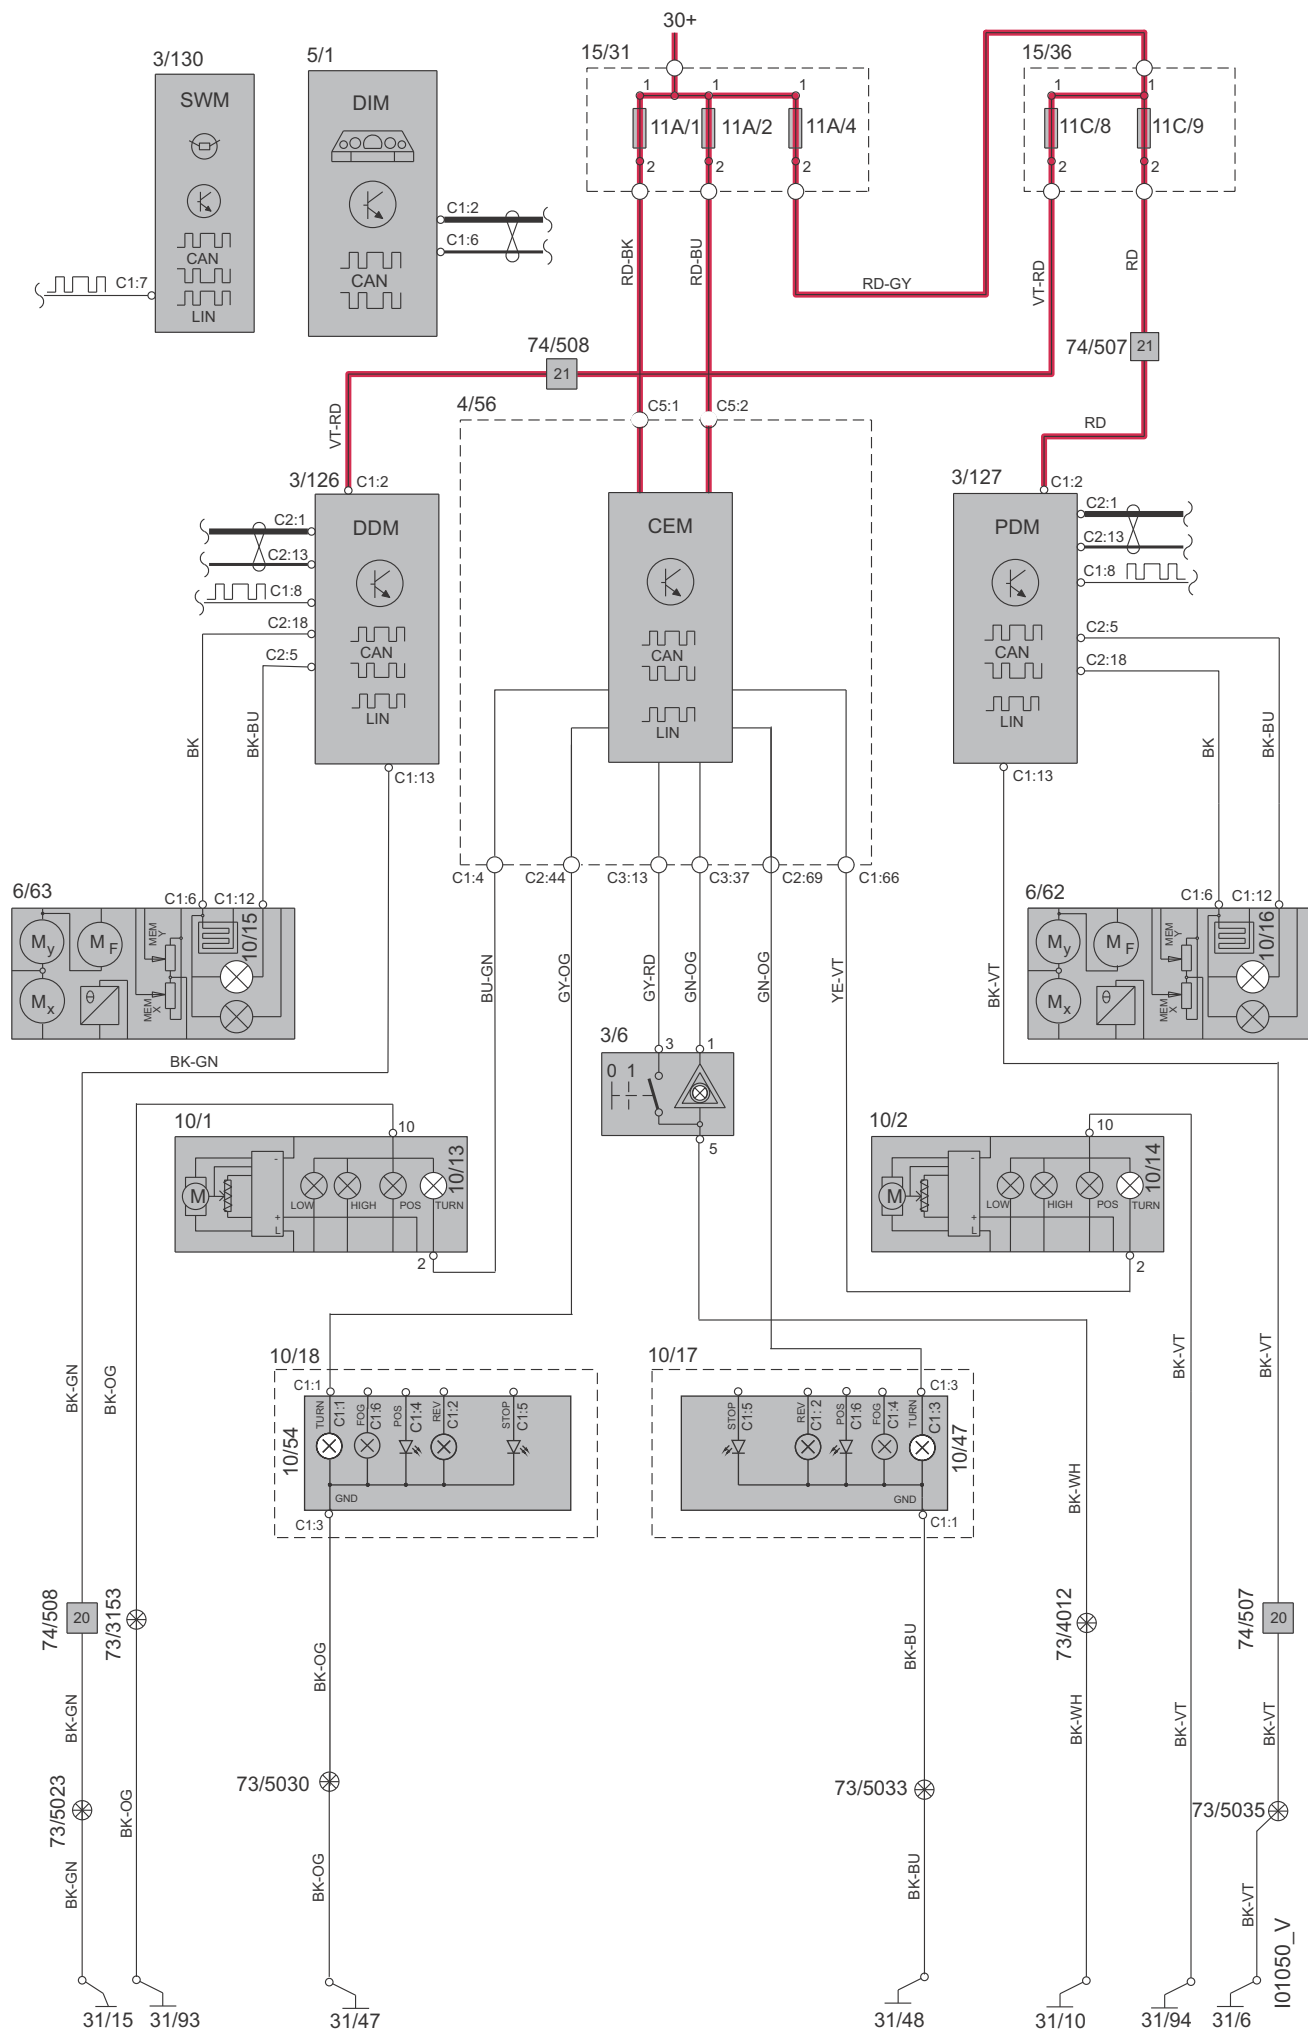


Group 36 Additional electrical equipment
Wiper/washer windshield

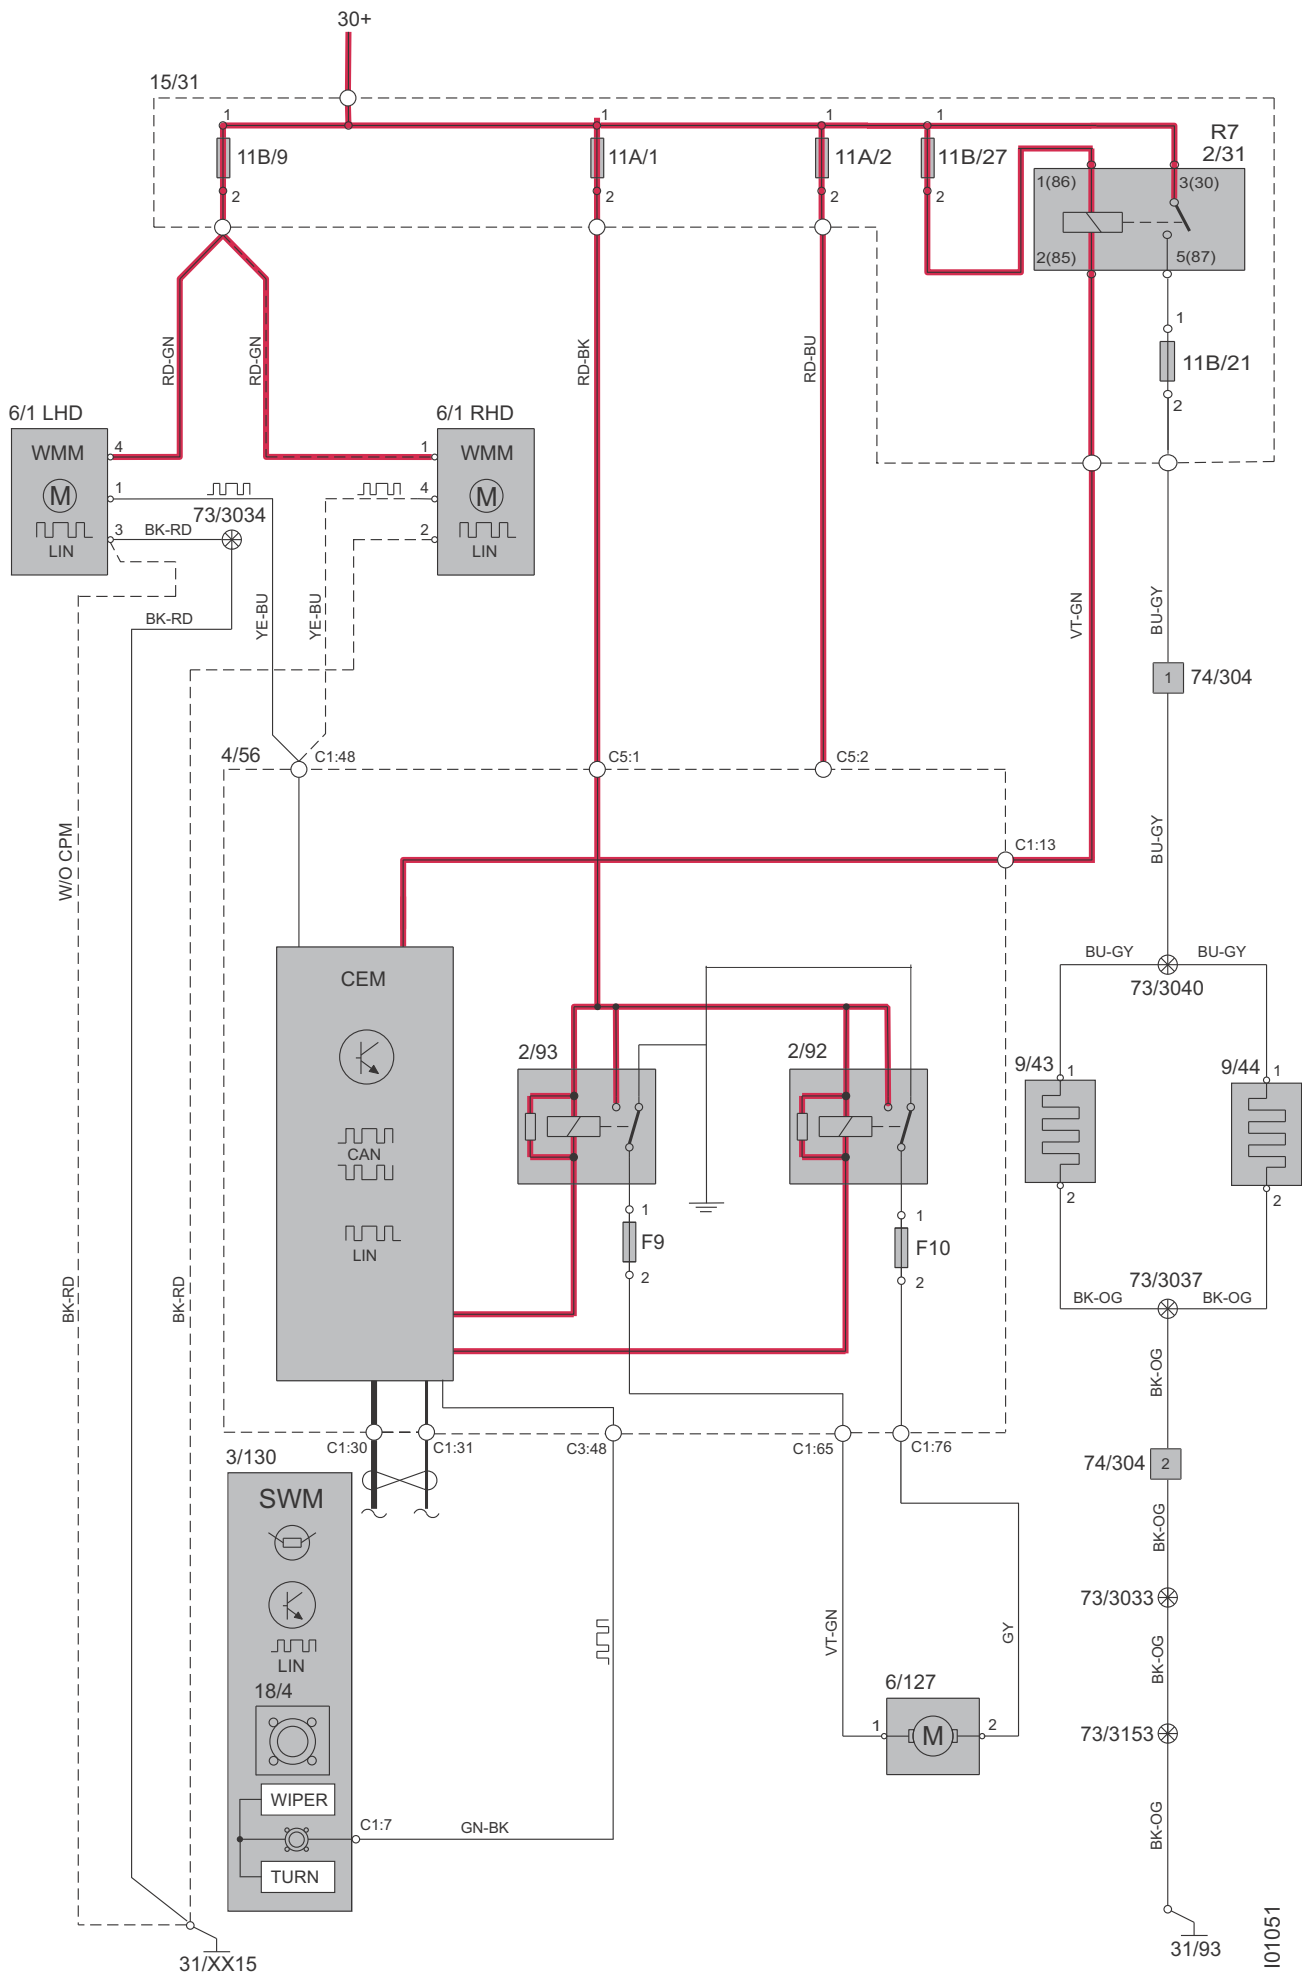

Group 36 Additional electrical equipment
Washer headlights

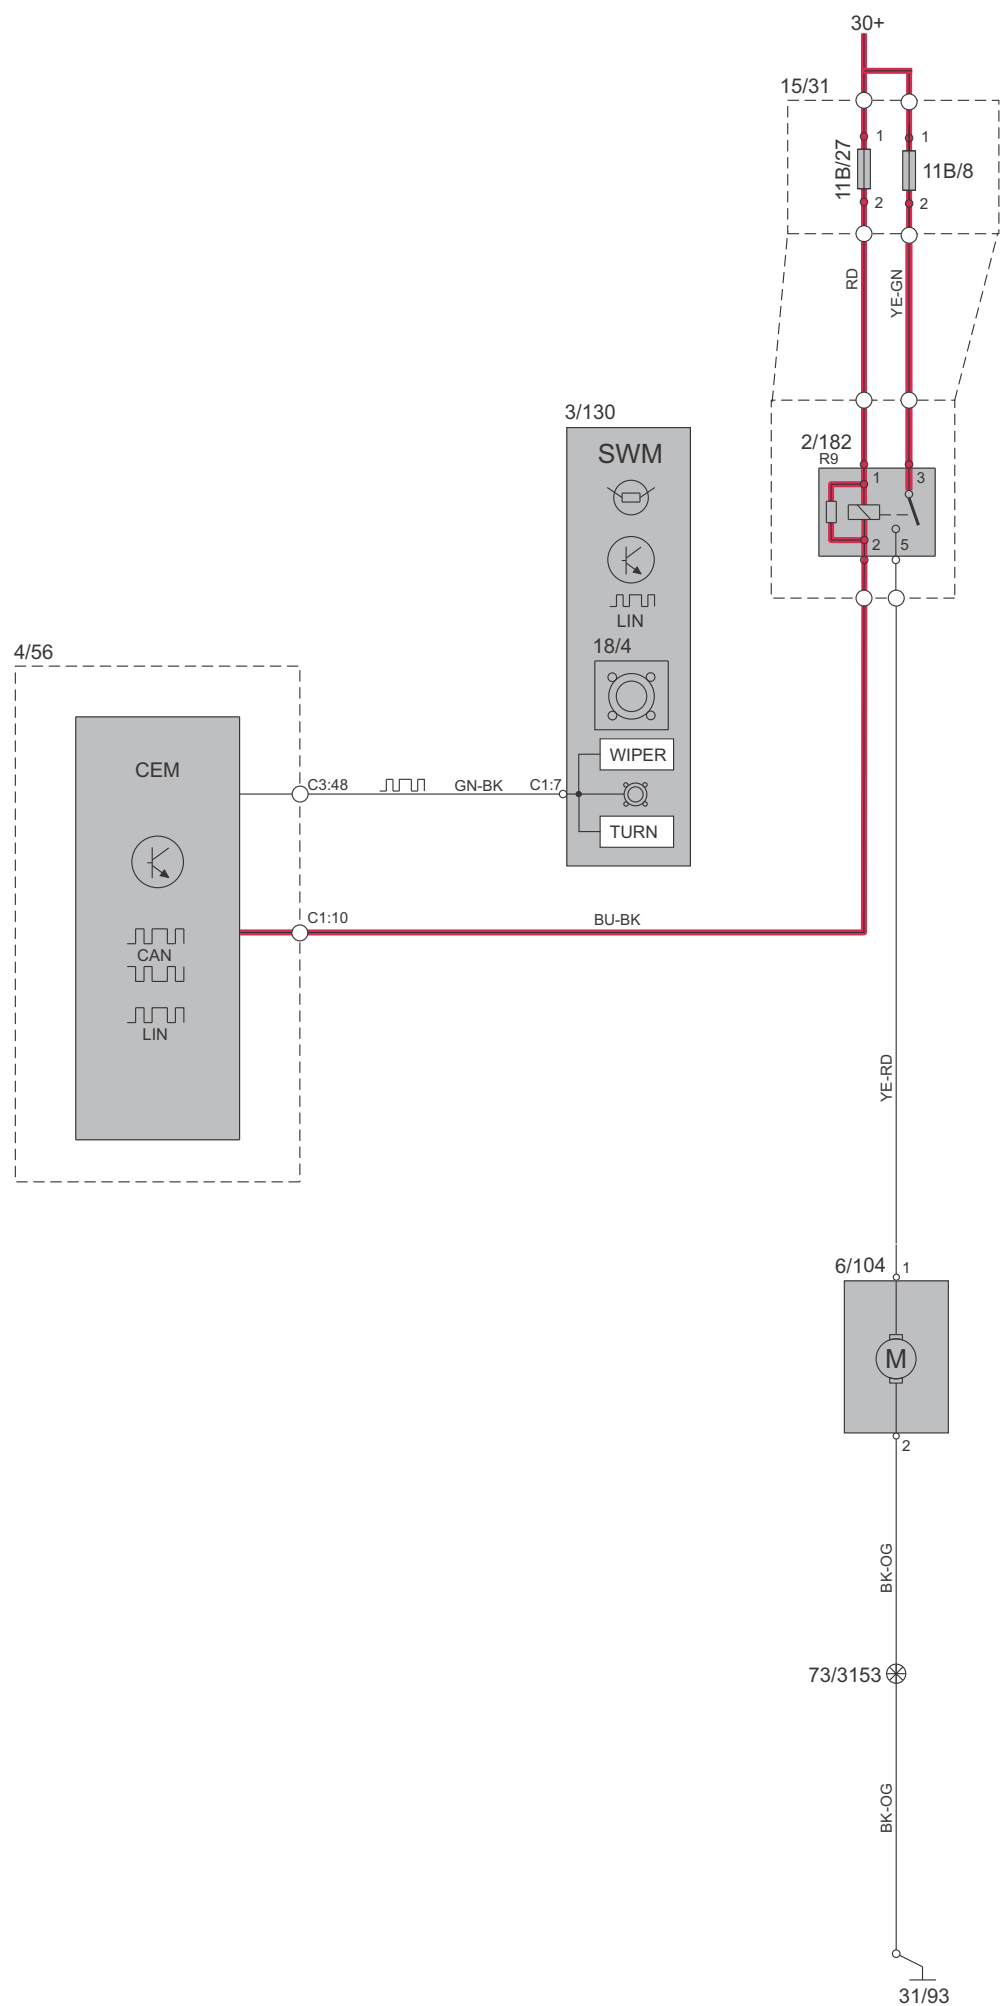


Group 36 Additional electrical equipment Wiper/Washer rear windowV60

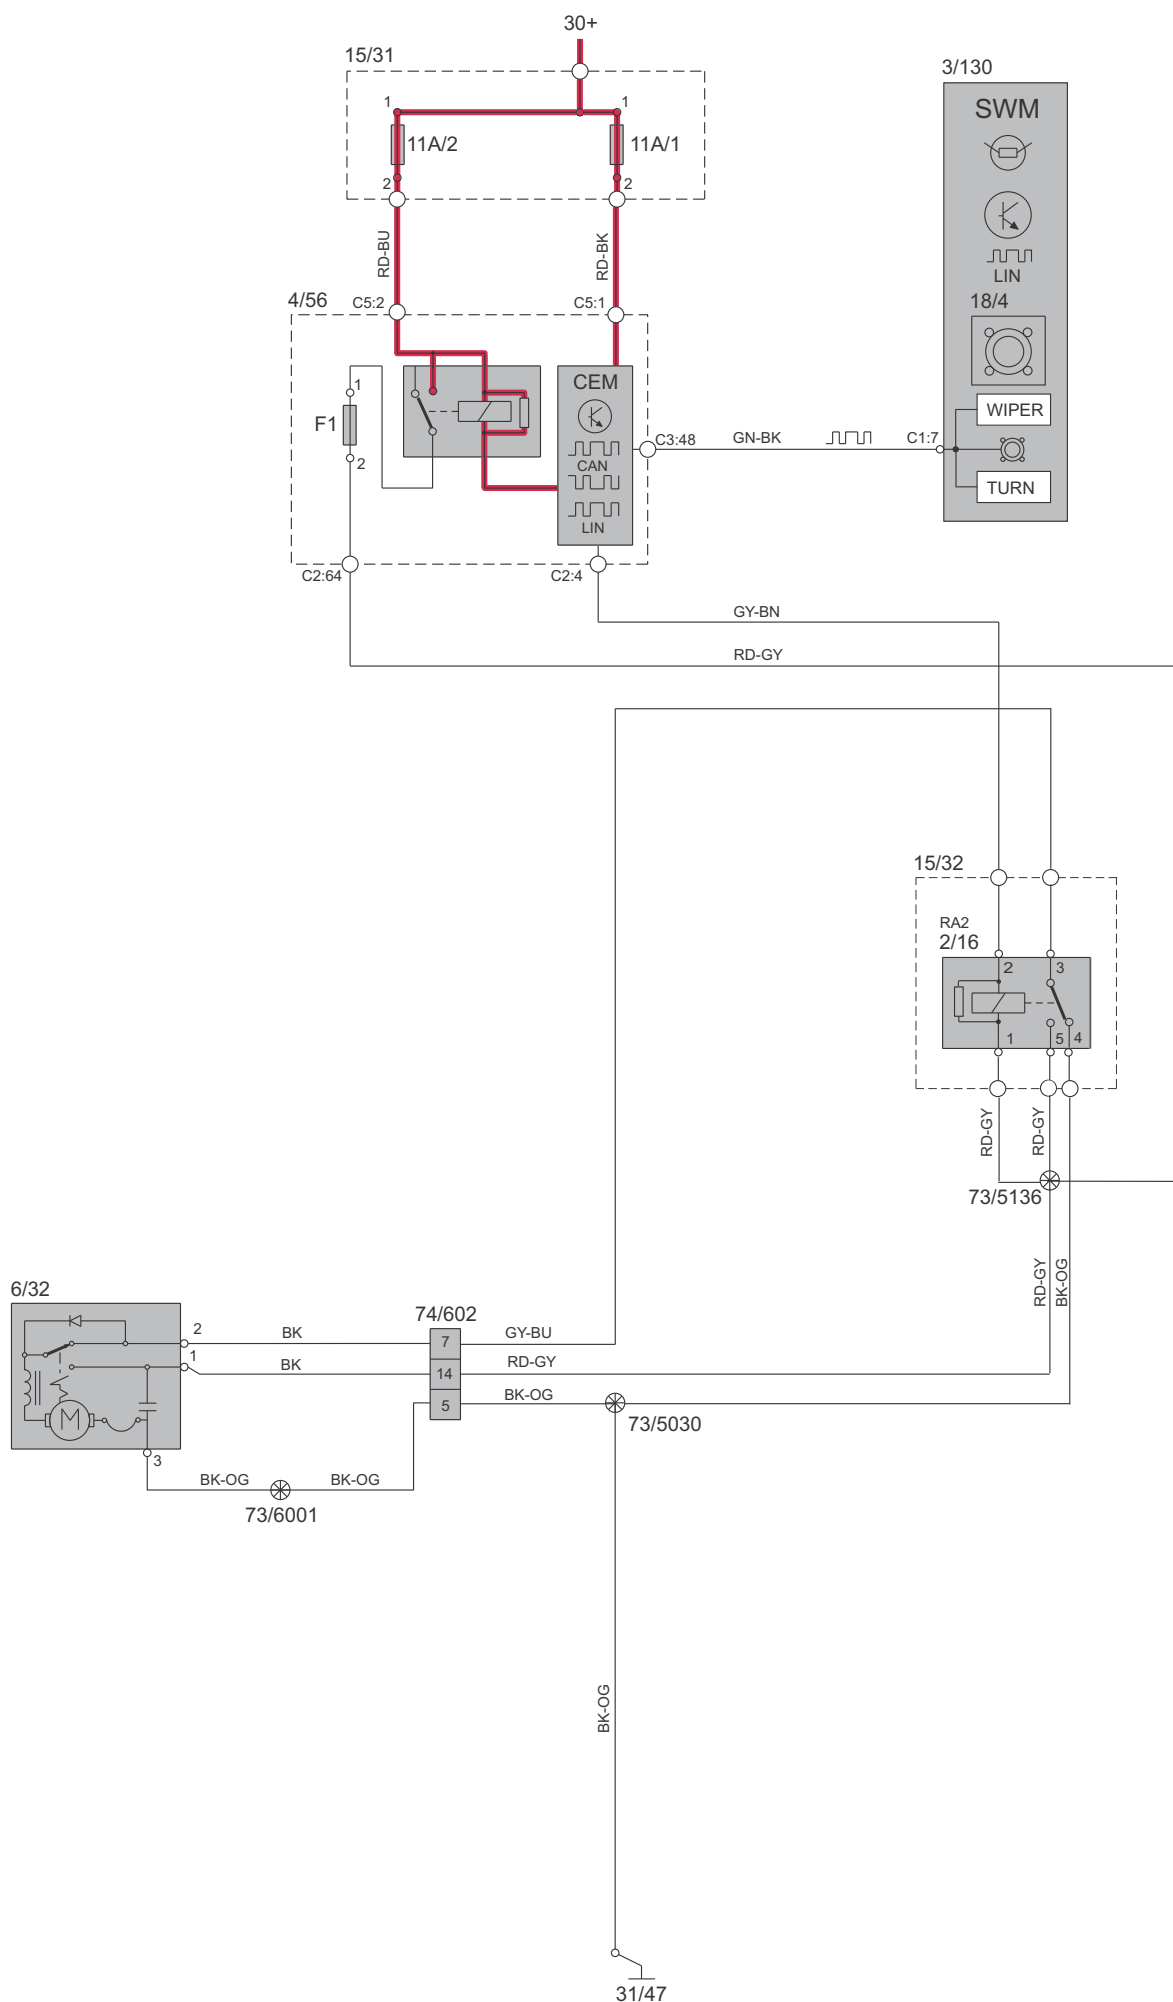


I01051_V

Group 36 Additional electrical equipment
Horn

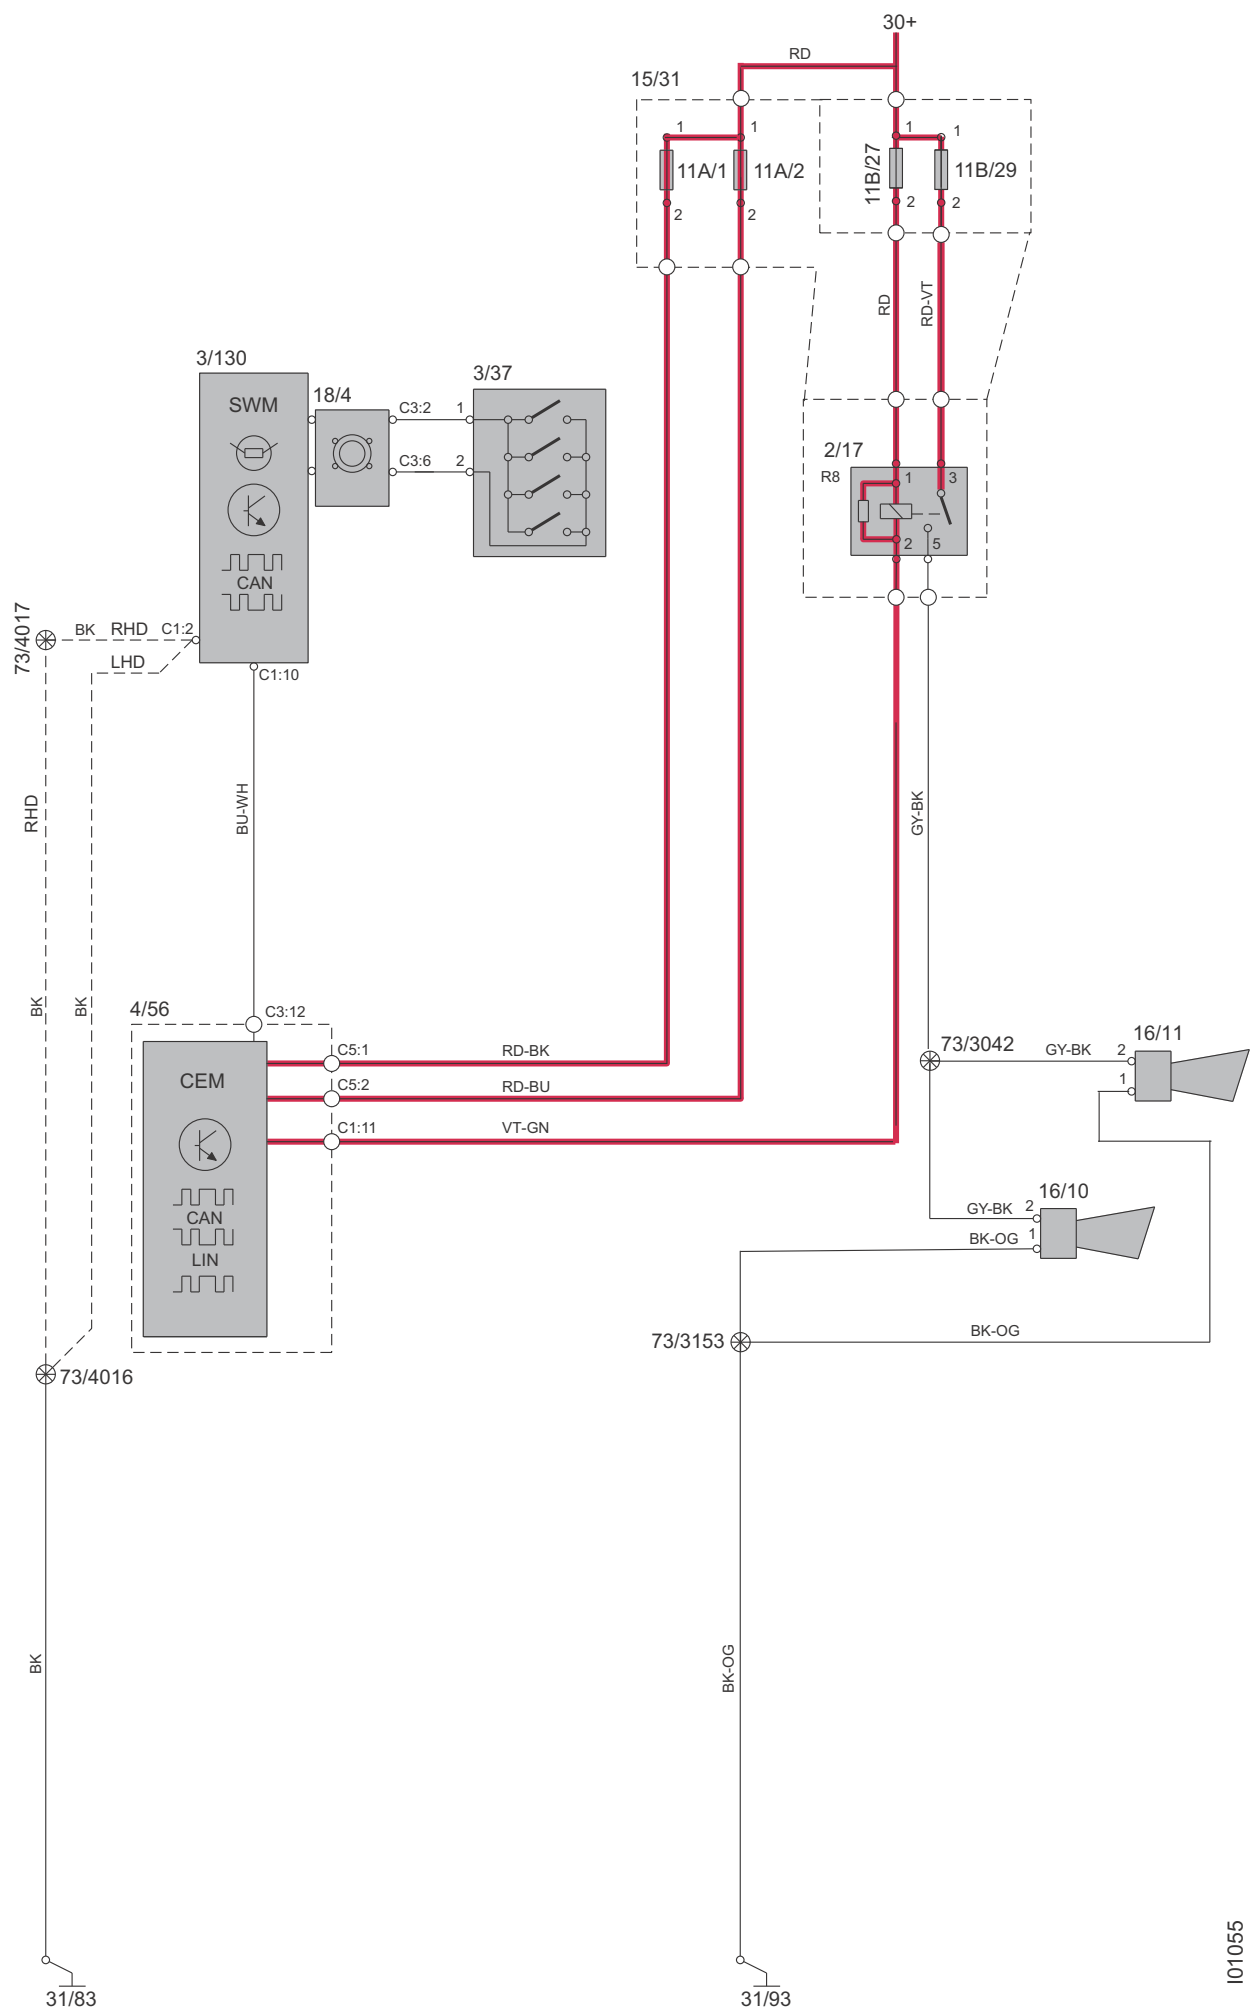

Group 36 Additional electrical equipment


Keyless vehicle 1:2

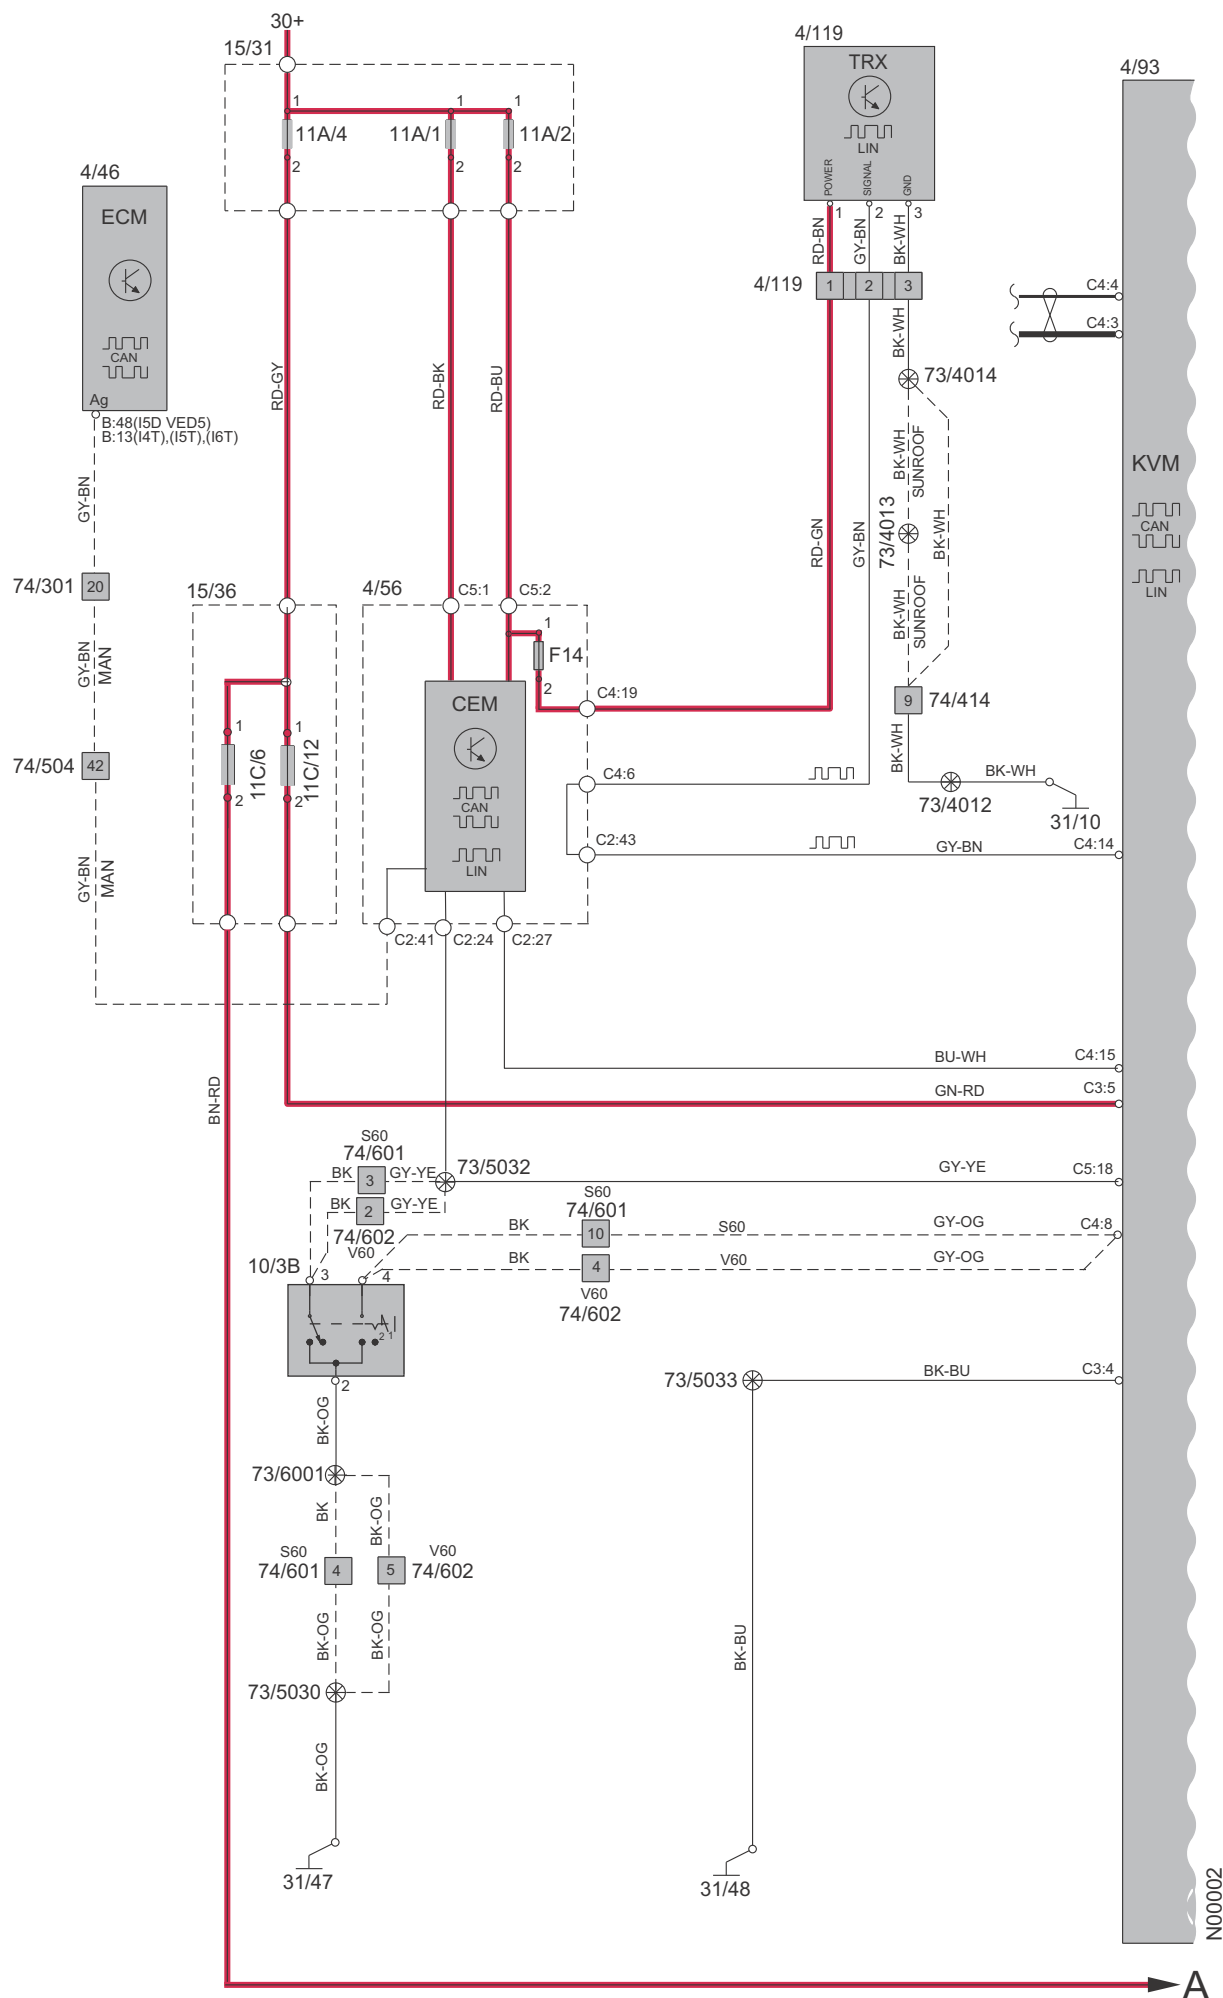

Group 36 Additional electrical equipment

Keyless vehicle 2:2

4/93

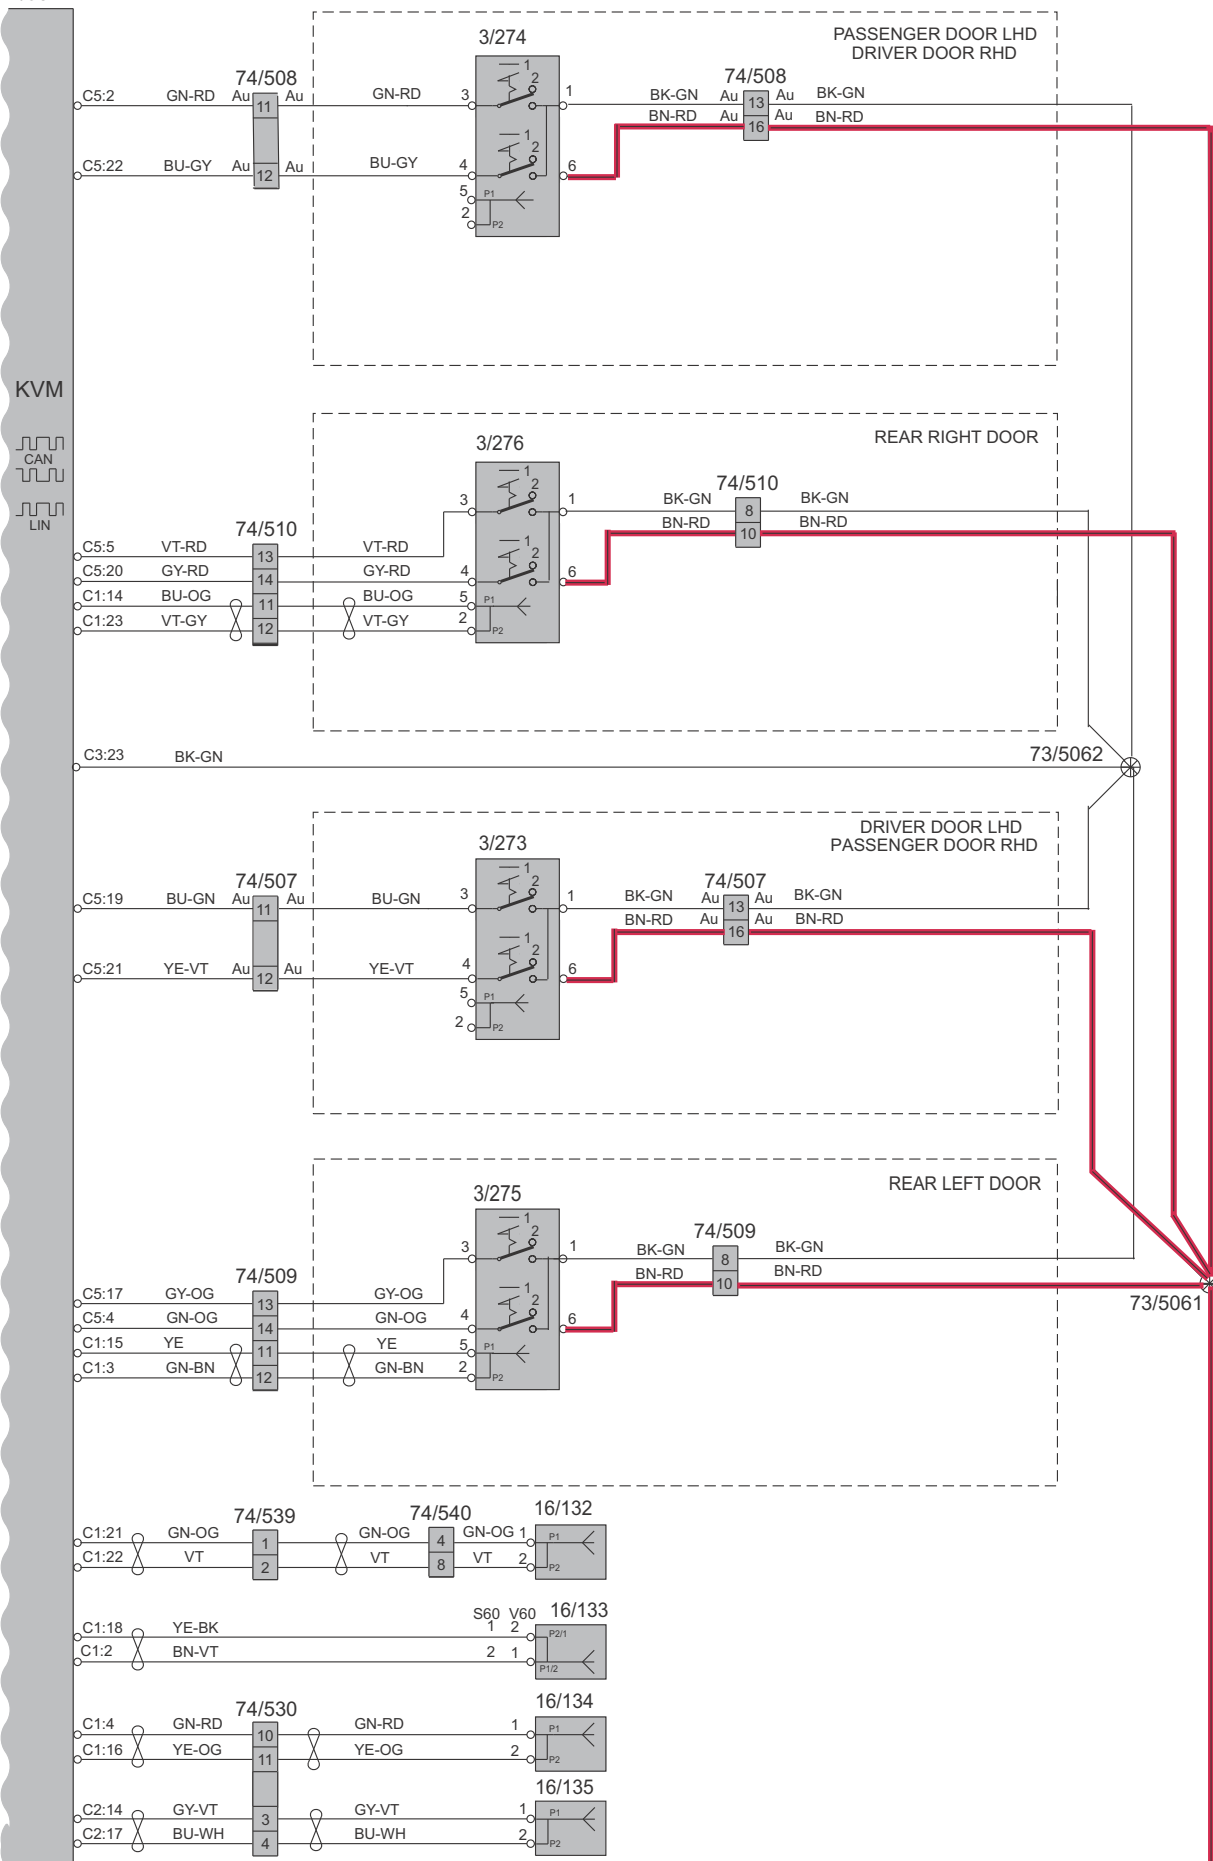


A


1010596

Group 36 Additional electrical equipment


Anti-theft alarm

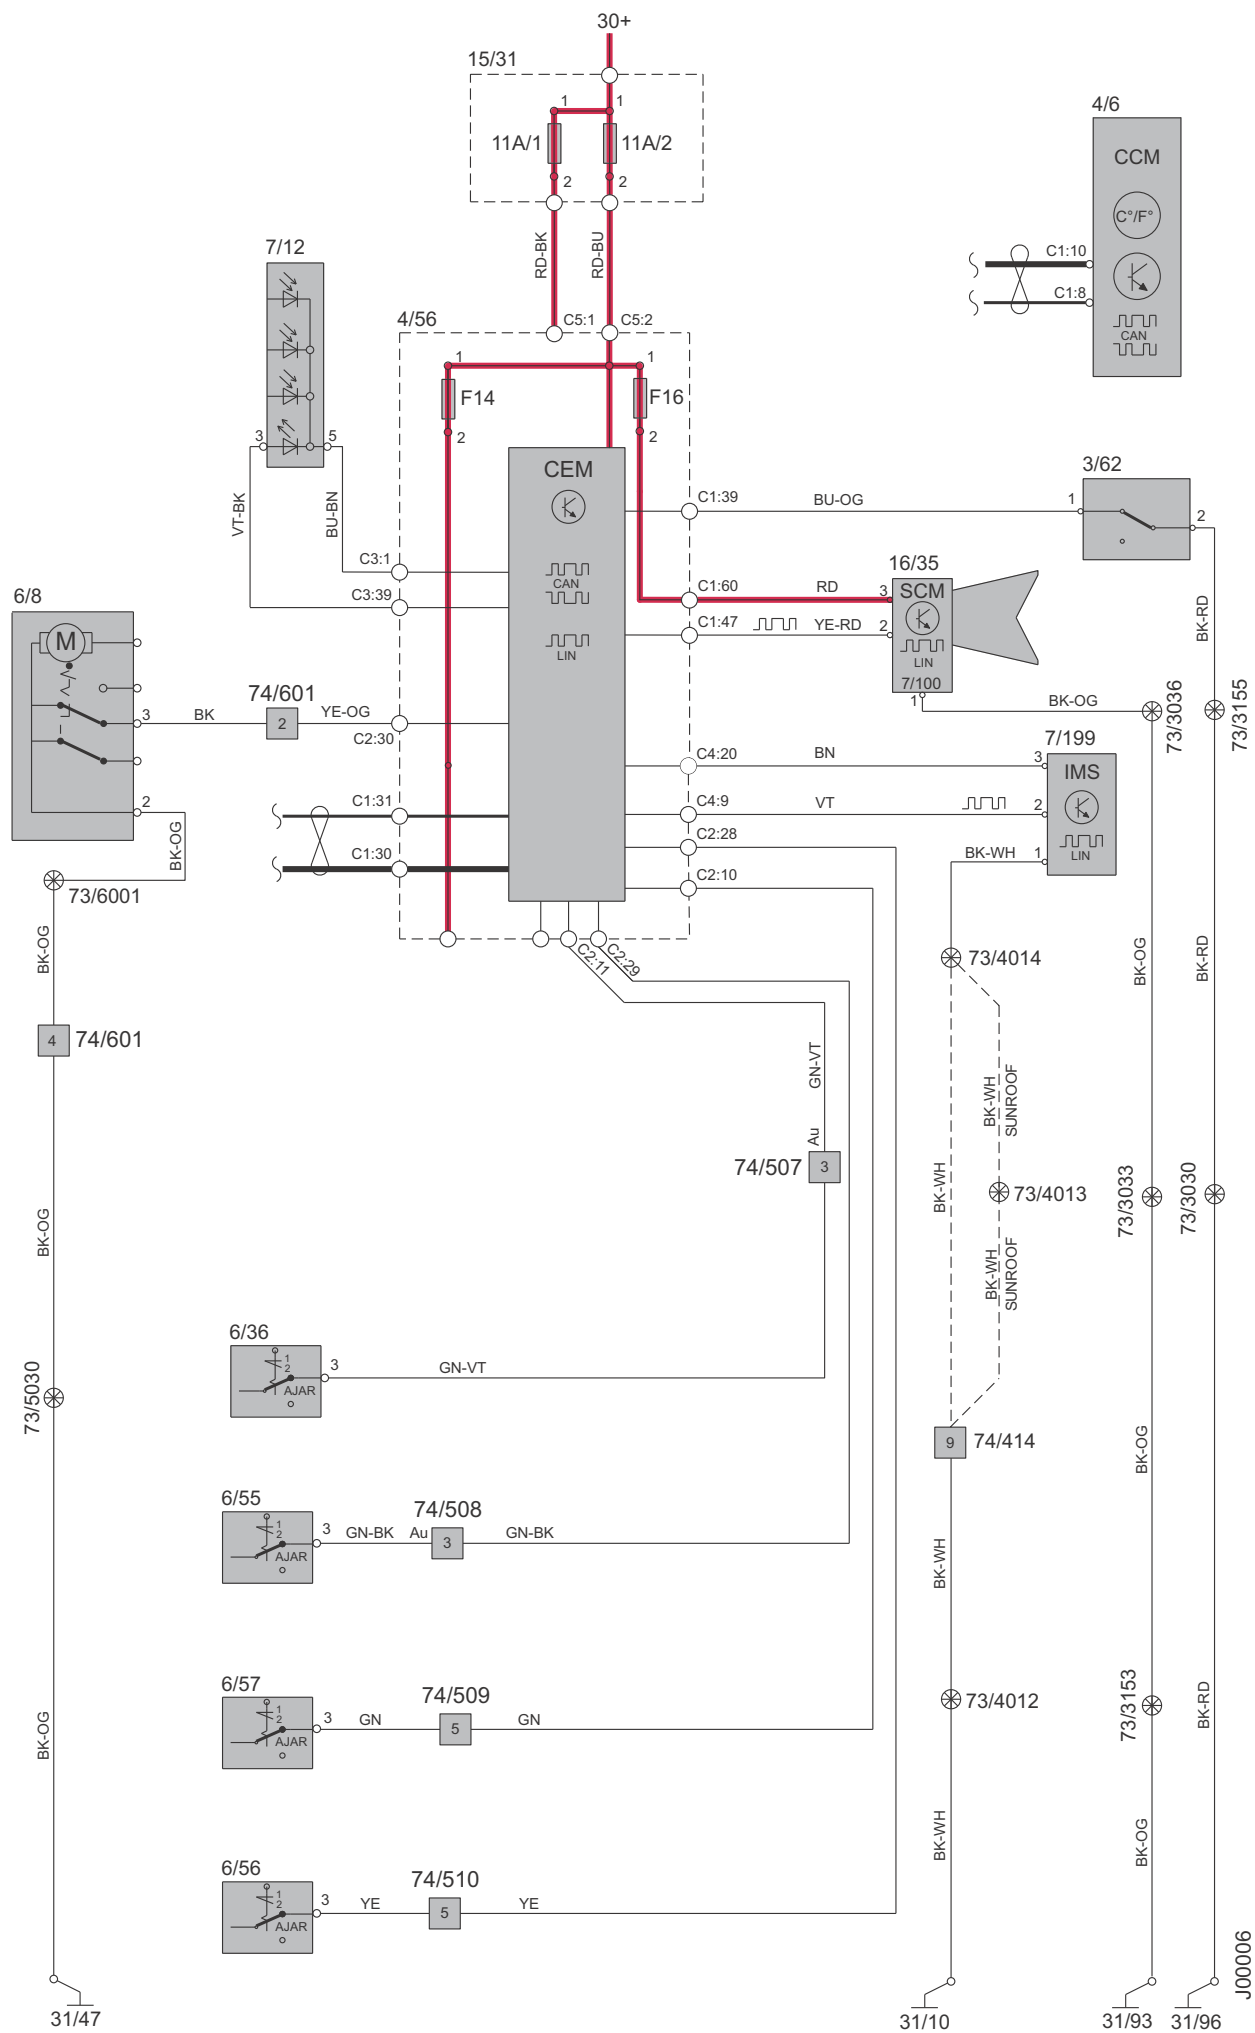

Group 36 Additional electrical equipment
Parking assistance

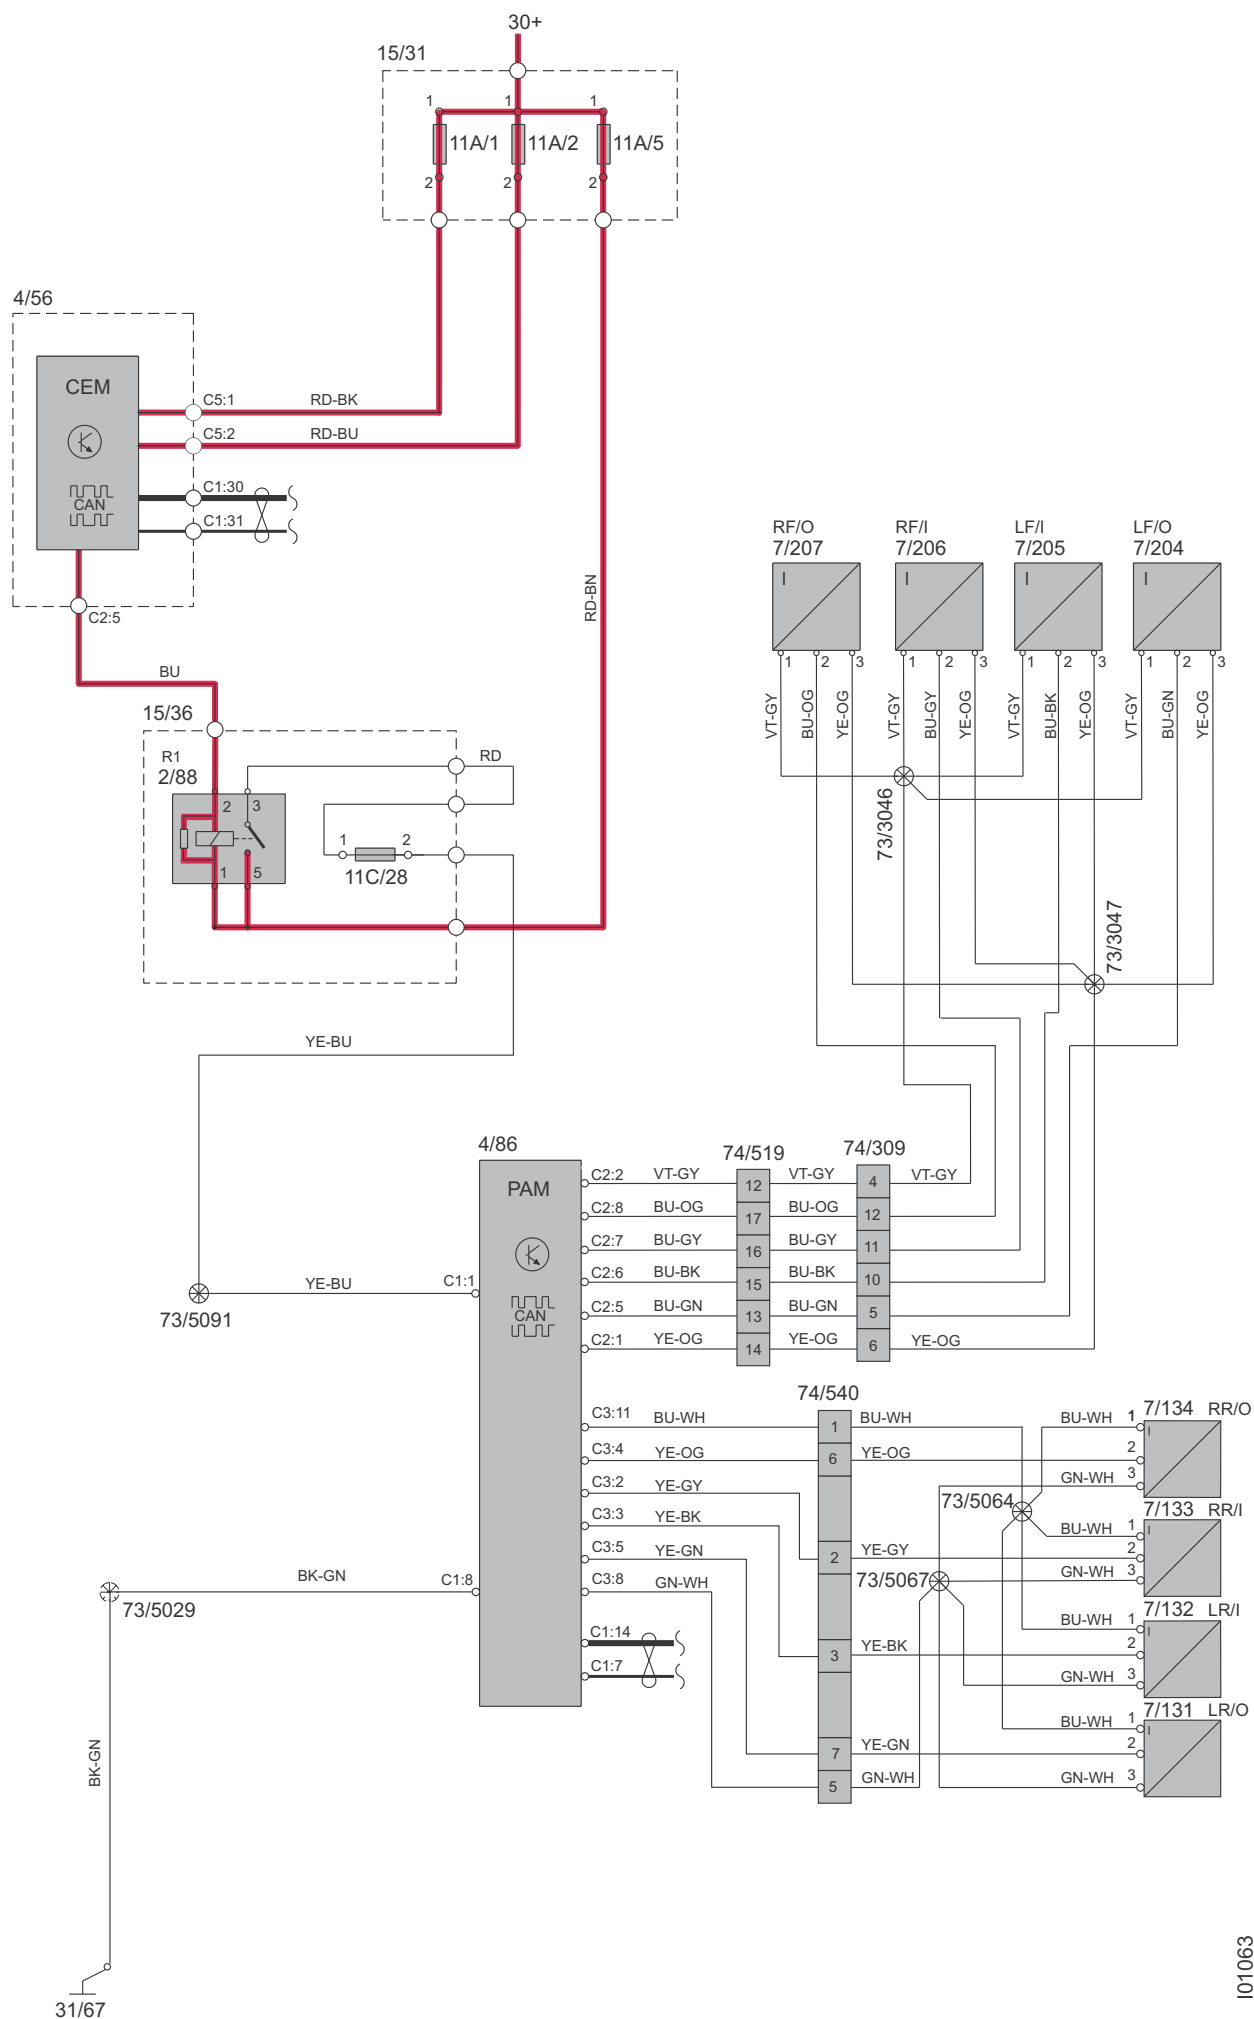


Group 36 Additional electrical equipment Collision warning with power brake booster

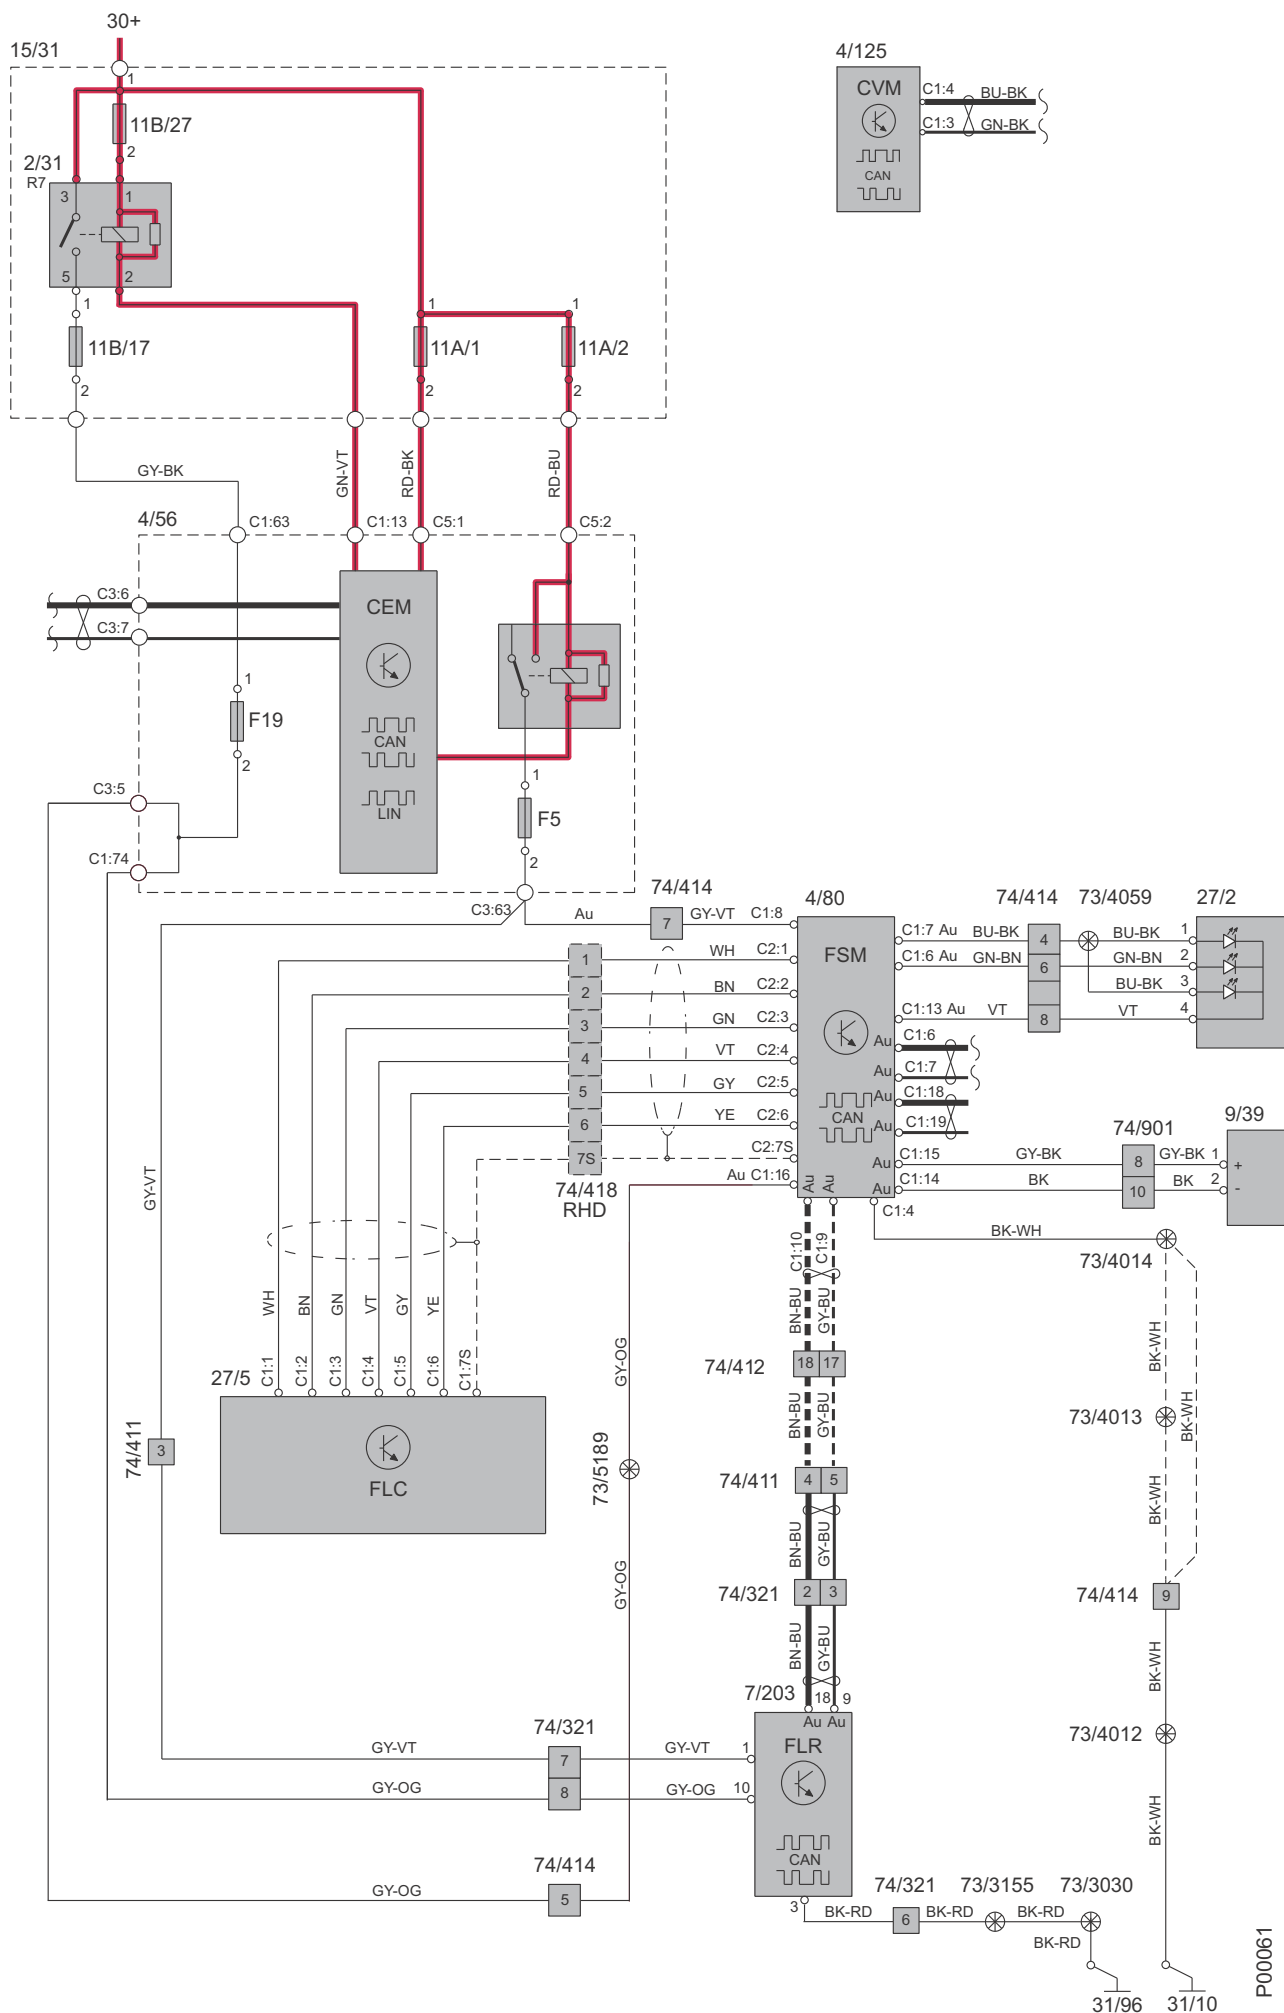


Group 36 Additional electrical equipment

Tire pressure monitoring system (TPMS)

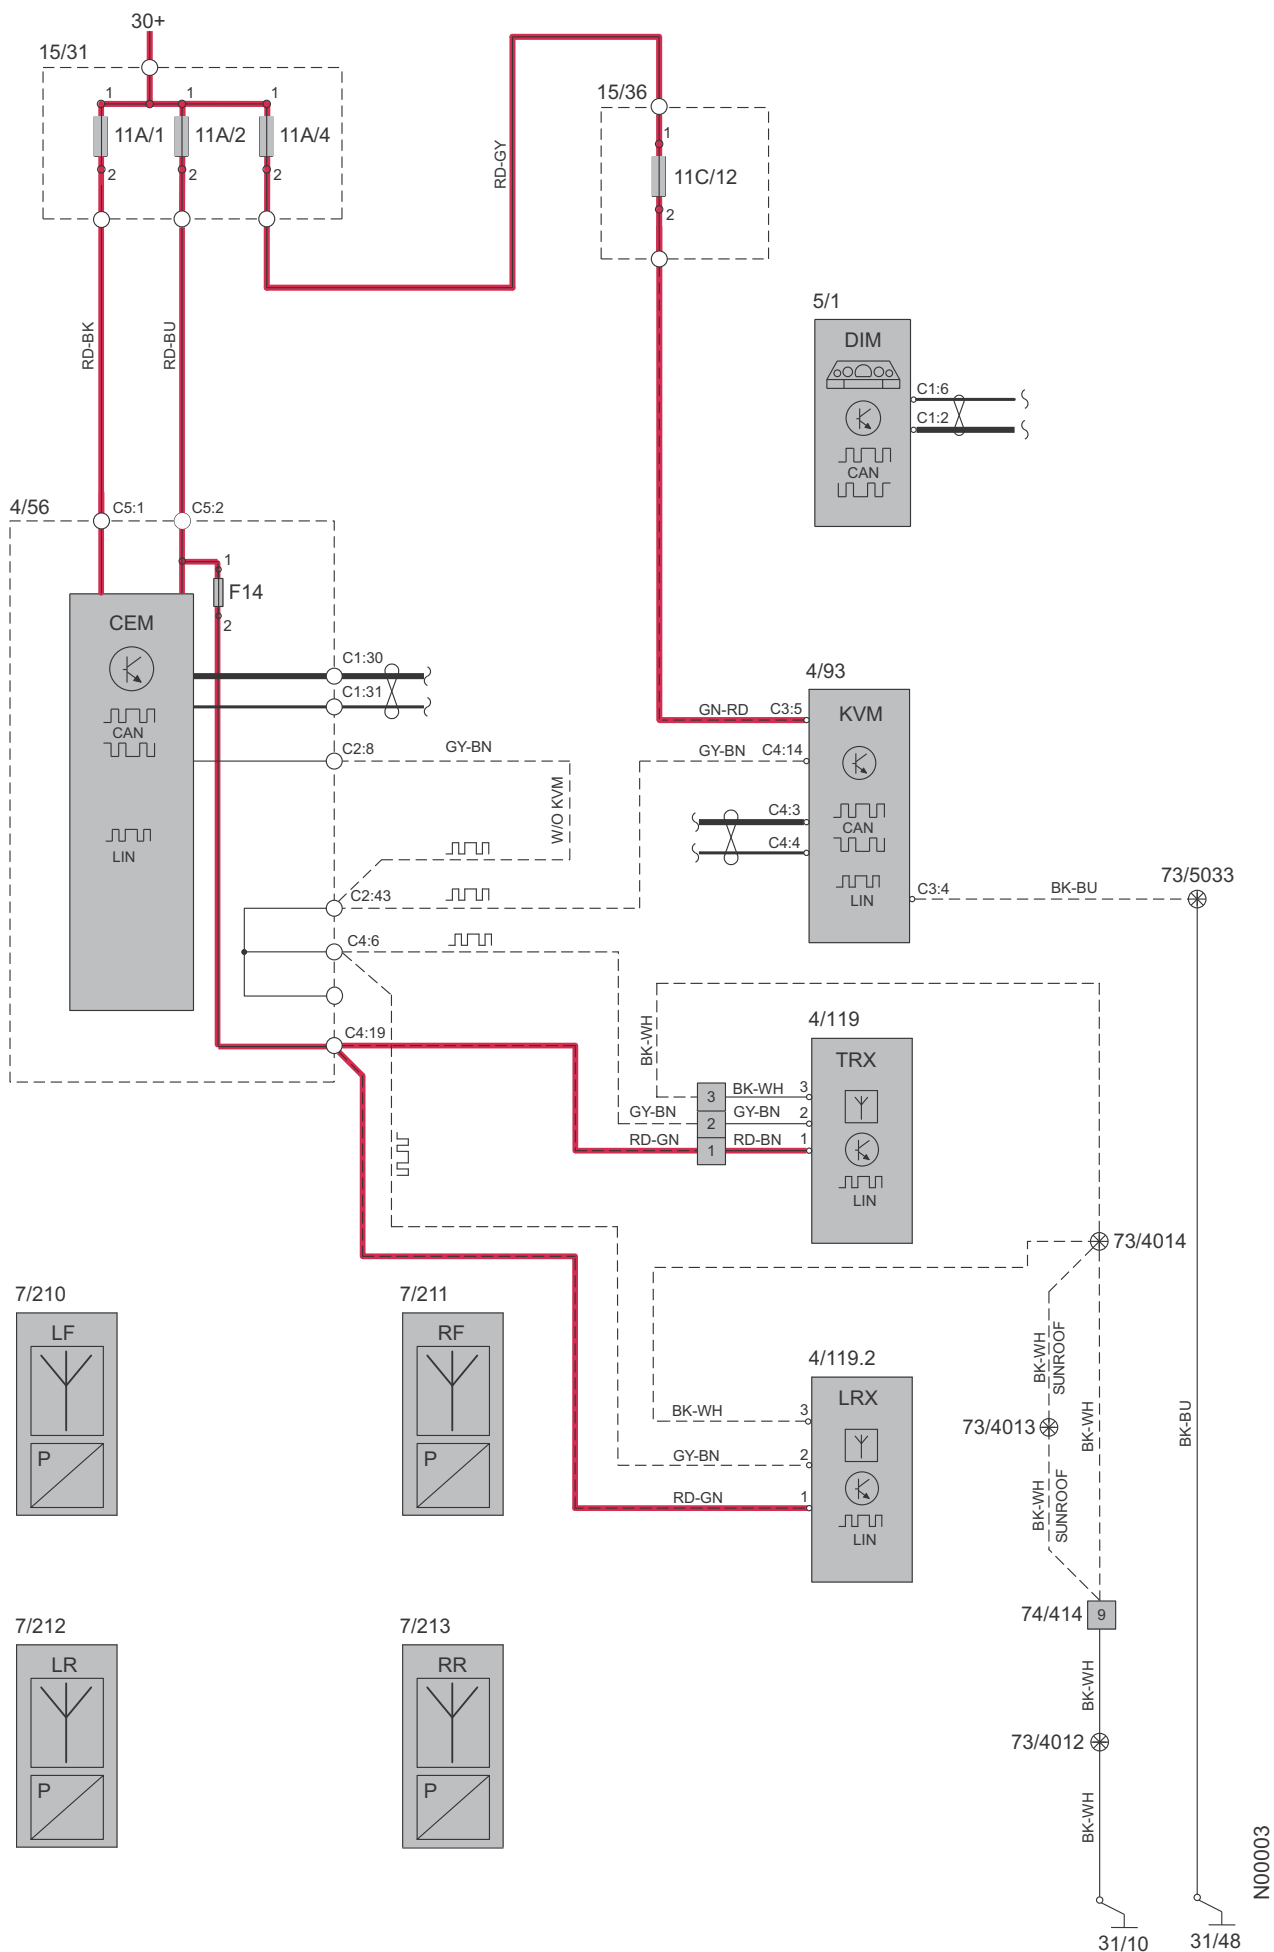


Group 36 Additional electrical equipment

Alcohol lock

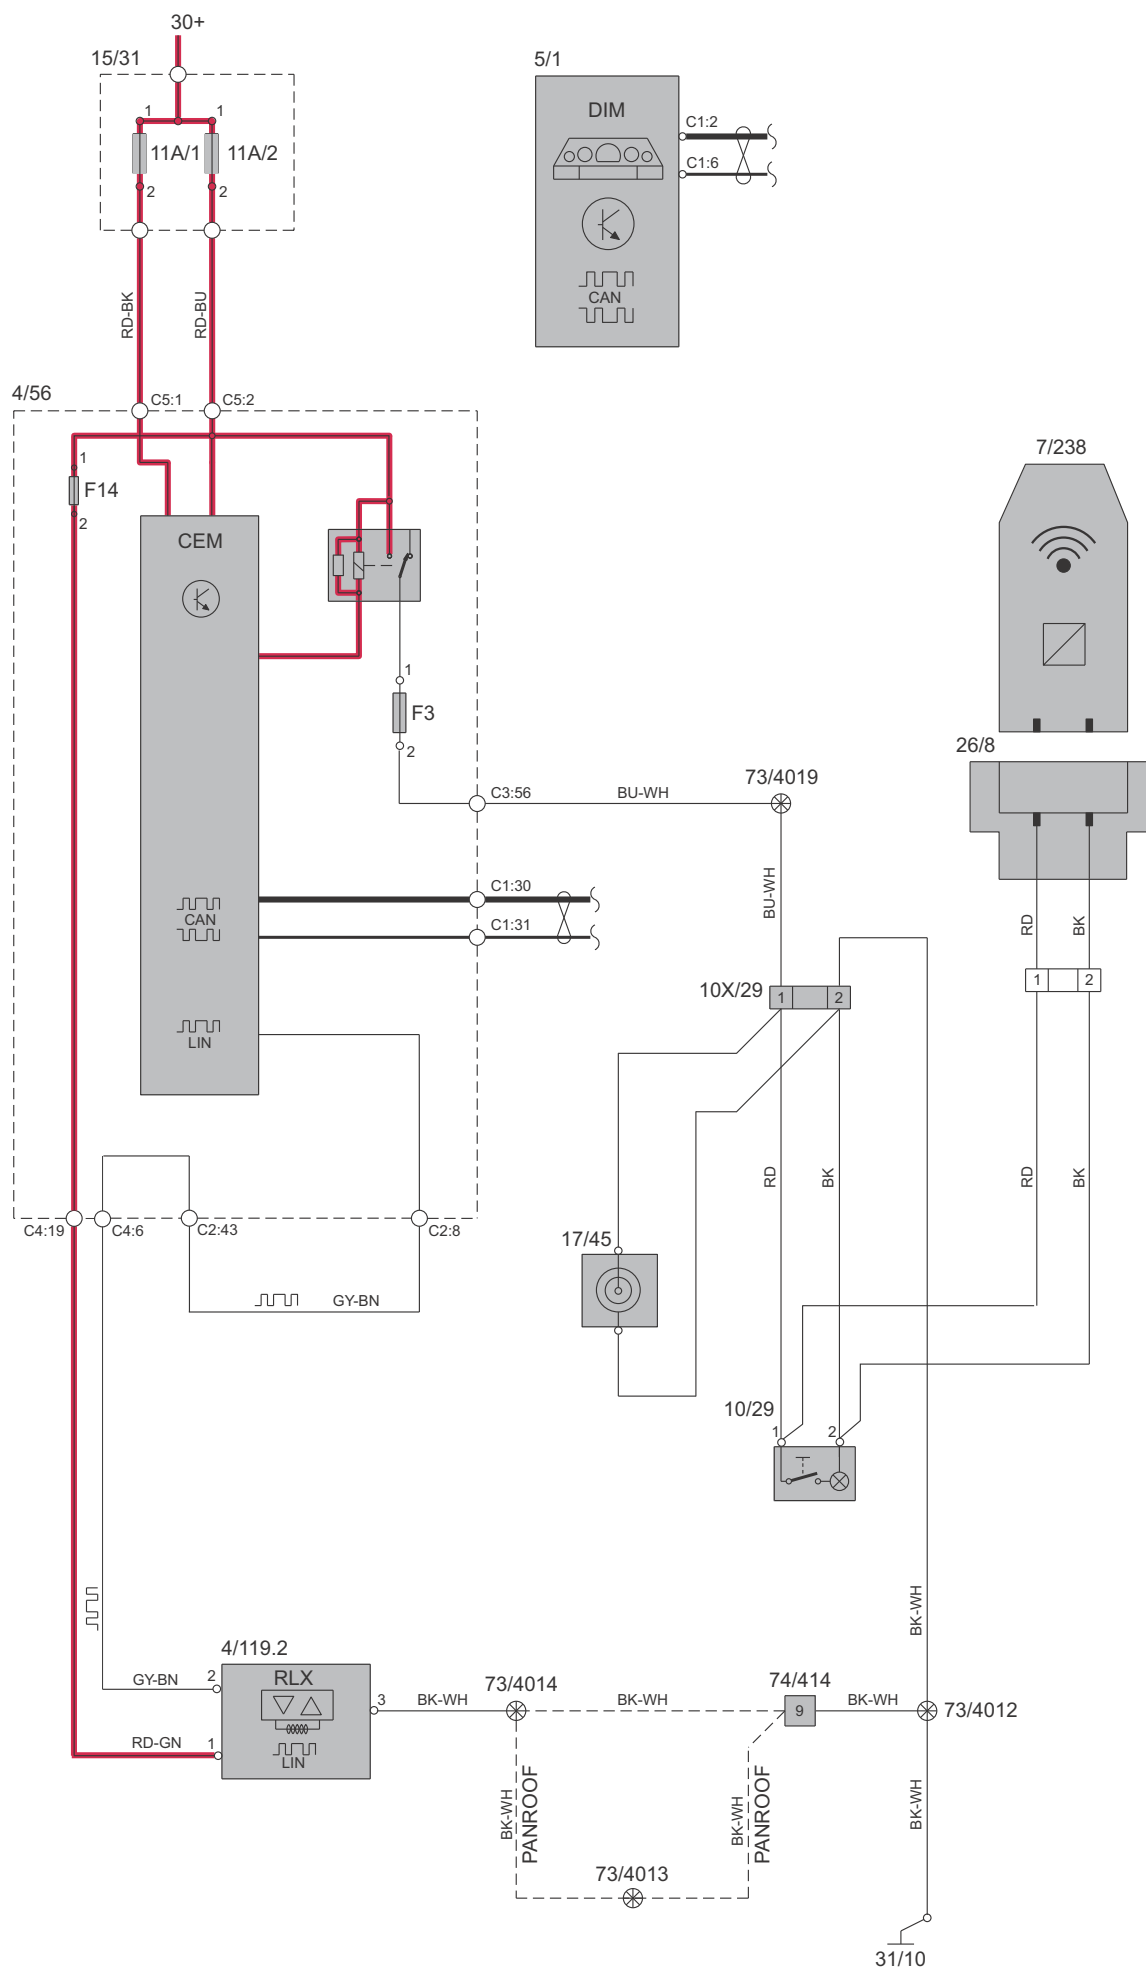


Group 37 Wiring and fuses


Diagnostics system

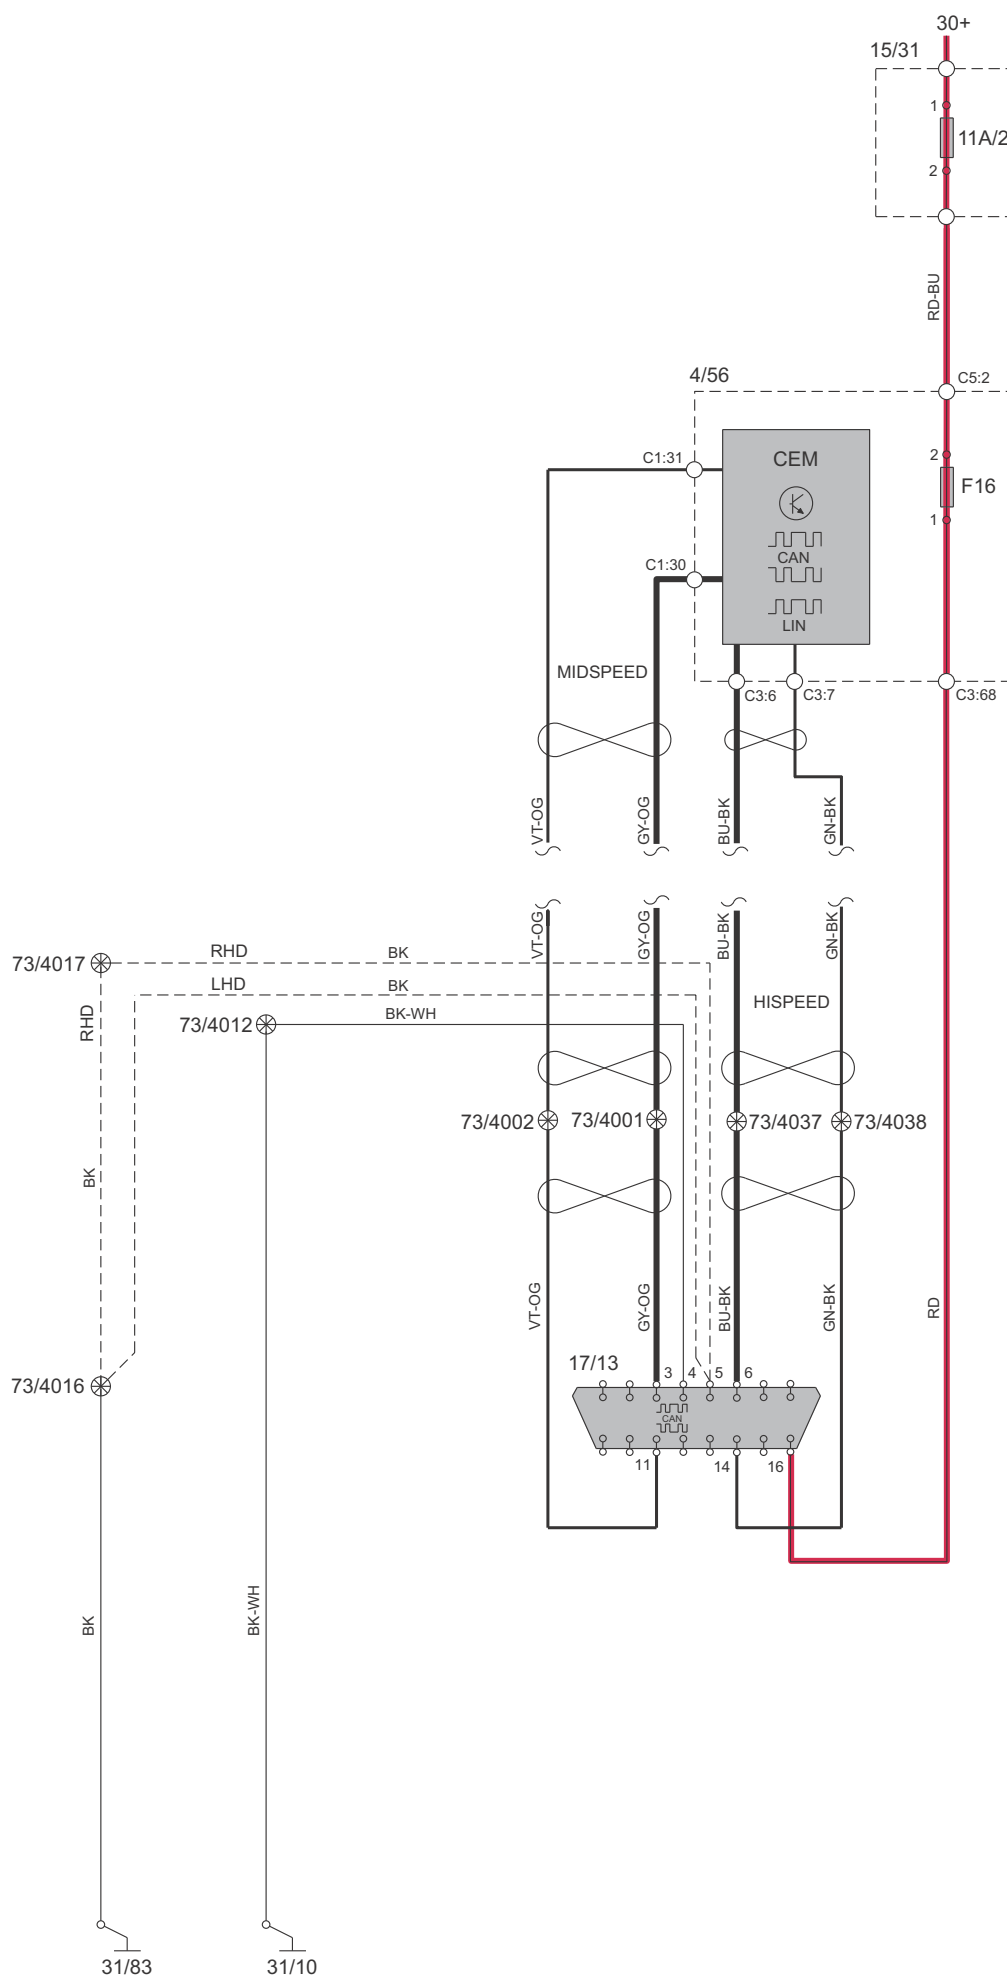

Group 37 Wiring and fuses
Outlet 12V

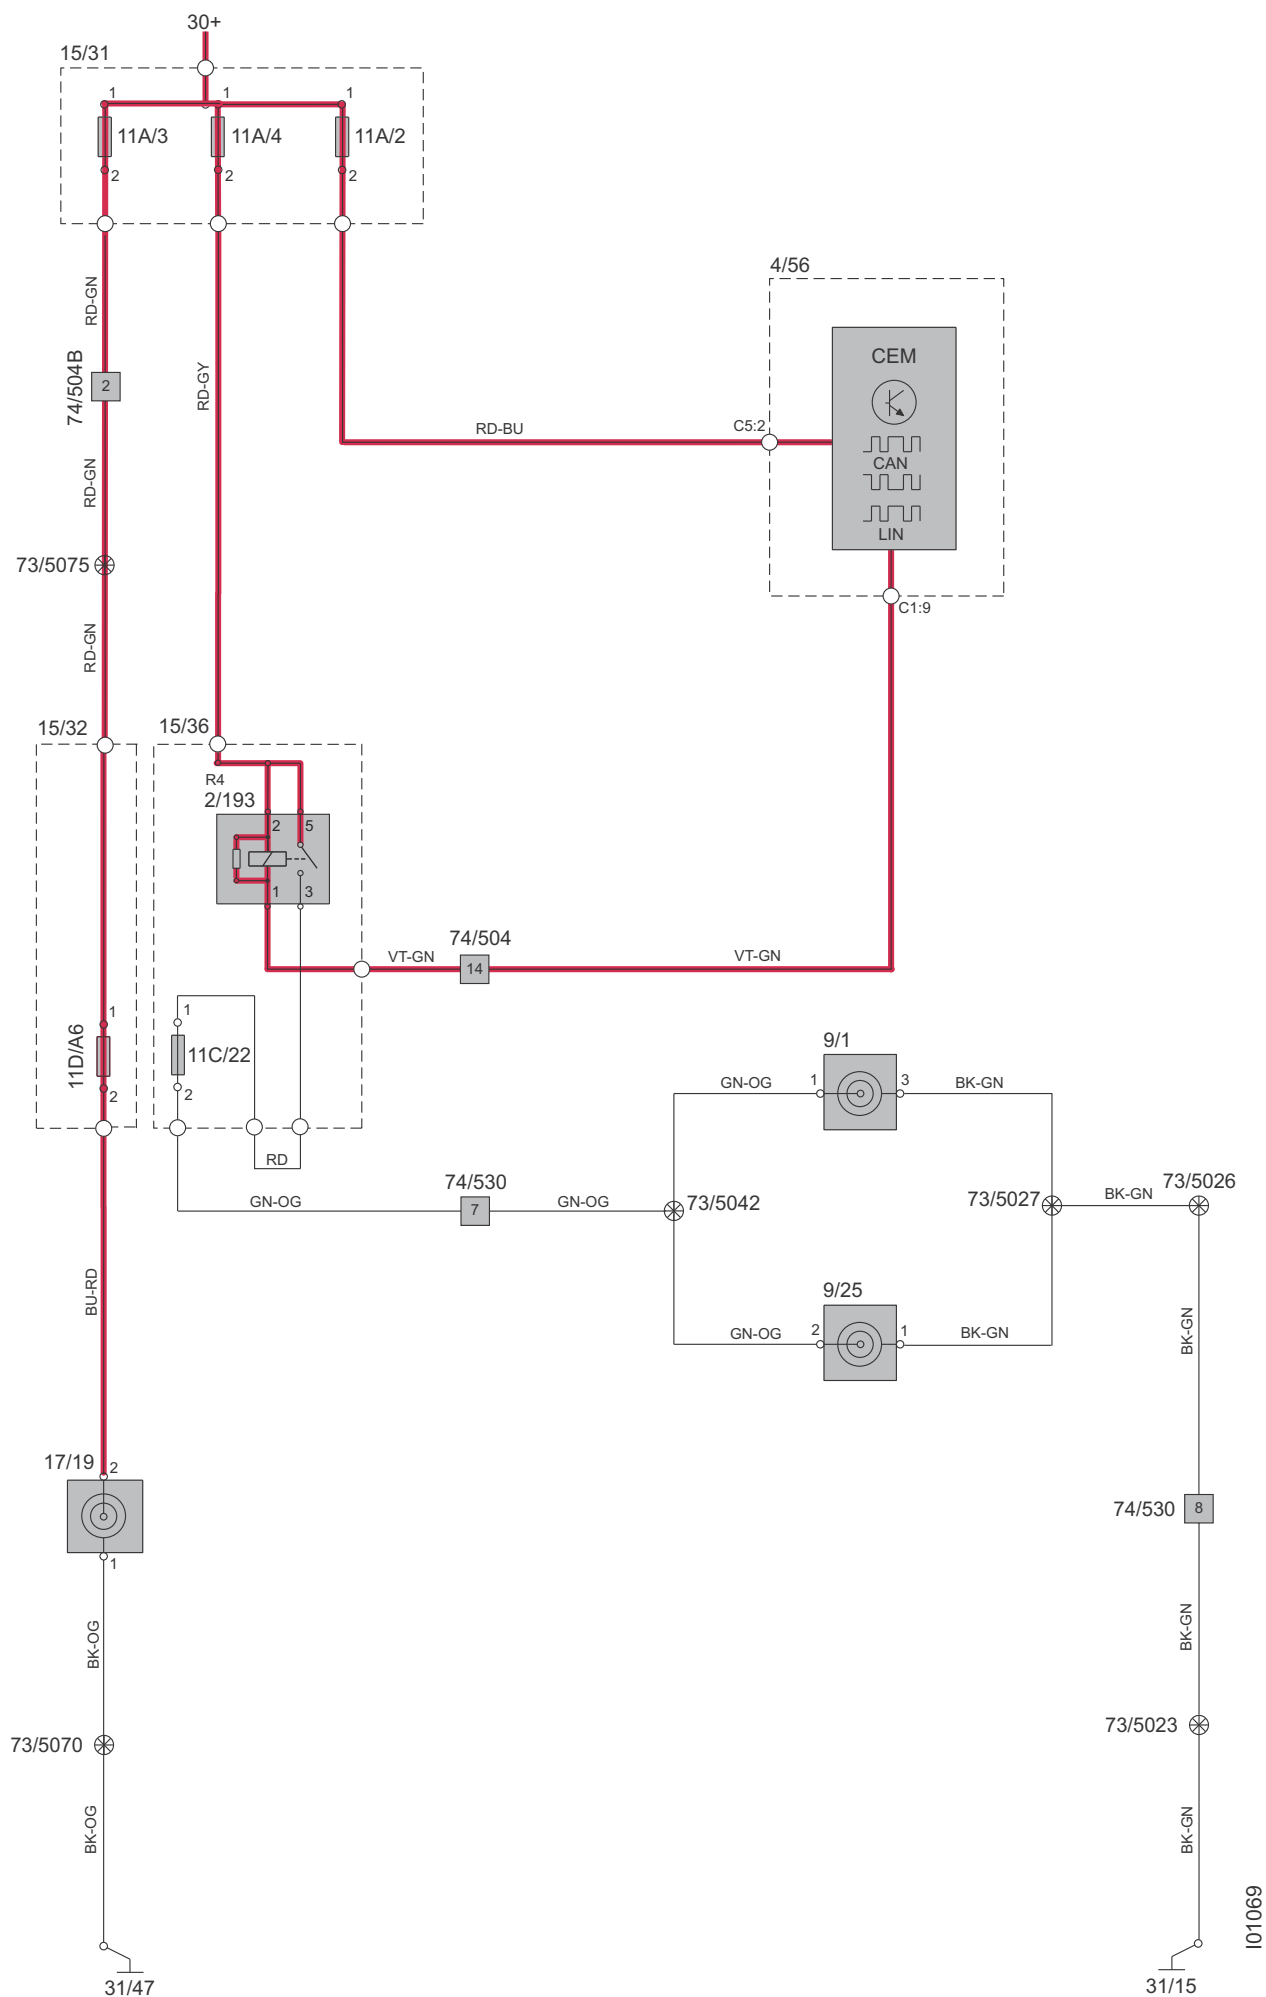


Group 37 Wiring and fuses, Accessories
Outlet 12V, V60

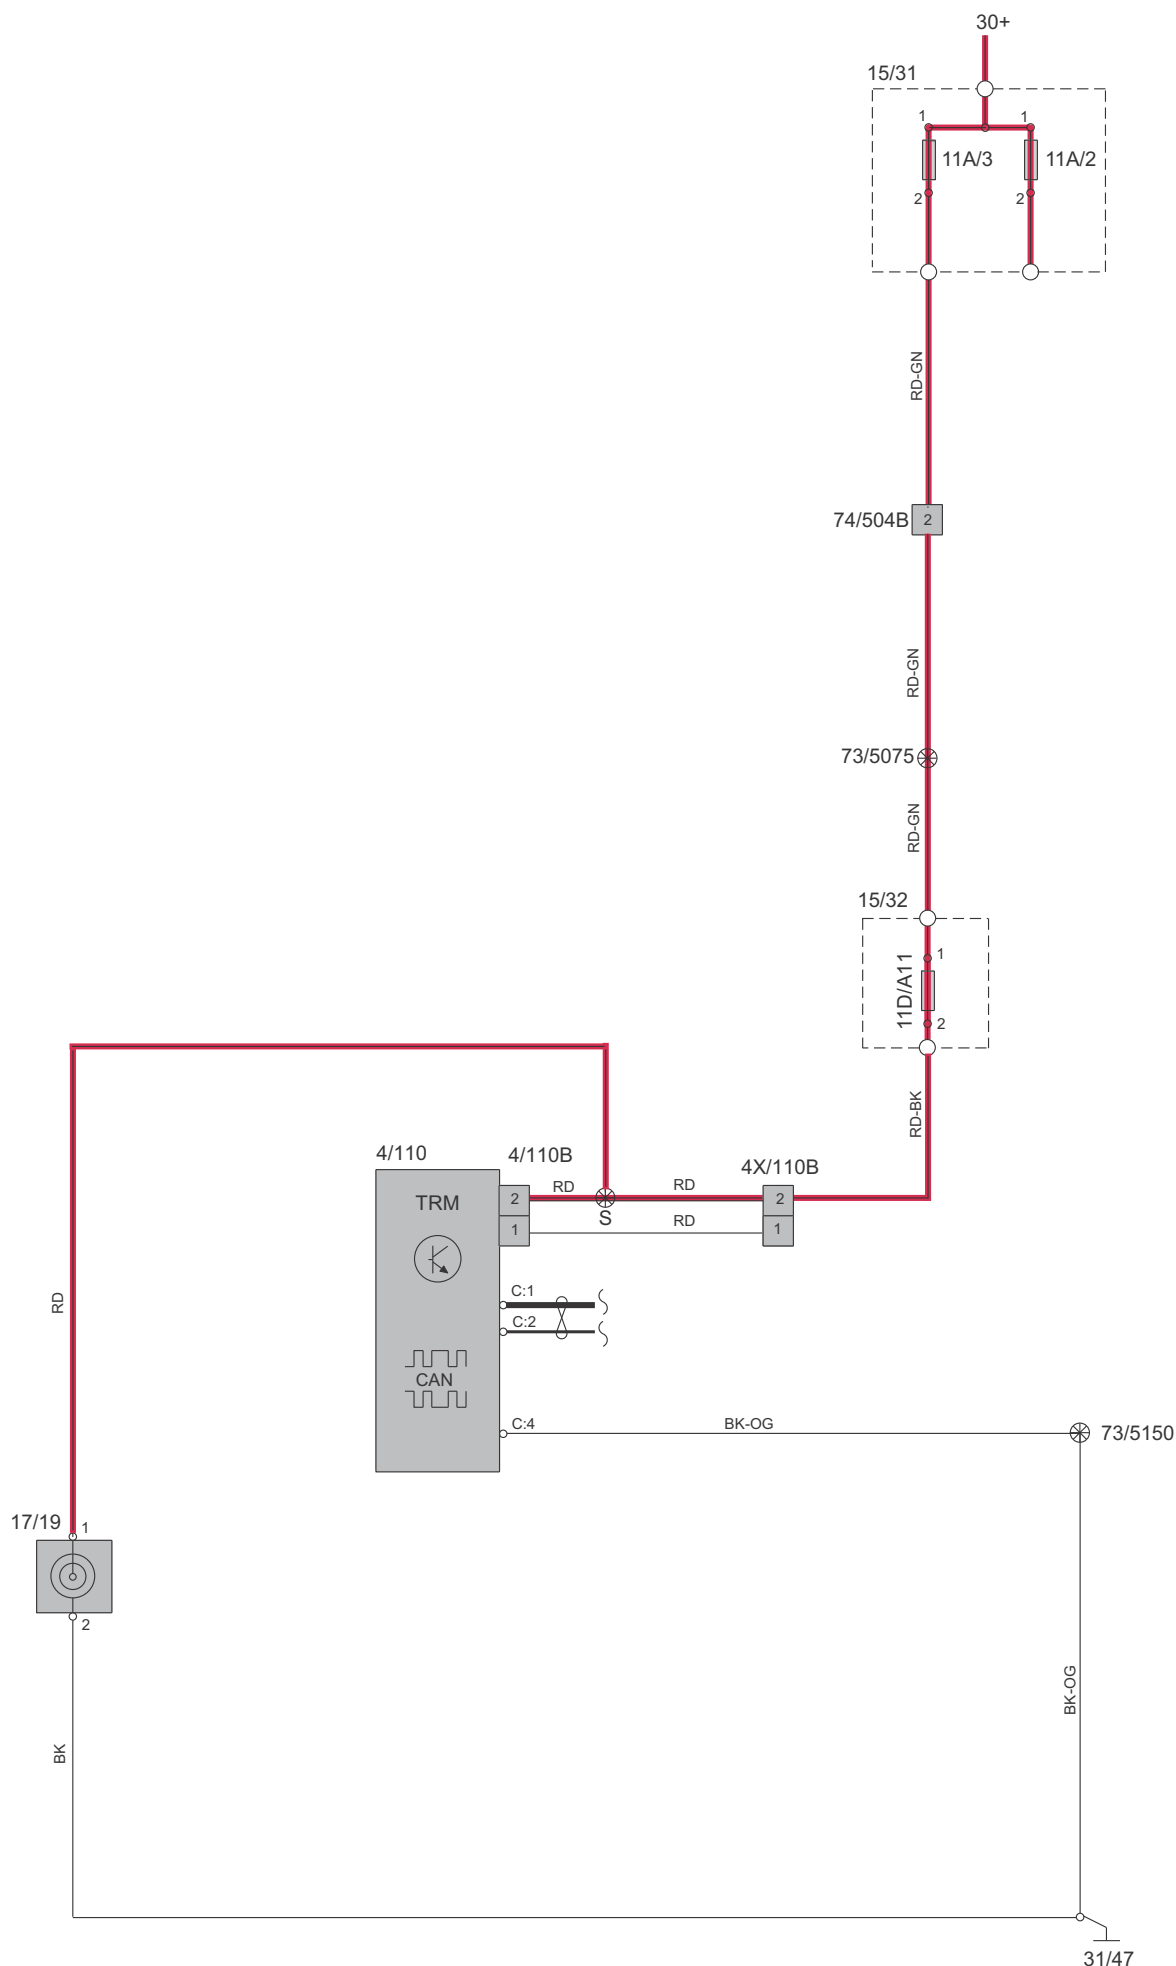

10601917


Group 37 Wiring and fuses, Accessories

12 V outlet, V60

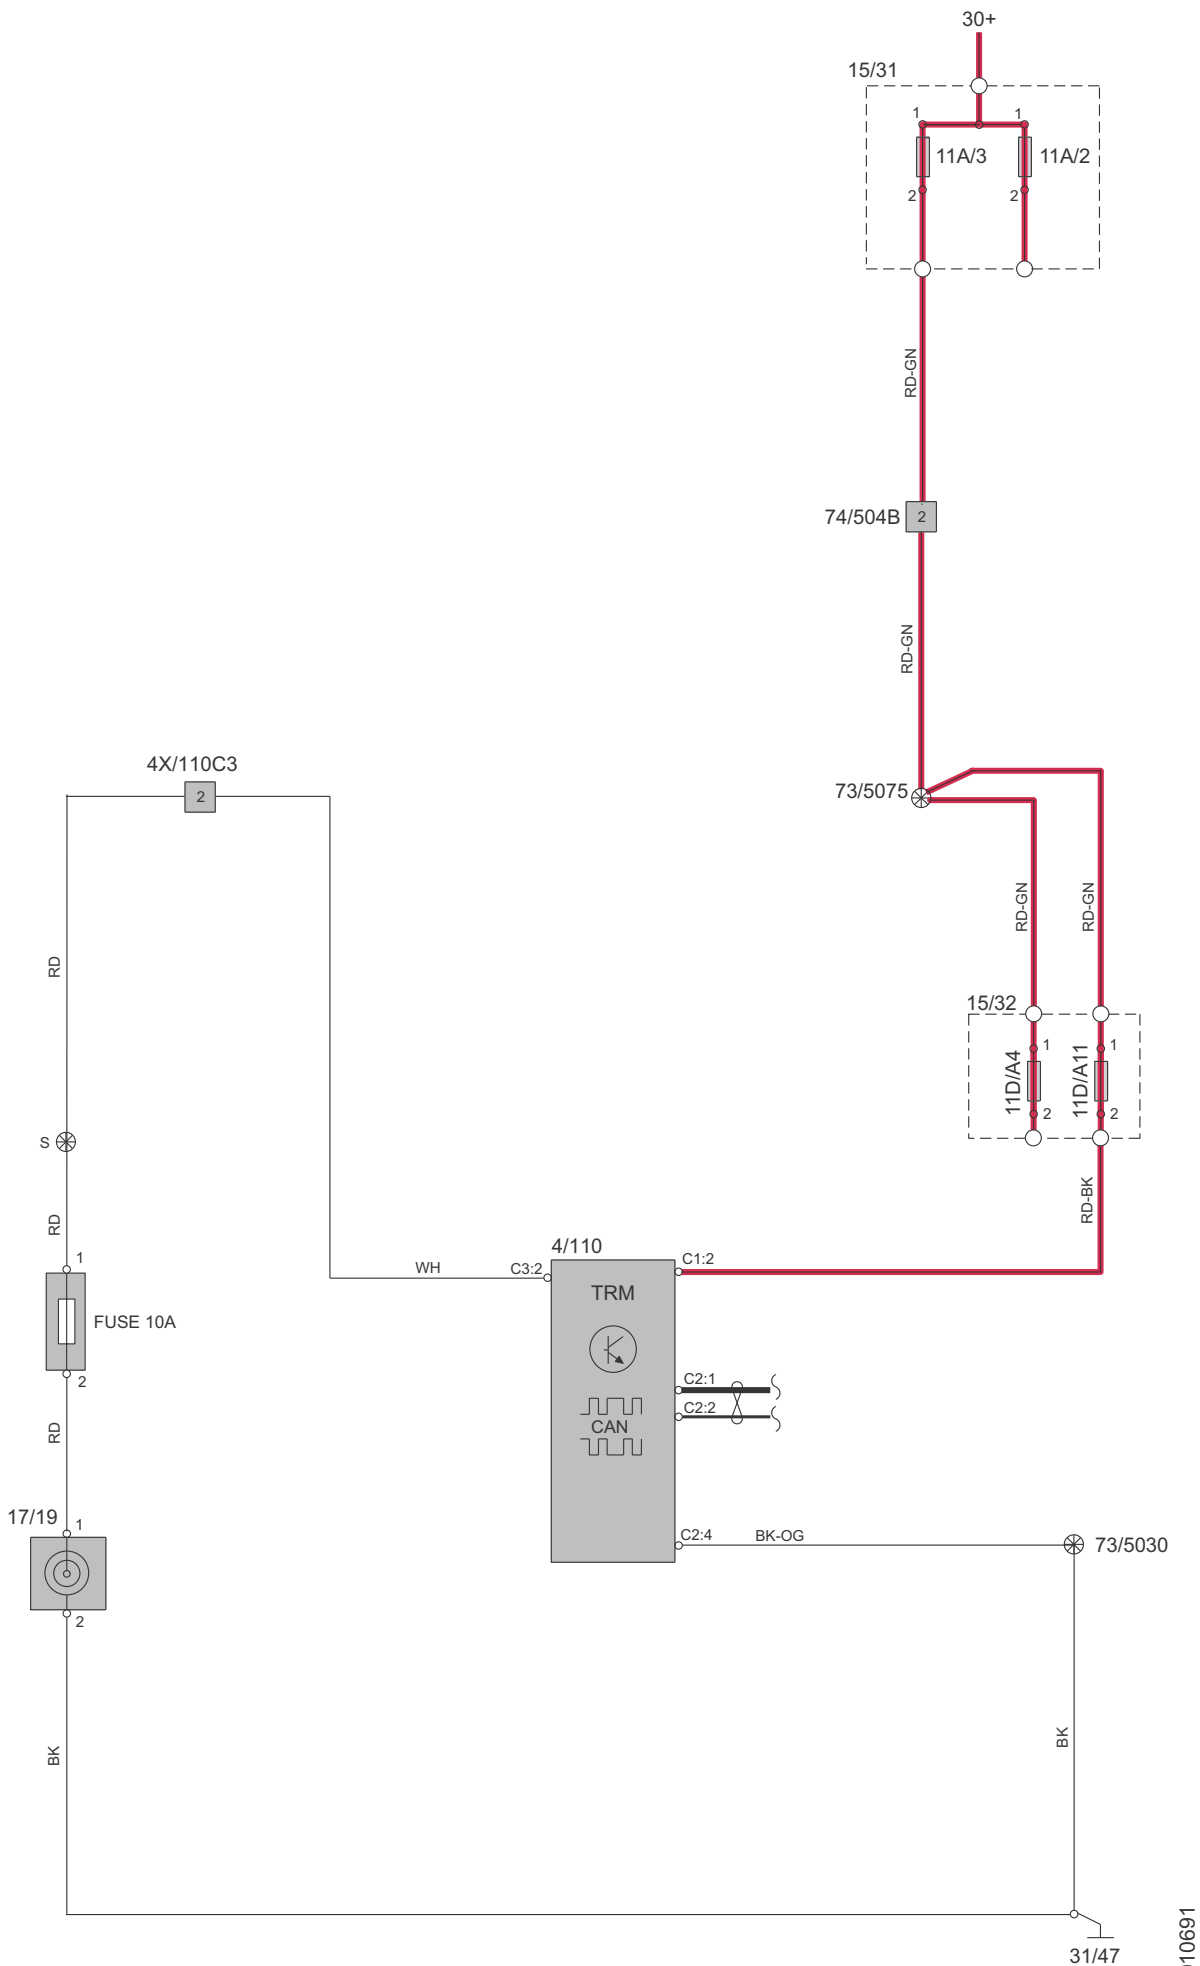


Group 37 Wiring and fuses, Accessories

Cable harness towbar/tow hitch 13-pin S60

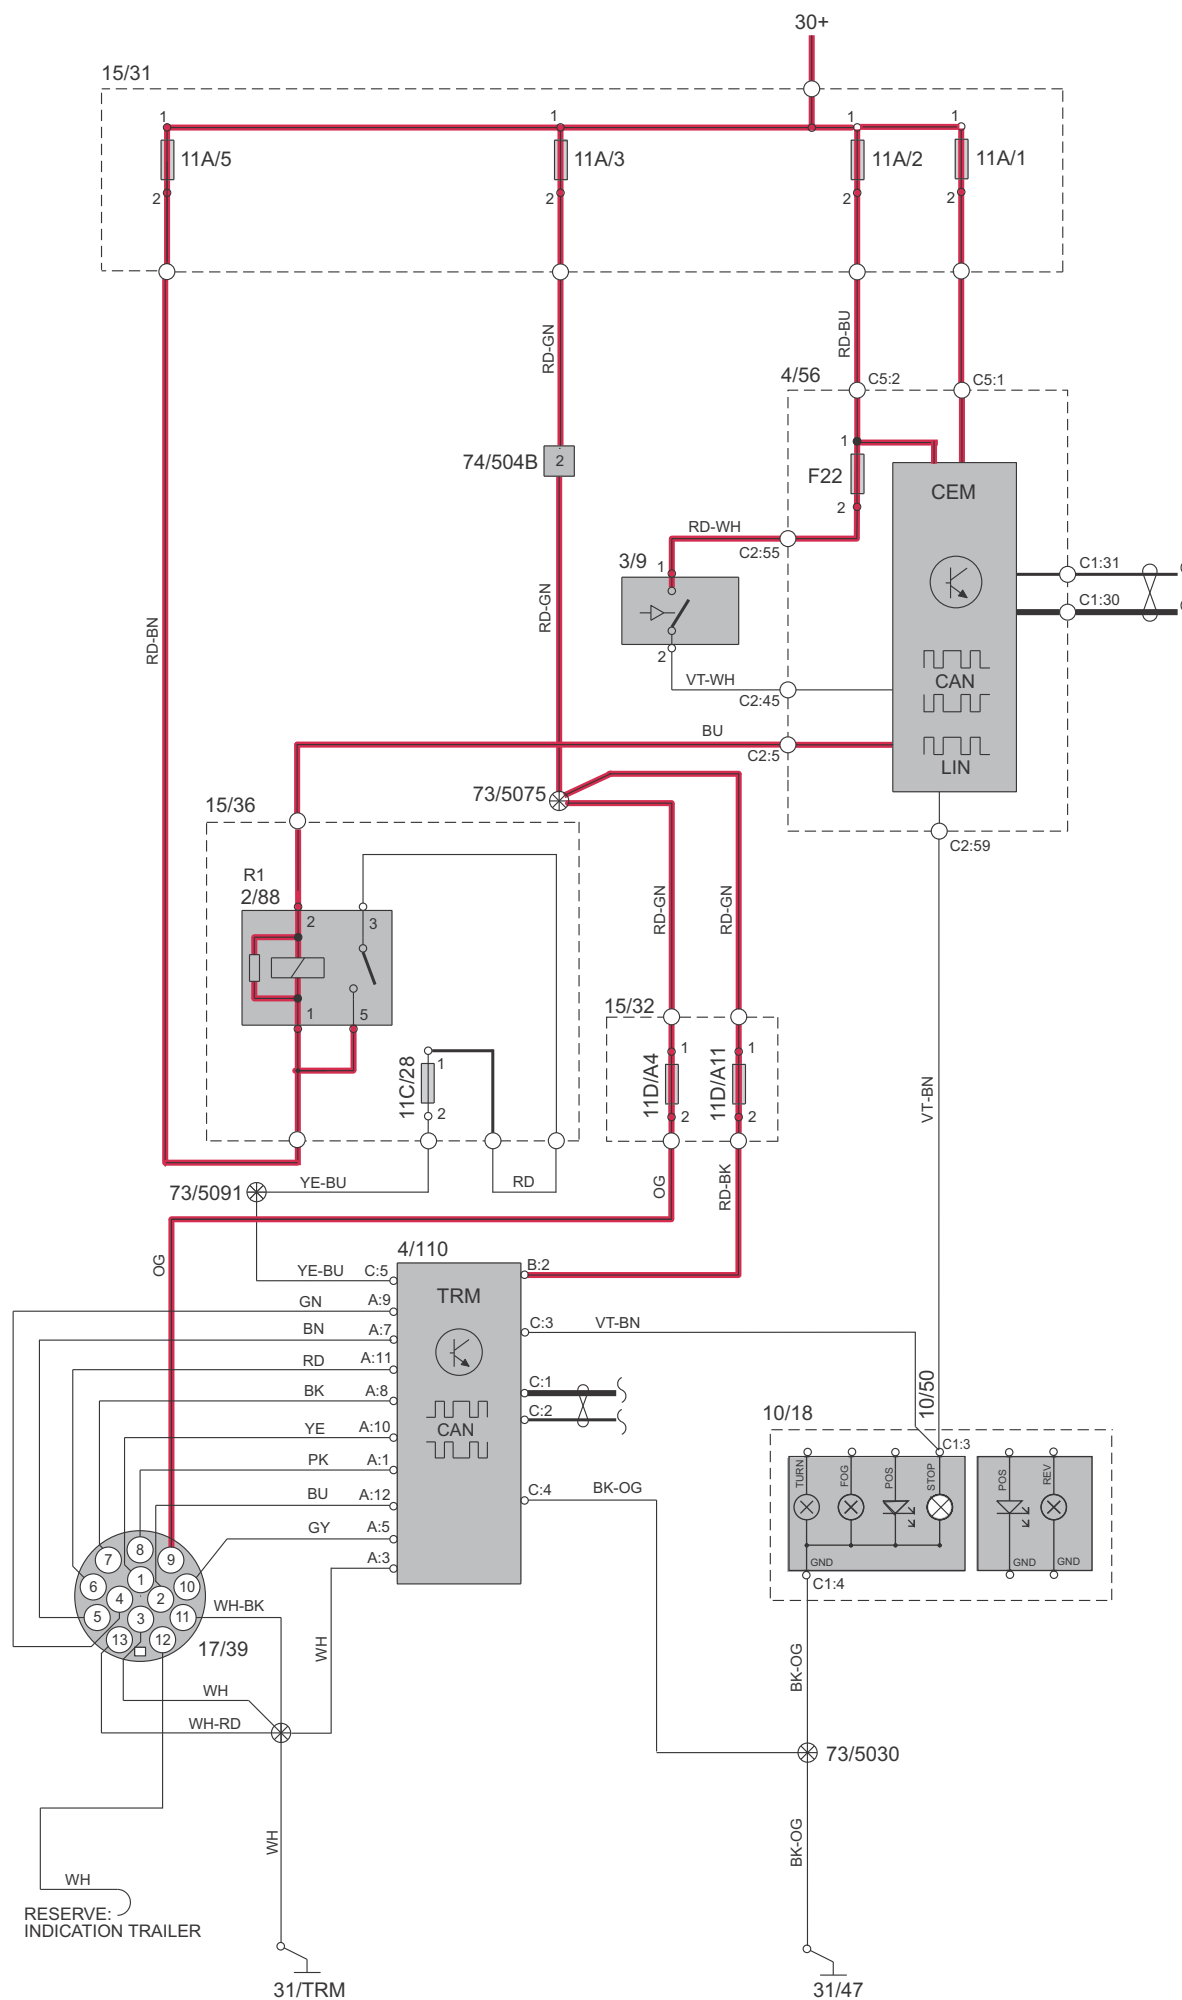


I0173961

Group 37 Wiring and fuses, Accessories **Cable harness towbar/tow hitch 13-pin V60**

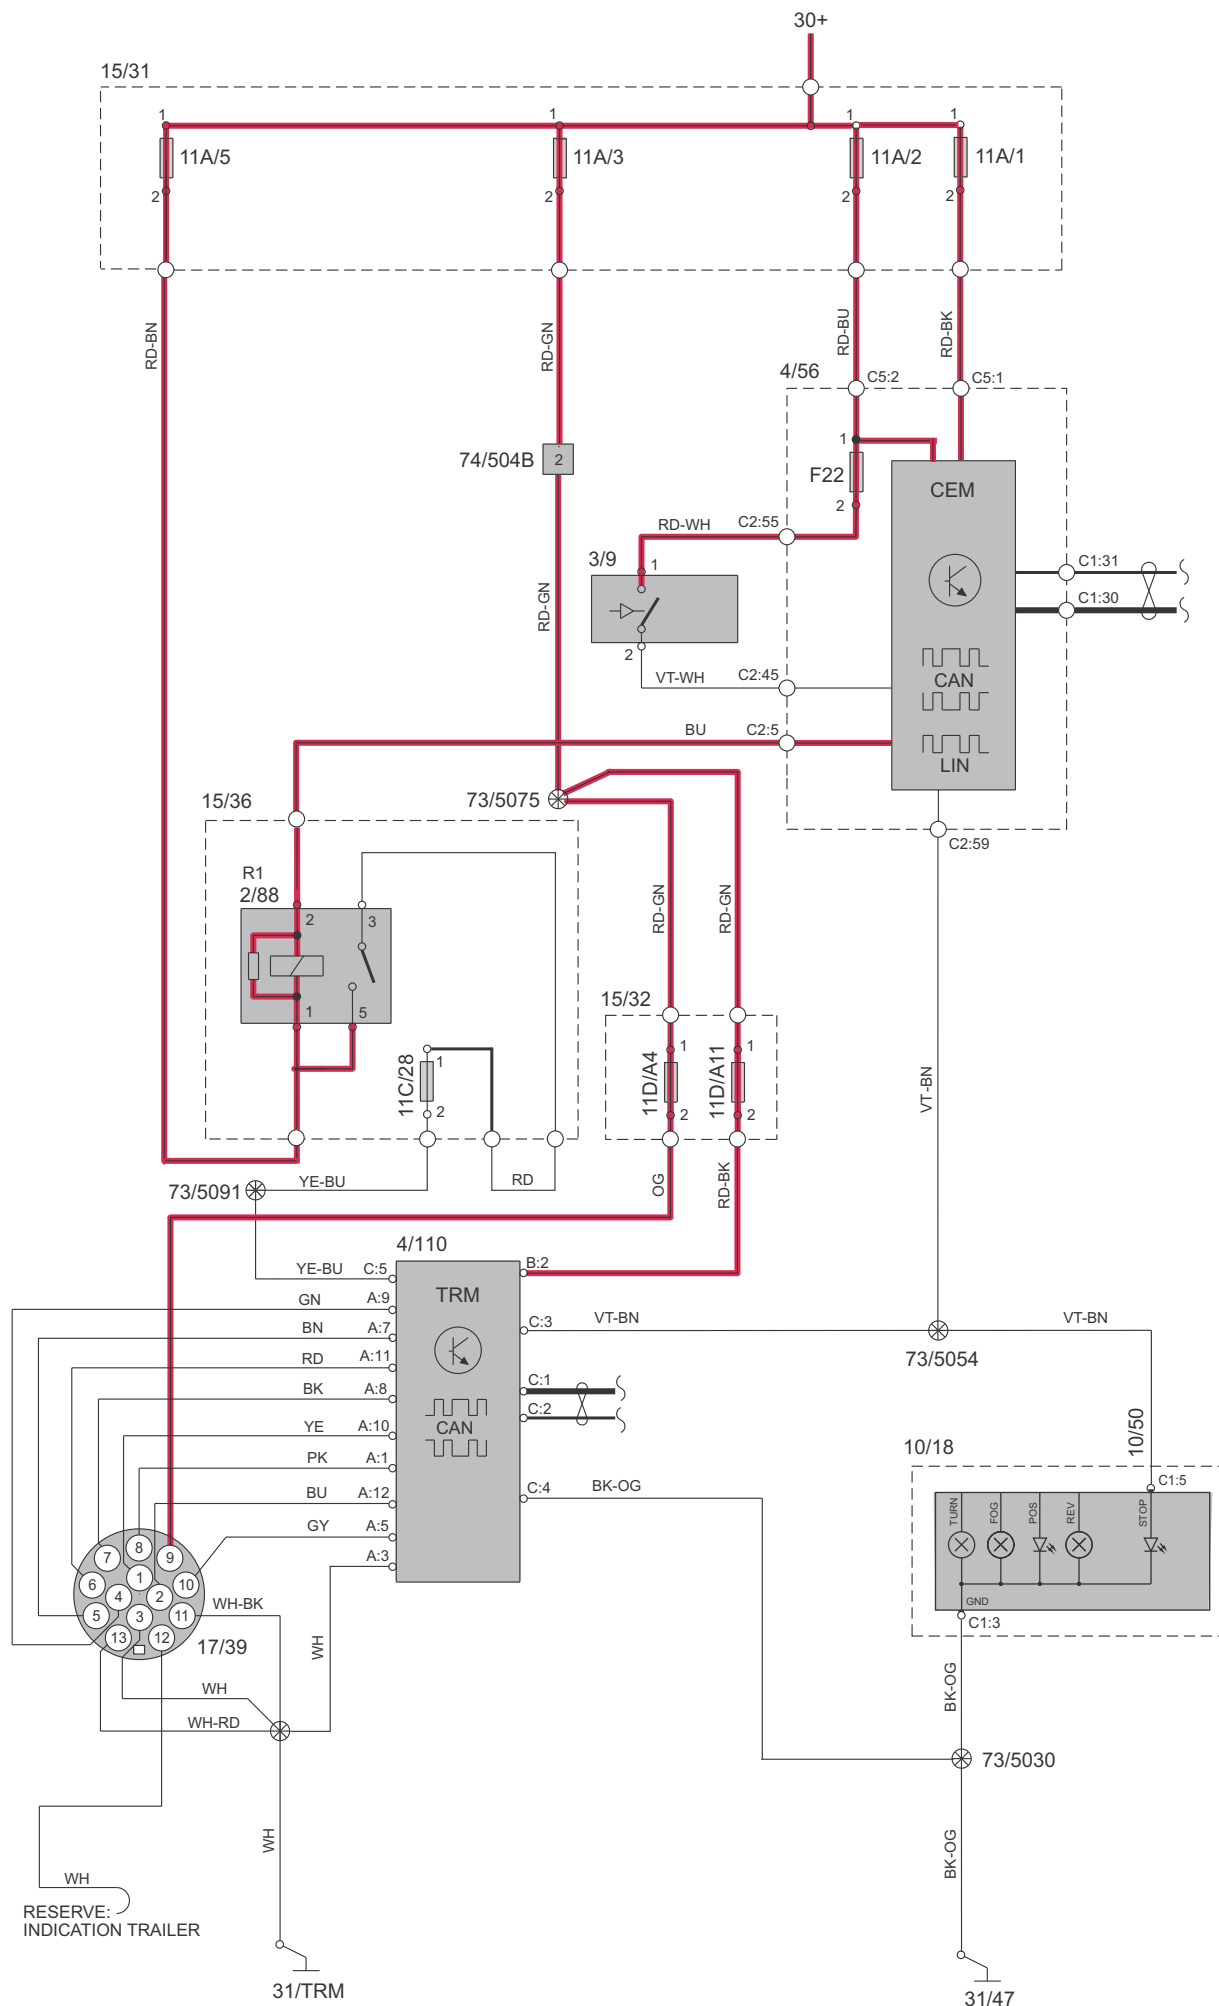


Group 38 Instruments
Seat belt reminder

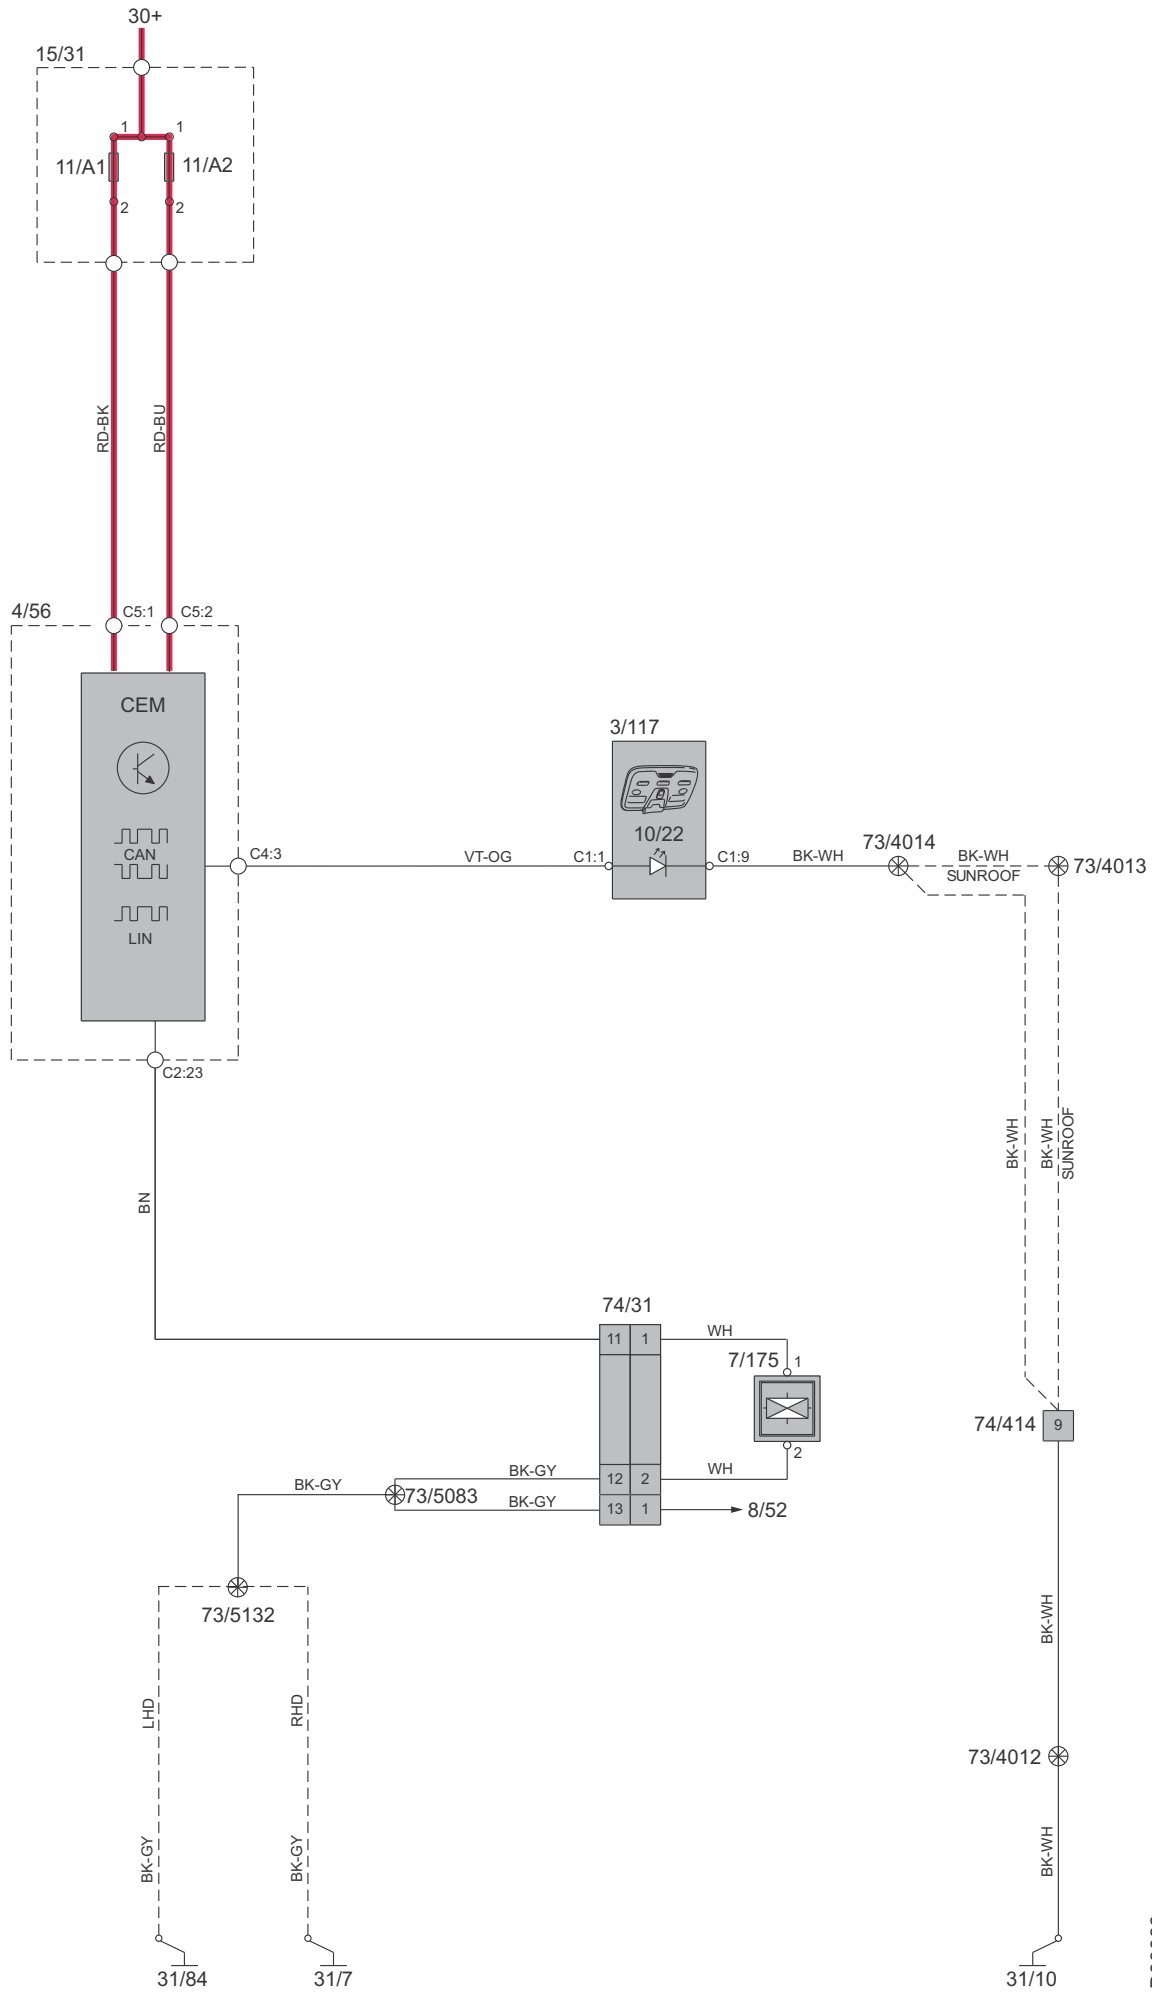


D00086


Group 38 Instruments
Driver information module

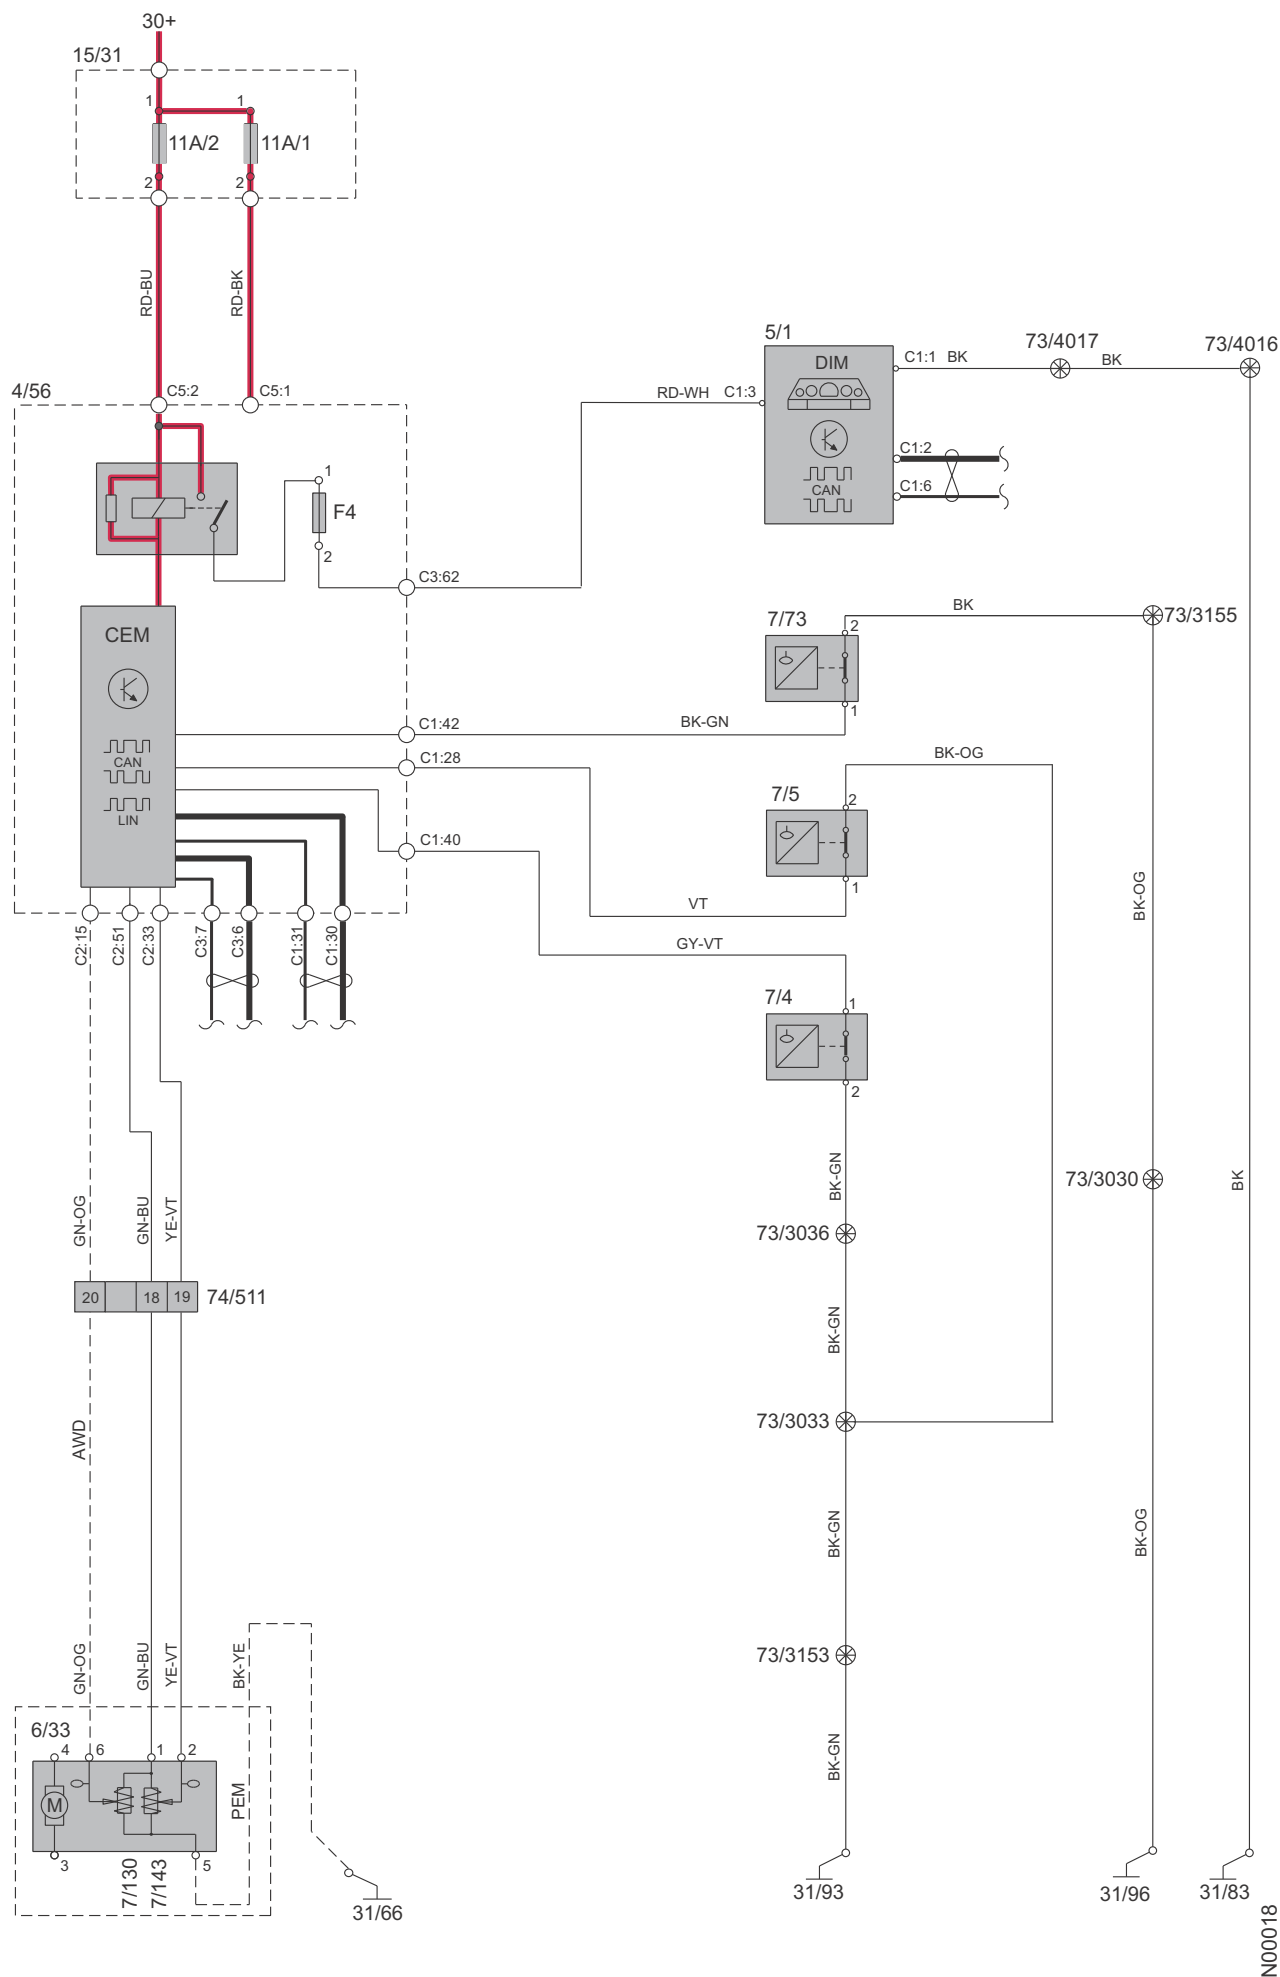


Group 39 Other
Audio Premium 1:3

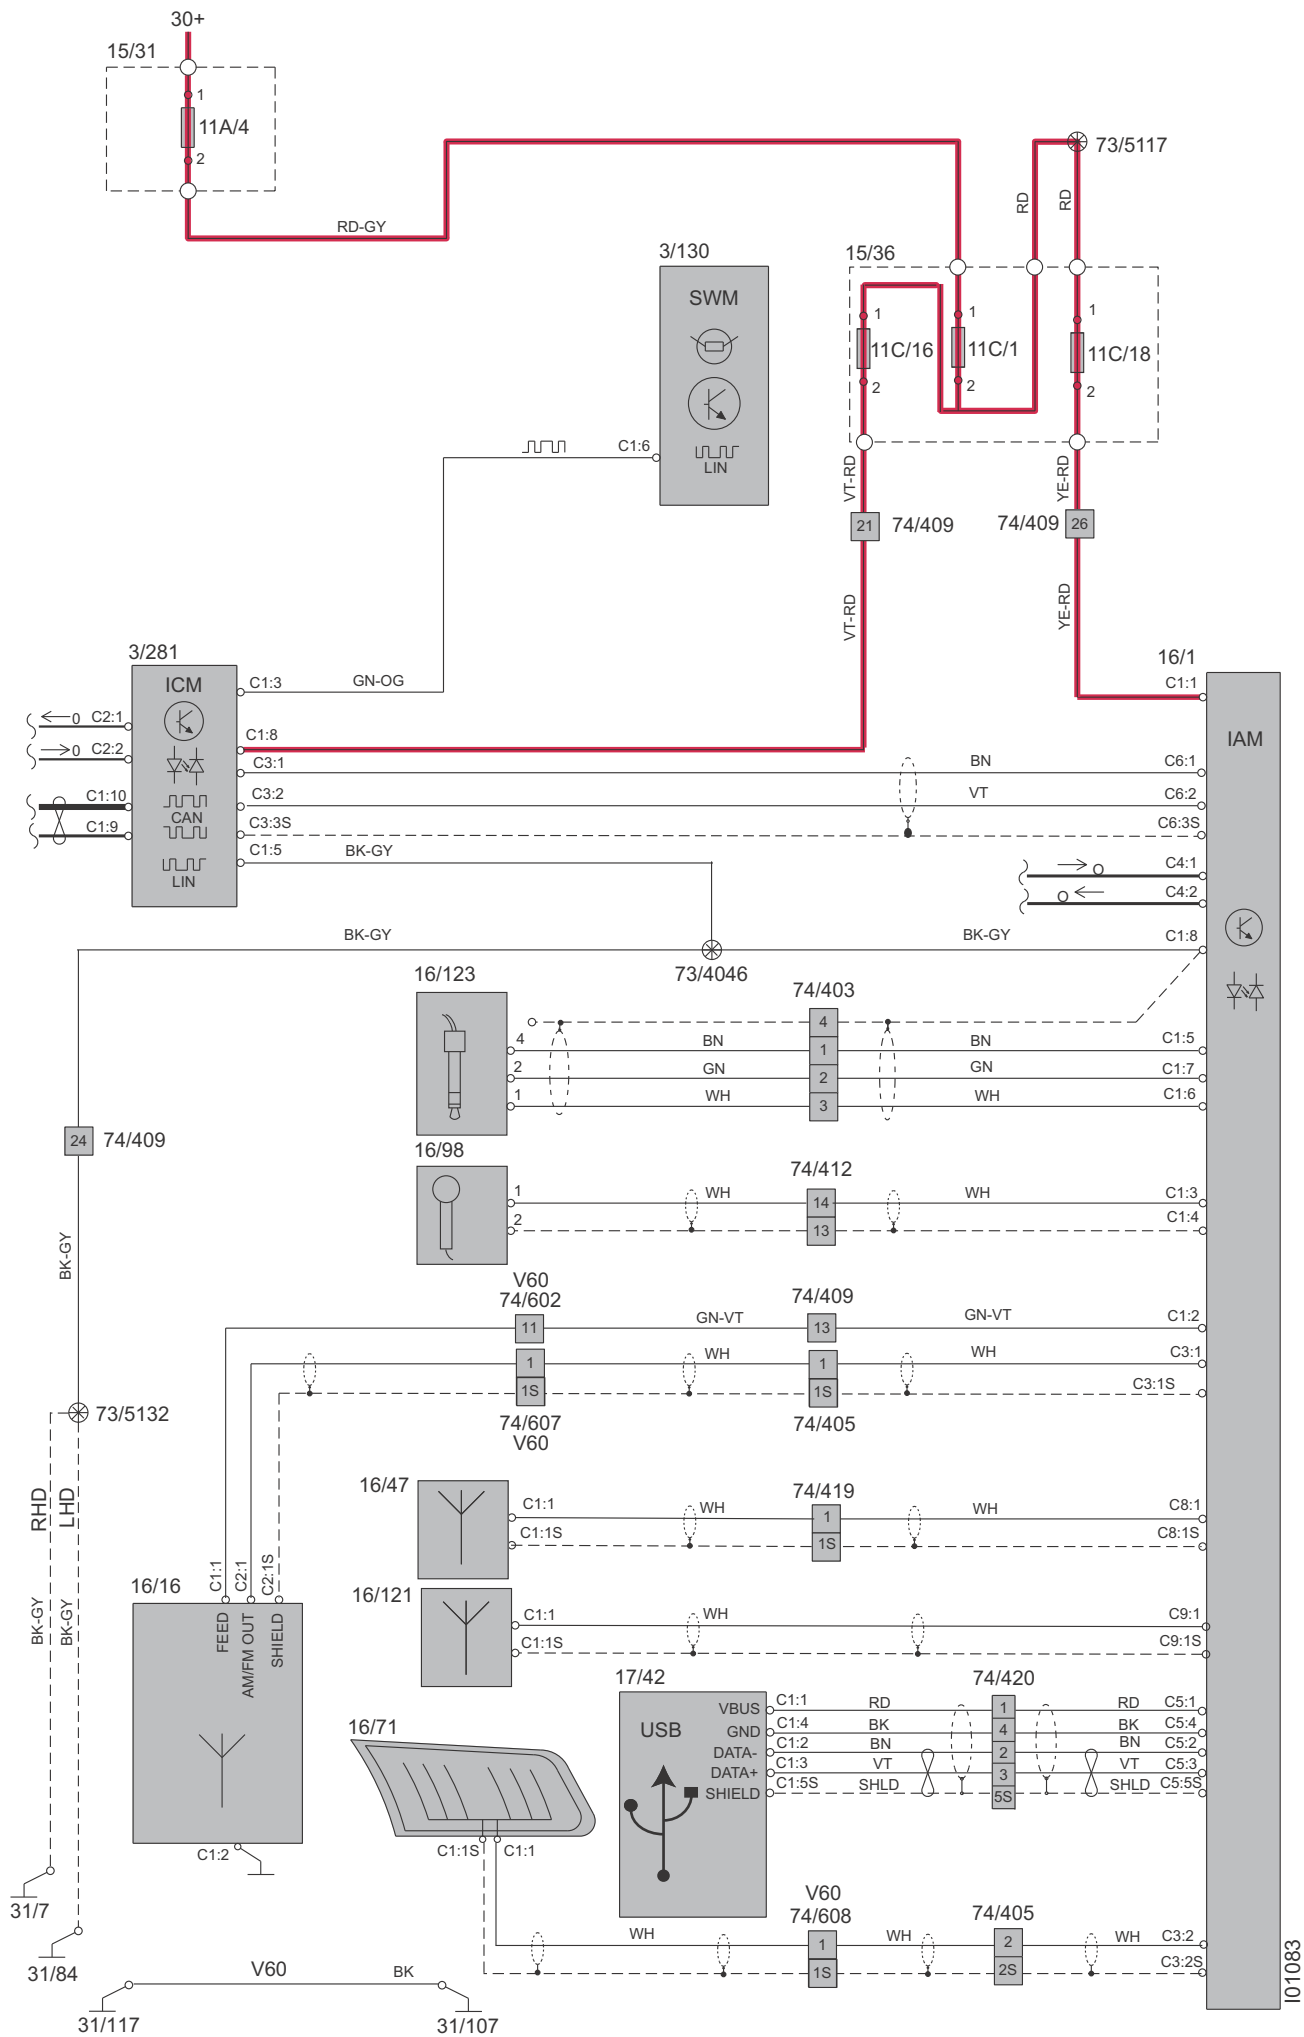

Group 39 Other
Audio Premium 2:3

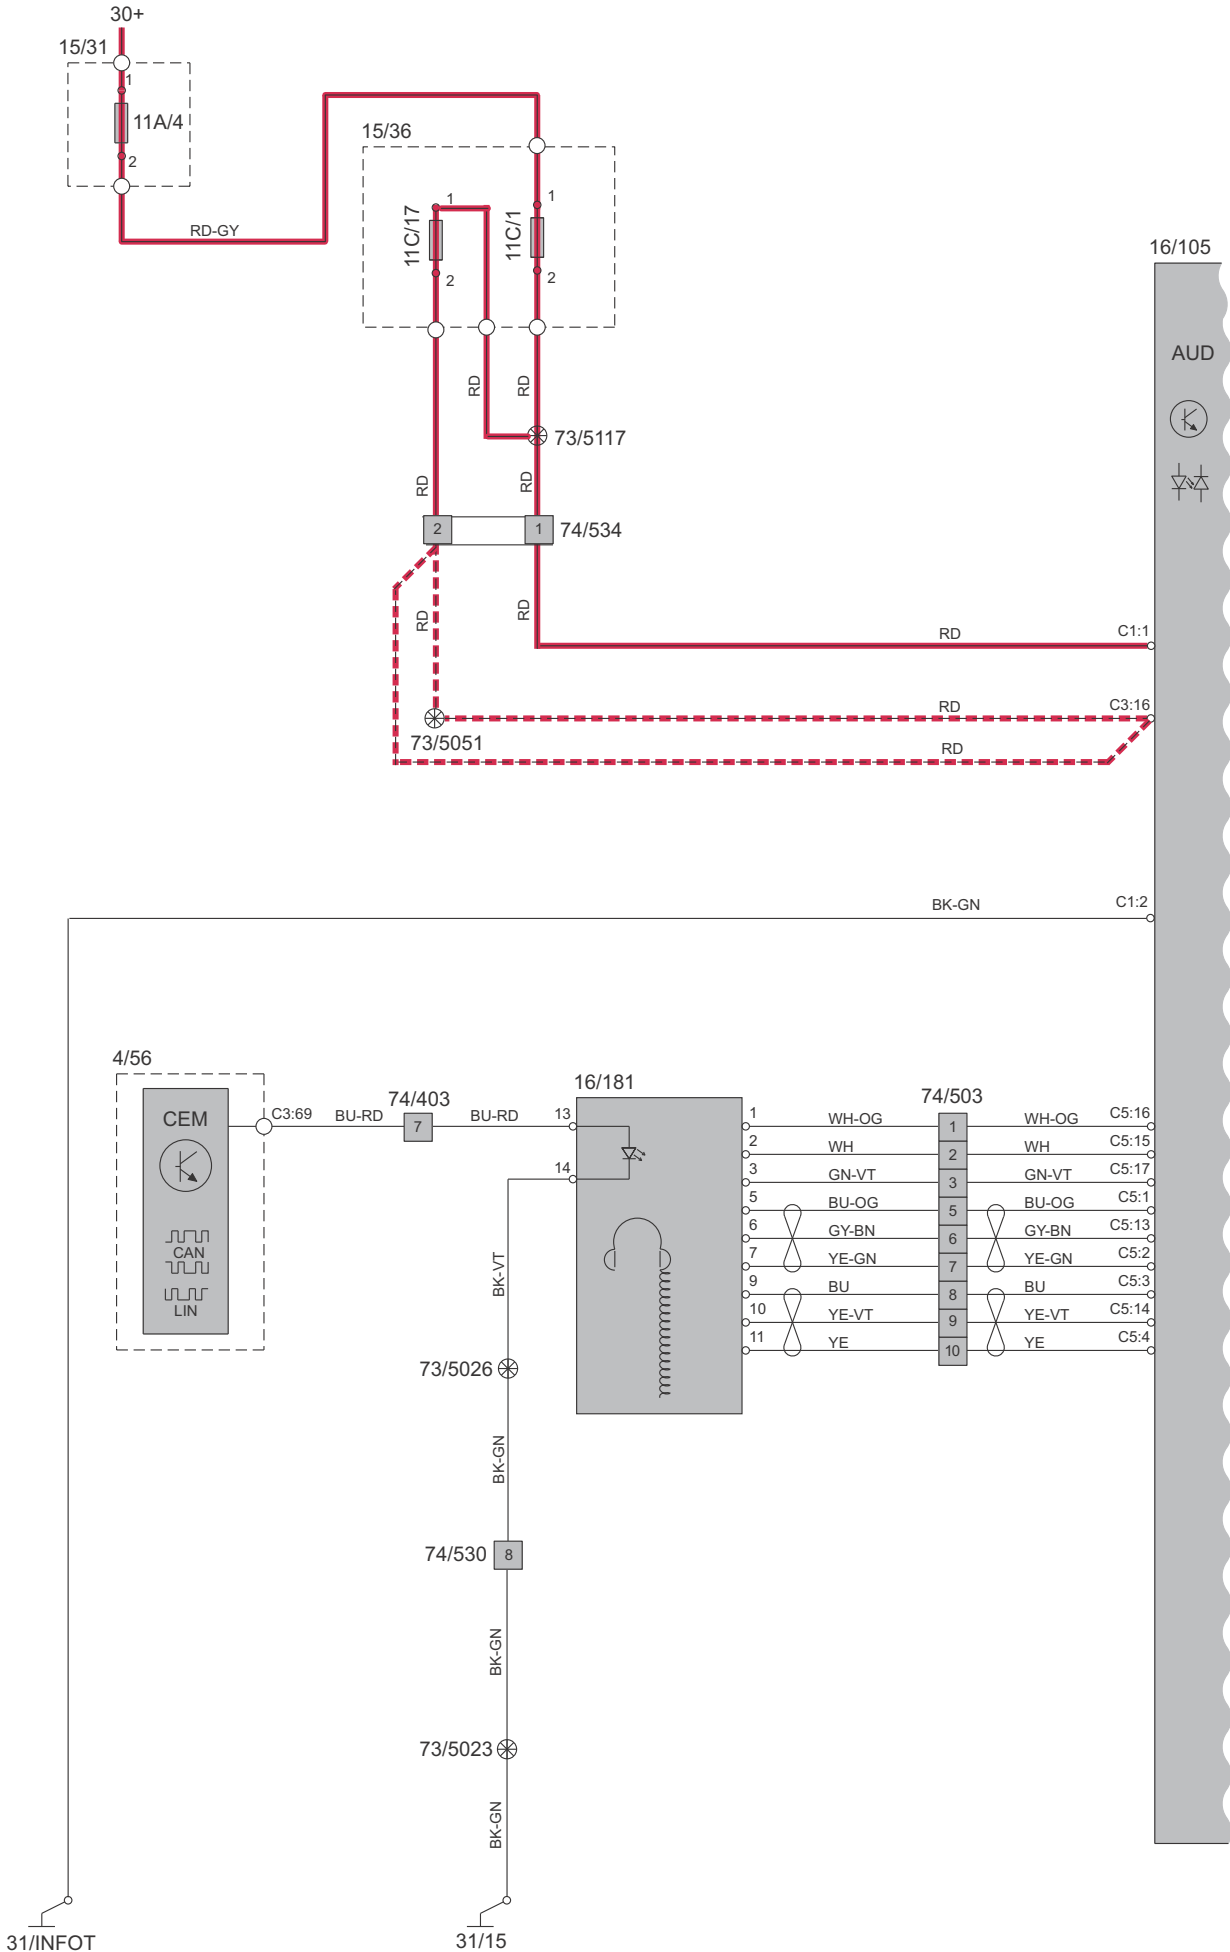

Group 39 Other Audio Premium 3:3

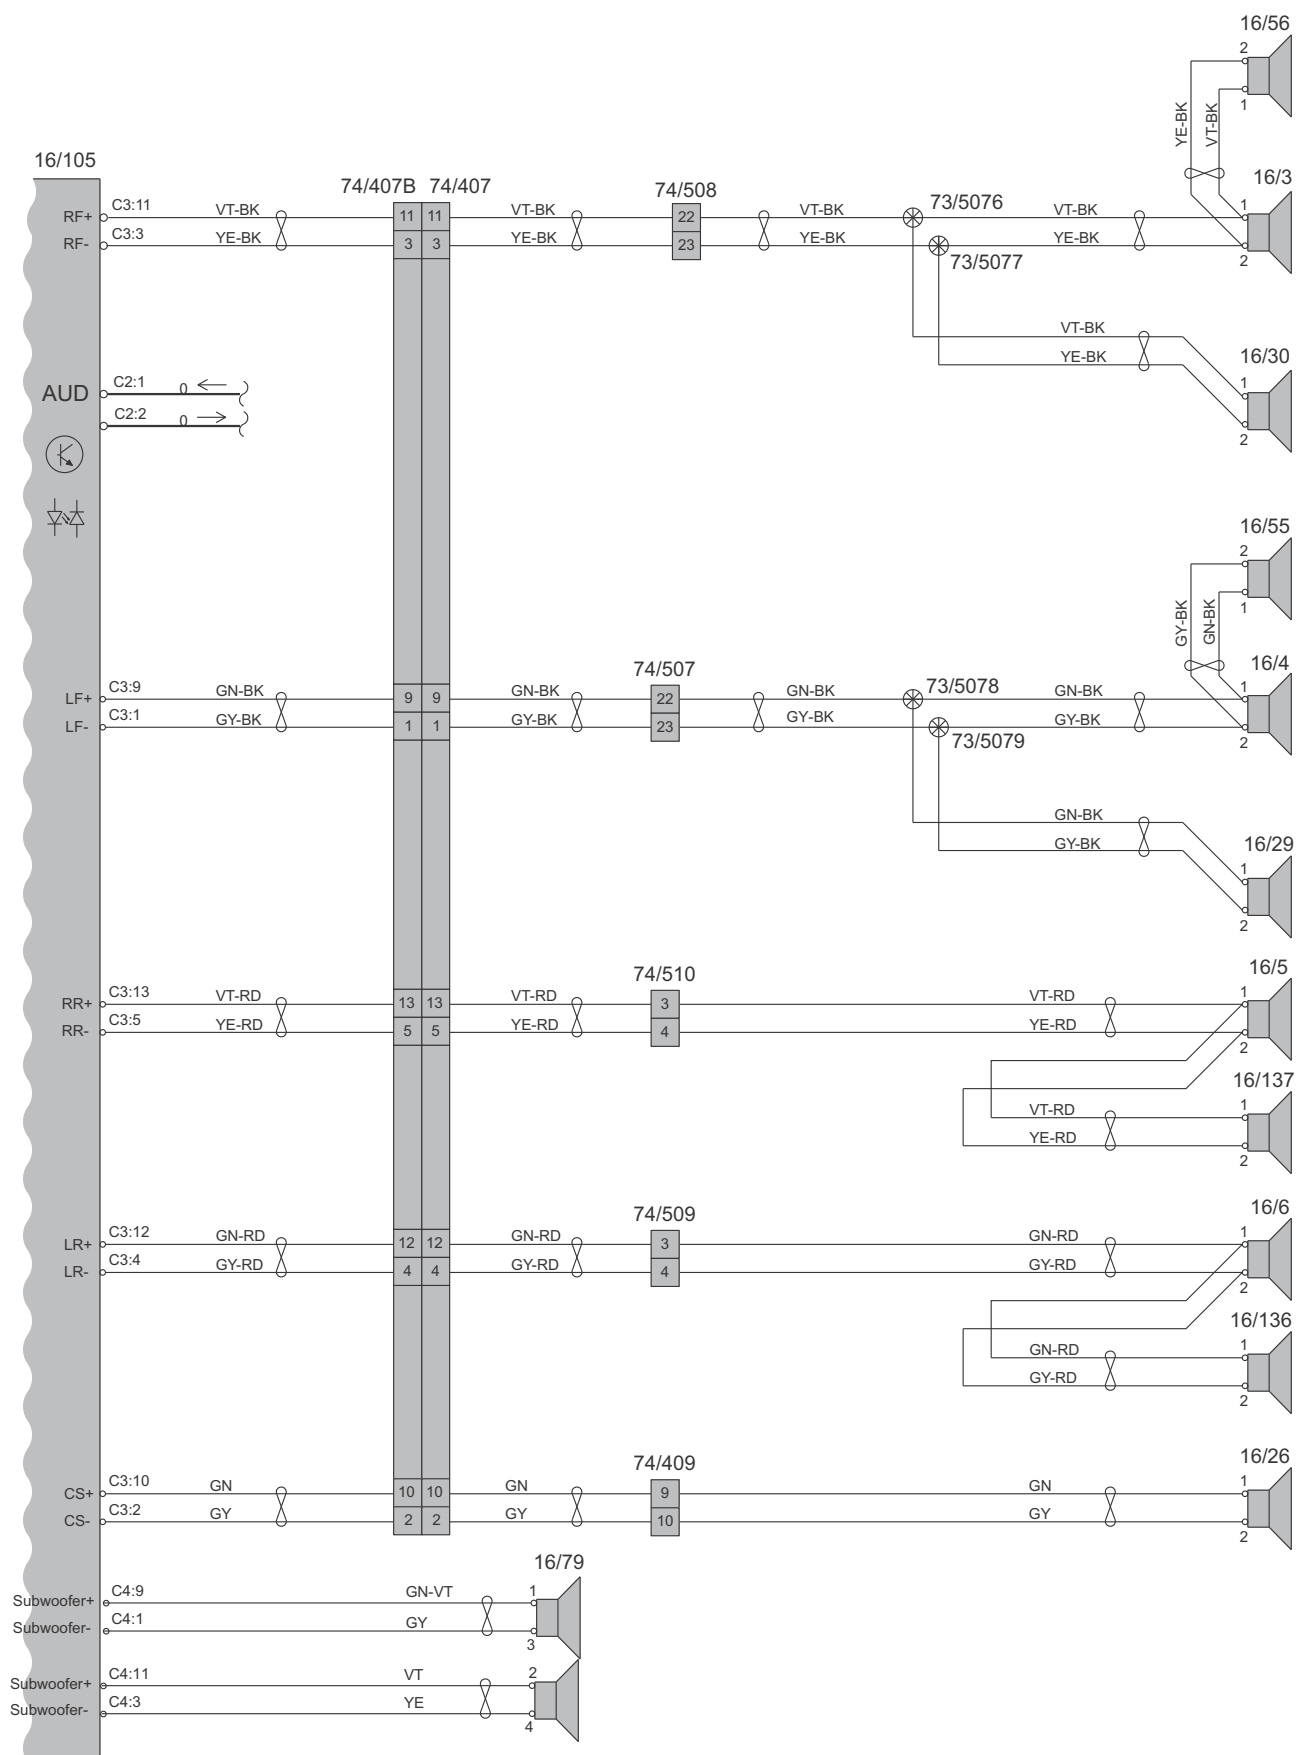


101082

Group 39 Other
Audio 1:2




Group 39 Other
Audio 2:2

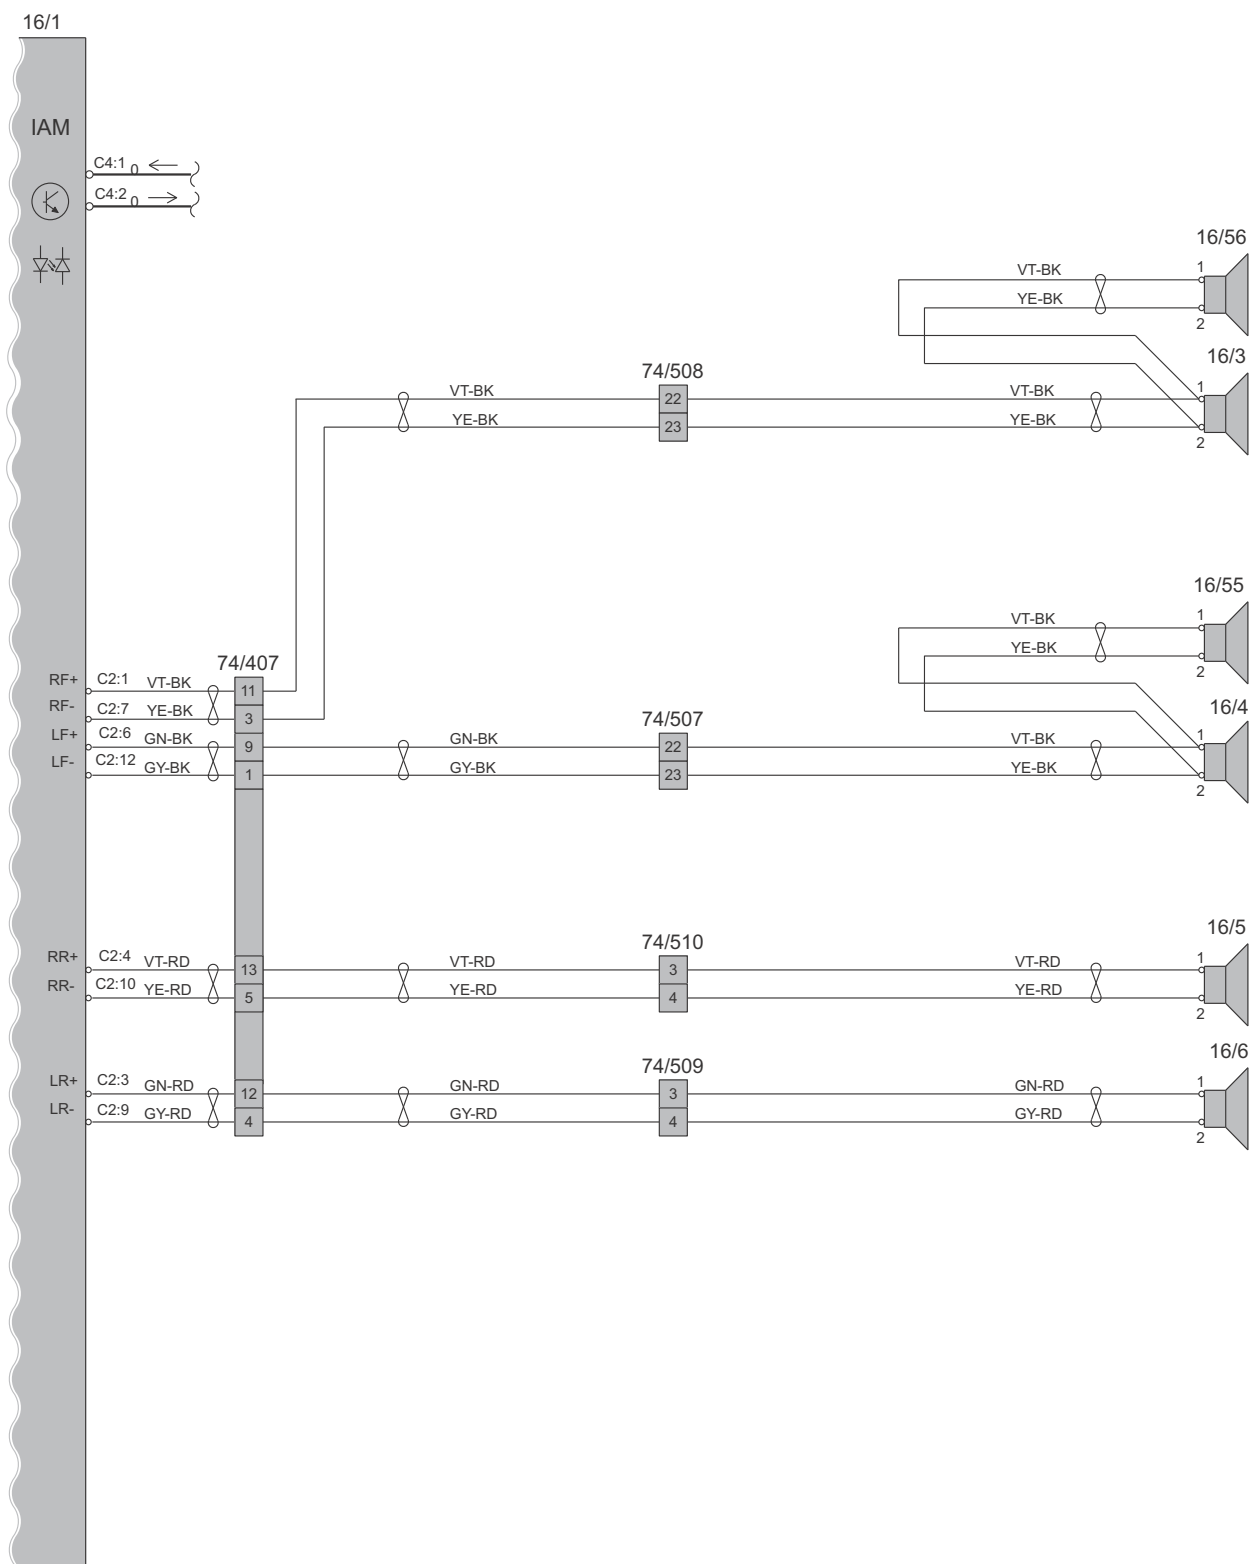


Group 39 Other

Cellular phone 1:2

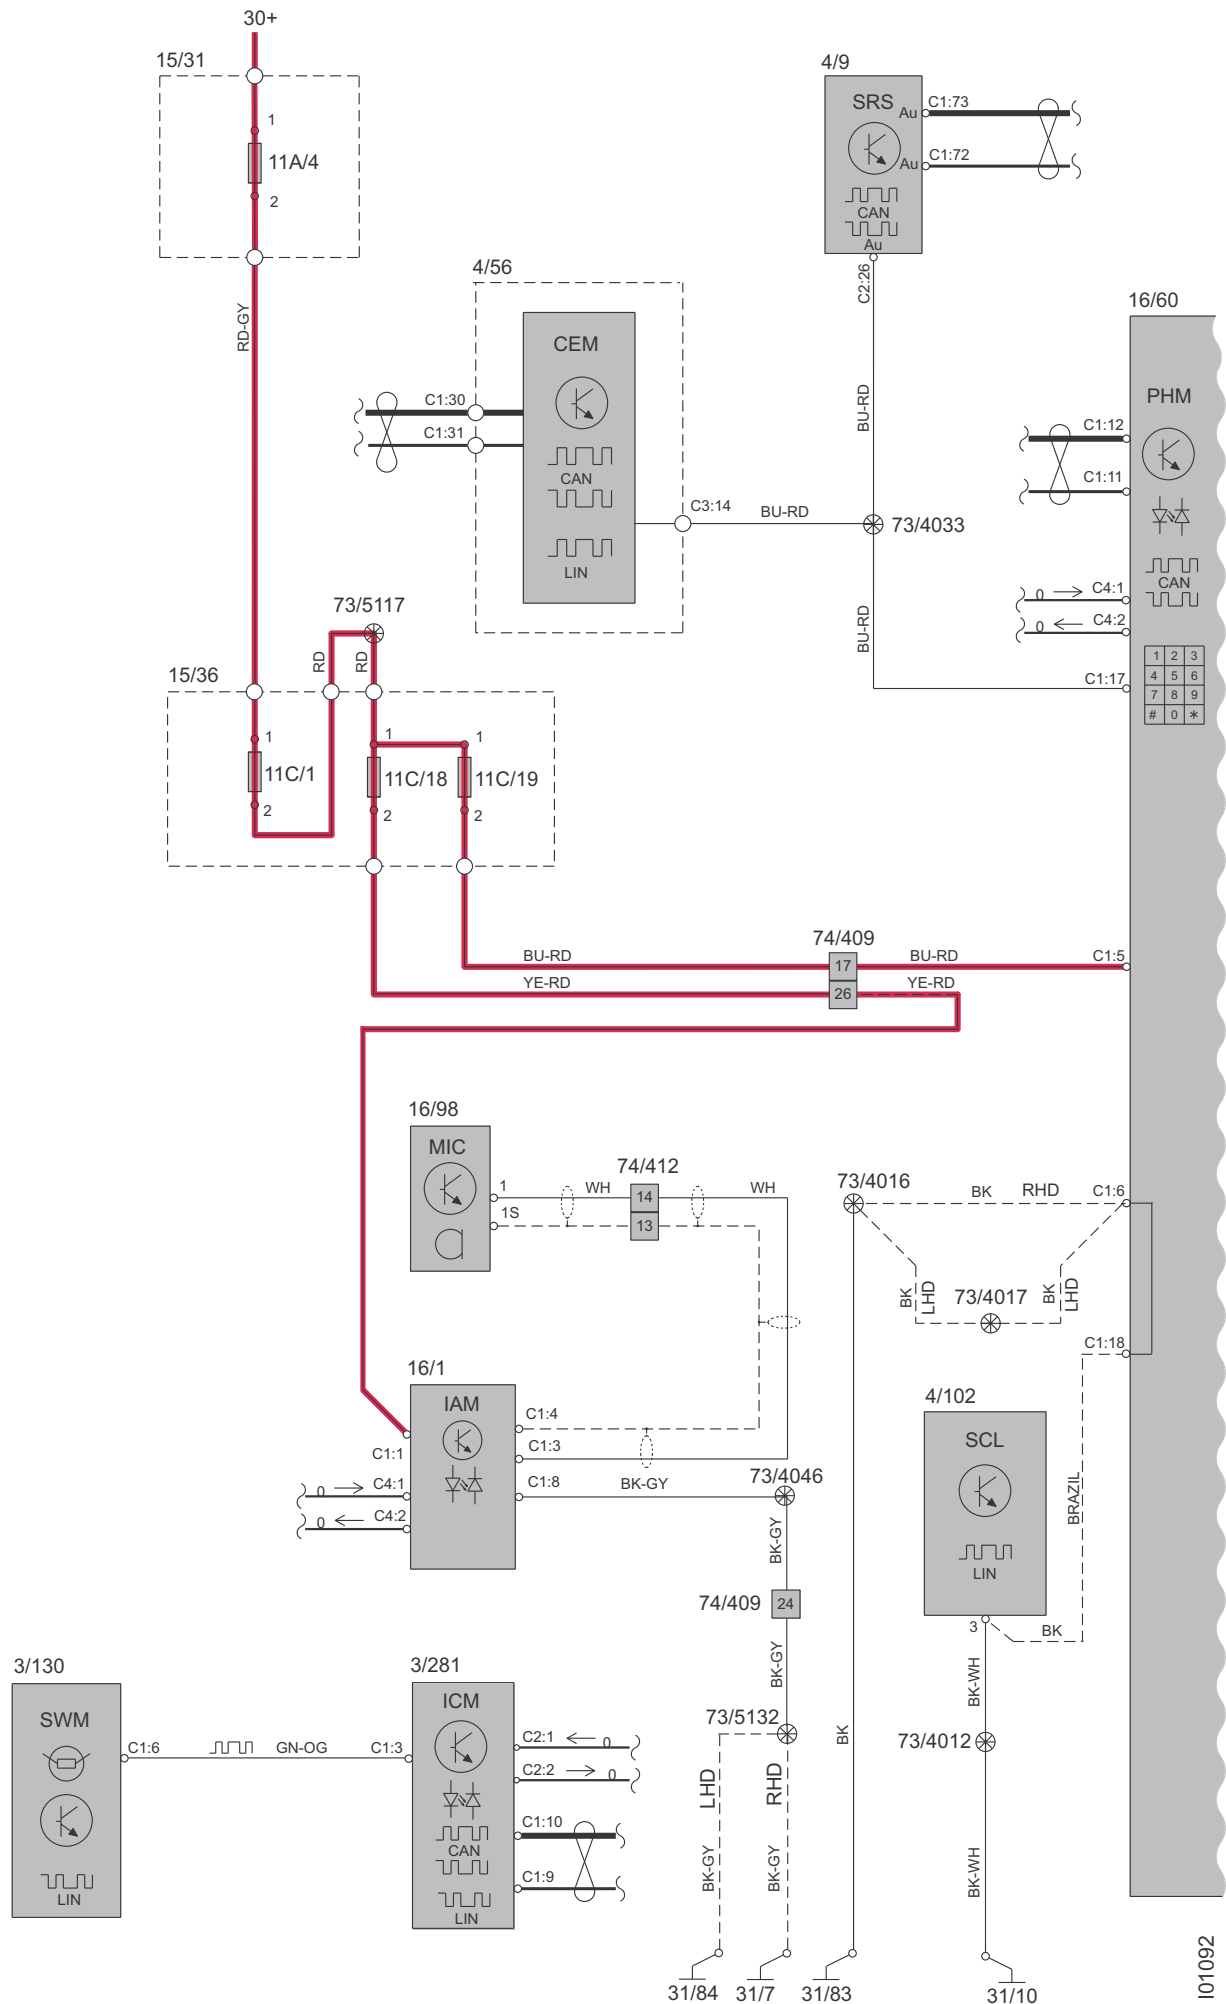


Group 39 Other
Cellular phone 2:2

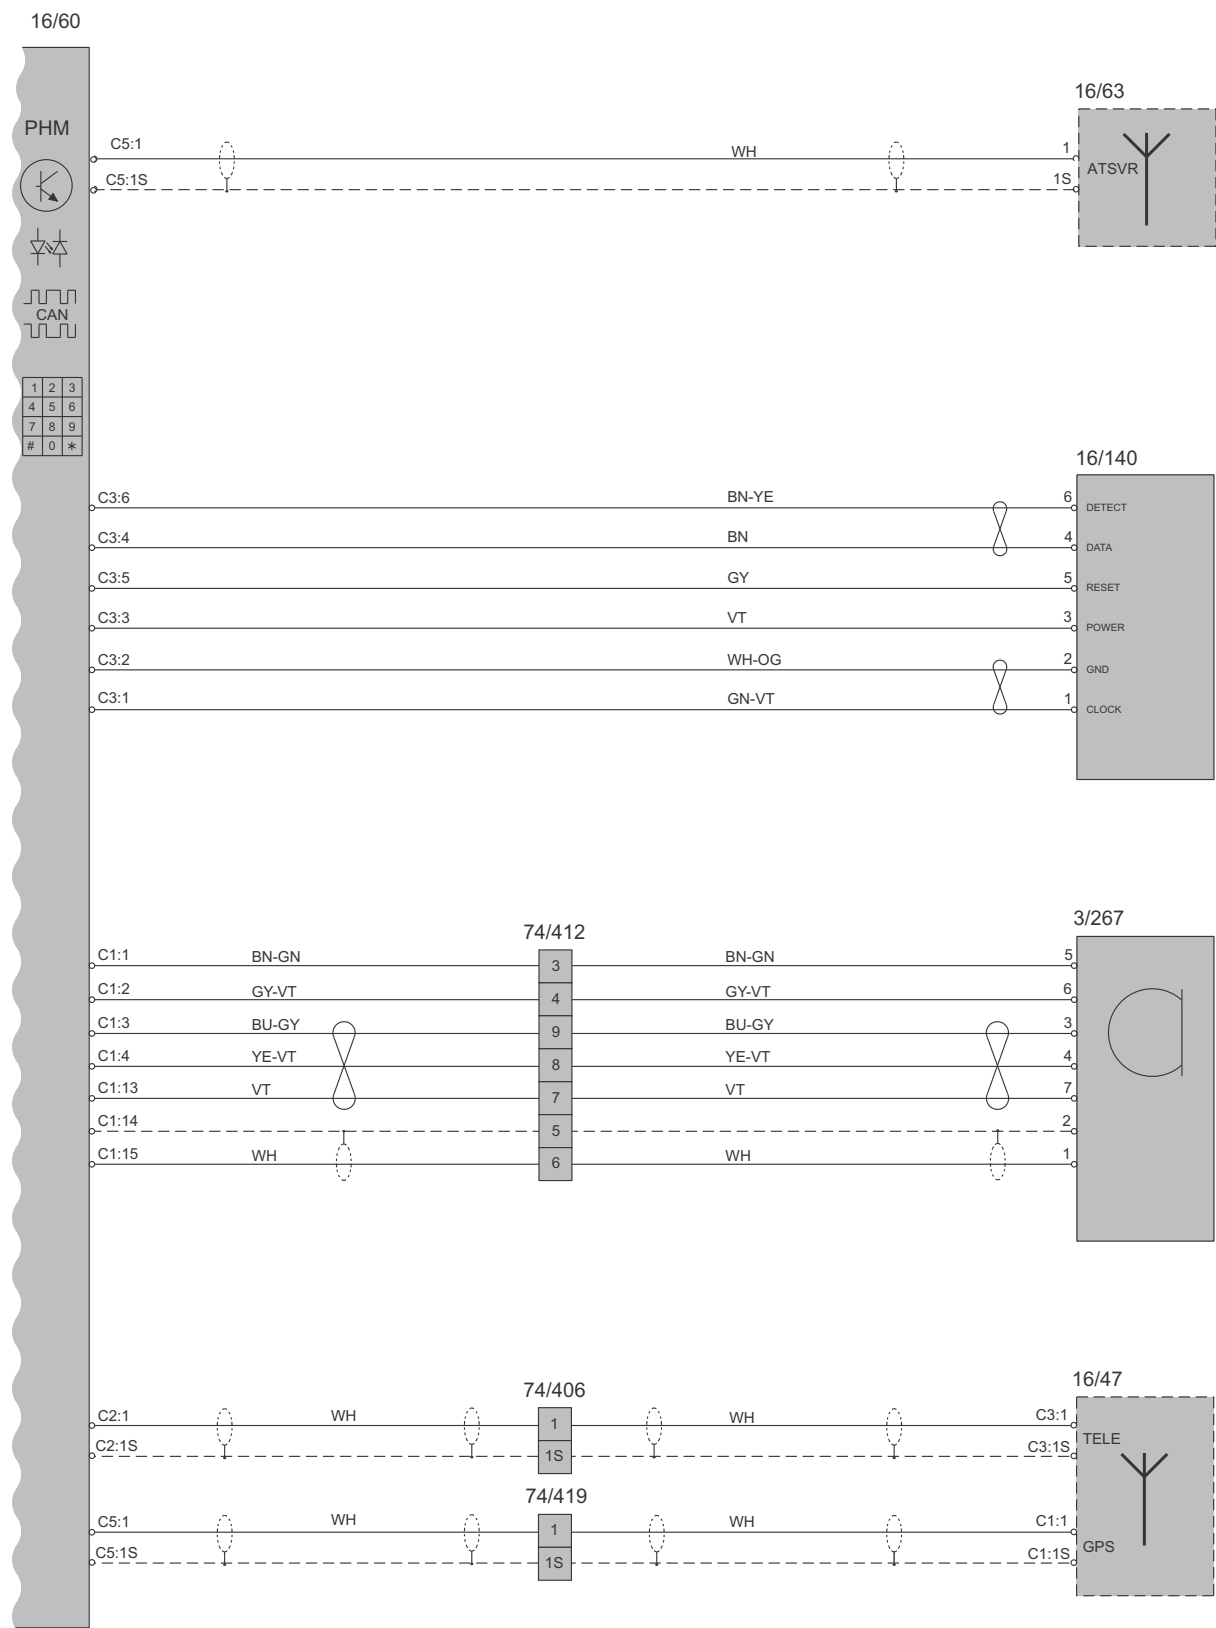


IO1091_S

Group 39 Other, Accessories

DAB Radio

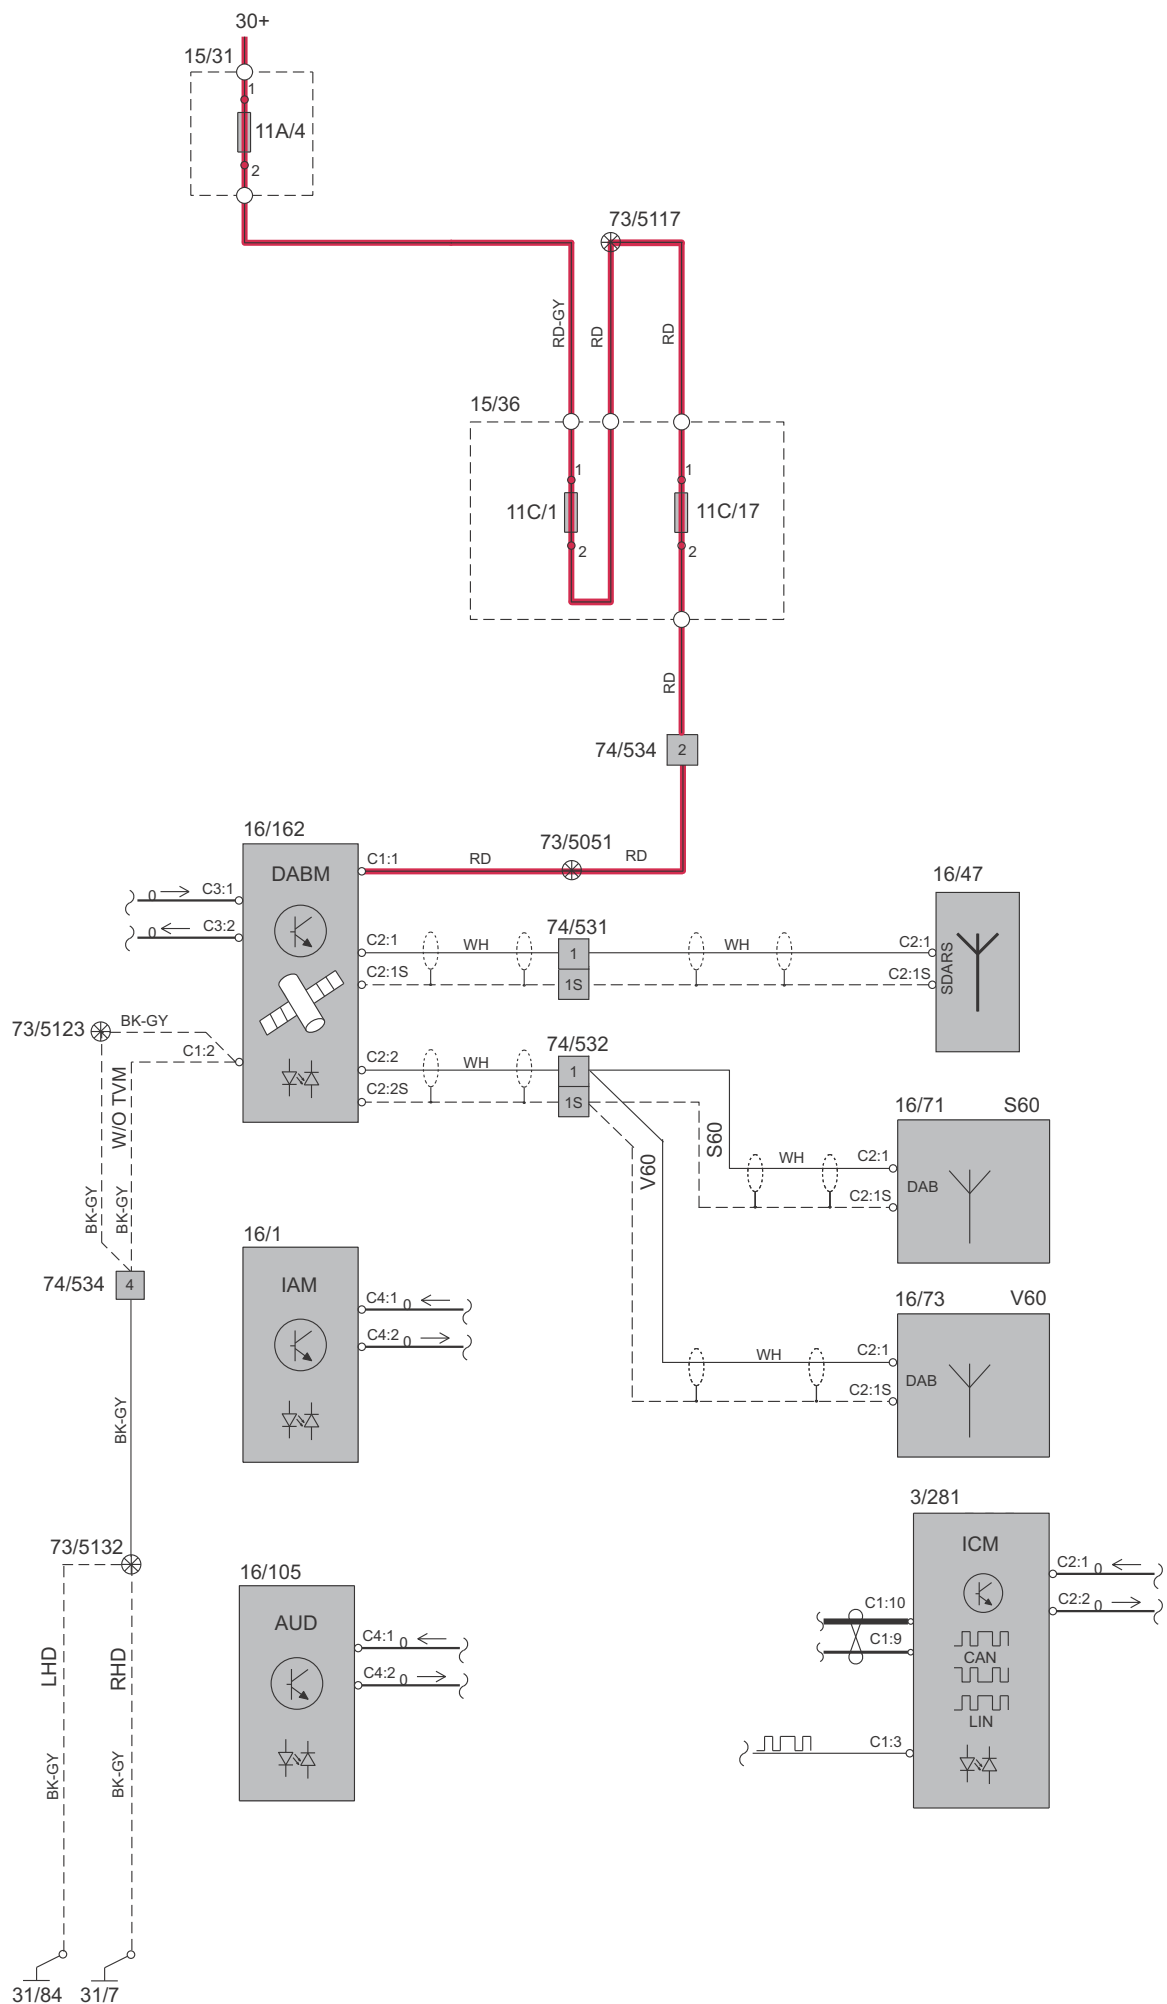


Multimedia monitor with DVD, Dual Screen (RSE)

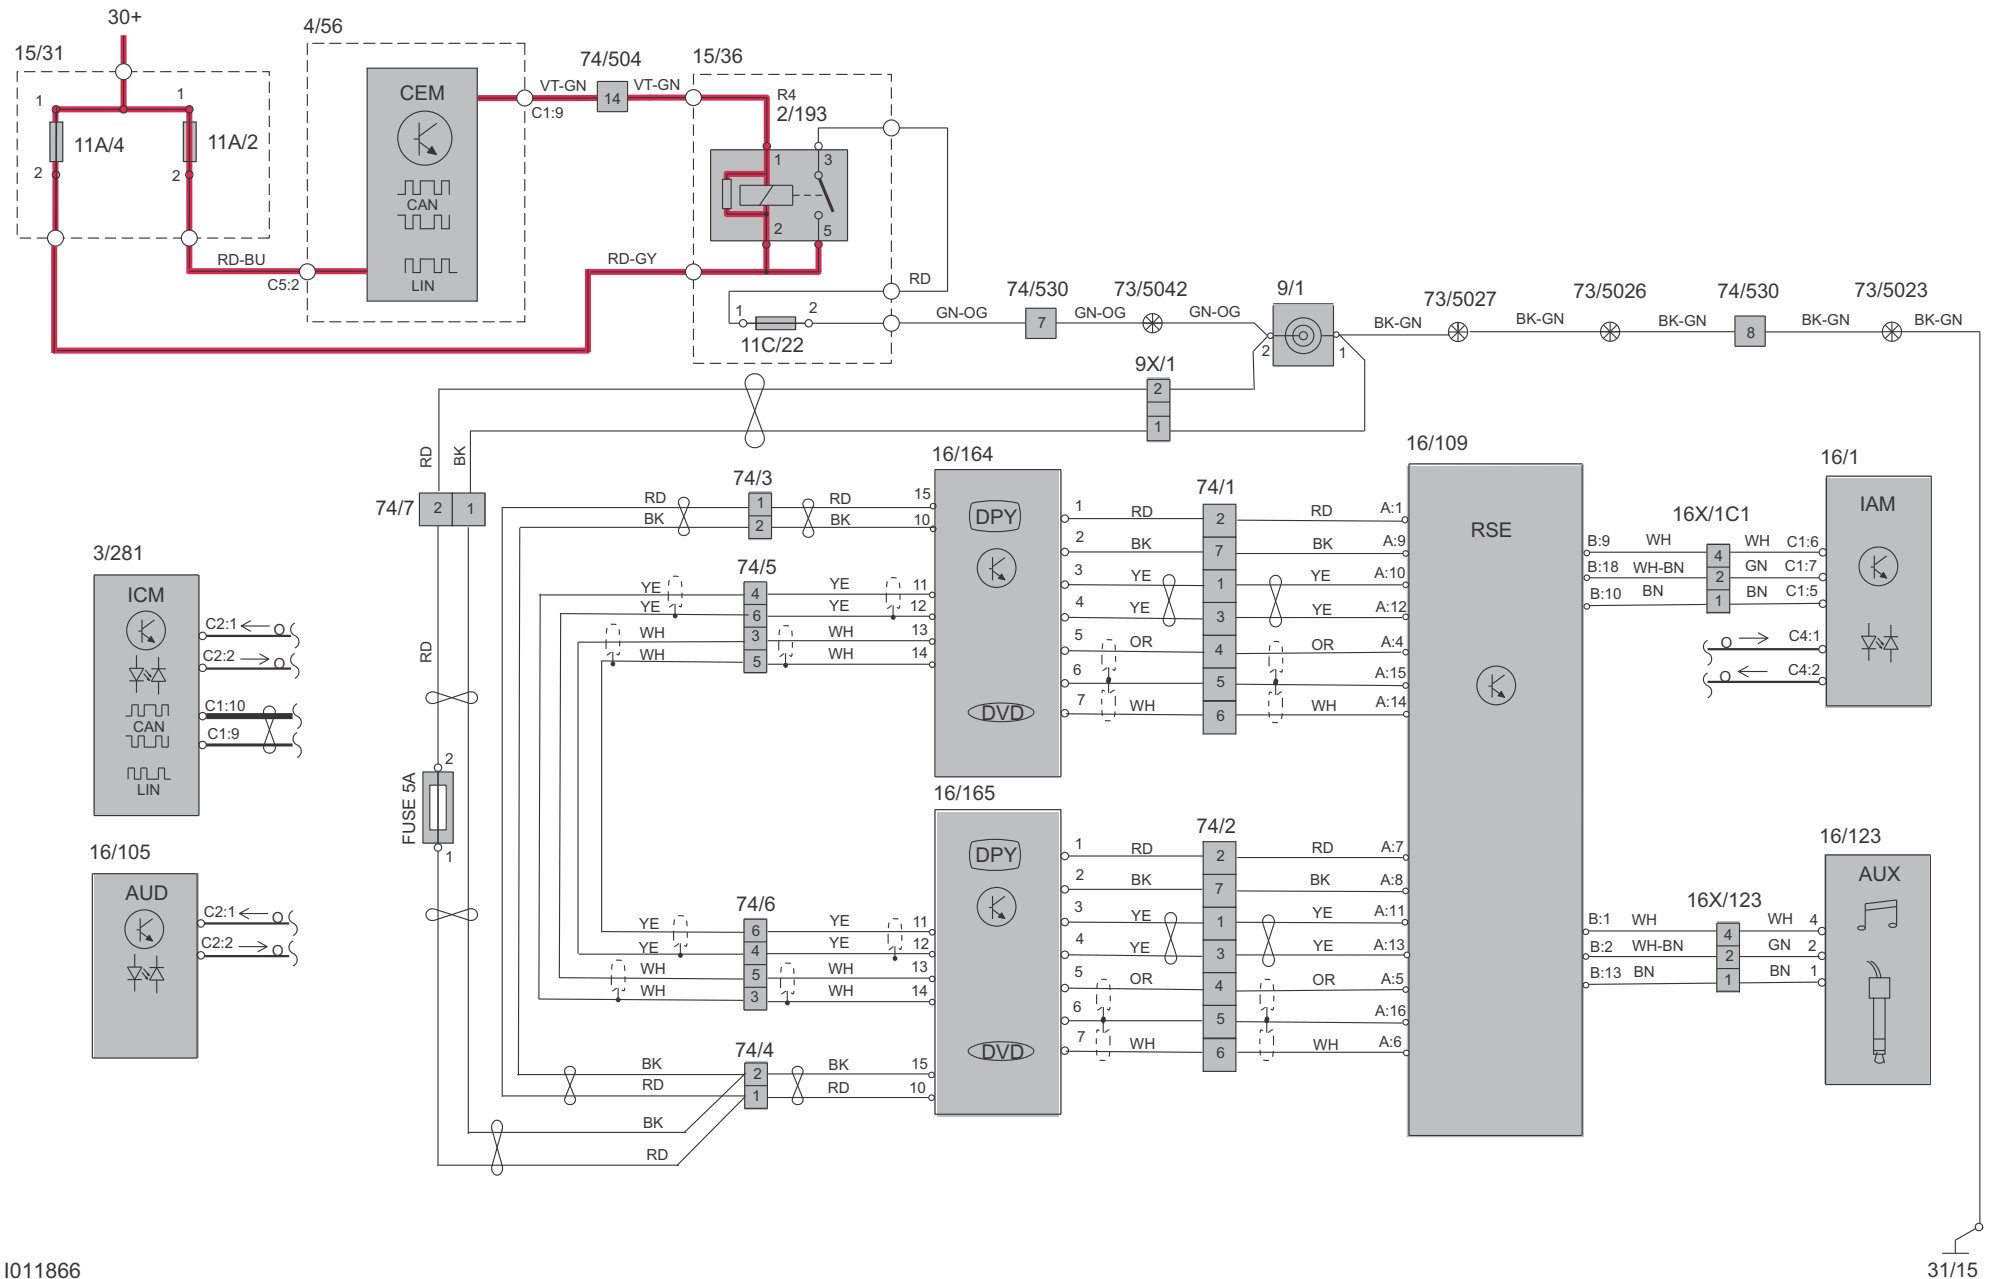


Group 39 Other

TV receiver / TV control module S60

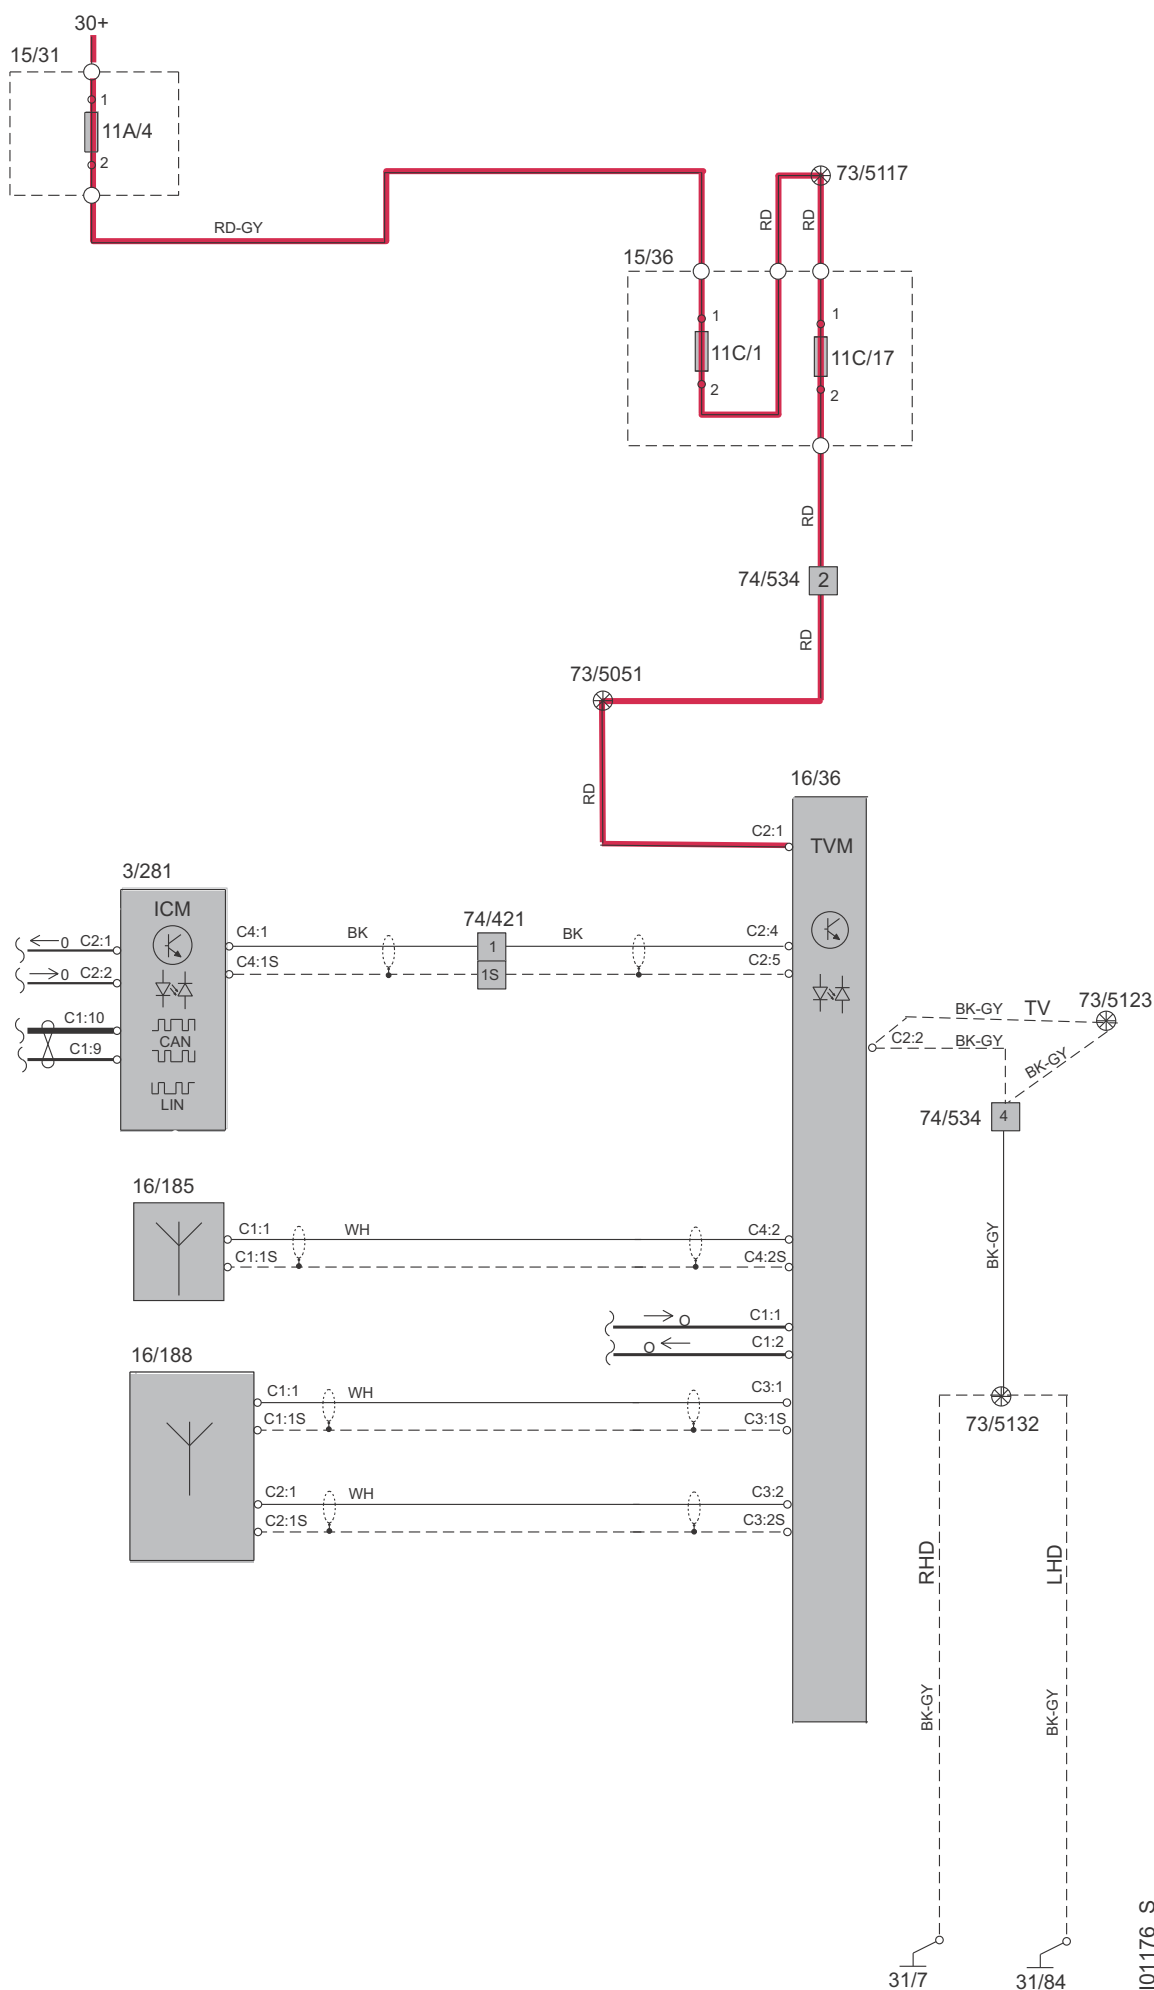


Group 39 Other

TV receiver / TV control module V60

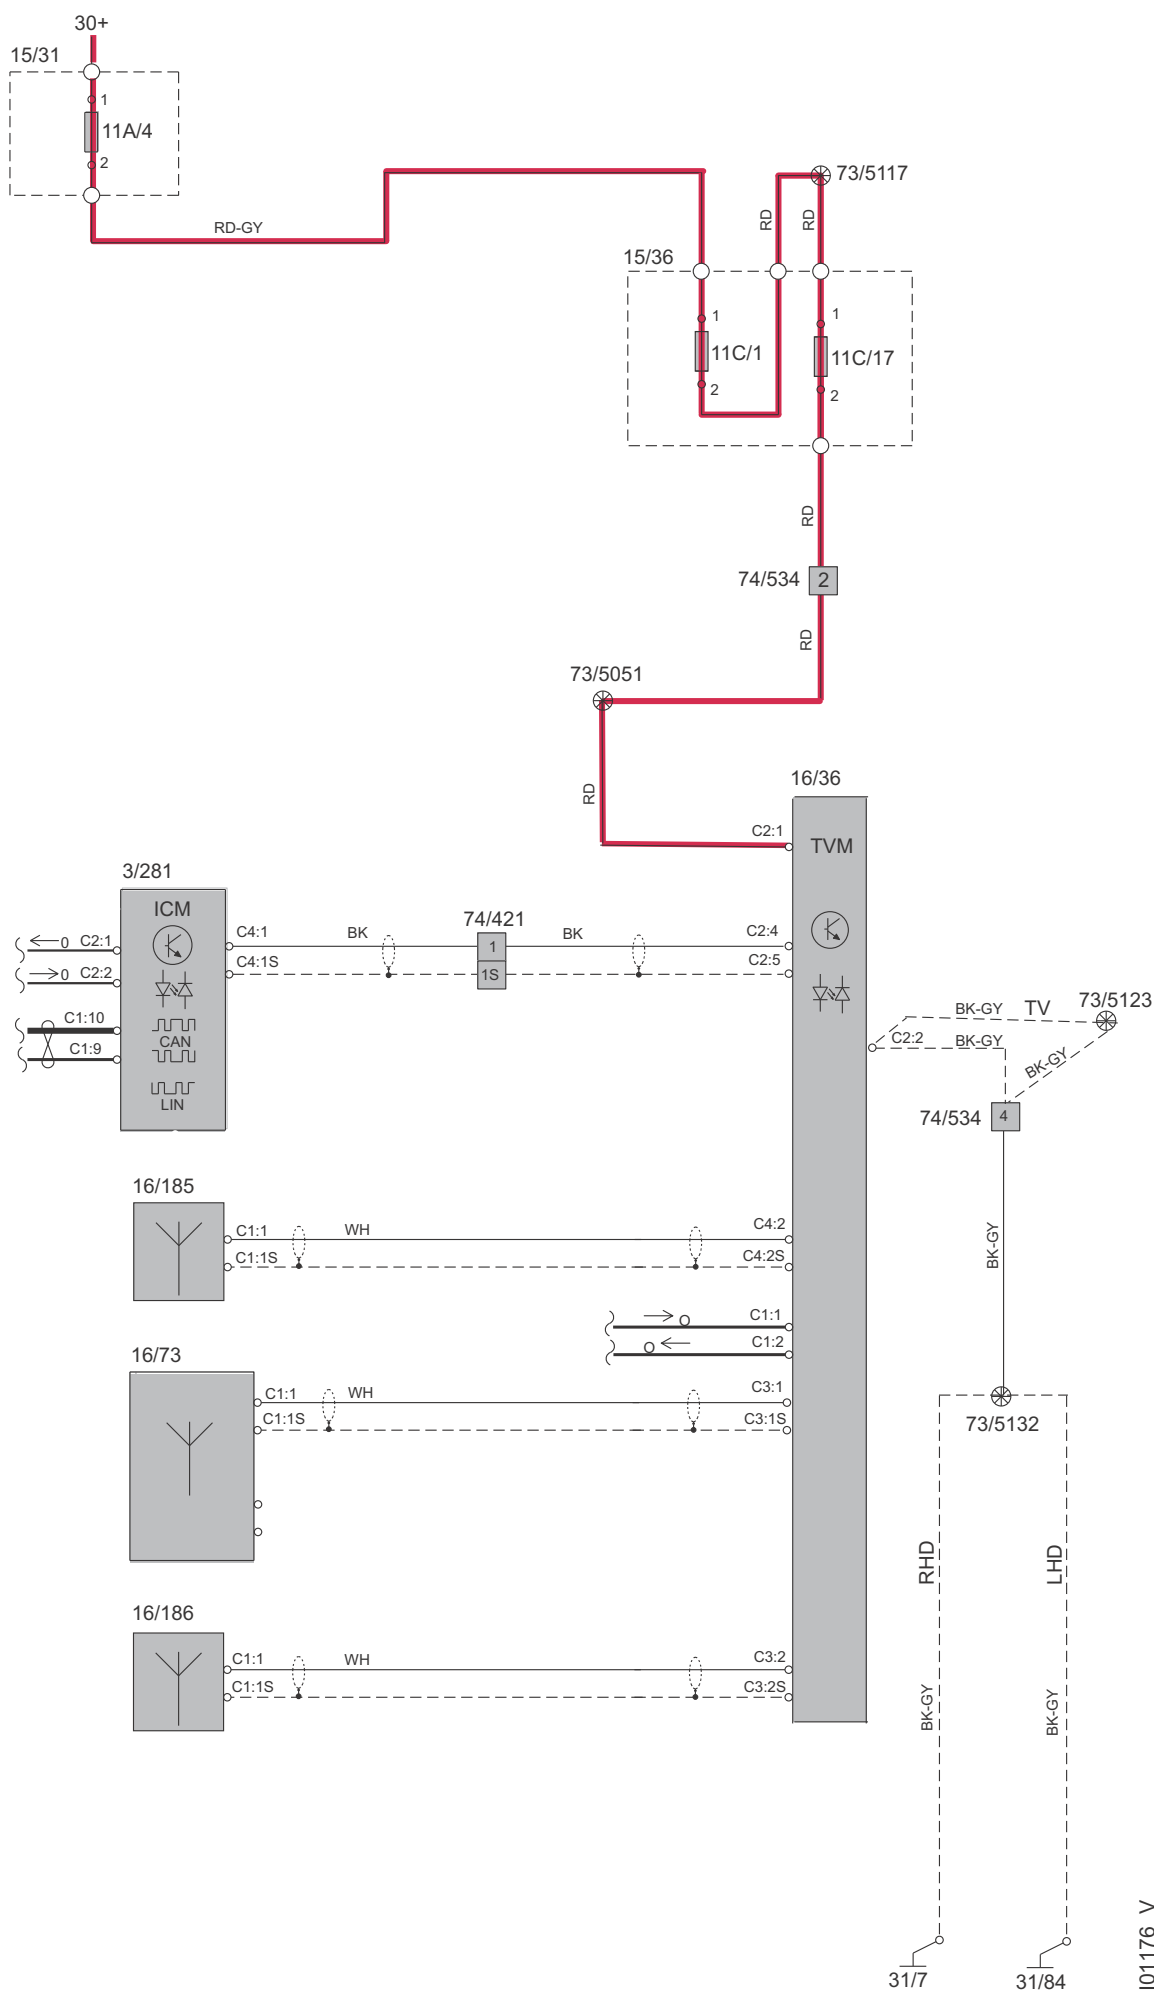

Group 39 Other, Accessories Bluetooth Handsfree

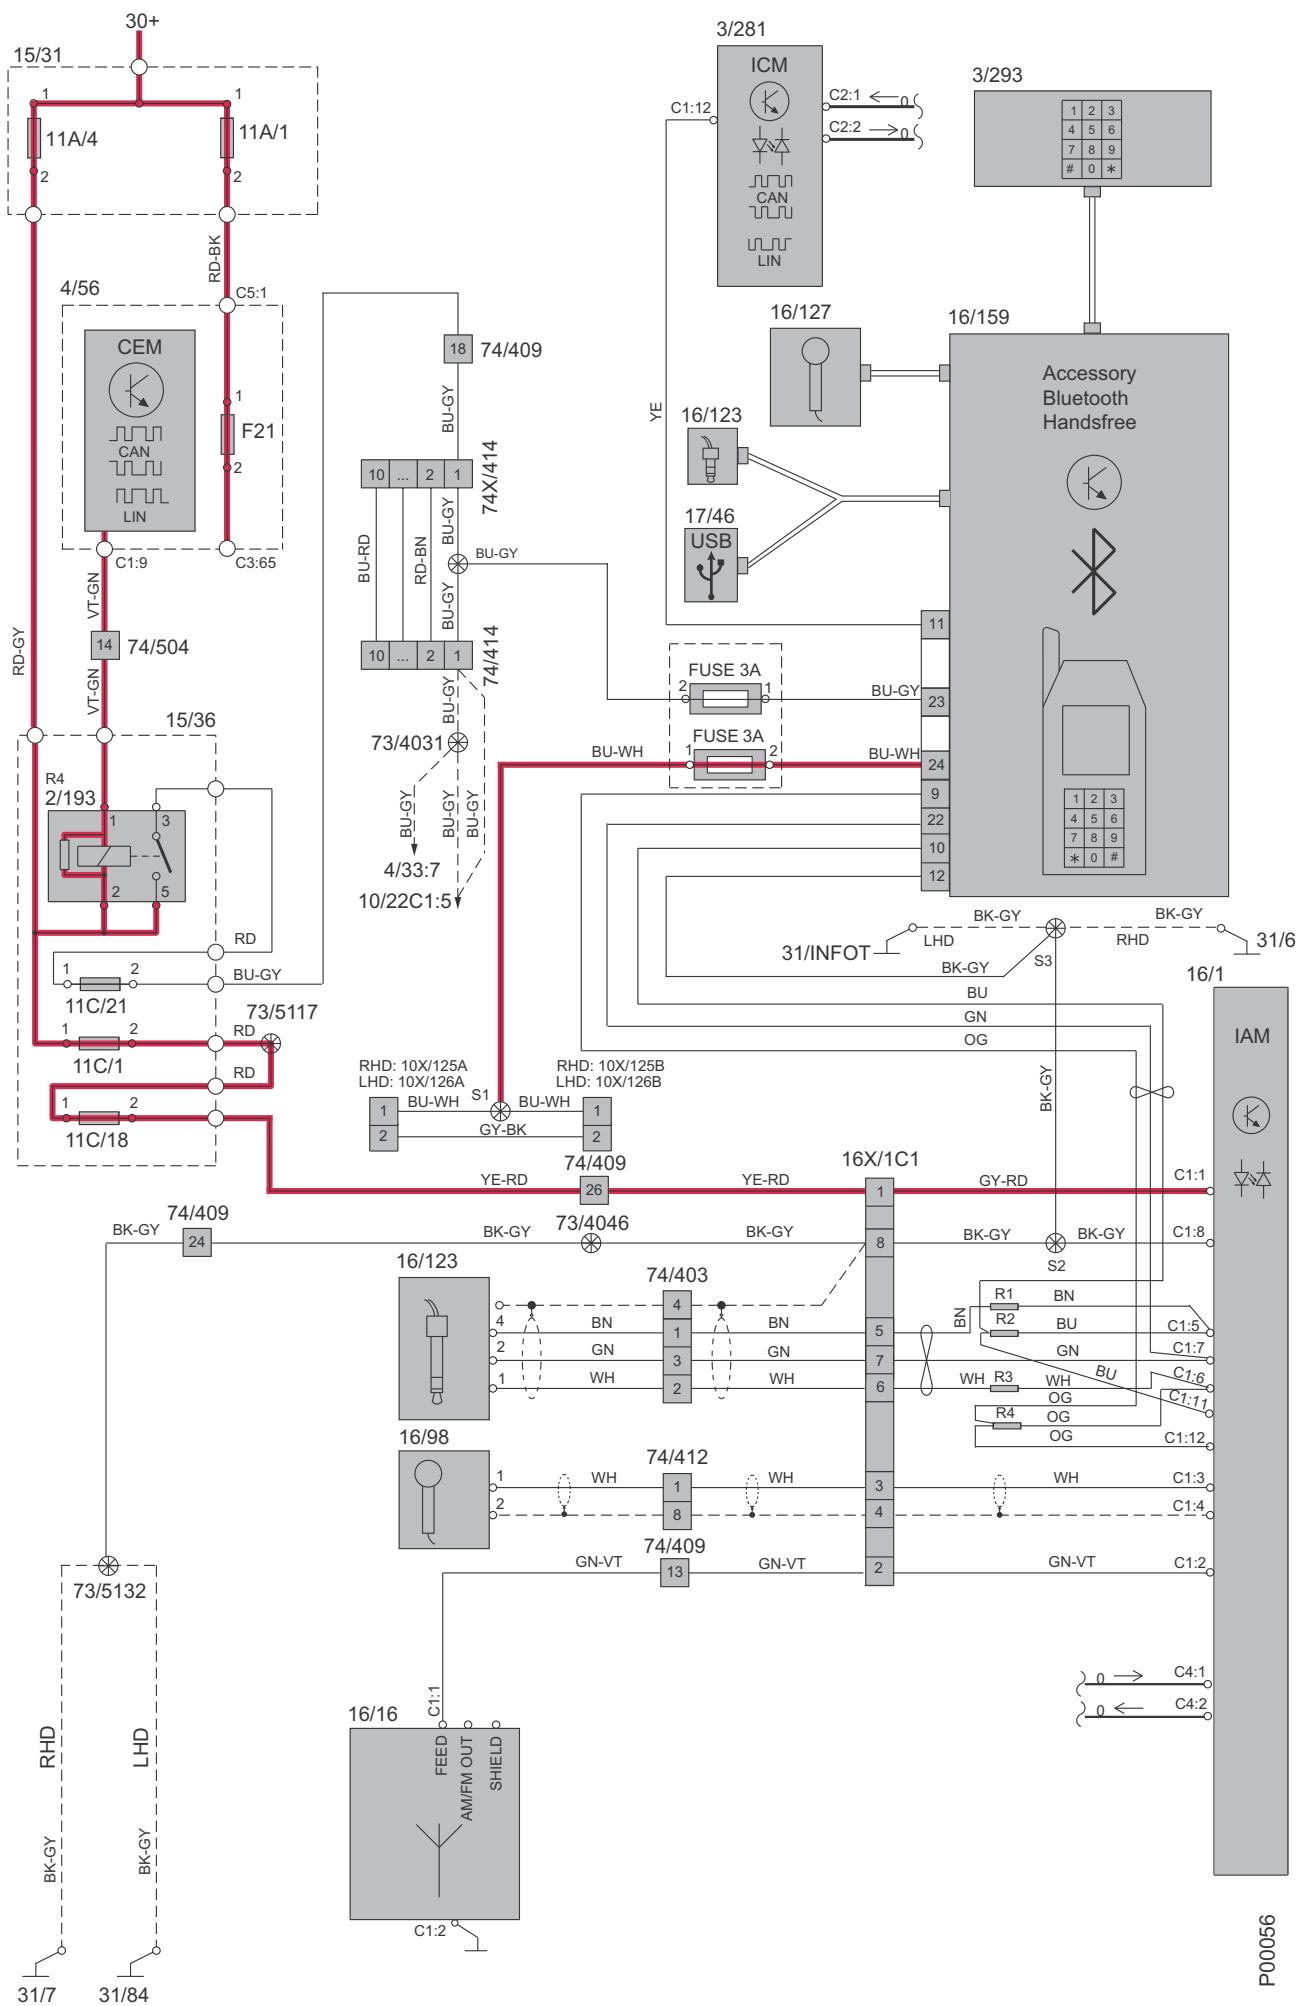


Navigation system and Traffic information, portable




Group 39 Other, Accessories

Satellite radio

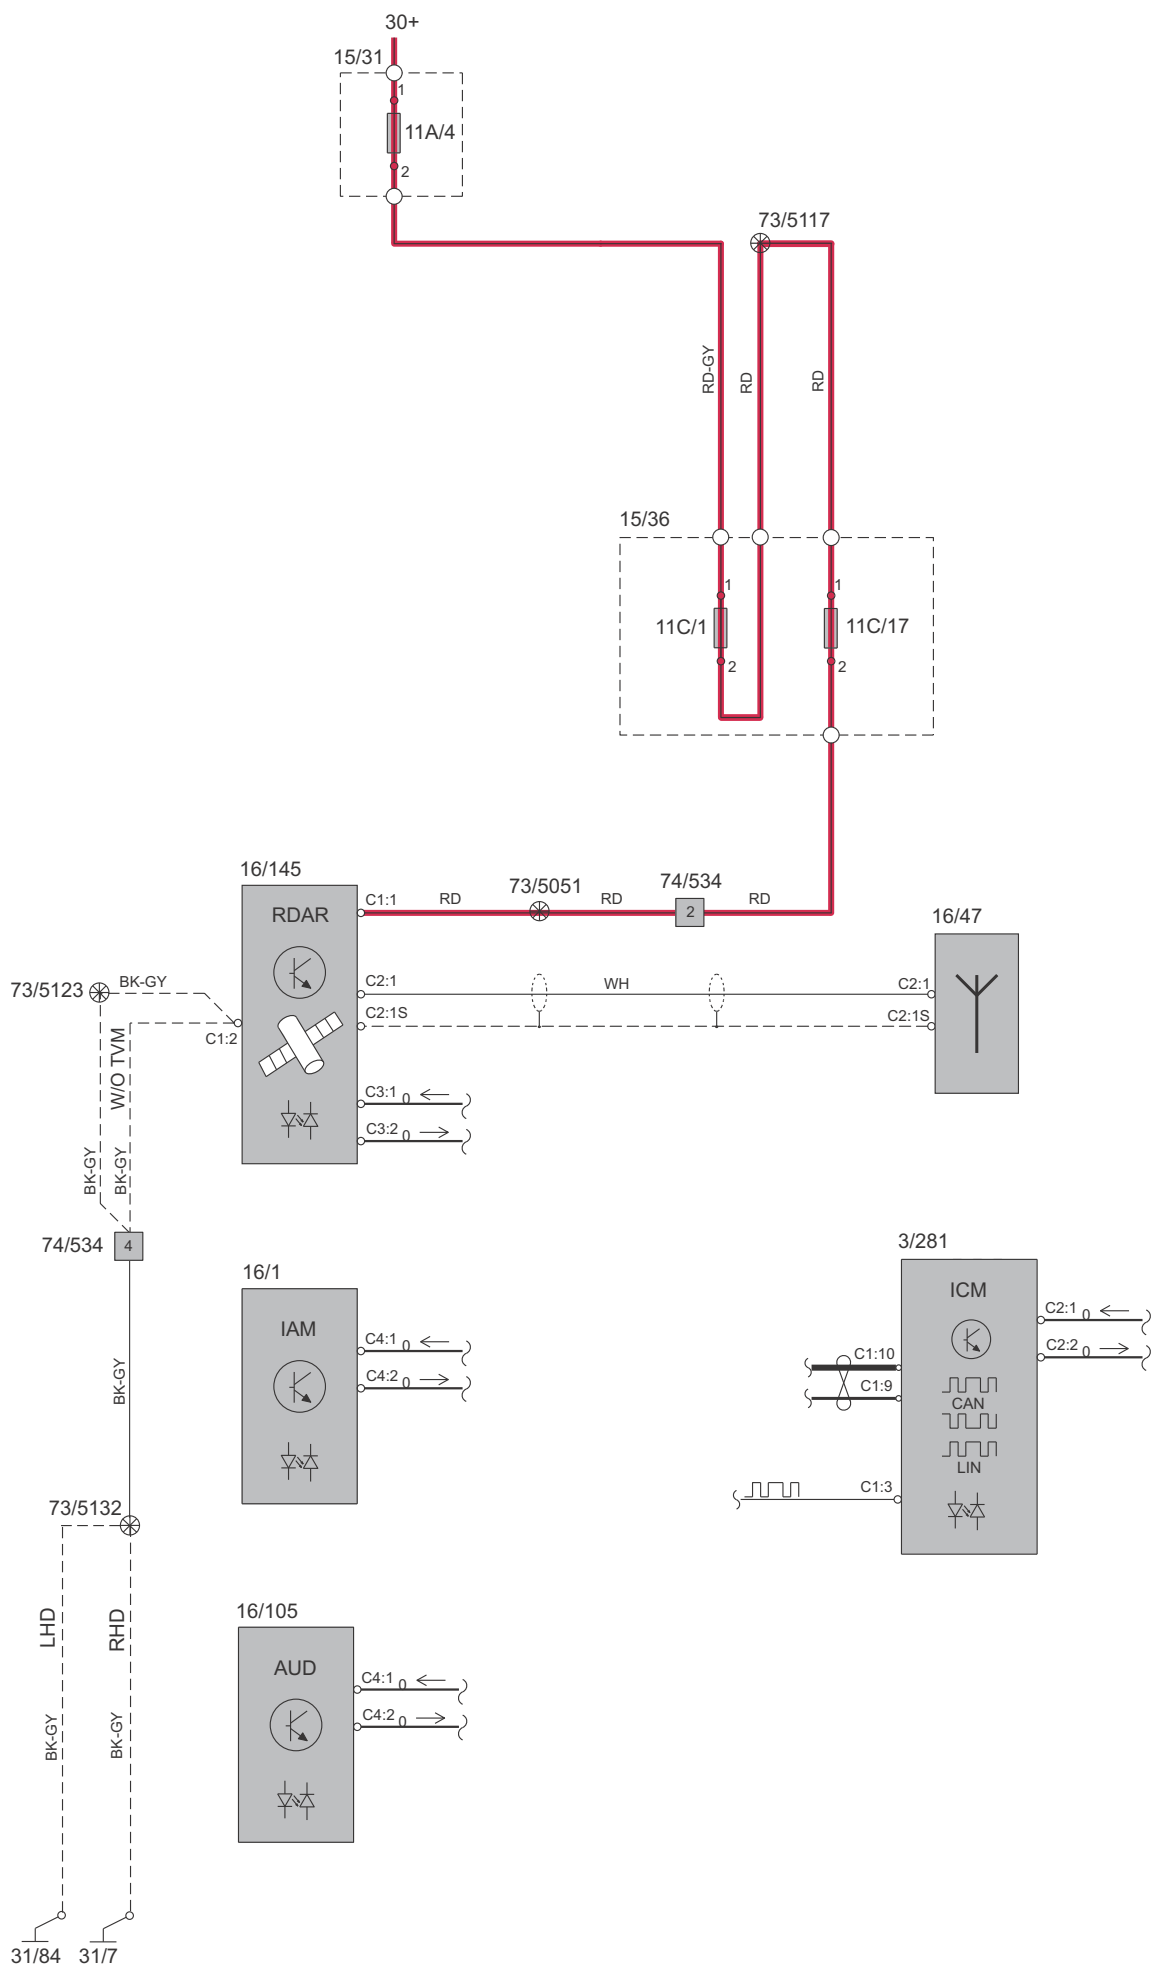


Group 39 Other
Parking camera rear

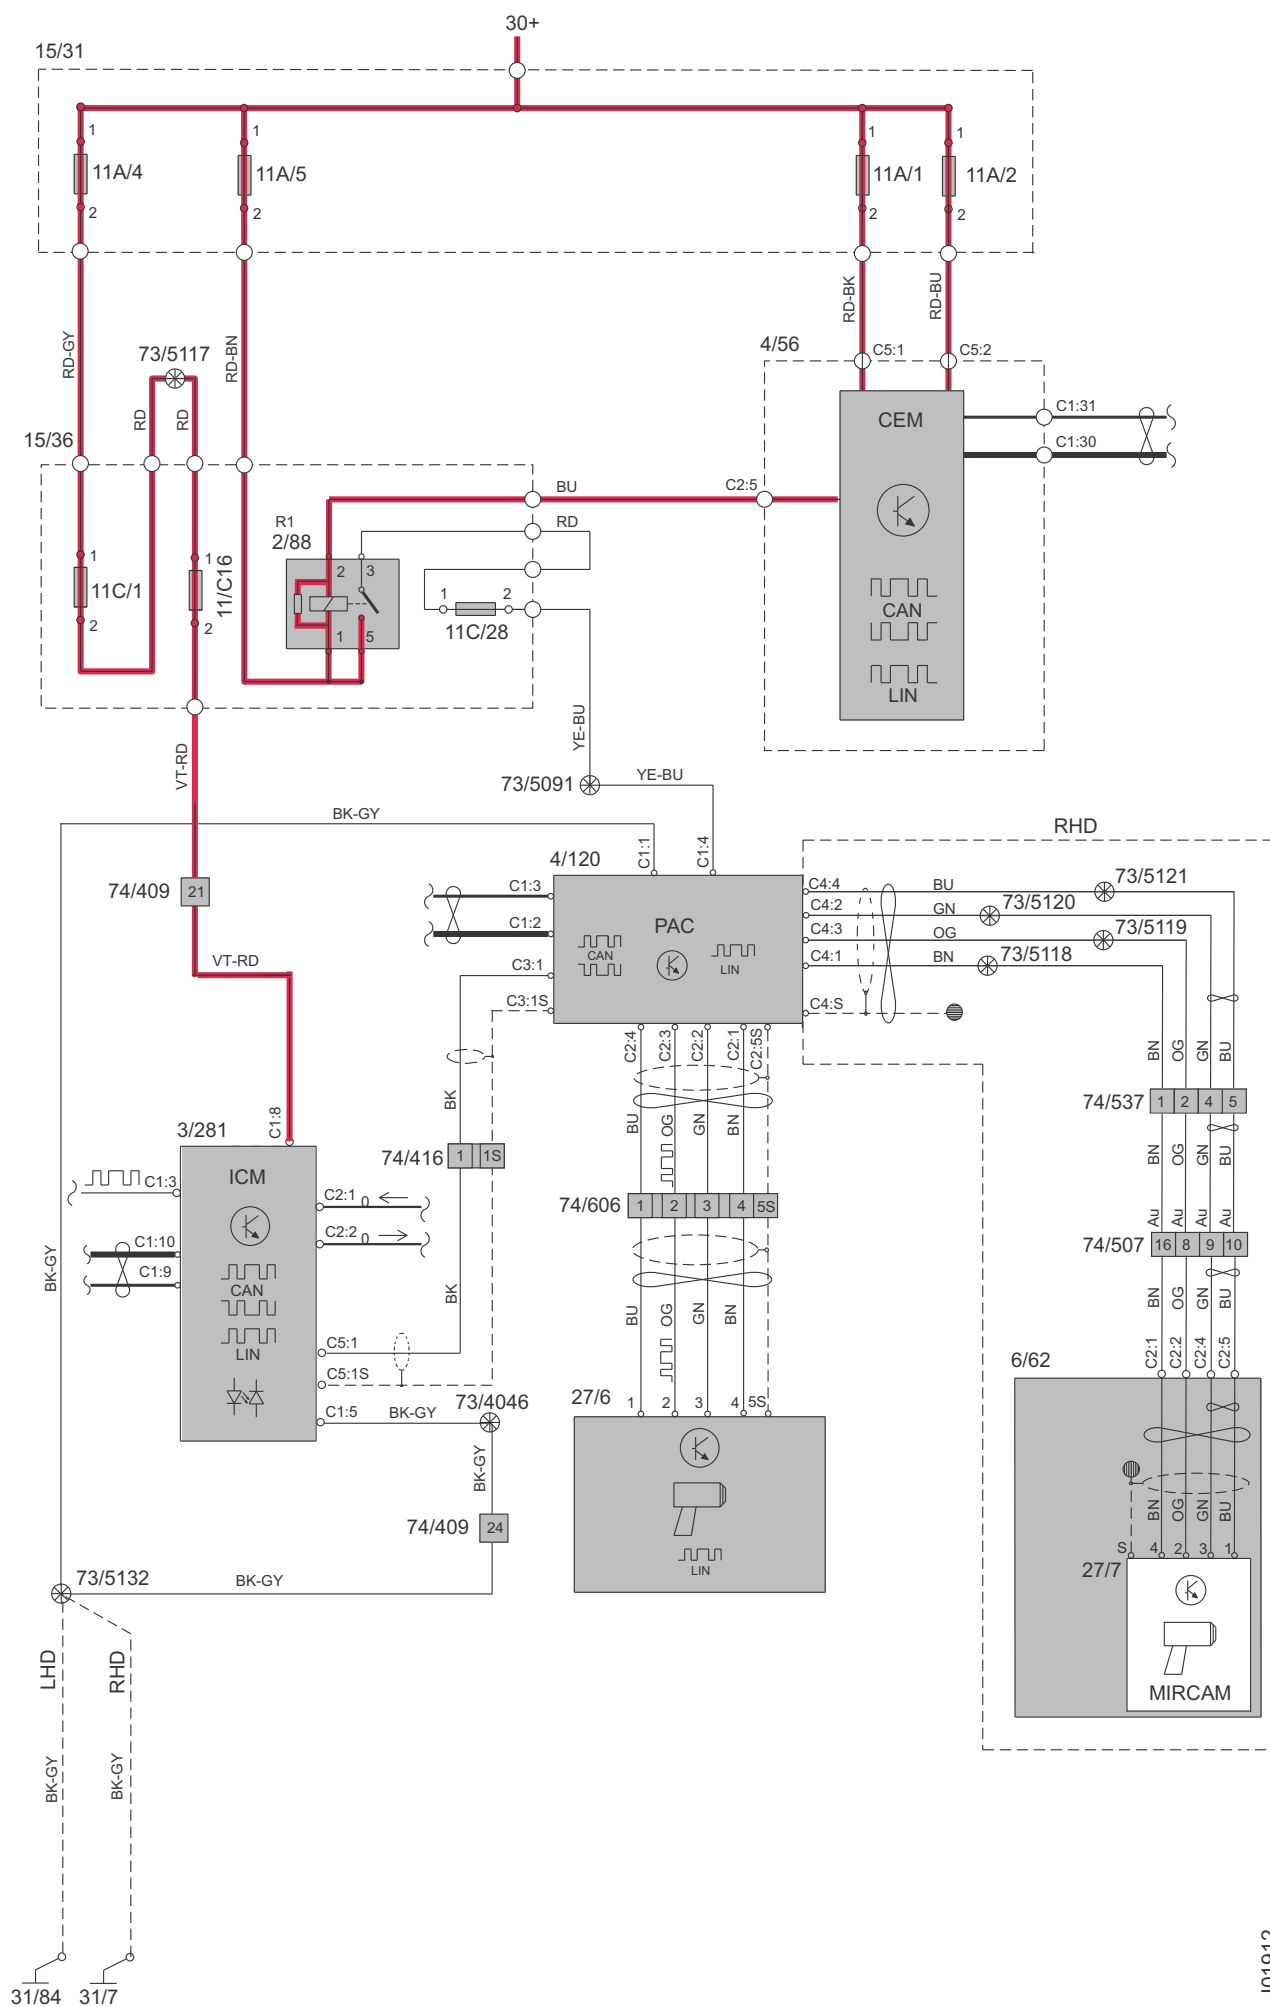


Group 39 Other, accessories


Parking camera rear

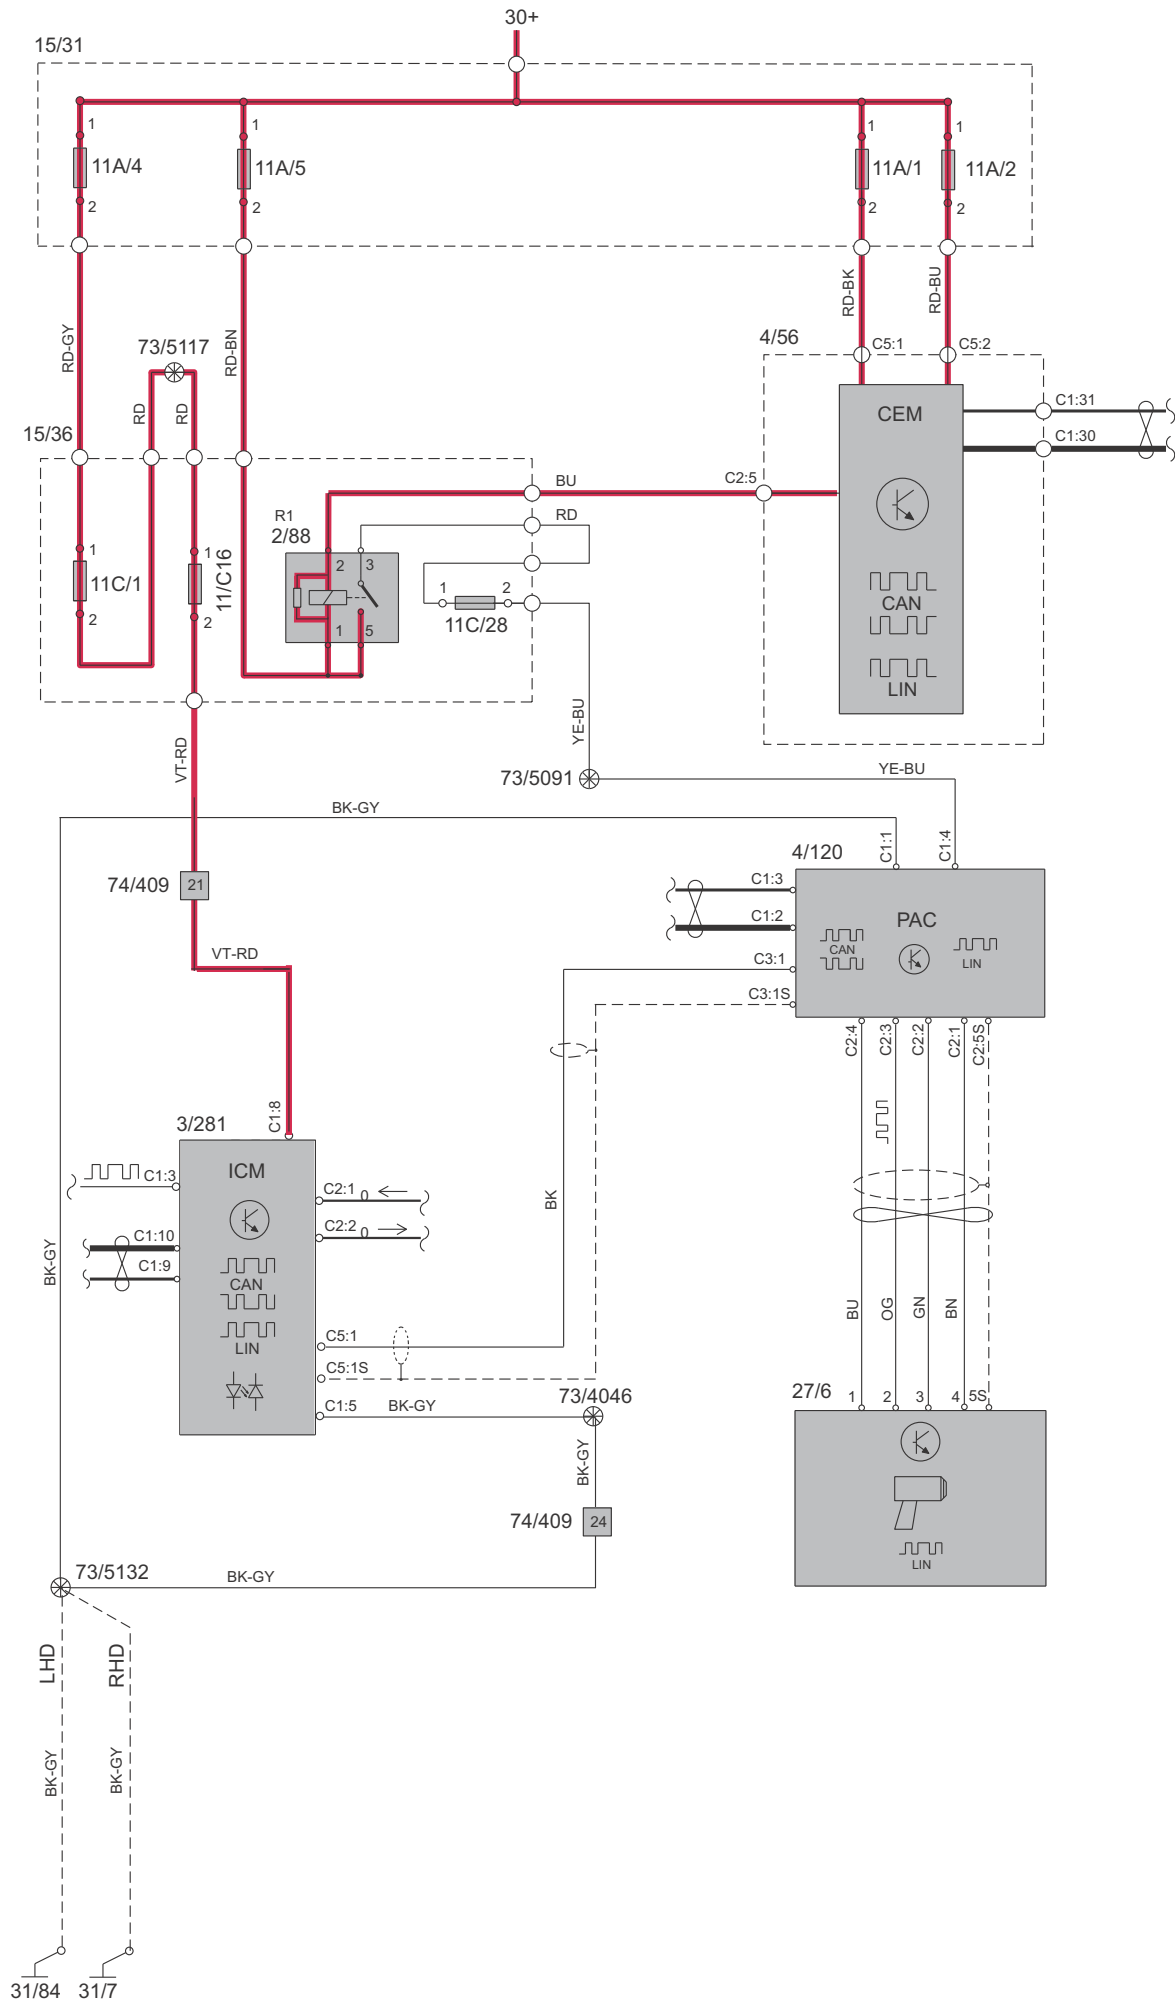

Group 39 Other, Accessories Parking camera wide angle front

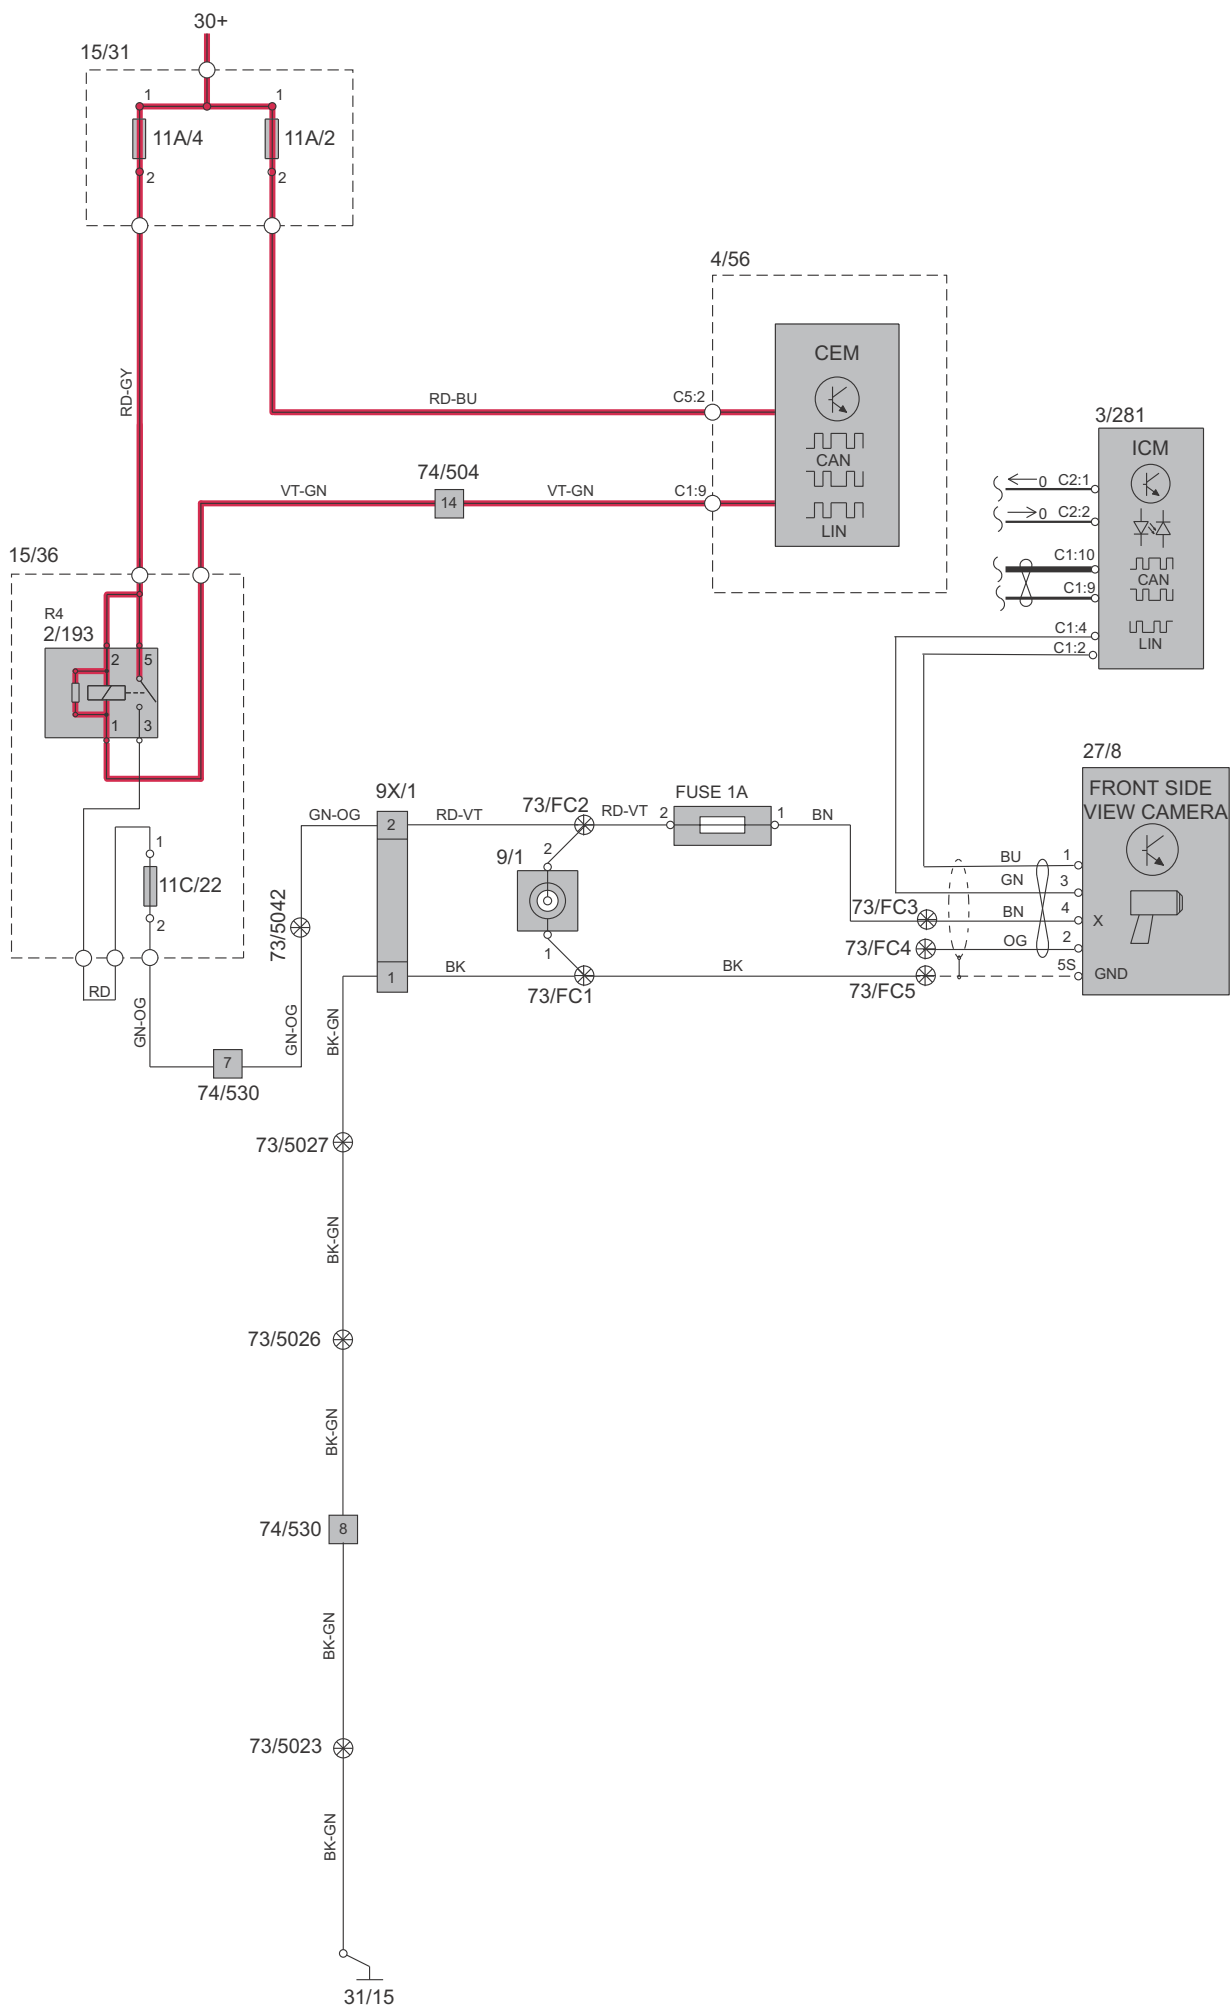


Group 43 Transmission
Transmission M66

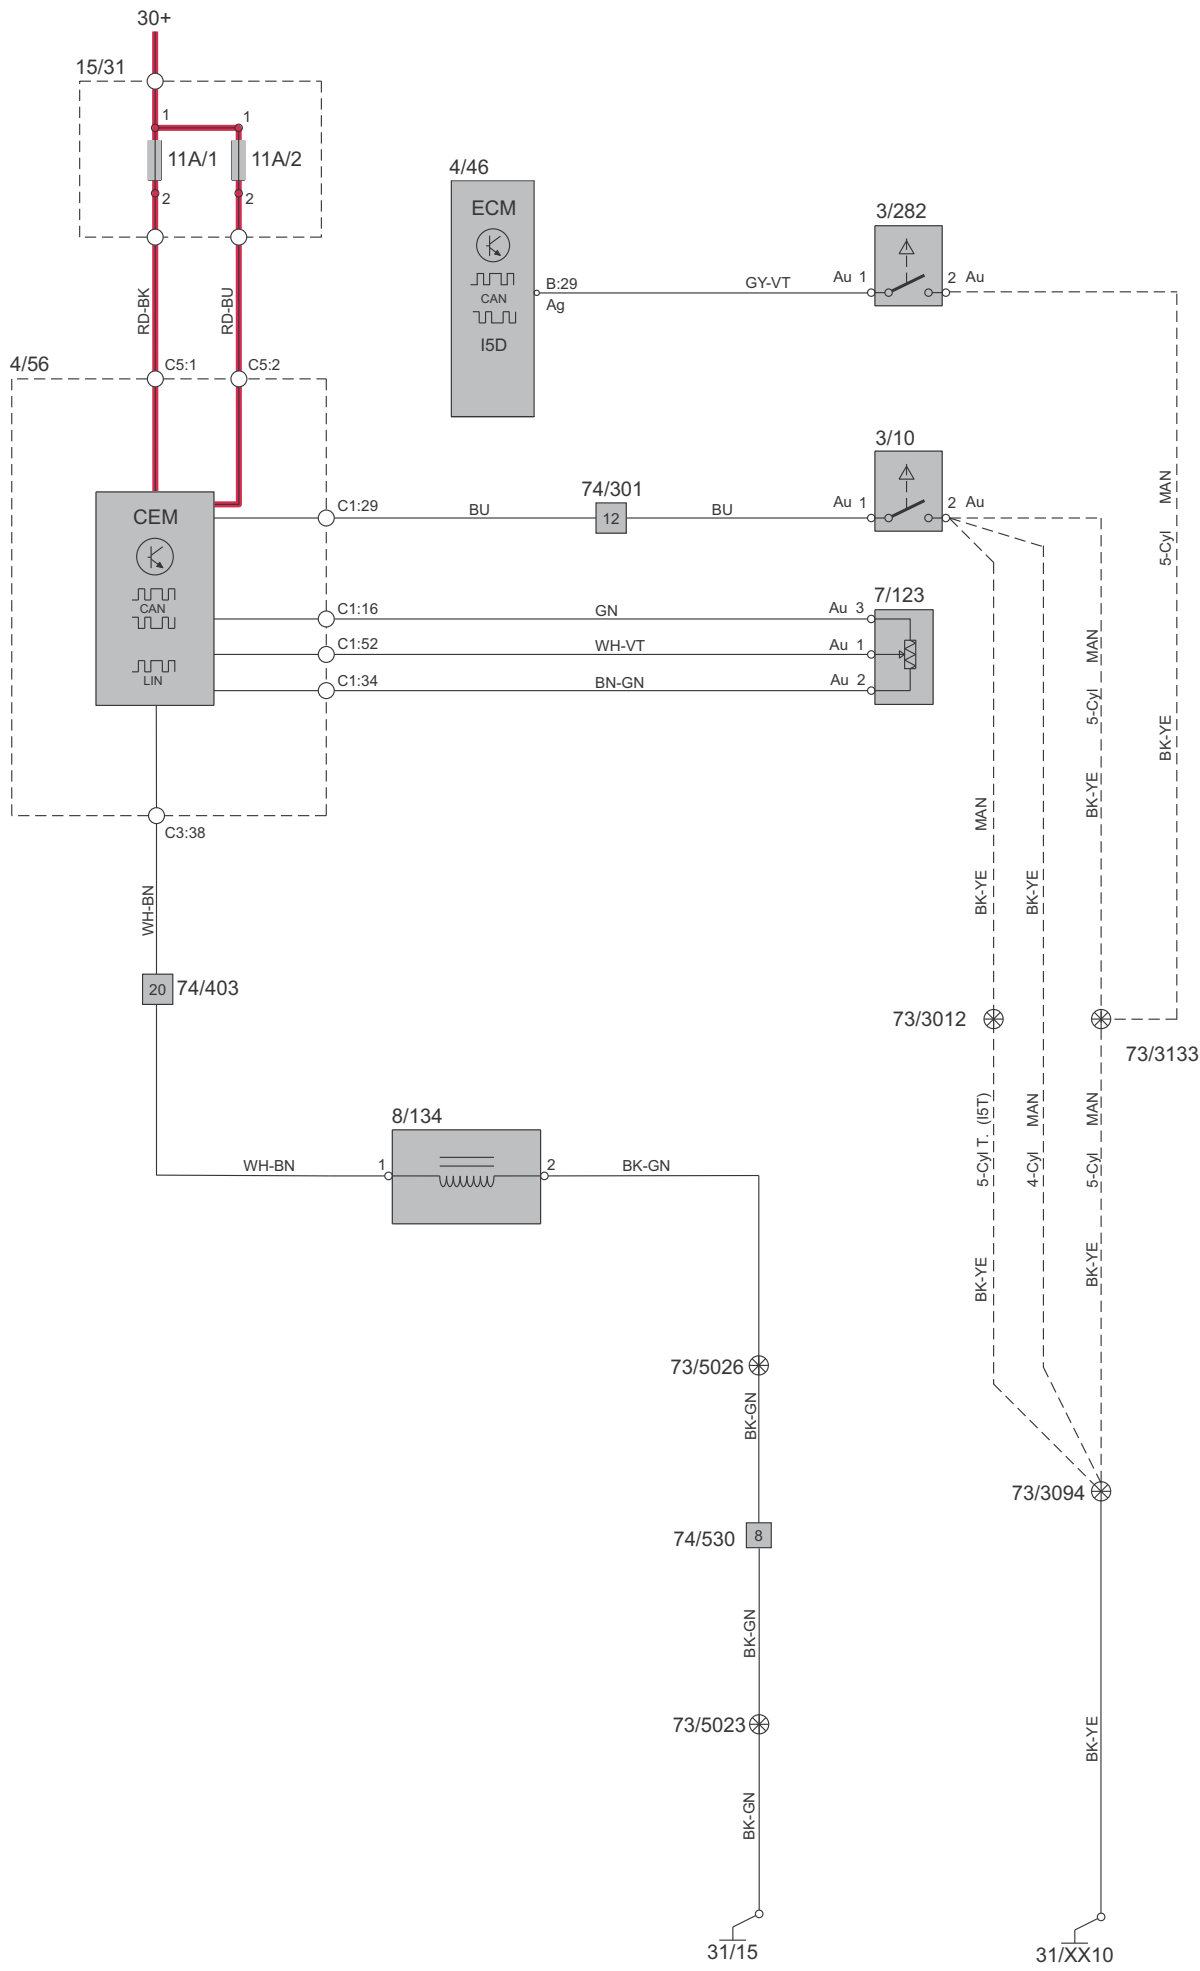

N00021


Group 43 Transmission

Automatic transmission AWF21

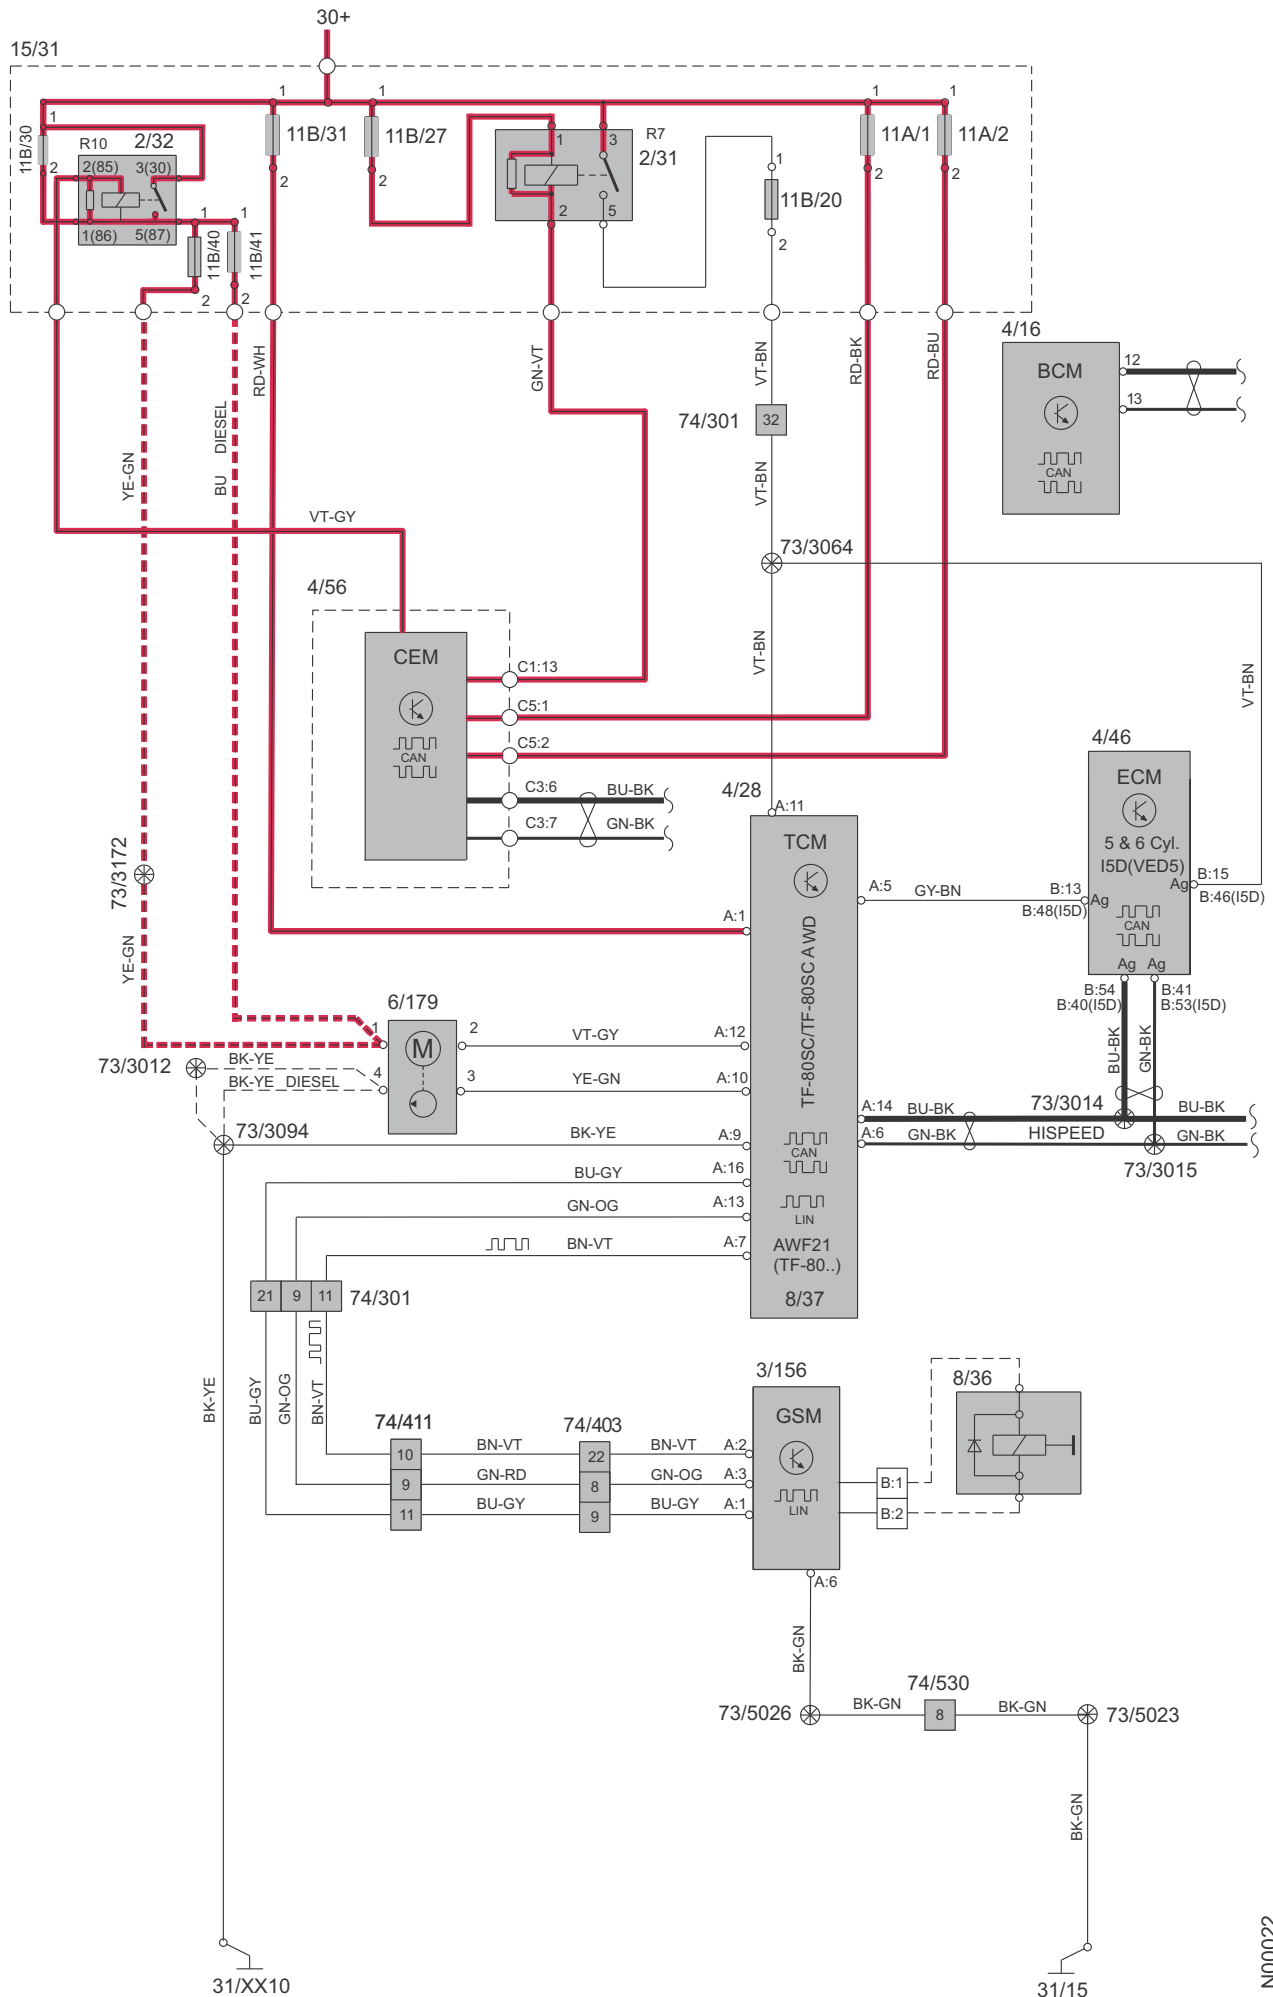


N00022

Group 43 Transmission
Automatic transmission MPS6

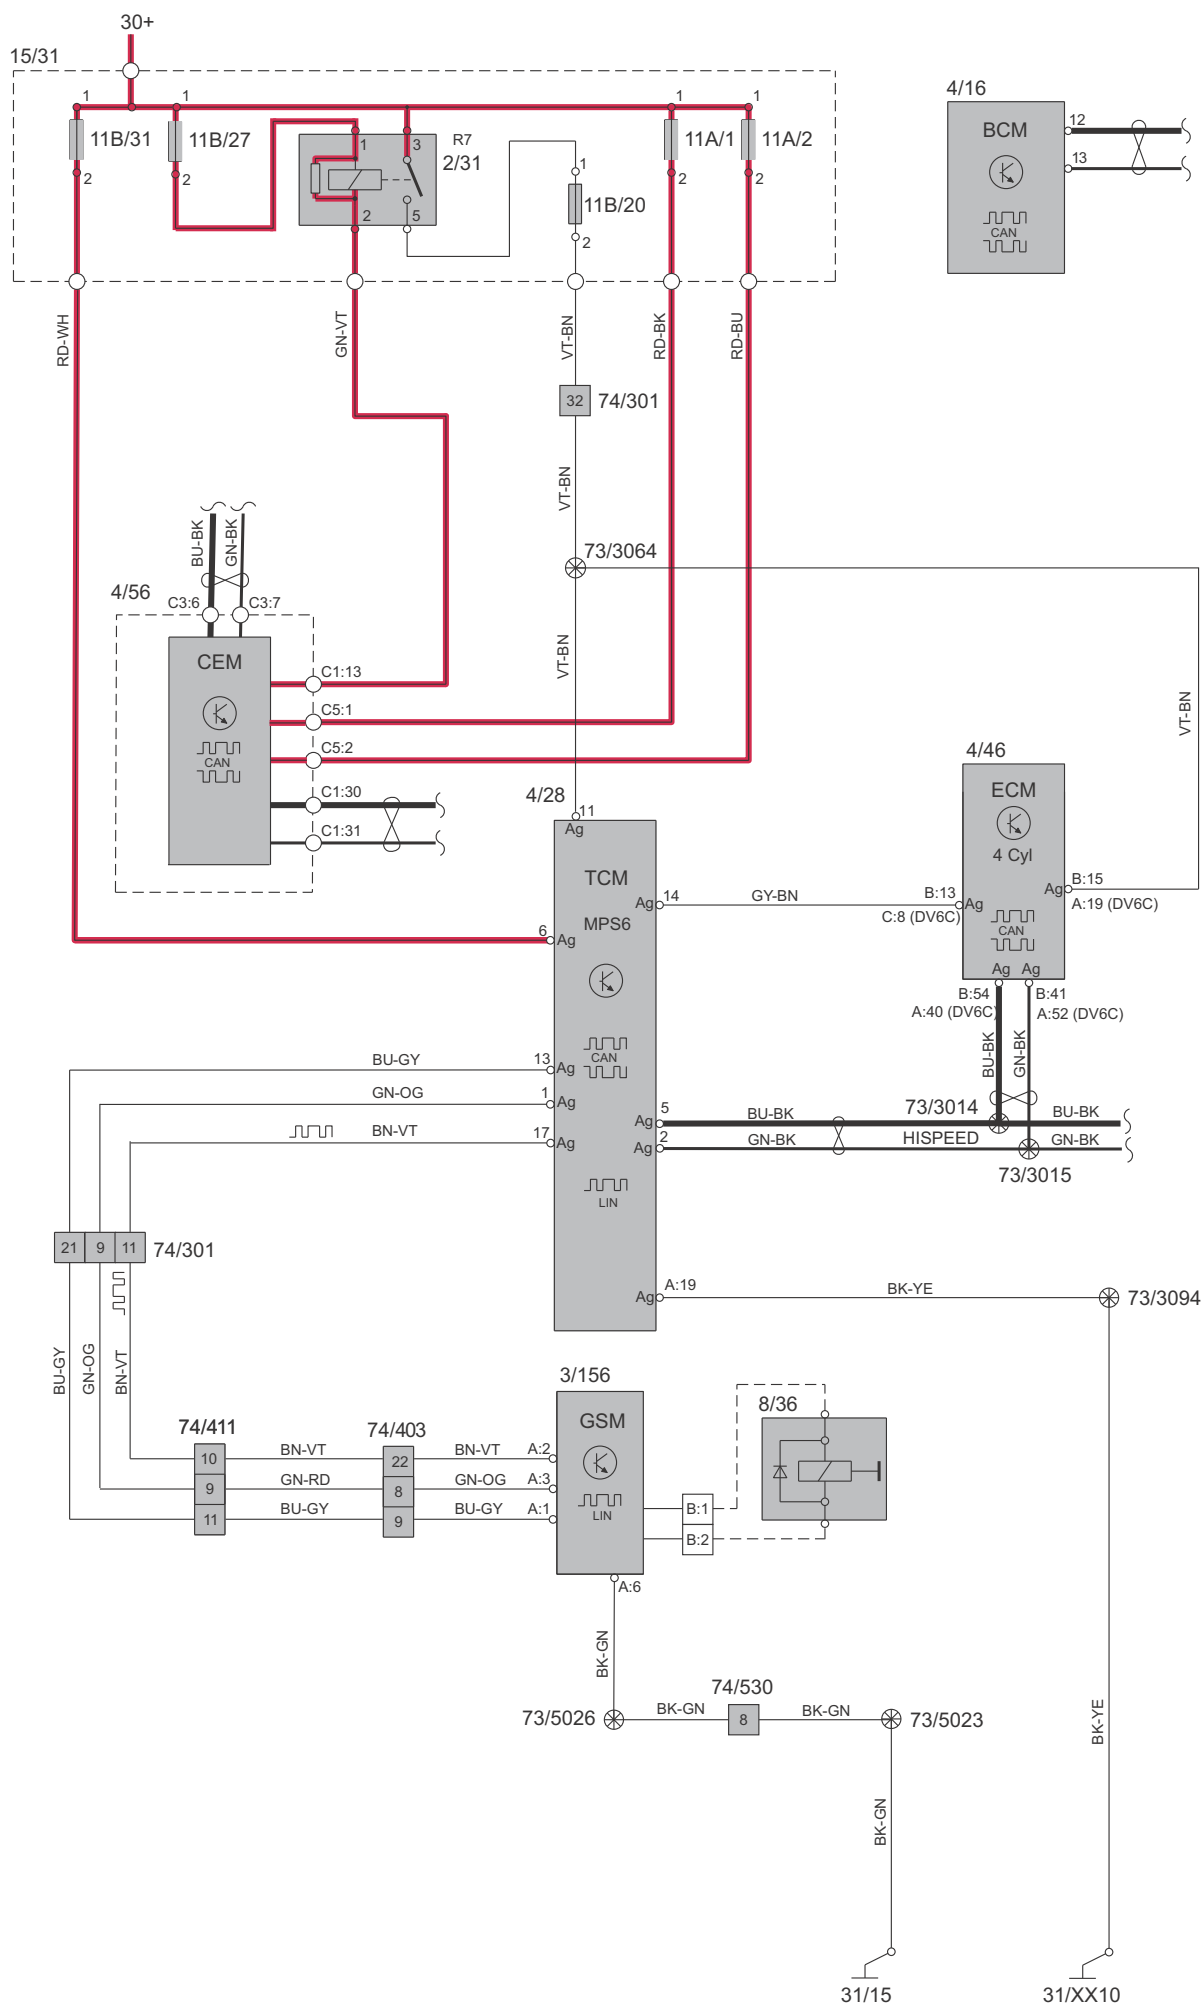


Group 43 Transmission
Differential Electronic Module (DEM)

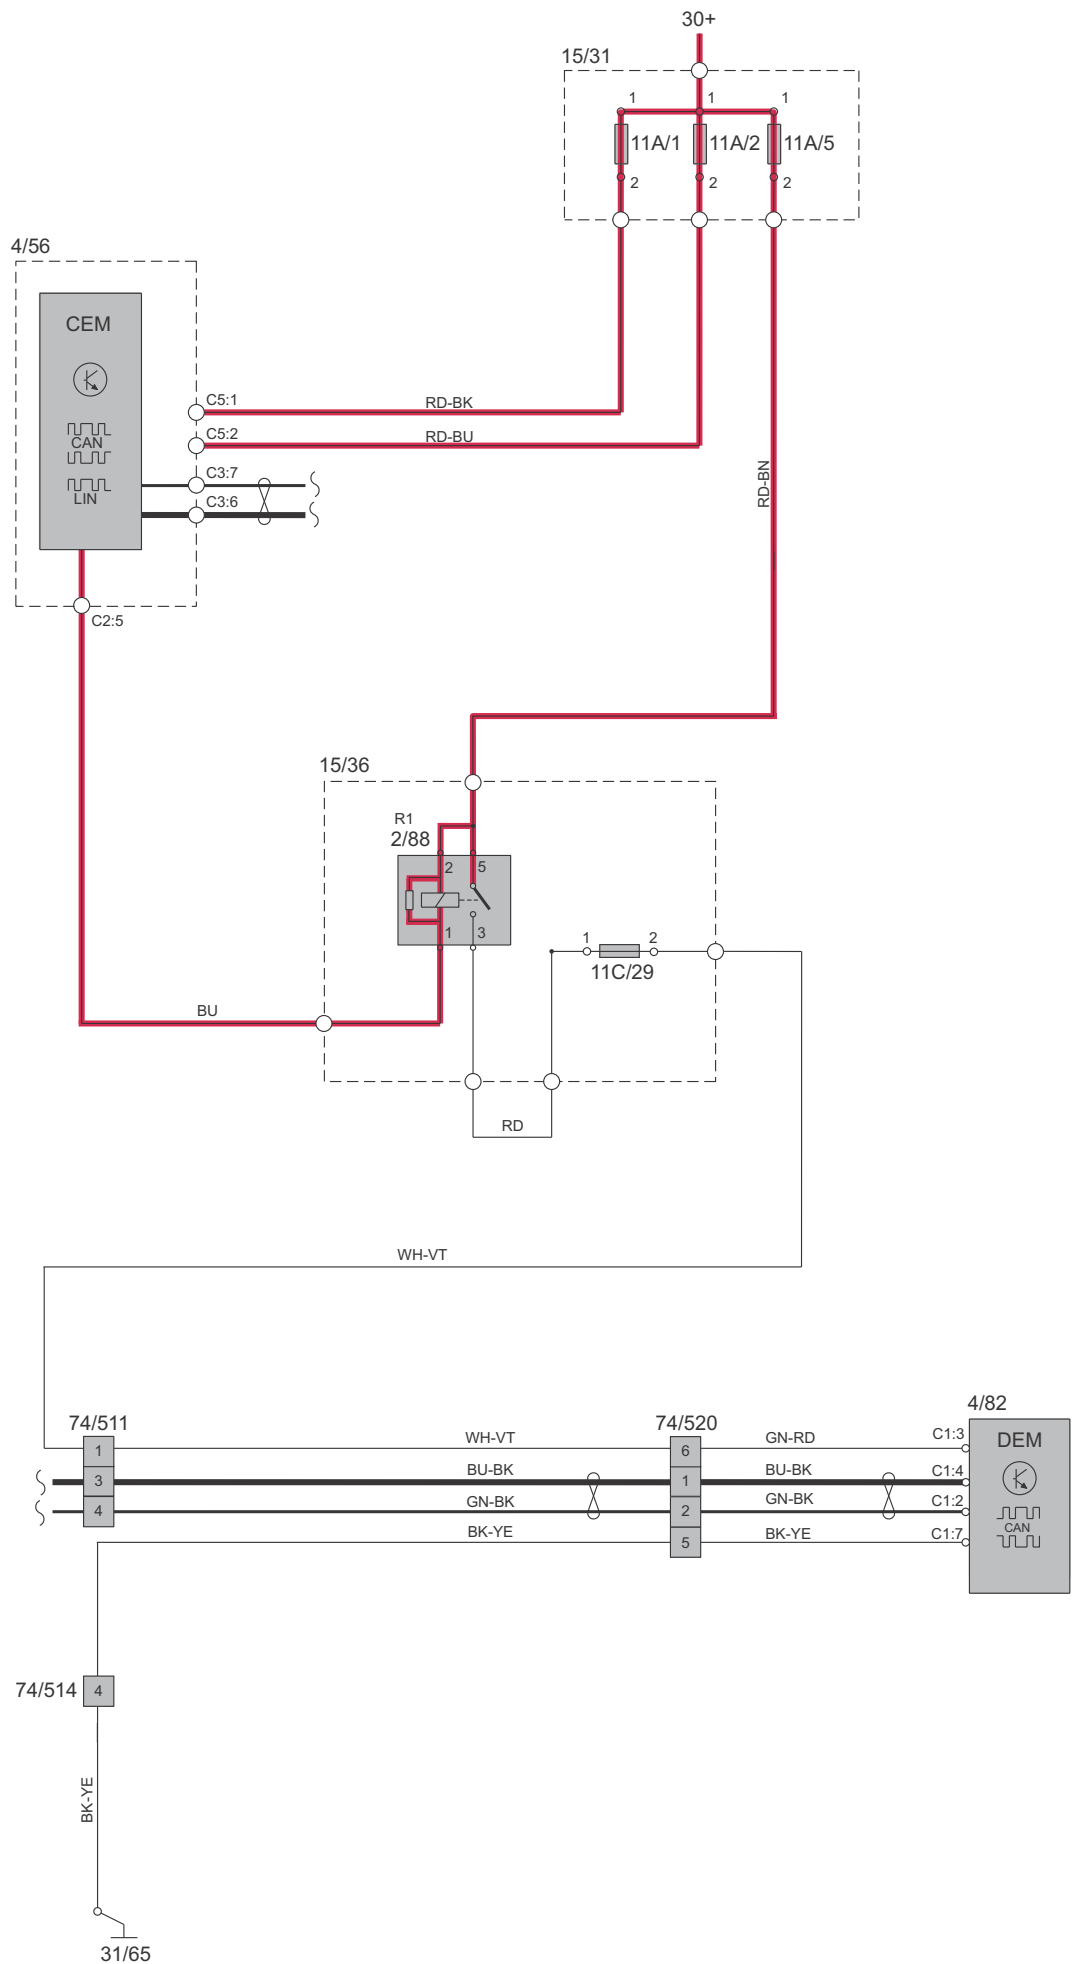


Group 55 Parking brake

Electric parking brake

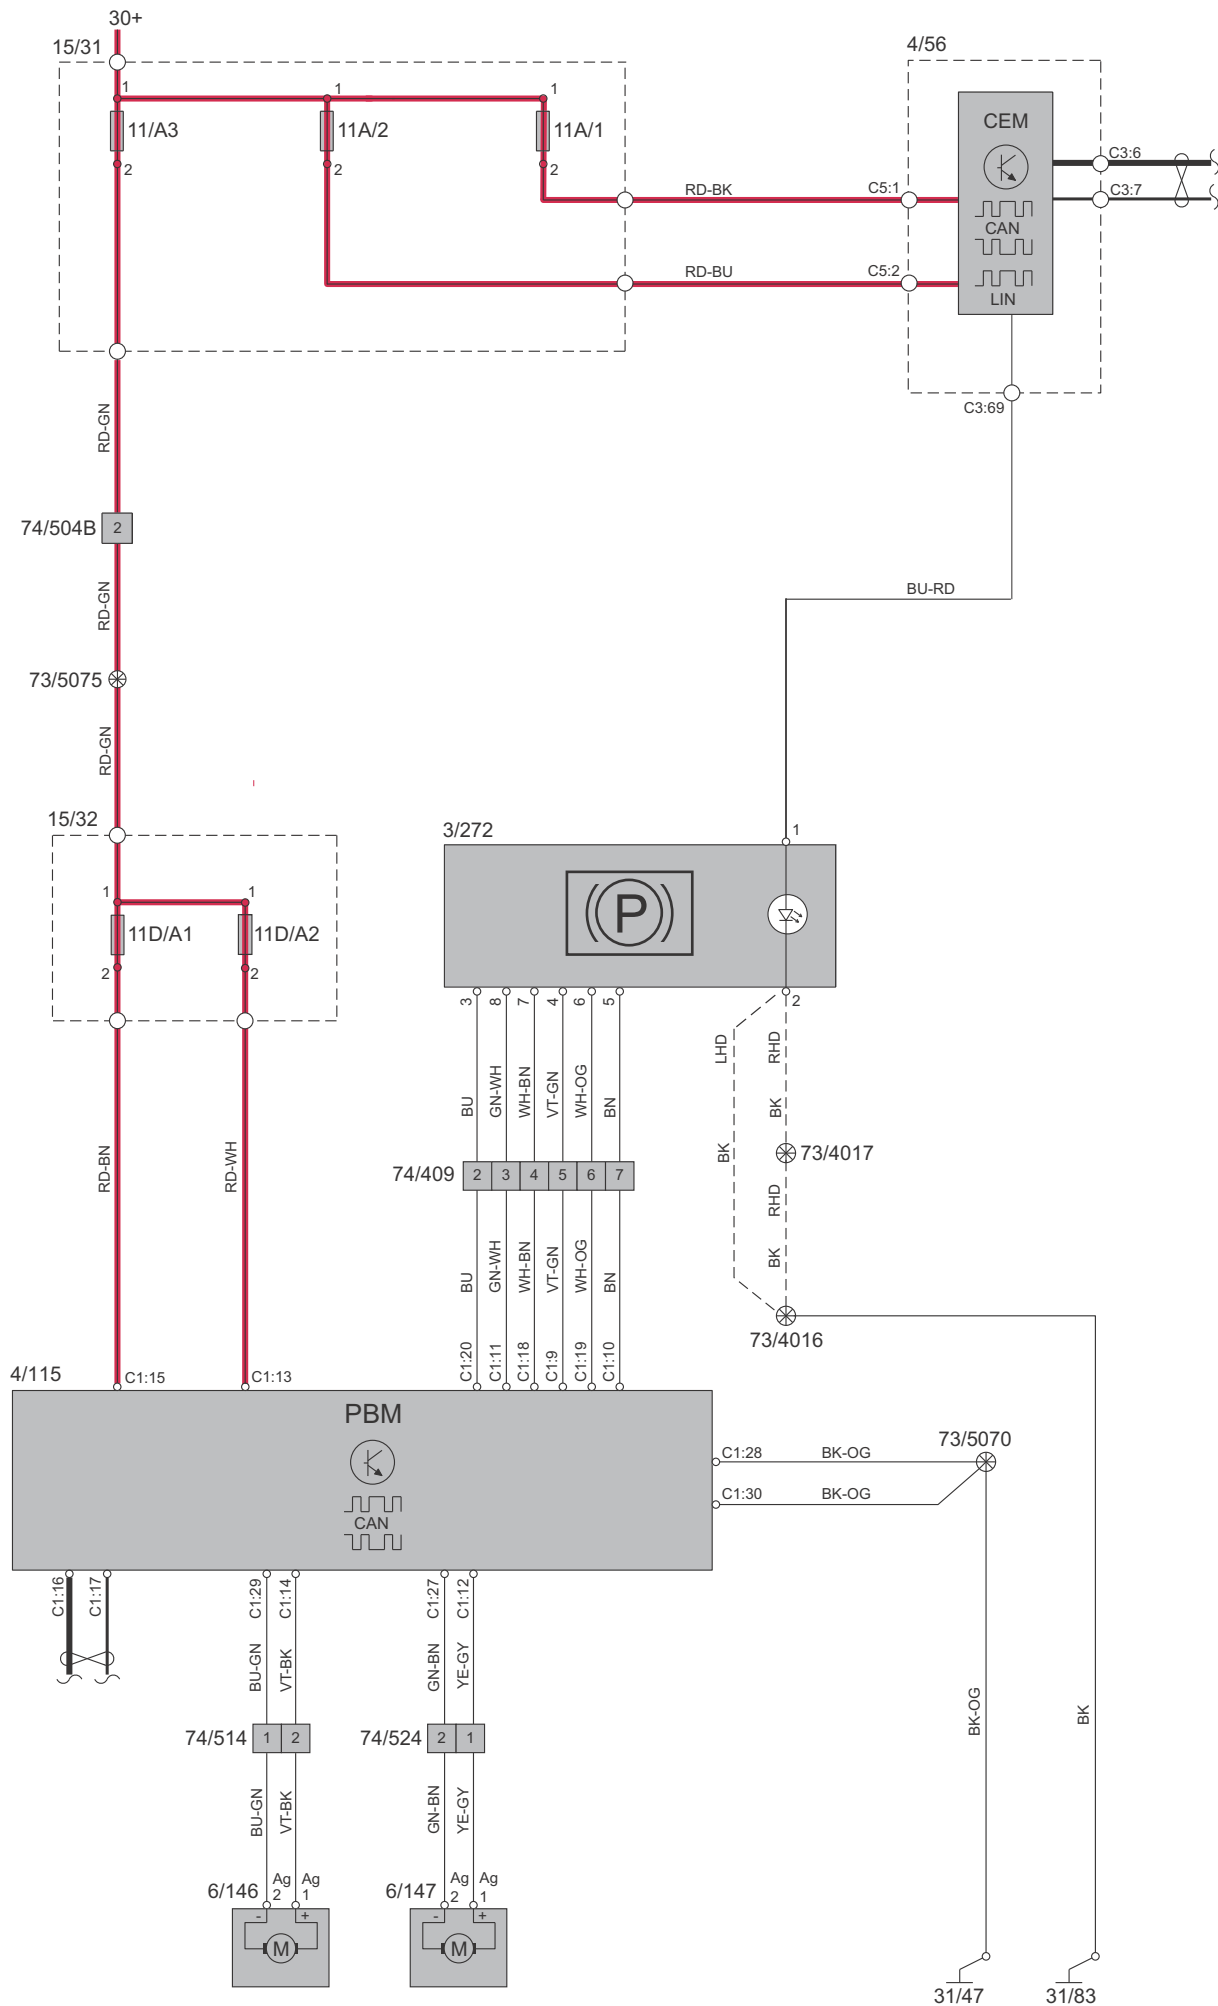


Group 59 Brake system

Brake control system & DSTC

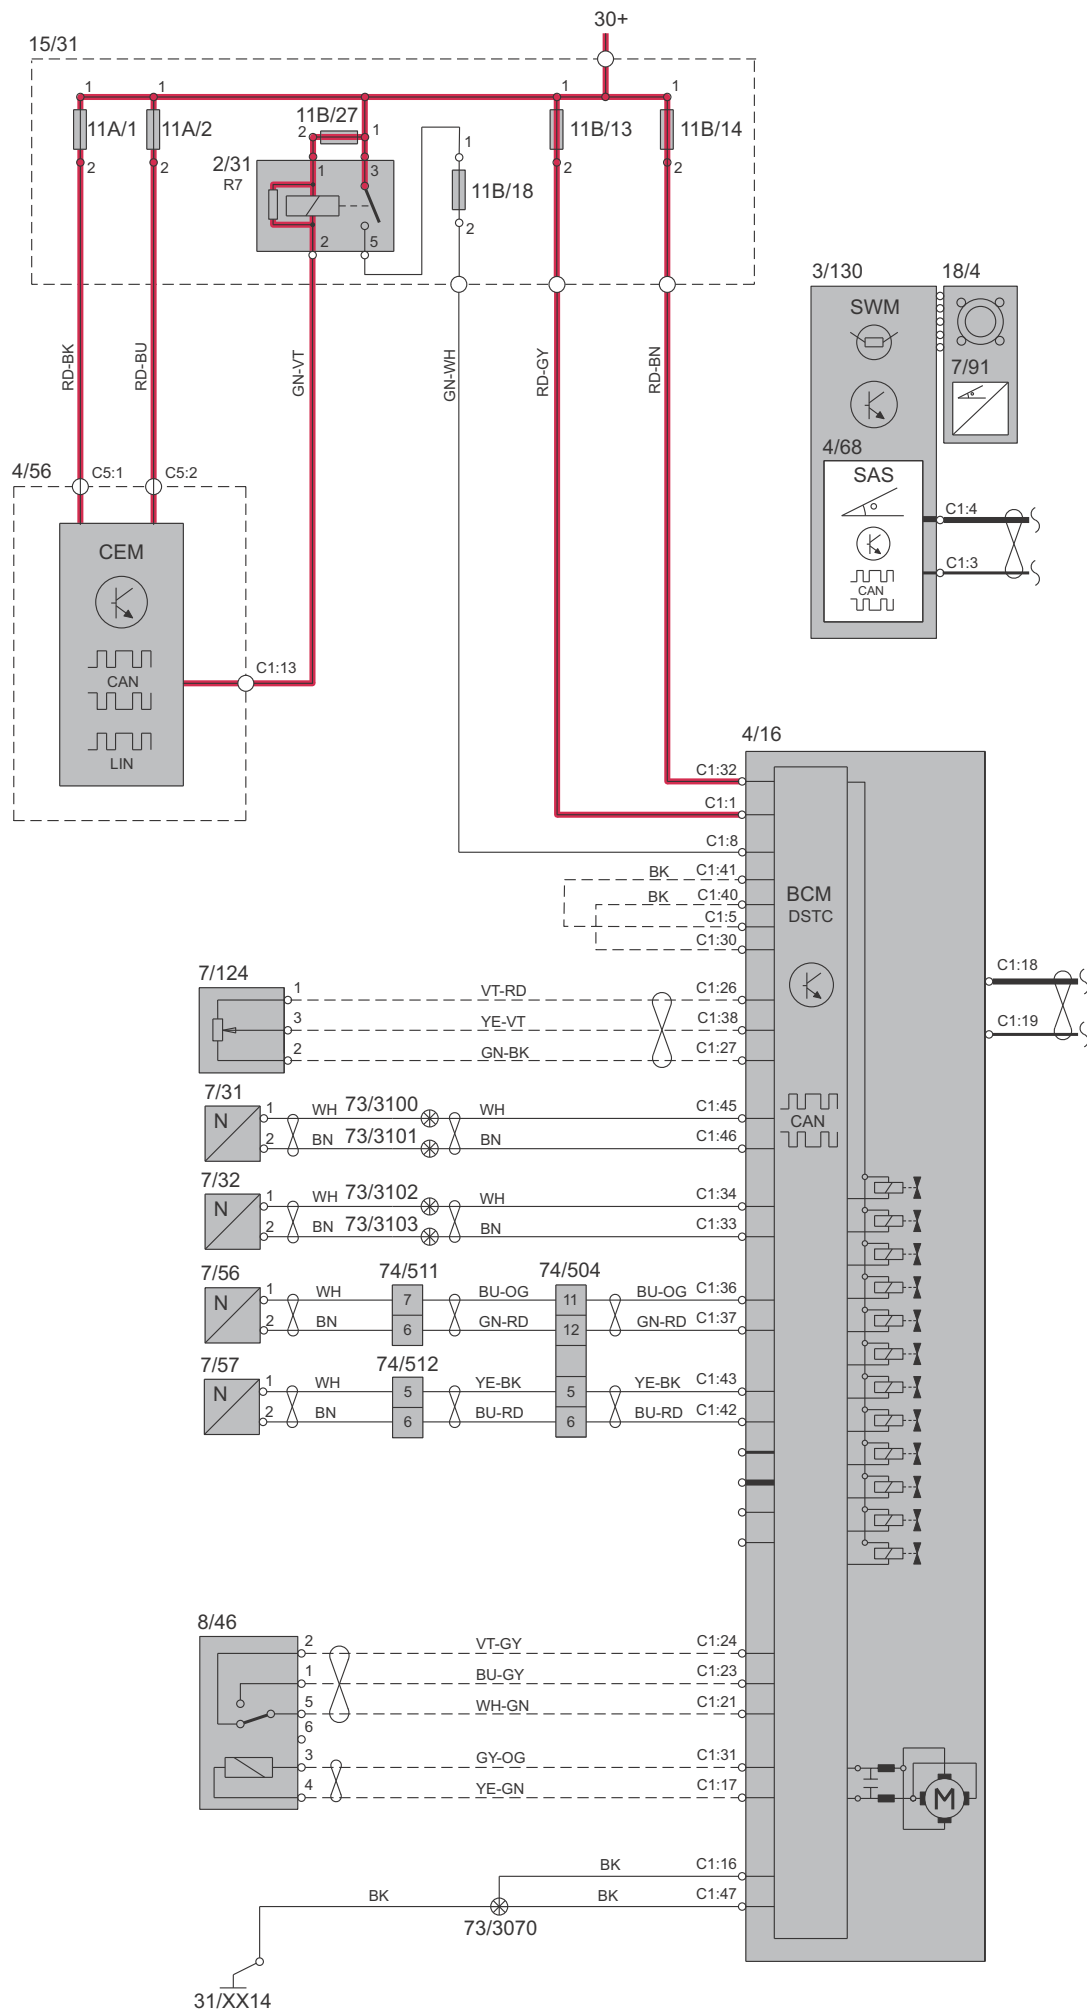


I011115

Group 64 Steering Speed dependent power steering

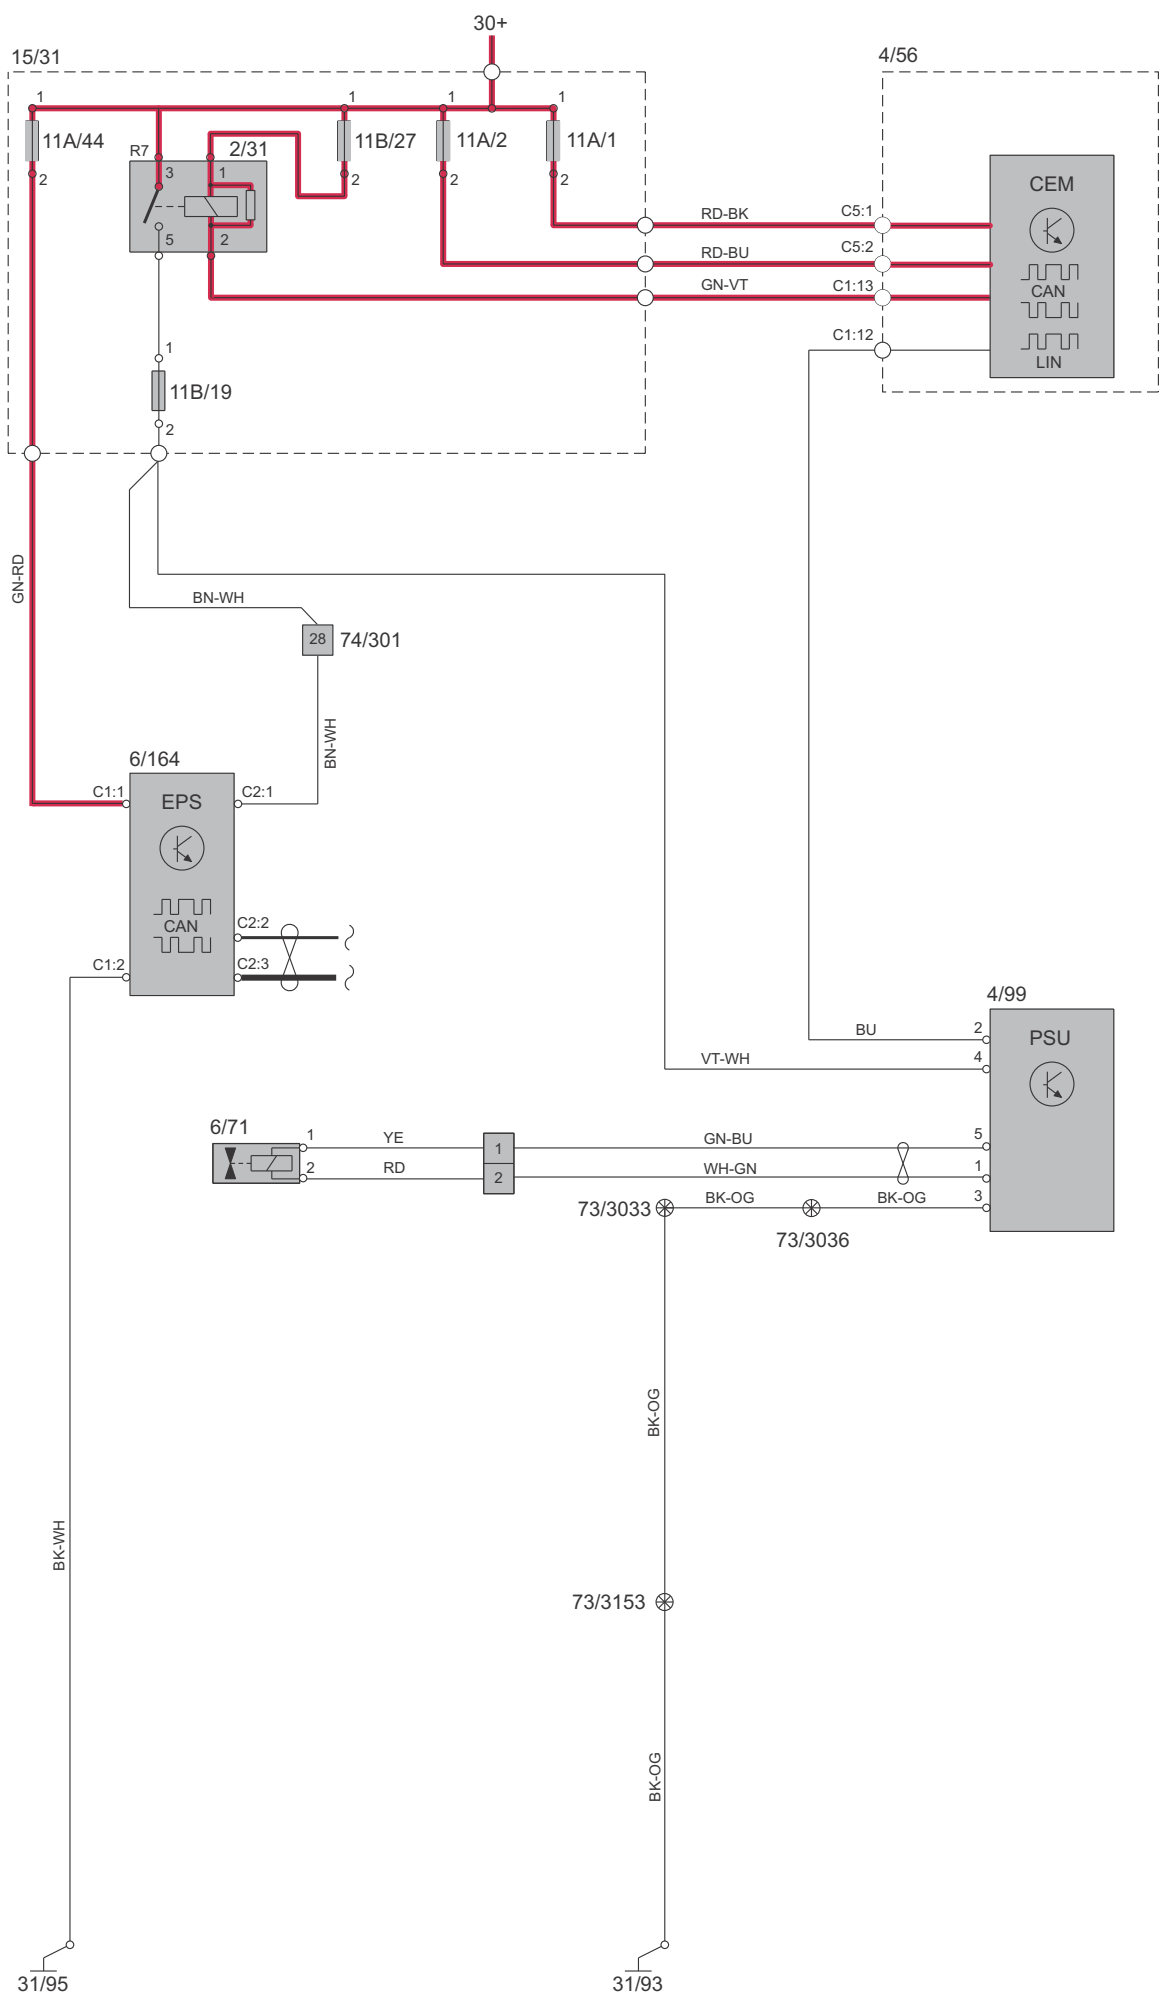


N00001

Group 76 Shock absorbers Four-C

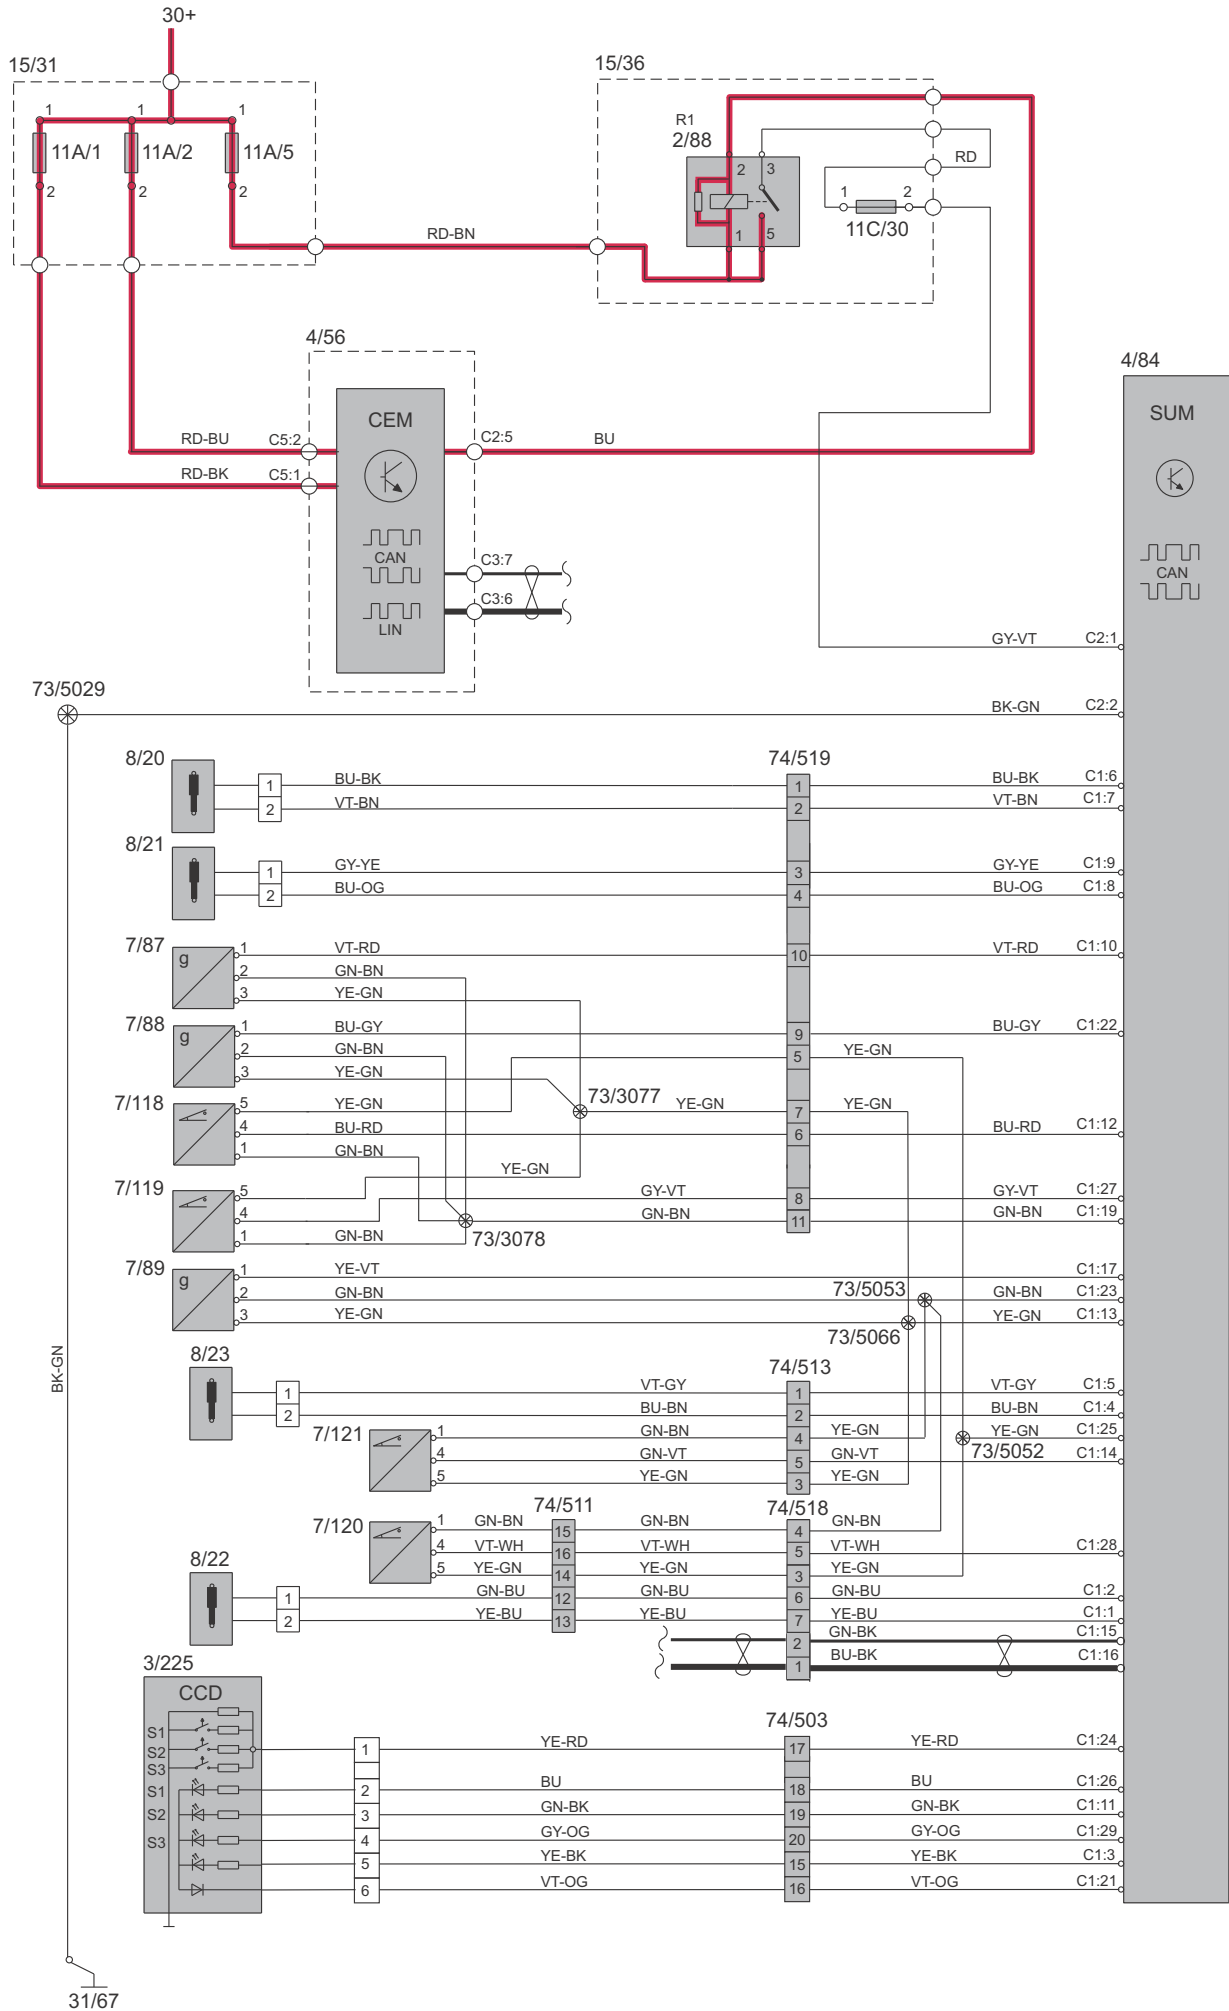


Group 83 Doors and openings

Central locking front doors LHD

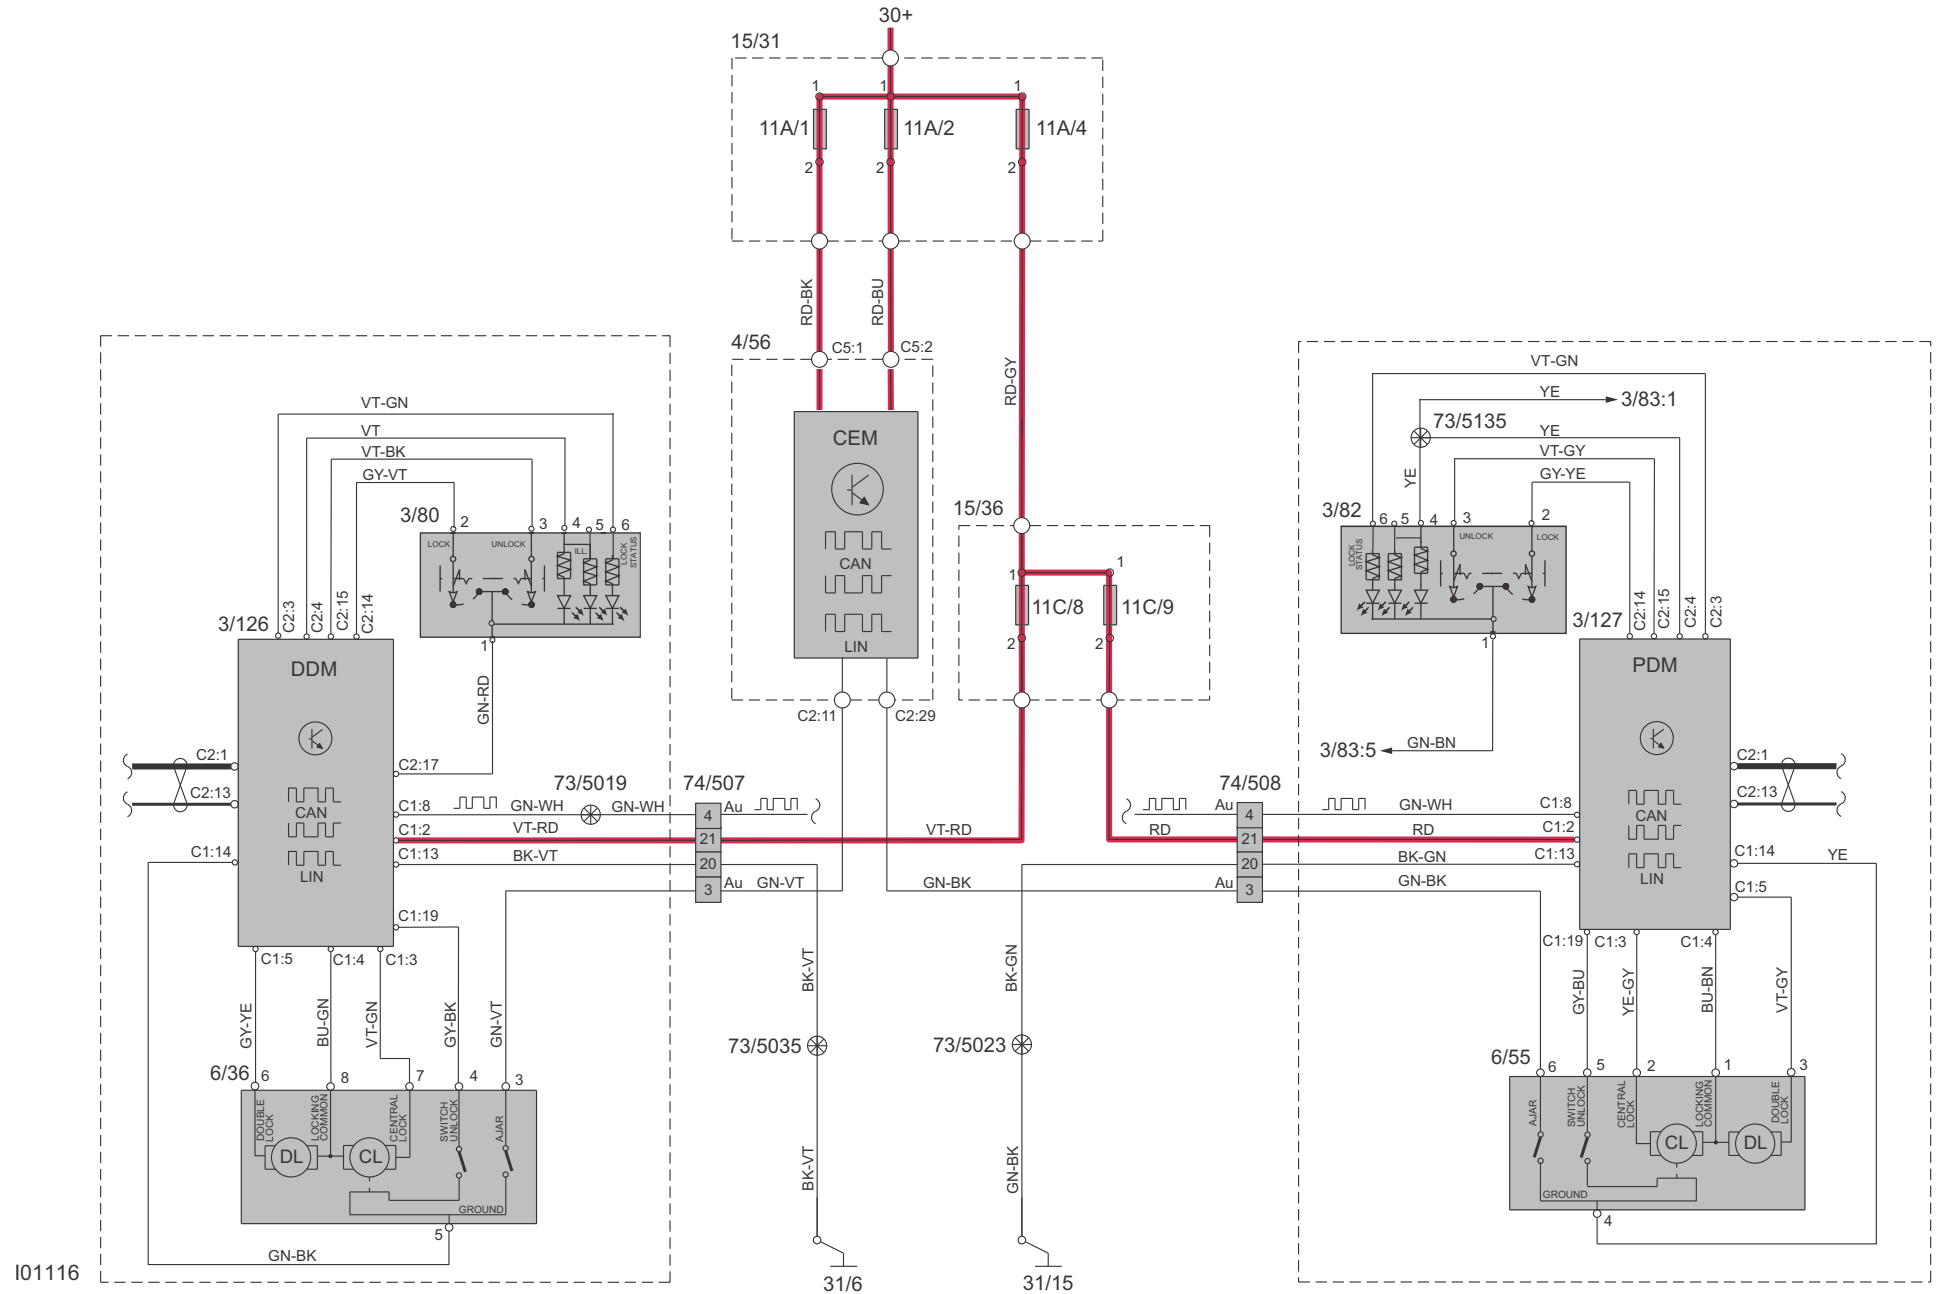


Group 83 Doors and openings

Central locking front doors RHD

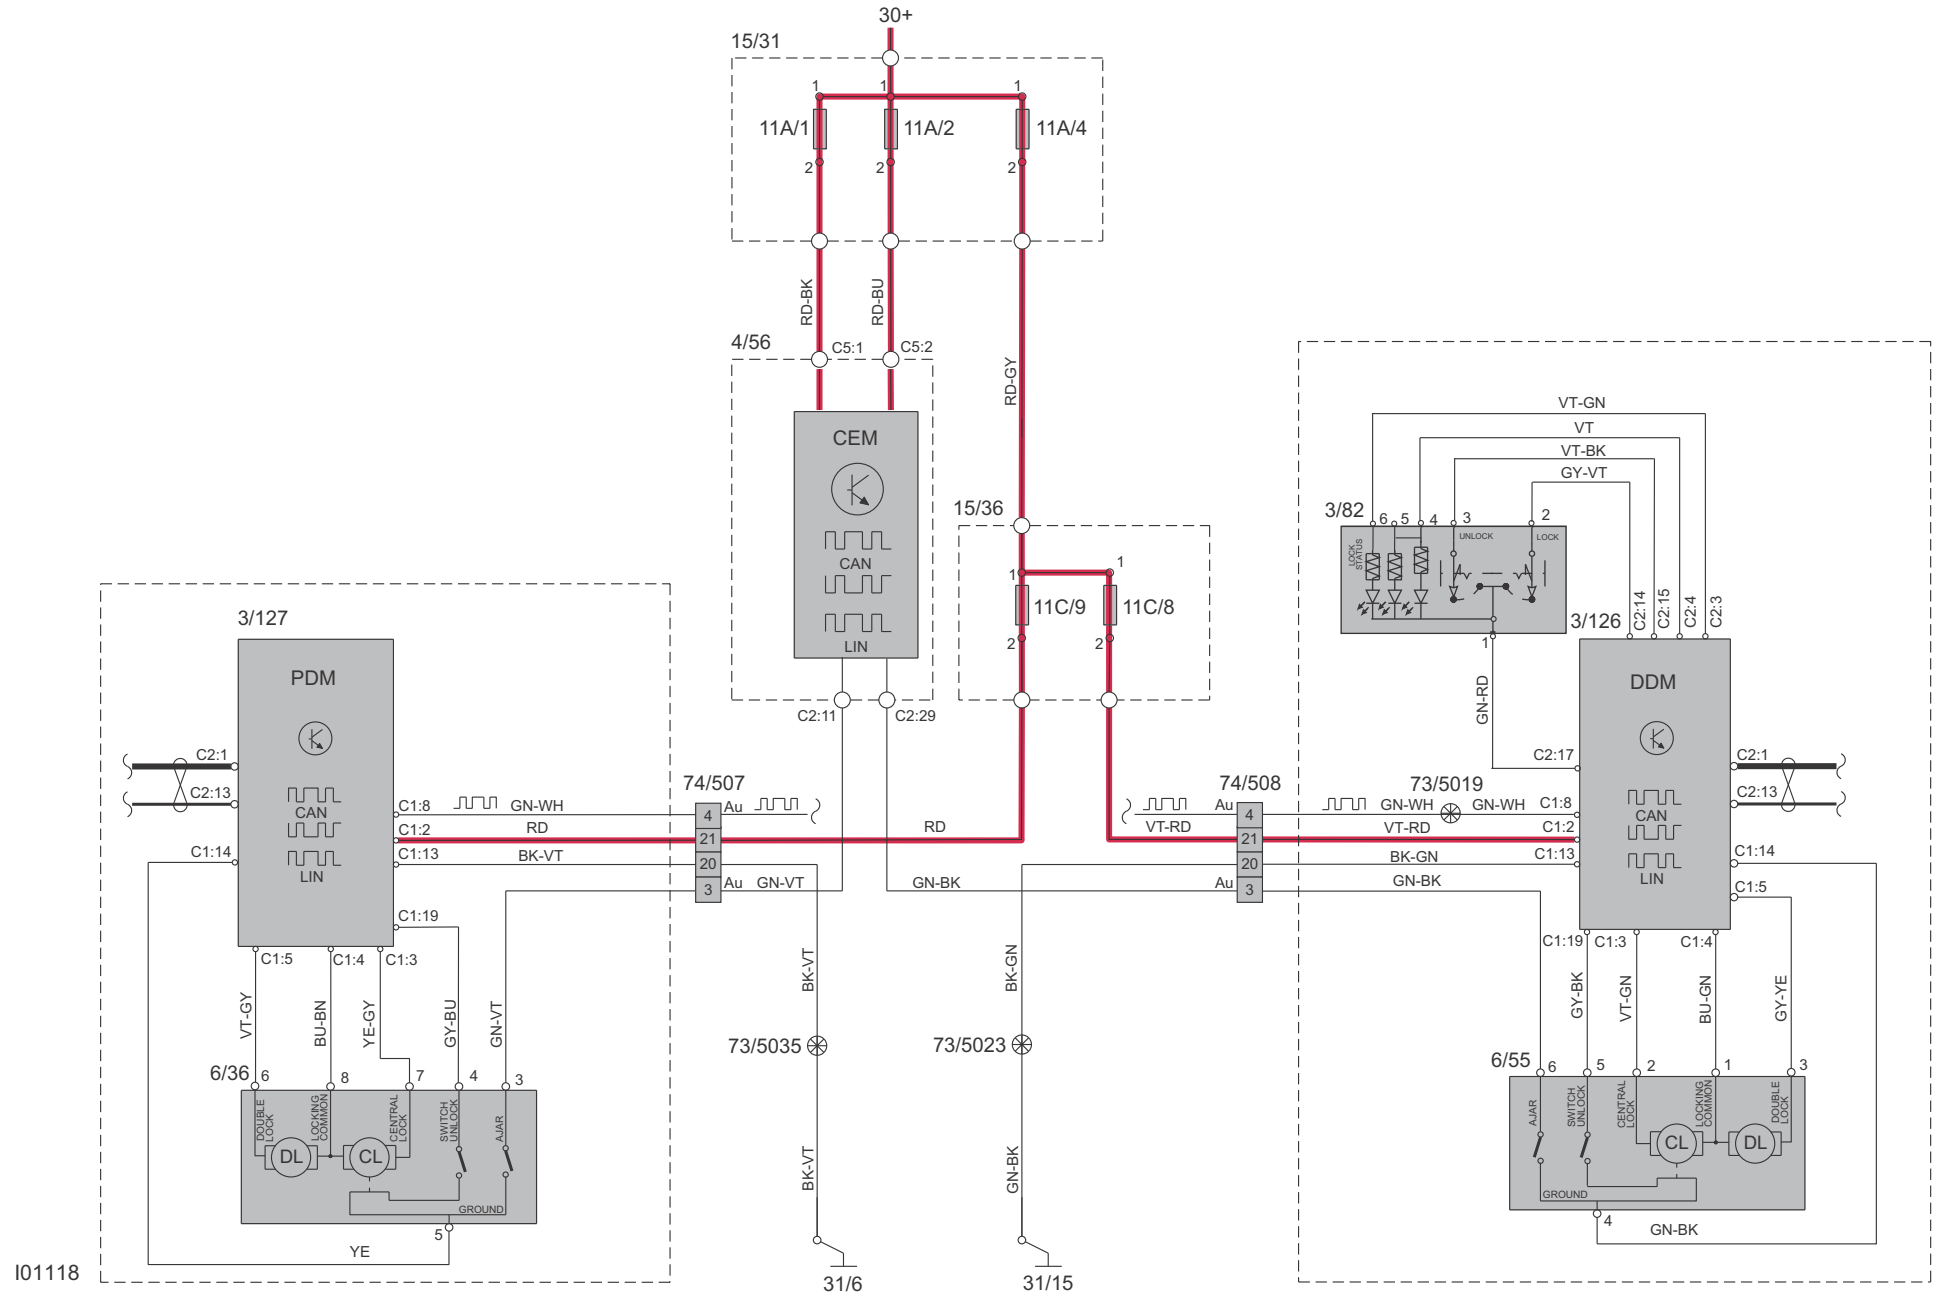


Group 83 Doors and openings Central locking rear doors

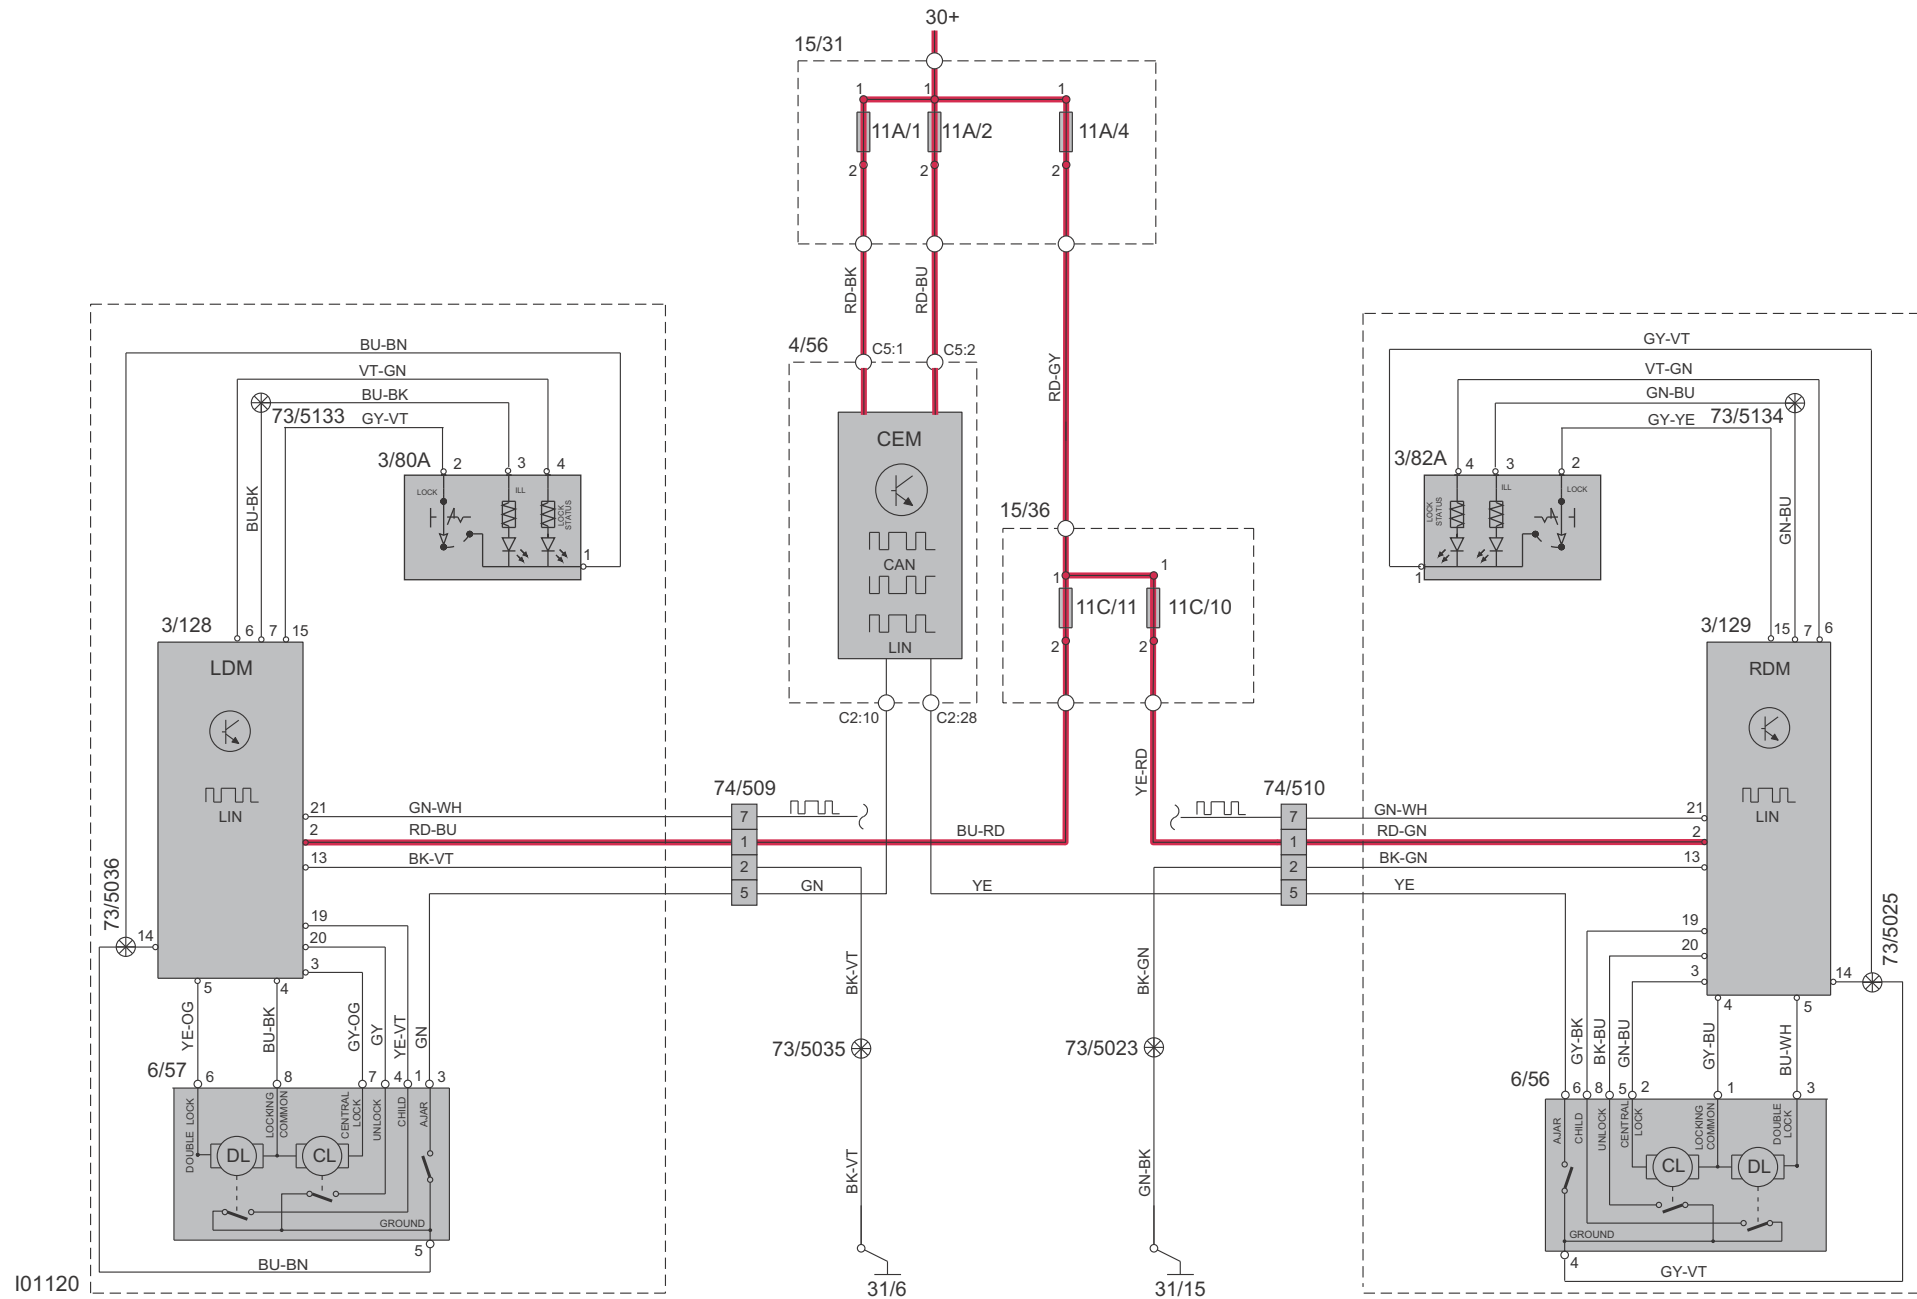


Group 83 Doors and openings

Central locking tailgate S60

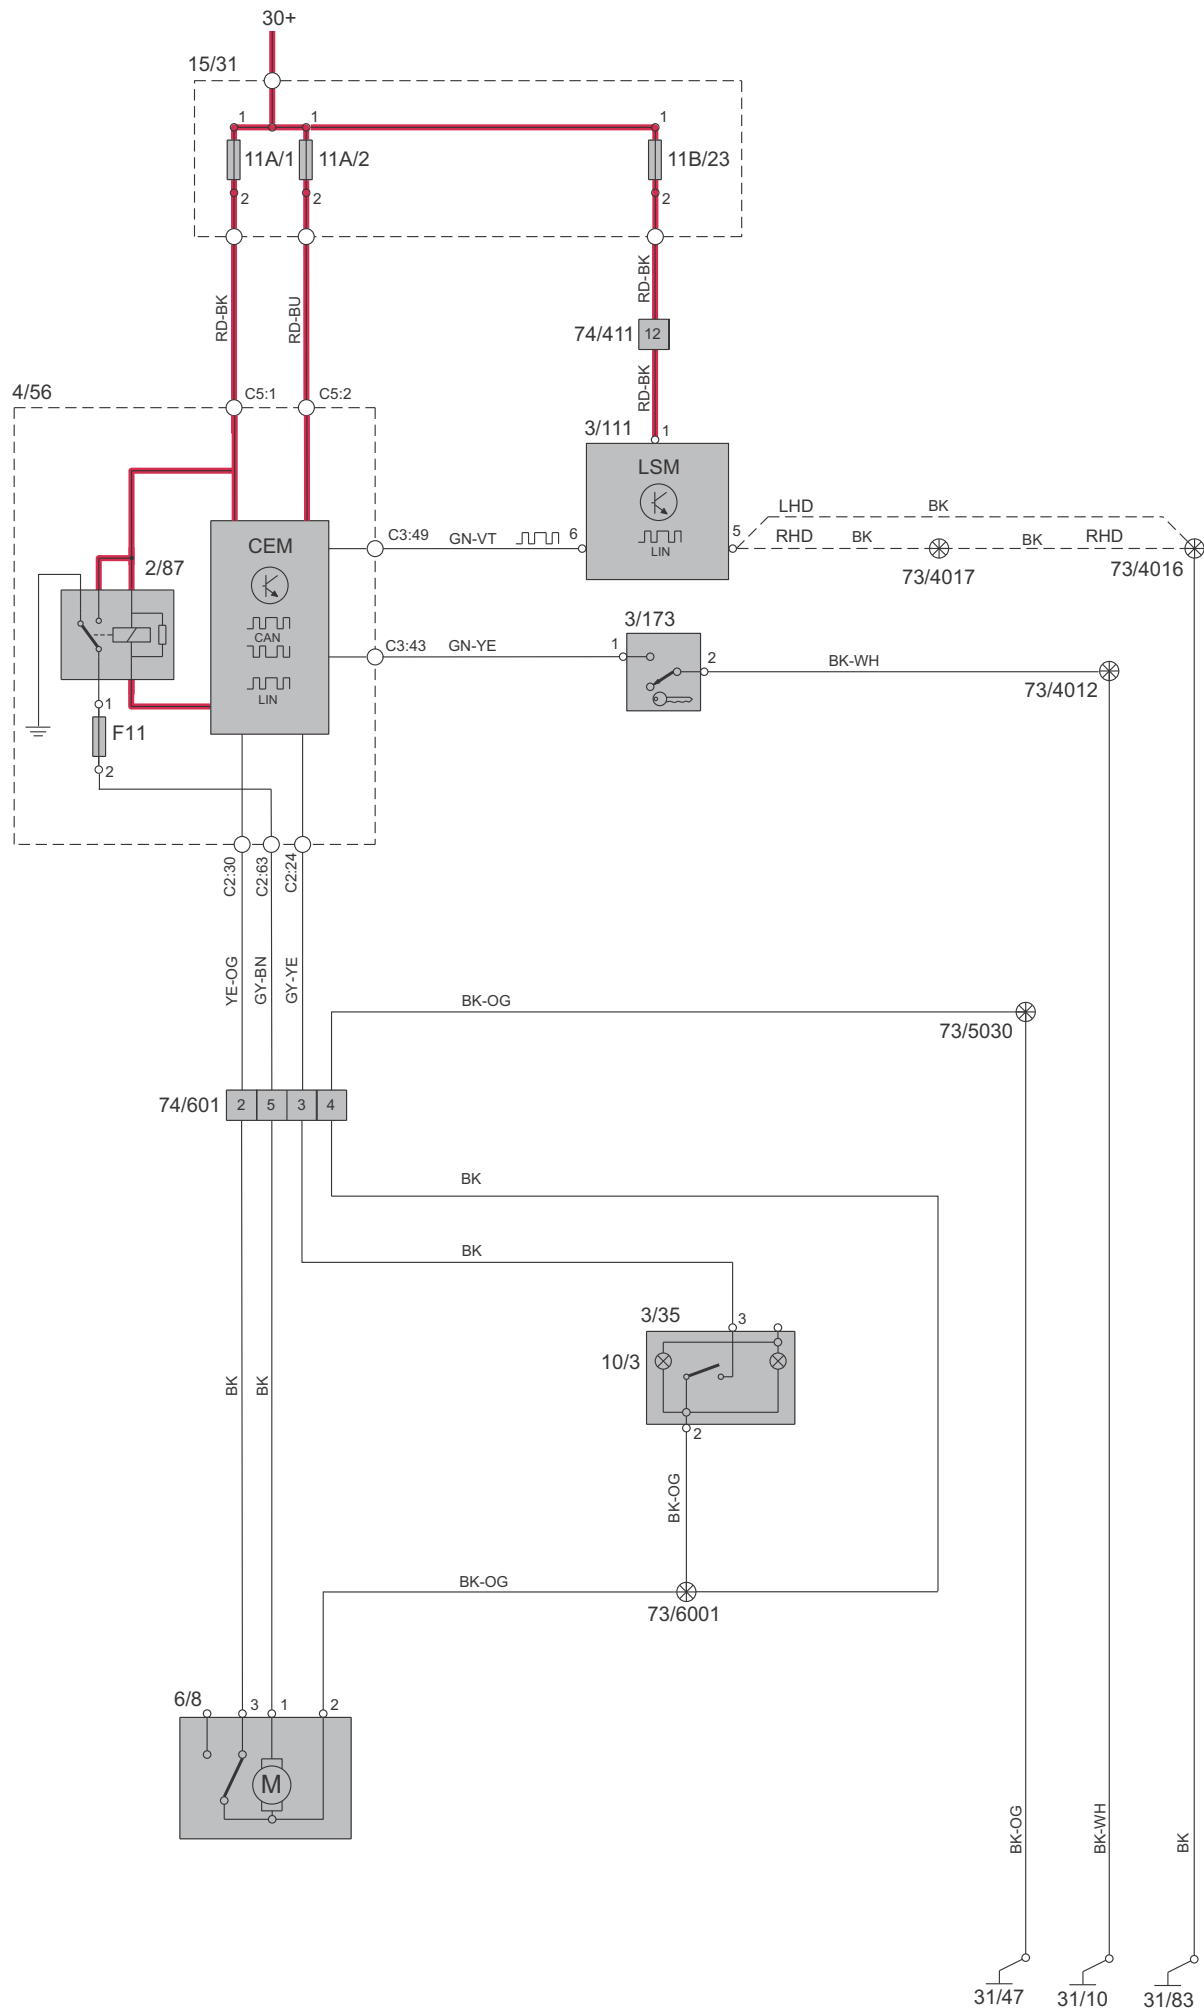


Group 83 Doors and openings

Central locking tailgate V60

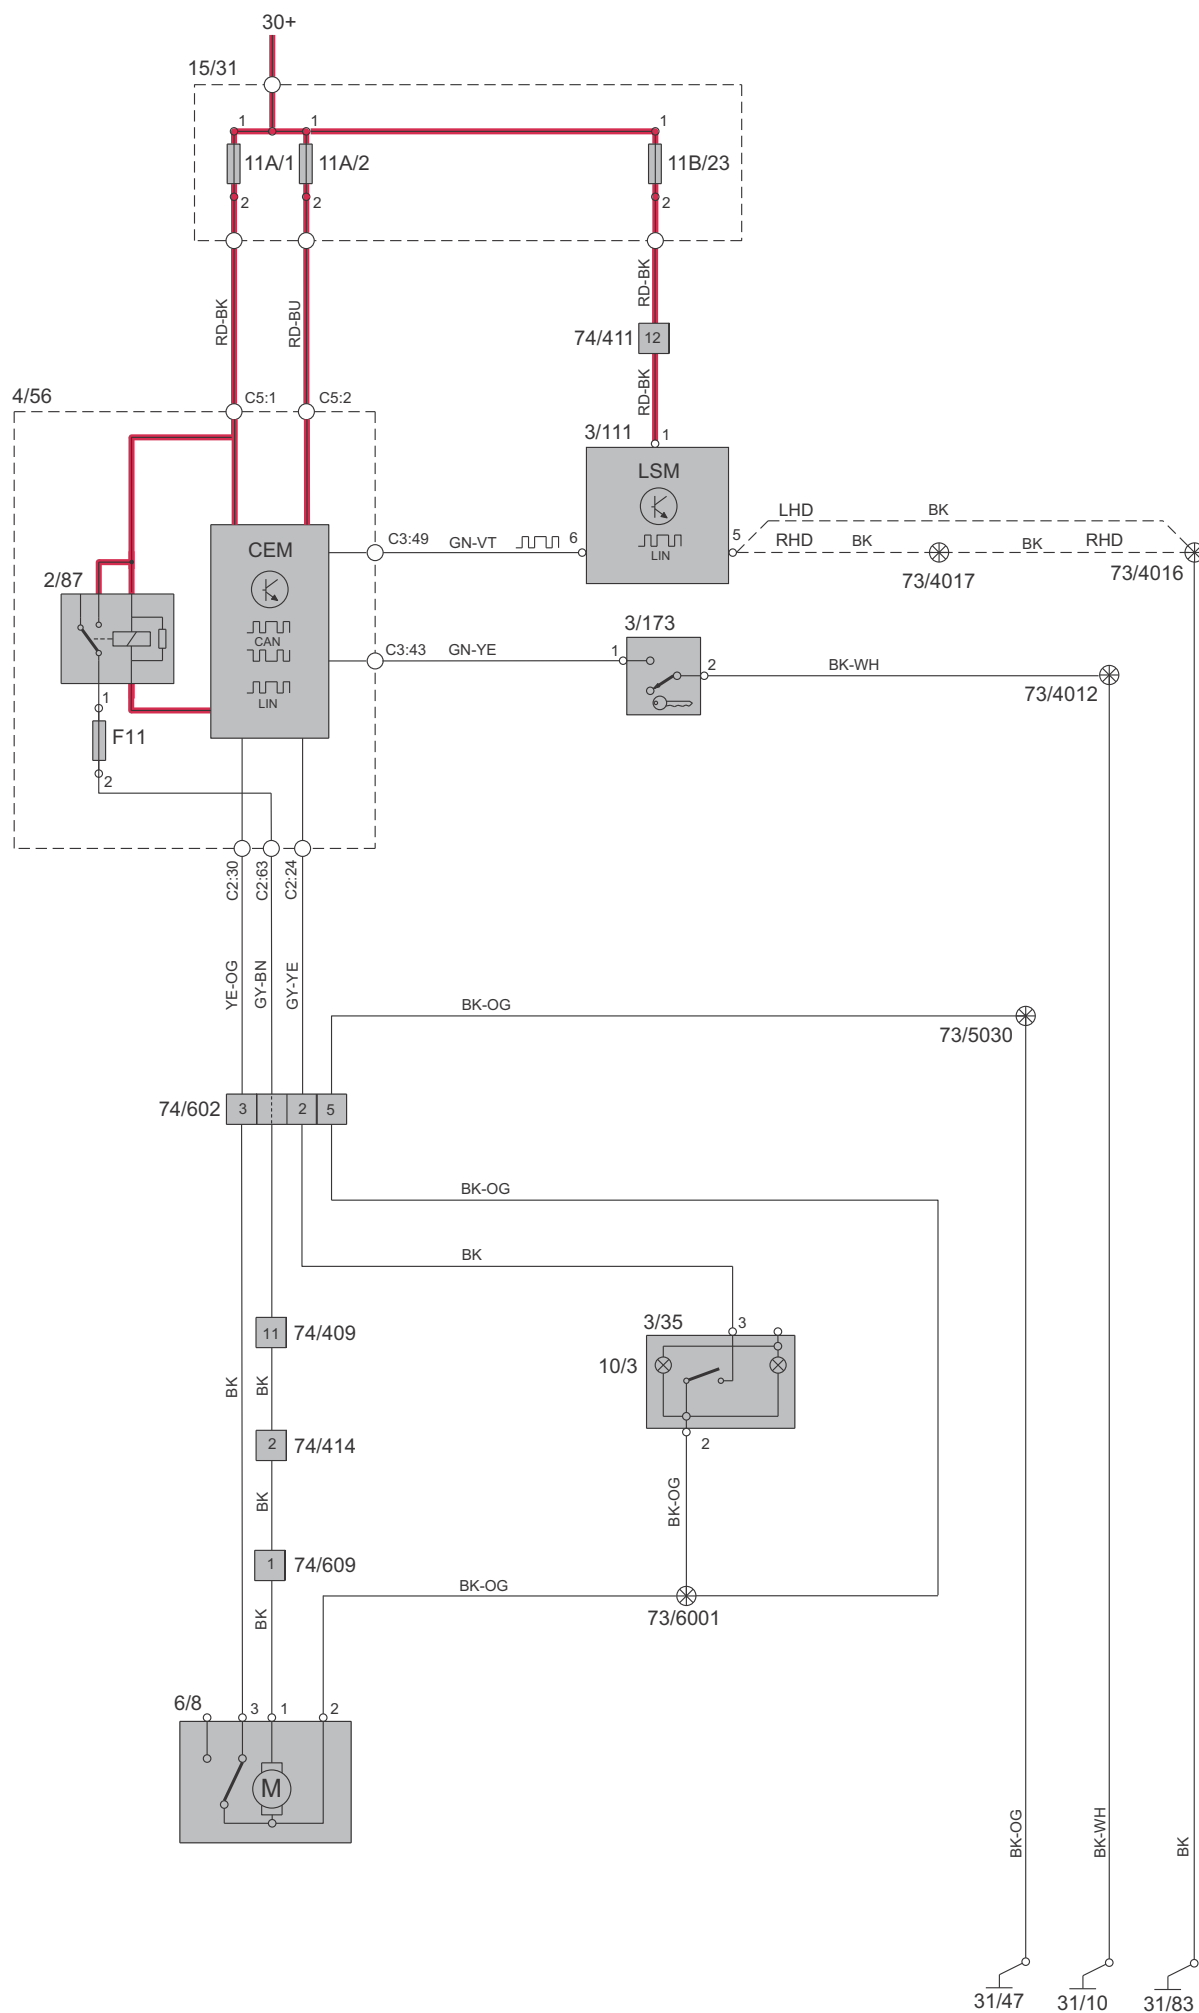


Group 83 Doors and openings
Central locking fuel filler flap

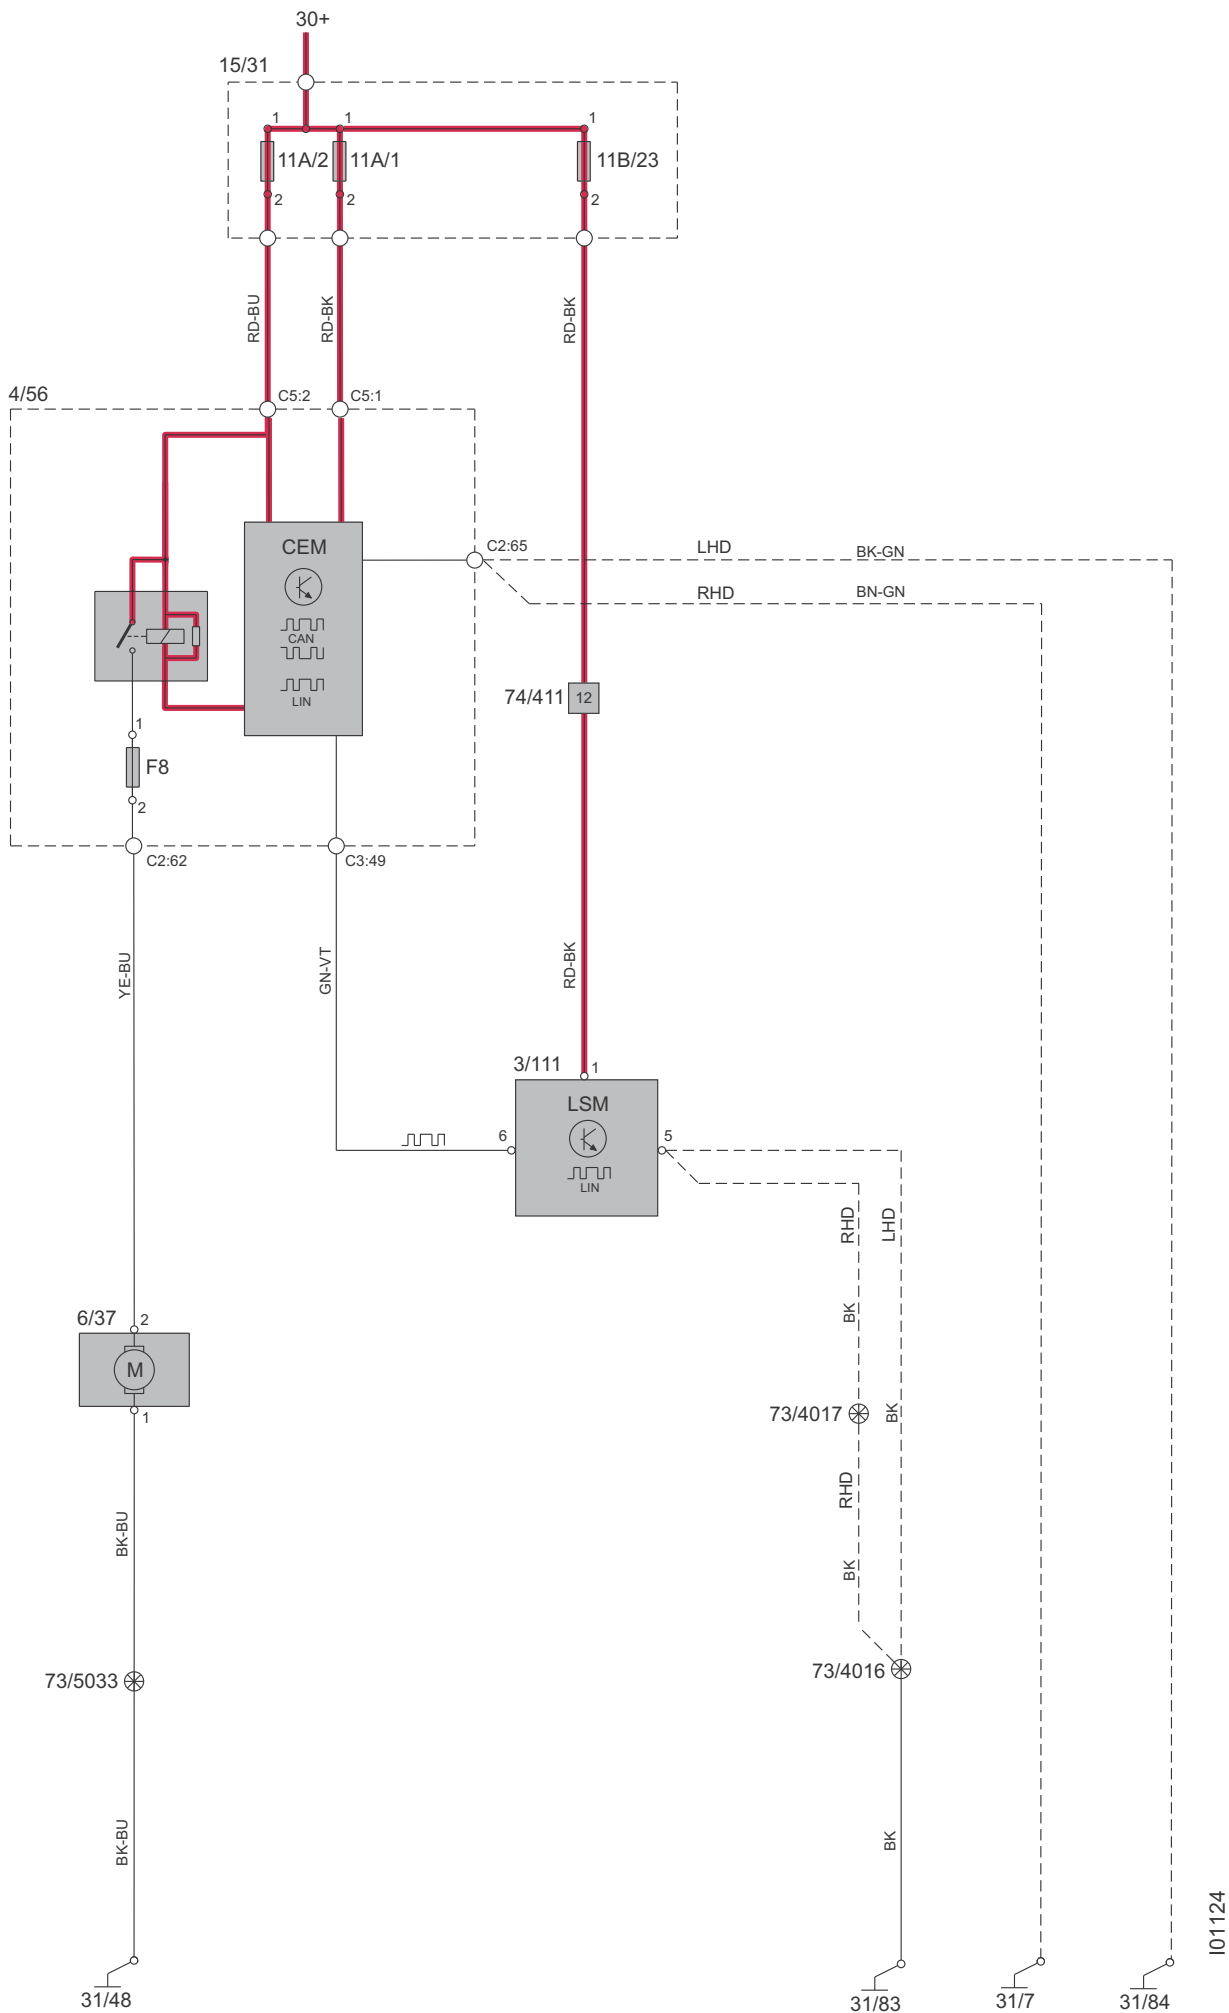


Group 83 Doors and openings

Signal receiver central locking

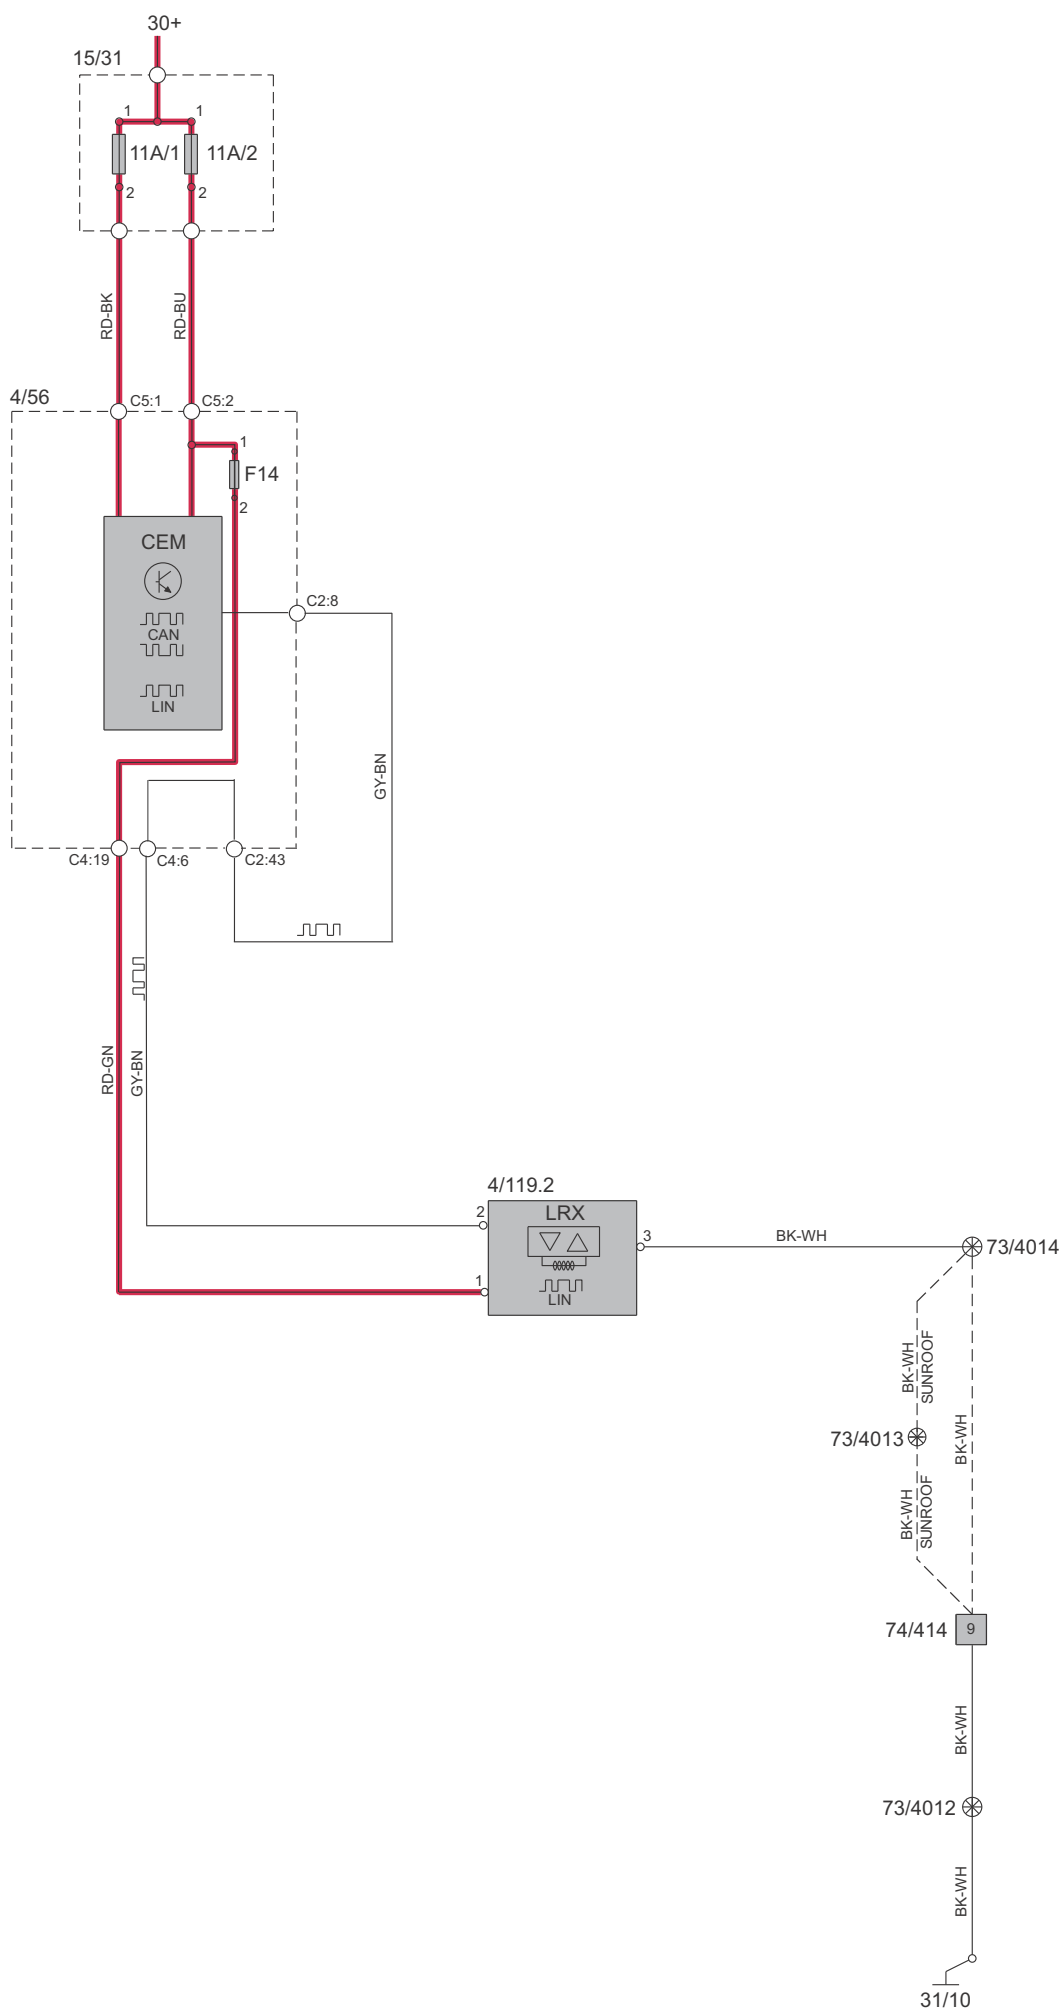


Group 83 Doors and openings

Power windows front doors LHD

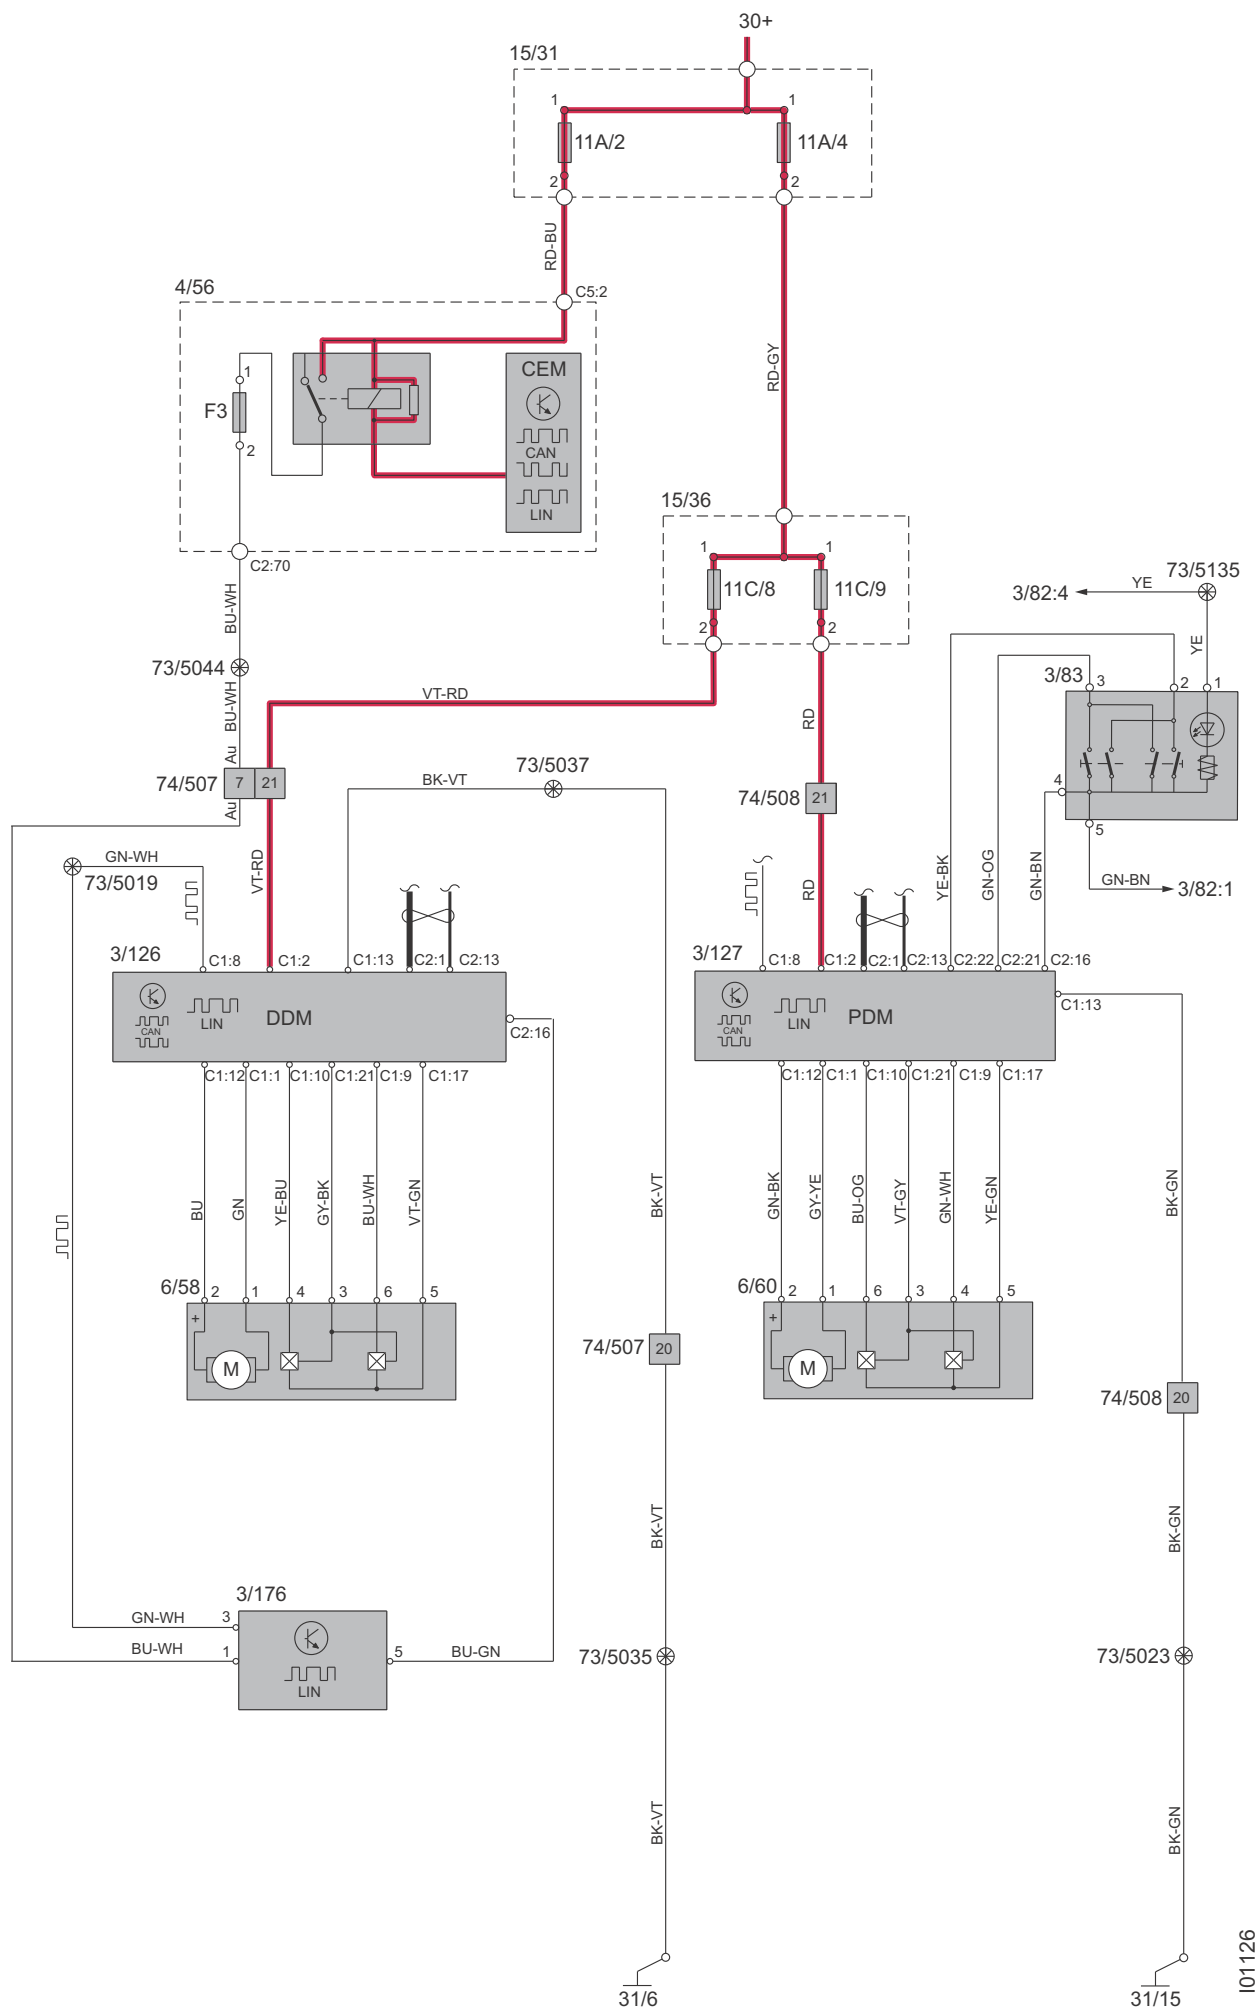


Group 83 Doors and openings

Power windows front doors RHD

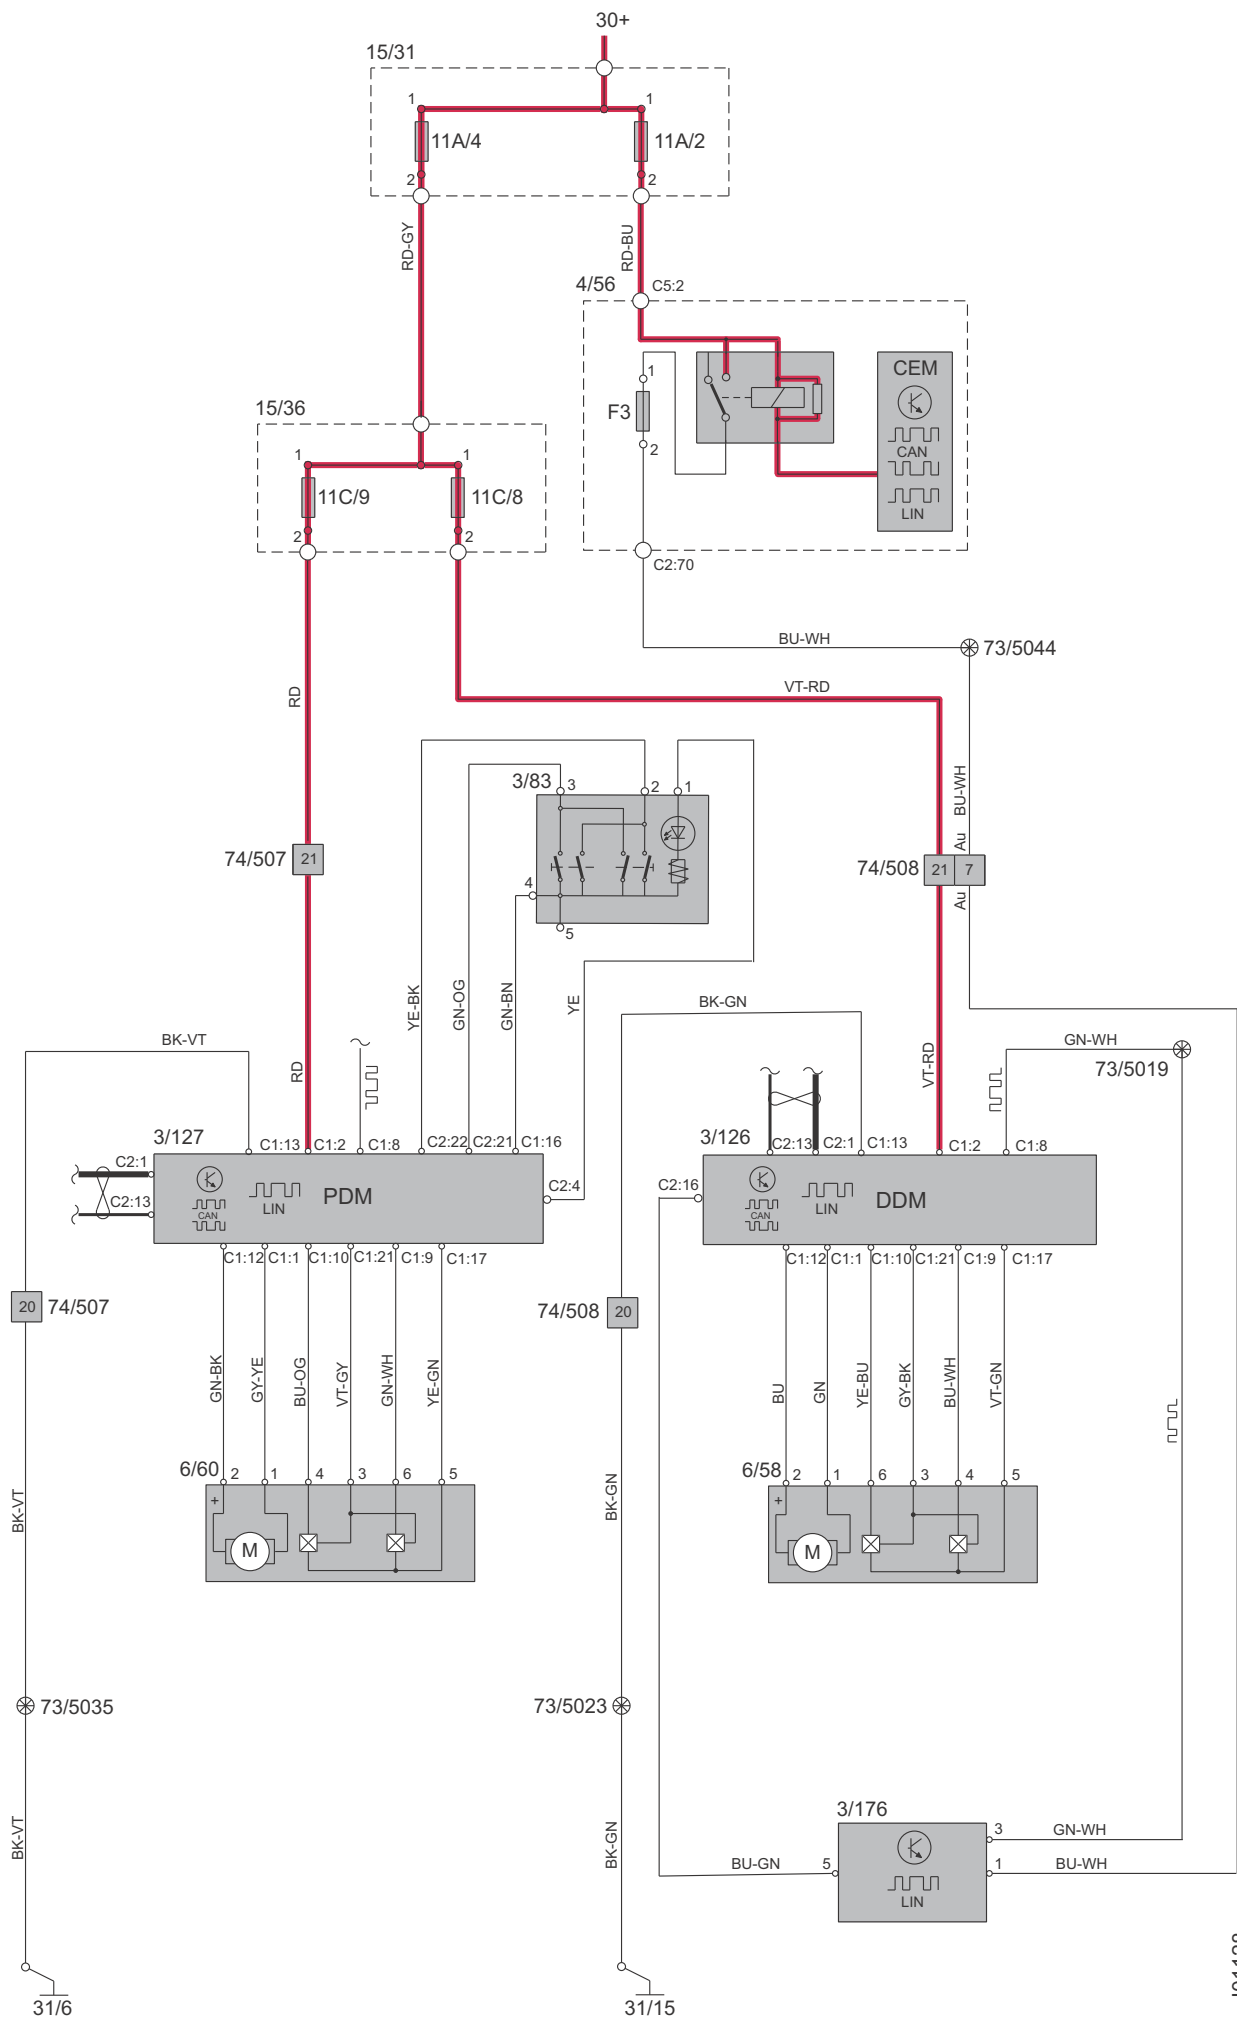


I01128

Group 83 Doors and openings Power windows rear doors

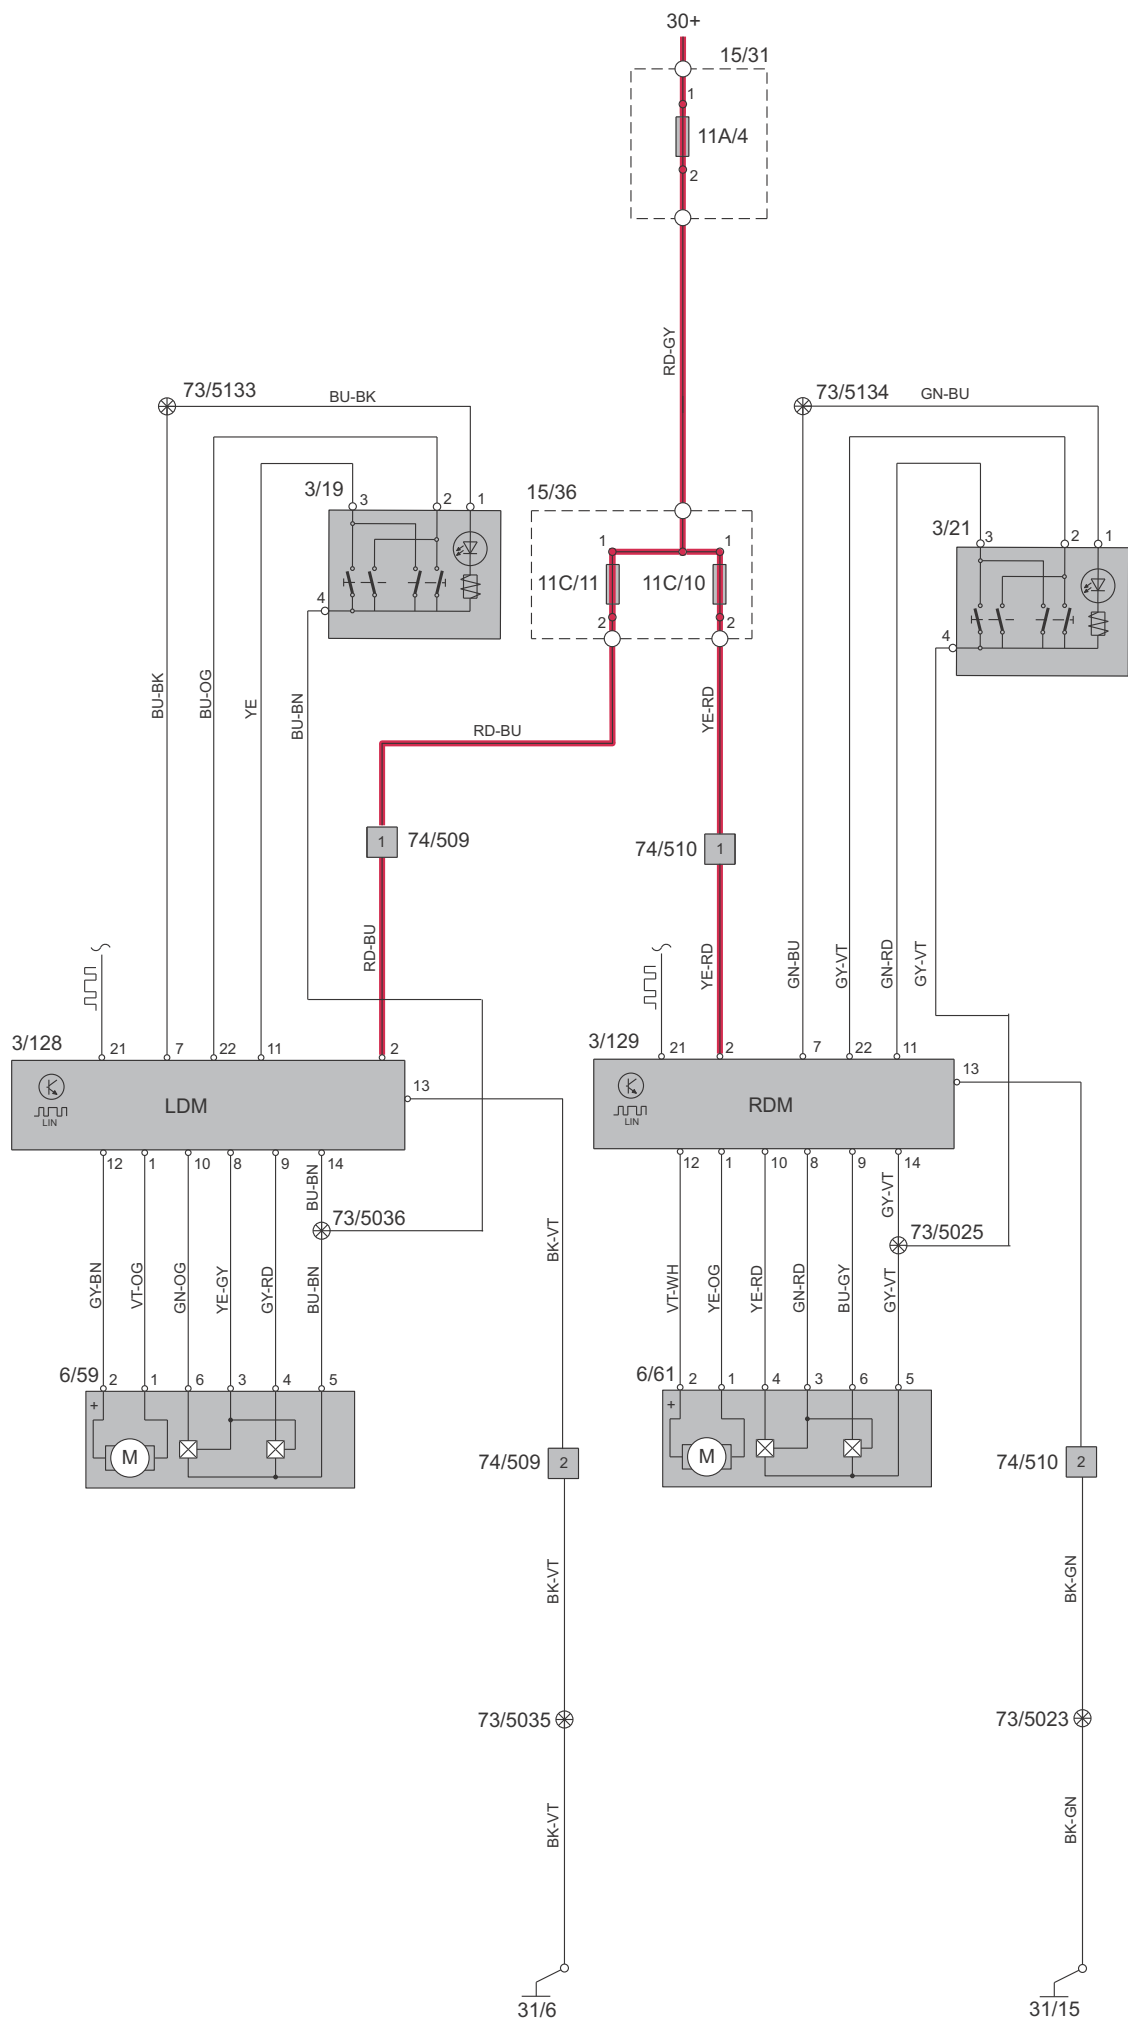


Group 83 Doors and openings


Power sunroof

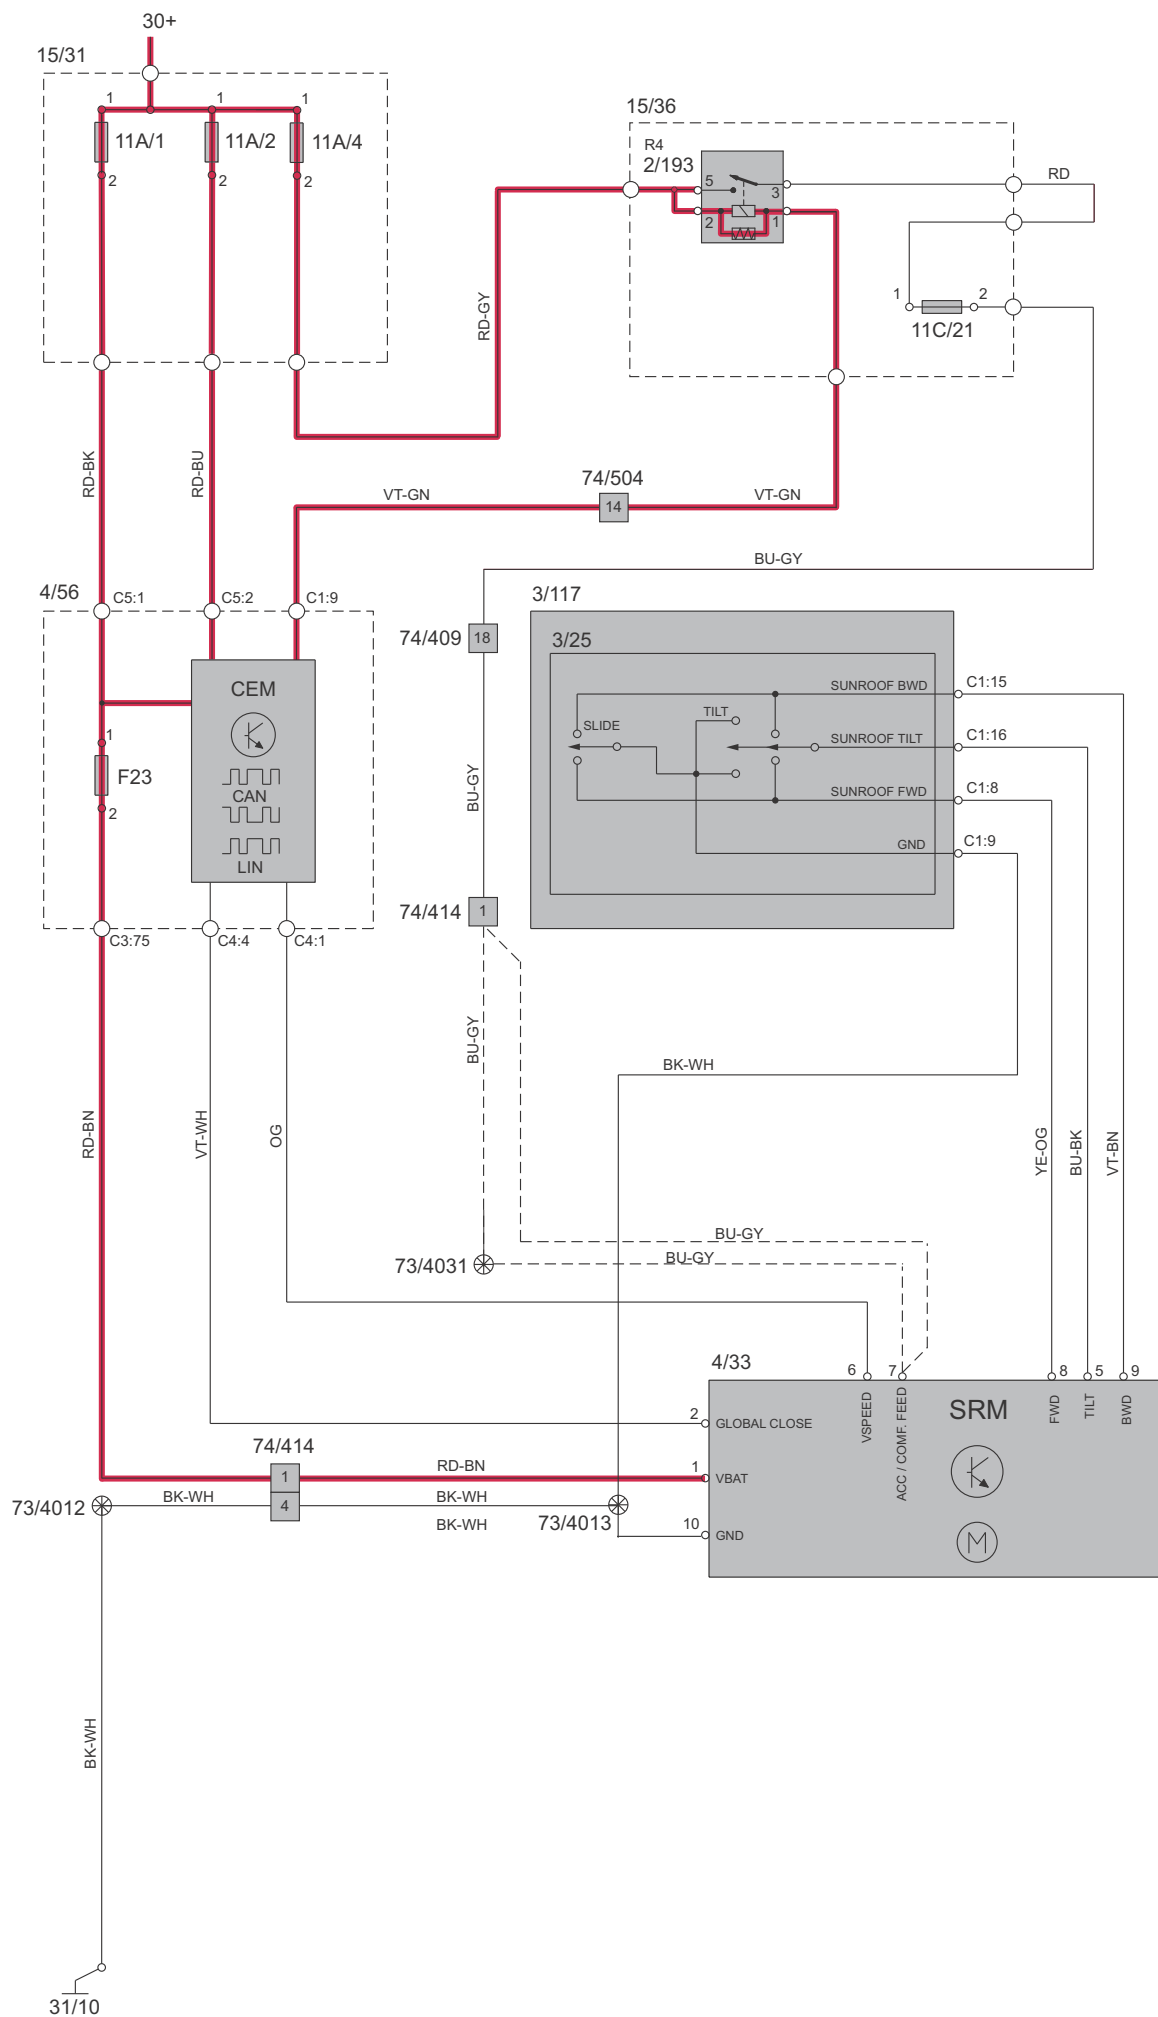

Group 84 Exterior decorative elements, etc. Power door mirrors LHD

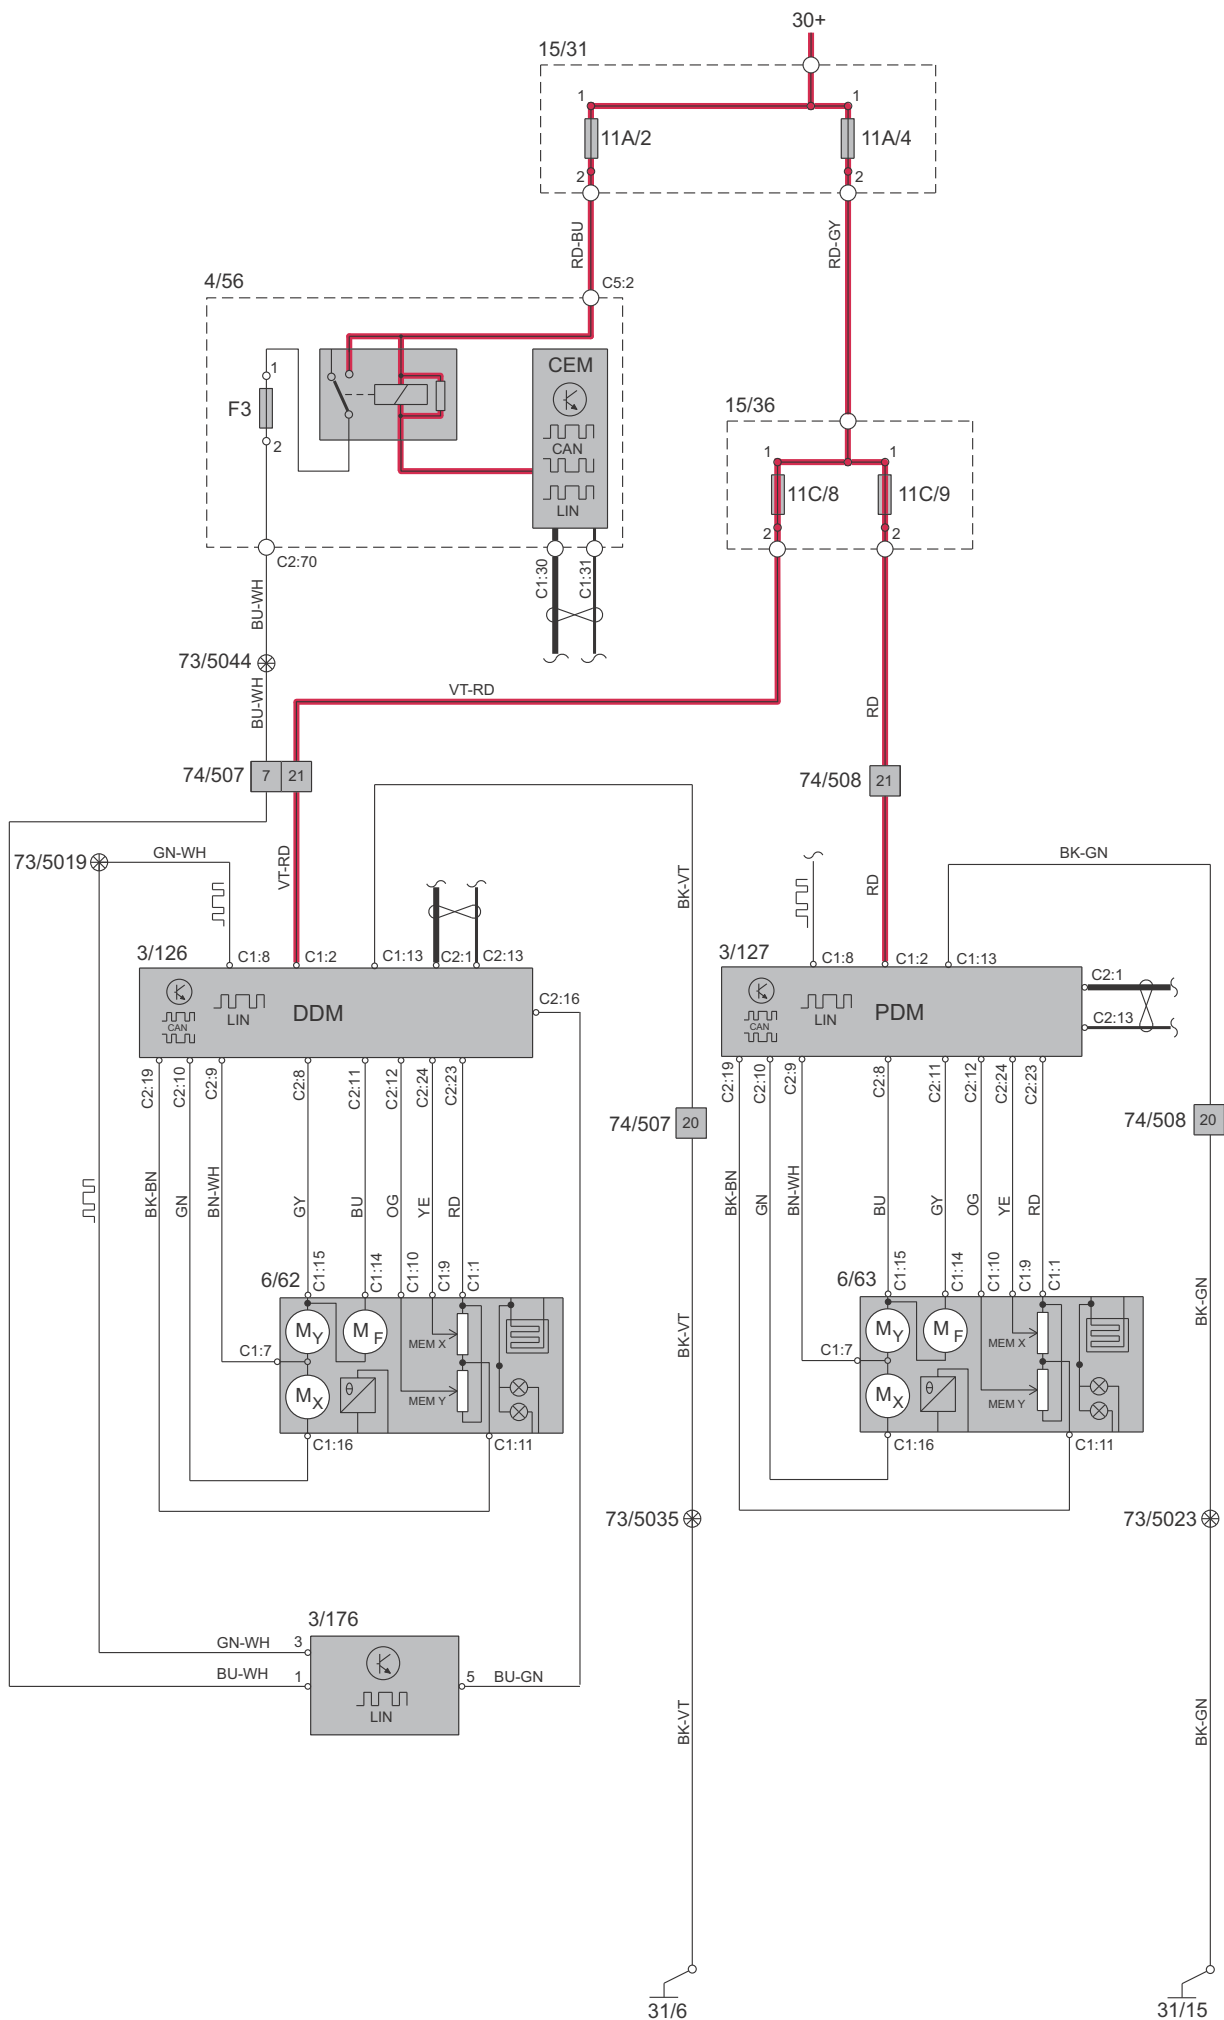


Group 84 Exterior decorative elements, etc. Power door mirrors RHD

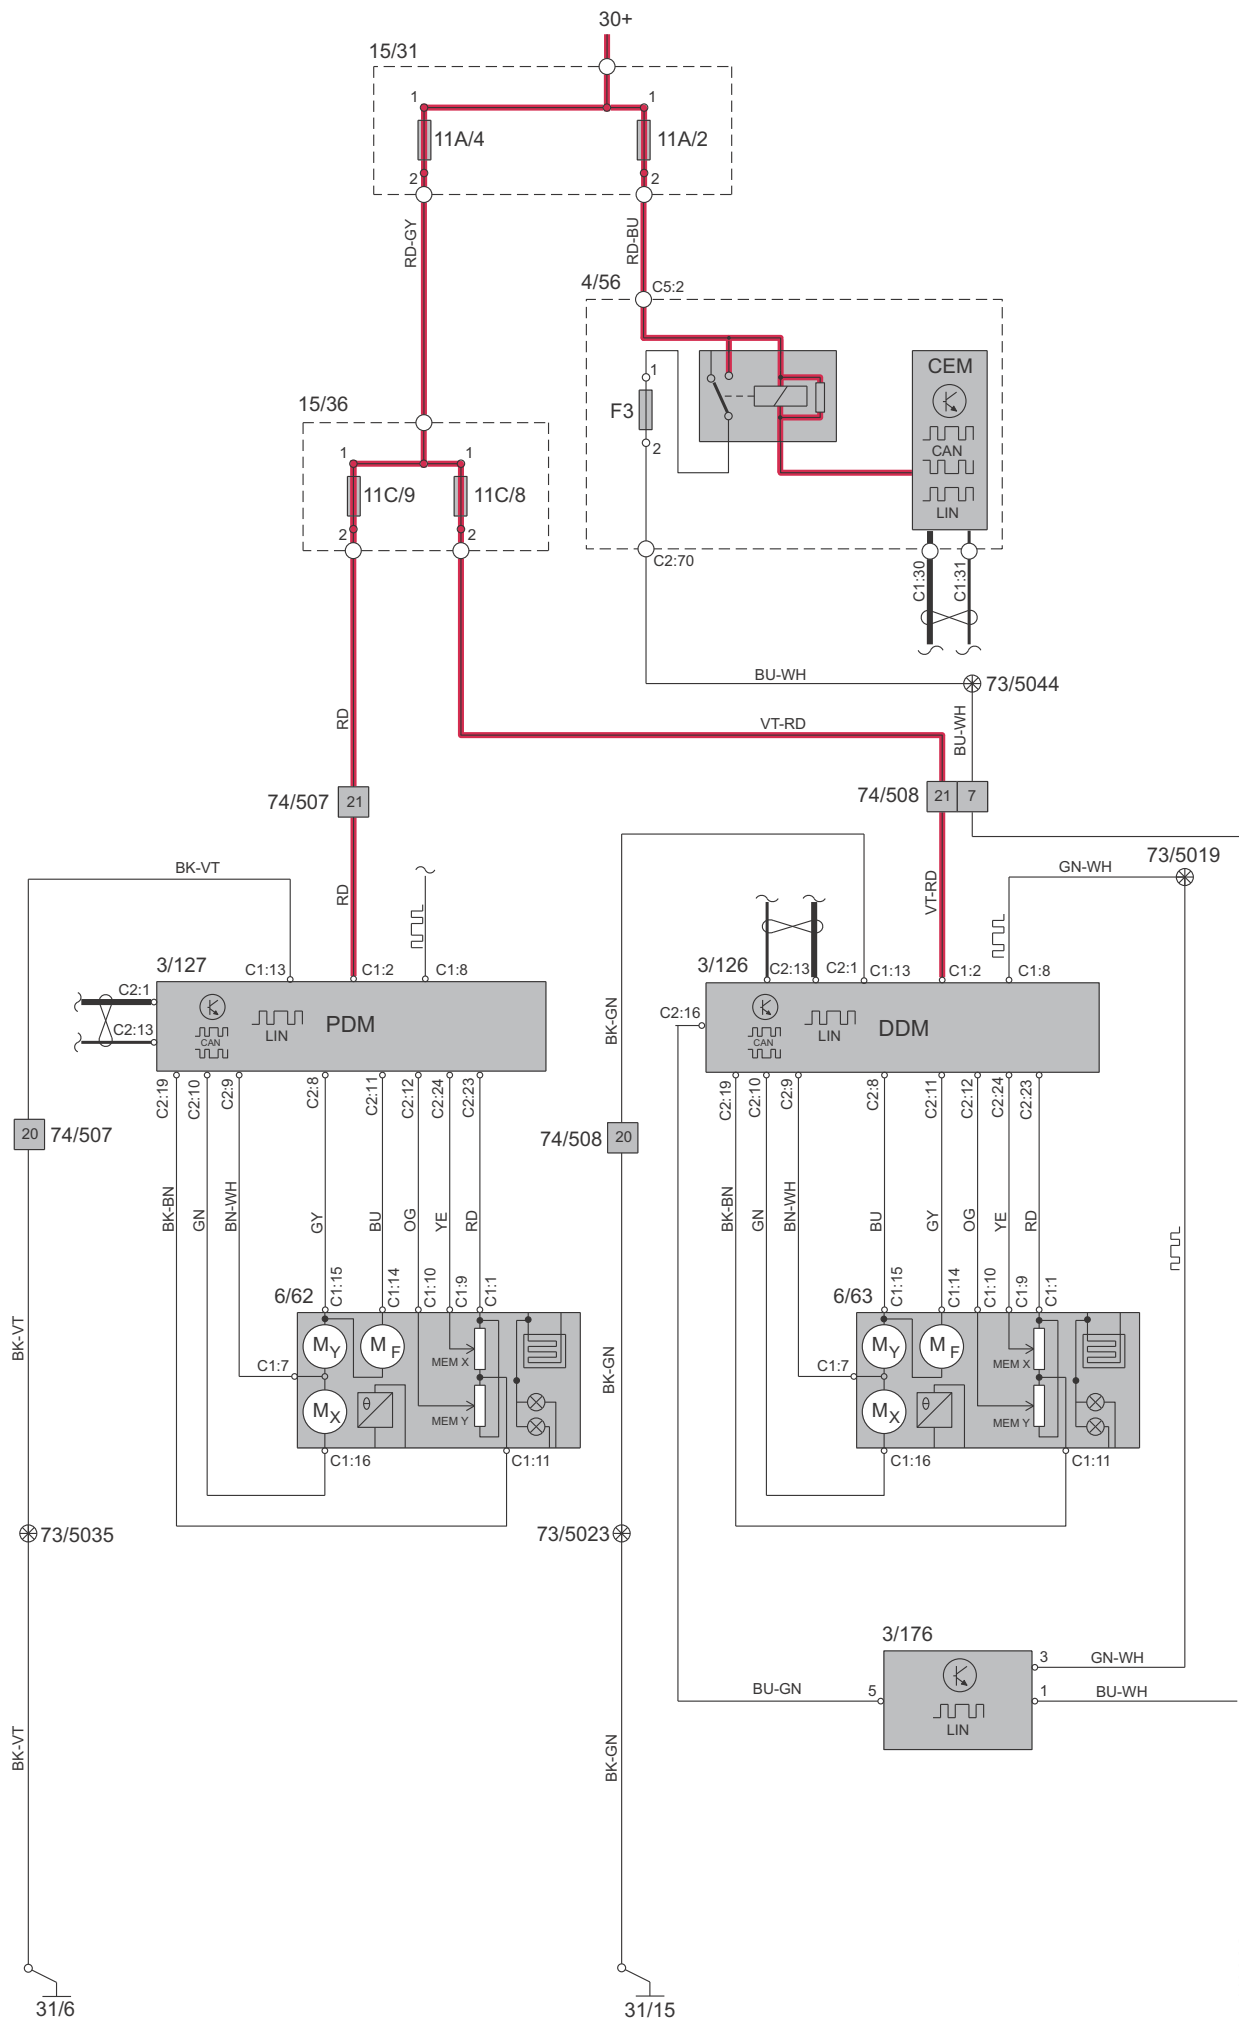


N00025

Group 84 Exterior decorative elements, etc. Heated door mirrors LHD

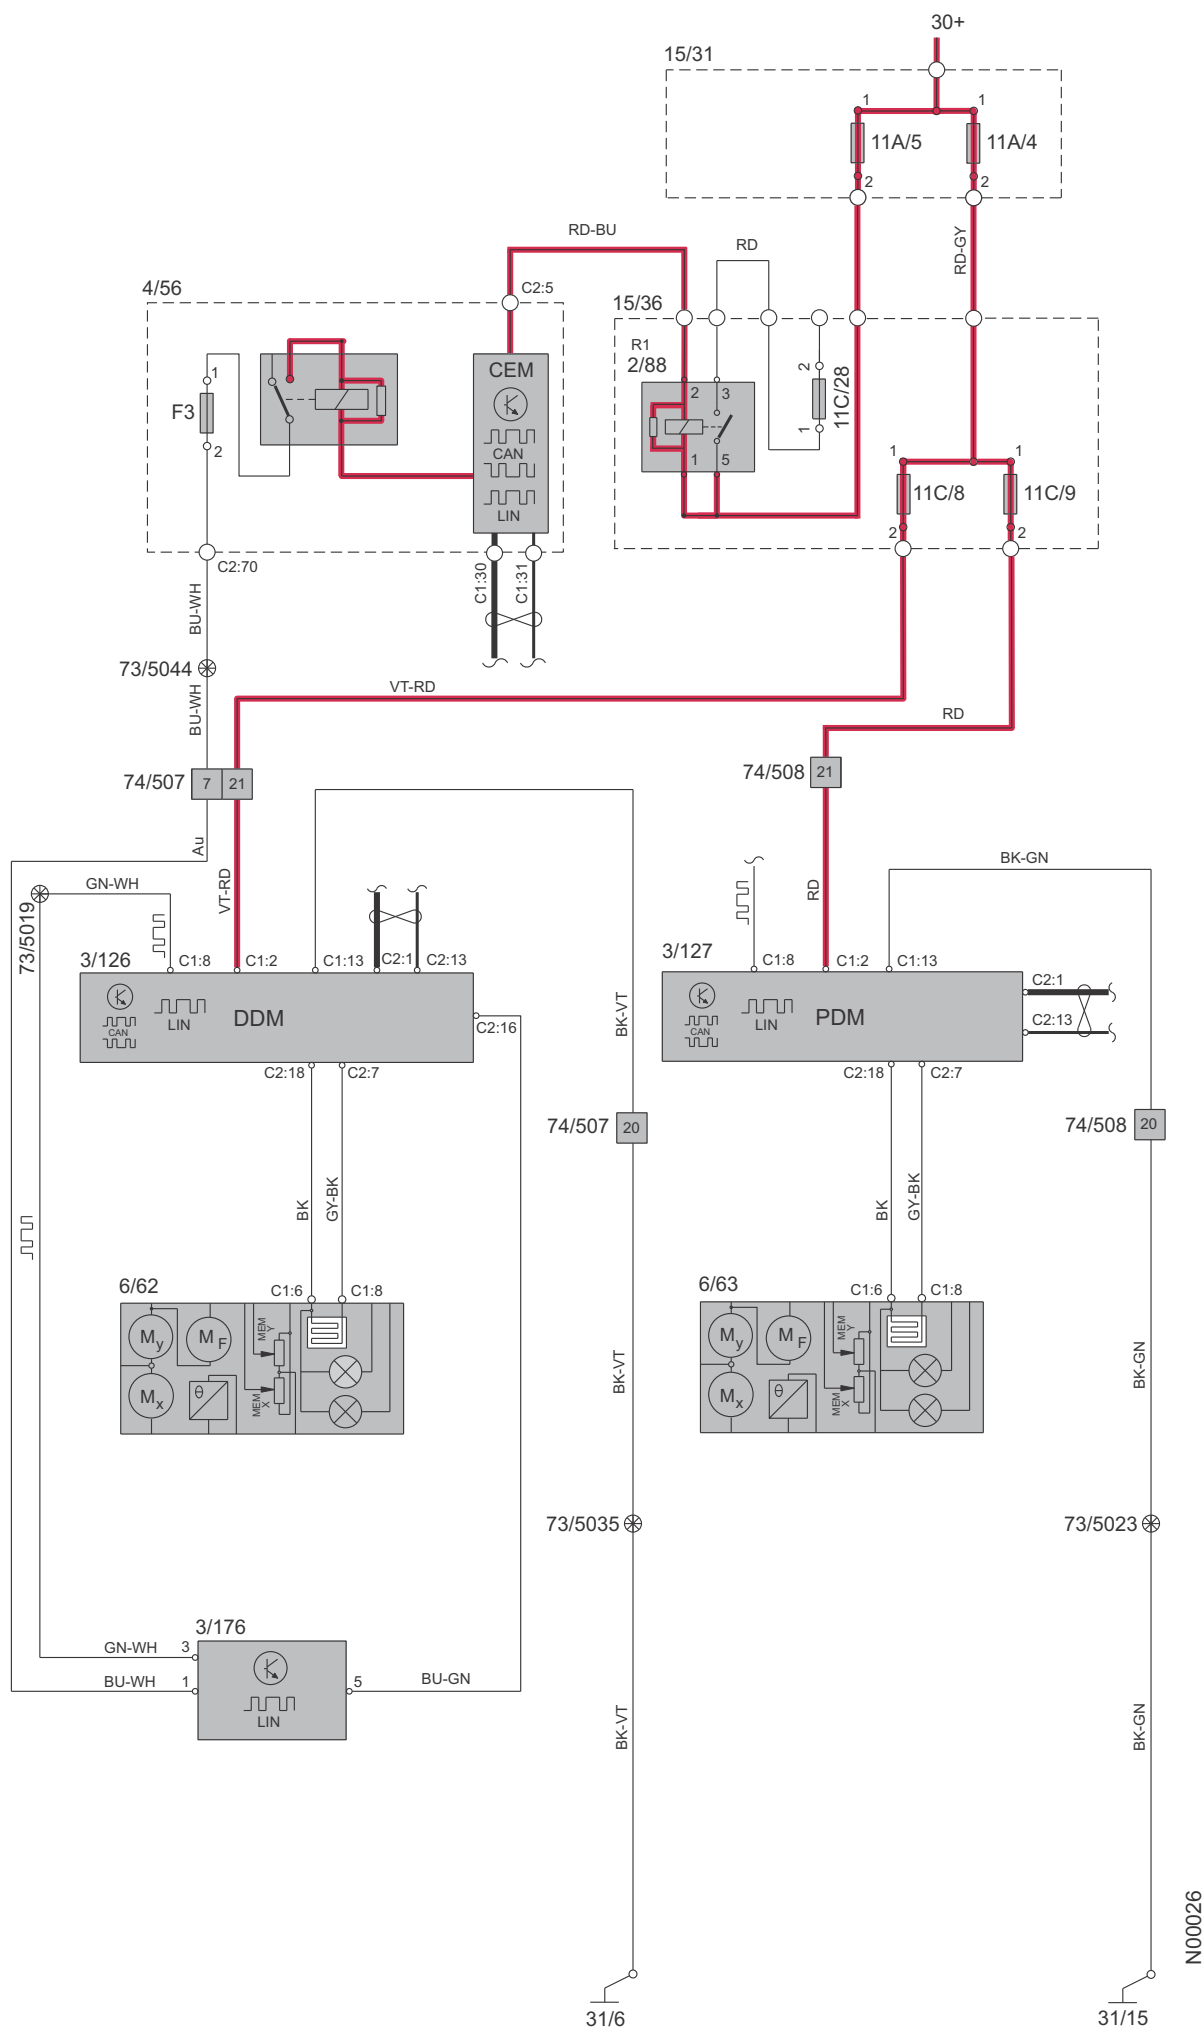


Group 84 Exterior decorative elements, etc. Heated door mirrors RHD

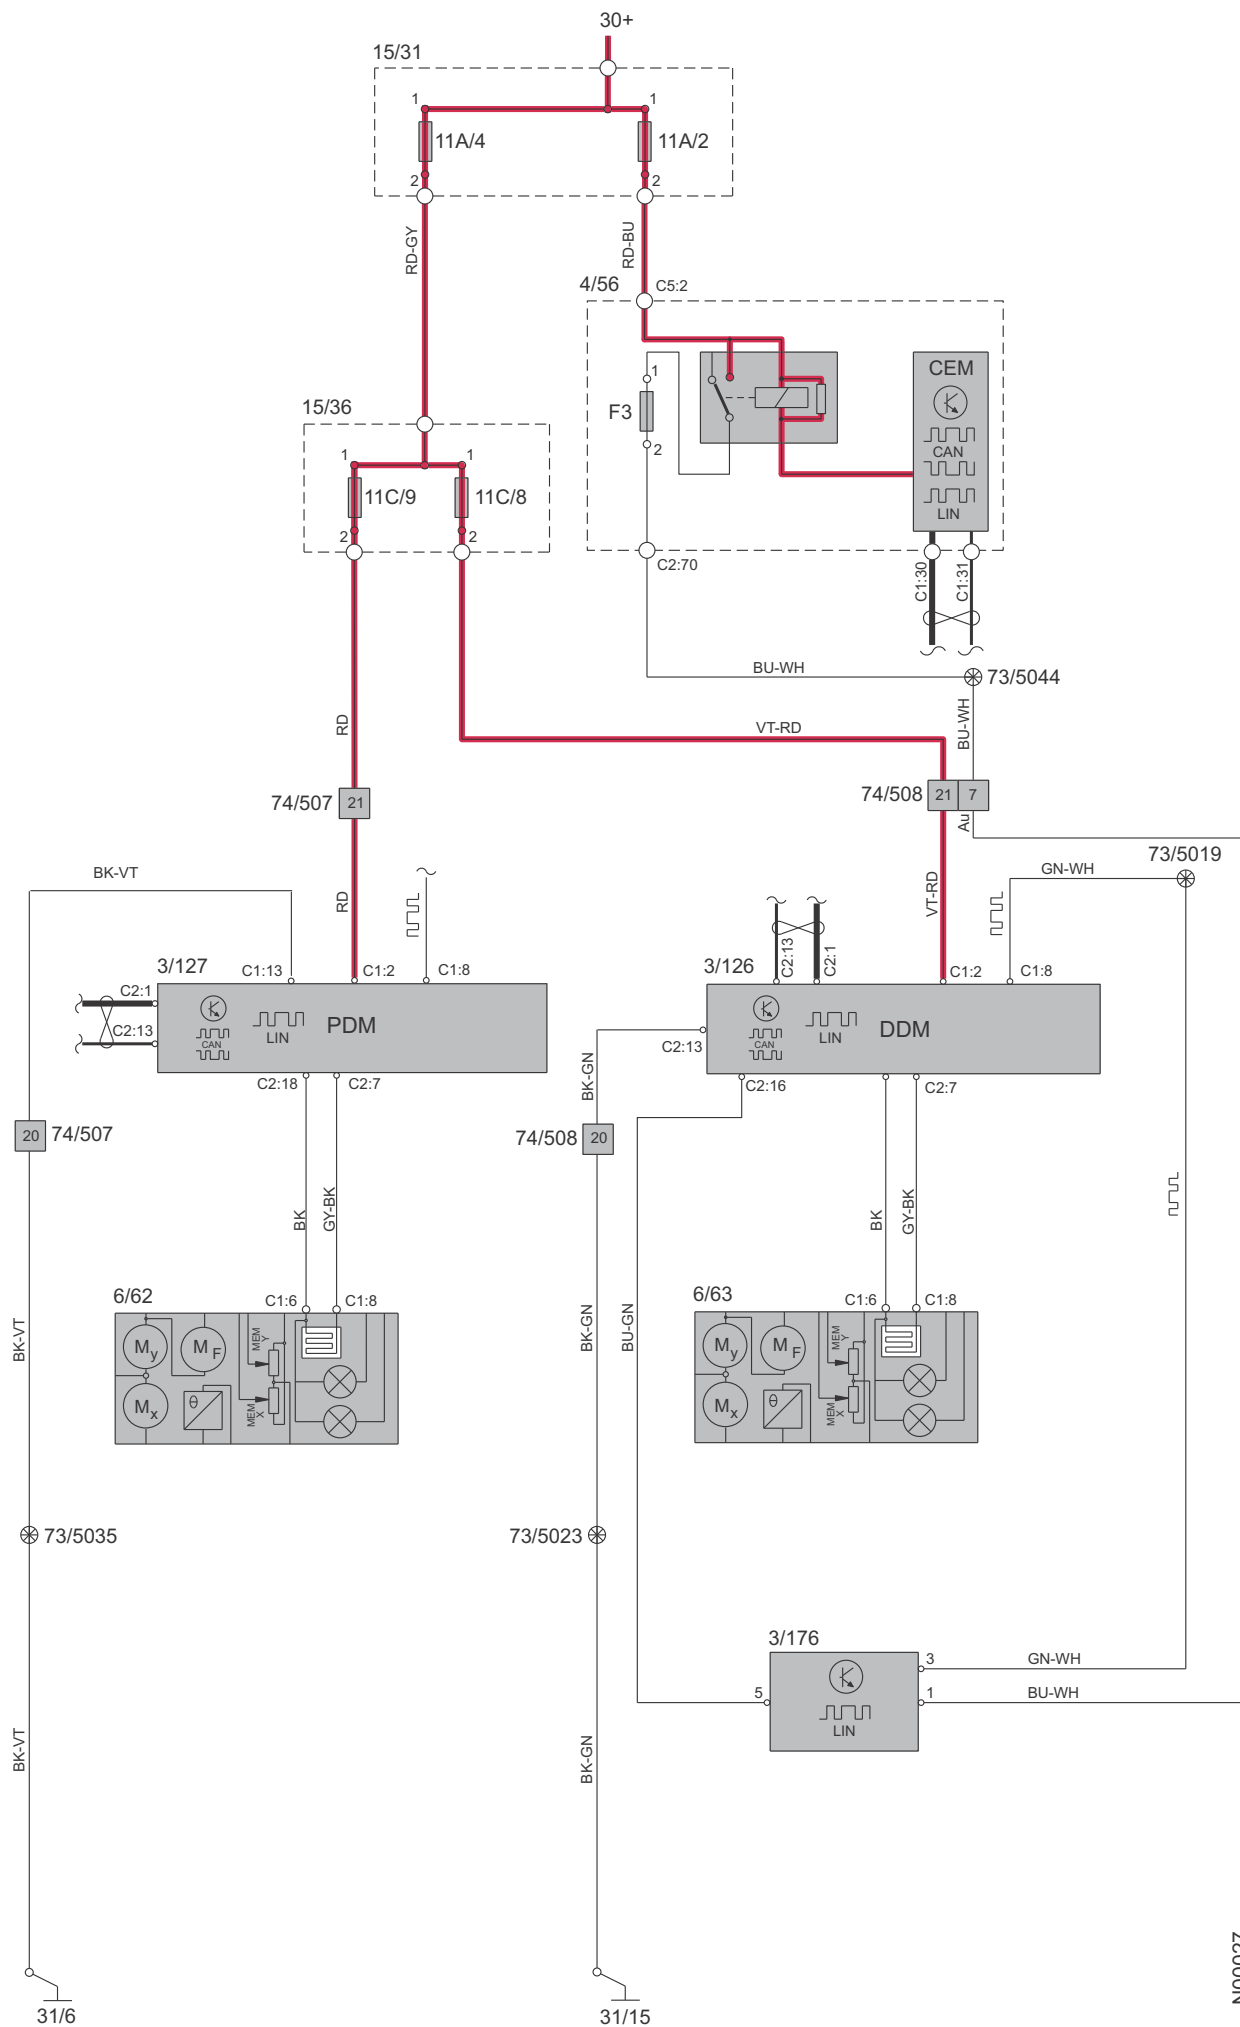


N00027

Group 84 Exterior decorative elements, etc. Blind spot information system LHD

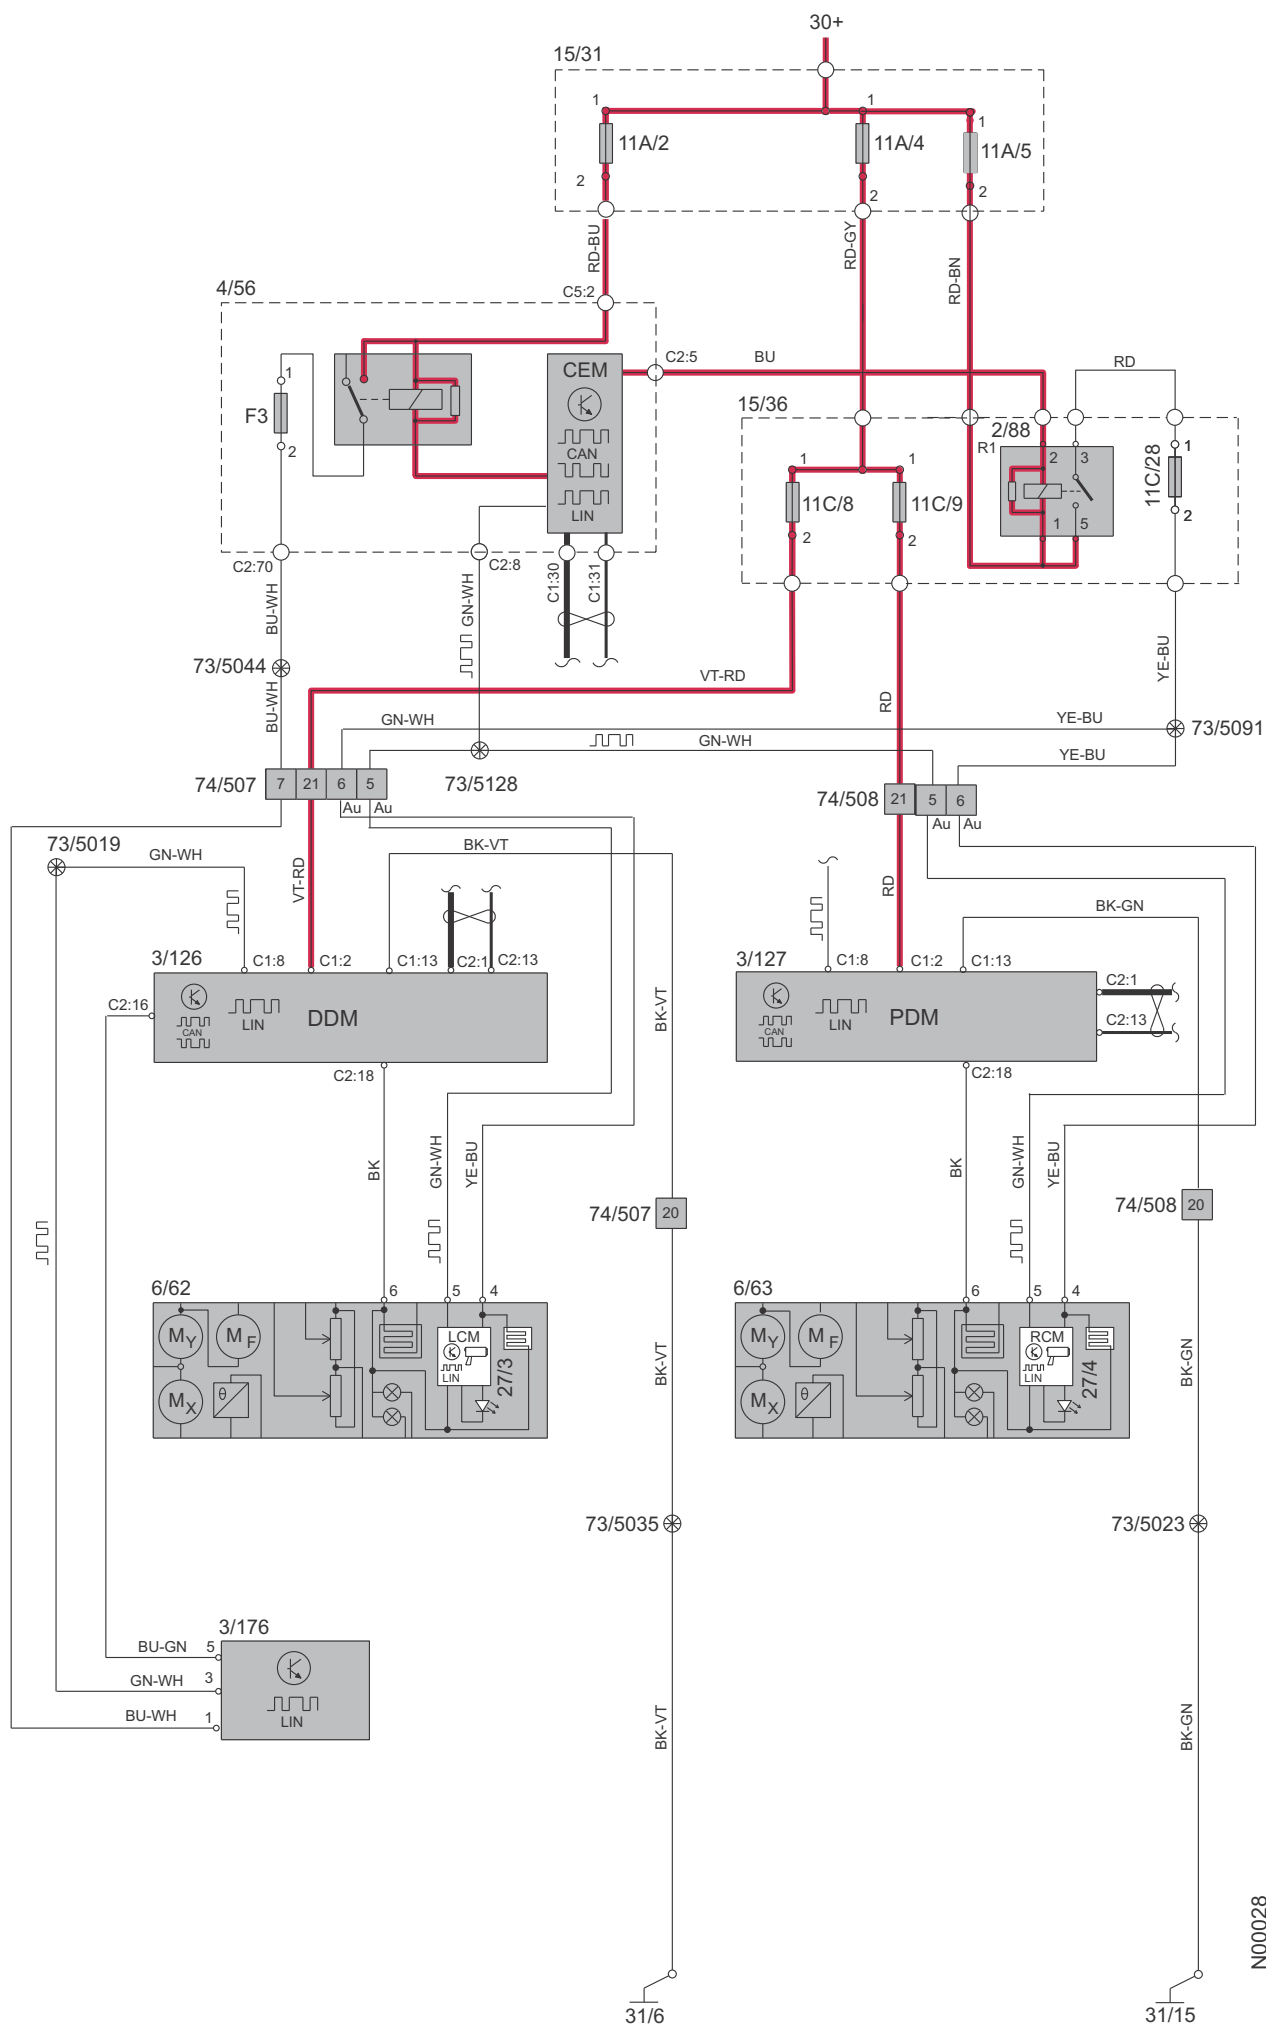


N00028

Group 84 Exterior decorative elements, etc. **Blind spot information system RHD**

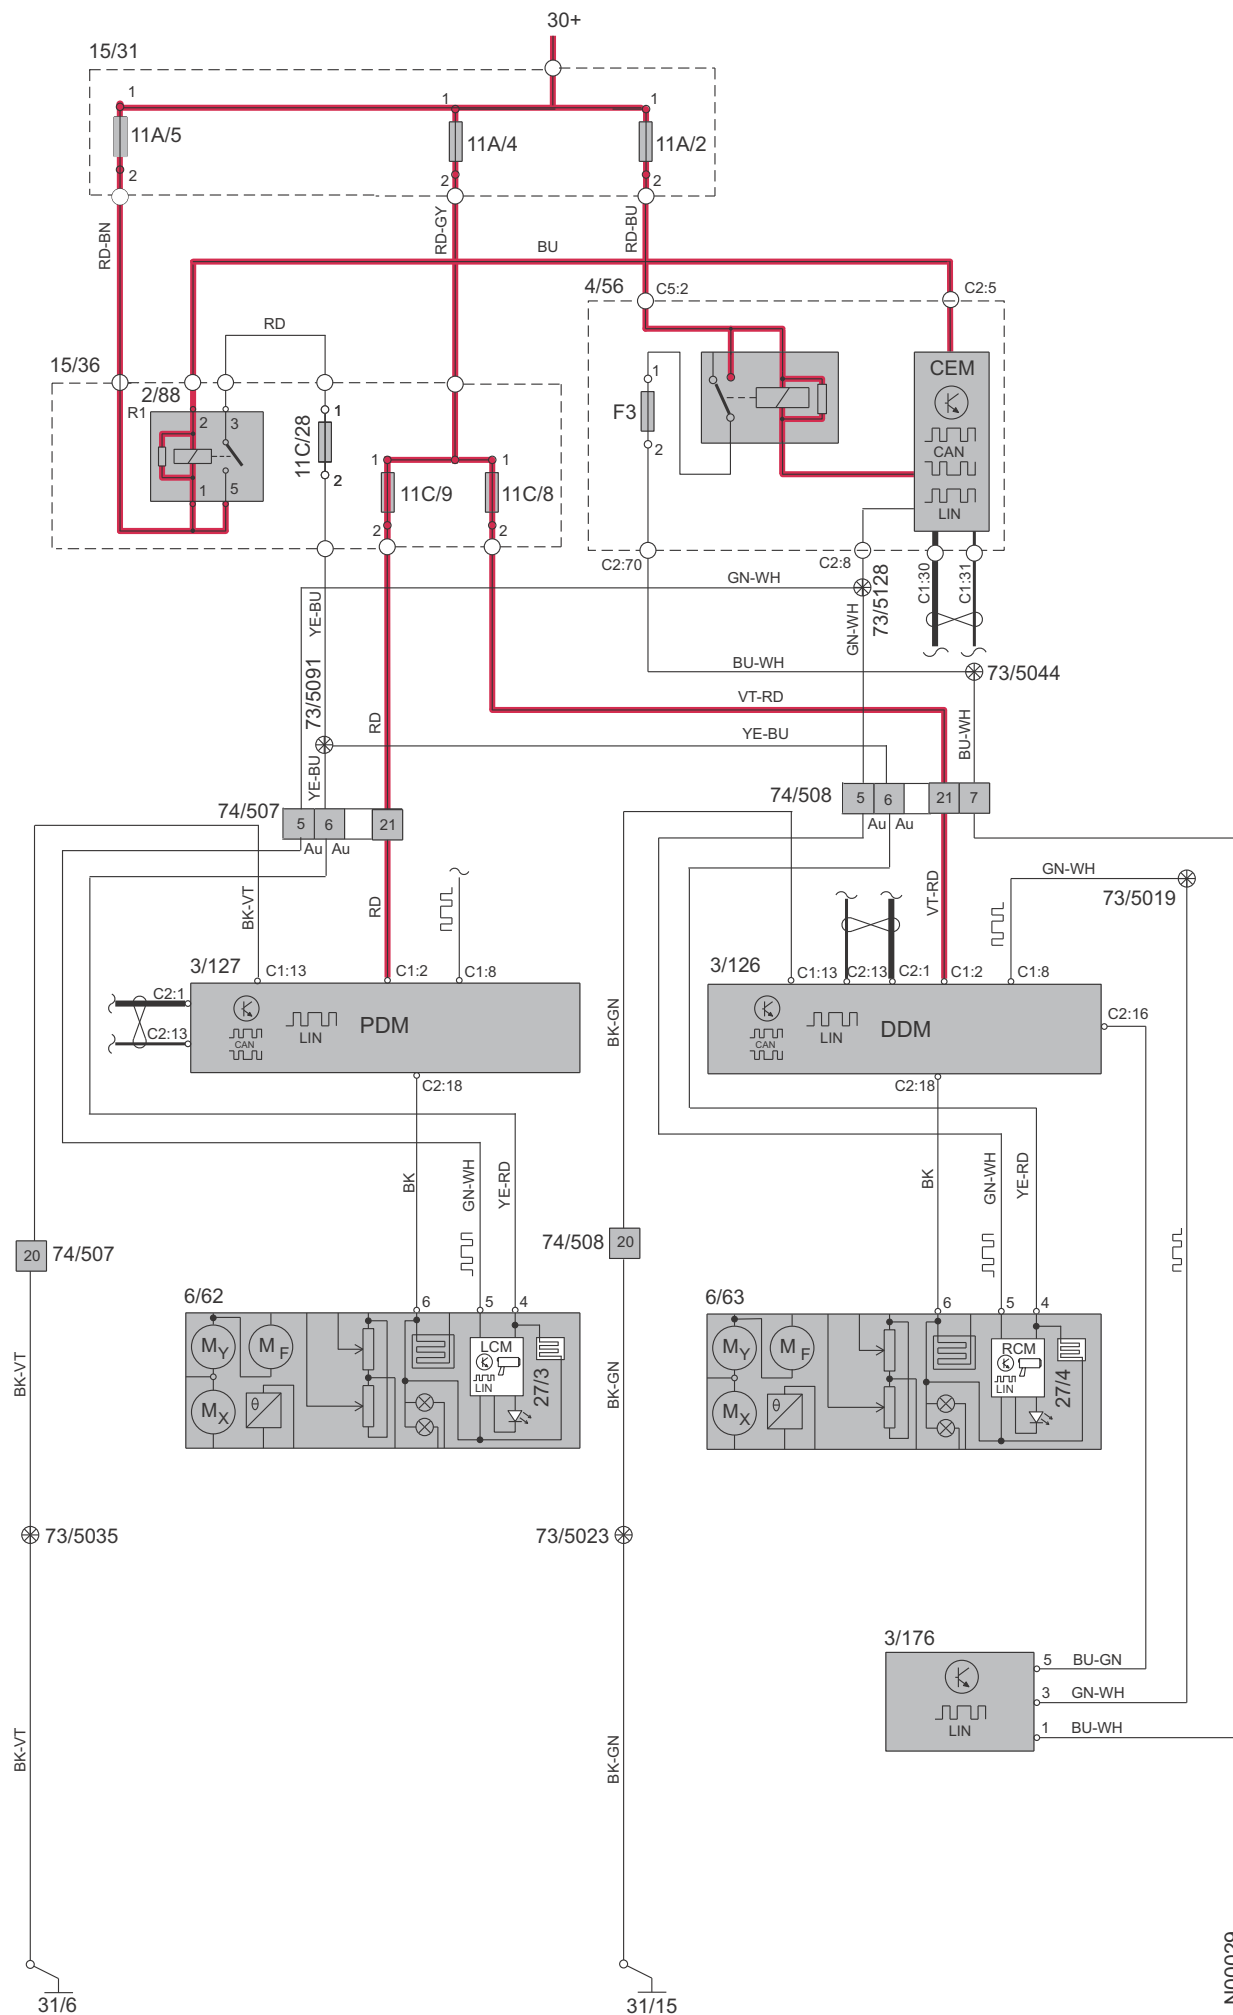


N00029

Group 84 Exterior decorative elements, etc. Heated rear window

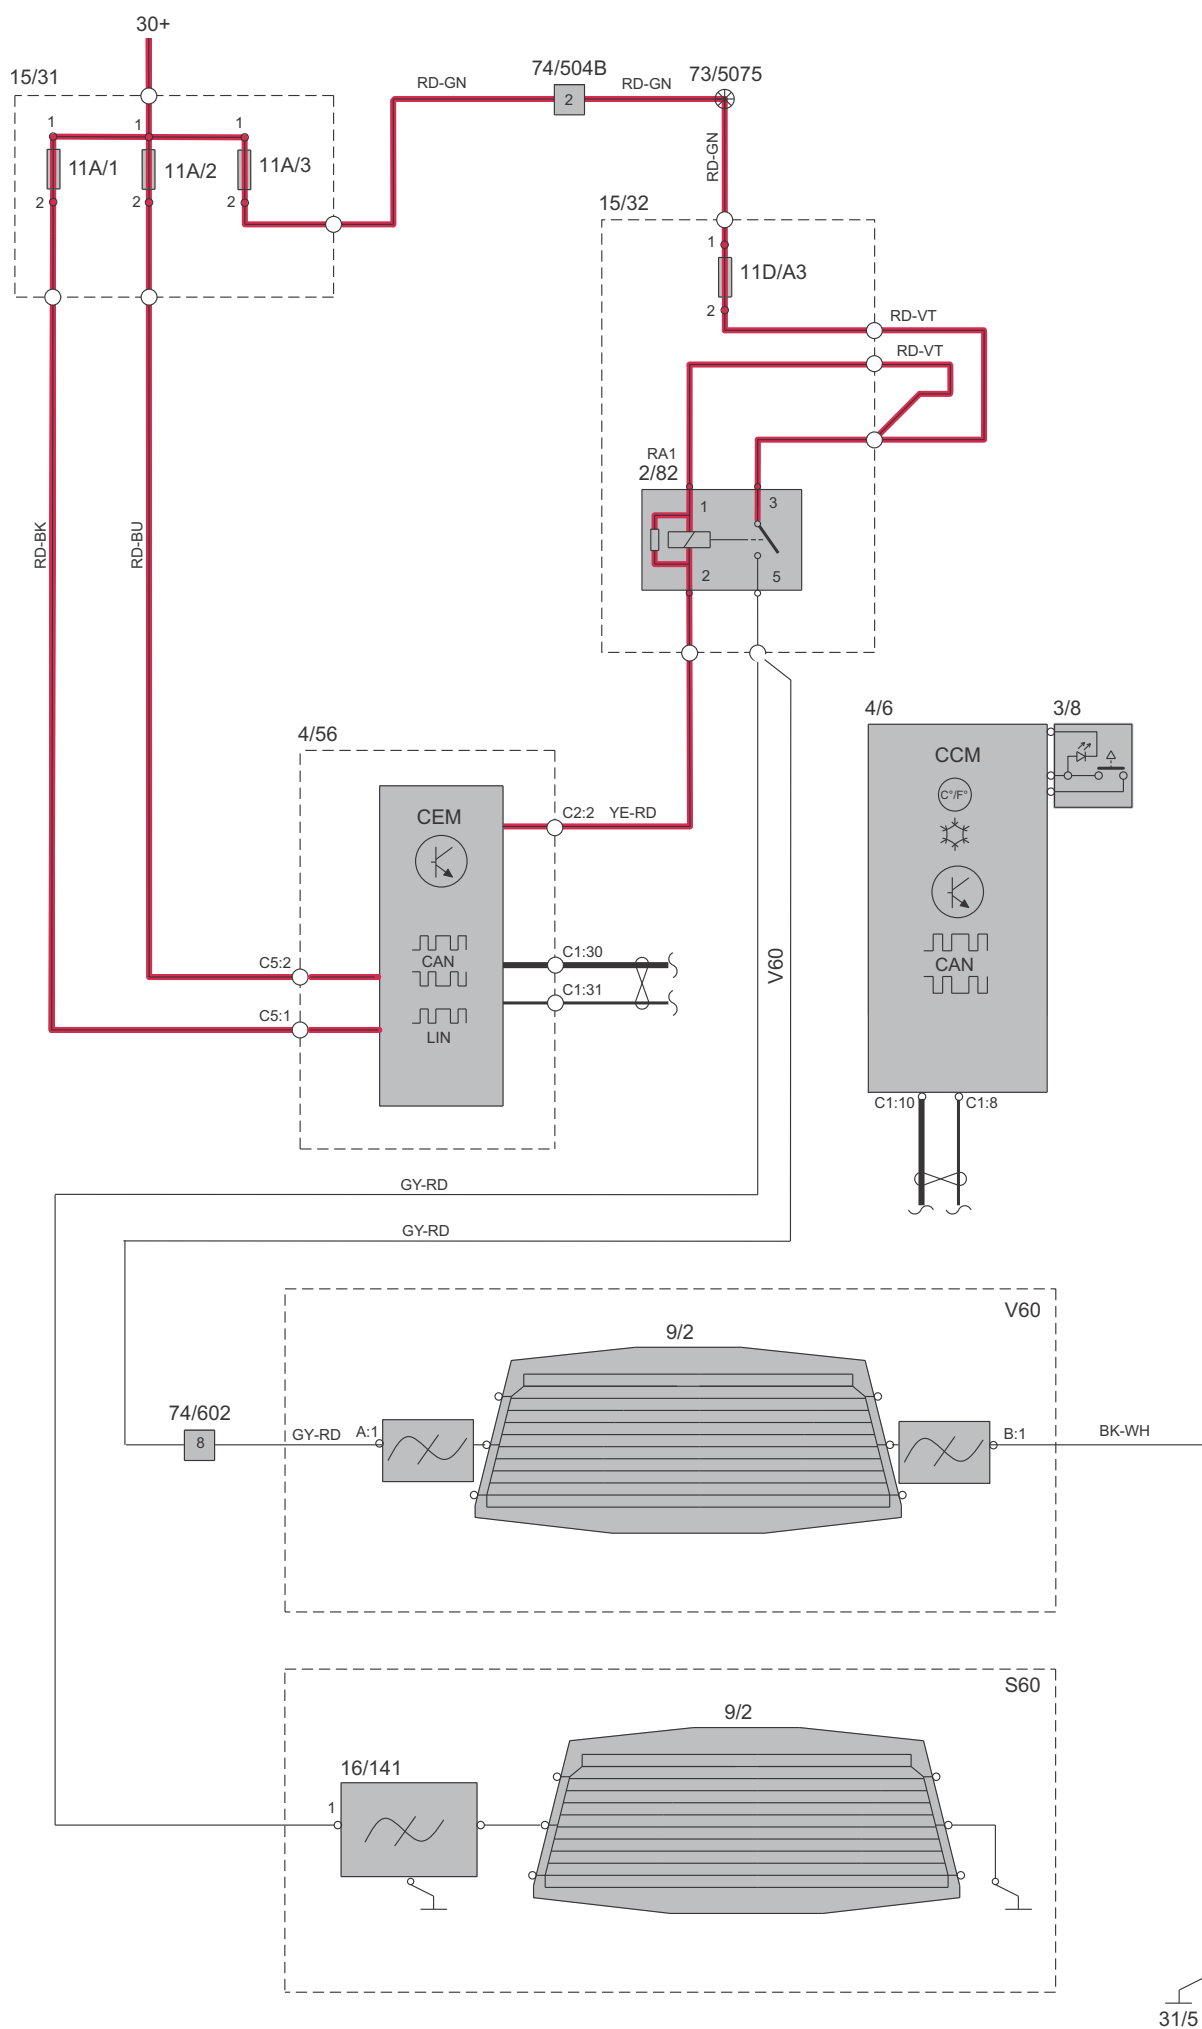


IO1146

Group 85 Interior equipment Power driver's seat with memory function, LHD

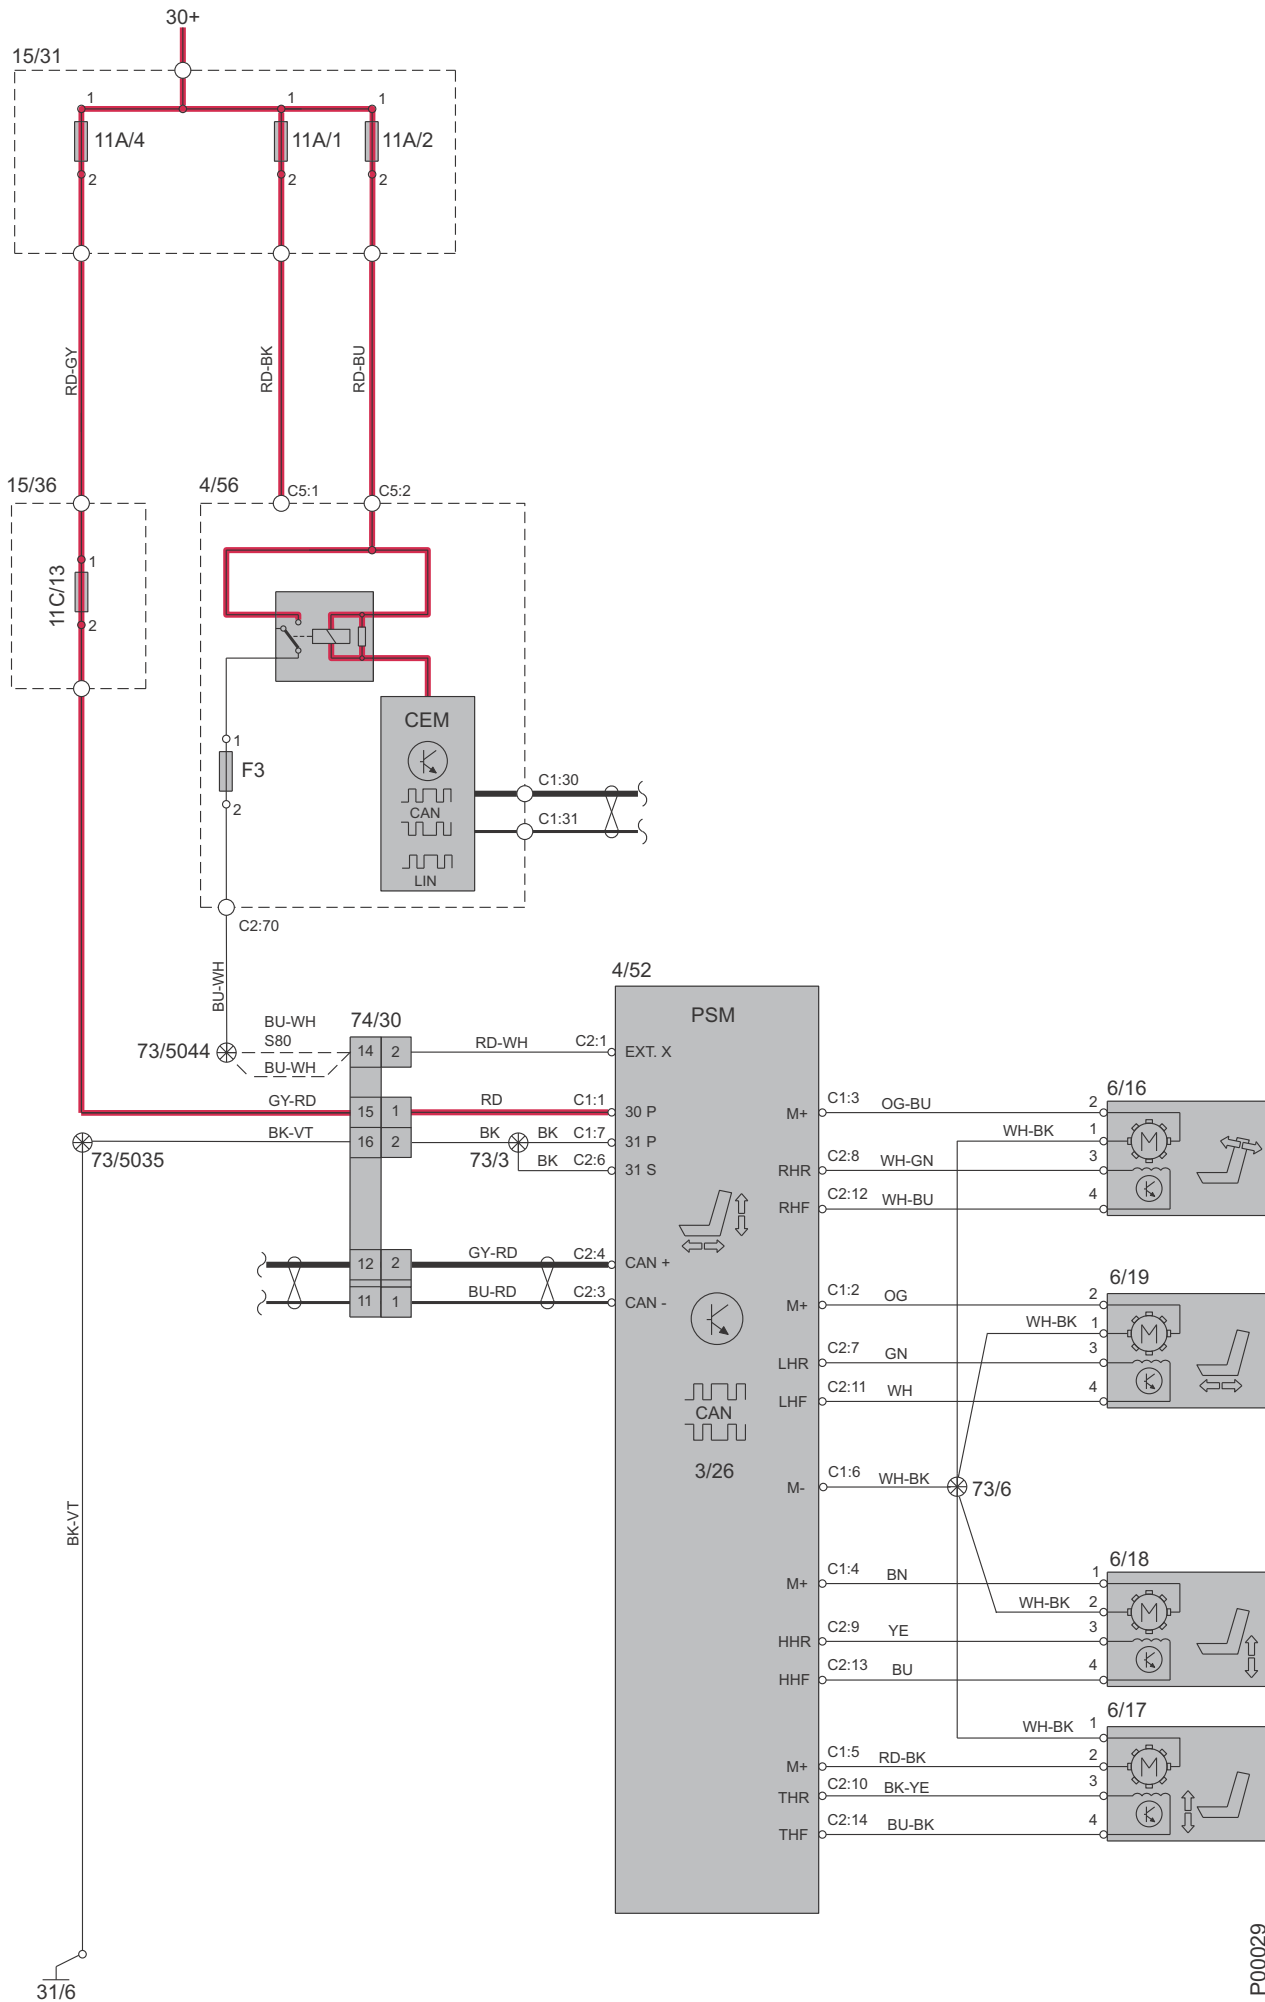

P00029


Group 85 Interior equipment
Power driver's seat with memory function, RHD

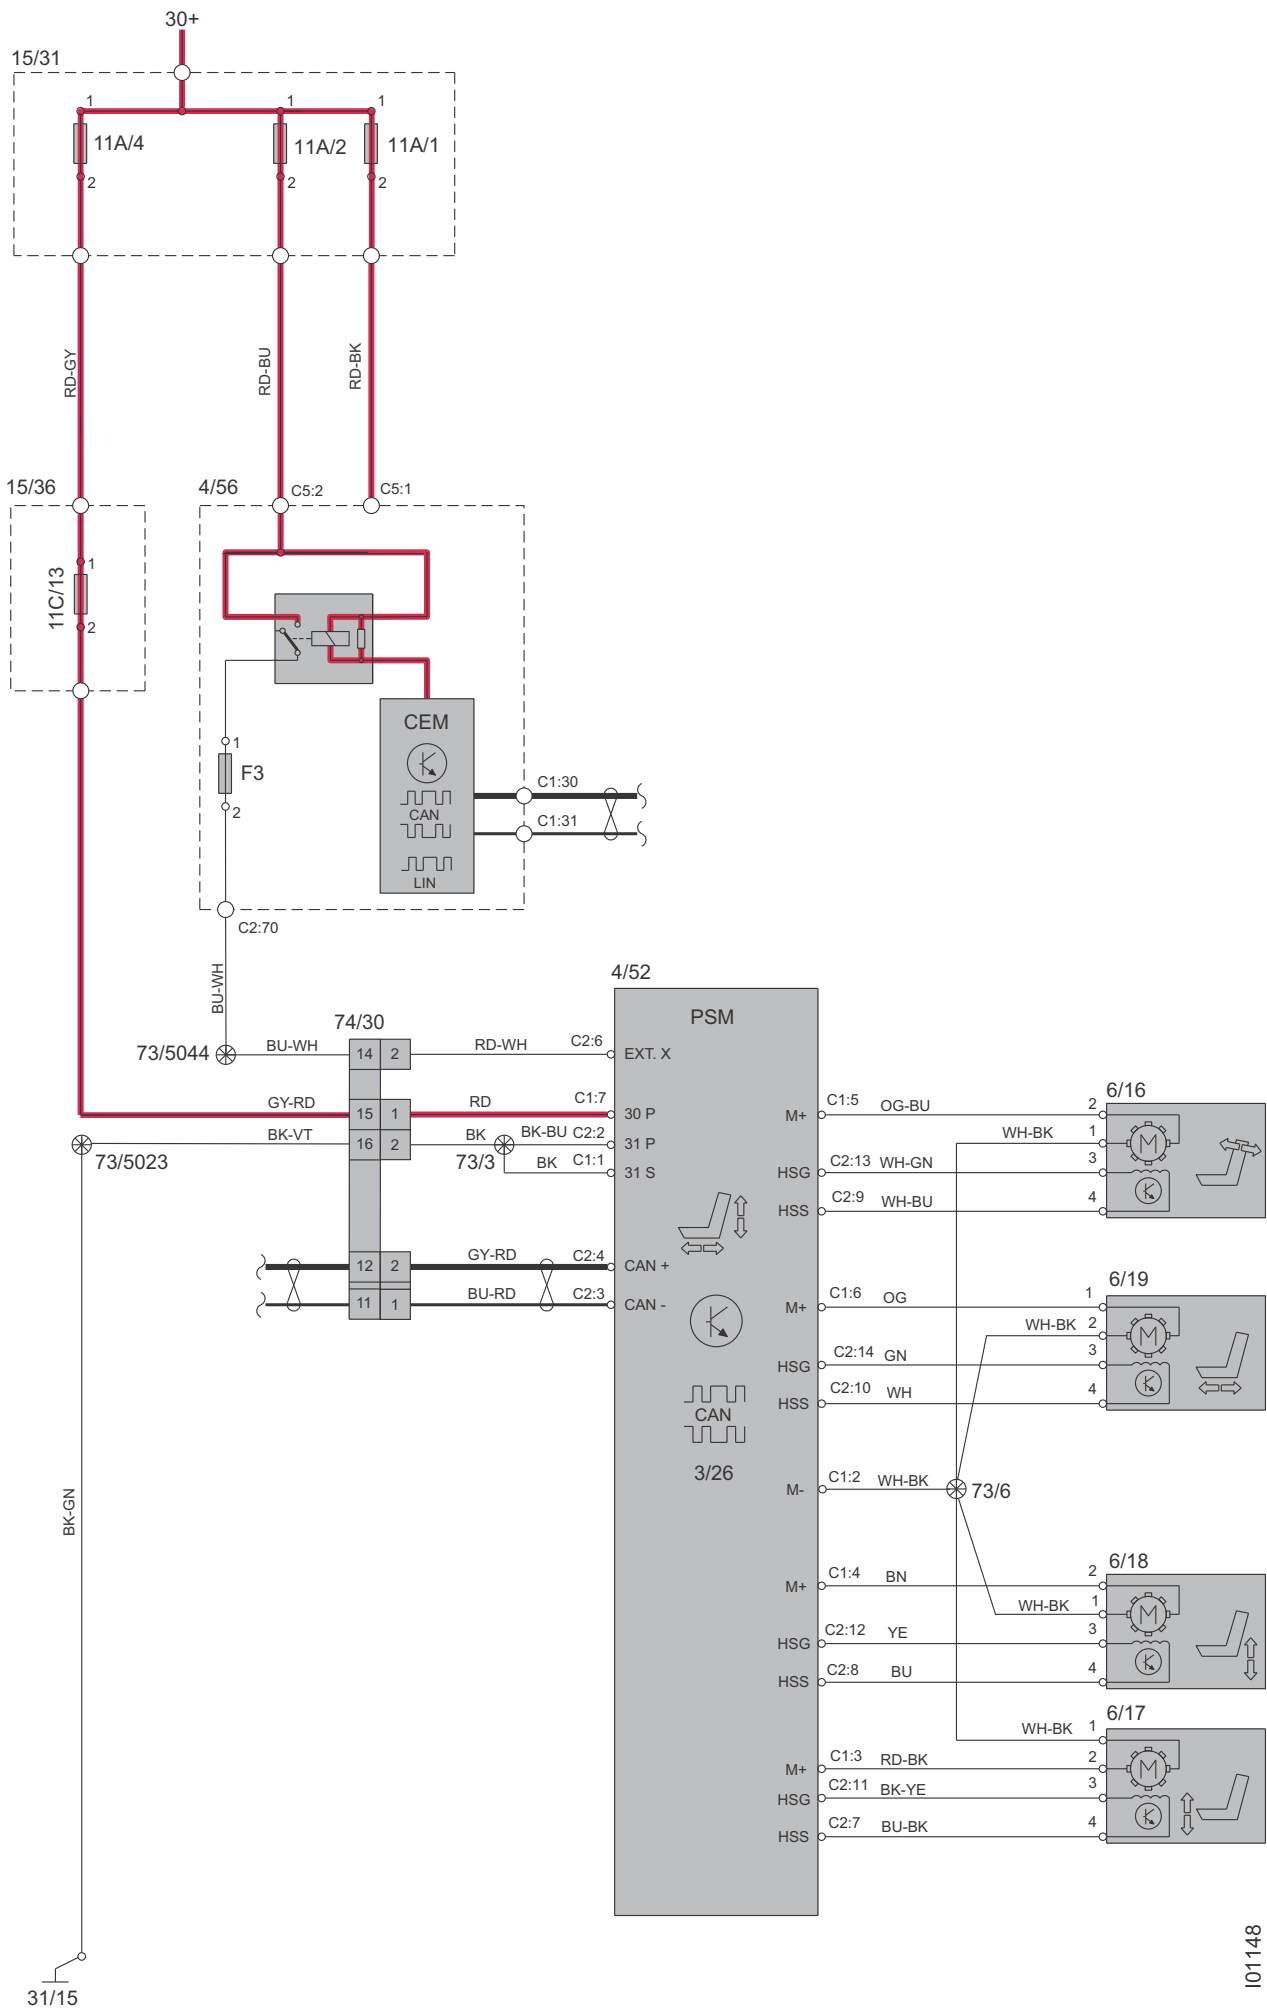


IO1148

Group 85 Interior equipment

Power passenger seat, LHD

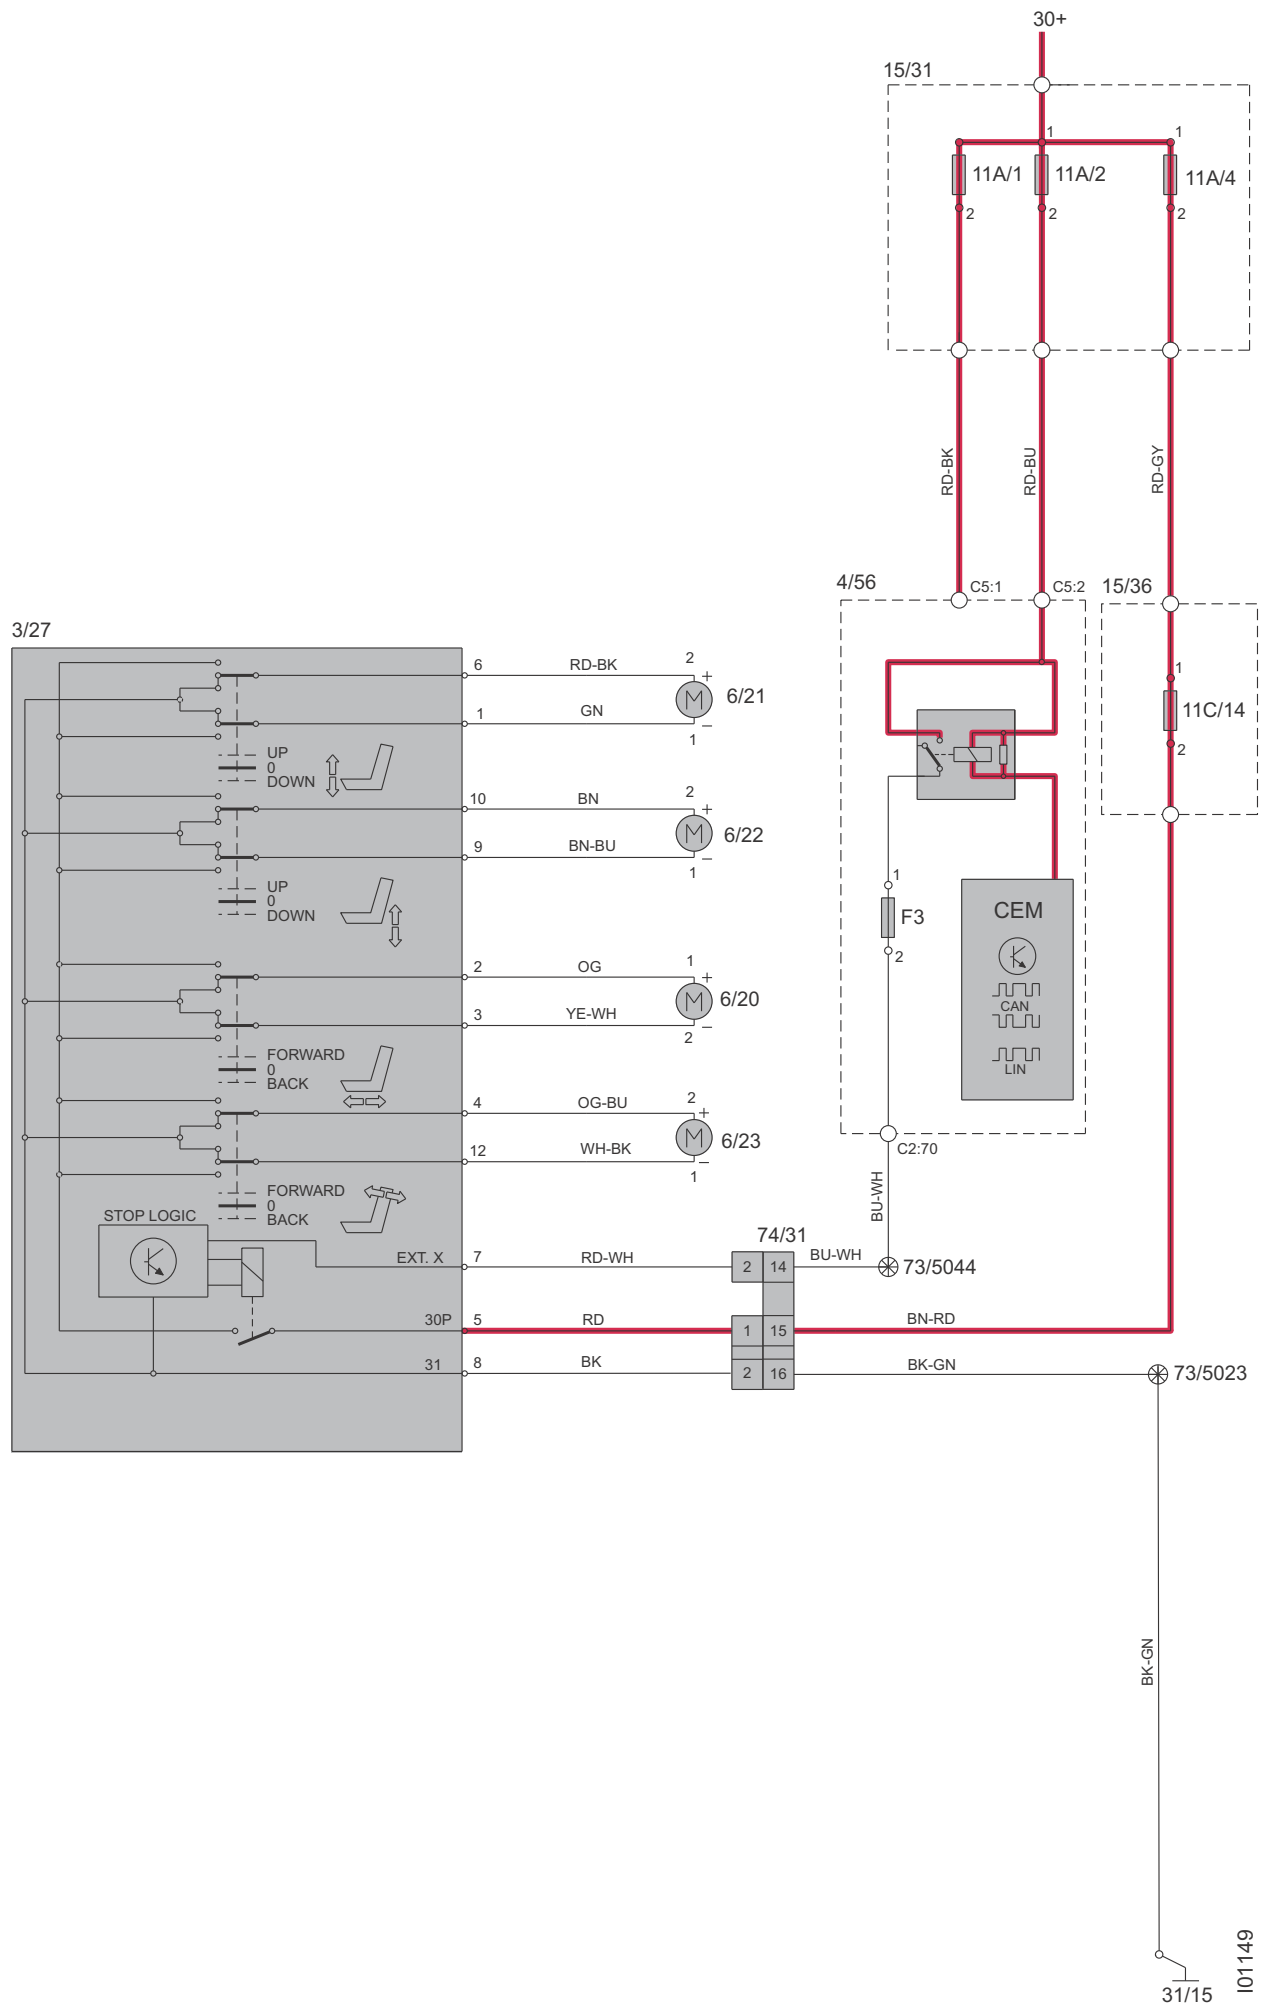


Group 85 Interior equipment Power passenger seat, RHD

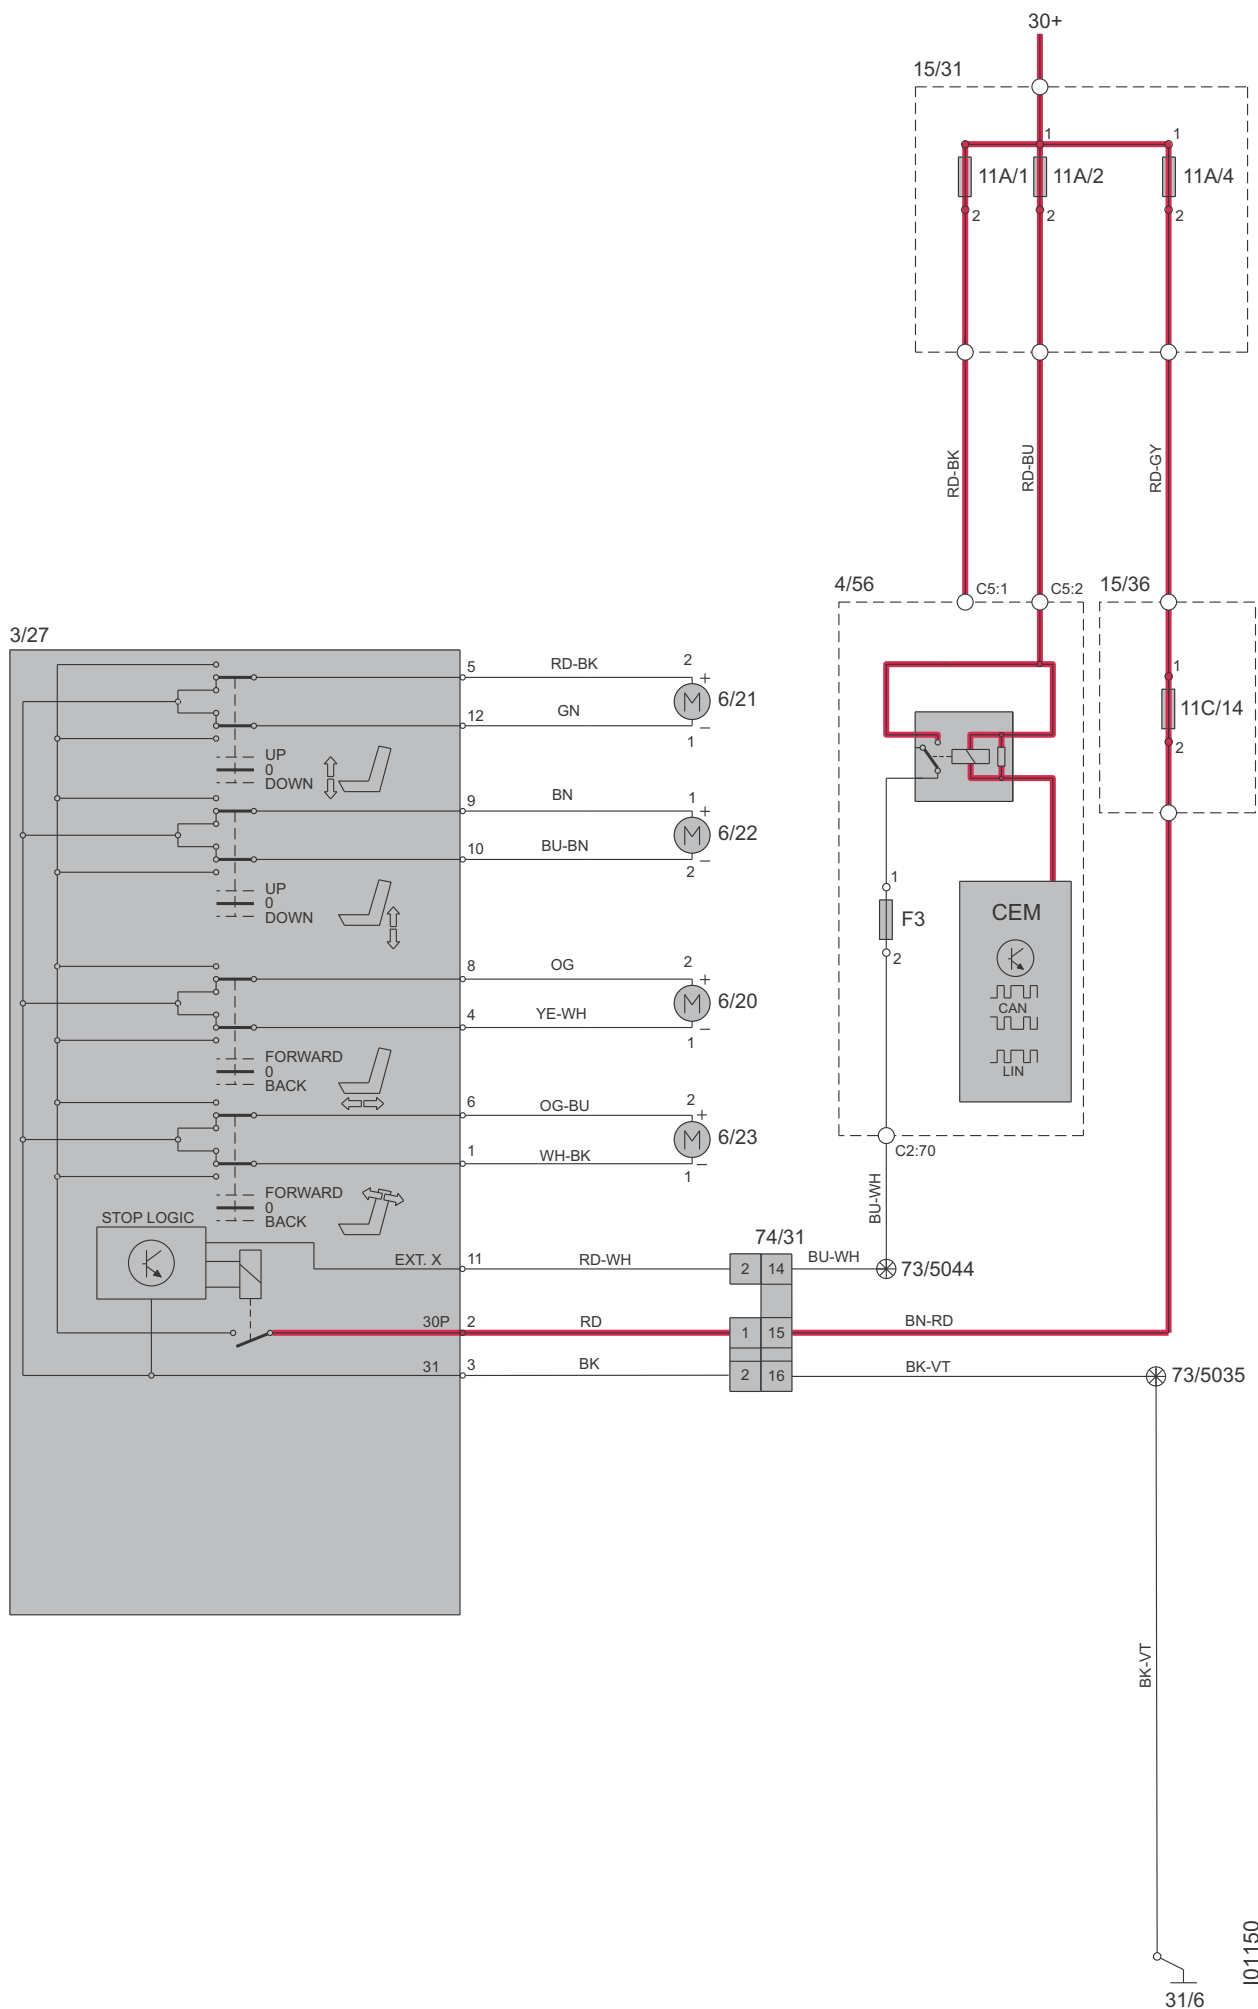


Group 85 Interior equipment

Heated front seats with fans

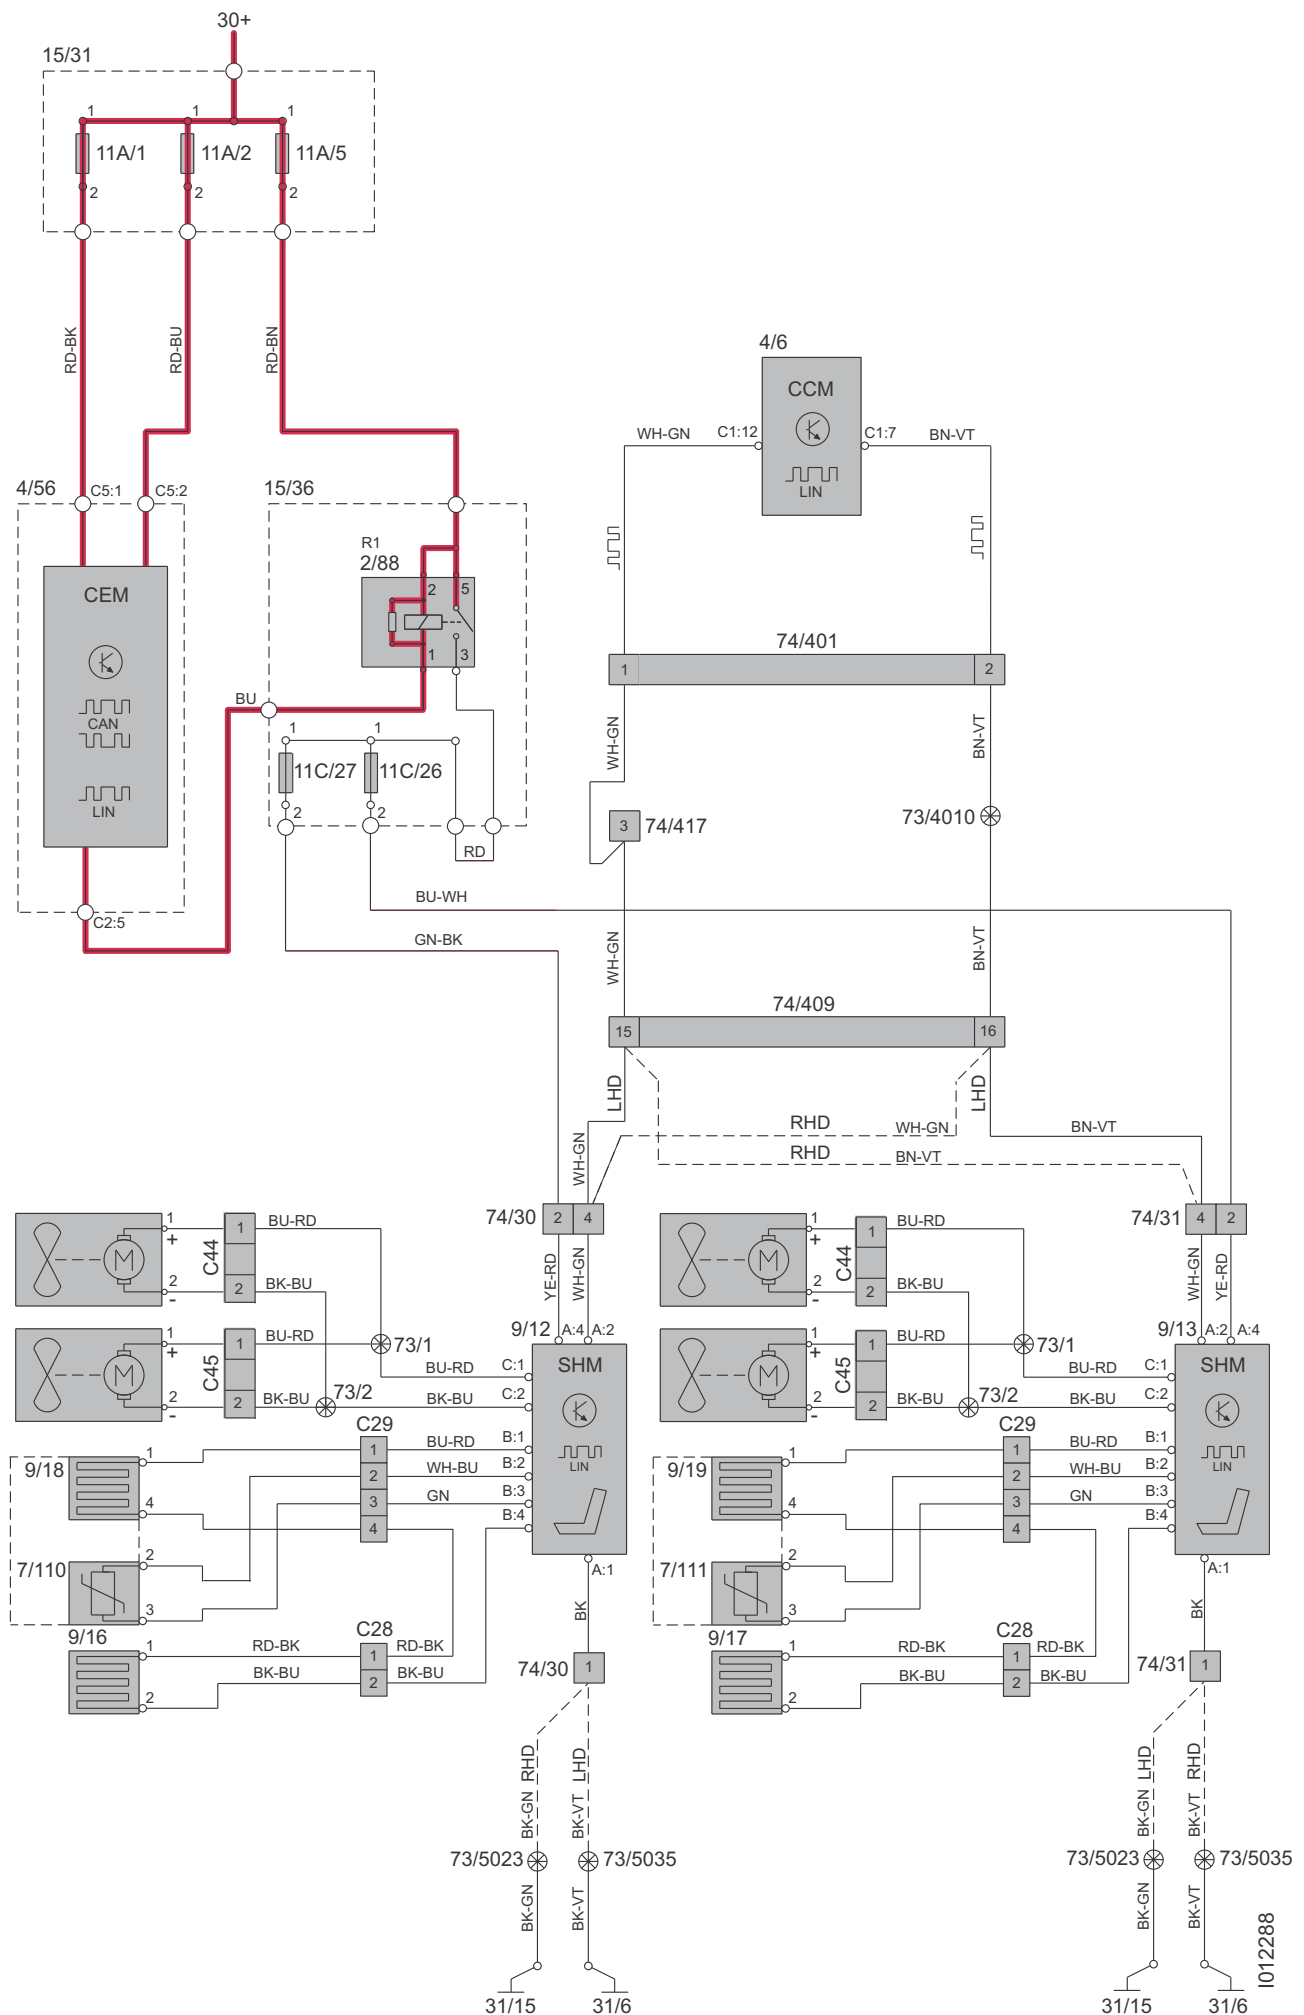


Group 85 Interior equipment


Heated front seats without fans

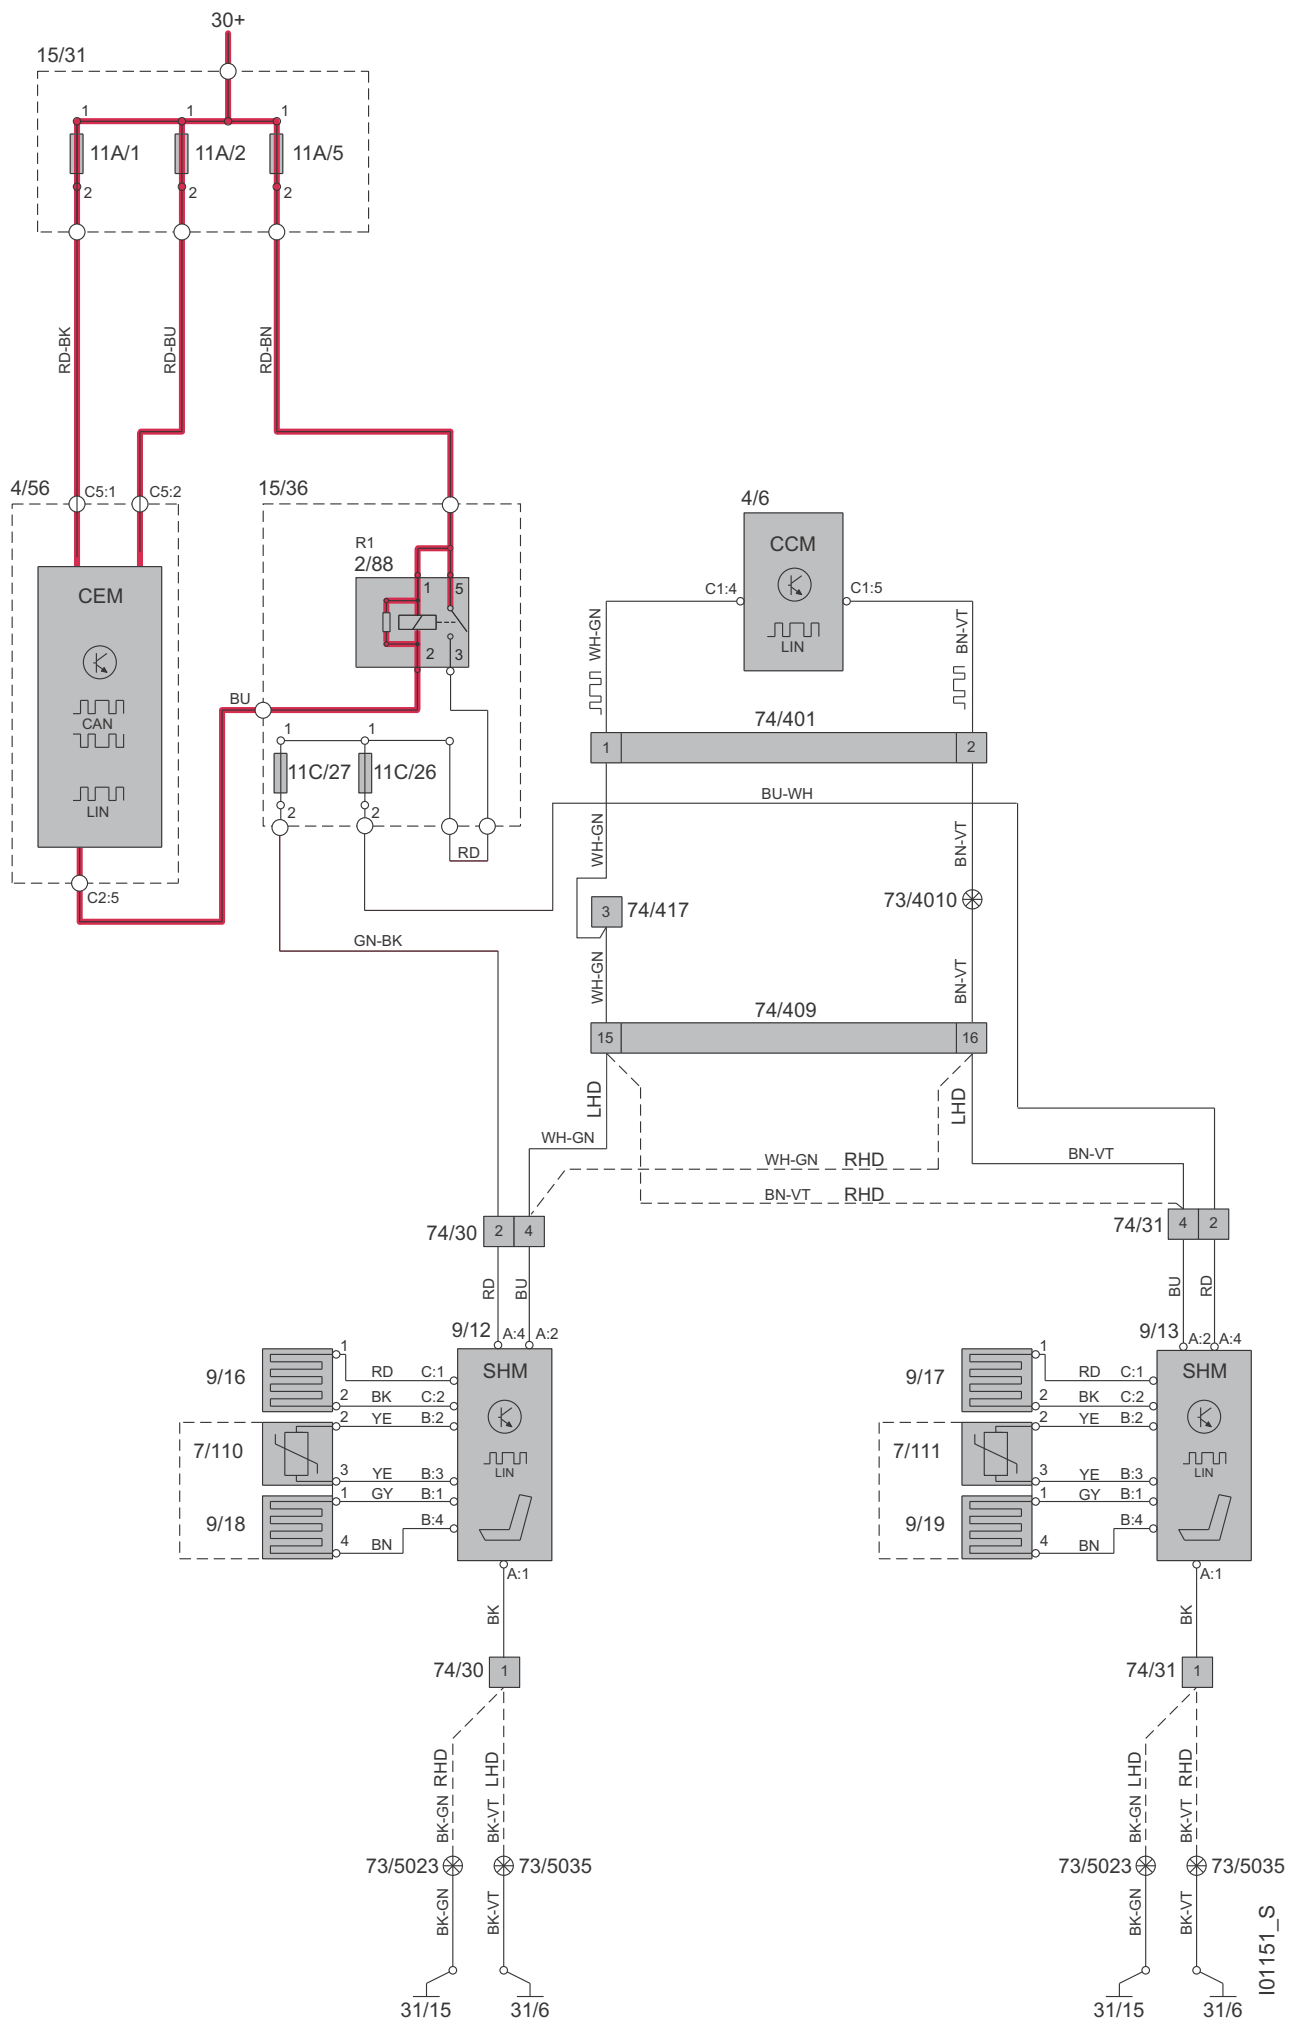


Group 85 Interior equipment Heated rear seat

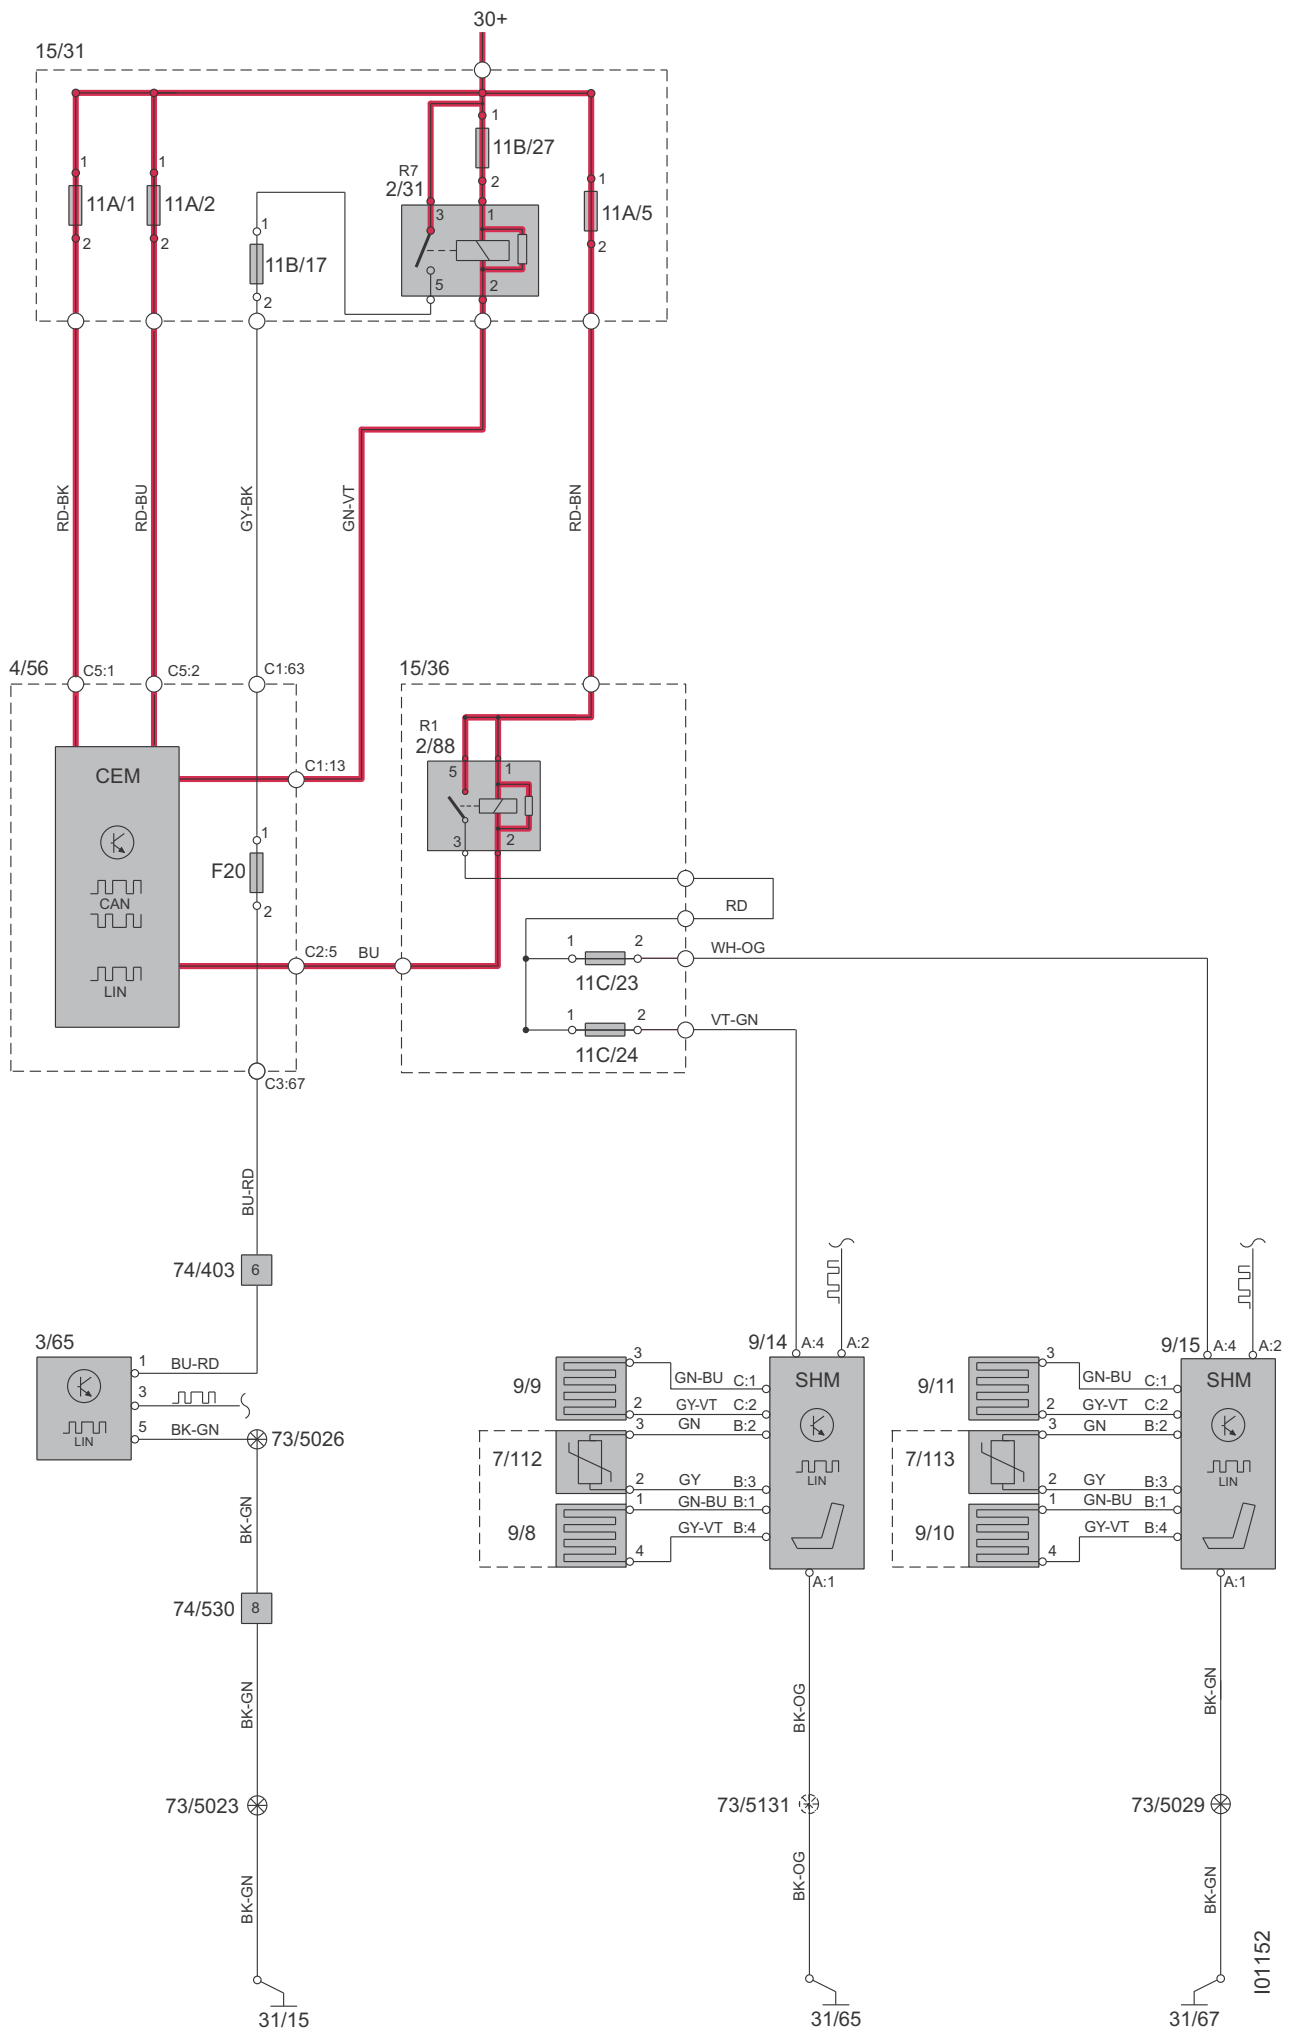


Group 87 Climate control system
Climate control system PTC-elements

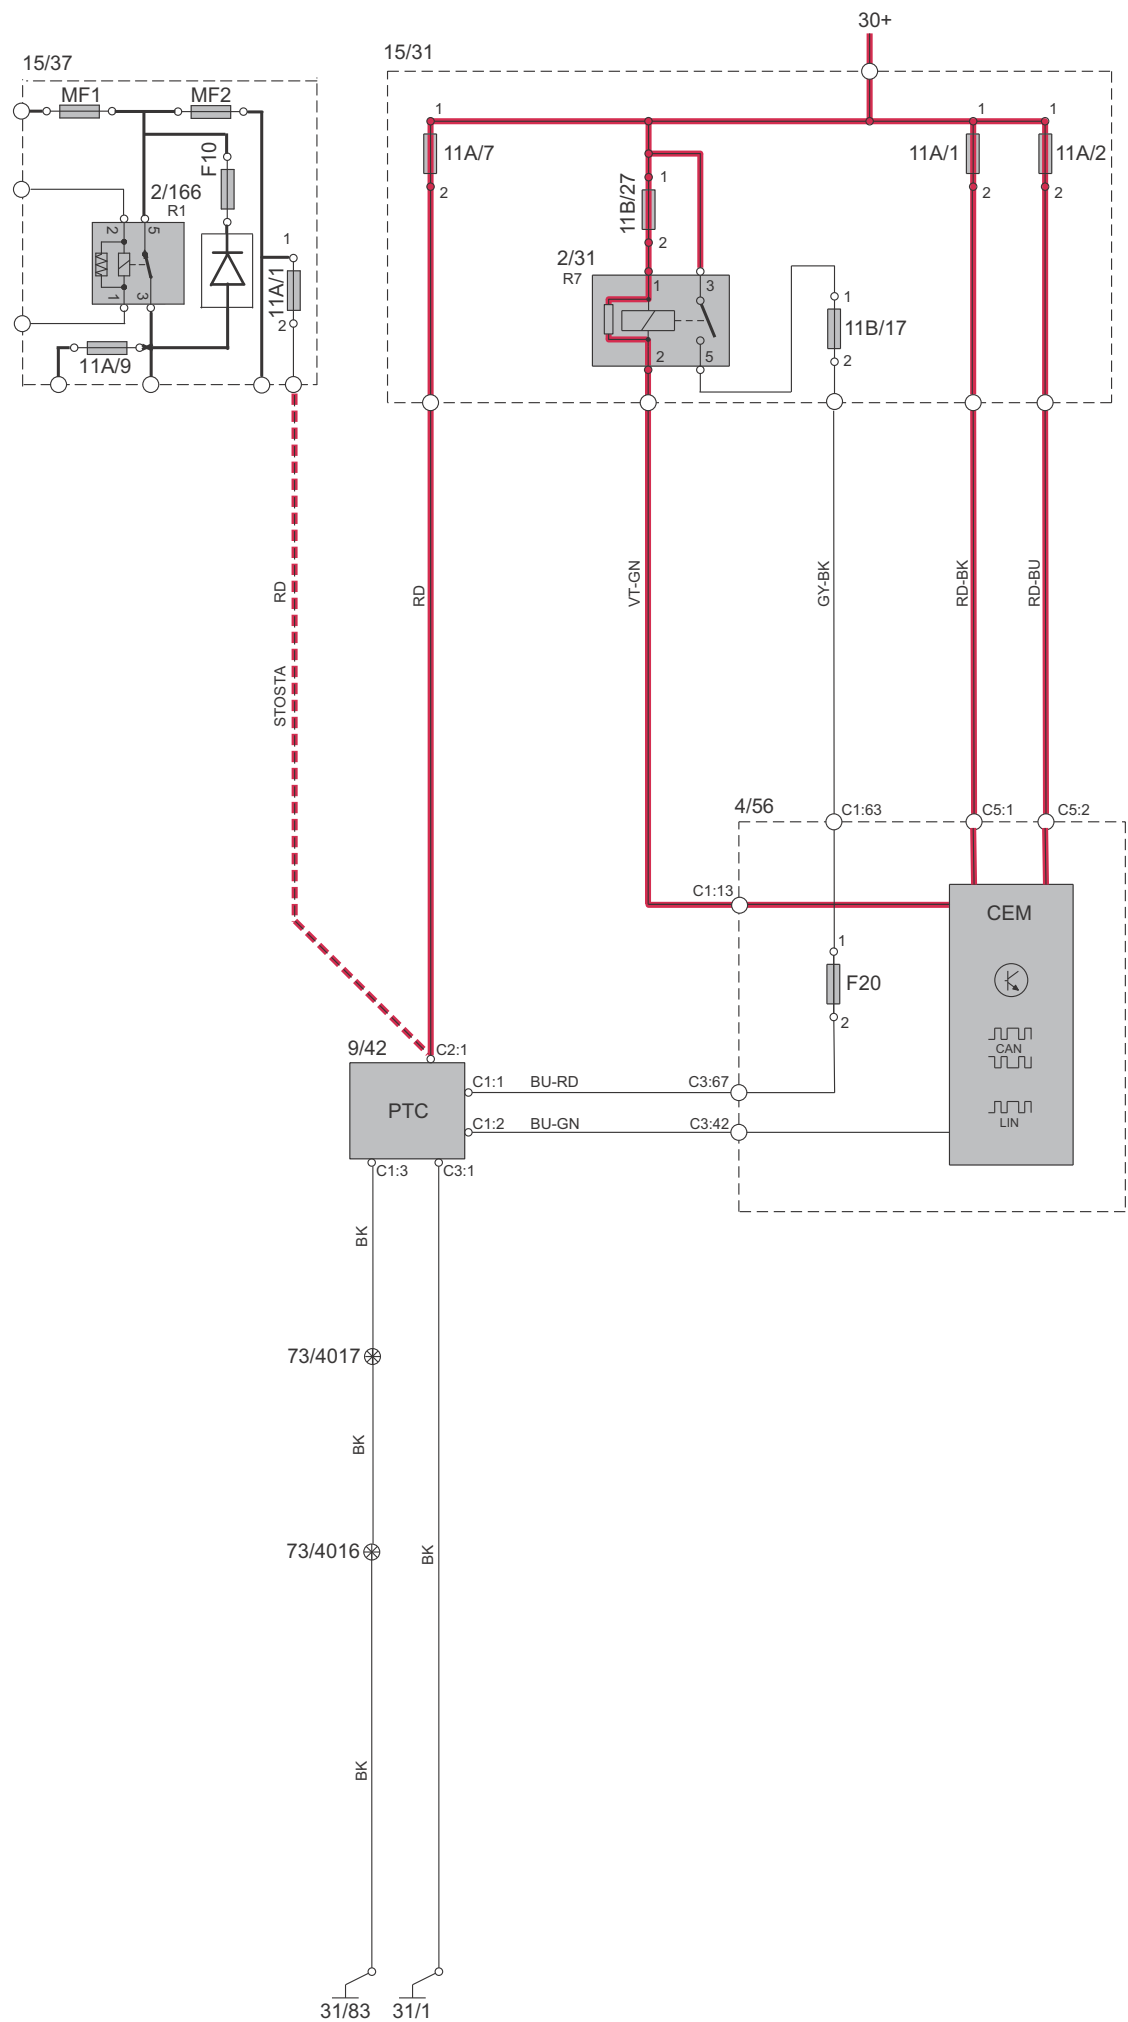

Group 87 Climate control system
Climate control system, 4-Cyl. 1:2

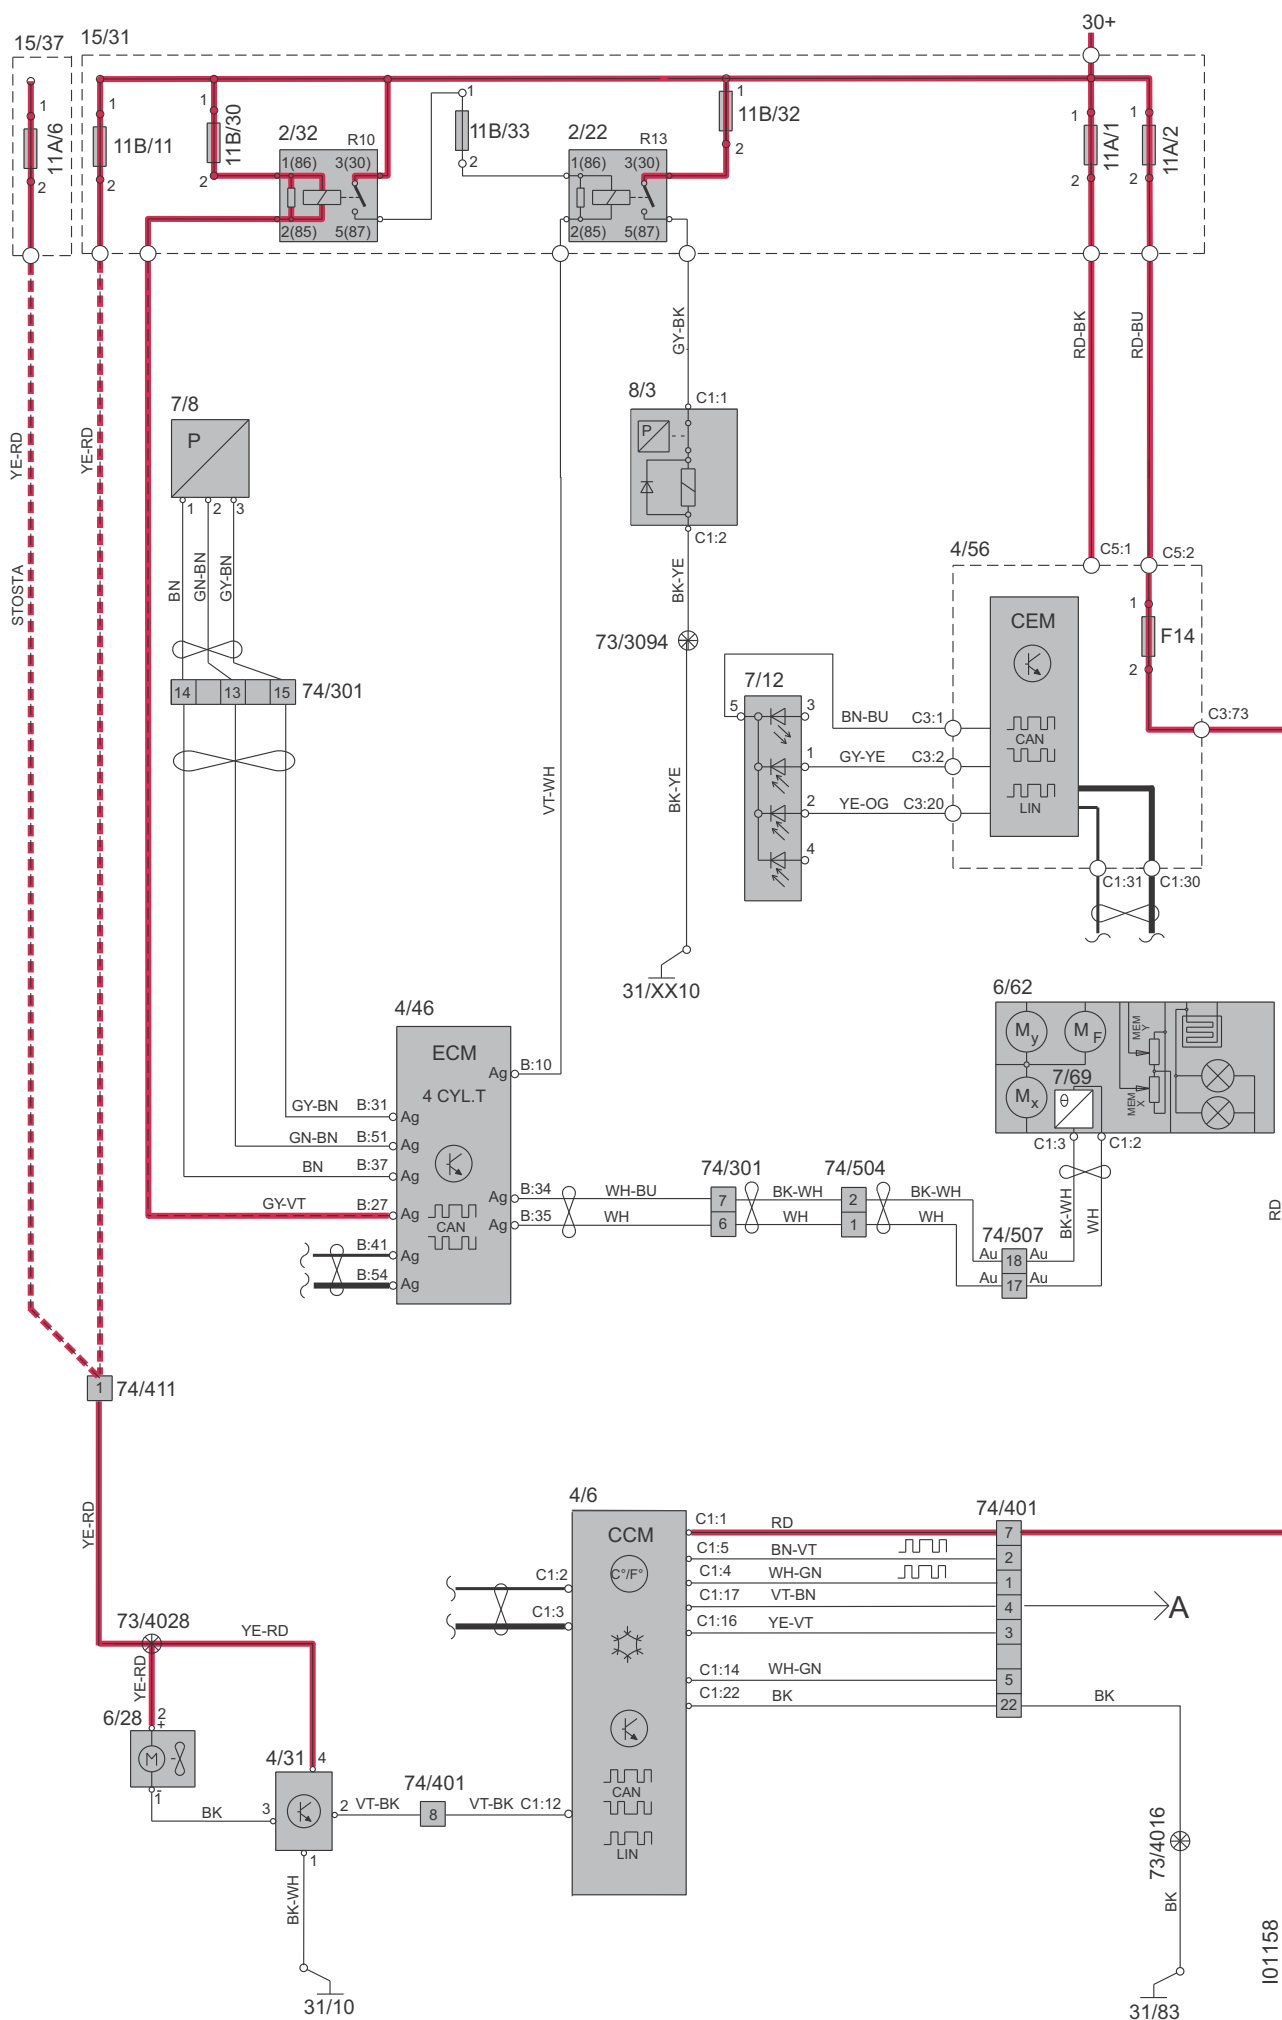


Group 87 Climate control system
Climate control system, 4-Cyl. 2:2

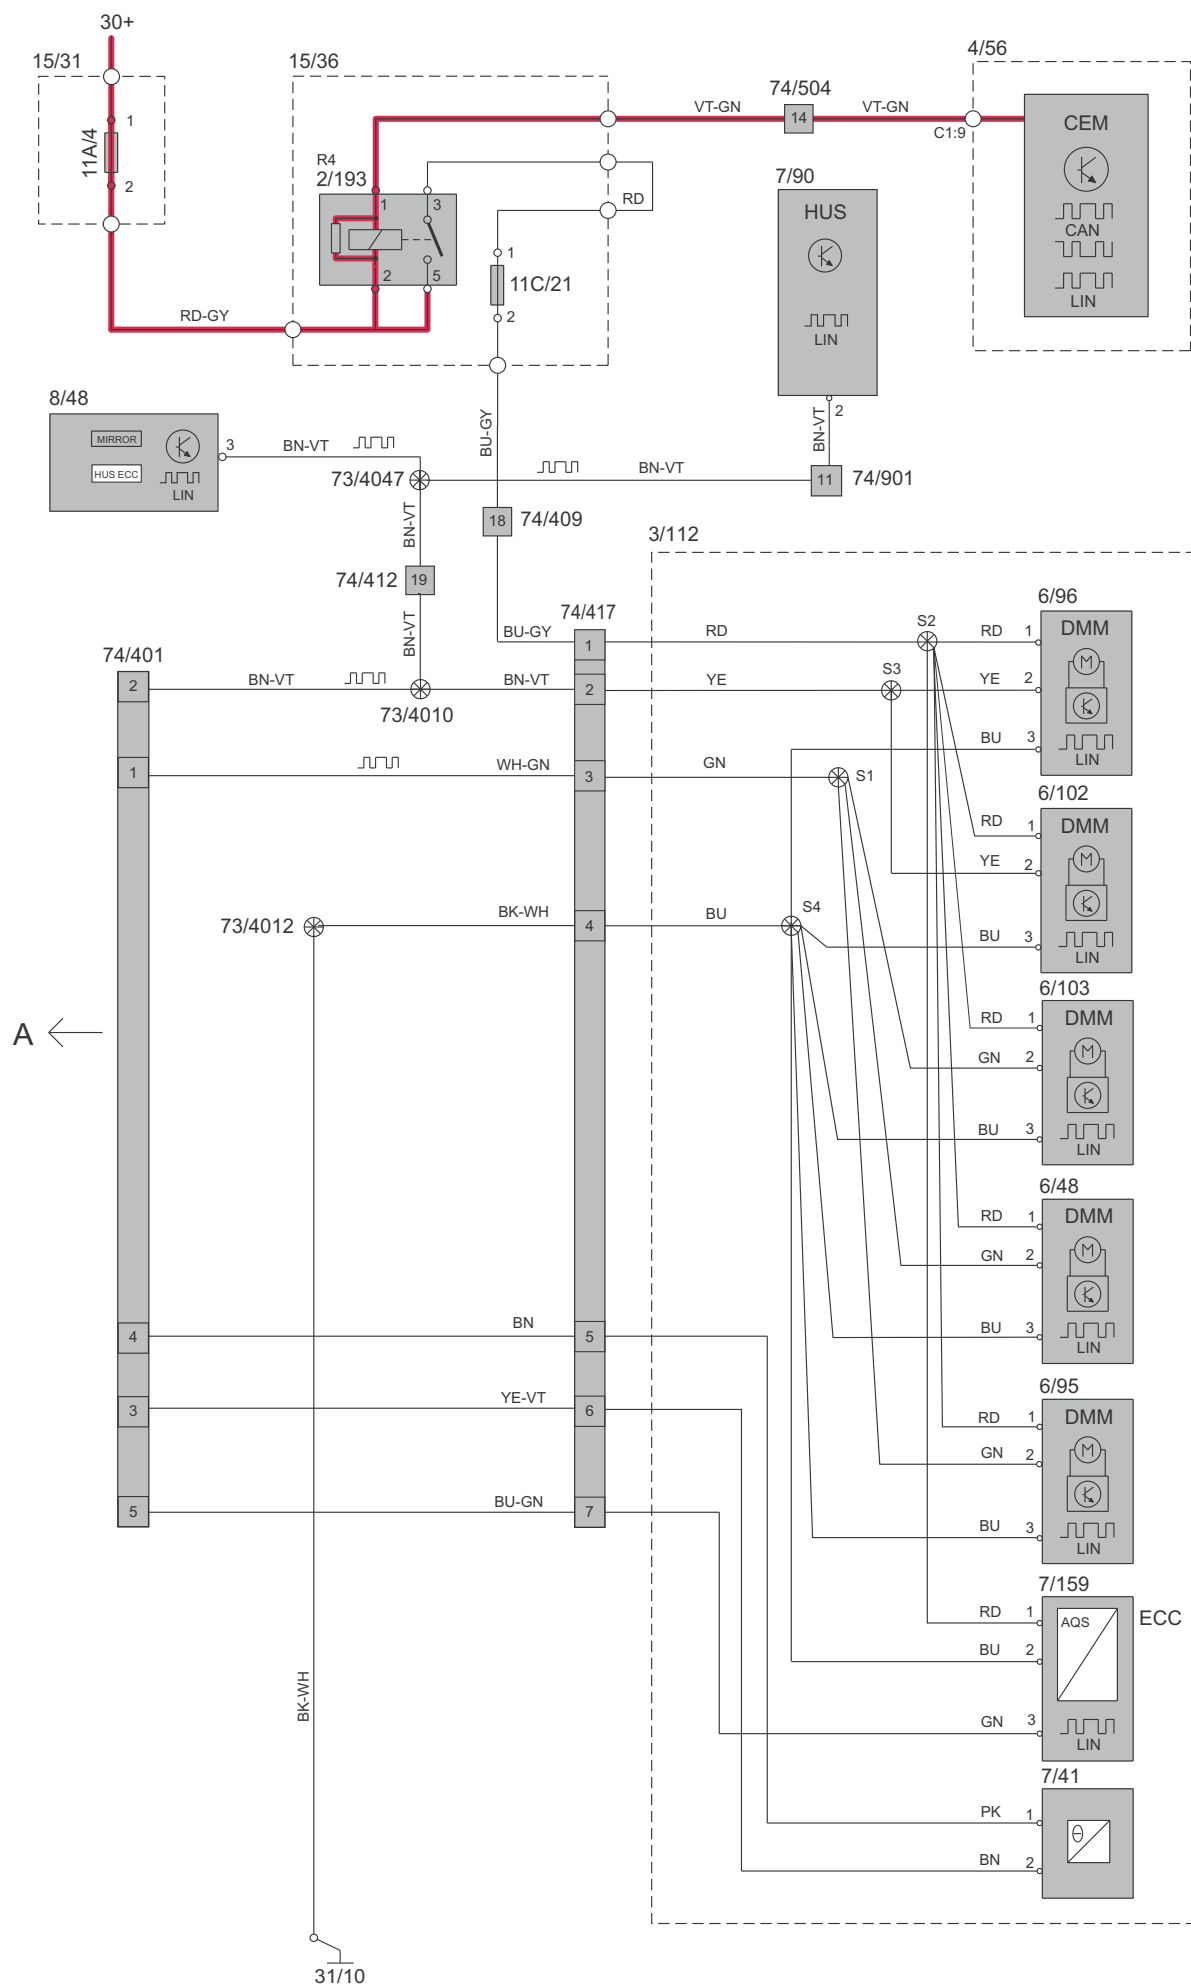

Group 87 Climate control system


Climate control system 4-Cyl. Diesel 1:2

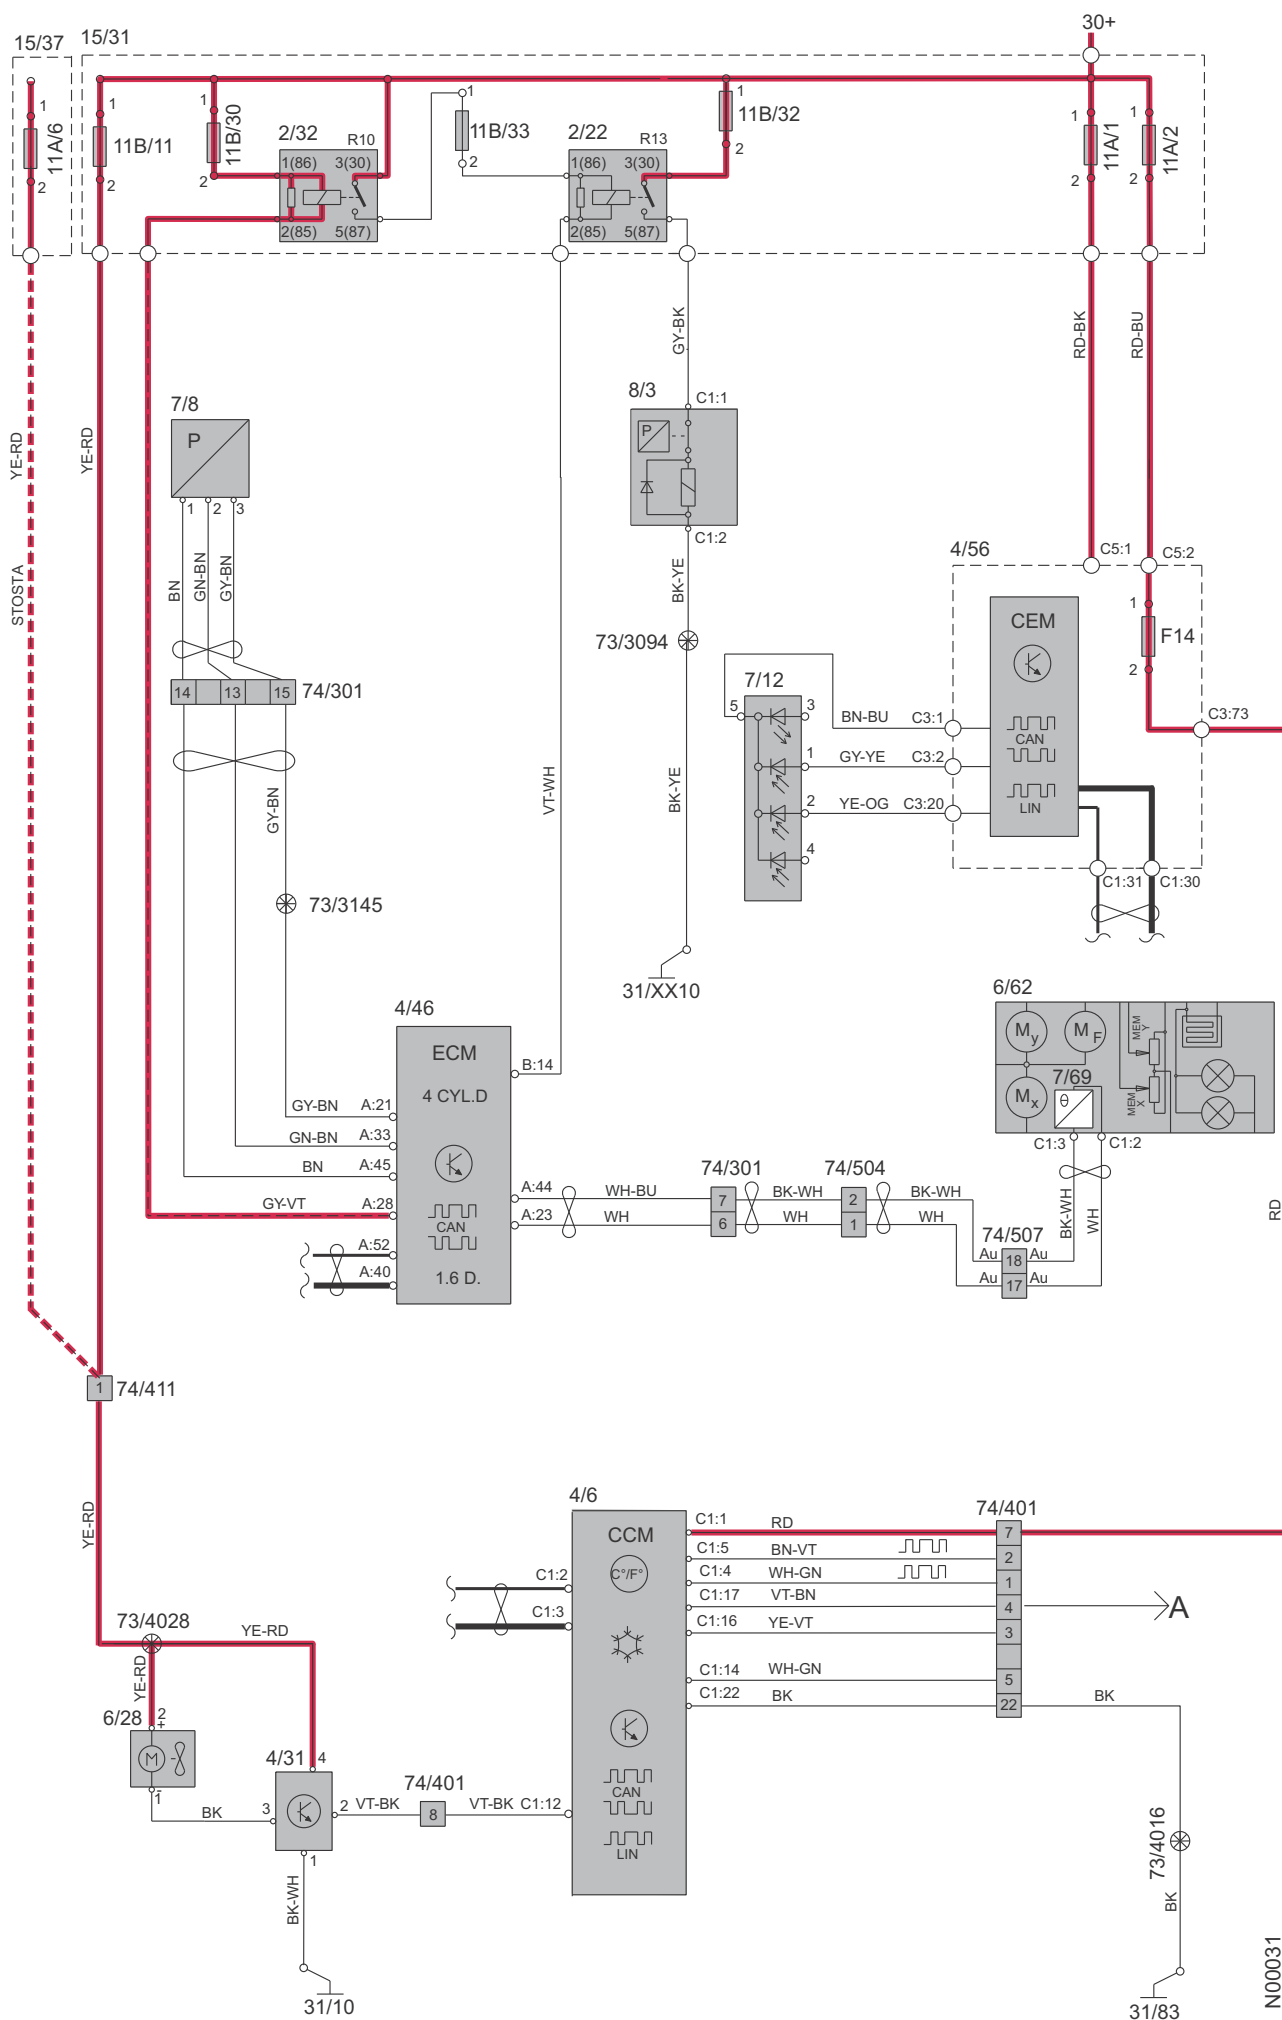


Climate control system 4-Cyl. Diesel 2:2



Group 87 Climate control system
Climate control system 5-Cyl. & 6-Cyl. 1:2

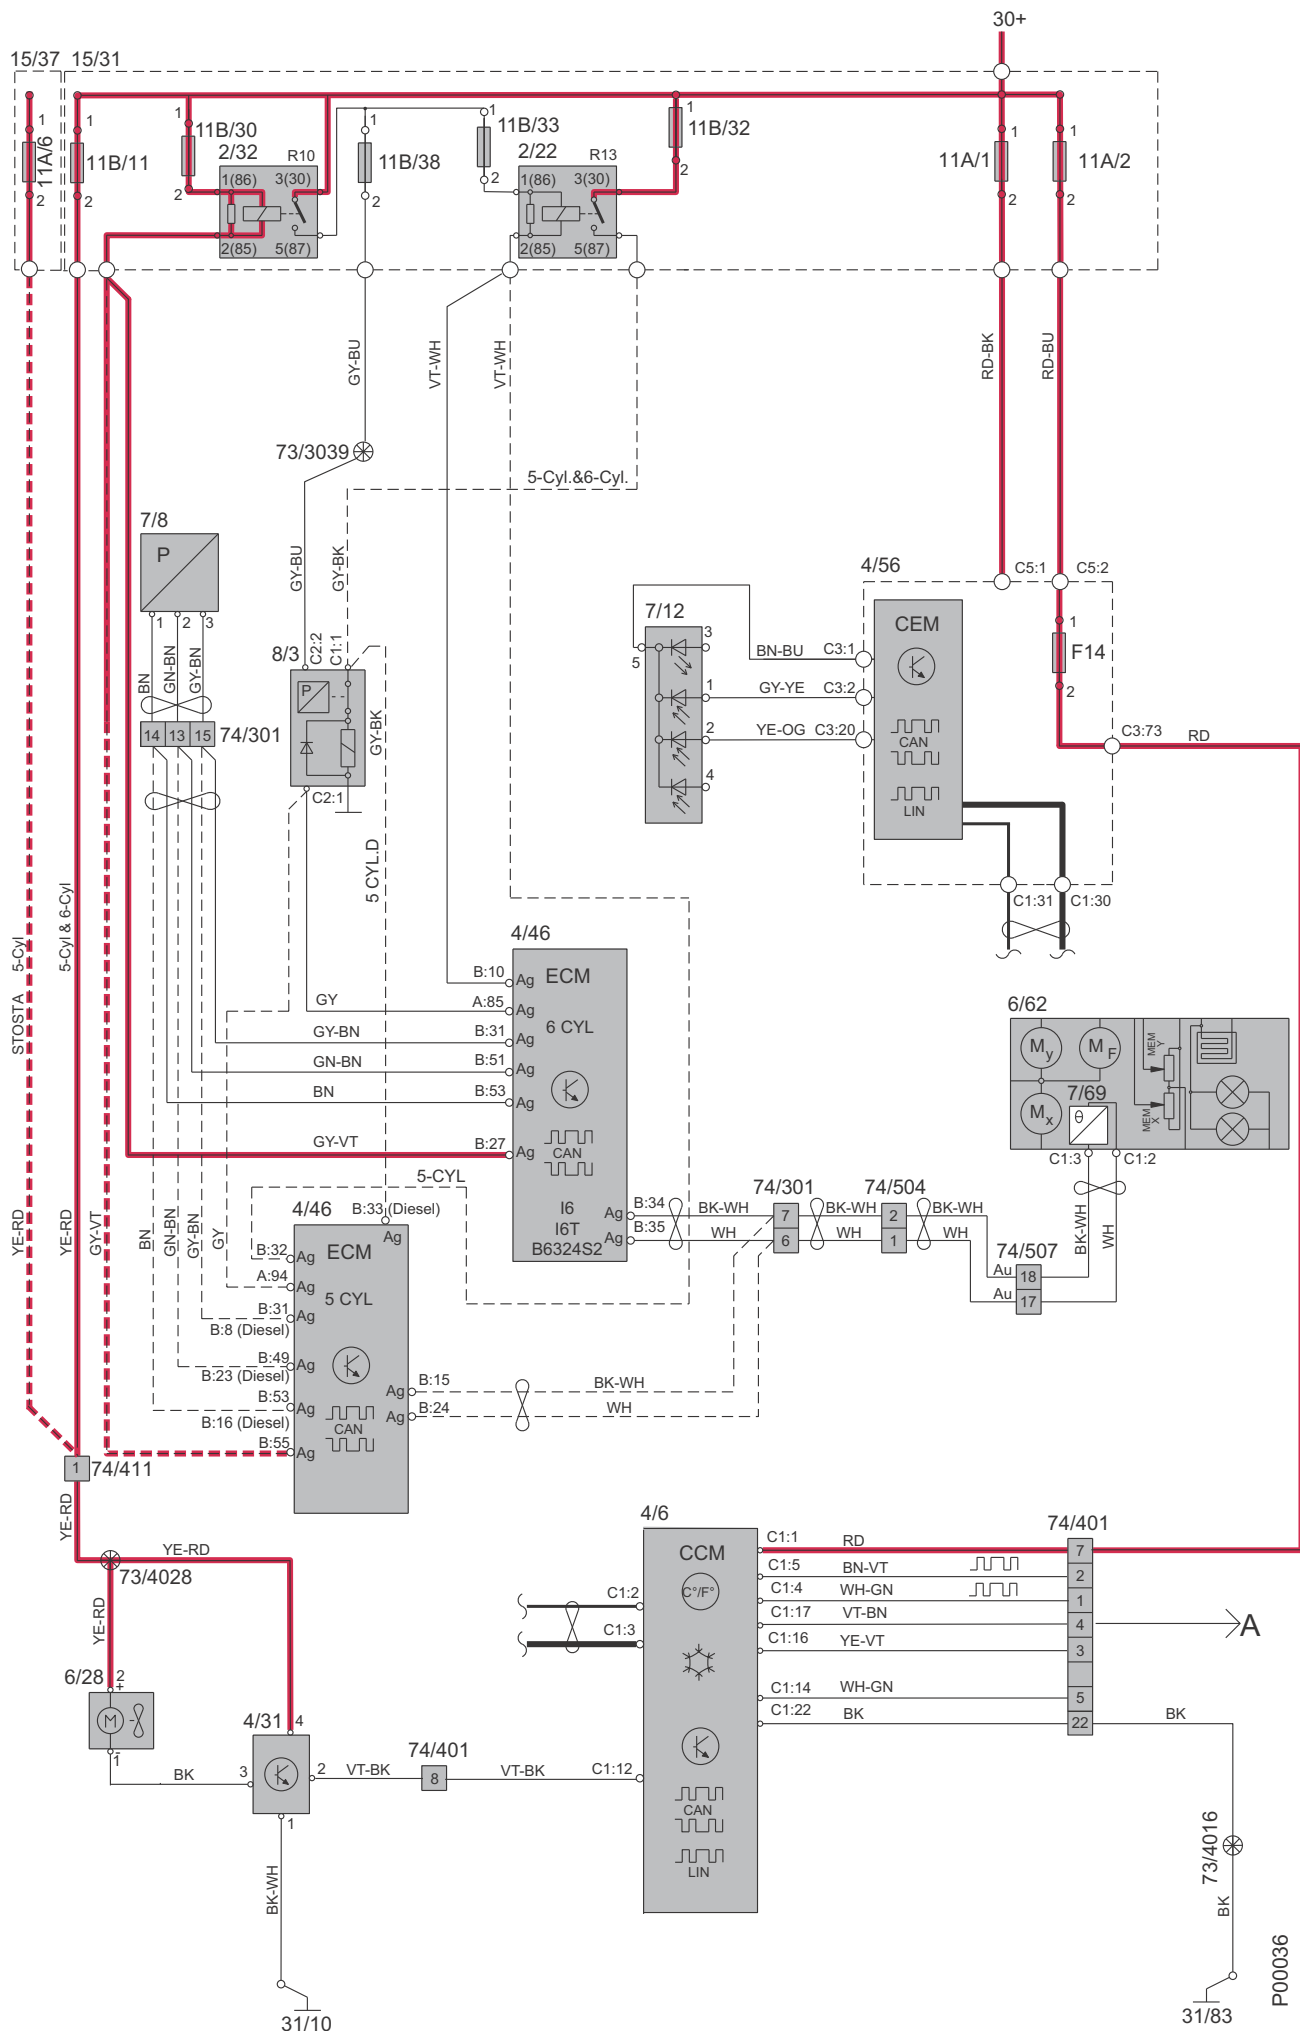


Group 87 Climate control system
Climate control system 5-Cyl. & 6-Cyl. 2:2

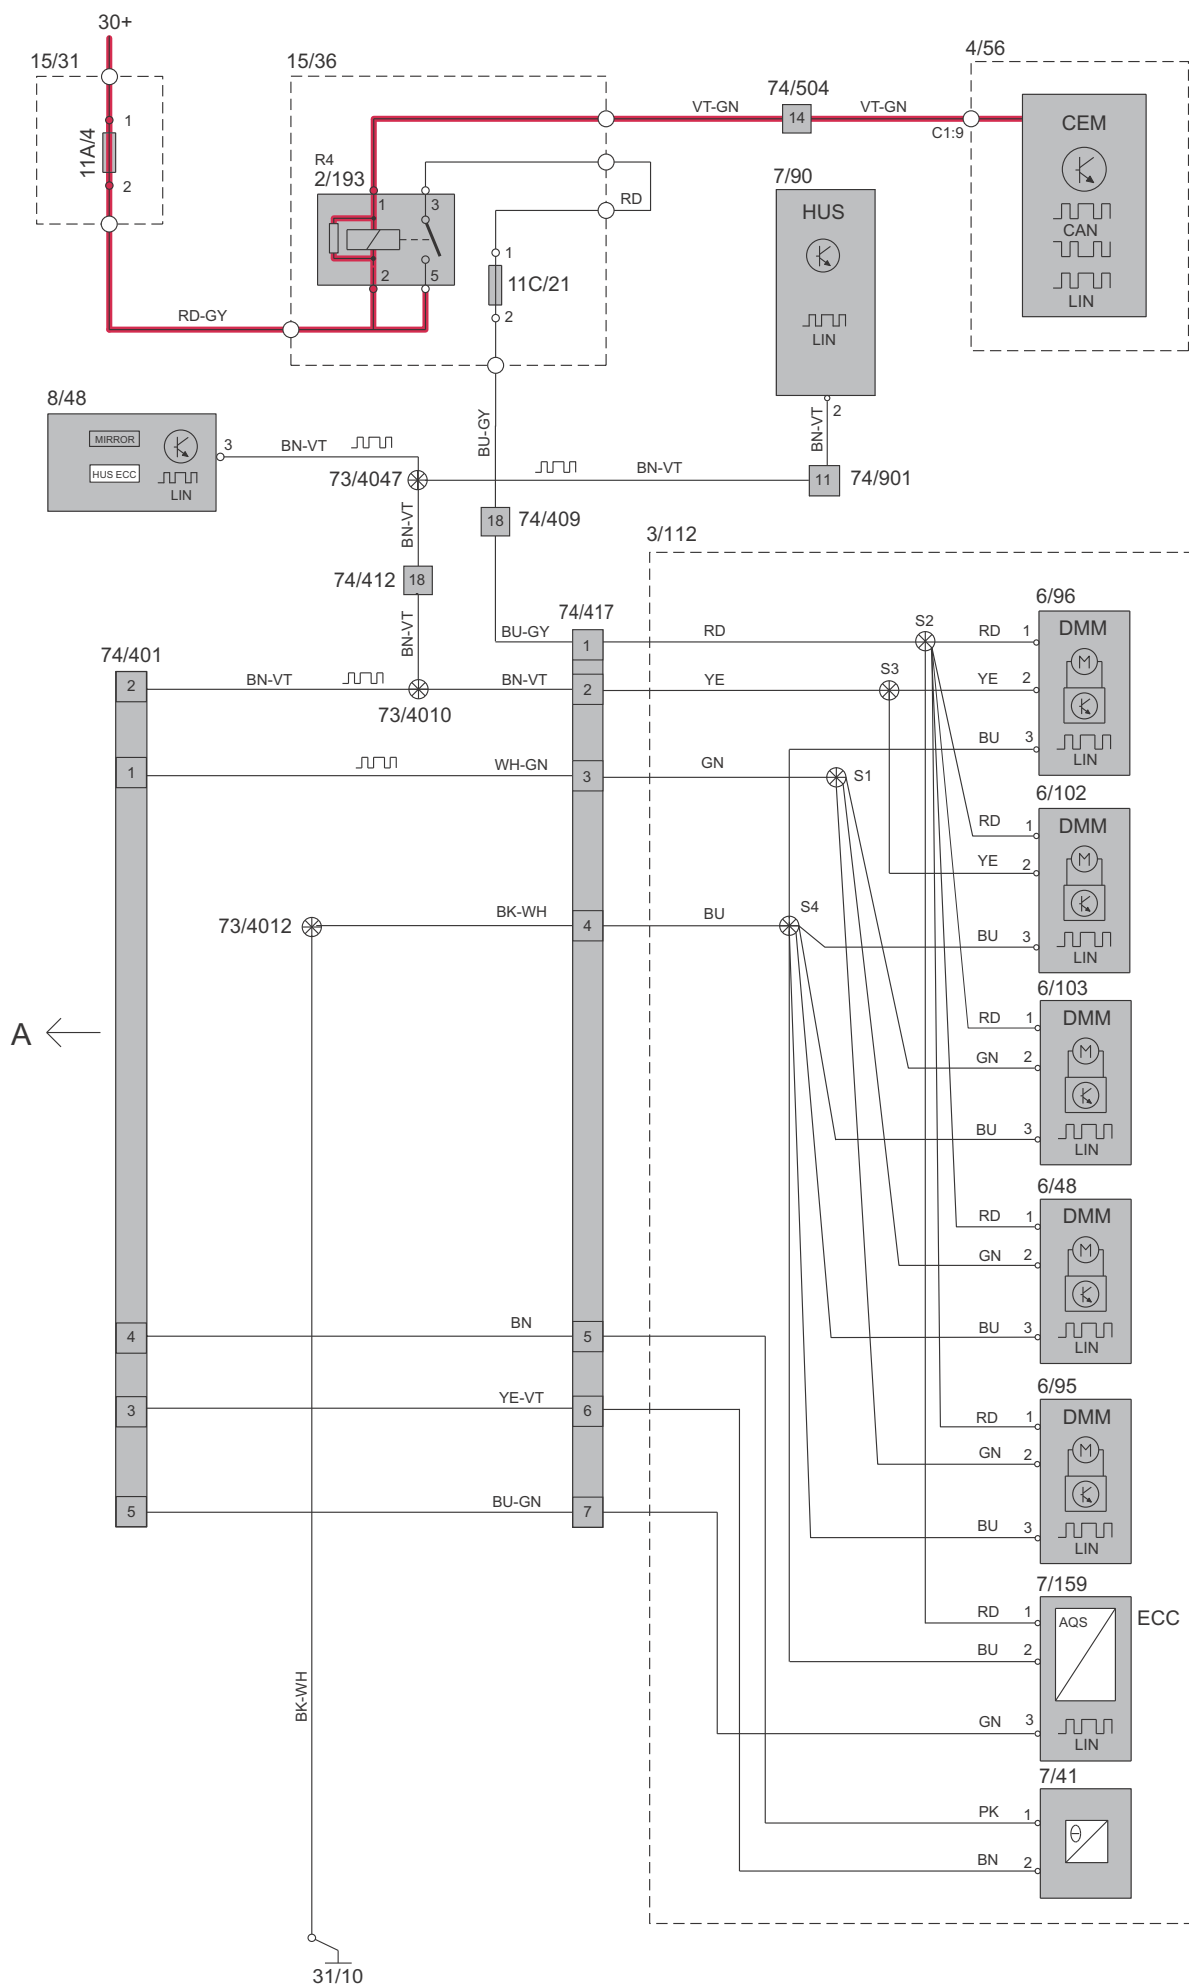


Group 87 Climate control system

Parking heater, auxiliary heater

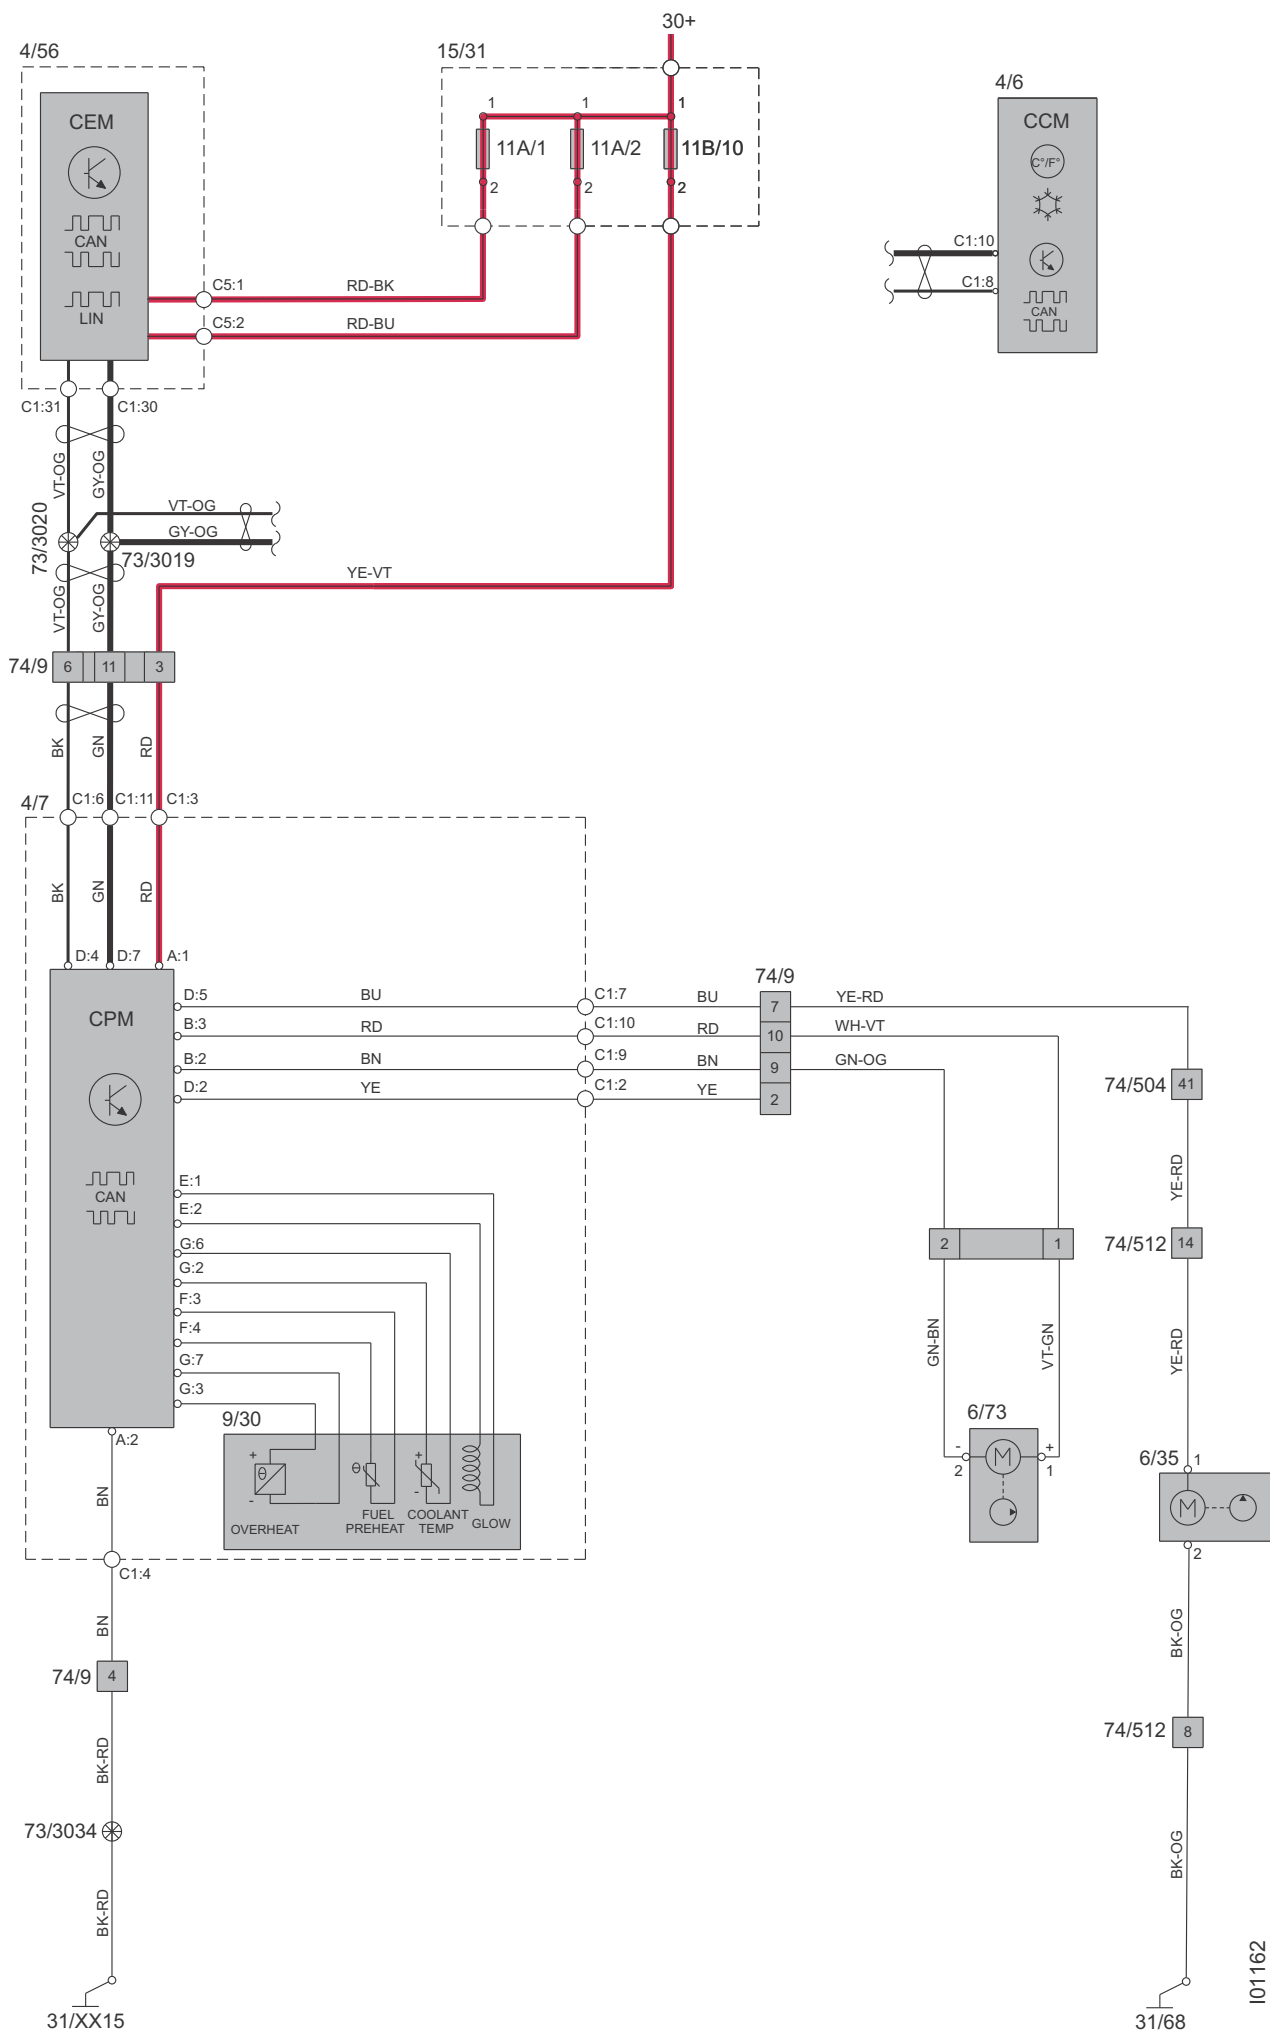


Group 87 Climate control system, Accessories

Parking heater, remote start

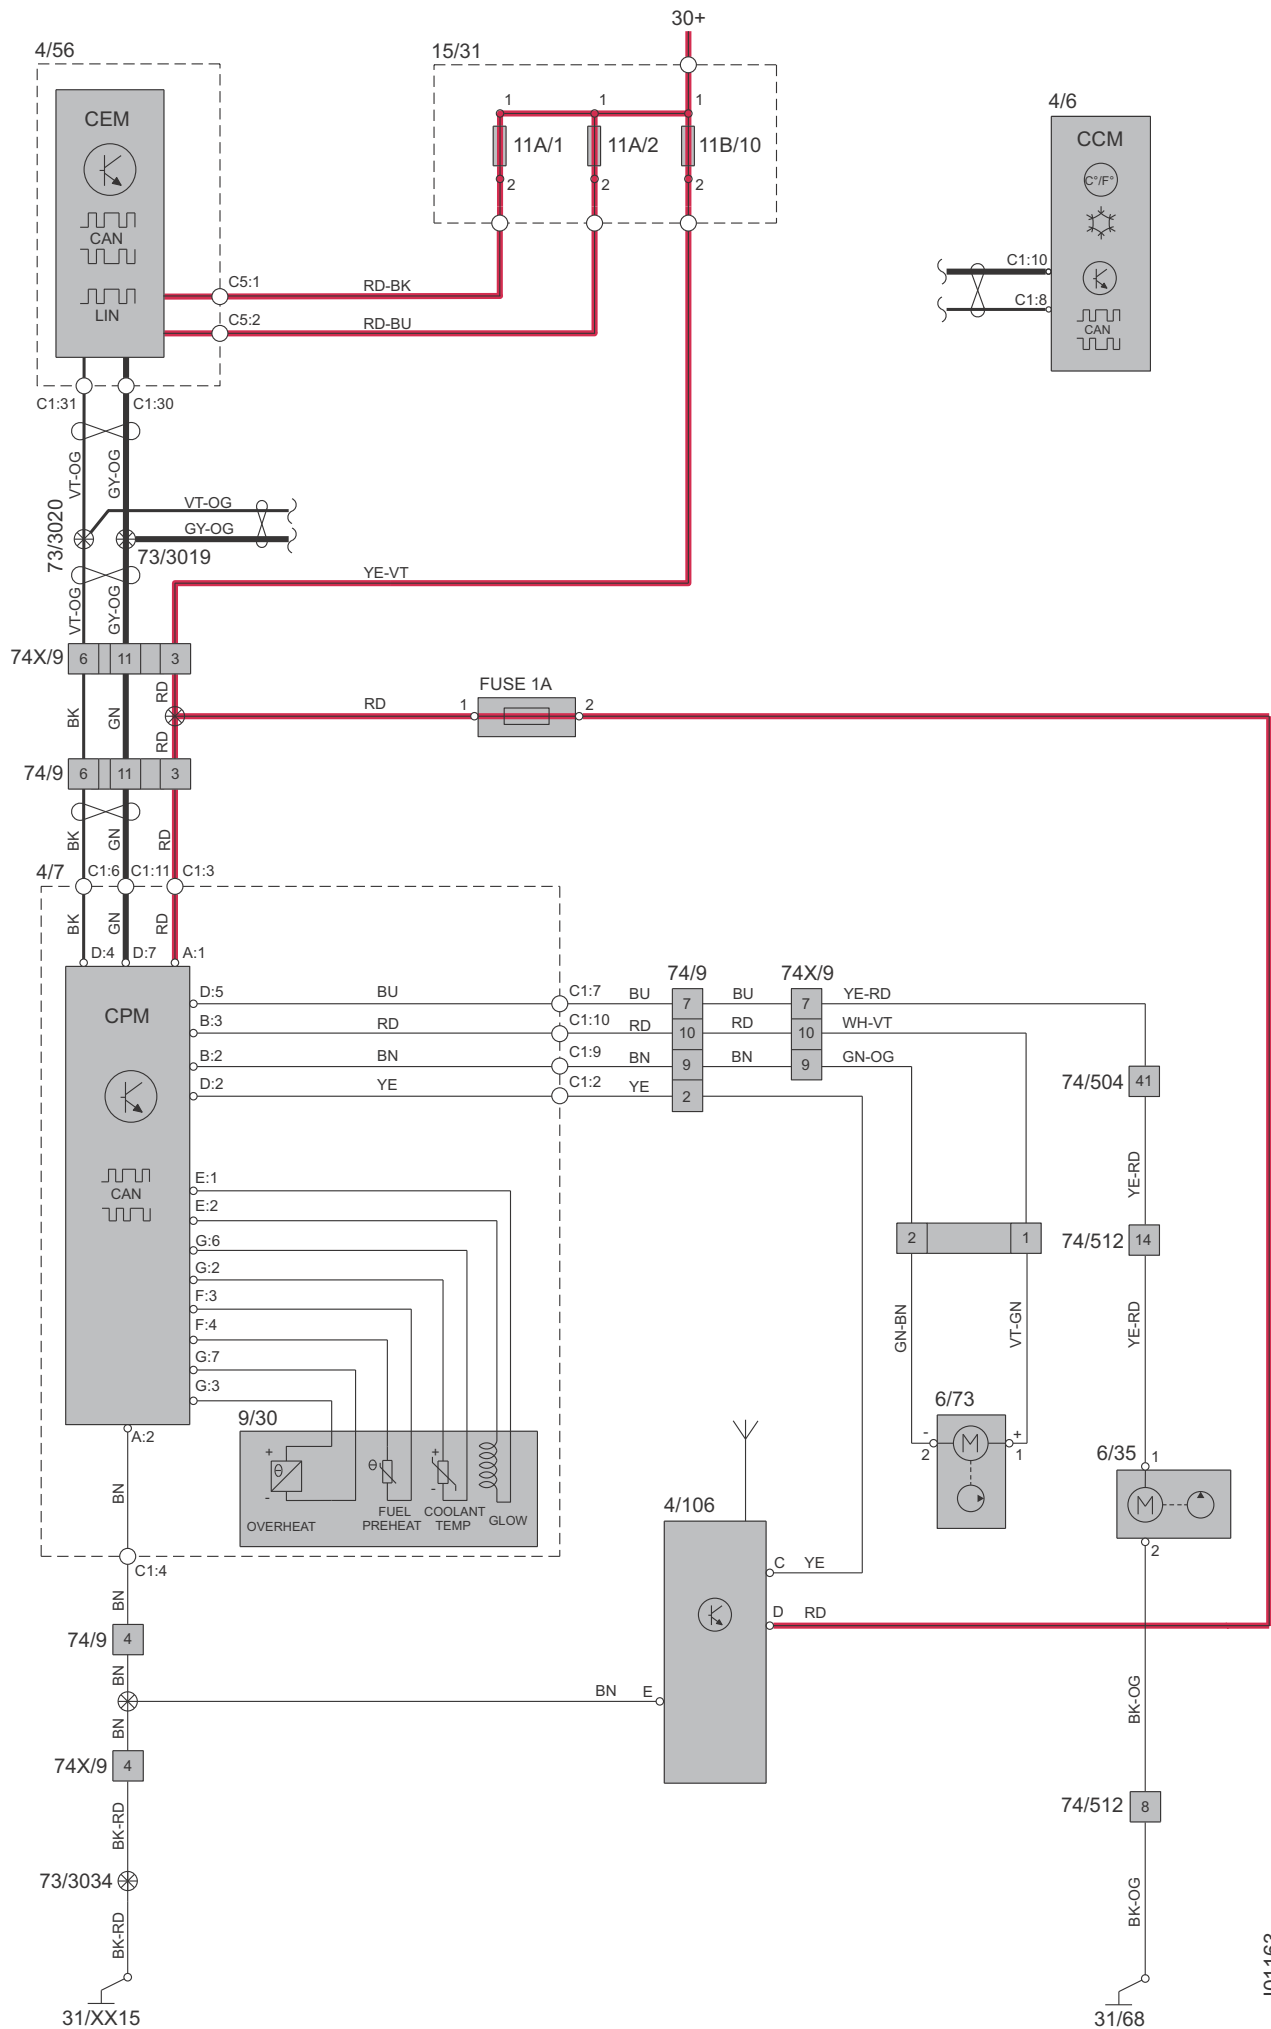


Group 88 Internal equipment
Supplemental restraint system 1:2

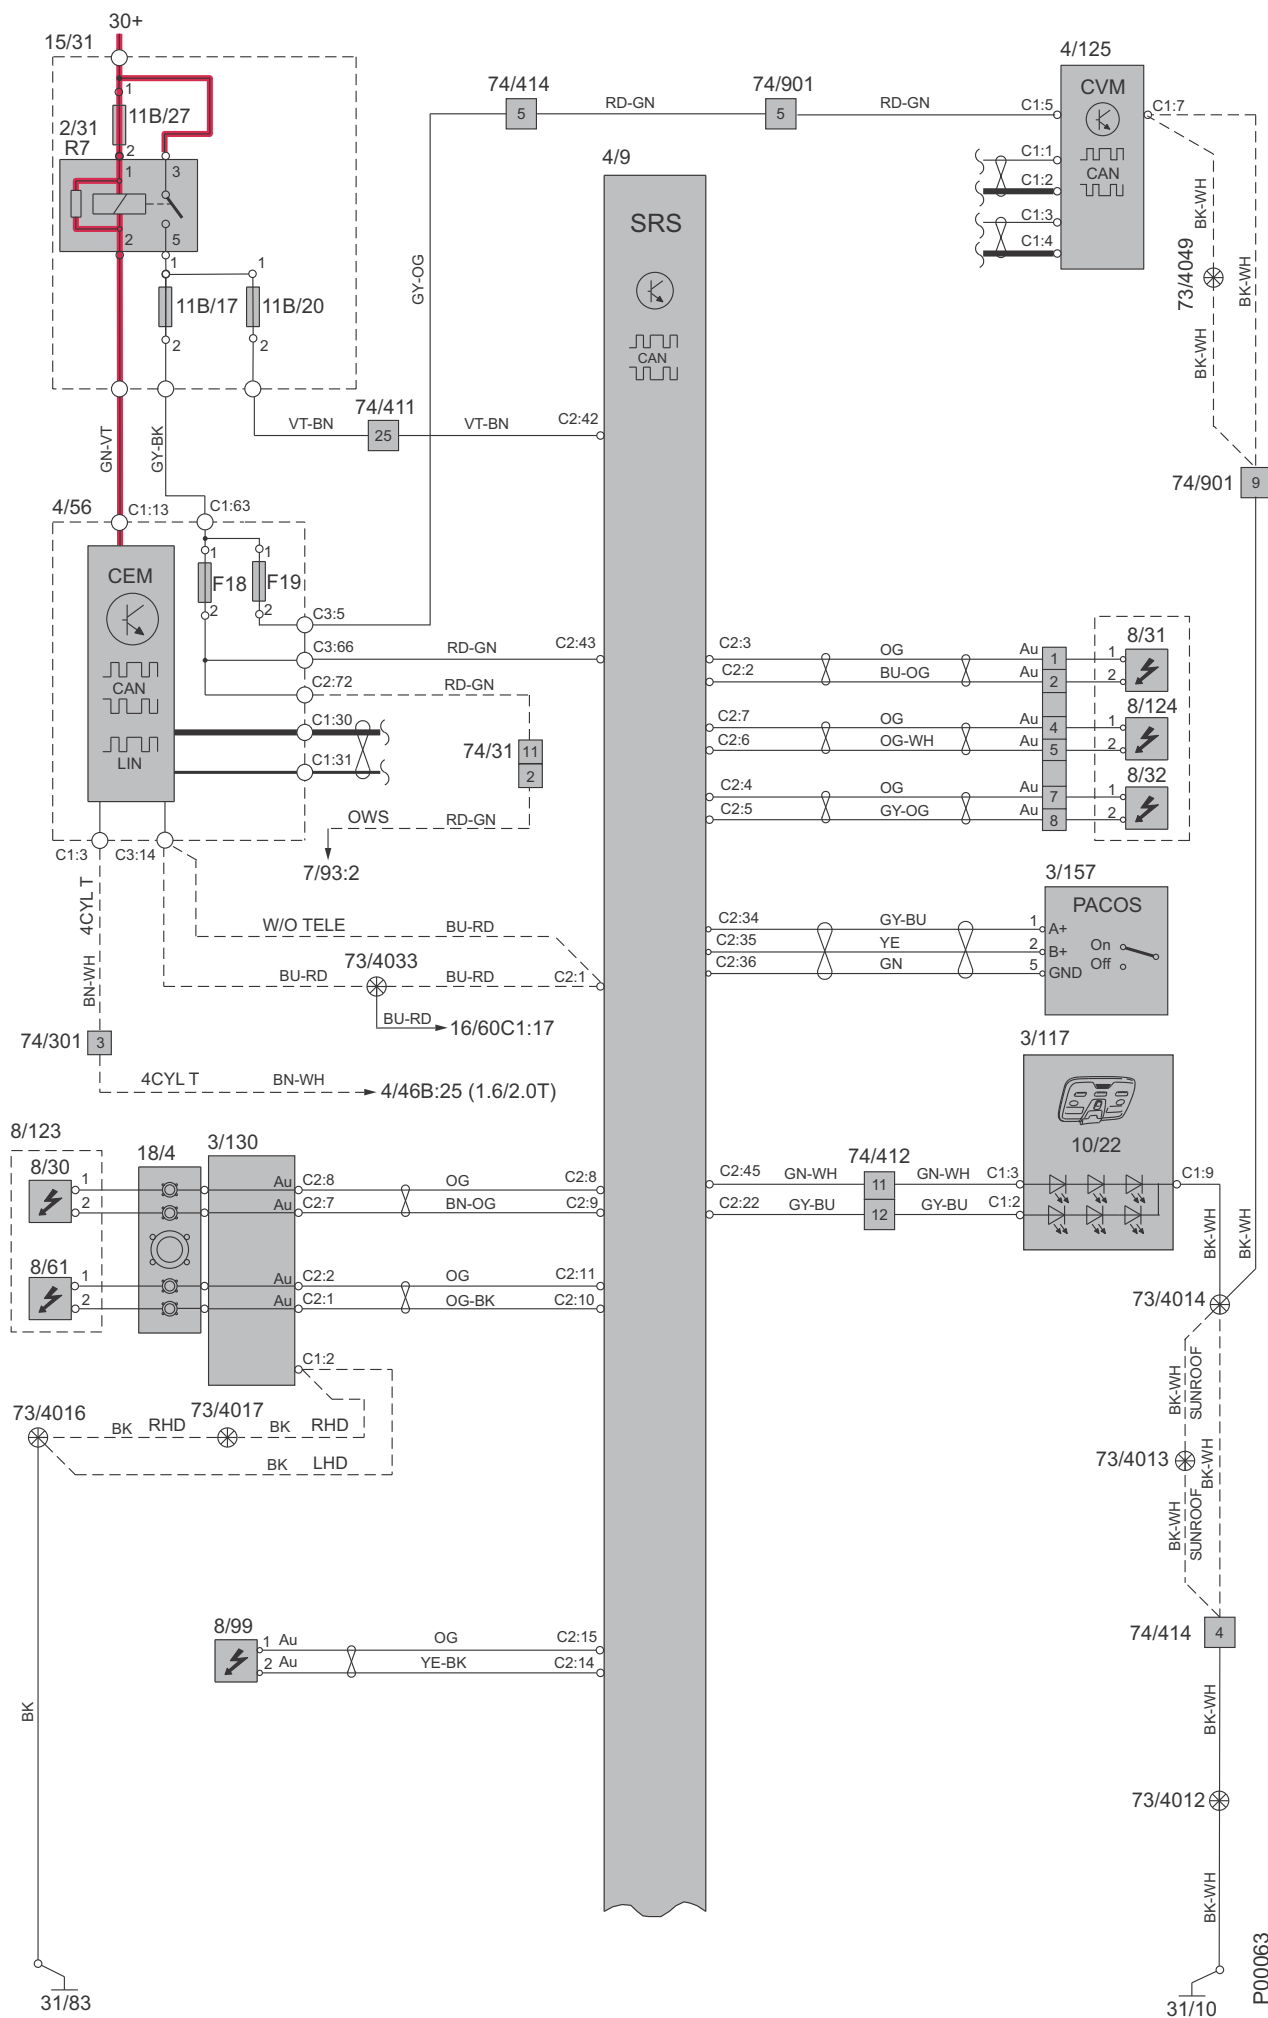


Group 88 Internal equipment
Supplemental restraint system 2:2

4/9

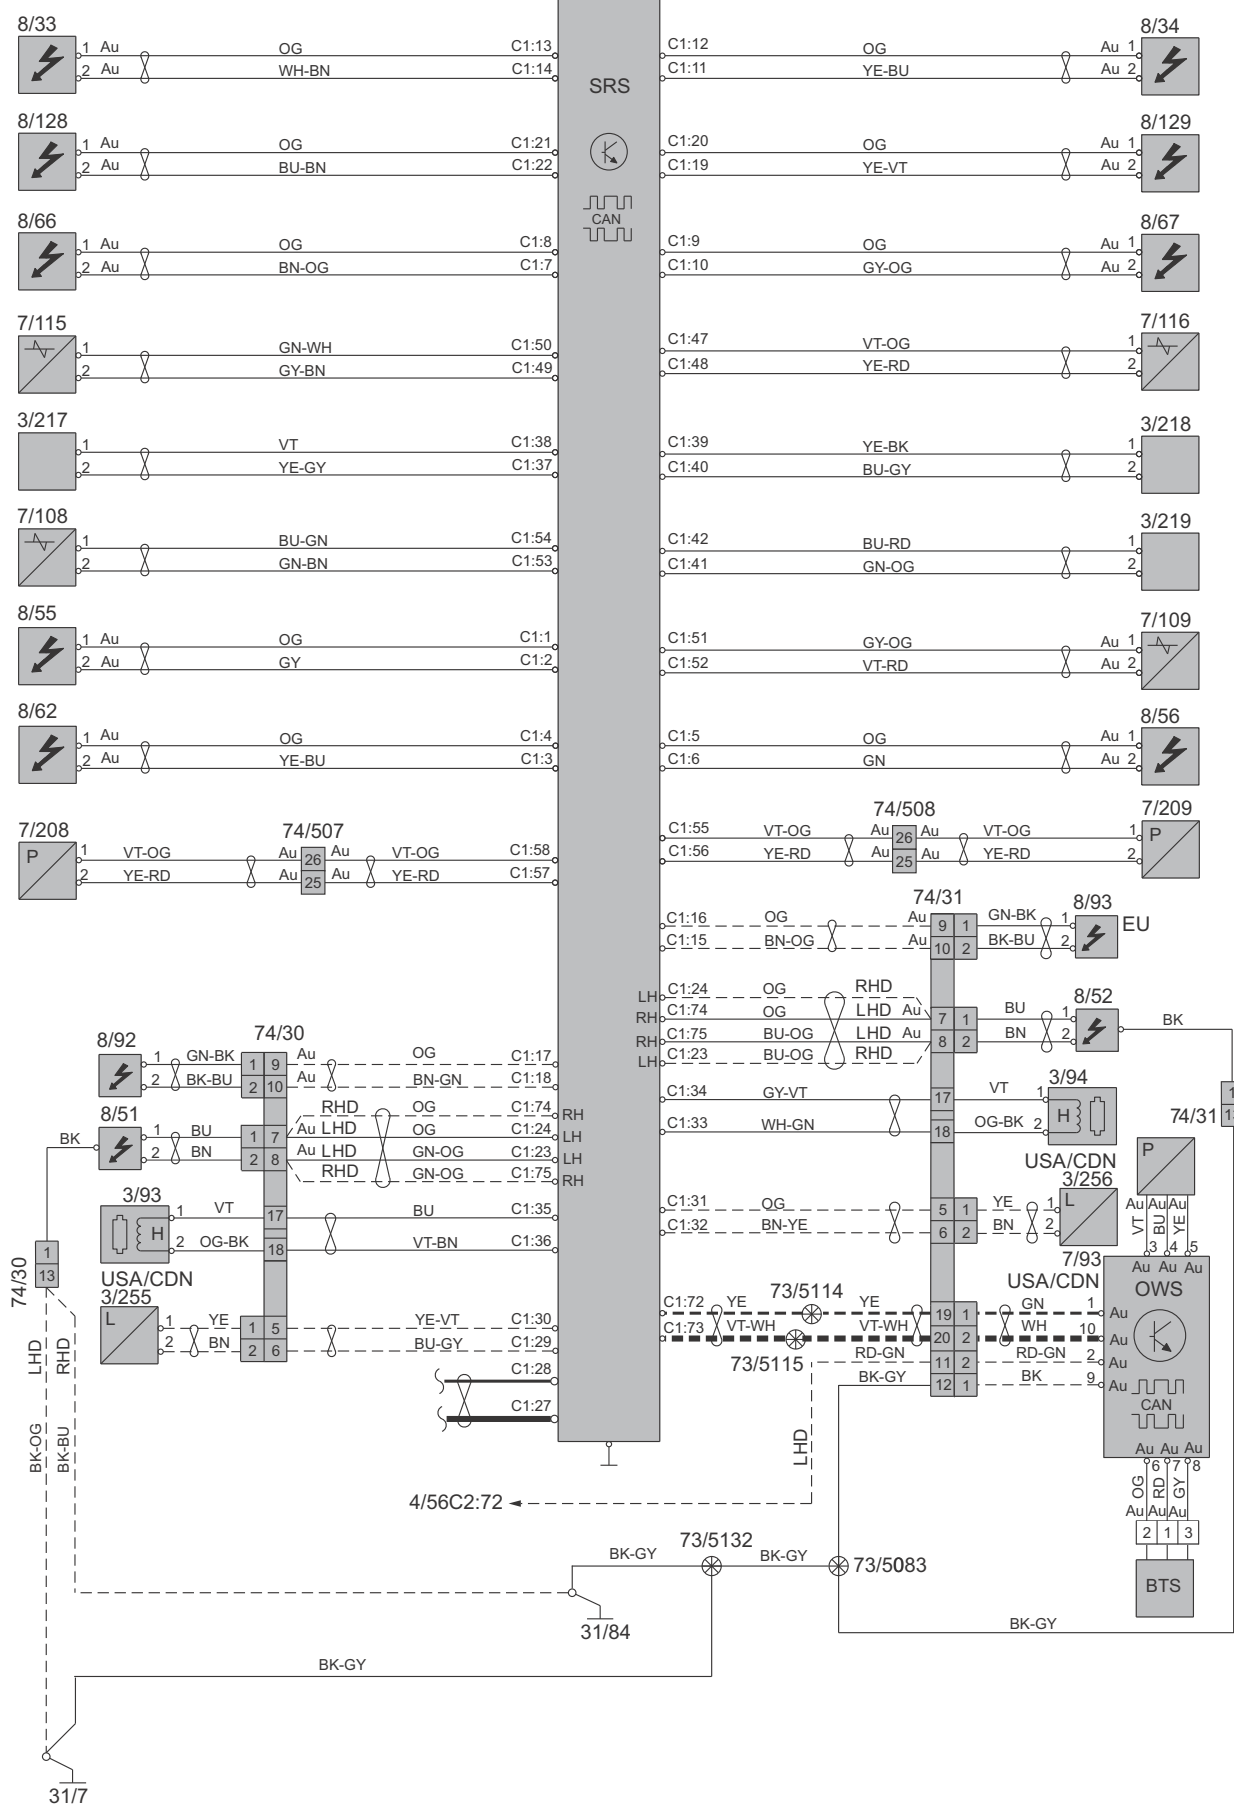


Group 88 Internal equipment
Rear-view mirror with automatic dimming

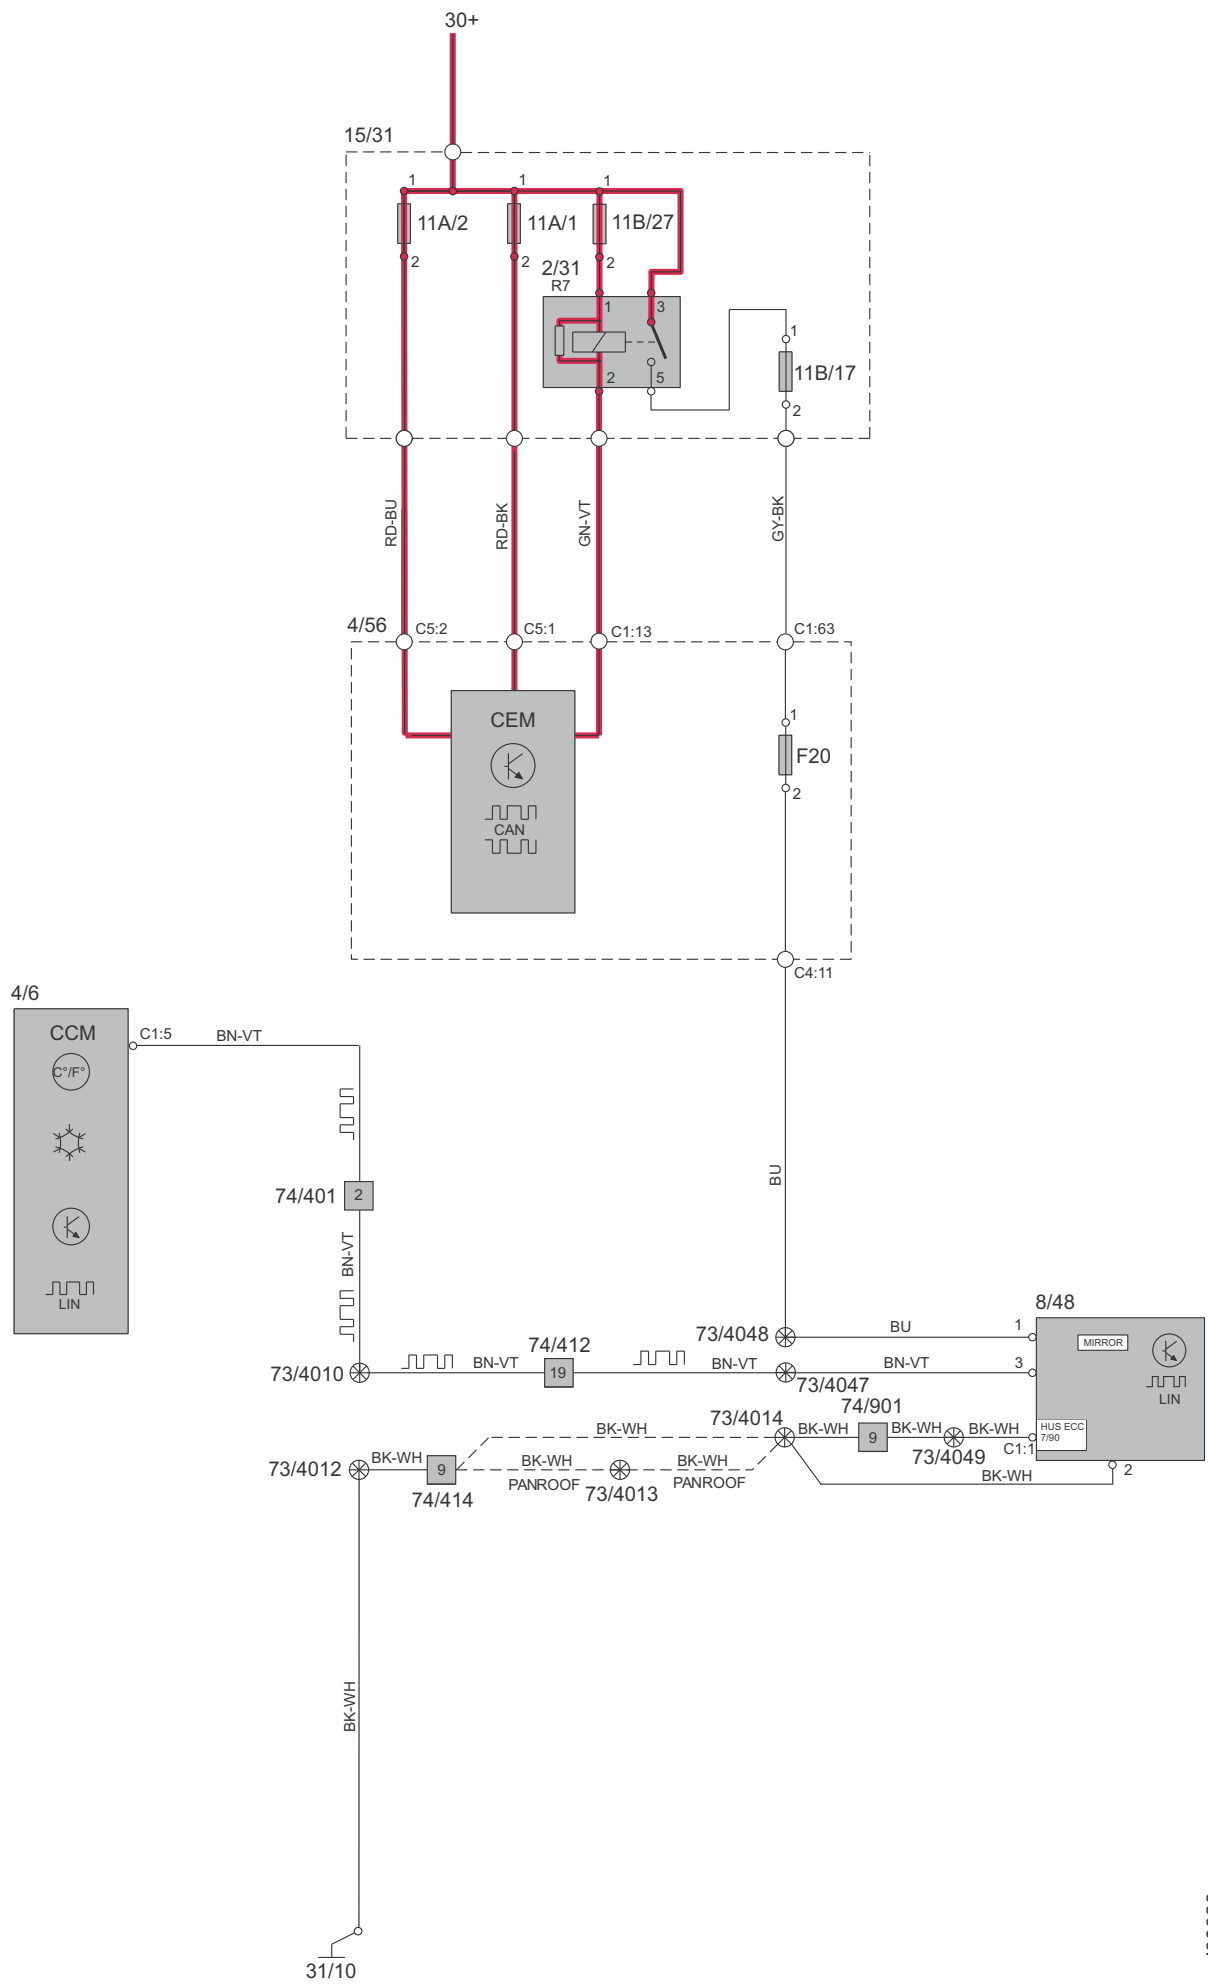


J00028

Group 88 Internal equipment
Remote control opener garage door

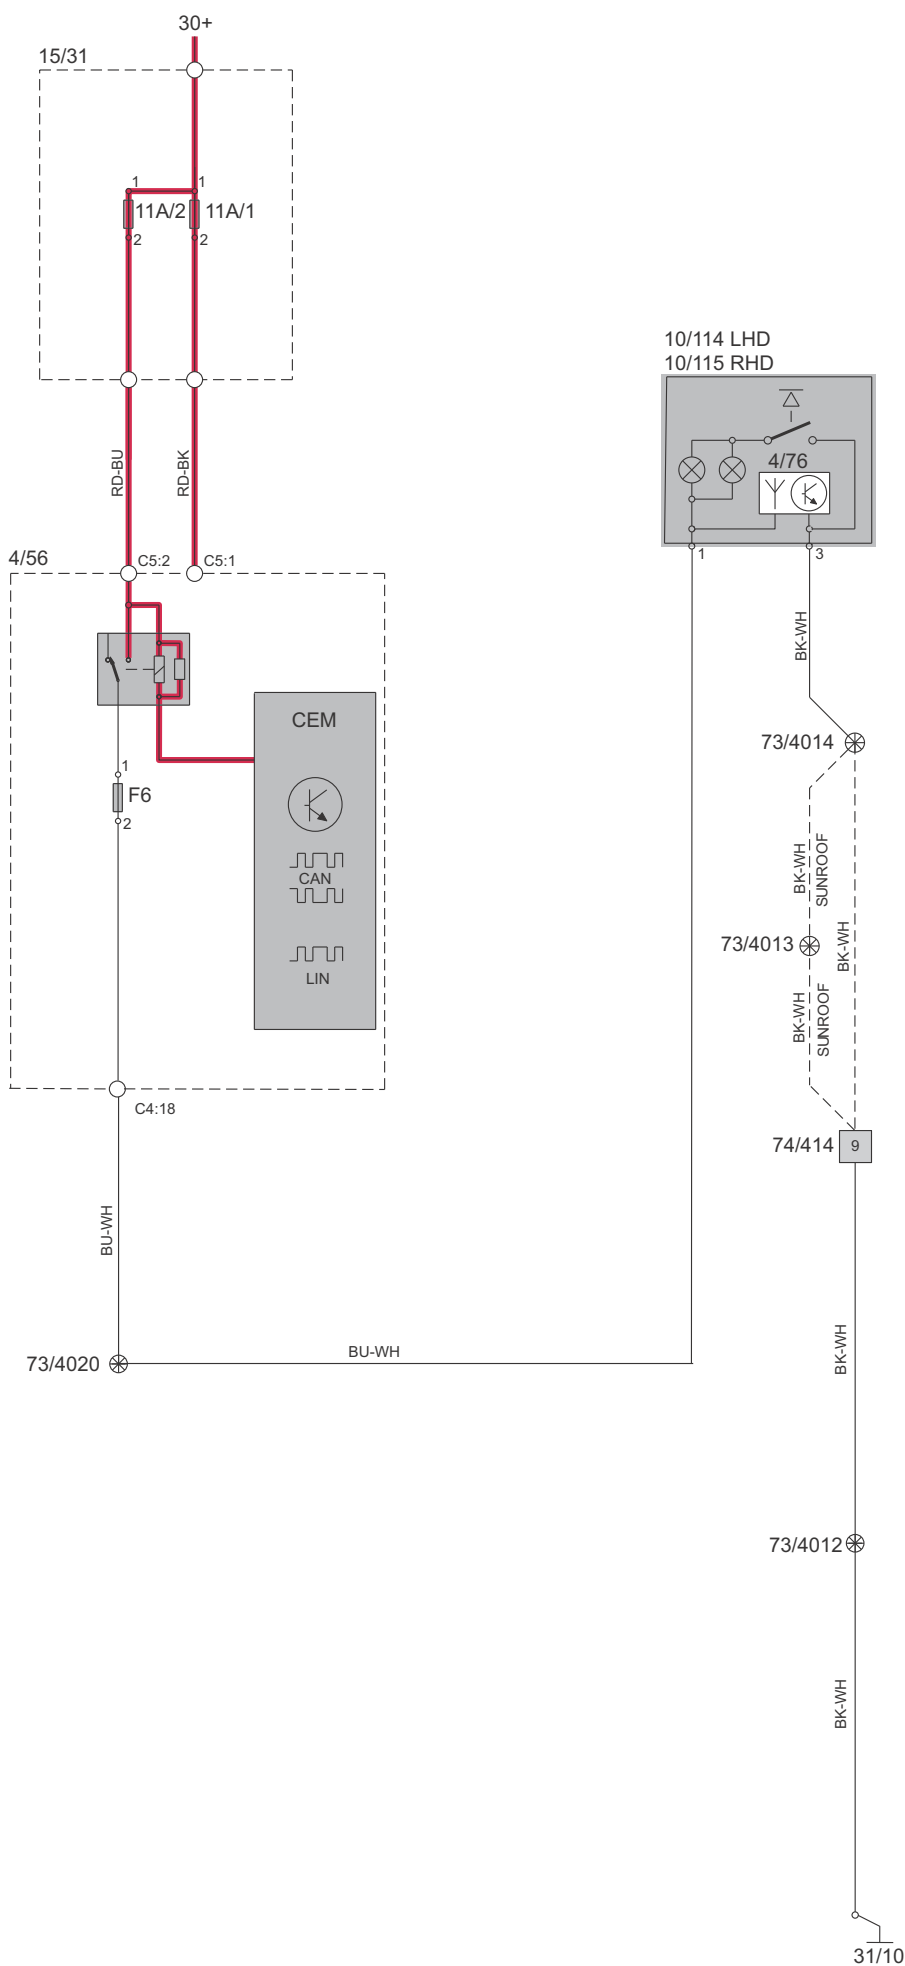


I01170_S

Group 88 Internal equipment
Power folding headrest

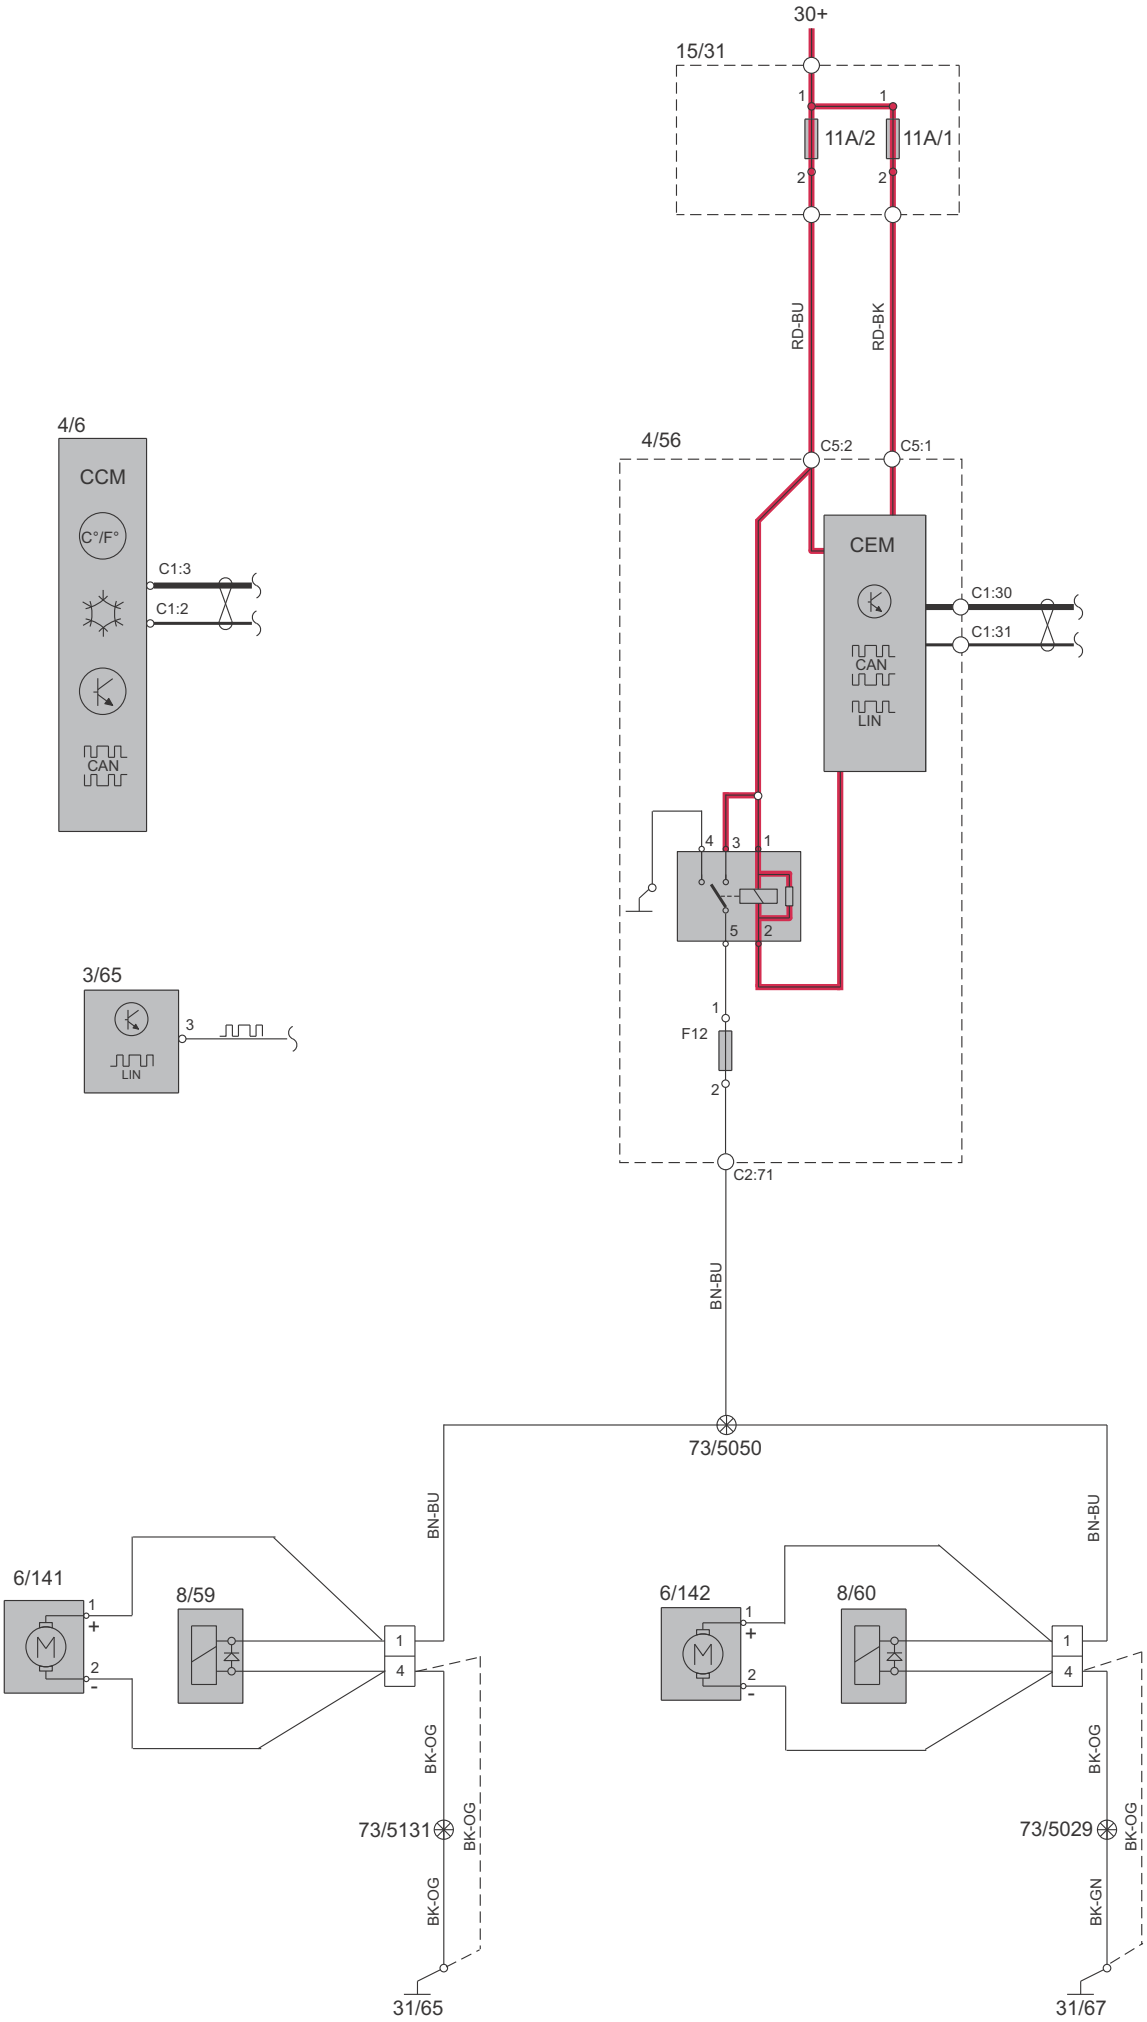

P00037

Group 89 Body other
Radiator masking blind

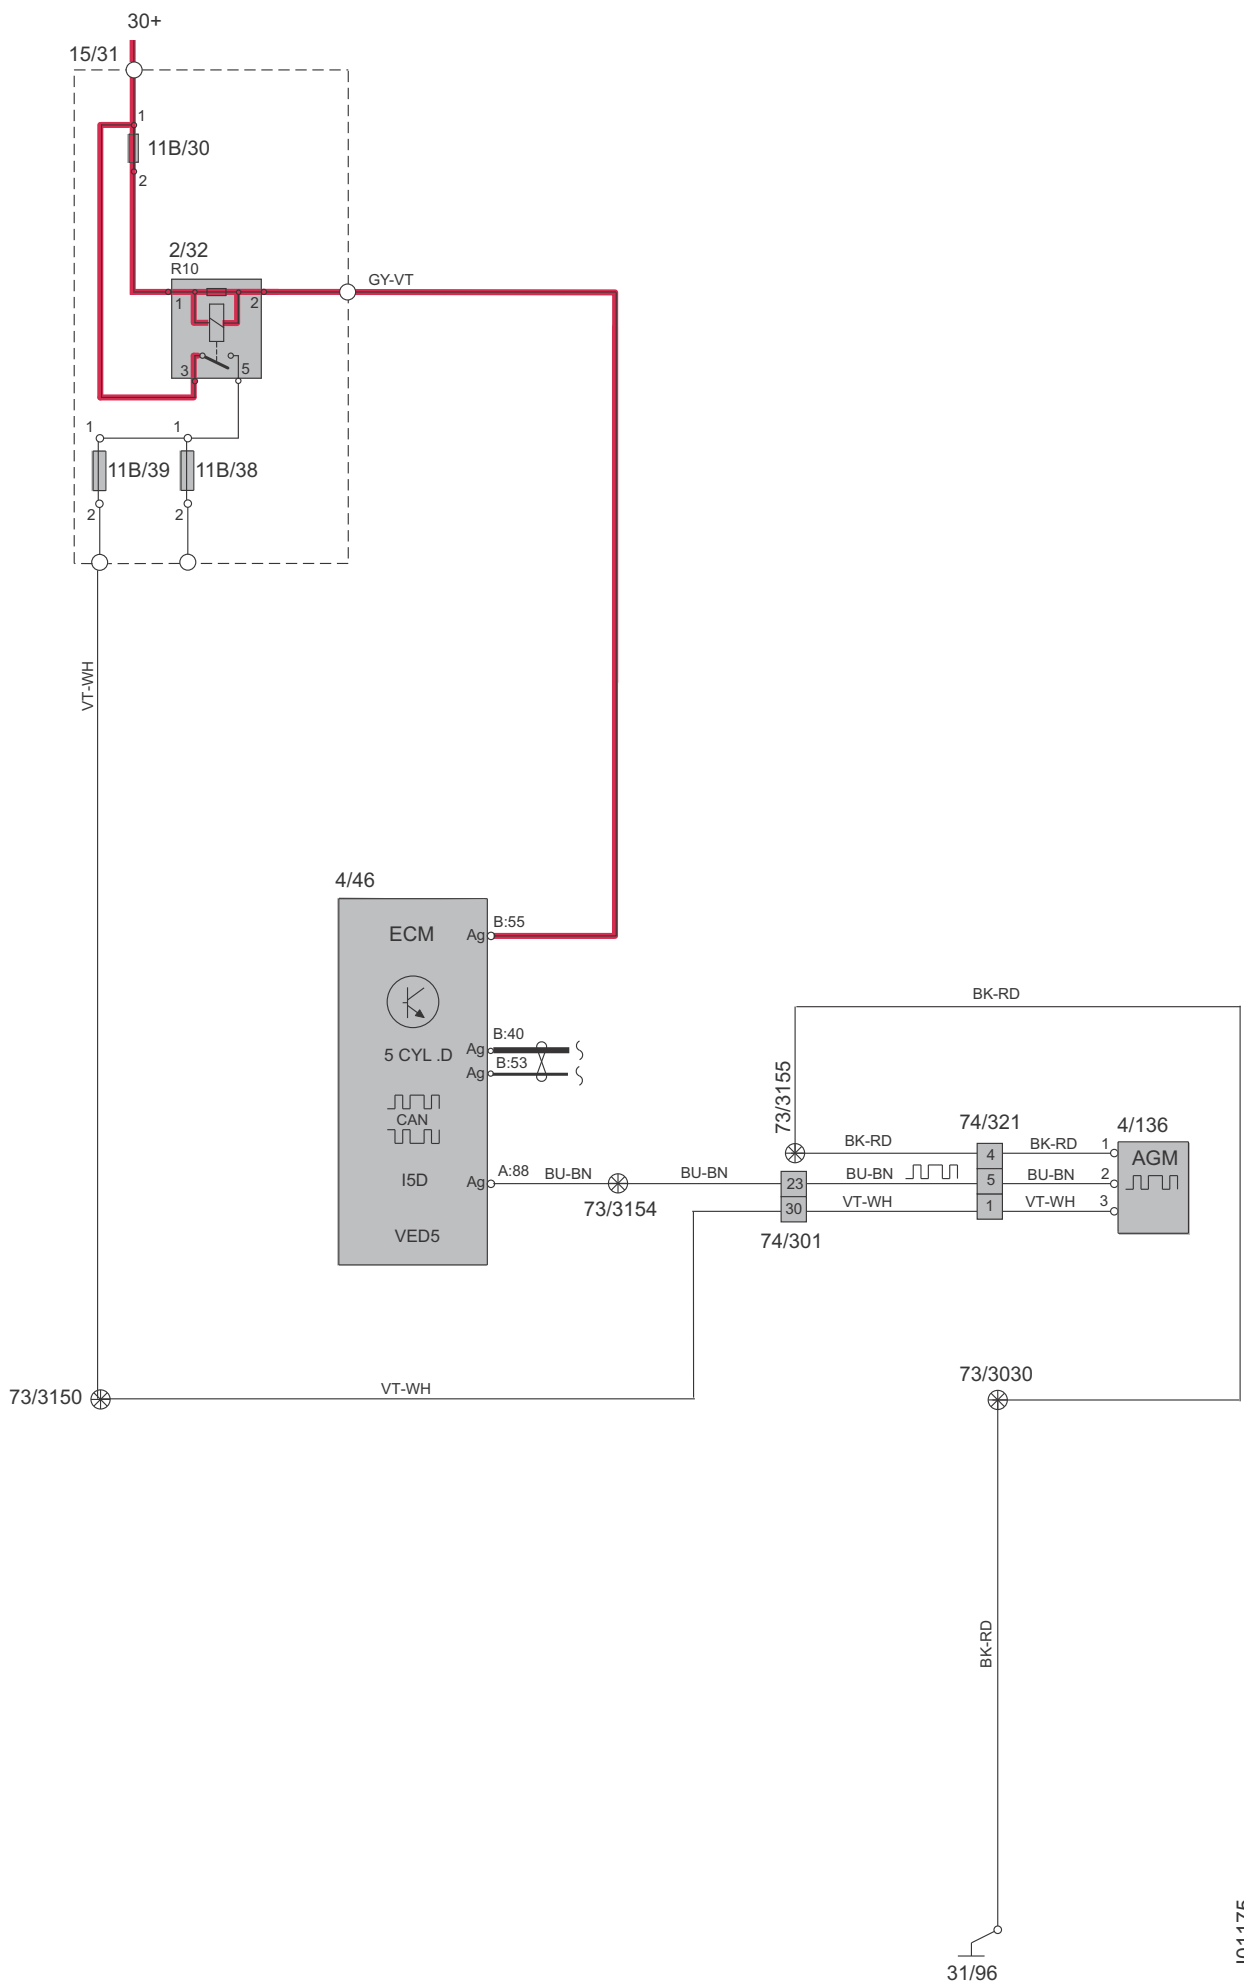

Connectors

74/9 - 74/30:1-8

74/9 12-pin black

No.	Engine compartment harness			Heater harness		
1	-	-	-	-	-	-
2	4/106:C	Control module, remote parking heater start	YE	4/7C1:2	Combustion Preheater Module (CPM)	YE
3	11B/10:2	Fuses in engine compartment fuse box	YE-VT	4/7C1:3	Combustion Preheater Module (CPM)	RD
4	73/3034	Branching point	BK-RD	4/7C1:4	Combustion Preheater Module (CPM)	BN
5	-	-	-	-	-	-
6	73/3020	Branching point	VT-OG	4/7C1:6	Combustion Preheater Module (CPM)	BK
7	74/504:41	Connector	YE-RD	4/7C1:7	Combustion Preheater Module (CPM)	BU
8	-	-	-	-	-	-
9	6/73:2	Coolant pump	GN-OG	4/7C1:9	Combustion Preheater Module (CPM)	BN
10	6/73:1	Coolant pump	WH-VT	4/7C1:10	Combustion Preheater Module (CPM)	RD
11	73/3019	Branching point	GY-OG	4/7C1:11	Combustion Preheater Module (CPM)	GN
12	-	-	-	-	-	-

74/30 20-pin black

No.	Floor harness			Harness driver's seat		
1	73/5035 73/5023	Branching point, LHD Branching point, RHD	BK-VT BK-GN	9/12A:1	Seat Heating Module (SHM), driver's side	BK
2	11C/27:2	Fuse, distribution box in passenger compartment	GN-BK	9/12A:4	Seat Heating Module (SHM), driver's side	YE-RD
3	-	-	-	-	-	-
4	74/409:15 74/409:16	Connector, LHD Connector, RHD	WH-GN	9/12A:2	Seat Heating Module (SHM), driver's side	WH-GN
5	4/9C1:30	Supplemental Restraint System (SRS)	YE-VT	3/255:1	Position sensor driver's seat USA/CDN	YE
6	4/9C1:29	Supplemental Restraint System (SRS)	BU-GY	3/255:2	Position sensor driver's seat USA/CDN	BN
7	4/9C1:24 4/9C1:74	Supplemental restraint system module (SRS), LHD Supplemental restraint system module (SRS), RHD	OG	8/51:1	Front left side airbag igniter	BU
8	4/9C1:23 4/9C1:75	Supplemental restraint system module (SRS), LHD Supplemental restraint system module (SRS), RHD	GN-OG	8/51:2	Front left side airbag igniter	BN
continues						

Connectors

74/30:9-20 - 74/31:1-6

74/30

20-pin black

No.	Floor harness			Harness driver's seat		
9	4/9C1:17	Supplemental Restraint System (SRS)	OG	8/92:1	Lap belt tensioner, driver	GN-BK
10	4/9C1:18	Supplemental Restraint System (SRS)	BN-GN	8/92:2	Lap belt tensioner, driver	BK-BU
11	73/5004	Branching point	VT-OG	4/52C2:3	Power Seat Module (PSM)	GN
12	73/5003	Branching point	GY-OG	4/52C2:4	Power Seat Module (PSM)	WH
13	31/7 31/84	Ground connection, LHD Ground connection, RHD	BK-OG BK-BU	8/51	Front left side airbag igniter	BK
14	73/5044	Branching point	BU-WH	4/52C2:1 4/52C2:6	Power Seat Module (PSM), LHD Power Seat Module (PSM), RHD	RD RD
15	11C/13:2	Fuse, distribution box in passenger compartment	GY-RD	4/52C1:1 4/52C1:7	Power Seat Module (PSM), LHD Power Seat Module (PSM), RHD	RD-BU
16	73/5035 73/5023	Branching point, LHD Branching point, RHD	BK-VT	73/3	Branching point	BK
17	4/9C1:35	Supplemental Restraint System (SRS)	BU	3/93:1	Belt buckle contact, driver's seat	VT
18	4/9C1:36	Supplemental Restraint System (SRS)	VT-BN	3/93:2	Belt buckle contact, driver's seat	OG-BK
19	-	-	-	-	-	-
20	-	-	-	-	-	-

74/31

20-pin black

No.	Floor harness			Harness passenger seat		
1	73/5023 73/5035	Branching point, LHD Branching point, RHD	BK-GN BK-VT	9/13A:1	Seat Heating Module (SHM), passenger side	BK
2	11C/26:2	Fuse, distribution box in passenger compartment	BU-WH	9/13A:4	Seat Heating Module (SHM), passenger side	YE-RD
3	-	-	-	-	-	-
4	74/409:16 74/409:15	Connector, LHD Connector, RHD	BN-VT	9/13A:2	Seat Heating Module (SHM), passenger side	WH-GN
5	4/9C1:31	Supplemental Restraint System (SRS)	OG	3/256:1	Position sensor passenger seat USA/CDN	YE
6	4/9C1:32	Supplemental Restraint System (SRS)	BN-YE	3/256:2	Position sensor passenger seat USA/CDN	BN
continues						

Connectors

74/31:7-20

74/31

20-pin black

No.	Floor harness			Harness passenger seat		
7	4/9C1:24 4/9C1:74	Supplemental restraint system module (SRS), RHD Supplemental restraint system module (SRS), LHD	OG	8/52:1	Front right side airbag igniter	BU
8	4/9C1:23 4/9C1:75	Supplemental restraint system module (SRS), RHD Supplemental restraint system module (SRS), LHD	BU-OG	8/52:2	Front right side airbag igniter	BN
9	4/9C1:16	Supplemental Restraint System (SRS)	OG	8/93:1	Lap belt tensioner, passenger, EU	GN-BK
10	4/9C1:15	Supplemental Restraint System (SRS)	BN-OG	8/93:2	Lap belt tensioner, passenger, EU	BK-BU
11	4/56C2:23 4/56C2:72	Central Electronic Module (CEM) Central Electronic Module (CEM) US/CDN LHD	BN RD-GN	7/175:1 7/93:2	Weight sensor passenger seat, seat belt reminder Occupant Weight Sensor (OWS)	WH RD-GN
12	73/5083	Branching point	BK-GY	7/175:2	Weight sensor passenger seat, seat belt reminder	WH
13	73/5083	Branching point	BK-GY	8/52	Front right side airbag igniter	BK
14	73/5044	Branching point	BU-WH	3/27:7 3/27:11	Switch unit, power passenger seat, LHD Switch unit, power passenger seat, RHD	RD-WH
15	11C/14:2	Fuse, distribution box in passenger compartment	BN-RD	3/27:5 3/27:2	Switch unit, power passenger seat, LHD Switch unit, power passenger seat, RHD	RD
16	73/5023 73/5035	Branching point, LHD Branching point, RHD	BK-GN BK-VT	3/27:8 3/27:3	Switch unit, power passenger seat, LHD Switch unit, power passenger seat, RHD	BK
17	4/9C1:34	Supplemental Restraint System (SRS)	GY-VT	3/94:1	Belt buckle contact, passenger seat	VT
18	4/9C1:33	Supplemental Restraint System (SRS)	WH-GN	3/94:2	Belt buckle contact, passenger seat	OG-BK
19	73/5114	Branching point	YE	7/93:1	Occupant Weight Sensor (OWS), US/CDN	GN
20	73/5115	Branching point	VT-WH	7/93:10	Occupant Weight Sensor (OWS), US/CDN	WH

Connectors

74/301:1-13

74/301

34-pin black

No.	Engine harness		Engine compartment harness		
1	4/46B:54 73/3014 73/3139	Engine control module (ECM), MAN Branching point, Auto Branching point	BU-BK	73/3023 Branching point	BU-BK
2	4/46B:41 73/3015 73/3140	Engine control module (ECM), MAN Branching point, Auto Branching point	GN-BK	73/3024 Branching point	GN-BK
3	4/46B:25	Engine Control Module (ECM), 4-Cyl.	BN-WH	4/56C1:3 Central Electronic Module (CEM)	BN-WH
4	-		-	-	-
5	-		-	-	-
6	4/46B:35 4/46B:24	Engine control module (ECM),4-Cyl. T, 5-Cyl. T & 6- Cyl. Engine Control Module (ECM), Diesel	WH	74/504:1 Connector	WH
7	4/46B:34 4/46B:15	Engine control module (ECM),4-Cyl. T, 5-Cyl. T & 6- Cyl. Engine Control Module (ECM), Diesel	BK-WH	74/504:2 Connector	BK-WH
8	-		-	-	-
9	4/28A:13	Transmission Control Module (TCM)	GN-OG	74/411:9 Connector	GN-OG
10	4/46B:14 4/46B:49	Engine control module (ECM), 6-Cyl. & 4-Cyl. T Engine Control Module (ECM), Diesel	VT-OG	4/56C1:6 Central Electronic Module (CEM)	VT-OG
11	4/28A:7 4/28A:17	Transmission Control Module (TCM) Transmission control module (TCM), MPS6	BN-VT	74/411:10 Connector	BN-VT
12	3/10:1	Reversing light contact	BU	4/56C1:29 Central Electronic Module (CEM), MAN	BU
13	4/46B:51 4/46B:23 4/46A:33 4/46B:49	Engine control module (ECM), 4-Cyl. T & 6-Cyl. T Engine Control Module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. Diesel Engine Control Module (ECM), 5-Cyl. T	GN-BN	7/8:2 Pressure sensor, climate control system	GN-BN
continues					

Connectors

74/301:14-24

74/301

34-pin black

No.	Engine harness		Engine compartment harness		
14	4/46B:53 4/46B:37 4/46B:16 4/46A:45	Engine Control Module (ECM), 5-Cyl. T & 6-Cyl. Engine Control Module (ECM), 4-Cyl. T Engine Control Module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. Diesel	BN	7/8:1 Pressure sensor, climate control system	BN
15	4/46B:31 4/46B:11 73/3145	Engine control module (ECM), 4-Cyl. T & 6-Cyl. Engine Control Module (ECM), 5-Cyl. Diesel Branching point, 4-Cyl. Diesel	GY-BN	7/8:3 Pressure sensor, climate control system	GY-BN
16	2/133	Relay vacuum pump	GN-OG	11B/22:2 Fuses in engine compartment fuse box	GN-OG
17	11B/41:2 73/3131	Fuse, engine compartment electrical center Branching point, Diesel	BU	74/504:21 Connector	BU
18	4/46B:30 4/46B:38	Engine control module (ECM), 4-Cyl. T, 5-Cyl. T & 6-Cyl. Engine Control Module (ECM), 5-Cyl. Diesel	VT-BN	4/56C1:5 Central Electronic Module (CEM)	VT-BN
19	4/46B:26 4/46B:34	Engine control module (ECM), 4-Cyl. T, 5-Cyl. T & 6-Cyl. Engine Control Module (ECM), 5-Cyl. Diesel	BU-WH	74/504:17 Connector	BU-WH
20	4/46B:48 4/46B:13	Engine Control Module (ECM), Diesel Engine control module (ECM) 4-Cyl. T, 5-Cyl. T & 6-Cyl. T	GY-BN	74/504:42 Connector	GY-BN
21	4/28A:16	Transmission Control Module (TCM)	BU-GY	74/411:11 Connector	BU-GY
22	4/46B:53 4/46B:17	Engine Control Module (ECM), Diesel Engine control module (ECM), 4-Cyl. T, 5-Cyl. T & 6-Cyl.	BU-WH	4/56C1:41 Central Electronic Module (CEM)	BU-WH
23	73/3154	Branching point	BU-BN	74/314:2 Connector	BU-BN
24	4/46B:45	Engine Control Module (ECM), 6-Cyl.	GN-OG	74/504:38 Connector	GN-OG
continues					

Connectors

74/301:25-34 - 74/307

74/301

34-pin black

No.	Engine harness			Engine compartment harness		
25	-		-	-		-
26	-		-	-		-
27	73/3162 74/316:4	Branching point, Auto Connector, MAN	RD	74/504:19	Connector	RD
28	11B/19	Fuses in the engine compartment fuse box	BN-WH	6/164C2:1	Electrical power steering module (EHPS)	BN-WH
29	4/46B:21 4/46B:45 4/46B:19	Engine control module (ECM), 5-Cyl. T & 6-Cyl. T Engine control module (ECM), 4-Cyl. T Engine control module (ECM), 5-Cyl. Diesel	YE-OG	74/504:18	Connector	YE-OG
30	73/3150	Branching point	VT-WH	74/321:1	Connector	VT-WH
31	4/46B:46	Engine control module (ECM), 6-Cyl. T	BU-GY	74/504:39	Connector	BU-GY
32	4/46B:15 73/3064	Engine control module (ECM), MAN Branching point, Auto	VT-BN	11B/20:2	Fuse, engine compartment fuse box	VT-BN
33	4/46B:23	Engine Control Module (ECM), 6-Cyl.	VT-OG	74/504:37	Connector	VT-OG
34	-		-	-		-

74/302 4-Cyl.

1-pin black

No.	Engine harness			Harness starter motor		
1	2/35:5	Starter motor relay	BU-WH	6/25C2:1	Starter motor	BU-WH

74/304

2-pin black

No.	Engine compartment harness			Harness washer nozzle		
1	11B/21:2	Fuse, engine compartment electrical center	BU-GY	73/3040	Branching point	BU-GY
2	73/3033	Branching point	BK-OG	73/3037	Branching point	BK-OG

74/307 4-Cyl. Diesel

4-pin black

No.	Engine harness			Glow plug		
1	73/3081	Branching point	VT	20/22:1	Glow plug	VT
2	73/3081	Branching point	VT	20/23:1	Glow plug	VT
3	73/3081	Branching point	VT	20/24:1	Glow plug	VT
4	73/3081	Branching point	VT	20/25:1	Glow plug	VT

Connectors

74/309 - 74/310

74/309 12-pin gray

No.	Engine compartment harness		Harness bumper, front			
1	-		-	-		-
2	-		-	-		-
3	73/3030	Branching point	BK-RD	73/3104	Branching point	BK-RD
4	74/519:12	Connector	VT-GY	73/3046	Branching point	VT-GY
5	74/519:13	Connector	BU-GN	7/204:2	Parking assistance sensor, front	BU-GN
6	74/519:14	Connector	YE-OG	73/3047	Branching point	YE-OG
7	-		-	-		-
8	73/3096	Branching point	GN-OG	10/11:1	Front left running/parking light	GN-OG
9	73/3097	Branching point	GY-RD	10/12:1	Front right running/parking light	GY-RD
10	74/519:15	Connector	BU-BK	7/205:2	Parking assistance sensor, front	BU-BK
11	74/519:16	Connector	BU-GY	7/206:2	Parking assistance sensor, front	BU-GY
12	74/519:17	Connector	BU-OG	7/207:2	Parking assistance sensor, front	BU-OG

74/310 4-Cyl. Turbo 1,6L 8-pin black

No.	Engine harness			Engine harness		
1	8/6:2	Injectors	YE-BU	4/46A:3	Engine Control Module (ECM)	YE-BU
2	8/6:1	Injectors	GN-BN	4/46A:77	Engine Control Module (ECM)	GN-BN
3	8/7:2	Injectors	BU-OG	4/46A:25	Engine Control Module (ECM)	BU-OG
4	8/7:1	Injectors	GY-YE	4/46A:52	Engine Control Module (ECM)	GY-YE
5	8/8:2	Injectors	GN-VT	4/46A:26	Engine Control Module (ECM)	GN-VT
6	8/8:1	Injectors	VT-GY	4/46A:76	Engine Control Module (ECM)	VT-GY
7	8/9:2	Injectors	BU	4/46A:27	Engine Control Module (ECM)	BU
8	8/9:1	Injectors	YE-OG	4/46A:53	Engine Control Module (ECM)	YE-OG

Connectors

74/310

74/310 4-Cyl. Turbo 2,0L
16-pin black

No.	Engine harness			Engine harness		
1	8/6:1	Injectors	GN-BU	4/46A:77	Engine Control Module (ECM)	GN-BU
2	7/24:1	Rear knock sensor	WH-BN	4/46A:84	Engine Control Module (ECM)	WH-BN
3	7/24:2	Front knock sensor	VT-OG	4/46A:60	Engine Control Module (ECM)	VT-OG
4	8/7:1	Injectors	GY-YE	4/46A:52	Engine Control Module (ECM)	GY-YE
5	8/8:1	Injectors	VT-GY	4/46A:76	Engine Control Module (ECM)	VT-GY
6	8/9:1	Injectors	YE-OG	4/46A:53	Engine Control Module (ECM)	YE-OG
7	7/23:1	Rear knock sensor	BN-GN	4/46A:85	Engine Control Module (ECM)	BN-GN
8	7/23:2	Front knock sensor	BU-BN	4/46A:61	Engine Control Module (ECM)	BU-BN
9	8/6:2	Injectors	YE-BU	4/46A:3	Engine Control Module (ECM)	YE-BU
10	-		-	-		-
11	-		-	-		-
12	8/7:2	Injectors	BU-OG	4/46A:25	Engine Control Module (ECM)	BU-OG
13	8/8:2	Injectors	GN-VT	4/46A:26	Engine Control Module (ECM)	GN-VT
14	8/9:2	Injectors	BU	4/46A:27	Engine Control Module (ECM)	BU
15	-		-	-		-
16	-		-	-		-

Connectors

74/313 - 74/321

74/313

1-pin black

No.	Harness battery monitoring sensor (BMS)		Engine compartment harness		
1	7/240:2	Battery monitoring sensor (BMS)	GN-BK	4/56C1:49 Central Electronic Module (CEM)	GN-BK

74/316

6-pin black

No.	Engine harness			Engine compartment harness		
1	2/35:3	Relay, Starter motor	RD	11A/9:2	Fuse fuse box cold zone engine compartment	RD
2	73/3160	Branching point	RD-BU	73/5157	Branching point	RD-BU
3	4/46B:31 4/46C:3	Engine Control Module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. Diesel	YE-VT	2/246:2	Relay secondary battery	YE-VT
4	74/301:27 73/3162	Connector, MAN Branching point, Auto	RD	11B/12:2	Fuse, fuse box cold zone engine compartment	RD
5	4/46B:43 4/46A:16	Engine Control Module (ECM), 5-Cyl. Diesel Engine Control Module (ECM), 4-Cyl. Diesel	GY-VT	2/166:2	Relay, battery relay	GY-VT
6	-	-	-	-	-	-

74/321

8-pin black

No.	Harness forward facing radar			Engine compartment harness		
1	4/136:3	Active Grillshutter Module (AGM)	VT-WH	74/301:30	Connector	VT-WH
2	7/203:18	Forward-aimed radar (FLR)	BU-BN	74/411:4	Connector	BU-BN
3	7/203:9	Forward-aimed radar (FLR)	GY-BU	74/411:5	Connector	GY-BU
4	4/136:1	Active Grillshutter Module (AGM)	BK-RD	73/3155	Branching point	BK-RD
5	4/136:2	Active Grillshutter Module (AGM)	BU-BN	74/301:23	Connector	BU-BN
6	7/203:3	Forward-aimed radar (FLR)	BK-RD	73/3155	Branching point	BK-RD
7	7/203:1	Forward-aimed radar (FLR)	GY-VT	74/411:3	Connector	GY-VT
8	7/203:10	Forward-aimed radar (FLR)	GY-OG	4/56C1:74	Central Electronic Module (CEM)	GY-OG

Connectors

74/401

74/401

22-pin gray

No.	Center console harness			Dashboard harness		
1	4/6C1:4	Climate Control Module (CCM)	WH-GN	74/417:3	Connector	WH-GN
2	4/6C1:5	Climate Control Module (CCM)	BN-VT	73/4010	Branching point	BN-VT
3	4/6C1:16	Climate Control Module (CCM)	YE-VT	74/417:6	Connector	YE-VT
4	4/6C1:17	Climate Control Module (CCM)	VT-BN	74/417:5	Connector	BN
5	4/6C1:14	Climate Control Module (CCM)	WH-GN	74/417:7	Connector	BU-GN
6	-		-	-		-
7	4/6C1:1	Climate Control Module (CCM)	RD	4/56C3:73	Central Electronic Module (CEM)	RD
8	4/6C1:12	Climate Control Module (CCM)	VT-BK	4/31:2	Fan control module	VT-BK
9	4/6C1:3	Climate Control Module (CCM)	GY-OG	5/1C1:6 73/4001	Wiper motor module (WMM) Branching point	GY-OG
10	4/6C1:2	Climate Control Module (CCM)	VT-OG	5/1C1:2 73/4002	Wiper motor module (WMM) Branching point	VT-OG
11	3/290C1:1	Switch unit ICM	YE	3/281C1:8	Infotainment control module (ICM)	YE
12	3/290C1:2	Switch unit ICM	VT	3/281C1:2	Infotainment control module (ICM)	VT
13	3/290C1:3	Switch unit ICM	BU	3/281C1:9	Infotainment control module (ICM)	BU
14	3/290C1:4	Switch unit ICM	YE-GN	3/281C1:10	Infotainment control module (ICM)	YE-GN
15	3/290C1:5	Switch unit ICM	GY-BN	3/281C1:6	Infotainment control module (ICM)	GY-BN
16	3/290C1:6	Switch unit ICM	GN-VT	3/281C1:7	Infotainment control module (ICM)	GN-VT
17	-		-	-		-
18	-		-	-		-
19	-		-	-		-
20	-		-	-		-
21	-		-	-		-
22	4/6C1:22	Climate Control Module (CCM)	BK	73/4016	Branching point	BK

Connectors

74/403 - 74/404

74/403

22-pin gray

No.	Dashboard harness			Tunnel harness		
1	16/1C1:5	Integrated Audio Module (IAM)	BN	16/123:4	Auxiliary input (AUX)	BN
2	16/1C1:7	Integrated Audio Module (IAM)	GN	16/123:2	Auxiliary input (AUX)	GN
3	16/1C1:6	Integrated Audio Module (IAM)	WH	16/123:1	Auxiliary input (AUX)	WH
4	16/1C1:8	Integrated Audio Module (IAM)	-	-	-	-
5	-	-	-	-	-	-
6	4/56C3:67	Central Electronic Module (CEM)	BU-RD	3/65:1	Switch, heated rear seat	BU-RD
7	4/56C3:69	Central Electronic Module (CEM)	BU-RD	10/72:1 16/181:13	Front ashtray lighting Rear headphone sockets	BU-RD
8	74/411:9	Connector	GN-RD	3/156A:3	Gear Selector Module (GSM)	GN-OG
9	74/411:11	Connector	BU-GY	3/156A:1	Gear Selector Module (GSM)	BU-GY
10	-	-	-	-	-	-
11	-	-	-	-	-	-
12	-	-	-	-	-	-
13	-	-	-	-	-	-
14	-	-	-	-	-	-
15	-	-	-	-	-	-
16	-	-	-	-	-	-
17	-	-	-	-	-	-
18	-	-	-	-	-	-
19	-	-	-	-	-	-
20	4/56C3:38	Central Electronic Module (CEM)	WH-BN	8/134:1	Solenoid, reverse interlock, manual	WH-BN
21	-	-	-	-	-	-
22	74/411:10	Connector	BN-VT	3/156A:2	Gear Selector Module (GSM)	BN-VT

74/404

2-pin black

No.	Dashboard harness			Infotainment harness		
1	3/281C2:1	Infotainment control module (ICM)	OG	16/105C2:2 16/36C1:2 74/529:2	Audio module (AUD) TV receiver Connector	OG
2	3/281C2:2 16/60C4:2	Infotainment control module (ICM) Phone Module (PHM)	OG	16/105C2:1	Audio module (AUD)	OG

Connectors

74/405 - 74/407

74/405

2-pin white

No.	Dashboard harness			Floor harness		
2	16/1C3:2	Integrated Audio Module (IAM)	WH	16/71C1:1	Amplifier window antenna	WH
2S	16/1C3:2S	Integrated Audio Module (IAM)	-	16/71C1:1S	Amplifier window antenna	-

74/406

2-pin violet

No.	Dashboard harness			Infotainment harness		
1	16/60C2:1	Phone Module (PHM)	WH	16/47C3:1	Antenna GSM/GPS/RDAR	WH
1S	16/60C2:1S	Phone Module (PHM)	-	16/47C3:1S	Antenna GSM/GPS/RDAR	-

74/407 Alternative 1

16-pin green

No.	Dashboard harness			Floor harness		
1	16/1C2:12	Integrated Audio Module (IAM)	GY-BK	74/507:23	Connector	GY-BK
2	-		-	-		-
3	16/1C2:7	Integrated Audio Module (IAM)	YE-BK	74/508:23	Connector	YE-BK
4	16/1C2:9	Integrated Audio Module (IAM)	GY-RD	74/509:4	Connector	GY-RD
5	16/1C2:10	Integrated Audio Module (IAM)	YE-RD	74/510:4	Connector	YE-RD
6	-		-	-		-
7	-		-	-		-
8	-		-	-		-
9	16/1C2:6	Integrated Audio Module (IAM)	GN-BK	74/507:22	Connector	GN-BK
10	-		-	-		-
11	16/1C2:1	Integrated Audio Module (IAM)	VT-BK	74/508:22	Connector	VT-BK
12	16/1C2:3	Integrated Audio Module (IAM)	GN-RD	74/509:3	Connector	GN-RD
13	16/1C2:4	Integrated Audio Module (IAM)	VT-RD	74/510:3	Connector	VT-RD
14	-		-	-		-
15	-		-	-		-
16	-		-	-		-

Connectors

74/407 - 74/407B

74/407 Alternative 2

16-pin green

No.	Infotainment harness		Floor harness	
1	74/407B:1 Connector	-	74/507:23 Connector	GY-BK
2	74/407B:2 Connector	-	74/409:10 Connector	GY
3	74/407B:3 Connector	-	74/508:23 Connector	YE-BK
4	74/407B:4 Connector	-	74/509:4 Connector	GY-RD
5	74/407B:5 Connector	-	74/510:4 Connector	YE-RD
6	-	-	-	-
7	-	-	-	-
8	-	-	-	-
9	74/407B:9 Connector	-	74/507:22 Connector	GN-BK
10	74/407B:10 Connector	-	74/409:9 Connector	GN
11	74/407B:11 Connector	-	74/508:22 Connector	VT-BK
12	74/407B:12 Connector	-	74/509:3 Connector	GN-RD
13	74/407B:13 Connector	-	74/510:3 Connector	VT-RD
14	-	-	-	-
15	-	-	-	-
16	-	-	-	-

74/407B

16-pin green

No.	Infotainment harness		Floor harness	
1	16/105C3:1 Audio module (AUD)	GY-BK	74/407:1 Connector	-
2	16/105C3:2 Audio module (AUD)	GY	74/407:2 Connector	-
3	16/105C3:3 Audio module (AUD)	YE-BK	74/407:3 Connector	-
4	16/105C3:4 Audio module (AUD)	GY-RD	74/407:4 Connector	-
5	16/105C3:5 Audio module (AUD)	YE-RD	74/407:5 Connector	-
6	-	-	-	-
7	-	-	-	-
8	-	-	-	-
9	16/105C3:9 Audio module (AUD)	GN-BK	74/407:9 Connector	-
10	16/105C3:10 Audio module (AUD)	GN	74/407:10 Connector	-
11	16/105C3:11 Audio module (AUD)	VT-BK	74/407:11 Connector	-
12	16/105C3:12 Audio module (AUD)	GN-RD	74/407:12 Connector	-
13	16/105C3:13 Audio module (AUD)	VT-RD	74/407:13 Connector	-
14	-	-	-	-
15	-	-	-	-
16	-	-	-	-

Connectors

74/409

74/409
26-pin green

No.	Dashboard harness			Floor harness		
1	-		-	-		-
2	3/272:3	Switch, parking brake	BU	4/115C1:20	Park Brake Module (PBM)	BU
3	3/272:8	Switch, parking brake	GN-WH	4/115C1:11	Park Brake Module (PBM)	GN-WH
4	3/272:7	Switch, parking brake	WH-BN	4/115C1:18	Park Brake Module (PBM)	WH-BN
5	3/272:4	Switch, parking brake	VT-GN	4/115C1:9	Park Brake Module (PBM)	VT-GN
6	3/272:6	Switch, parking brake	WH-OG	4/115C1:19	Park Brake Module (PBM)	WH-OG
7	3/272:5	Switch, parking brake	BN	4/115C1:10	Park Brake Module (PBM)	BN
8	-		-	-		-
9	16/26:1	Center dashboard speaker	GN	74/407:10	Connector	GN
10	16/26:2	Center dashboard speaker	GY	74/407:2	Connector	GY
11	4/56C2:63	Central Electronic Module (CEM), V60	GY-BN	74/414:2	Connector	GY-BN
12	-		-	-		-
13	16/1C1:2	Integrated Audio Module (IAM)	GN-VT	16/16C1:2	Amplifier window antenna, S60	GN-VT
				74/602:11	Connector, V60	
14	-		-	-		-
15	74/417:3	Connector	WH-GN	73/5021	Branching point	WH-GN
				74/30:4	Connector, LHD	
				74/31:4	Connector, RHD	BN-VT
16	73/4010	Branching point	BN-VT	74/30:4	Connector, RHD	WH-GN
				9/15:2	Control module, rear right seat heater	BN-VT
				74/31:4	Connector, LHD	
17	11C/19:2	Fuses in distribution box passenger compartment	BU-RD	16/60C1:5	Phone Module (PHM)	BU-RD
				16/147C1:32	Bluetooth phone module (BPM)	
18	11C/21:2	Fuses in distribution box passenger compartment	BU-GY	74/414:3	Connector	BU-GY
				74/417:1	Connector	
19	73/4034	Branching point	GY-OG	73/5005	Branching point	GY-OG
				73/5009	Branching point	
20	73/4035	Branching point	VT-OG	73/5006	Branching point	VT-OG
				73/5010	Branching point	
21	3/281C1:8	Branching point	VT-RD	11C/16:2	Fuses in distribution box in passenger compartment	VT-RD
22	73/4038	Branching point	GN-BK	74/518:2	Connector	GN-BK
				73/5012	Branching point	
23	73/4037	Branching point	BU-BK	74/518:1	Connector	BU-BK
				73/5011	Branching point	
24	73/4046	Branching point	BK-GY	73/5132	Branching point	BK-GY
25	-		-	-		-
26	11C/18:2	Fuses in distribution box in passenger compartment	YE-RD	16/1C1:1	Integrated Audio Module (IAM)	YE-RD

Connectors

74/411

74/411

26-pin gray

No.	Engine compartment harness		Dashboard harness		
1	11B/11:2 11A/6:2	Fuse, engine compartment electrical center Main fuses in engine compartment fuse box, Start/Stop	YE-RD	73/4028 Branching point	YE-RD
2	-	-	-	-	-
3	4/56C3:63	Central Electronic Module (CEM)	GY-VT	74/321:7 Connector	GY-VT
4	74/321:2	Connector	BN-BU	74/412:18 Connector	BN-BU
5	74/321:3	Connector	GY-BU	74/412:17 Connector	GY-BU
6	10/1:8 10/2:8	Left-hand front lamp housing Right-hand front lamp housing	BK	73/4016 73/4017 Branching point Branching point, LHD	BK
7	-	-	-	-	-
8	-	-	-	-	-
9	74/301:9	Connector	GN-OG	74/403:8 Connector	GN-RD
10	74/301:11	Connector	BN-VT	74/403:22 Connector	BN-VT
11	74/301:21	Connector	BU-GY	74/403:9 Connector	BU-GY
12	11B/23:2	Fuse, engine compartment electrical center	RD-BK	3/111:1 Light Switch Module (LSM)	RD-BK
13	10/1:12 10/2:12	Left-hand front lamp housing Right-hand front lamp housing	VT-GN	3/111:4 Light Switch Module (LSM)	VT-GN
14	-	-	-	-	-
15	-	-	-	-	-
16	-	-	-	-	-
17	-	-	-	-	-
18	-	-	-	-	-
19	73/3121	Branching point	YE	74/412:2 Connector	GY-BU
20	73/3120	Branching point	VT-WH	74/412:1 Connector	GN-OG
21	-	-	-	-	-
22	-	-	-	-	-
23	-	-	-	-	-
24	-	-	-	-	-
25	11B/20:2	Fuses in engine compartment fuse box	VT-BN	4/9C2:42 Supplemental Restraint System (SRS)	VT-BN
26	-	-	-	-	-

Connectors

74/412

74/412
22-pin green

No.	Dashboard harness			Roof harness		
1	74/411:20	Connector	VT-WH	74/901:1	Connector	VT-WH
2	74/411:19	Connector	YE	74/901:2	Connector	YE
3	16/60C1:1	Phone Module (PHM)	BN-GN	3/267:5	Switch unit, telematics	BN-GN
4	16/60C1:2	Phone Module (PHM)	GY-VT	3/267:6	Switch unit, telematics	GY-VT
5	16/60C1:14	Phone Module (PHM)	-	3/267:2	Switch unit, telematics	-
6	16/60C1:15	Phone Module (PHM)	WH	3/267:1	Switch unit, telematics	WH
7	16/60C1:13	Phone Module (PHM)	VT	3/267:7	Switch unit, telematics	VT
8	16/60C1:4	Phone Module (PHM)	YE-VT	3/267:4	Switch unit, telematics	YE-VT
9	16/60C1:3	Phone Module (PHM)	BU-GY	3/267:3	Switch unit, telematics	BU-GY
10	73/4005	Branching point	BU-BK	73/5097 73/5155	Branching point Branching point	BU-BK
11	4/9C2:45	Supplemental Restraint System (SRS)	GN-WH	10/22C1:3	Ceiling light	GN-WH
12	4/9C2:22	Supplemental Restraint System (SRS)	GY-BU	10/22C1:3	Ceiling light	GY-BU
13	16/1C1:4	Integrated Audio Module (IAM)	-	16/98C1:2	Microphone	-
14	16/1C1:3	Integrated Audio Module (IAM)	WH	16/98C1:1	Microphone	WH
15	4/56C3:6	Central Electronic Module (CEM)	BU-BK	73/5097	Branching point	BU-BK
16	4/56C3:7	Central Electronic Module (CEM)	GN-BK	73/5098	Branching point	GN-BK
17	74/411:5	Connector	GY-BU	4/80C1:9	Forward Sensing Module (FSM)	GY-BU
18	74/411:4	Connector	BN-BU	4/80C1:10	Forward Sensing Module (FSM)	BN-BU
19	73/4047	Branching point	BN-VT	73/4010	Branching point	BN-VT
20	73/4006	Branching point	GN-BK	73/5098 73/5155	Branching point Branching point	GN-BK
21	31/83	Ground connection, Left bottom rail	BK	73/5129	Branching point	BK
22	74/409:11	Connector	GY-BN	74/609:1	Connector	GY-BN

Connectors

74/414 - 74/417

74/414

10-pin black

No.	Dashboard harness			Roof harness		
1	73/4031	Branching point	BU-GY	74/409:18	Connector	BU-GY
2	-		-	-		-
3	4/33:1	Sunroof control module	RD-BN	4/56C3:75	Central Electronic Module (CEM)	RD-BN
4	4/80C1:7	Forward Sensing Module (FSM)	BU-BK	73/4059	Branching point	Bu-BK
5	4/56C3:5	Central Electronic Module (CEM)	GY-OG	73/5189	Branching point	GY-OG
6	4/80C1:6	Forward Sensing Module (FSM)	GN-BN	27/2C1:2	Indicator, visual collision warning	GN-BN
7	4/80C1:8	Forward Sensing Module (FSM)	GY-VT	4/56C3:63	Central Electronic Module (CEM)	GY-VT
8	4/80C1:13	Forward Sensing Module (FSM)	VT	27/2C1:4	Indicator, visual collision warning	VT
9	73/4013 73/4014	Branching point Branching point	BK-WH	73/4012	Branching point	BK-WH
10	-		-	-		-

74/416

2-pin violet

No.	Dashboard harness			Floor harness		
1	3/281C5:1	Infotainment control module (ICM)	BK	4/120C3:1	Parking Assistance Camera (PAC)	BK
1S	3/281C5:1S	Infotainment control module (ICM)	-	4/120C3:1S	Parking Assistance Camera (PAC)	-

74/417

7-pin green

No.	Dashboard harness			Climate control system harness		
1	74/409:18	Connector	BU-GY	3/112	Climate control system	RD
2	73/4010	Branching point	BN-VT	3/112	Climate control system	YE
3	74/401:1 74/409:15	Connector Connector	WH-GN	3/112	Climate control system	GN
4	73/4012	Branching point	BK-WH	3/112	Climate control system	BU
5	74/401:4	Connector	BN	3/112	Climate control system	PK
6	74/401:3	Connector	YE-VT	3/112	Climate control system	BN
7	74/401:5	Connector	BU-GN	3/112	Climate control system	GN

Connectors

74/418 - 74/420

74/418 RHD 7-pin gray

No.	Harness FLC			FLC adapter harness		
1	27/5C1:1	Forward looking camera	WH	4/80C2:1	Forward Sensing Module (FSM)	WH
2	27/5C1:2	Forward looking camera	BN	4/80C2:2	Forward Sensing Module (FSM)	BN
3	27/5C1:3	Forward looking camera	GN	4/80C2:3	Forward Sensing Module (FSM)	GN
4	27/5C1:4	Forward looking camera	VT	4/80C2:4	Forward Sensing Module (FSM)	VT
5	27/5C1:5	Forward looking camera	GY	4/80C2:5	Forward Sensing Module (FSM)	GY
6	27/5C1:6	Forward looking camera	YE	4/80C2:6	Forward Sensing Module (FSM)	YE
7S	27/5C1:7S	Forward looking camera	-	4/80C2:7S	Forward Sensing Module (FSM)	-

74/419 2-pin blue

No.	Dashboard harness			Infotainment harness		
1	16/1C8:1	Integrated Audio Module (IAM)	WH	16/47C1:1	Antenna GSM/GPS/RDAR	WH
1S	16/1C8:1S	Integrated Audio Module (IAM)	-	16/47C1:1S	Antenna GSM/GPS/RDAR	-

74/420 5-pin gray

No.	Dashboard harness			Tunnel harness		
1	16/1C5:1	Integrated Audio Module (IAM)	RD	17/42C1:1	USB-port	RD
2	16/1C5:2	Integrated Audio Module (IAM)	BN	17/42C1:2	USB-port	BN
3	16/1C5:3	Integrated Audio Module (IAM)	VT	17/42C1:3	USB-port	VT
4	16/1C5:4	Integrated Audio Module (IAM)	BK	17/42C1:4	USB-port	BK
5	16/1C5:5S	Integrated Audio Module (IAM)	-	17/42C1:5S	USB-port	-

Connectors

74/421 - 74/503

74/421

2-pin grey

No.	Dashboard harness		Infotainment harness	
1	3/281C4:1 Infotainment control module (ICM)	BK	16/36C2:4 TV receiver	BK
1S	3/281C4:1S Infotainment control module (ICM)	-	16/36C2:5 TV receiver	-

74/503

22-pin gray

No.	Infotainment harness		Tunnel harness	
1	16/105C5:16 Audio module (AUD)	WH-OG	16/181:1 Rear headphone sockets	WH-OG
2	16/105C5:15 Audio module (AUD)	WH	16/181:2 Rear headphone sockets	WH
3	16/105C5:17 Audio module (AUD)	GN-VT	16/181:3 Rear headphone sockets	GN-VT
4	-	-	-	-
5	16/105C5:1 Audio module (AUD)	BU-OG	16/181:5 Rear headphone sockets	BU-OG
6	16/105C5:13 Audio module (AUD)	GY-BN	16/181:6 Rear headphone sockets	GY-BN
7	16/105C5:2 Audio module (AUD)	YE-GN	16/181:7 Rear headphone sockets	YE-GN
8	16/105C5:3 Audio module (AUD)	BU	16/181:8 Rear headphone sockets	BU
9	16/105C5:14 Audio module (AUD)	YE-VT	16/181:9 Rear headphone sockets	YE-VT
10	16/105C5:4 Audio module (AUD)	YE	16/181:10 Rear headphone sockets	YE
11	-	-	-	-
12	-	-	-	-
13	-	-	-	-
14	-	-	-	-
15	4/84C1:3 Suspension Module (SUM)	YE-BK	3/225:5 Continuously Controlled Damping (CCD)	YE-BK
16	4/84C1:21 Suspension Module (SUM)	VT-OG	3/225:6 Continuously Controlled Damping (CCD)	VT-OG
17	4/84C1:24 Suspension Module (SUM)	YE-RD	3/225:1 Continuously Controlled Damping (CCD)	YE-RD
18	4/84C1:26 Suspension Module (SUM)	BU	3/225:2 Continuously Controlled Damping (CCD)	BU
19	4/84C1:11 Suspension Module (SUM)	GN-BK	3/225:3 Continuously Controlled Damping (CCD)	GN-BK
20	4/84C1:29 Suspension Module (SUM)	GY-OG	3/225:4 Continuously Controlled Damping (CCD)	GY-OG
21	-	-	-	-
22	-	-	-	-

Connectors

74/504:1-36

74/504
57-pin natural

No.	Engine compartment harness			Floor harness		
1	74/301:6	Connector	WH	74/507:17	Connector	WH
2	74/301:7	Connector	BK-WH	74/507:18	Connector	BK-WH
3	-		-	-		-
4	-		-	-		-
5	4/16C1:43	Brake Control Module (BCM)	YE-BK	74/512:5	Connector	YE-BK
6	4/16C1:42	Brake Control Module (BCM)	BU-RD	74/512:6	Connector	BU-RD
7	73/3121	Branching point	YE	4/9C1:72 73/5114	Supplemental Restraint System (SRS) Branching point	YE
8	73/3120	Branching point	VT-WH	4/9C1:73 73/5115	Supplemental Restraint System (SRS) Branching point	VT-WH
9	-		-	-		-
10	-		-	-		-
11	4/16C1:36	Brake Control Module (BCM)	BU-OG	74/511:7	Connector	BU-OG
12	4/16C1:37	Brake Control Module (BCM)	GN-RD	74/511:6	Connector	GN-RD
13	-		-	-		-
14	4/56C1:9	Central Electronic Module (CEM)	VT-GN	2/193:1	Relay, comfort functions	VT-GN
15	-		-	-		-
16	-		-	-		-
17	74/301:19	Connector	BU-WH	7/51:5	Accelerator pedal sensor	BU-WH
18	74/301:29	Connector, Gasoline	YE-OG	74/511:17	Connector	YE-OG
19	74/301:27	Connector	RD	4/56C1:17	Central Electronic Module (CEM)	RD
20	-		-	-		-
21	74/301:17	Connector	BU	74/512:7	Connector	BU
22	-		-	-		-
23	-		-	-		-
24	-		-	-		-
25	-		-	-		-
26	-		-	-		-
27	-		-	-		-
28	-		-	-		-
29	-		-	-		-
30	-		-	-		-
31	-		-	-		-
32	-		-	-		-
33	-		-	-		-
34	-		-	-		-
35	-		-	-		-
36	-		-	-		-
continues						

Connectors

74/504:37-57 - 74/504B

74/504

57-pin natural

No.	Engine compartment harness			Floor harness		
37	74/301:33	Connector	VT-OG	74/512:2	Connector	VT-OG
38	74/301:24	Connector	GN-OG	74/512:3	Connector	GN-OG
39	74/301:31	Connector	BU-GY	74/512:4	Connector	BU-GY
40	-		-	-		-
41	74/9:7	Connector	YE-RD	74/512:14	Connector	YE-RD
42	74/301:20	Connector, MAN	GY-BN	4/56C2:41	Central Electronic Module (CEM), MAN	GY-BN
43	-		-	-		-
44	73/3021	Branching point	BU-BK	74/511:3	Connector	BU-BK
45	73/3022	Branching point	GN-BK	74/511:4	Connector	GN-BK
46	-		-	-		-
47	-		-	-		-
48	-		-	-		-
49	-		-	-		-
50	-		-	-		-
51	-		-	-		-
52	-		-	-		-
53	-		-	-		-
54	-		-	-		-
55	-		-	-		-
56	73/3019 4/56C1:30	Branching point Central Electronic Module (CEM)	GY-OG	73/5005 73/5009	Branching point Branching point	GY-OG
57	73/3020 4/56C1:31	Branching point Central Electronic Module (CEM)	VT-OG	73/5006 73/5010	Branching point Branching point	VT-OG

74/504B

2-pin red

No.	Engine compartment harness			Floor harness		
1	-		-	-		-
2	11A/3:2	Fuse, engine compartment electrical center	RD-GN	73/5075	Branching point	RD-GN

Connectors

74/507:1-22

74/507

26-pin black

No.	Harness front door, left			Floor harness		
1	3/126C2:1 3/127C2:1	Driver door module (DDM) Passenger door module (PDM)	GY-OG	73/5005	Branching point	GY-OG
2	3/126C2:13 3/127C2:13	Driver door module (DDM) Passenger door module (PDM)	VT-OG	73/5006	Branching point	VT-OG
3	6/36:3	Lock motor, central locking, LH front door	GN-VT	4/56C2:11	Central Electronic Module (CEM)	GN-VT
4	3/127C1:8 73/5019	Passenger Door Module (PDM), RHD Branching point, LHD	GN-WH	74/509:7	Connector	GN-WH
5	27/3C1:5	Left Camera Module (LCM)	GN-WH	73/5128	Branching point	GN-WH
6	6/62:4	Left-hand power door mirror	YE-BU	73/5091	Branching point	YE-BU
7	3/176:1	Switch, driver's door power window, LHD	BU-WH	73/5044	Branching point, LHD	BU-WH
8	6/62C2:2	Left-hand power door mirror	OG	74/537:2	Connector	OG
9	6/62C2:4	Left-hand power door mirror	GN	74/537:4	Connector	GN
10	6/62C2:5	Left-hand power door mirror	BU	74/537:5	Connector	BU
11	3/273:3	Lock contact, LH front door	BU-GN	4/93C5:19	Keyless vehicle module (KVM)	BU-GN
12	3/273:4	Lock contact, LH front door	YE-VT	4/93C5:21	Keyless vehicle module (KVM)	YE-VT
13	3/273:1	Lock contact, LH front door	BK-GN	73/5062	Branching point	BK-GN
14	-		-	-		-
15	-		-	-		-
16	3/273:6 6/62C1:1	Lock contact, LH front door Left-hand power door mirror	BN-RD BN	73/5061 73/5371	Branching point Branching point	BN-RD BN
17	6/62C1:2	Left-hand power door mirror	WH	74/504:1	Connector	WH
18	6/62C1:3	Left-hand power door mirror	BK-WH	74/504:2	Connector	BK-WH
19	-		-	-		-
20	3/126C1:13 3/127C1:13	Driver Door Module (DDM), LHD Passenger Door Module (PDM), RHD	BK-VT	73/5035	Branching point	BK-VT
21	3/126C1:2 3/127C1:2	Driver Door Module (DDM), LHD Passenger Door Module (PDM), RHD	VT-RD RD	11C/8:2 11C/9:2	Fuses in distribution box passenger compartment, LHD Fuses in distribution box passenger compartment, RHD	VT-RD RD
22	16/4:1 16/55:1 73/5078	Left-hand front door speaker Left-hand front tweeter Branching point	VT-BK GN-BK	74/407:9	Connector	GN-BK
continues						

Connectors

74/507:23-26 - 74/508:1-16

74/507

26-pin black

No.	Harness front door, left			Floor harness		
23	16/4:2 6/55:2 73/5079	Left-hand front door speaker Left-hand front tweeter Branching point	YE-BK GY-BK	74/407:1	Connector	GY-BK
24	-		-	-		-
25	7/208:2	Pressure sensor front door left	YE-RD	4/9C1:57	Supplemental Restraint System (SRS)	YE-RD
26	7/208:1	Pressure sensor front door left	VT-OG	4/9C1:58	Supplemental Restraint System (SRS)	VT-OG

74/508

26-pin black

No.	Harness front door, right			Floor harness		
1	3/126C2:1 3/127C2:1	Driver door module (DDM) Passenger door module (PDM)	GY-OG	73/5009	Branching point	GY-OG
2	3/126C2:13 3/127C2:13	Driver door module (DDM) Passenger door module (PDM)	VT-OG	73/5010	Branching point	VT-OG
3	6/55:3 6/55:6	Lock motor, central locking, RH front door Lock motor, central locking, RH front door	BK-GN	4/56C2:29	Central Electronic Module (CEM)	BK-GN
4	3/127C1:8 73/5019	Passenger Door Module (PDM), LHD Branching point, RHD	GN-WH	74/510:7	Connector	GN-WH
5	27/4C1:5	Right Camera Module (RCM)	GN-WH	73/5128	Branching point	GN-WH
6	6/63:4	Right-hand power door mirror	YE-RD	73/5091	Branching point	YE-RD
7	3/176:1	Switch, driver's door power window, RHD	BU-WH	73/5044	Branching point, RHD	BU-WH
8	-		-	-		-
9	-		-	-		-
10	-		-	-		-
11	3/274:3	Lock contact, RH front door	GN-RD	4/93C5:2	Keyless vehicle module (KVM)	GN-RD
12	3/274:4	Lock contact, RH front door	BU-GY	4/93C5:22	Keyless vehicle module (KVM)	BU-GY
13	3/274:1	Lock contact, RH front door	BK-GN	73/5062	Branching point	BK-GN
14	-		-	-		-
15	-		-	-		-
16	3/274:6	Lock contact, RH front door	BN-RD	73/5061	Branching point	BN-RD
continues						

Connectors

74/508:17-26 - 74/509:1-8

74/508

26-pin black

No.	Harness front door, right		Floor harness		
17	-	-	-	-	-
18	-	-	-	-	-
19	-	-	-	-	-
20	3/126C1:13 Driver Door Module (DDM), RHD 3/127C1:13 Passenger Door Module (PDM), LHD	BK-GN	73/5023	Branching point	BK-GN
21	3/126C1:2 Driver Door Module (DDM), RHD	VT-RD	11C/8:2	Fuses in distribution box passenger compartment, RHD	VT-RD
	3/127C1:2 Passenger Door Module (PDM), LHD	RD	11C/9:2	Fuses in distribution box passenger compartment, LHD	RD
22	16/3:1 Right-hand front door speaker 16/56:1 Right-hand front tweeter 73/5076 Branching point	VT-BK	74/407:11	Connector	VT-BK
23	16/3:2 Right-hand front door speaker 16/56:2 Right-hand front tweeter 73/5077 Branching point	YE-BK	74/407:3	Connector	YE-BK
24	-	-	-	-	-
25	7/209:2 Pressure sensor front door right	YE-RD	4/9C1:56	Supplemental Restraint System (SRS)	YE-RD
26	7/209:1 Pressure sensor front door right	VT-OG	4/9C1:55	Supplemental Restraint System (SRS)	VT-OG

74/509

16-pin black

No.	Left-hand rear door harness		Floor harness		
1	3/128:2 Left rear door module (LDM)	RD-BU	11C/11:2	Fuses in distribution box in passenger compartment	RD-BU
2	3/128:13 Left rear door module (LDM)	BK-VT	73/5035	Branching point	BK-VT
3	16/6:1 Left-hand rear door speaker 16/136:1 LH rear door tweeter	GN-RD	74/407:12	Connector	GN-RD
4	16/6:2 Left-hand rear door speaker 16/136:2 LH rear door tweeter	GY-RD	74/407:4	Connector	GY-RD
5	6/57:3 Lock motor, central locking, LH rear door	GN	4/56C2:10	Central Electronic Module (CEM)	GN
6	-	-	-	-	-
7	3/128:21 Left rear door module (LDM)	GN-WH	74/507:4	Connector	GN-WH
8	3/275:1 Lock contact, left rear door	BK-GN	73/5062	Branching point	BK-GN
continues					

Connectors

74/509:9-16 - 74/510

74/509 16-pin black

No.	Left-hand rear door harness			Floor harness		
9	-	-	-	-	-	-
10	3/275:6	Lock contact, left rear door	BN-RD	73/5061	Branching point	BN-RD
11	3/275:5	Lock contact, left rear door	YE	4/93C1:15	Keyless vehicle module (KVM)	YE
12	3/275:2	Lock contact, left rear door	GN-BN	4/93C1:3	Keyless vehicle module (KVM)	GN-BN
13	3/275:3	Lock contact, left rear door	GY-OG	4/93C5:17	Keyless vehicle module (KVM)	GY-OG
14	3/275:4	Lock contact, left rear door	GN-OG	4/93C5:4	Keyless vehicle module (KVM)	GN-OG
15	-	-	-	-	-	-
16	-	-	-	-	-	-

74/510 16-pin black

No.	Right-hand rear door harness			Floor harness		
1	3/129:2	Right rear door module (RDM)	RD-GN	11C/10:2	Fuse, distribution box in passenger compartment	YE-RD
2	3/129:13	Right rear door module (RDM)	BK-GN	73/5023	Branching point	BK-GN
3	16/5:1 16/137:1	Right-hand rear door speaker RH rear door tweeter	VT-RD	74/407:13	Connector	VT-RD
4	16/5:2 16/137:2	Right-hand rear door speaker RH rear door tweeter	YE-RD	74/407:5	Connector	YE-RD
5	6/56:3 6/56:6	Lock motor, central locking, RH rear door Lock motor, central locking, RH rear door	YE	4/56C2:28	Central Electronic Module (CEM)	YE
6	-	-	-	-	-	-
7	3/129:21	Right rear door module (RDM)	GN-WH	74/508:4	Connector	GN-WH
8	3/276:1	Lock contact, RH rear door	BK-GN	73/5062	Branching point	BK-GN
9	-	-	-	-	-	-
10	3/276:6	Lock contact, RH rear door	BN-RD	73/5061	Branching point	BN-RD
11	3/276:5	Lock contact, RH rear door	BU-OG	4/93C1:14	Keyless vehicle module (KVM)	BU-OG
12	3/276:2	Lock contact, RH rear door	VT-GY	4/93C1:23	Keyless vehicle module (KVM)	VT-GY
13	3/276:3	Lock contact, RH rear door	VT-RD	4/93C5:5	Keyless vehicle module (KVM)	VT-RD
14	3/276:4	Lock contact, RH rear door	GY-RD	4/93C5:20	Keyless vehicle module (KVM)	GY-RD
15	-	-	-	-	-	-
16	-	-	-	-	-	-

Connectors

74/511

74/511

22-pin gray

No.	Floor harness			Left rear axle harness		
1	11C/29:2	Fuse, distribution box in passenger compartment	WH-VT	74/520:6	Connector	WH-VT
2	-		-	-		-
3	73/5015 74/504:44	Branching point Connector	BU-BK	74/520:1	Connector	BU-BK
4	73/5016 74/504:45	Branching point Connector	GN-BK	74/520:2	Connector	GN-BK
5	-		-	-		-
6	74/504:12	Connector	GN-RD	7/56:2	Left-hand rear ABS sensor	BN
7	74/504:11	Connector	BU-OG	7/56:1	Left-hand rear ABS sensor	WH
8	-		-	-		-
9	-		-	-		-
10	-		-	-		-
11	-		-	-		-
12	74/518:6	Connector	GN-BU	8/22:1	Shock absorber, Four-C, rear left	GN-BU
13	74/518:7	Connector	YE-BU	8/22:2	Shock absorber, Four-C, rear left	YE-BU
14	74/518:3	Connector	YE-GN	7/120:5	Height sensor, suspension, rear left	YE-GN
15	74/518:4	Connector	GN-BN	7/120:1	Height sensor, suspension, rear left	GN-BN
16	74/518:5	Connector	VT-WH	7/120:4	Height sensor, suspension, rear left	VT-WH
17	74/504:18	Connector	YE-OG	4/83:5	Fuel pump control module	YE-OG
18	4/56C2:51	Central Electronic Module (CEM)	GN-BU	6/33:1	Fuel pump	GN-BU
19	4/56C2:33	Central Electronic Module (CEM)	YE-VT	6/33:2	Fuel pump	YE-VT
20	4/56C2:15	Central Electronic Module (CEM)	GN-OG	6/33:6	Fuel pump	GN-OG
21	-		-	-		-
22	-		-	-		-

Connectors

74/512 - 74/513

74/512

14-pin gray

No.	Floor harness		Harness rear axle right			
1	-	-	-	-	-	
2	74/504:37	Connector	VT-OG	6/67:1	Pump, fuel leakage control	VT-OG
3	74/504:38	Connector	GN-OG	6/67:2	Pump, fuel leakage control	GN-OG
4	74/504:39	Connector	BU-GY	6/67:3	Pump, fuel leakage control	BU-GY
5	74/504:5	Connector	YE-BK	7/57:1	Right-hand rear ABS sensor	WH
6	74/504:6	Connector	BU-RD	7/57:2	Right-hand rear ABS sensor	BN
7	74/504:21	Connector	BU	6/67:4	Pump, fuel leakage control	BU
				9/38:1	Electrically heated fuel filter	
8	31/68	Ground connection	BK-OG	6/35:2	Fuel pump, auxiliary heater	BK-OG
				9/38:2	Electrically heated fuel filter	
9	4/56C2:36	Central Electronic Module (CEM)	YE-GN	7/121:5	Height sensor, suspension, rear right	YE-GN
10	4/56C2:53	Central Electronic Module (CEM)	GN-BN	7/121:1	Height sensor, suspension, rear right	GN-BN
11	4/56C2:35	Central Electronic Module (CEM)	GN-VT	7/121:4	Height sensor, suspension, rear right	GN-VT
12	-	-	-	-	-	-
13	-	-	-	-	-	-
14	74/504:41	Connector	YE-RD	6/35:1	Fuel pump, auxiliary heater	YE-RD

74/513

5-pin green

No.	Infotainment harness			Harness rear axle right		
1	4/84C1:5	Suspension Module (SUM)	VT-GY	8/23:1	Shock absorber, Four-C, rear right	VT-GY
2	4/84C1:4	Suspension Module (SUM)	BU-BN	8/23:2	Shock absorber, Four-C, rear right	BU-BN
3	73/5066	Branching point	YE-GN	7/121:5	Shock absorber, Four-C, rear right	YE-GN
4	73/5053	Branching point	YE-GN	7/121:1	Shock absorber, Four-C, rear right	GN-BN
5	4/84C1:14	Suspension Module (SUM)	GN-VT	7/121:4	Shock absorber, Four-C, rear right	GN-VT

Connectors

74/514 - 74/518

74/514

4-pin gray

No.	Floor harness			Left rear axle harness		
1	4/115C1:29	Park Brake Module (PBM)	BU-GN	6/146:2	Lock motor, rear left brake disc	BU-GN
2	4/115C1:14	Park Brake Module (PBM)	VT-BK	6/146:1	Lock motor, rear left brake disc	VT-BK
3	4/56C2:76	Central Electronic Module (CEM)	YE-OG	4/83:4 6/33:4	Fuel pump control module Fuel pump	YE-OG
4	31/65	Ground connection	BK-YE	74/520:5	Connector	BK-YE

74/518

7-pin gray

No.	Infotainment harness			Floor harness		
1	4/84C1:16	Suspension Module (SUM)	BU-BK	73/5011 74/409:23	Branching point Connector	BU-BK
2	4/84C1:15	Suspension Module (SUM)	GN-BK	73/5012 74/409:22	Branching point Connector	GN-BK
3	73/5052	Branching point	YE-GN	74/511:14	Connector	YE-GN
4	73/5023	Branching point	GN-BN	74/511:15	Connector	GN-BN
5	4/84C1:28	Suspension Module (SUM)	VT-WH	74/511:16	Connector	VT-WH
6	4/84C1:2	Suspension Module (SUM)	GN-BU	74/511:12	Connector	GN-BU
7	4/84C1:1	Suspension Module (SUM)	YE-BU	74/511:13	Connector	YE-BU

Connectors

74/519

74/519

22-pin gray

No.	Infotainment harness			Engine compartment harness		
1	4/84C1:6	Suspension Module (SUM)	BU-BK	8/20:1	Shock absorber, Four-C, front left	BU-BK
2	4/84C1:7	Suspension Module (SUM)	VT-BN	8/20:2	Shock absorber, Four-C, front left	VT-BN
3	4/84C1:9	Suspension Module (SUM)	GY-YE	8/21:1	Shock absorber, Four-C, front right	GY-YE
4	4/84C1:8	Suspension Module (SUM)	BU-OG	8/21:2	Shock absorber, Four-C, front right	BU-OG
5	73/5052	Branching point	YE-GN	7/118:5	Height sensor, suspension, front left	YE-GN
6	4/84C1:12	Suspension Module (SUM)	BU-RD	7/118:4	Height sensor, suspension, front left	BU-RD
7	73/5066	Branching point	YE-GN	73/3077	Branching point	YE-GN
8	4/84C1:27	Suspension Module (SUM)	GY-VT	7/119:4	Height sensor, suspension, front right	GY-VT
9	4/84C1:22	Suspension Module (SUM)	BU-GY	7/88:1	Acceleration sensor, Four-C, front right	BU-GY
10	4/84C1:10	Suspension Module (SUM)	VT-RD	7/87:1	Acceleration sensor, Four-C, front left	VT-RD
11	4/84C1:19	Suspension Module (SUM)	GN-BN	73/3078	Branching point	GN-BN
12	4/86C2:2	Parking Assistance Module (PAM)	VT-GY	74/309:4	Connector	VT-GY
13	4/86C2:5	Parking Assistance Module (PAM)	BU-GN	74/309:5	Connector	BU-GN
14	4/86C2:1	Parking Assistance Module (PAM)	YE-OG	74/309:6	Connector	YE-OG
15	4/86C2:6	Parking Assistance Module (PAM)	BU-BK	74/309:10	Connector	BU-BK
16	4/86C2:7	Parking Assistance Module (PAM)	BU-GY	74/309:11	Connector	BU-GY
17	4/86C2:8	Parking Assistance Module (PAM)	BU-OG	74/309:12	Connector	BU-OG
18	-		-	-		-
19	-		-	-		-
20	-		-	-		-
21	-		-	-		-
22	-		-	-		-

Connectors

74/520 - 74/529

74/520 6-pin gray

No.	Left rear axle harness			All wheel drive harness		
1	74/511:3	Connector	BU-BK	4/82C1:4	Differential Electronic Module (DEM)	BU-BK
2	74/511:4	Connector	GN-BK	4/82C1:2	Differential Electronic Module (DEM)	GN-BK
3	-		-	-		-
4	-		-	-		-
5	74/514:4	Connector	BK-YE	4/82C1:7	Differential Electronic Module (DEM)	BK-YE
6	74/511:1	Connector	WH-VT	4/82C1:3	Differential Electronic Module (DEM)	GN-RD

74/524 2-pin gray

No.	Harness rear axle right			Floor harness		
1	4/115C1:12	Park Brake Module (PBM)	YE-GY	6/147:1	Lock motor, rear right brake disc	YE-GY
2	4/115C1:27	Park Brake Module (PBM)	GN-BN	6/147:2	Lock motor, rear right brake disc	GN-BN

74/529 2-pin black

No.	Infotainment harness			Harness RDAR/SUB		
1	16/105C2:2	Audio module (AUD), LHD	OG	16/145C3:1	Remote Digital Audio Receiver (RDAR)	OG
	16/36C1:2	TV receiver		16/162C3:1	Digital Audio Broadcast Module (DABM)	
	74/404:1	Connector				
2	74/404:1	Connector	OG	16/145C3:2	Remote Digital Audio Receiver (RDAR)	OG
				16/162C3:2	Digital Audio Broadcast Module (DABM)	

Connectors

74/530 - 74/531

74/530 14-pin gray

No.	Tunnel harness			Floor harness		
1	3/65:3	Switch, heated rear seat	BN-VT	73/5021	Branching point	BN-VT
2	-		-	-		-
3	16/135:1	Antenna, door lock, passenger compartment 3	GY-VT	4/93C2:14	Keyless vehicle module (KVM)	GY-VT
4	16/135:2	Antenna, door lock, passenger compartment 3	BU-WH	4/93C2:17	Keyless vehicle module (KVM)	BU-WH
5	-		-	-		-
6	-		-	-		-
7	73/5042	Branching point	GN-OG	11C/22:2	Fuses in distribution box passenger compartment	GN-OG
8	73/5026	Branching point	BK-GN	73/5023	Branching point	BK-GN
9	-		-	-		-
10	16/134:1	Antenna, door lock, passenger compartment 2	GN-RD	4/93C1:4	Keyless vehicle module (KVM)	GN-RD
11	16/134:2	Antenna, door lock, passenger compartment 2	YE-OG	4/93C1:16	Keyless vehicle module (KVM)	YE-OG
12	-		-	-		-
13	-		-	-		-
14	-		-	-		-

74/531 2-pin gray

No.	Infotainment harness			DAB Adapter harness		
1	16/47C2:1	Antenna GSM/GPS/RDAR, S60	WH	16/162C2:1	Digital Audio Broadcast Module (DABM)	WH
	16/73C2:1	Amplifier window antenna 2, V60 (TV/DAB)				
1S	16/47C2:1S	Antenna GSM/GPS/RDAR, S60	-	16/162C2:1S	Digital Audio Broadcast Module (DABM)	-
	16/73C2:1S	Amplifier window antenna 2, V60 (TV/DAB)				

Connectors

74/532 - 74/539

74/532

2-pin gray

No.	Infotainment harness		DAB Adapter harness	
1	16/71C2:1 Window antenna amplifier 1	WH	16/162C2:2 Digital Audio Broadcast Module (DABM)	WH
1S	16/71C2:1S Window antenna amplifier 1	-	16/162C2:2S Digital Audio Broadcast Module (DABM)	-

74/534

4-pin gray

No.	Floor harness		Infotainment harness	
1	73/5117 Branching point	RD	16/105C1:1 Audio module (AUD)	RD
2	11C/17:2 Fuses in distribution box passenger compartment	RD	16/105C31:16 Audio module (AUD) 73/5051 Branching point	RD
3	-	-	-	-
4	73/5132 Branching point	BK-GY	73/5123 Branching point 16/36C2:2 TV receiver 16/162C1:2 Digital Audio Broadcast Module (DABM)	BK-GY

74/537

5-pin green

No.	Adapter harness camera		Floor harness	
1	73/5118 Branching point	BN	74/507:16 Connector	BN
2	73/5119 Branching point	OG	74/507:8 Connector	OG
3	-	-	-	-
4	73/5120 Branching point	GN	74/507:9 Connector	GN
5	73/5121 Branching point	BU	74/507:10 Connector	BU

74/539

6-pin gray

No.	Floor harness		Parking assistance harness adapter	
1	4/93C1:21 Keyless vehicle module (KVM)	GN-OG	74/540:4 Connector	GN-OG
2	4/93C1:22 Keyless vehicle module (KVM)	VT	74/540:8 Connector	VT
3	-	-	-	-
4	-	-	-	-
5	-	-	-	-
6	-	-	-	-

Connectors

74/540 - 74/601

74/540 8-pin gray

No.	Parking assistance harness adapter			Harness bumper rear		
1	4/86C3:11	Parking Assistance Module (PAM)	BU-WH	73/5064	Branching point	BU-WH
2	4/86C3:2	Parking Assistance Module (PAM)	YE-GY	7/133:2	Rear parking assistance sensor	YE-GY
3	4/86C3:3	Parking Assistance Module (PAM)	YE-BK	7/132:2	Rear parking assistance sensor	YE-BK
4	74/539:1	Connector	GN-OG	16/132:1	Antenna door lock tailgate	GN-OG
5	4/86C3:8	Parking Assistance Module (PAM)	GN-WH	73/5067	Branching point	GN-WH
6	4/86C3:4	Parking Assistance Module (PAM)	YE-OG	7/134:2	Rear parking assistance sensor	YE-OG
7	4/86C3:5	Parking Assistance Module (PAM)	YE-GN	7/131:2	Rear parking assistance sensor	YE-GN
8	74/539:2	Connector	VT	16/132:2	Antenna door lock tailgate	VT

74/601 S60 10-pin gray

No.	Floor harness			Tailgate harness		
1	4/56C2:48	Central Electronic Module (CEM)	YE-VT	10/3:1 10/3B:1	License plate lighting License plate lighting	BK
2	4/56C2:30	Central Electronic Module (CEM)	YE-OG	6/8:3	Central locking motor, trunk lid	BK
3	4/56C2:24 73/5032	Central Electronic Module (CEM) Branching point	GY-YE	10/3:3 10/3B:3	License plate lighting License plate lighting	BK
4	73/5030	Branching point	BK-OG	73/6001	Branching point	BK
5	4/56C2:63	Central Electronic Module (CEM)	GY-BN	6/8:1	Central locking motor, trunk lid	BK
6	10/127:4	Lighting, cargo compartment, left-hand side	BU-WH	6/8:4	Central locking motor, trunk lid	BK
7	4/56C2:73	Central Electronic Module (CEM)	GN-BN	73/5096	Branching point	GN-BN
8	73/5112	Branching point	VT-GN	10/18C2:2	Lamp housing, rear left	BK
9	73/5113	Branching point	YE-BK	10/17C2:2	Lamp housing, rear right	BK
10	4/93C4:8	Keyless vehicle module (KVM)	GY-OG	10/3B:4	License plate lighting	BK

Connectors

74/602 - 74/606

74/602 V60

14-pin gray

No.	Floor harness			Tailgate harness		
1	-		-	-		-
2	4/56C2:24 73/5032	Central Electronic Module (CEM) Branching point	GY-YE	10/3:3 10/3B:3	License plate lighting License plate lighting	BK
3	4/56C2:10	Central Electronic Module (CEM)	YE-OG	6/8:3	Central locking motor, trunk lid	BK
4	4/93C4:8	Keyless vehicle module (KVM)	GY-OG	10/3B:4	License plate lighting	BK
5	73/5030	Branching point	BK-OG	73/6001	Branching point	BK-OG
6	73/5044	Branching point	BU-WH	10/25:2	Ceiling light, cargo compartment	BK
7	2/16:3	Relay, rear window wiper	GY-BU	6/32:2	Rear window wiper motor	BK
8	2/82:5	Relay, heated rear window	GY-RD	9/2A:1	Heated rear window	GY-RD
9	4/56C2:48	Central Electronic Module (CEM)	YE-VT	10/3:1 10/3B:1	License plate lighting License plate lighting	BK
10	4/56C2:9	Central Electronic Module (CEM)	BK-OG	10/19:1	Auxiliary brake light	BK
11	74/409:13	Connector	GN-VT	16/16C1:1	Window antenna amplifier	GN-VT
12	-		-	-		-
13	-		-	-		-
14	73/5136	Branching point	RD-GY	6/32:1	Rear window wiper motor	BK

74/606

5-pin blue

No.	Floor harness			Tailgate harness		
1	4/120C2:4	Parking Assistance Camera (PAC)	BU	27/6:1	Camera	BU
2	4/120C2:3	Parking Assistance Camera (PAC)	OG	27/6:2	Camera	OG
3	4/120C2:2	Parking Assistance Camera (PAC)	GN	27/6:3	Camera	GN
4	4/120C2:1	Parking Assistance Camera (PAC)	BN	27/6:4	Camera	BN
5S	4/120C2:5S	Parking Assistance Camera (PAC)	-	27/6:5S	Camera	-

Connectors

74/607 - 74/901

74/607 V60

2-pin black

No.	Floor harness			Tailgate harness	
1	74/405:1	Connector	WH	16/16C2:1 Amplifier window antenna, V60	WH
1S	74/405:1S	Connector	-	16/16C2:1S Amplifier window antenna, V60	-

74/608 V60

2-pin white

No.	Floor harness			Tailgate harness	
1	74/405:2	Connector	WH	16/71C1:1 Amplifier window antenna 1, V60	WH
1S	74/405:2S	Connector	-	16/71C1:1S Amplifier window antenna 1, V60	-

74/609 V60

2-pin grey

No.	Roof harness			Tailgate harness	
1	74/414:2	Connector	BK	6/8:1 Lock motor central locking, trunk lid/tailgate, V60	BK
2	-		-	-	-


74/901

12-pin black


No.	Roof harness			Harness windshield module	
1	74/412:1	Connector	GN-OG	4/125C1:2 Closing velocity module (CVM)	GN-OG
2	74/412:2	Connector	GY-BU	4/125C1:1 Closing velocity module (CVM)	GY-BU
3	73/5097	Branching point	BU-BK	4/125C1:4 Closing velocity module (CVM)	BU-BK
4	73/5098	Branching point	GU-BK	4/125C1:3 Closing velocity module (CVM)	GN-BK
5	74/414:5 73/5189	Connector Branching point	RD-GN GY-OG	4/125C1:5 Closing velocity module (CVM)	RD-GN
6	73/4020	Branching point	BU-WH	7/149:3 Rain Sensor Module (RSM)	VT-BN
7	4/56C4:10	Central Electronic Module (CEM)	GY-RD	7/149:1 Rain Sensor Module (RSM)	BU-WH
8	4/80C1:15	Forward Sensing Module (FSM)	GY-BK	9/39:1 Heating element camera	GY-BK
9	73/4014	Branching point	BK-WH	4/125C1:7 Closing velocity module (CVM) 73/4049 Branching point	BK-WH
10	4/80C1:14	Forward Sensing Module (FSM)	BK	9/39:2 Heating element camera	BK
11	73/4047	Branching point	BN-VT	7/90:2 Moisture sensor	BN-VT
12	73/4048	Branching point	BU	7/90:3 Moisture sensor	BU

Branching points 73/3004 - 73/3012


73/3004 4-Cyl. Turbo 1,6

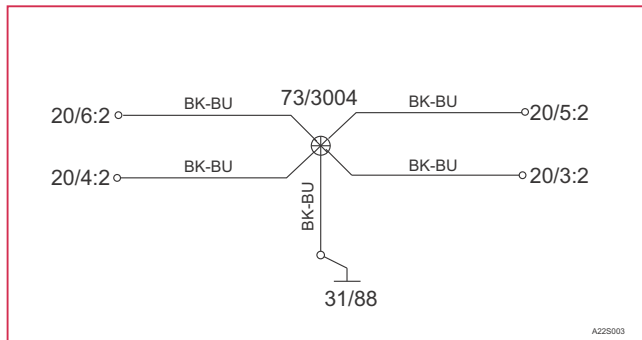


73/3005 4-Cyl. 2,0L

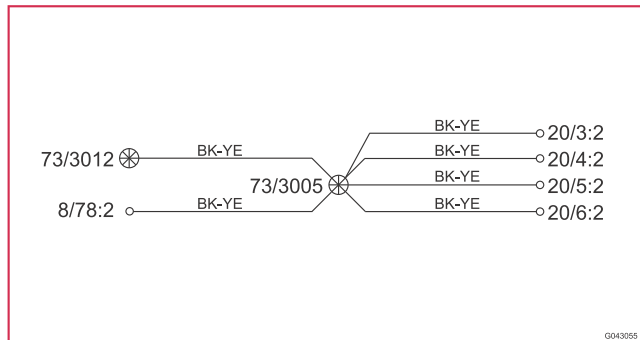


73/3004 5-Cyl. Turbo

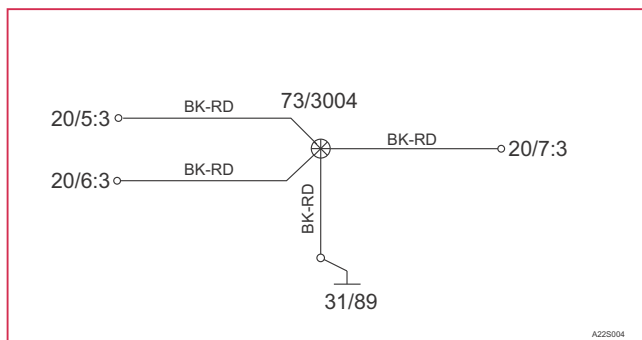


73/3006

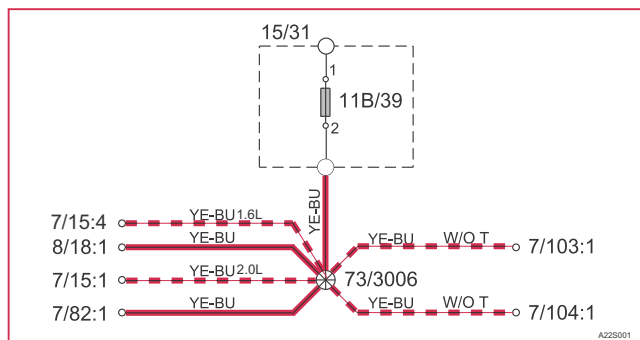


73/3004 6-Cyl.

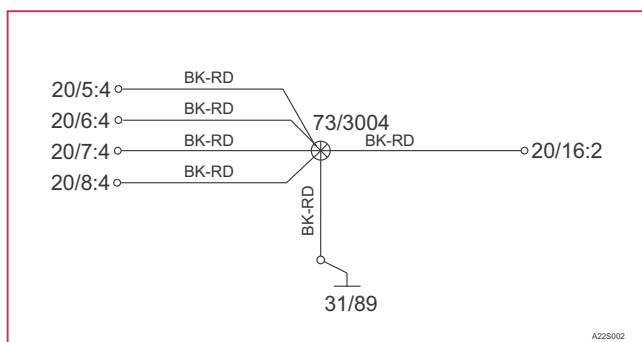


73/3009

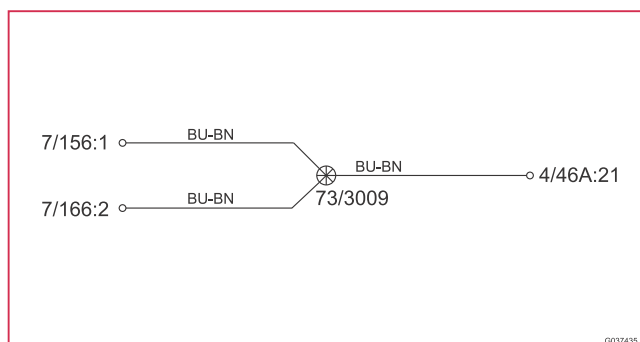


73/3004 6-Cyl. Turbo

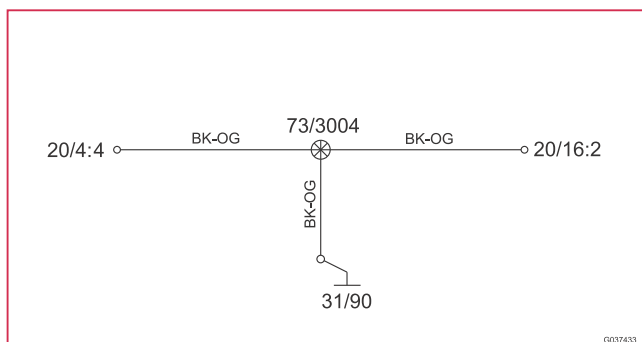


73/3010

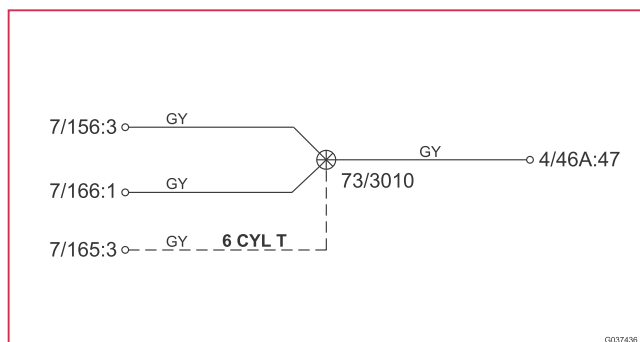

73/3005 4-Cyl. Turbo 1,6L

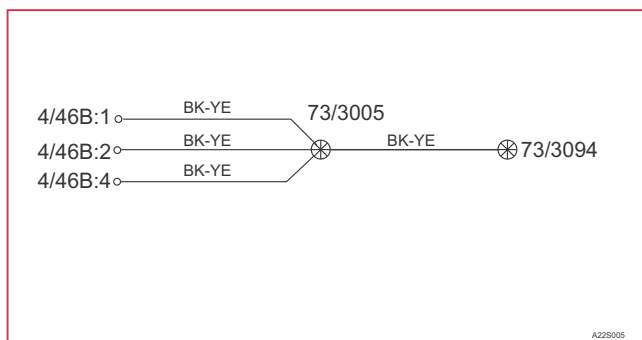


73/3012 4-Cyl. Turbo

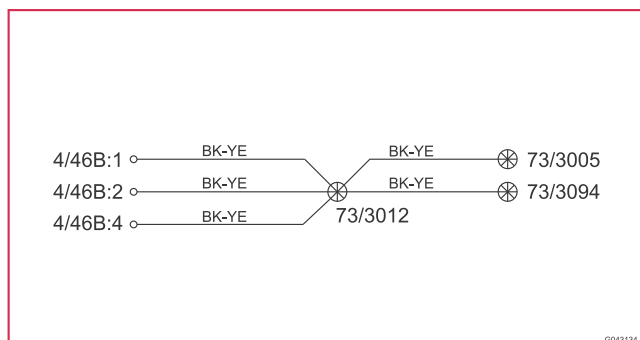


Branching points

73/3012 - 73/3022


73/3012 4-Cyl. Diesel

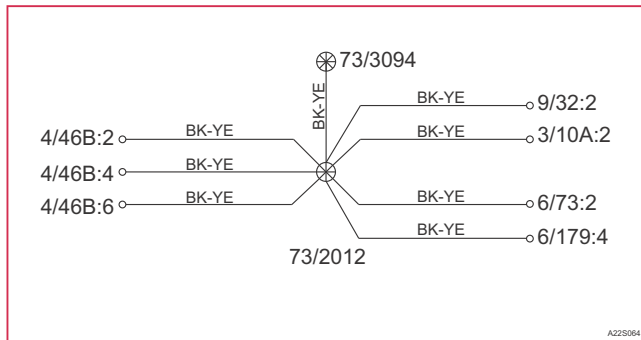


73/3015

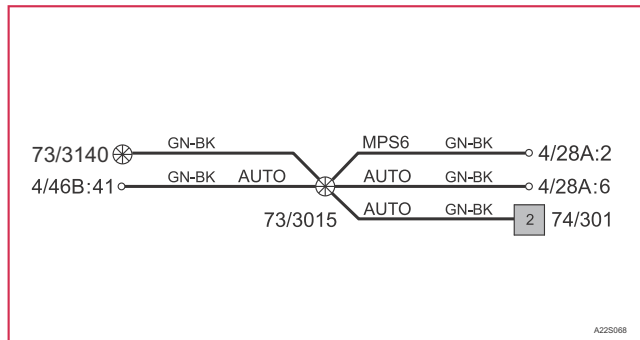


73/3012 5-Cyl. Turbo

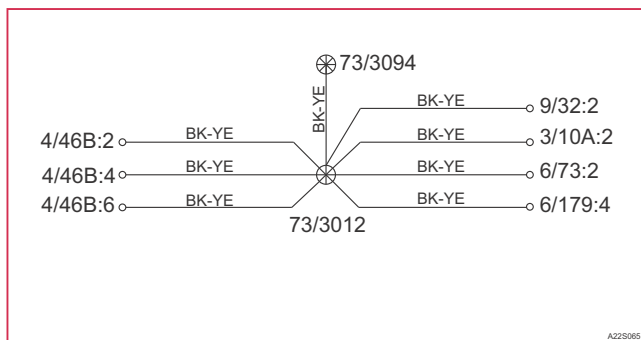


73/3019

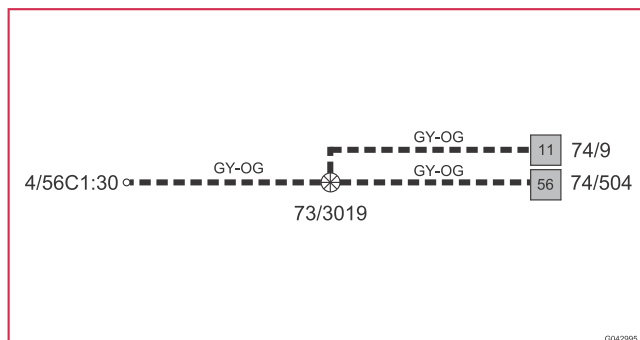


73/3012 5-Cyl. Diesel

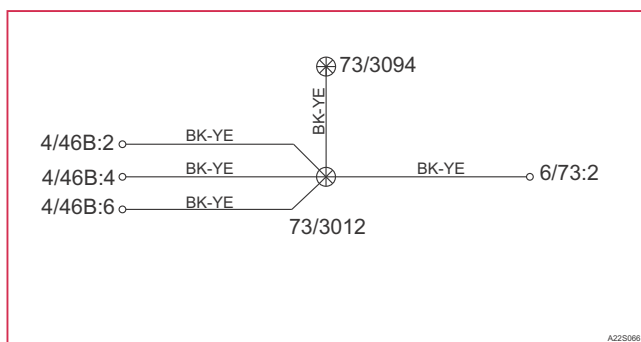


73/3020

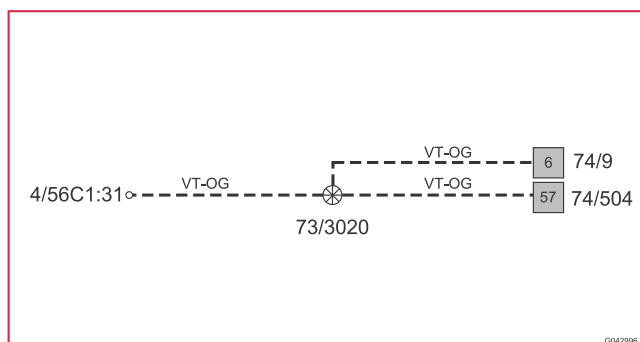


73/3012 6-Cyl.

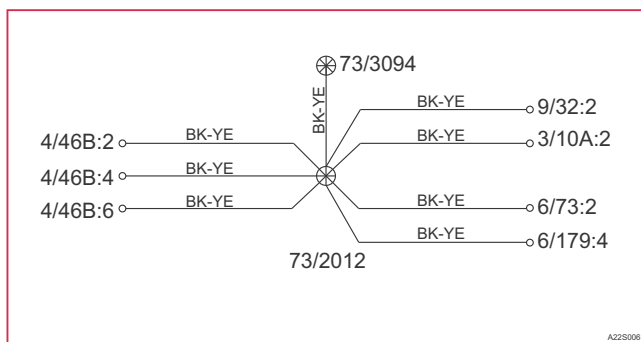


73/3021

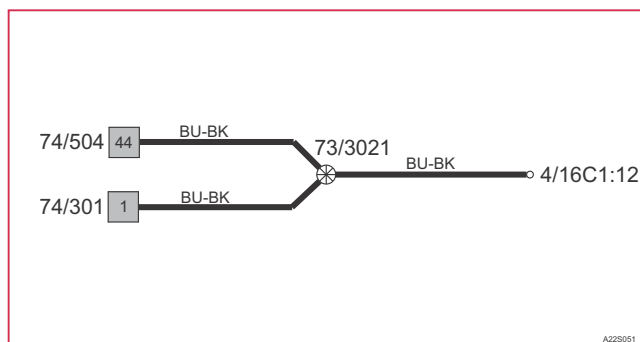

73/3014

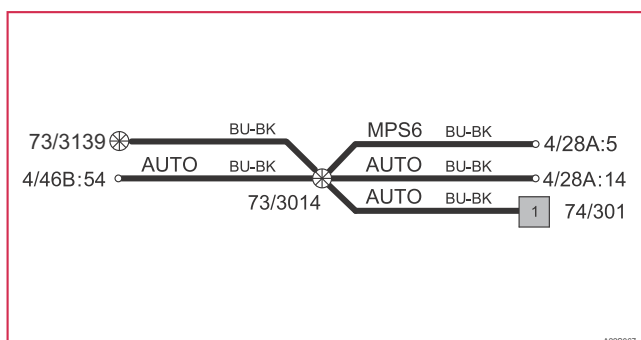


73/3022

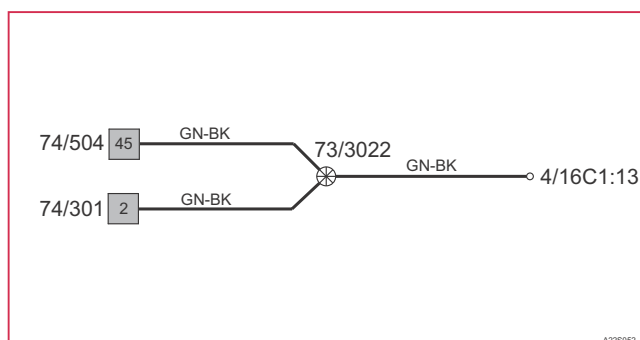


Branching points

73/3030 - 73/3039


73/3030

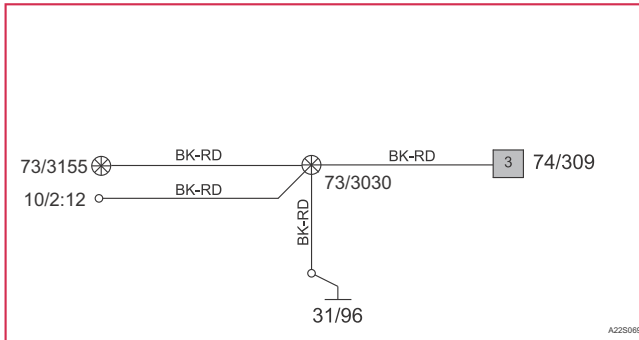


73/3037

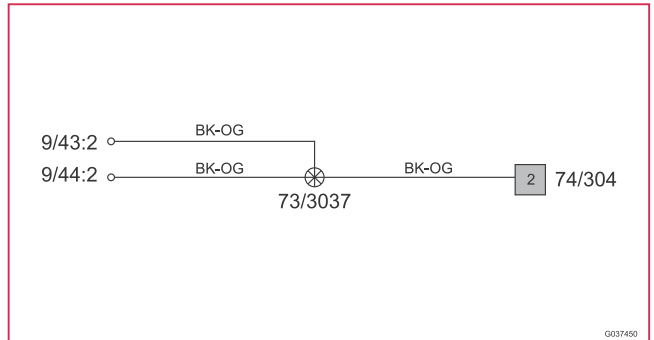


73/3033

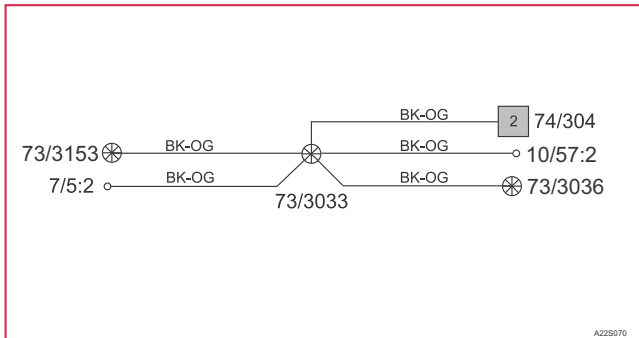


73/3039 4-Cyl. Turbo

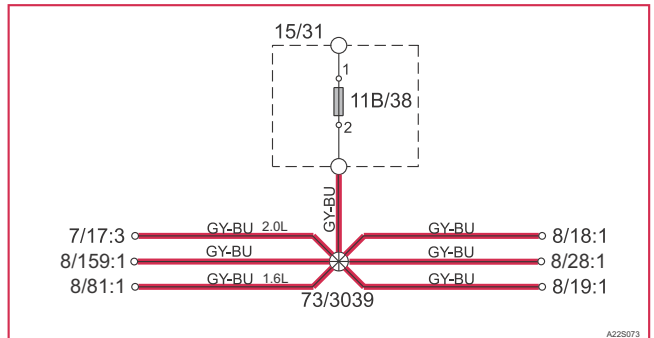


73/3034

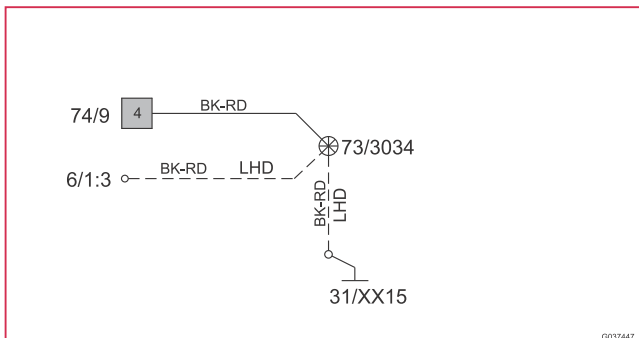


73/3039 5-Cyl. Turbo

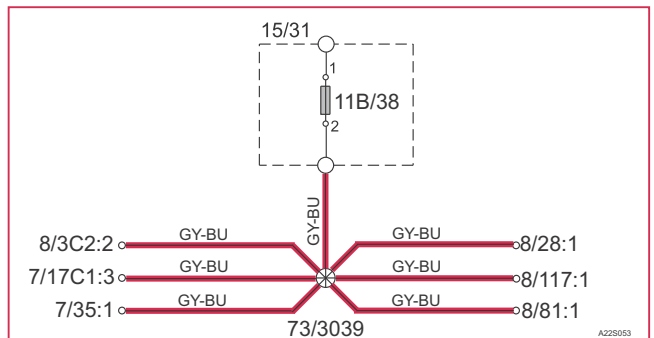


73/3035

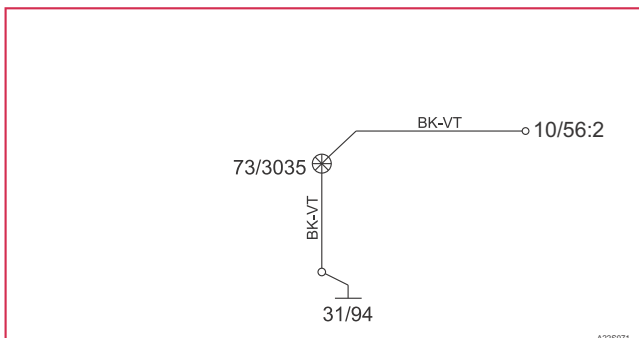


73/3039 5-Cyl. Diesel

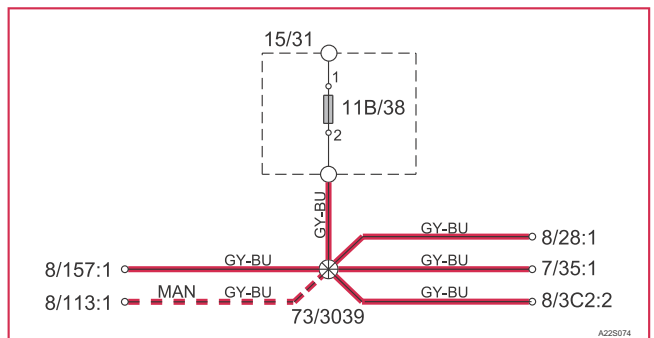

73/3036

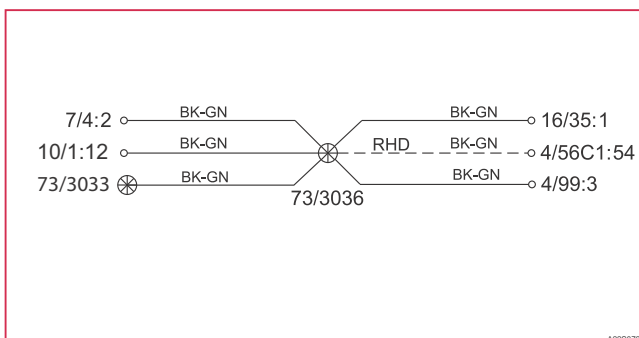


73/3039 6-Cyl.

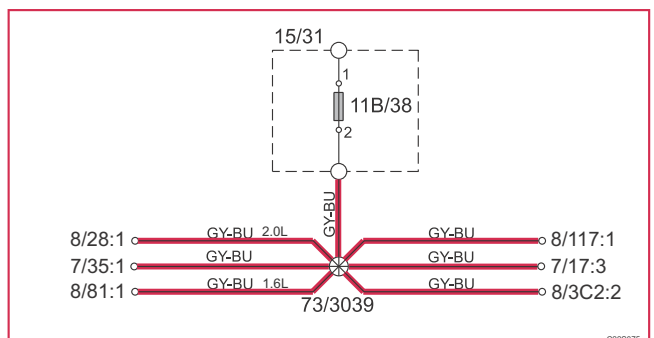


Branching points 73/3040 - 73/3058


73/3040

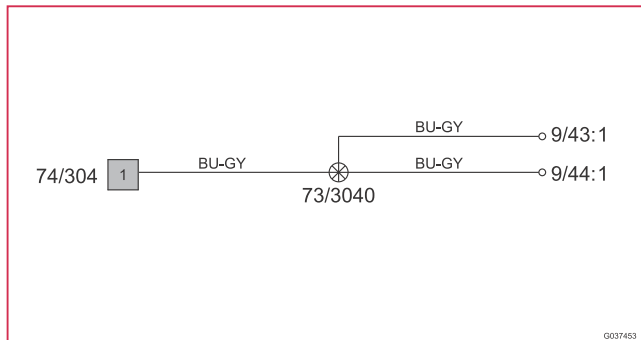


73/3042

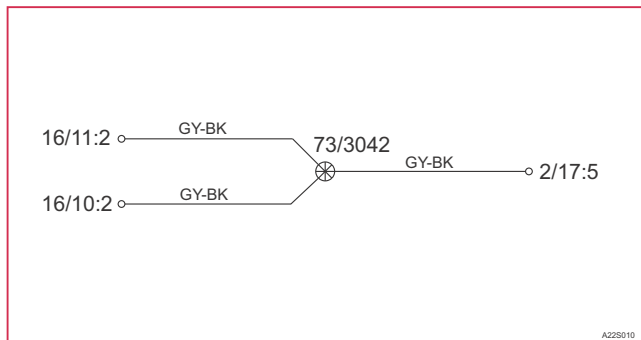


73/3046

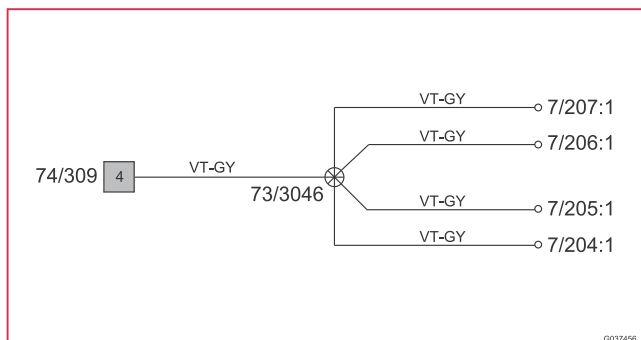


73/3047

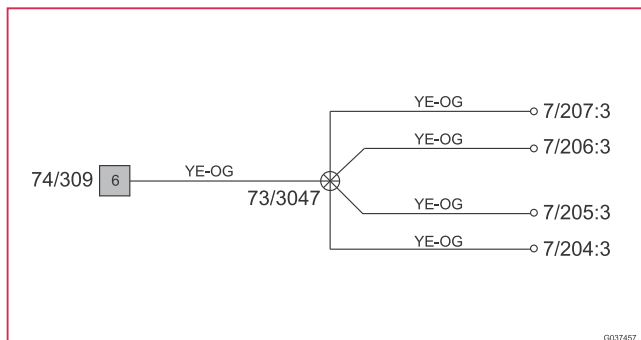


73/3050

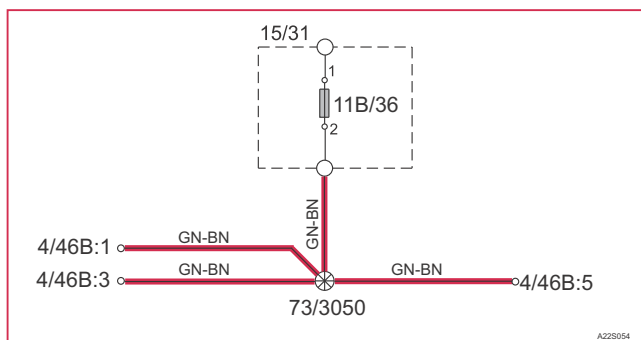


73/3051

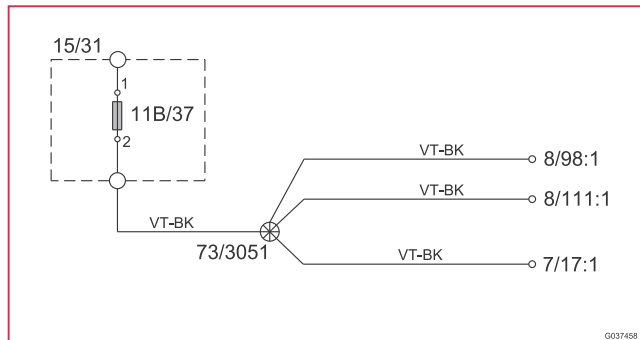


73/3053

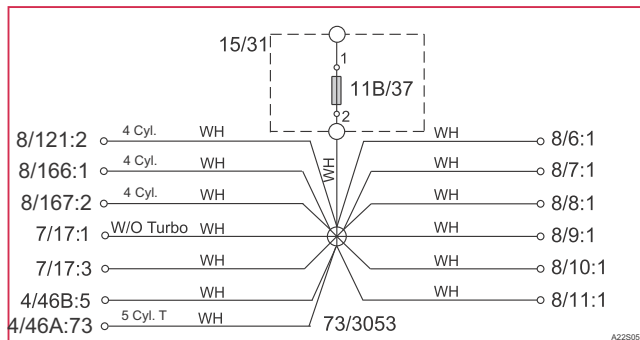


73/3058 4-Cyl. Turbo

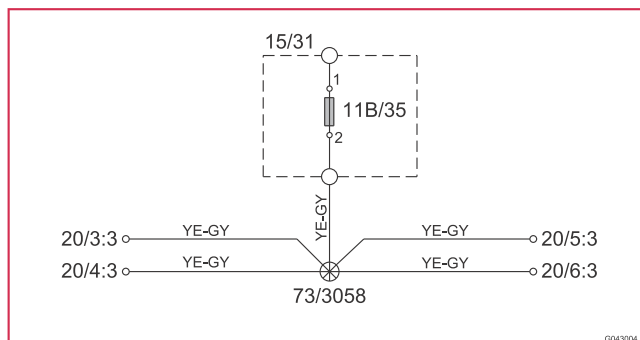

73/3058 5-Cyl. Turbo

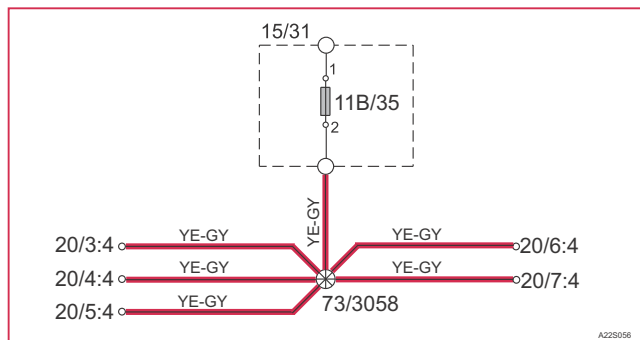


73/3058 6-Cyl.

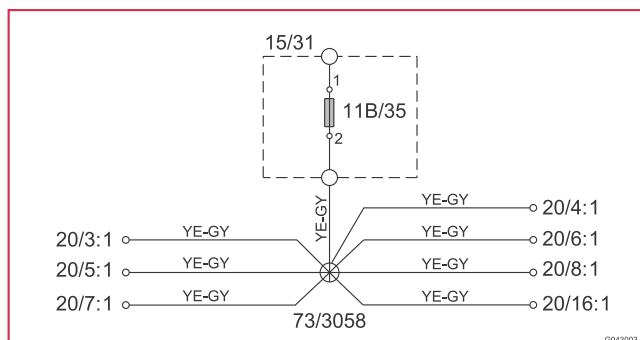


Branching points 73/3064 - 73/3087


73/3064

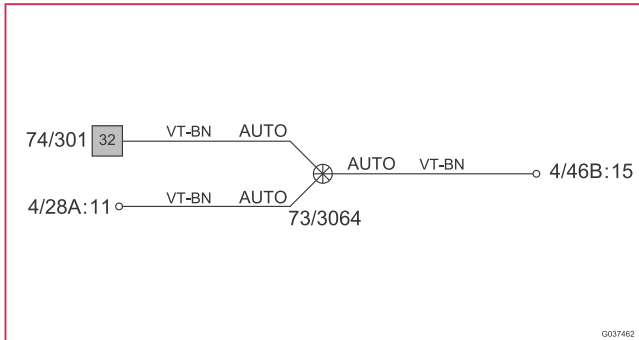


73/3076

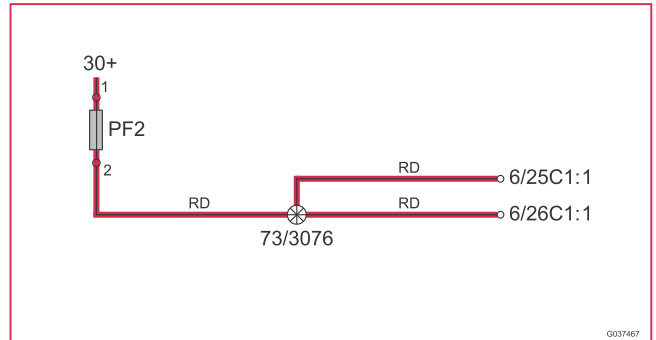


73/3068

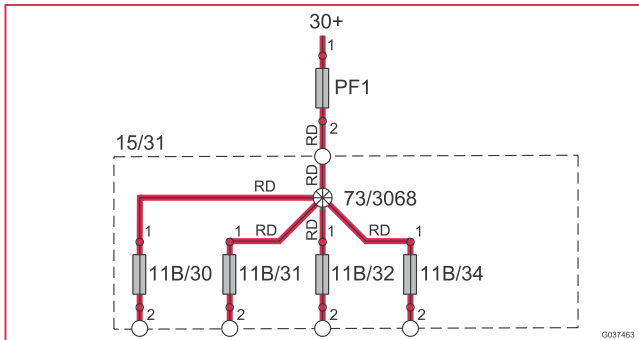


73/3077

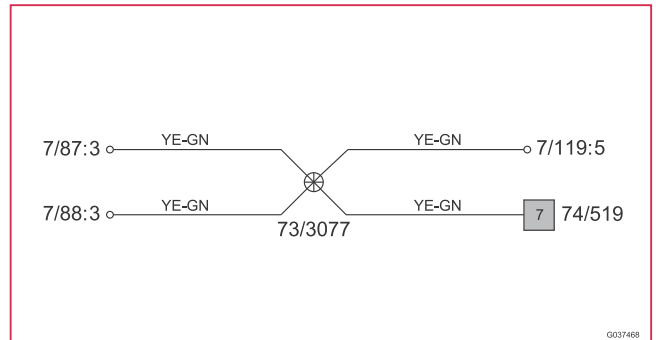


73/3070

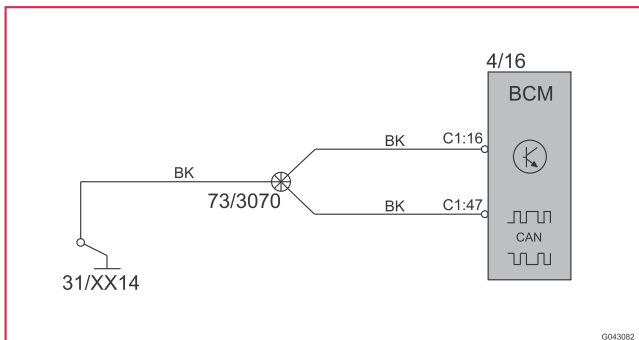


73/3078

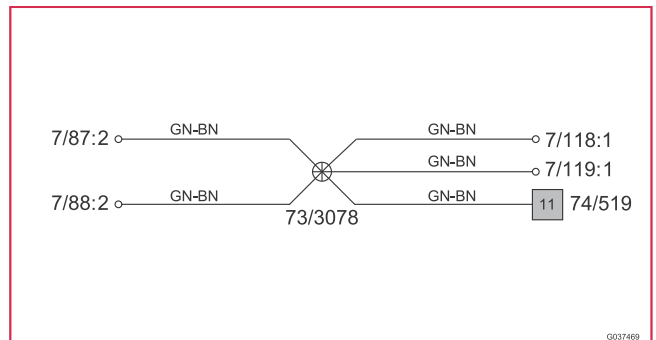


73/3072

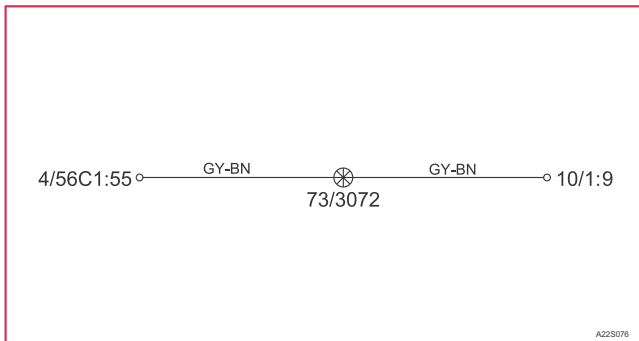


73/3085

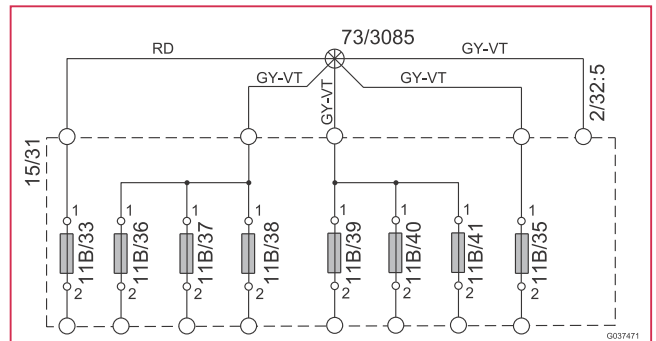

73/3073

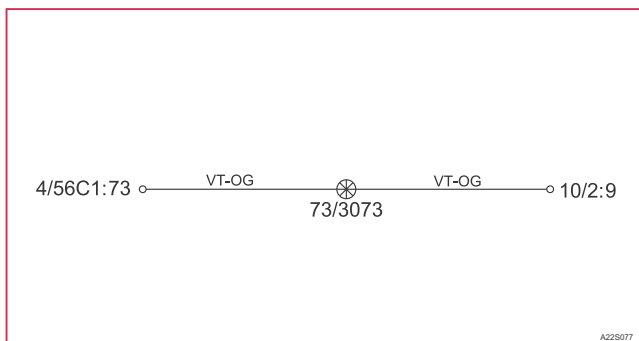


73/3087

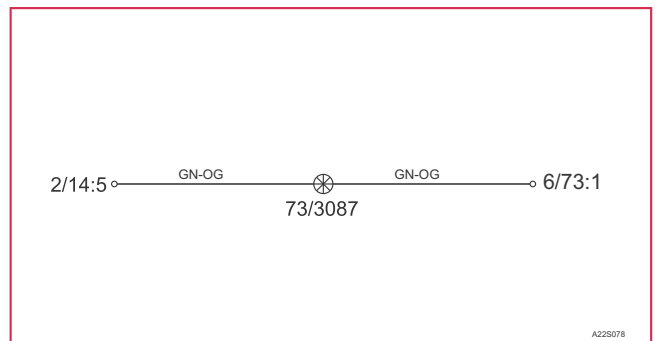


Branching points 73/3089 - 73/3097


73/3089 5-Cyl. Turbo

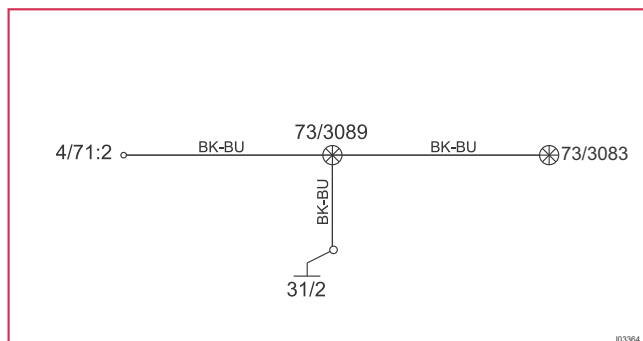


73/3091

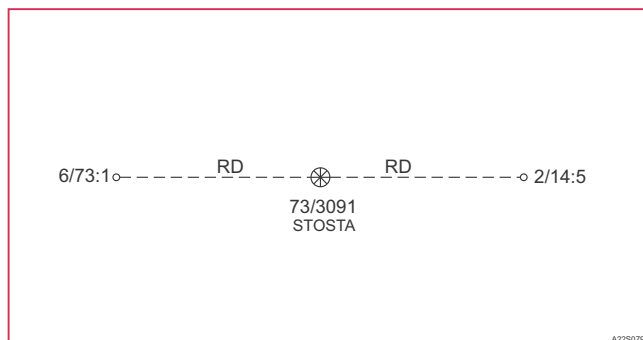


73/3094 4-Cyl. Turbo 1,6L

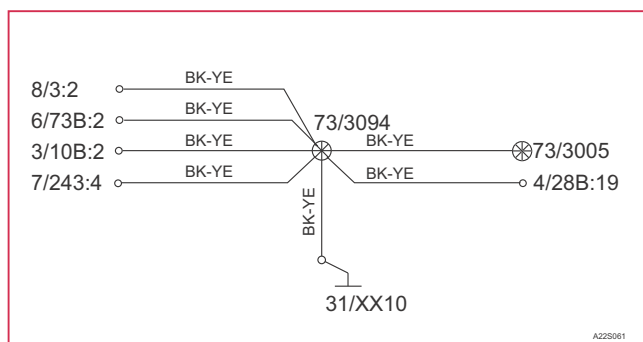


73/3094 4-Cyl. Turbo 2,0L

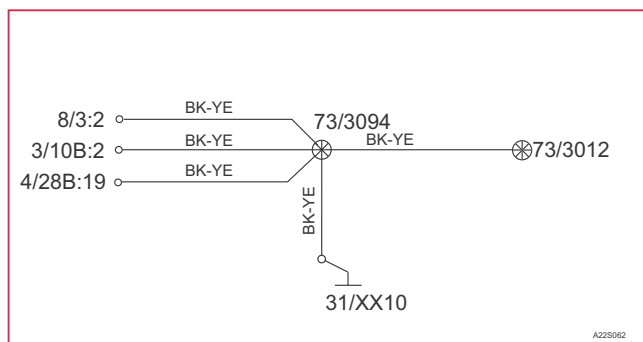


73/3094 5-Cyl. Turbo

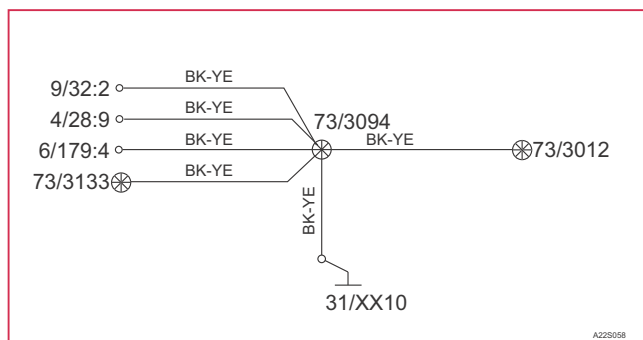


73/3094 5-Cyl. Diesel

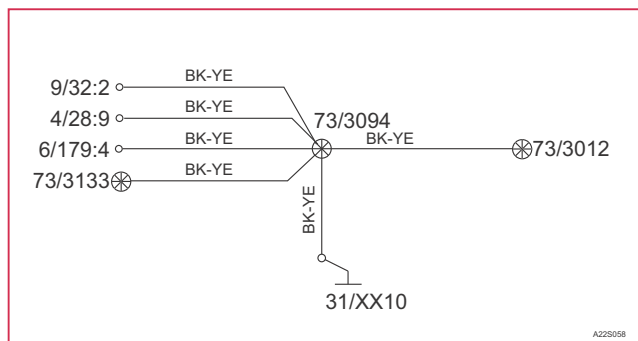


73/3094 6-Cyl.

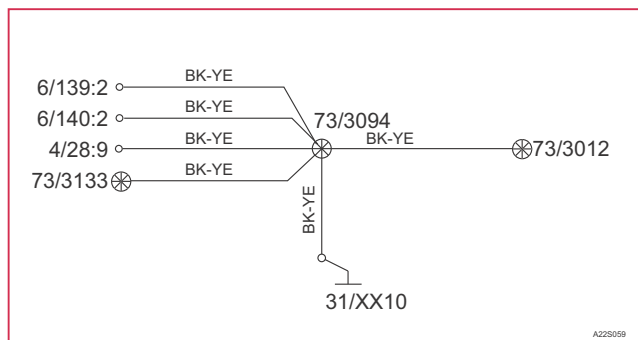


73/3094 6-Cyl. Diesel

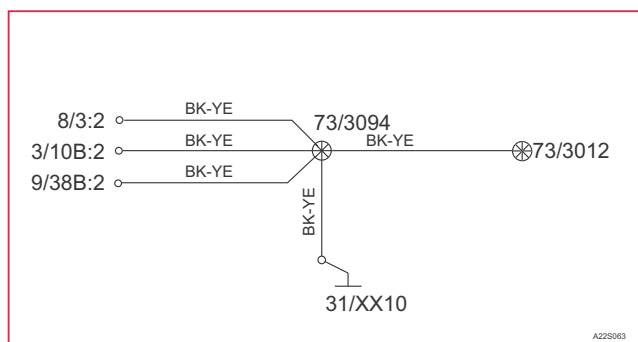

73/3096

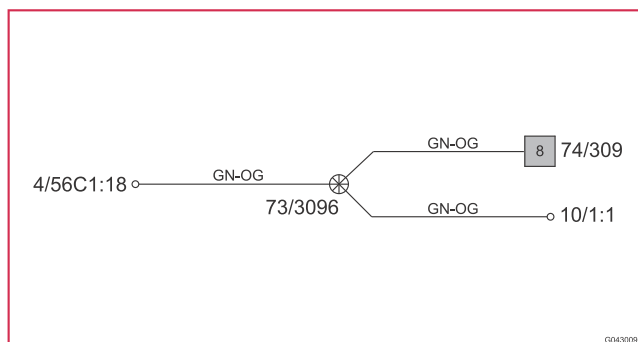


73/3097

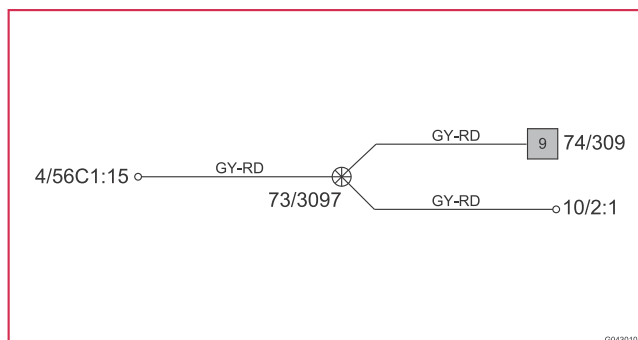


Branching points
73/3100 - 73/3131


73/3100

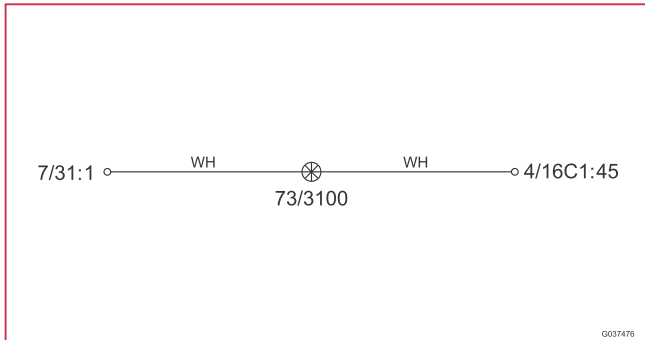


73/3108

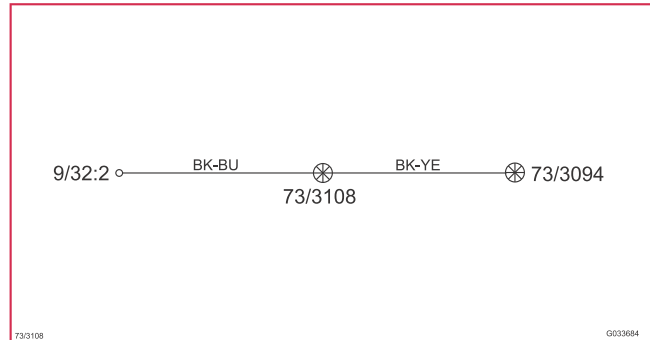


73/3101

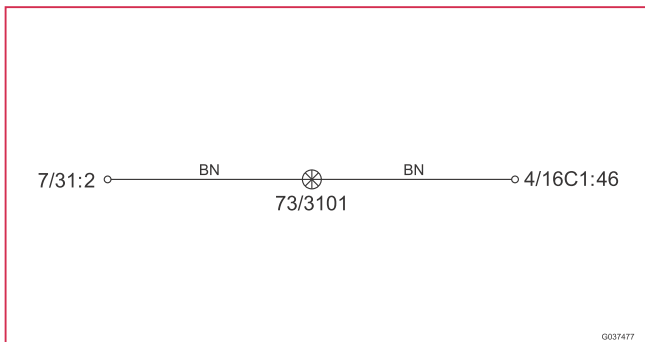


73/3120

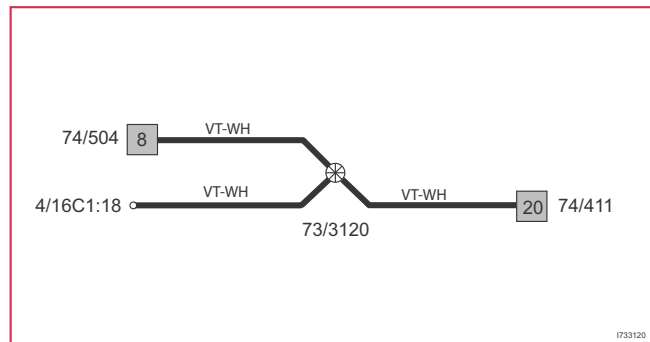


73/3102

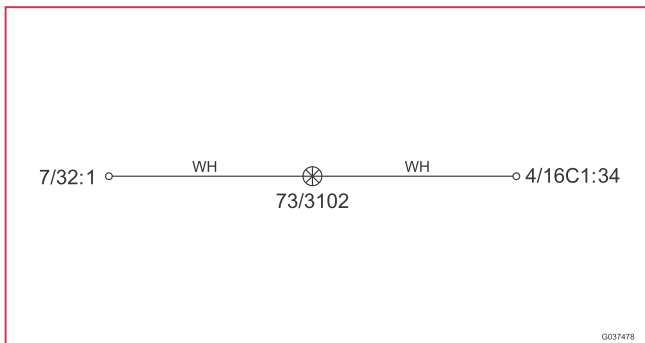


73/3121

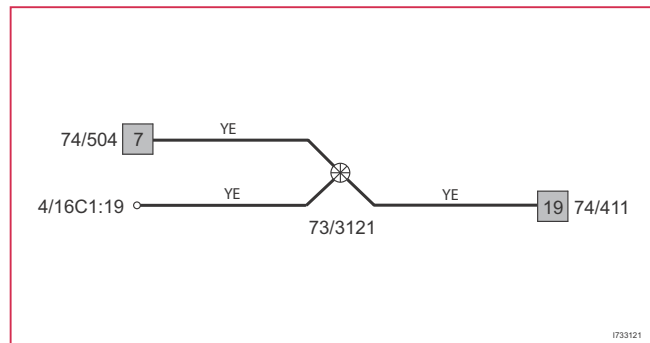


73/3103

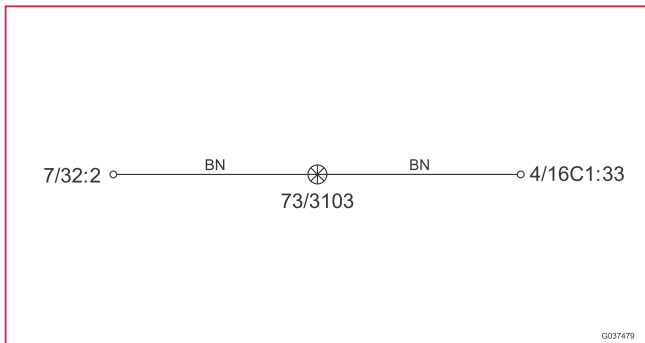


73/3125 4-Cyl. Diesel

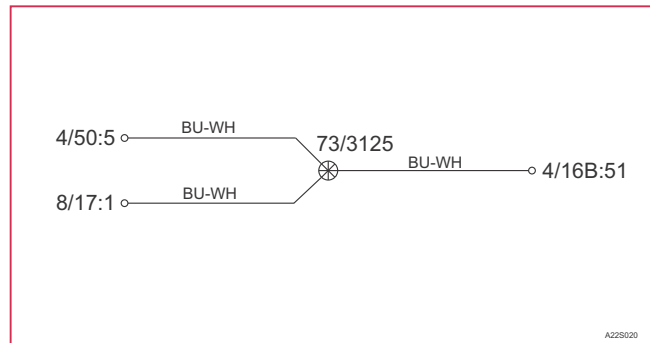

73/3104

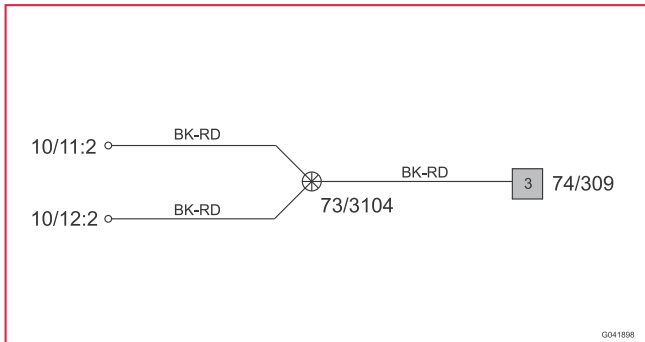


73/3131

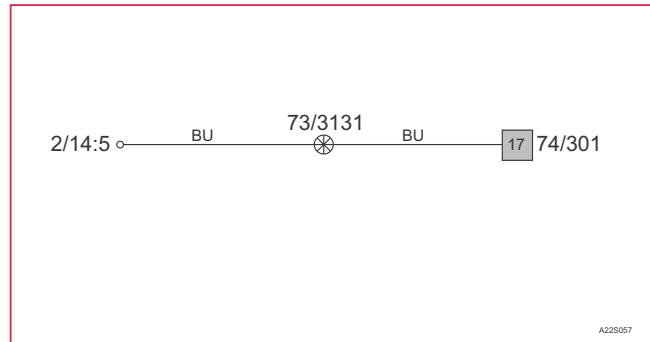


Branching points

73/3133 - 73/3153


73/3133

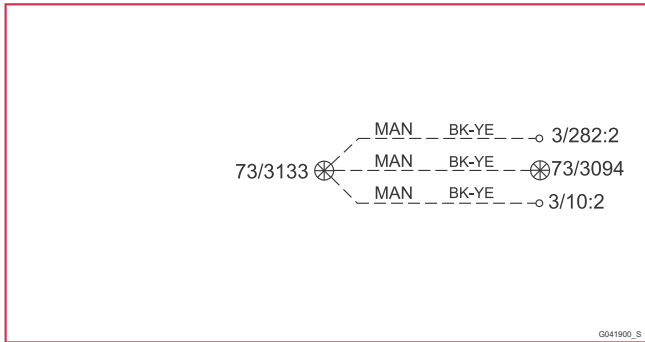


73/3145

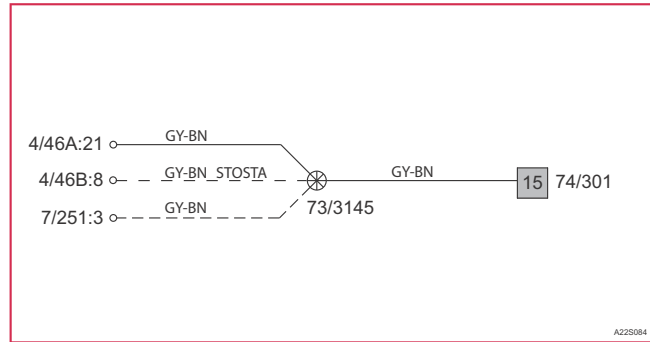


73/3136

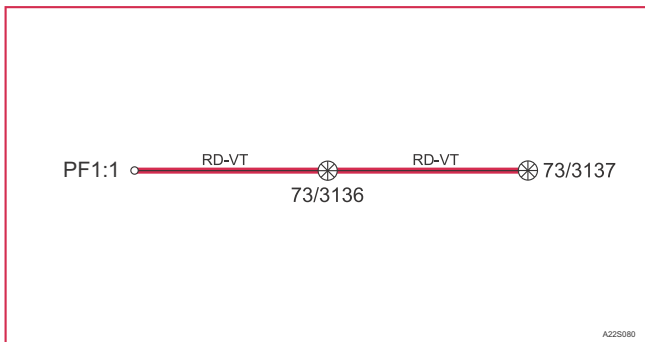


73/3145 5-Cyl. Diesel

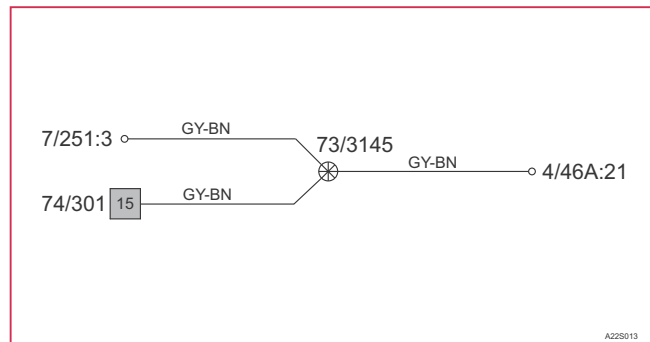


73/3137

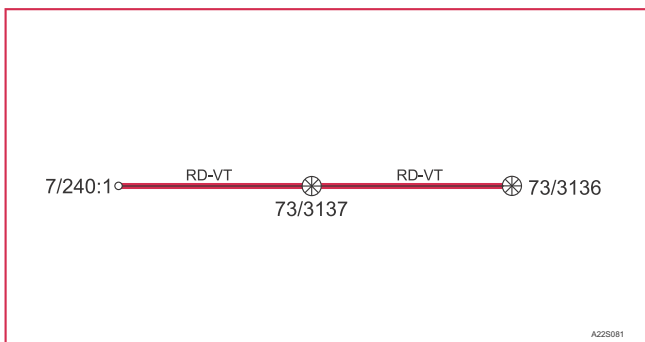


73/3150 5-Cyl. Diesel

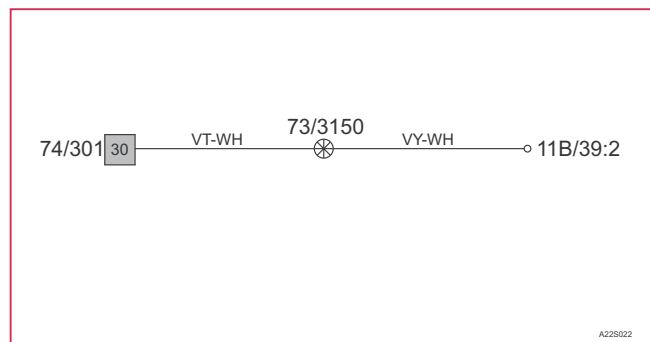


73/3139

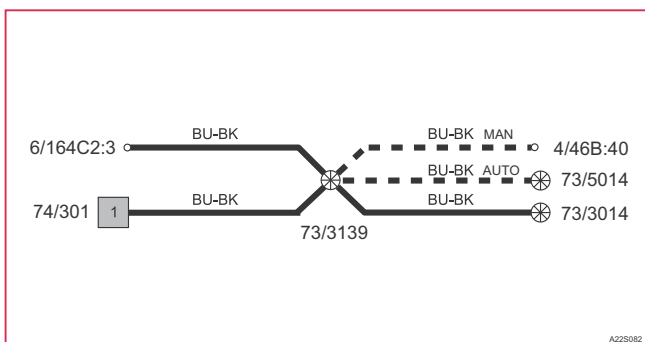


73/3152 4-Cyl. Diesel

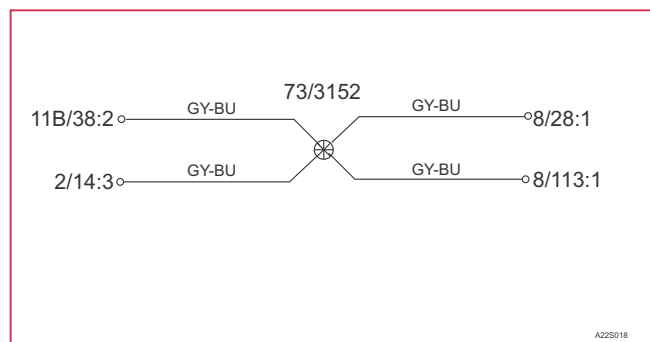

73/3140

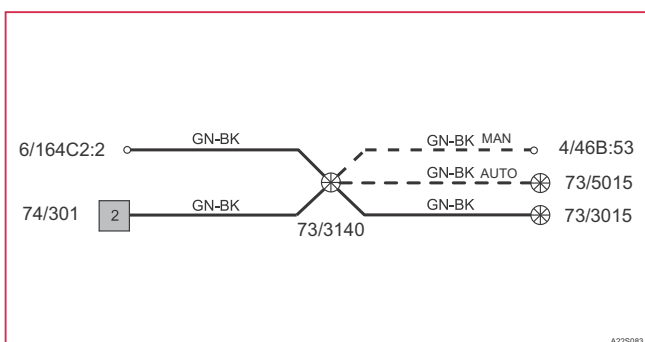


73/3153

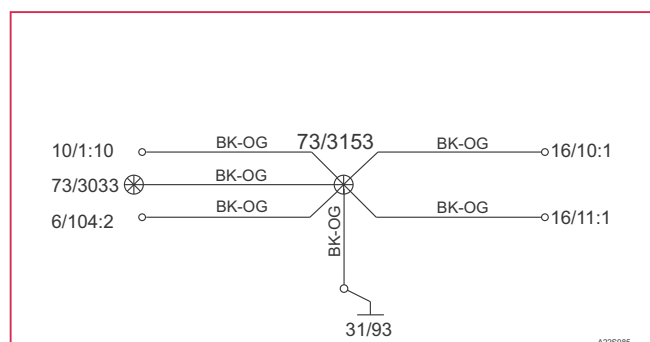


Branching points 73/3154 - 73/3165


73/3154

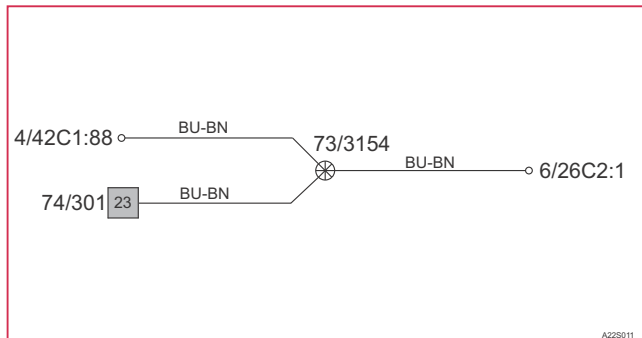


73/3160

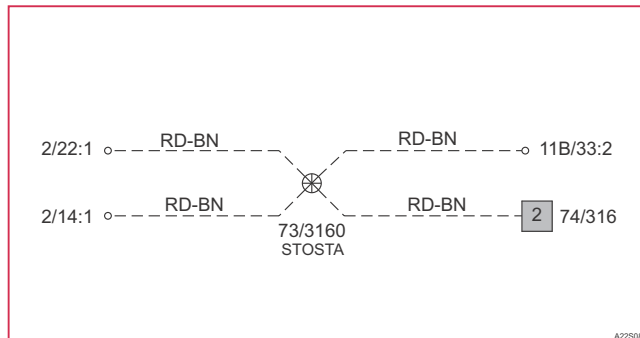


73/3155

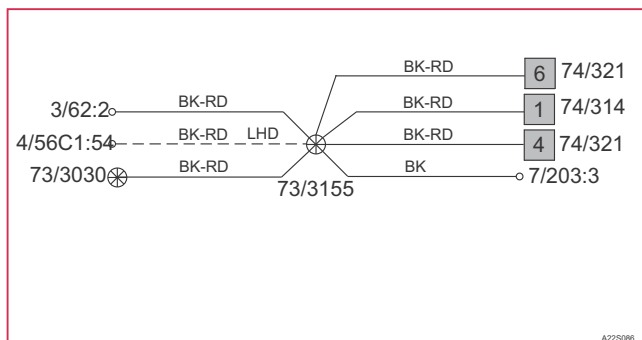


73/3161

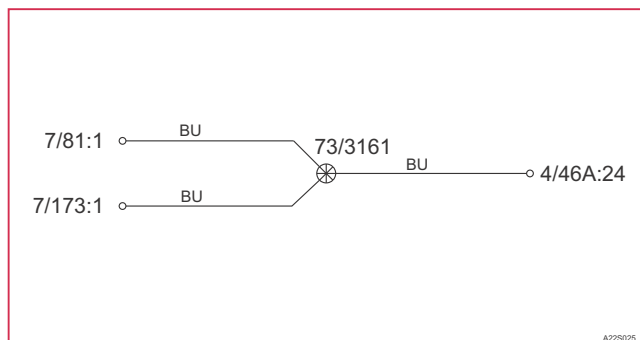


73/3156

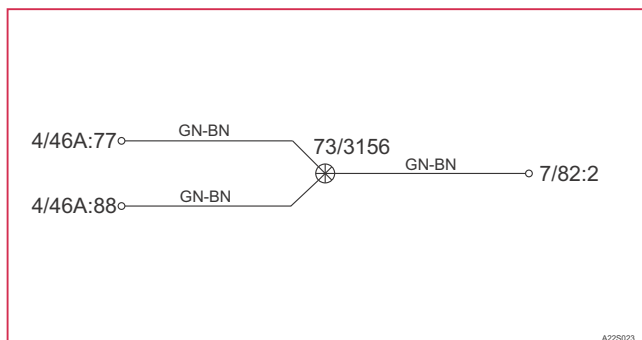


73/3163 4-Cyl. Diesel

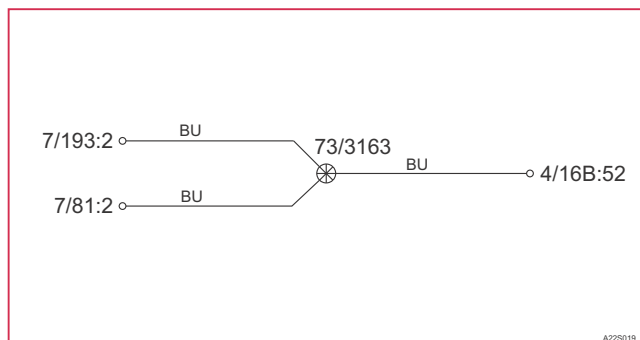


73/3156 5-Cyl. Turbo

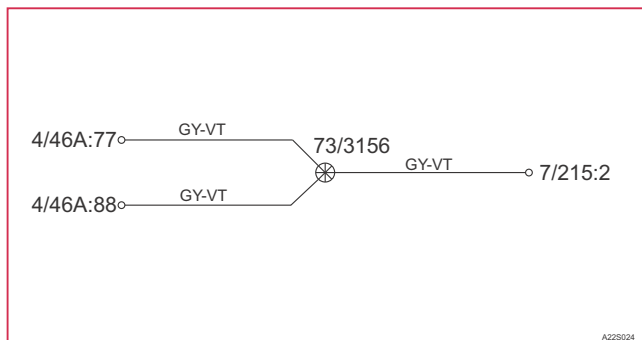


73/3164 4-Cyl. Diesel

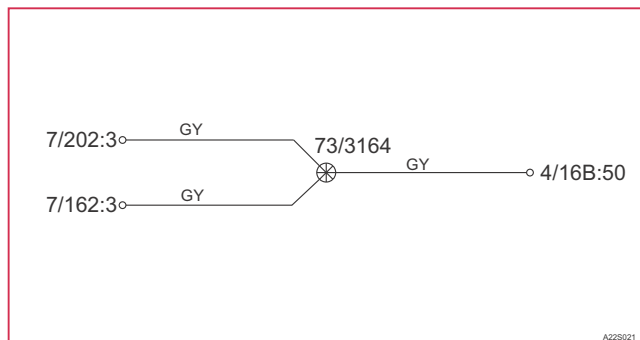

73/3157

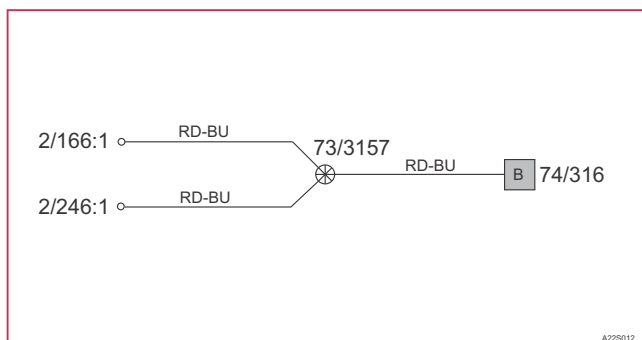


73/3165

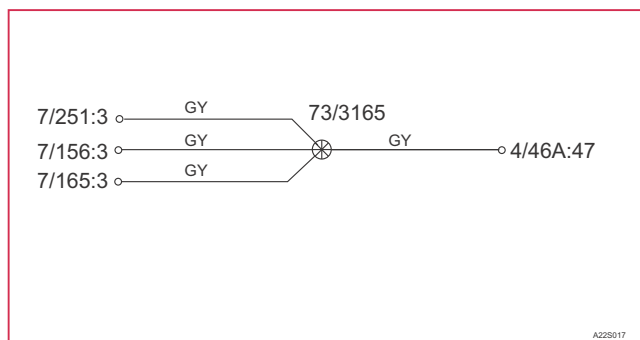


Branching points

73/3166 - 73/4014


73/3166

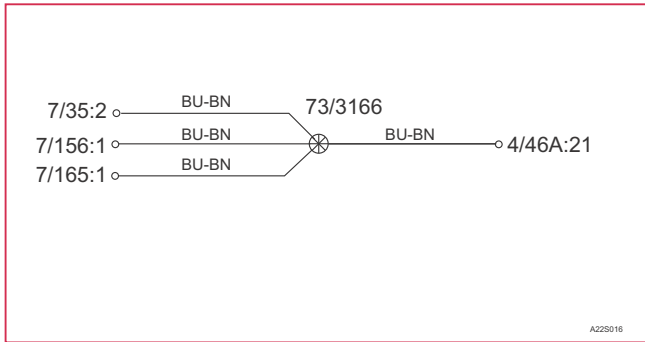


73/4006

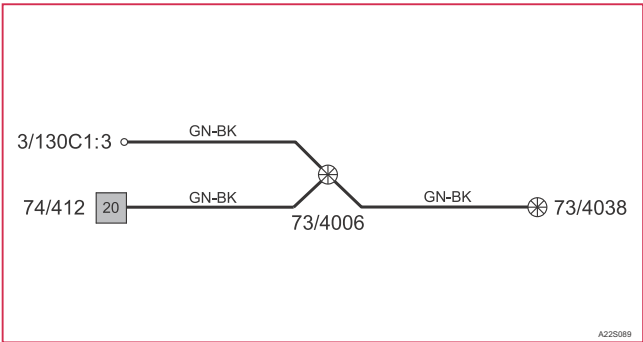


73/3172

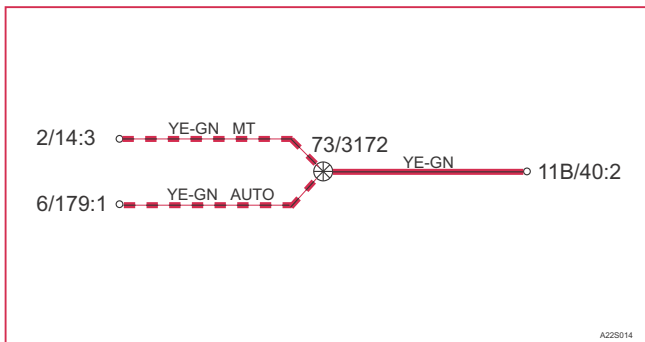


73/4010

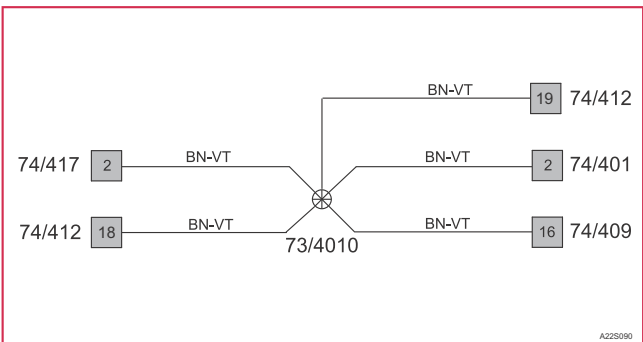


73/4001

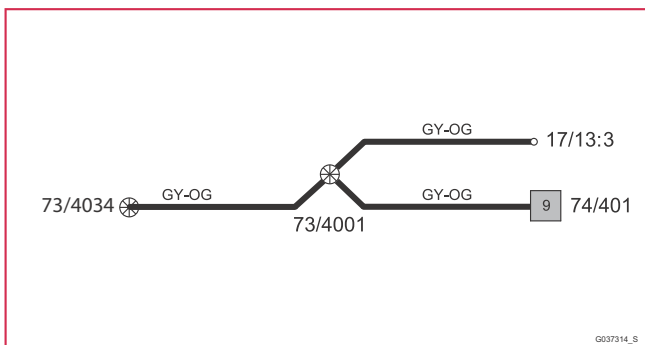


73/4012

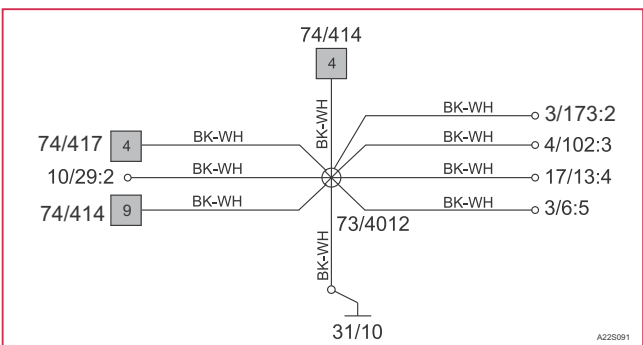


73/4002

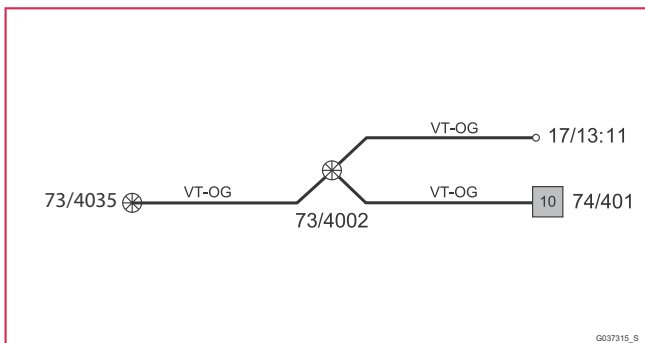


73/4013

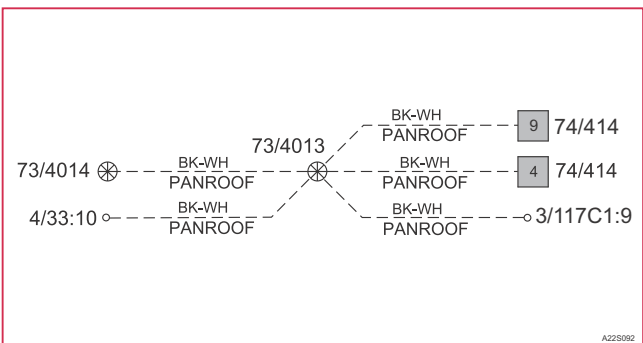

73/4005

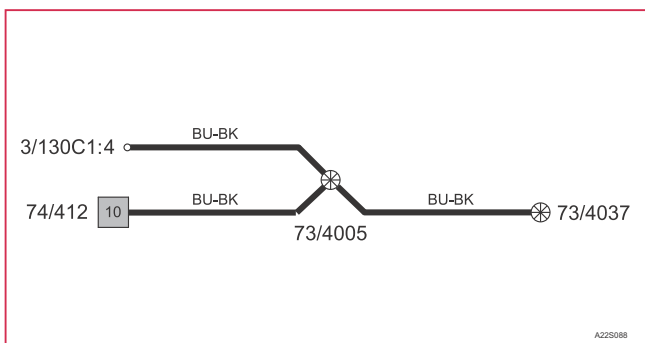


73/4014

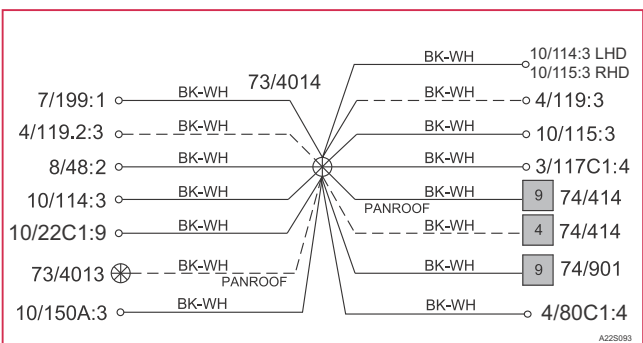


Branching points

73/4016 - 73/4033


73/4016 LHD

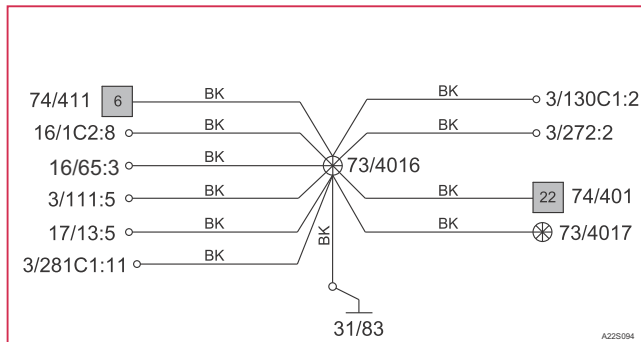


73/4020

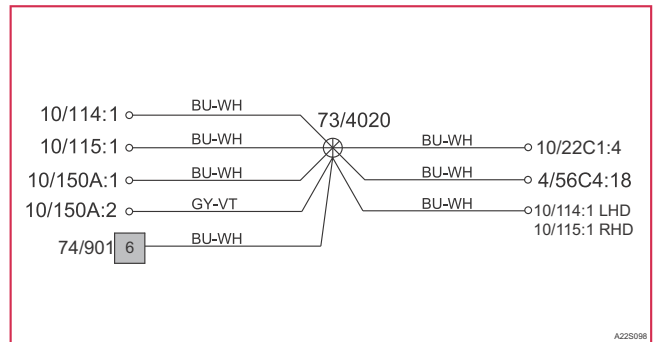


73/4016 RHD

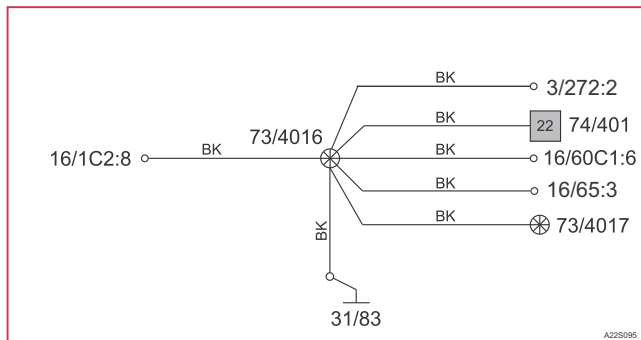


73/4028

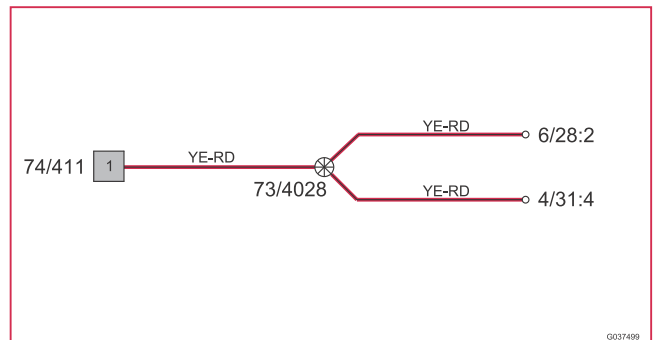


73/4017 LHD

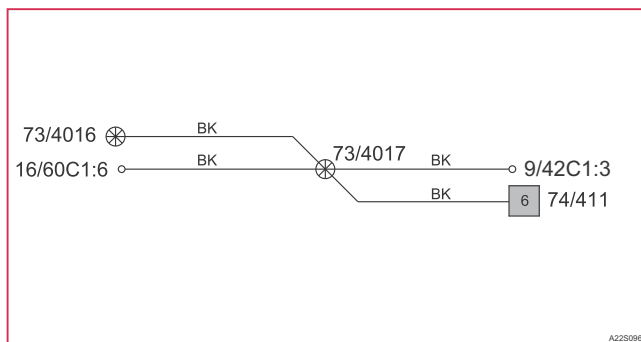


73/4029

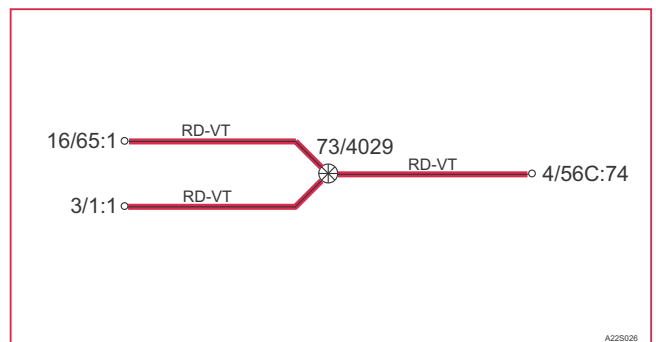


73/4017 RHD

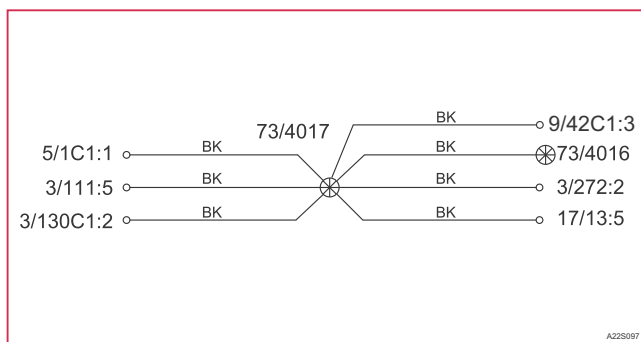


73/4031

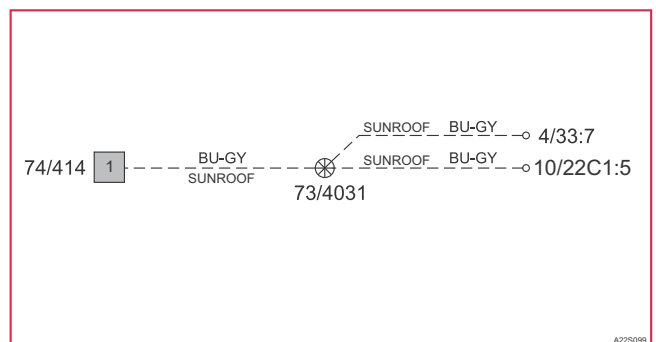

73/4019

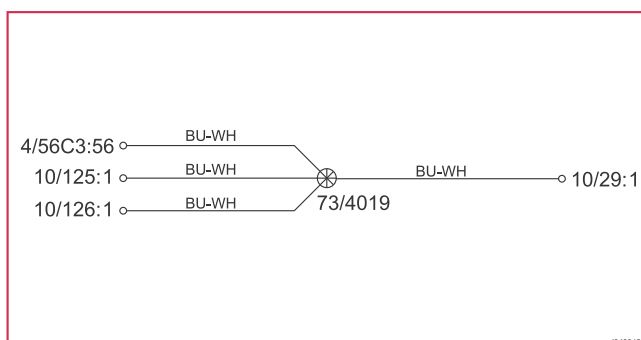


73/4033

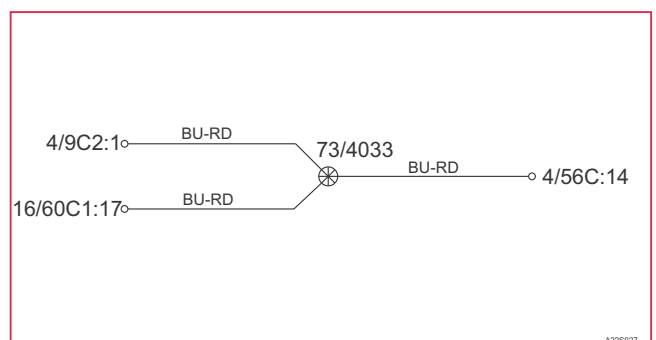


Branching points 73/4034 - 73/5001


73/4034

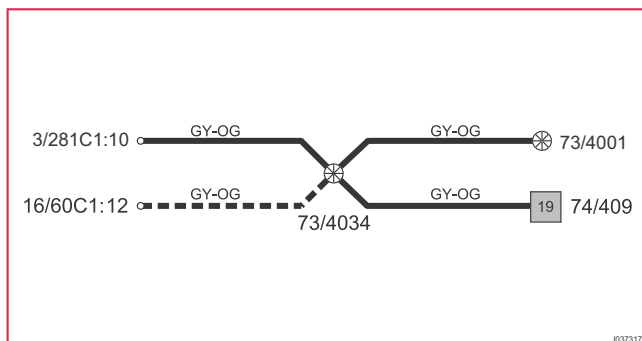


73/4047

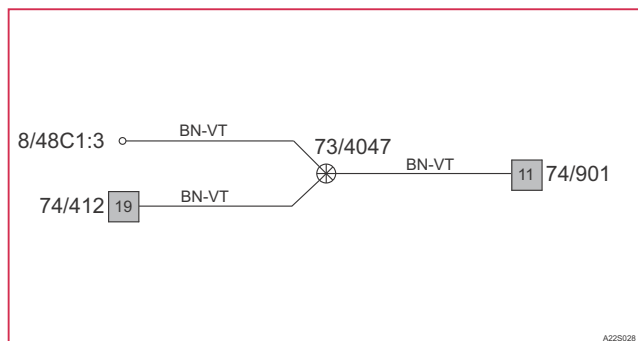


73/4035

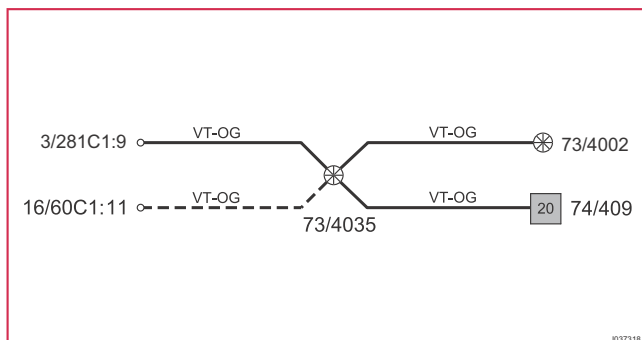


73/4048

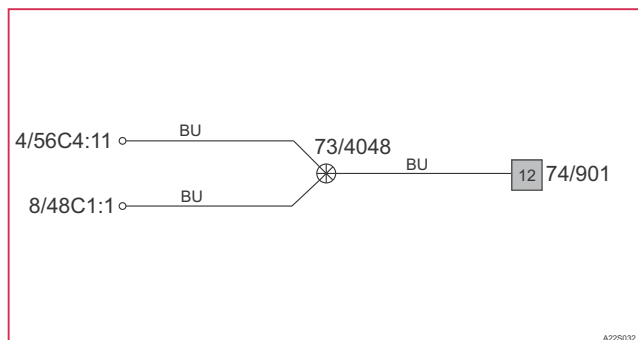


73/4037

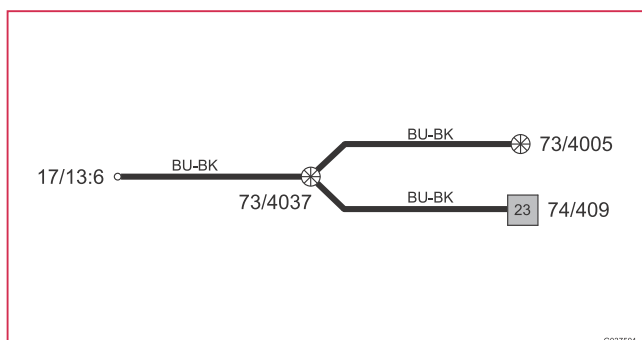


73/4049

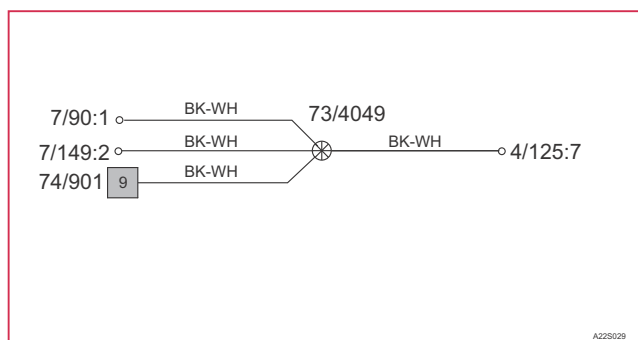


73/4038

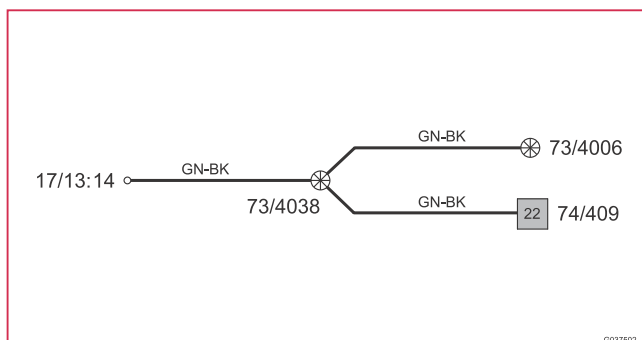


73/4059

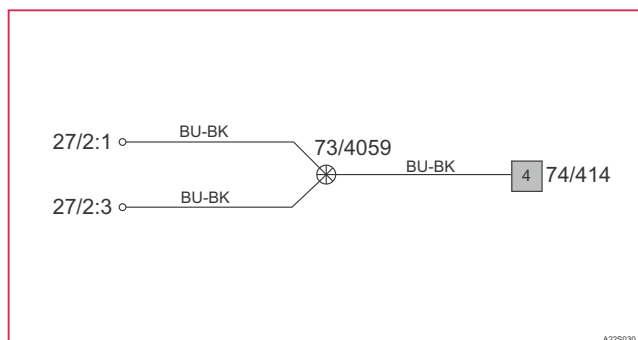

73/4046

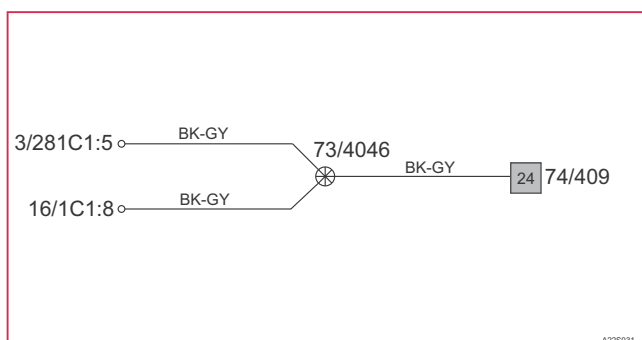


73/5001 LHD

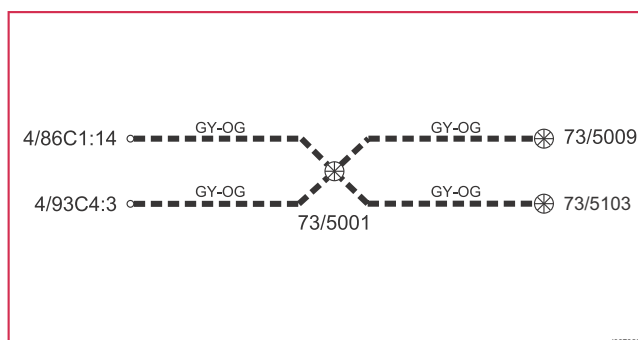


Branching points

73/5001 - 73/5006


73/5001 RHD

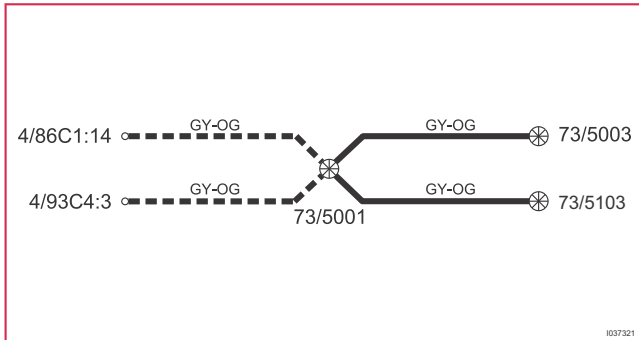


73/5004 LHD

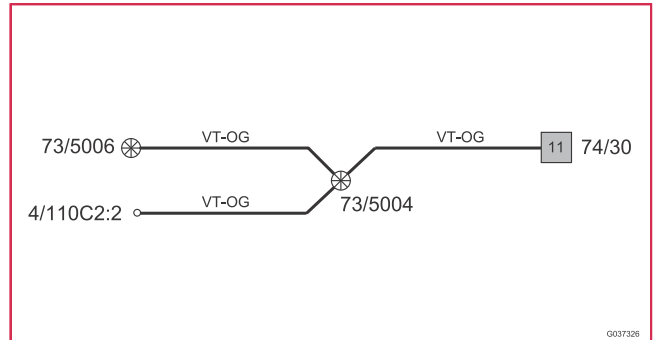


73/5002 LHD

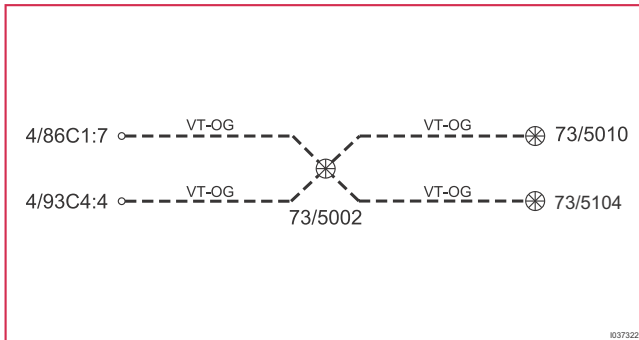


73/5004 RHD

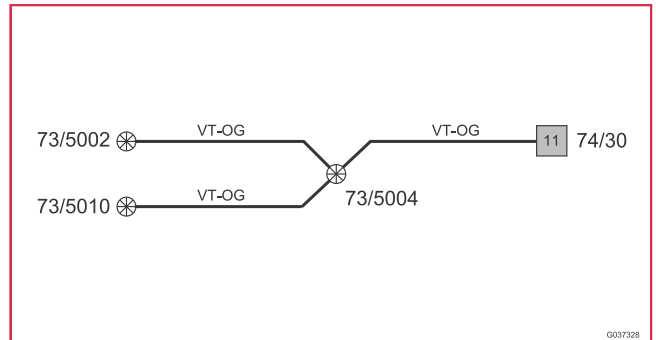


73/5002 RHD

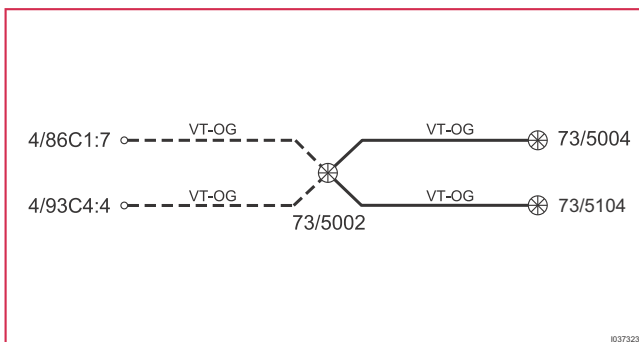


73/5005 LHD

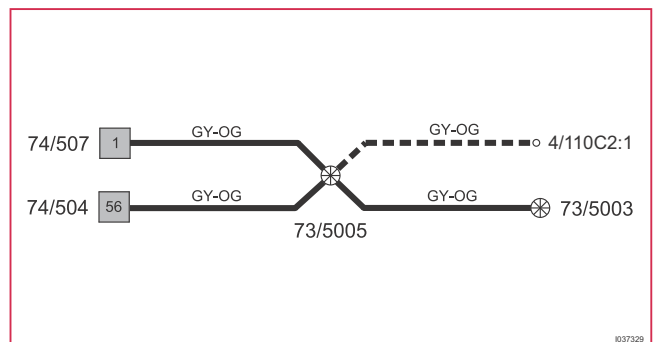


73/5003 LHD

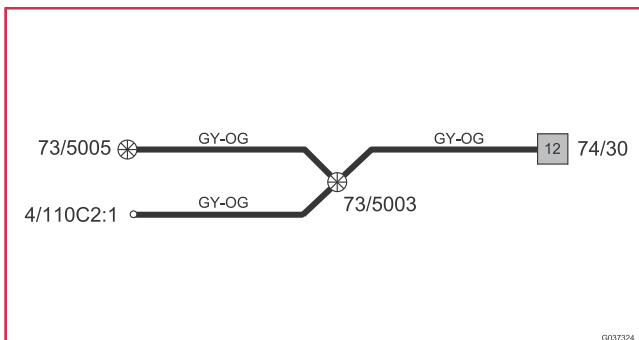


73/5005 RHD

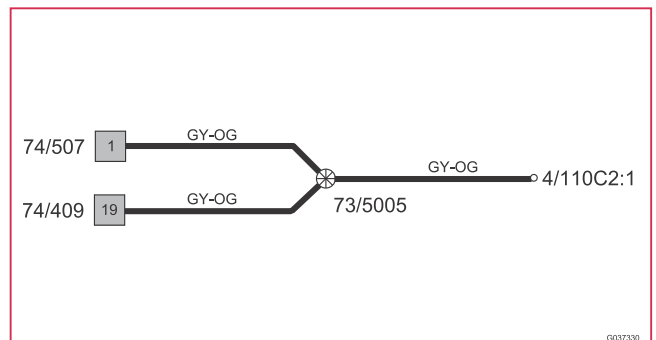

73/5003 RHD

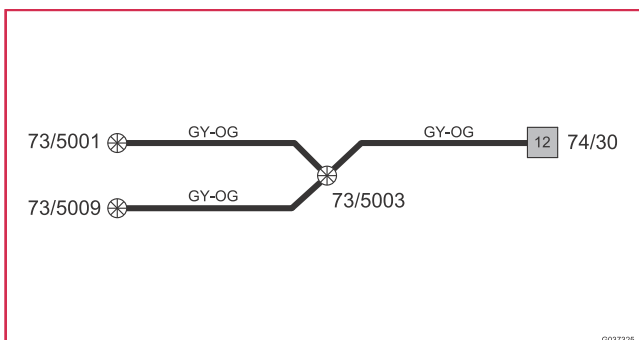


73/5006 LHD

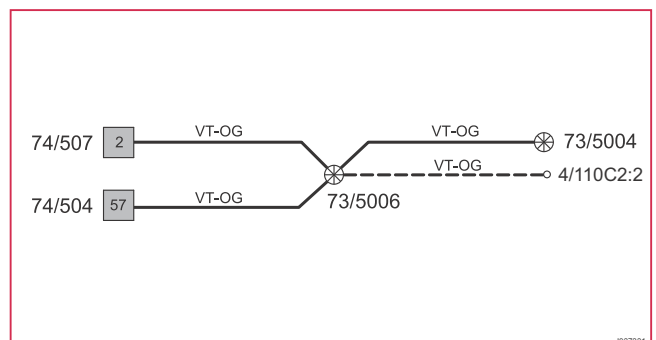


Branching points

73/5006 - 73/5019


73/5006 RHD

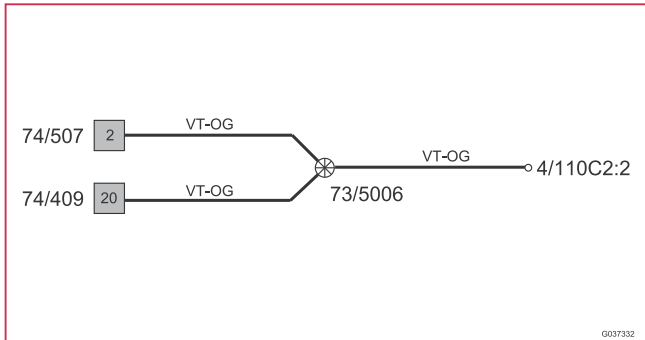


73/5011

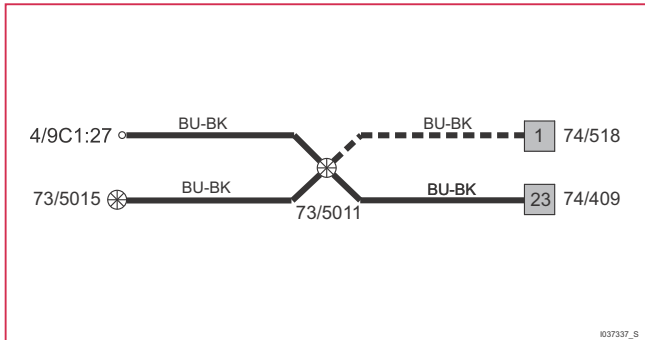


73/5009 LHD

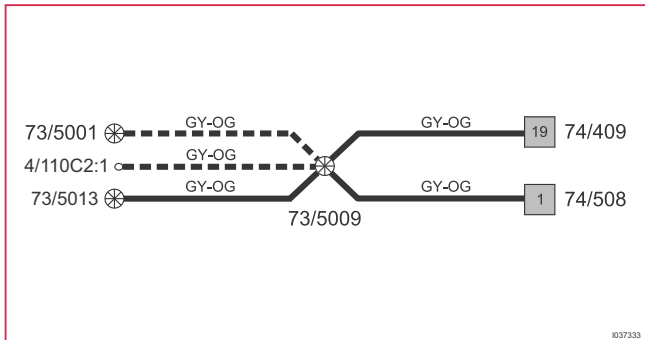


73/5012

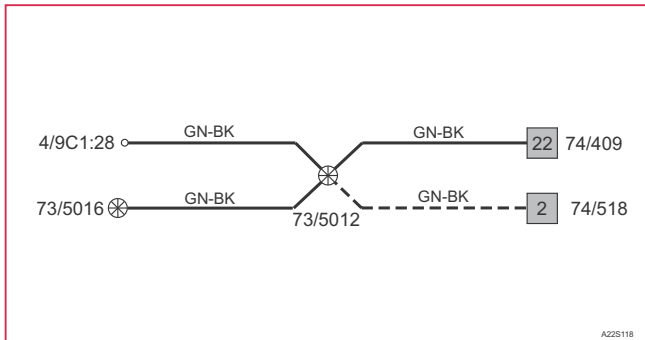


73/5009 RHD

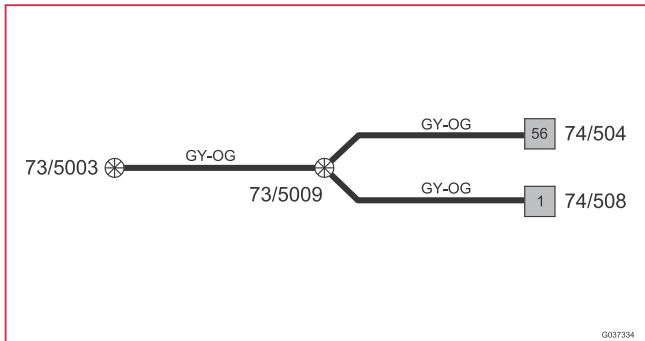


73/5015

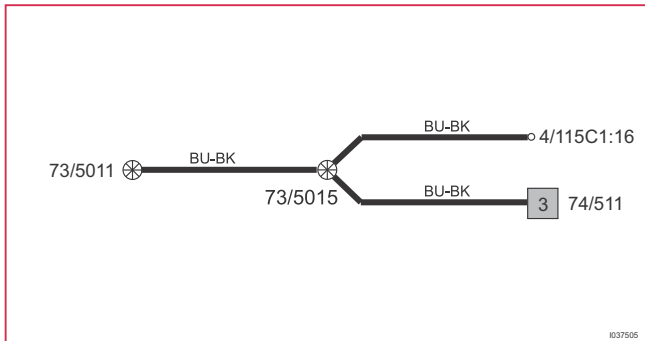


73/5010 LHD

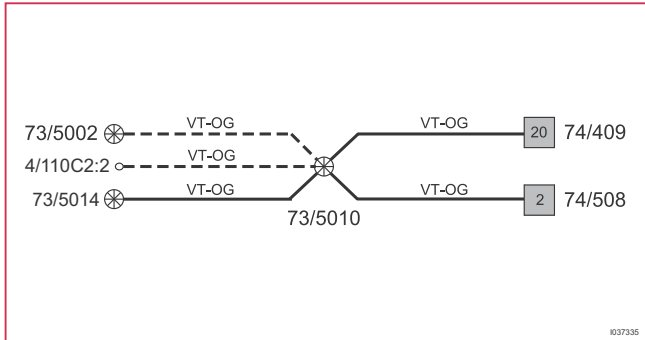


73/5016

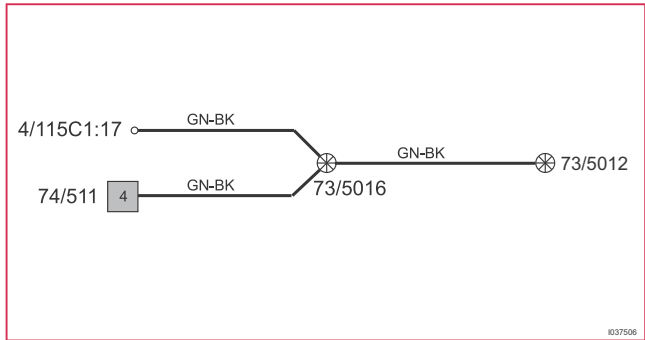

73/5010 RHD

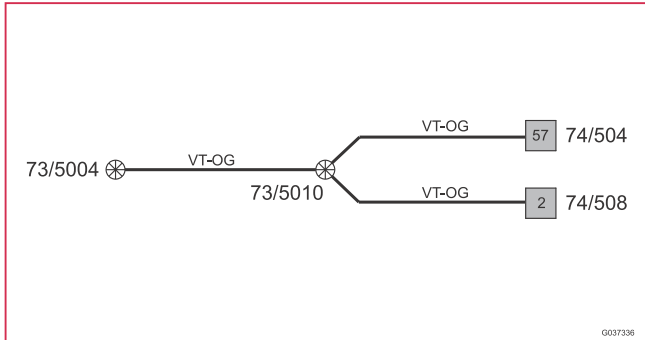


73/5019

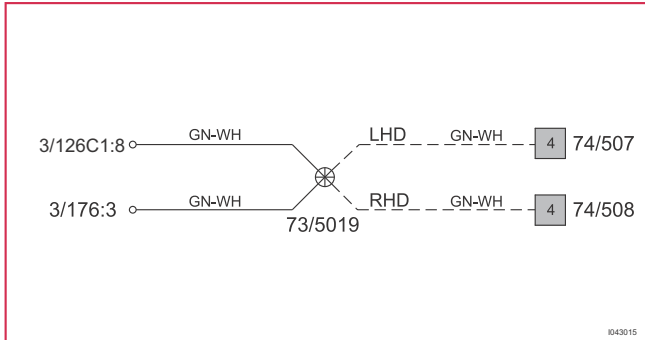


Branching points

73/5021 - 73/5035


73/5021

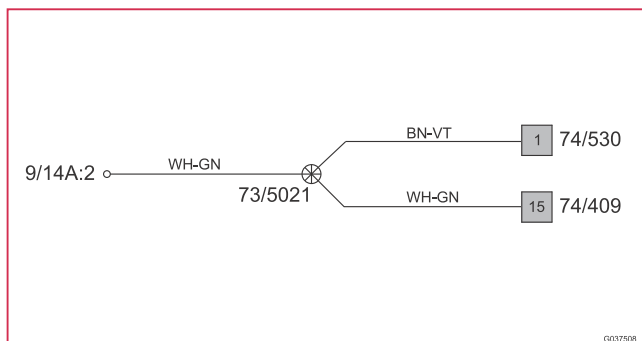


73/5029

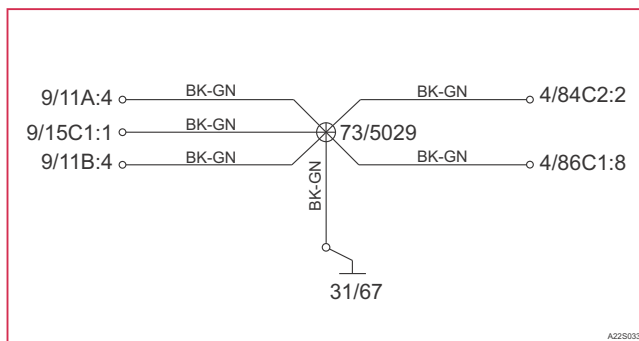


73/5023

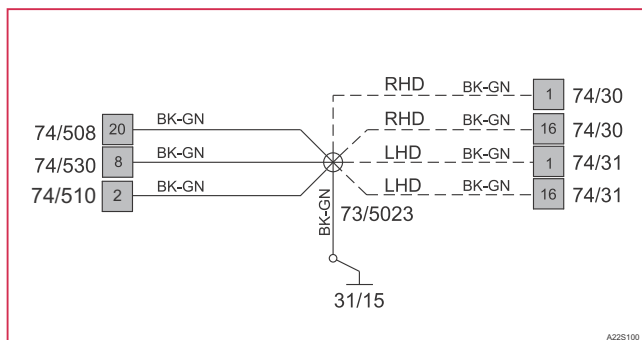


73/5030

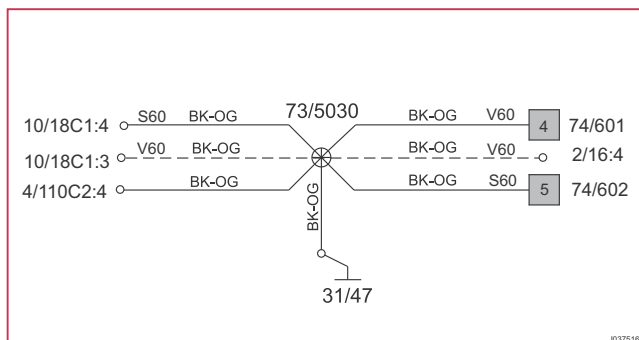


73/5025

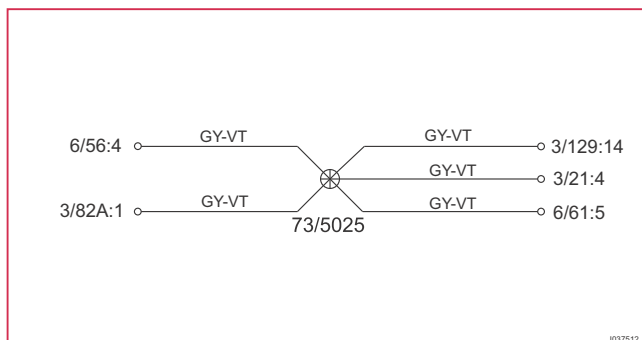


73/5032

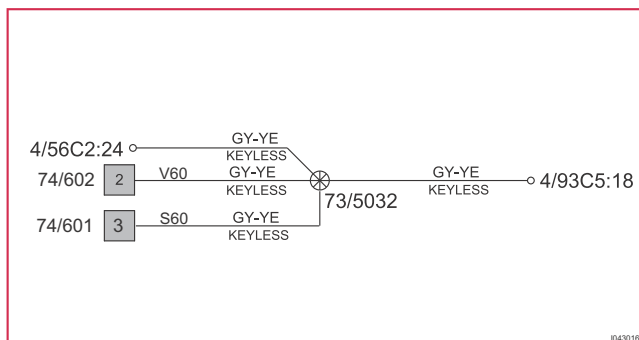


73/5026

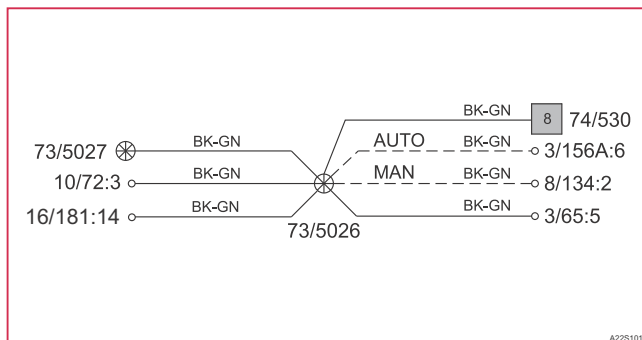


73/5033

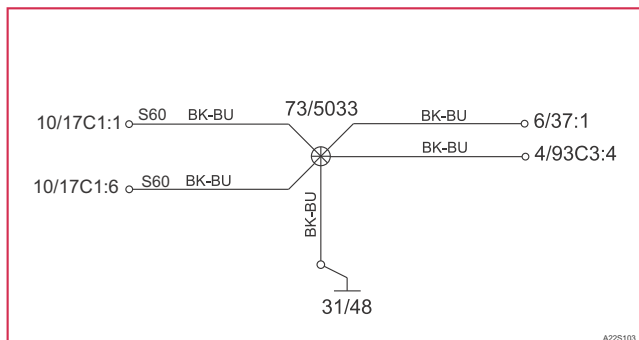

73/5027

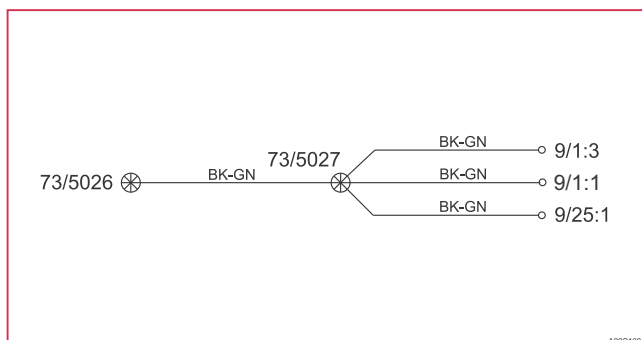


73/5035

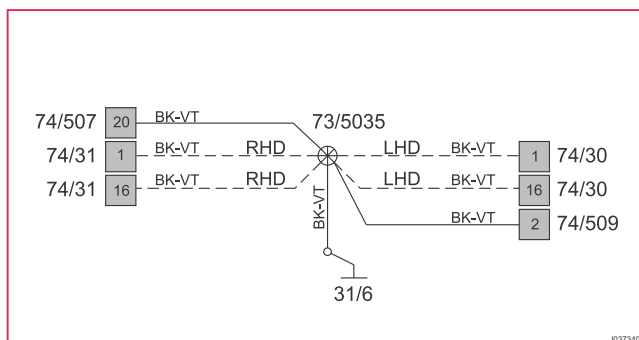


Branching points

73/5036 - 73/5062


73/5036

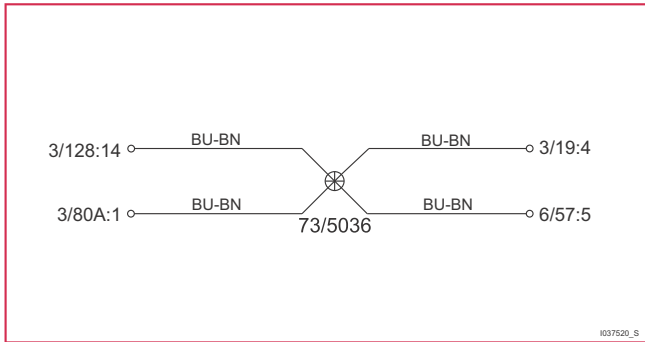


73/5052

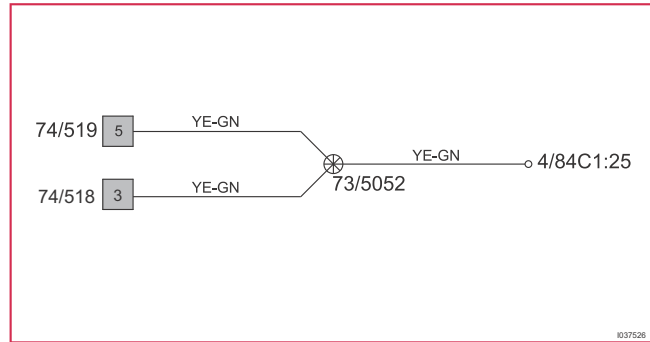


73/5042

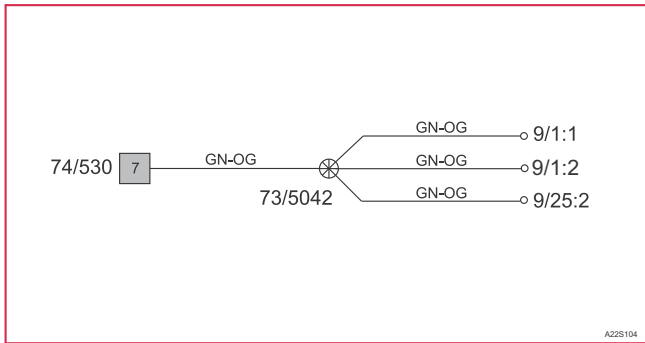


73/5053

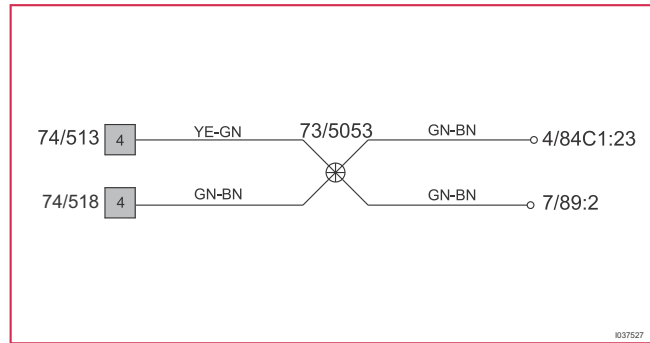


73/5044

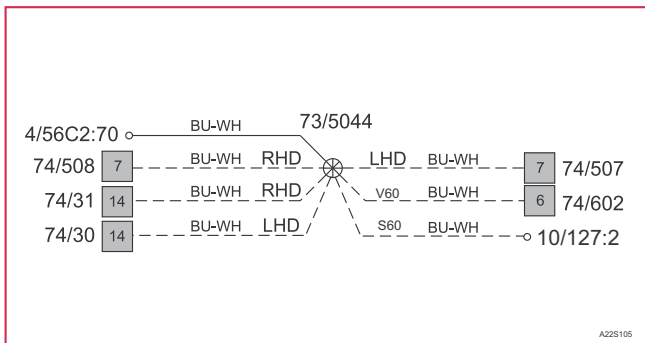


73/5054

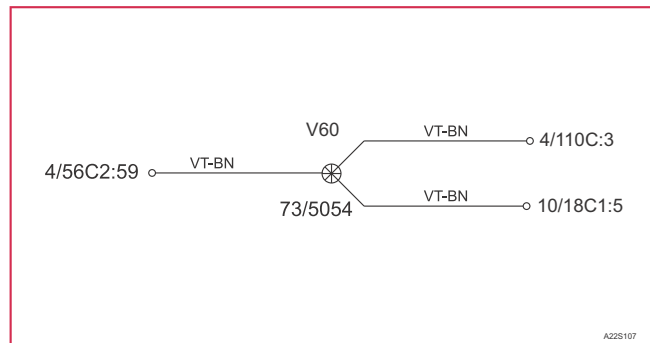


73/5050 V60

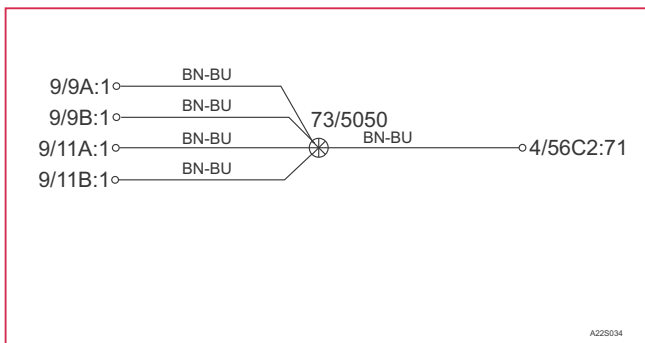


73/5061

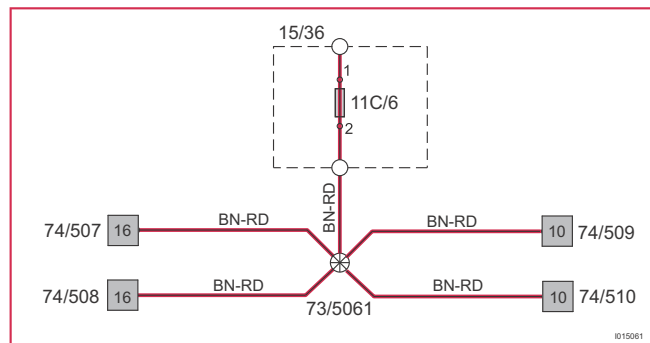

73/5051

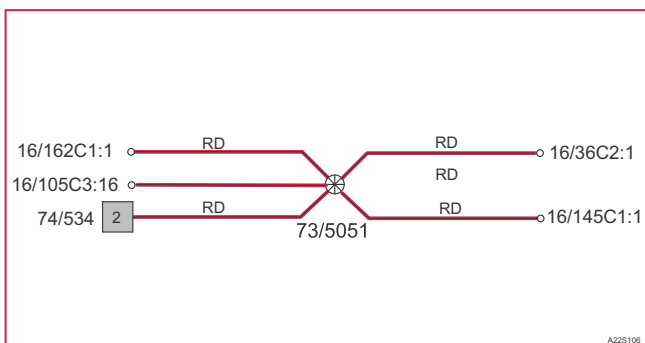


73/5062

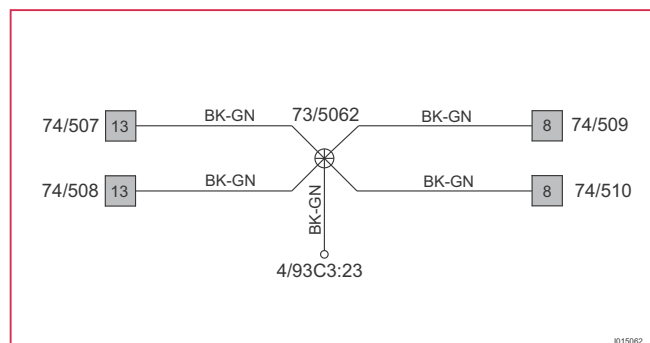


Branching points

73/5064 - 73/5078


73/5064

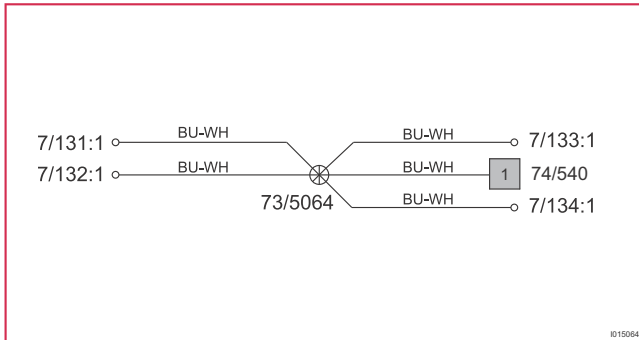


73/5072 RHD

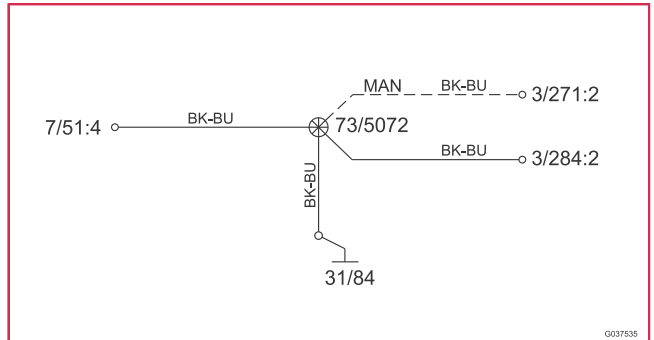


73/5066

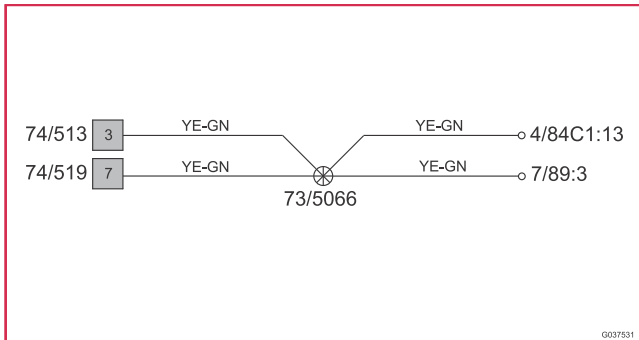


73/5075

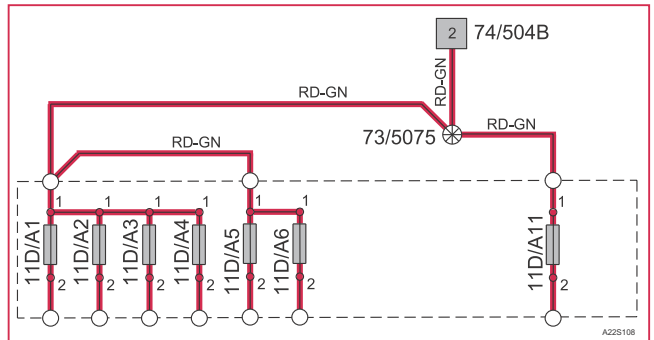


73/5067

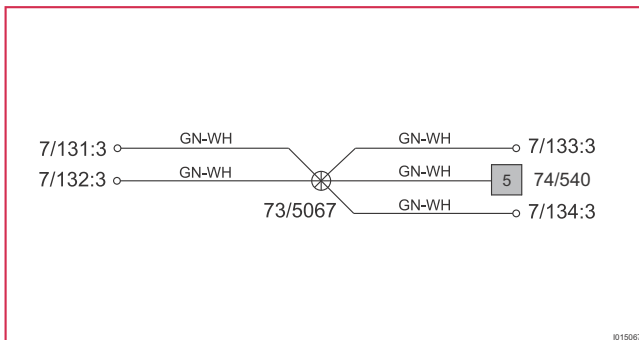


73/5076

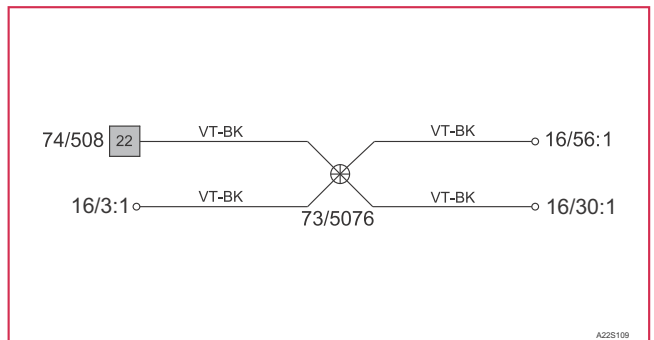


73/5070

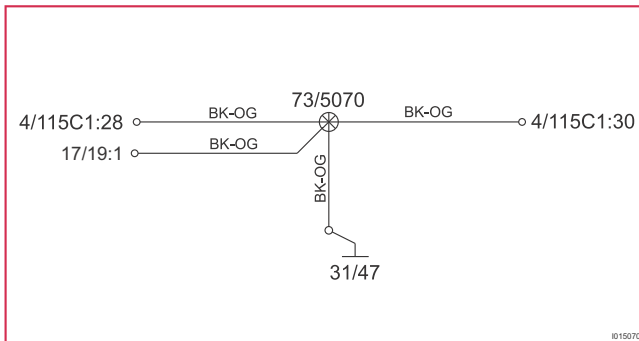


73/5077

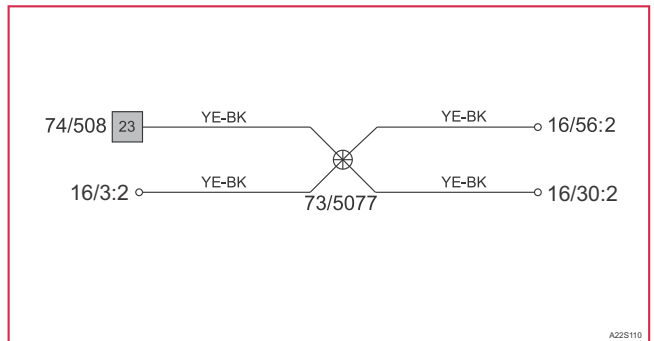

73/5071 LHD

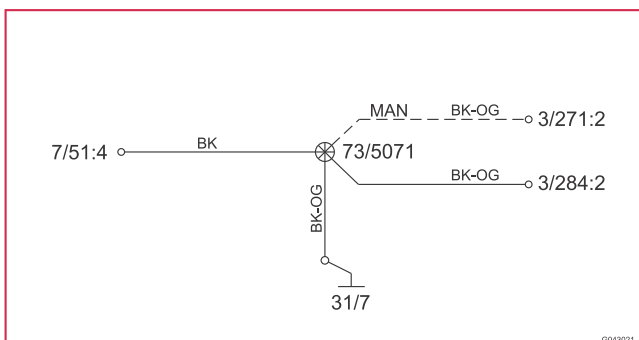


73/5078

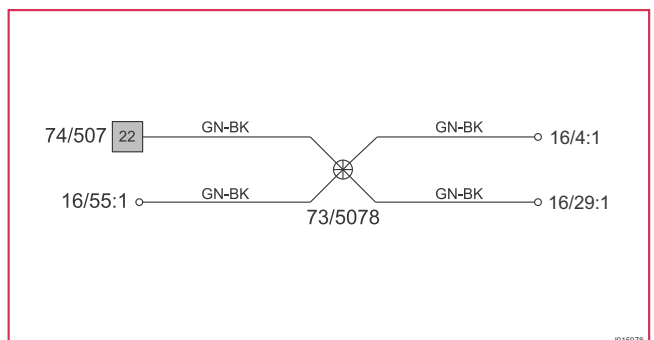


Branching points
73/5079 - 73/5113


73/5079

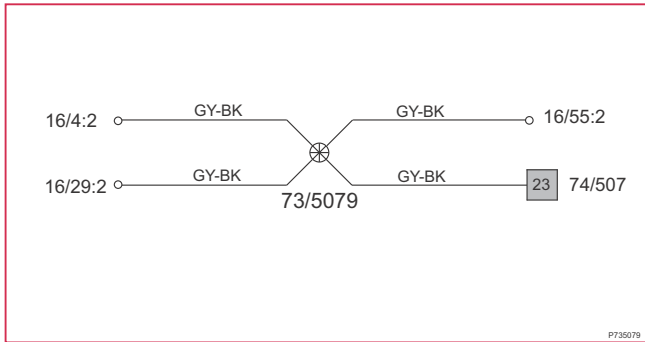


73/5098

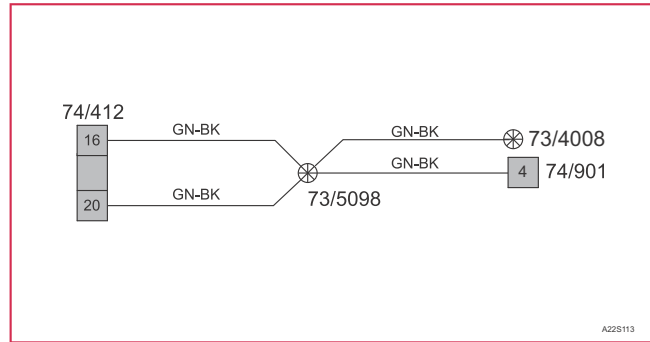


73/5083

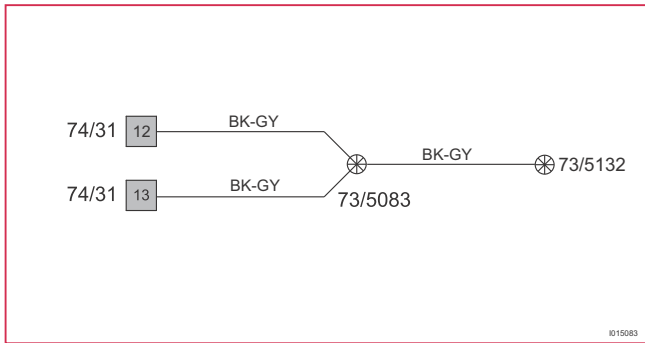


73/5103

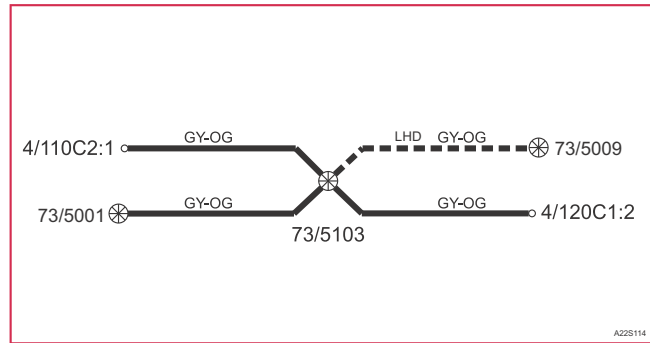


73/5091

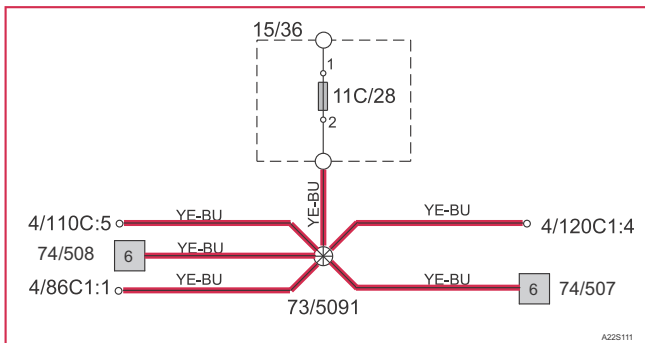


73/5104

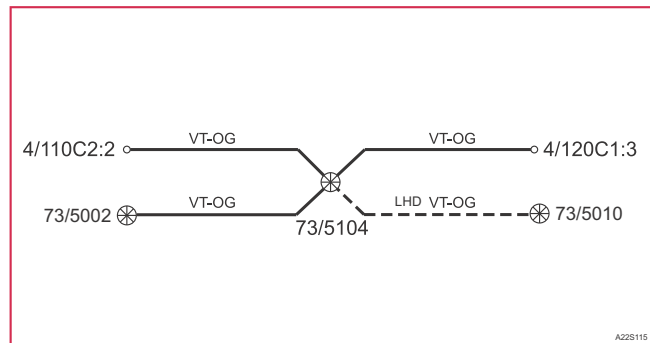


73/5096 S60

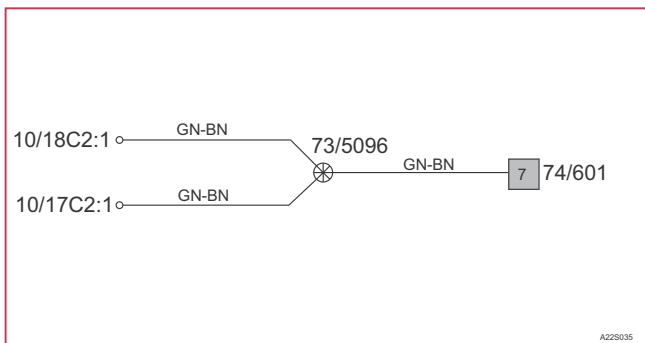


73/5112

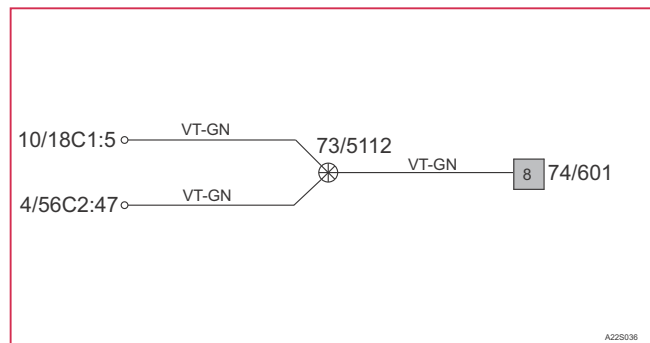

73/5097

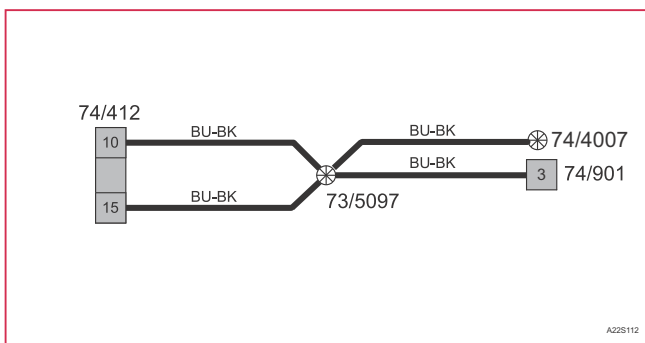


73/5113

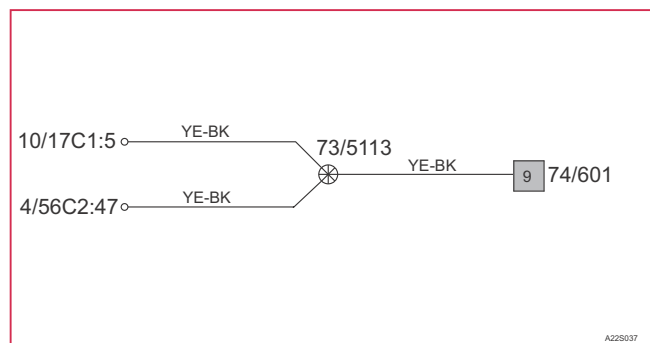


Branching points 73/5114 - 73/5129


73/5114

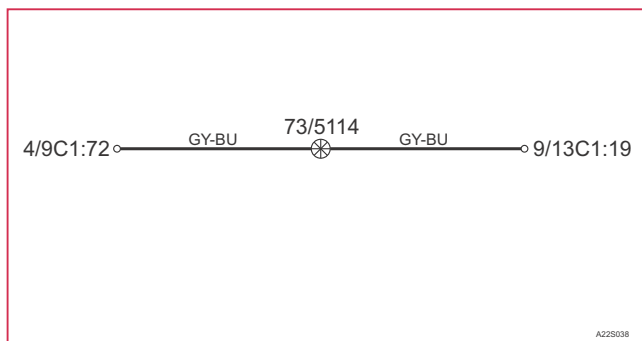


73/5120

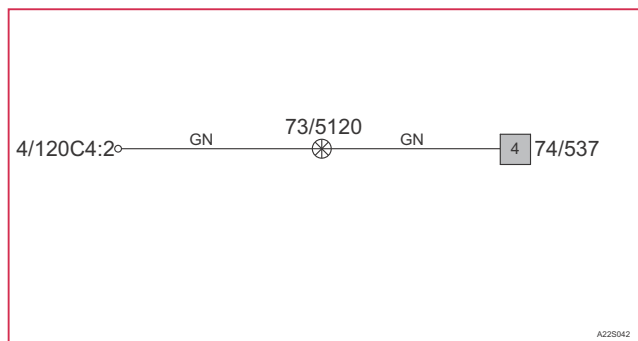


73/5115

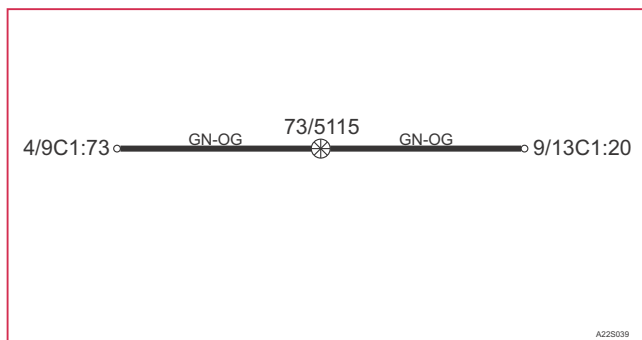


73/5121

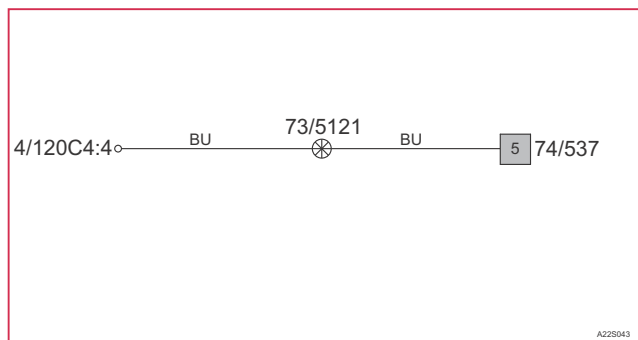


73/5117

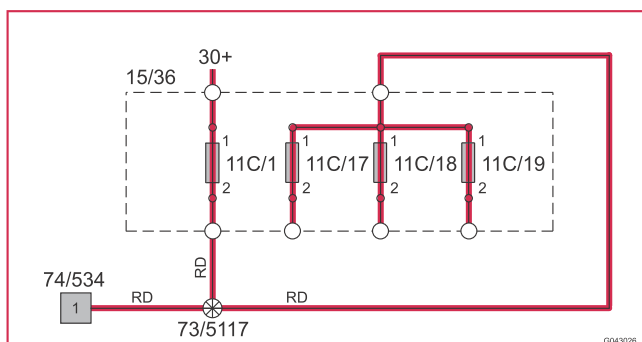


73/5123

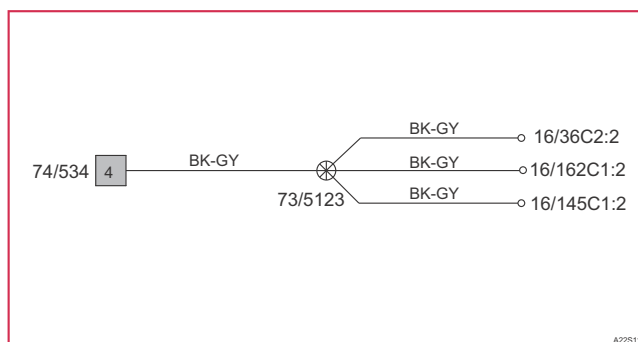


73/5118

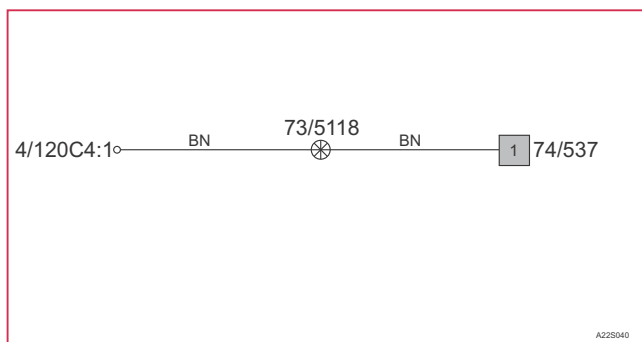


73/5128

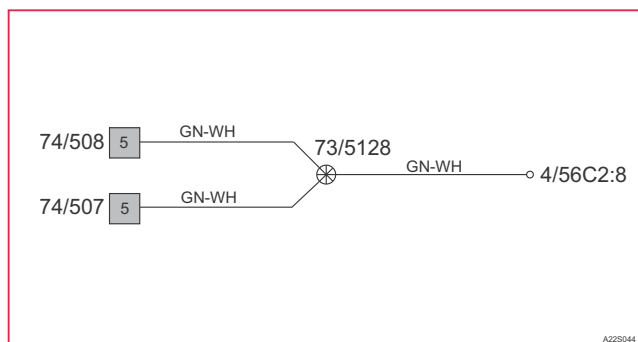

73/5119

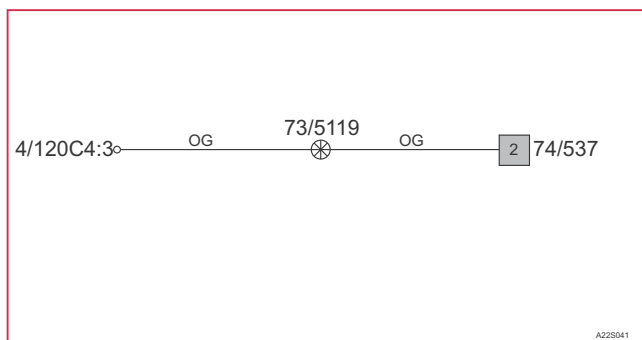


73/5129

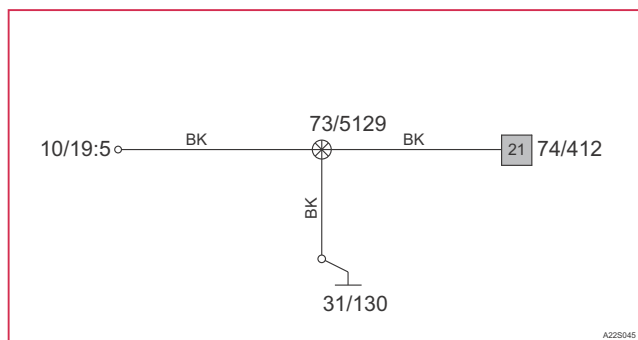


Branching points

73/5131 - 73/6001


73/5131

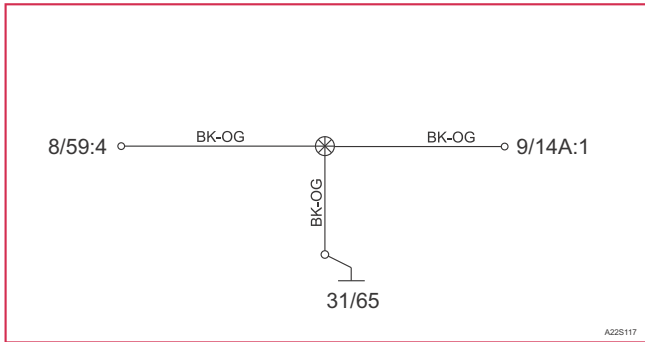


73/5136 V60

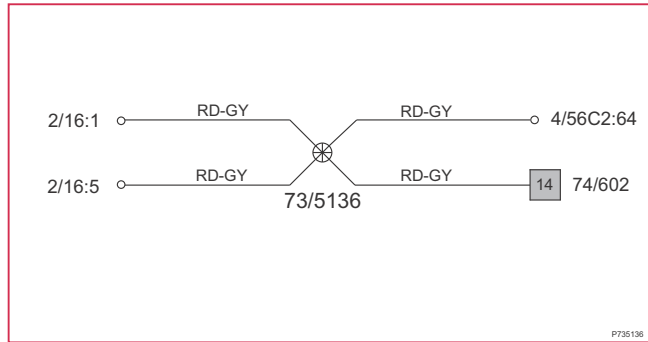


73/5132

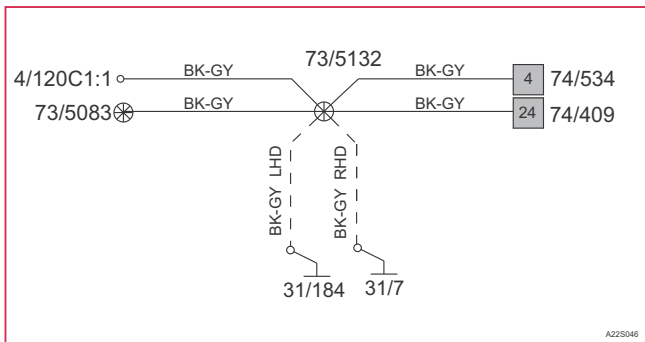


73/5189

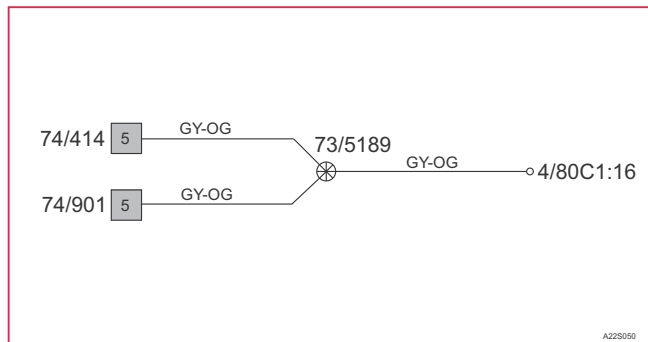


73/5133

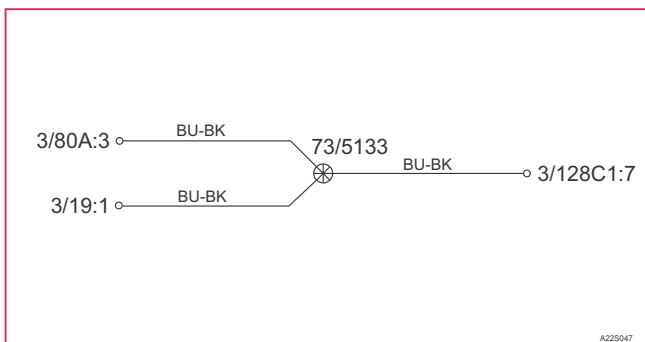


73/6001 S60

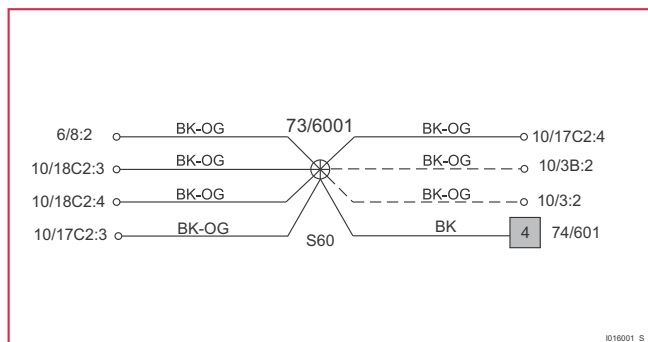


73/5134

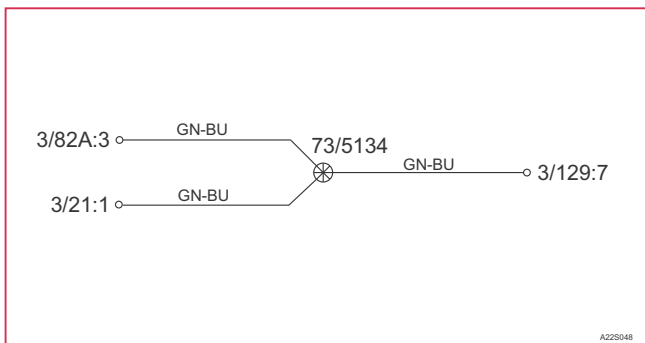

73/6001 V60

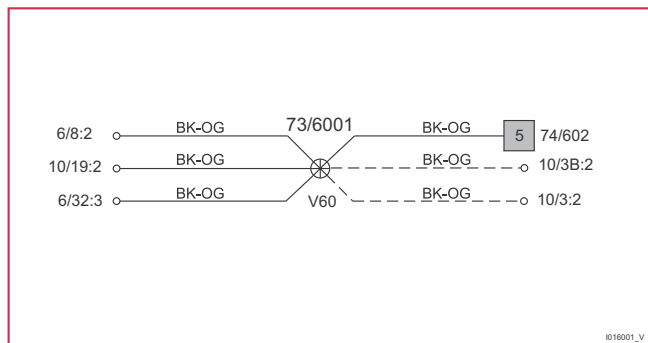

73/5135

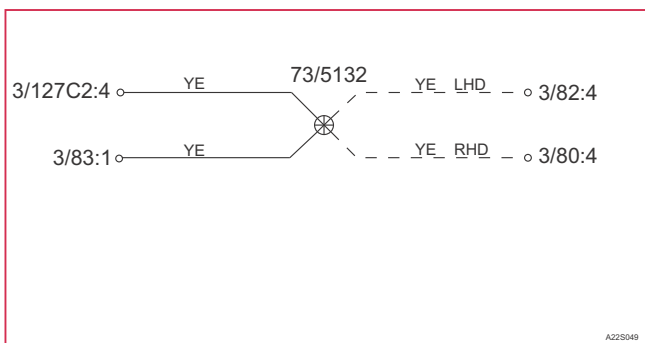


Cable harness routing in vehicle **Harness engine 4-Cyl. Turbo**




105127

Cable harness routing in vehicle **Harness engine, 6-Cyl. Turbo**

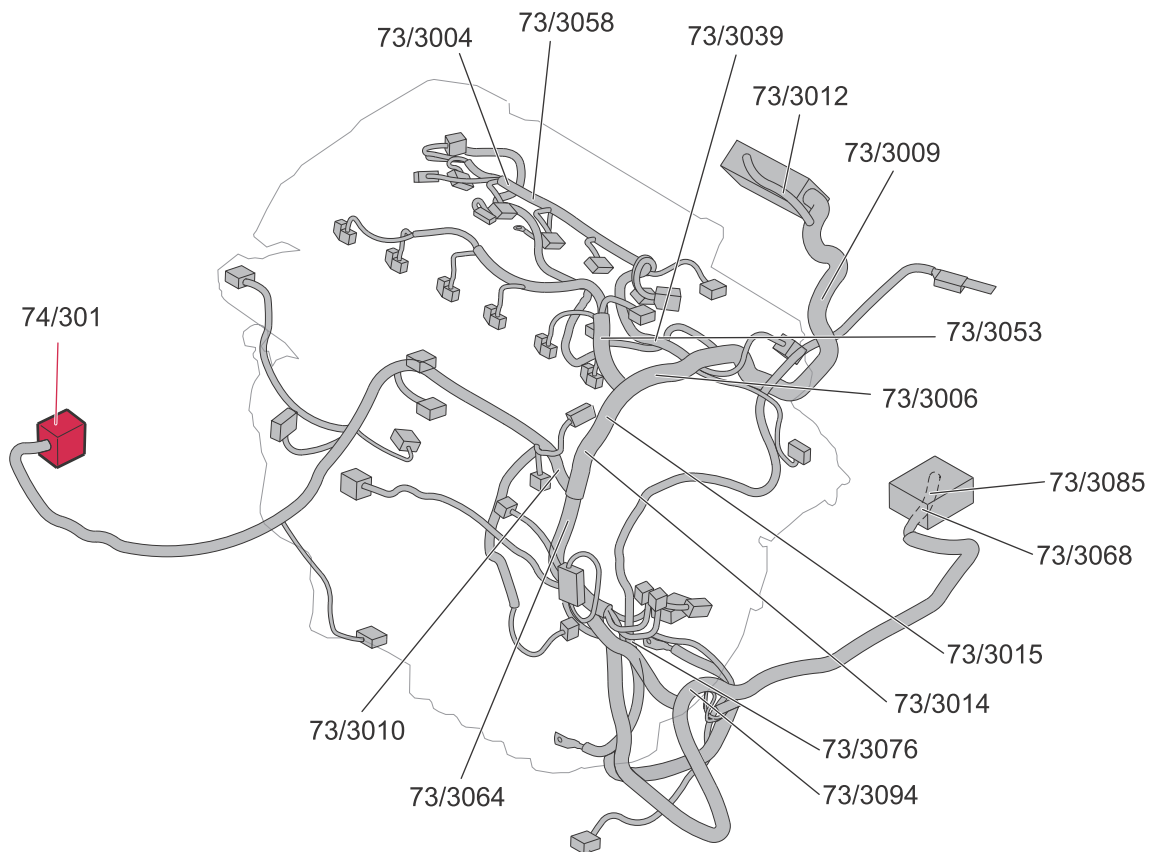


101402_T

Cable harness routing in vehicle
Harness engine, 2.0L Diesel

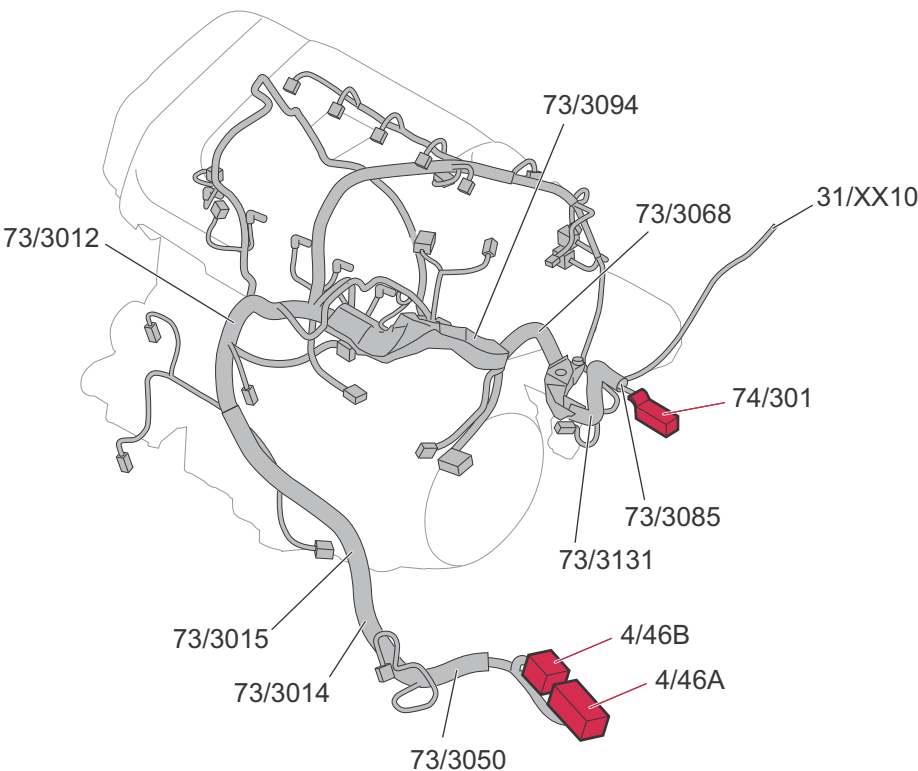


105209

Cable harness routing in vehicle
Harness engine, 2.4L Diesel

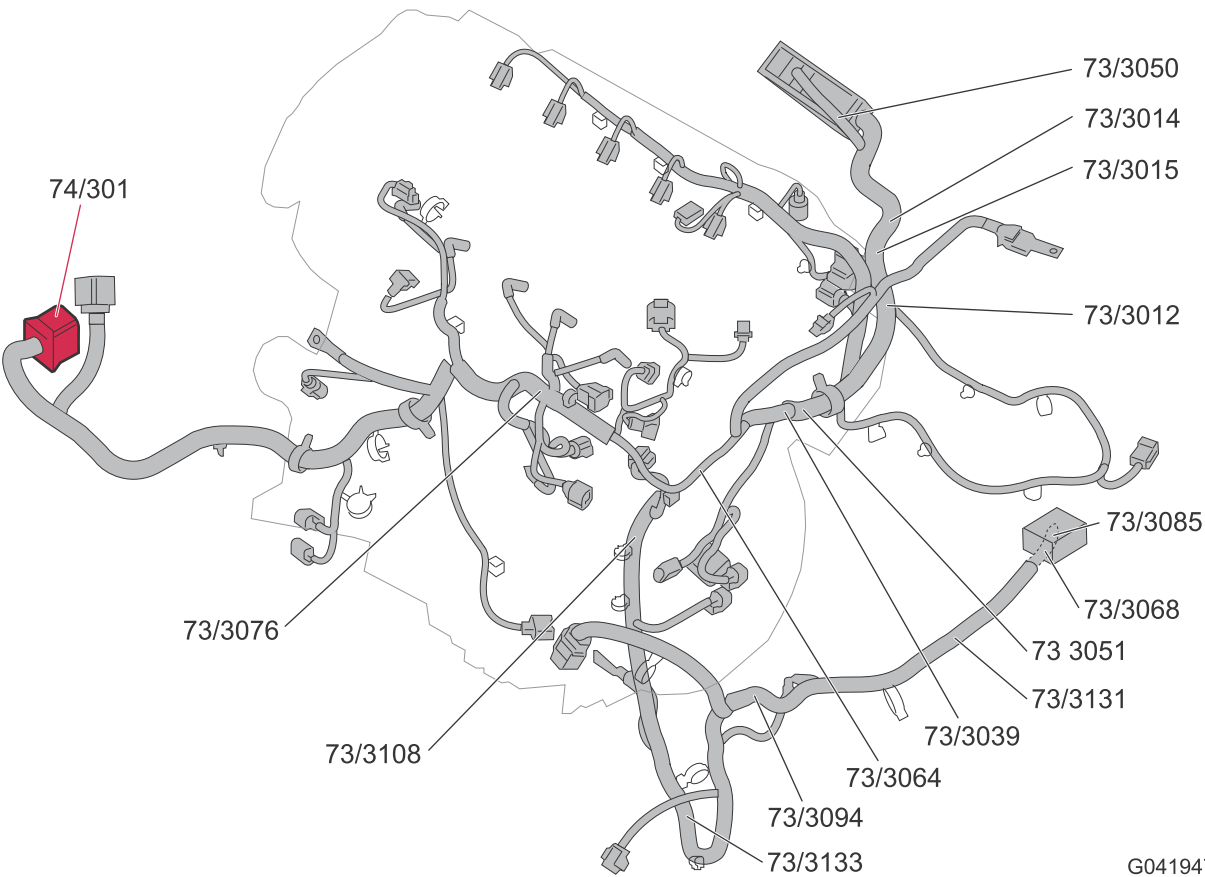


G041947

Cable harness routing in vehicle Engine compartment harness LHD

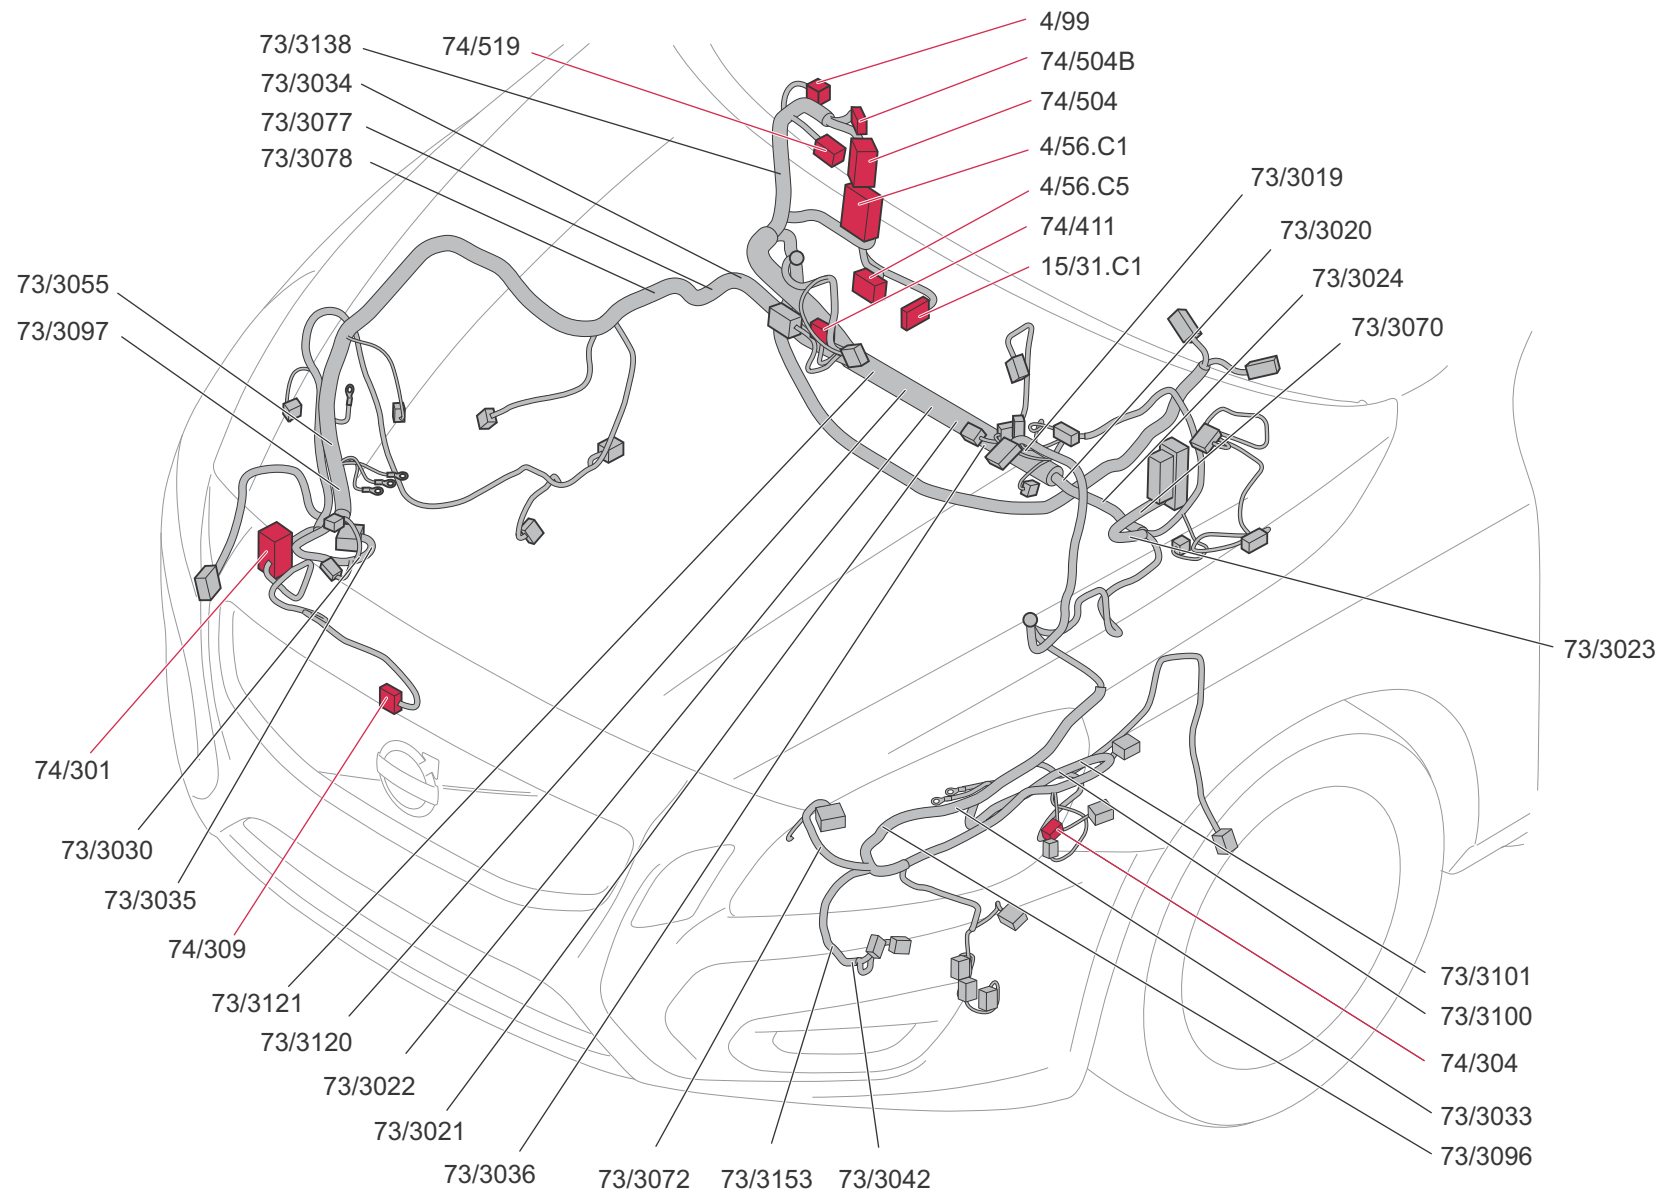


I01405

Cable harness routing in vehicle Engine compartment harness RHD

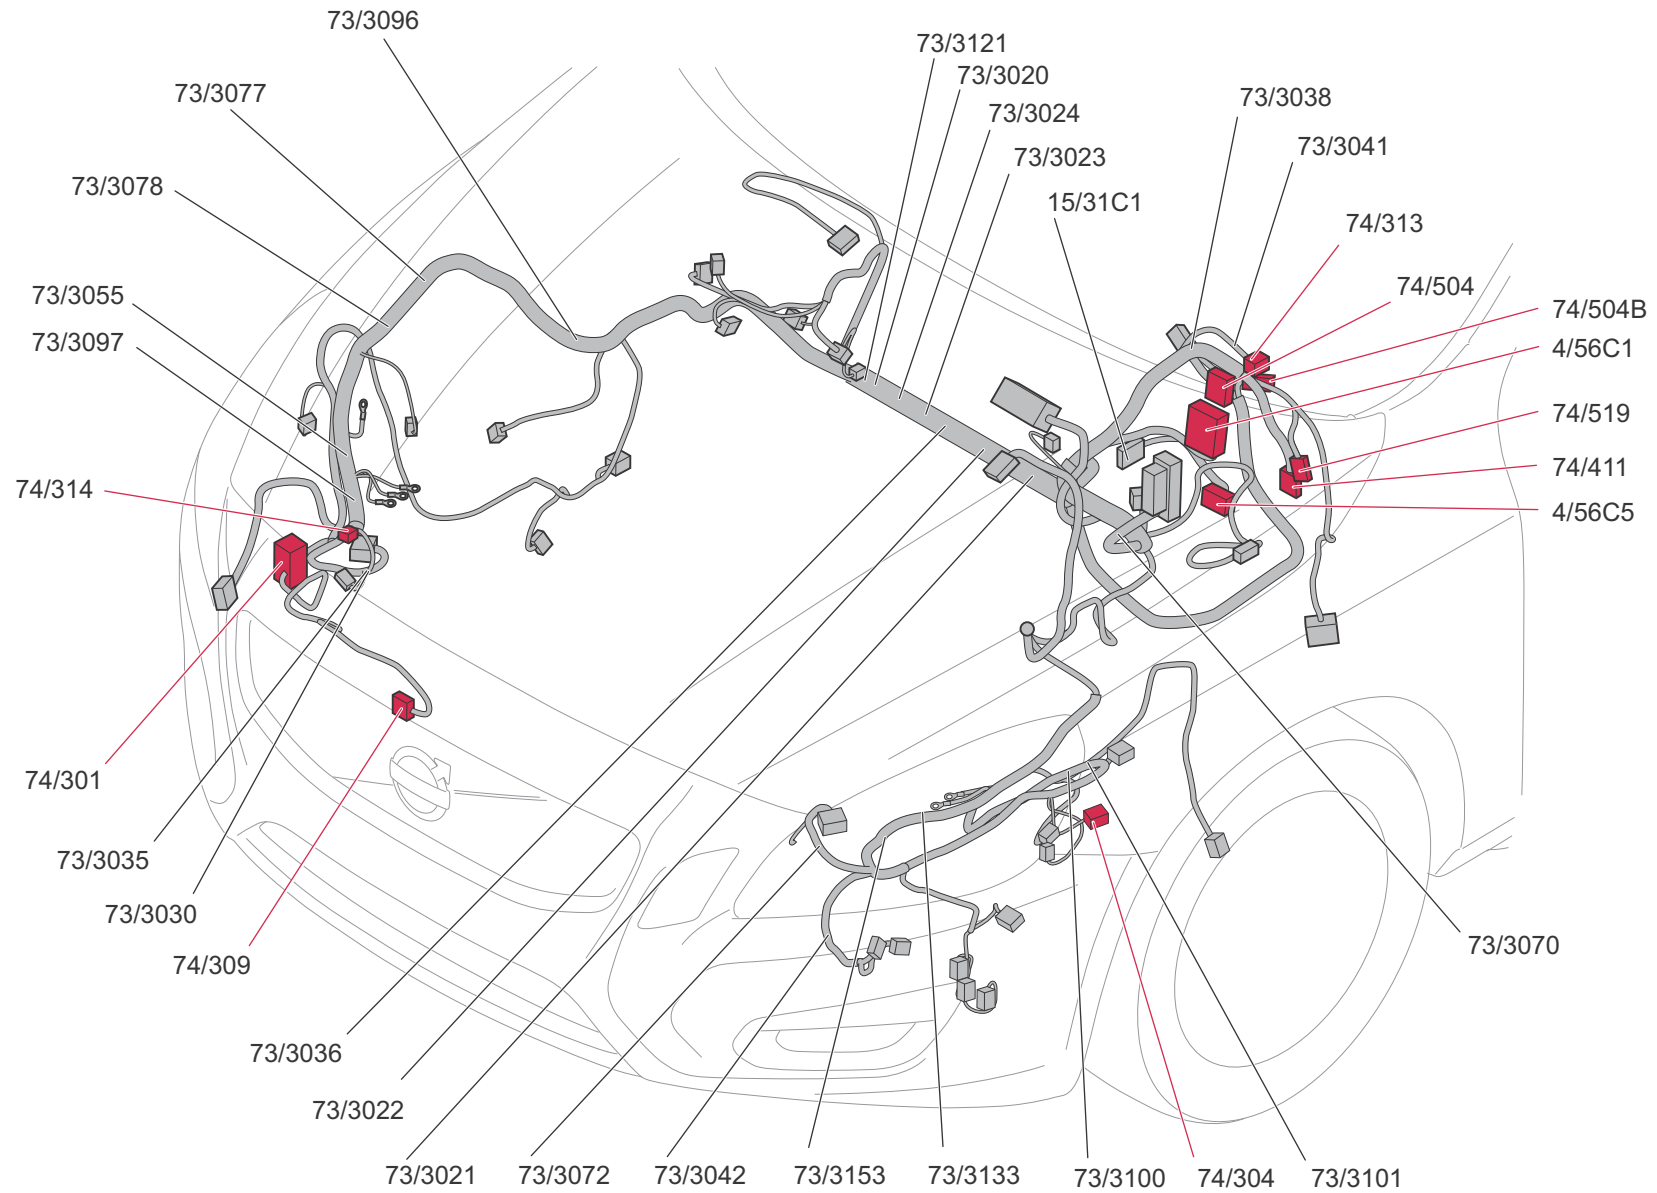


I01426

Cable harness routing in vehicle Harness dashboard, LHD

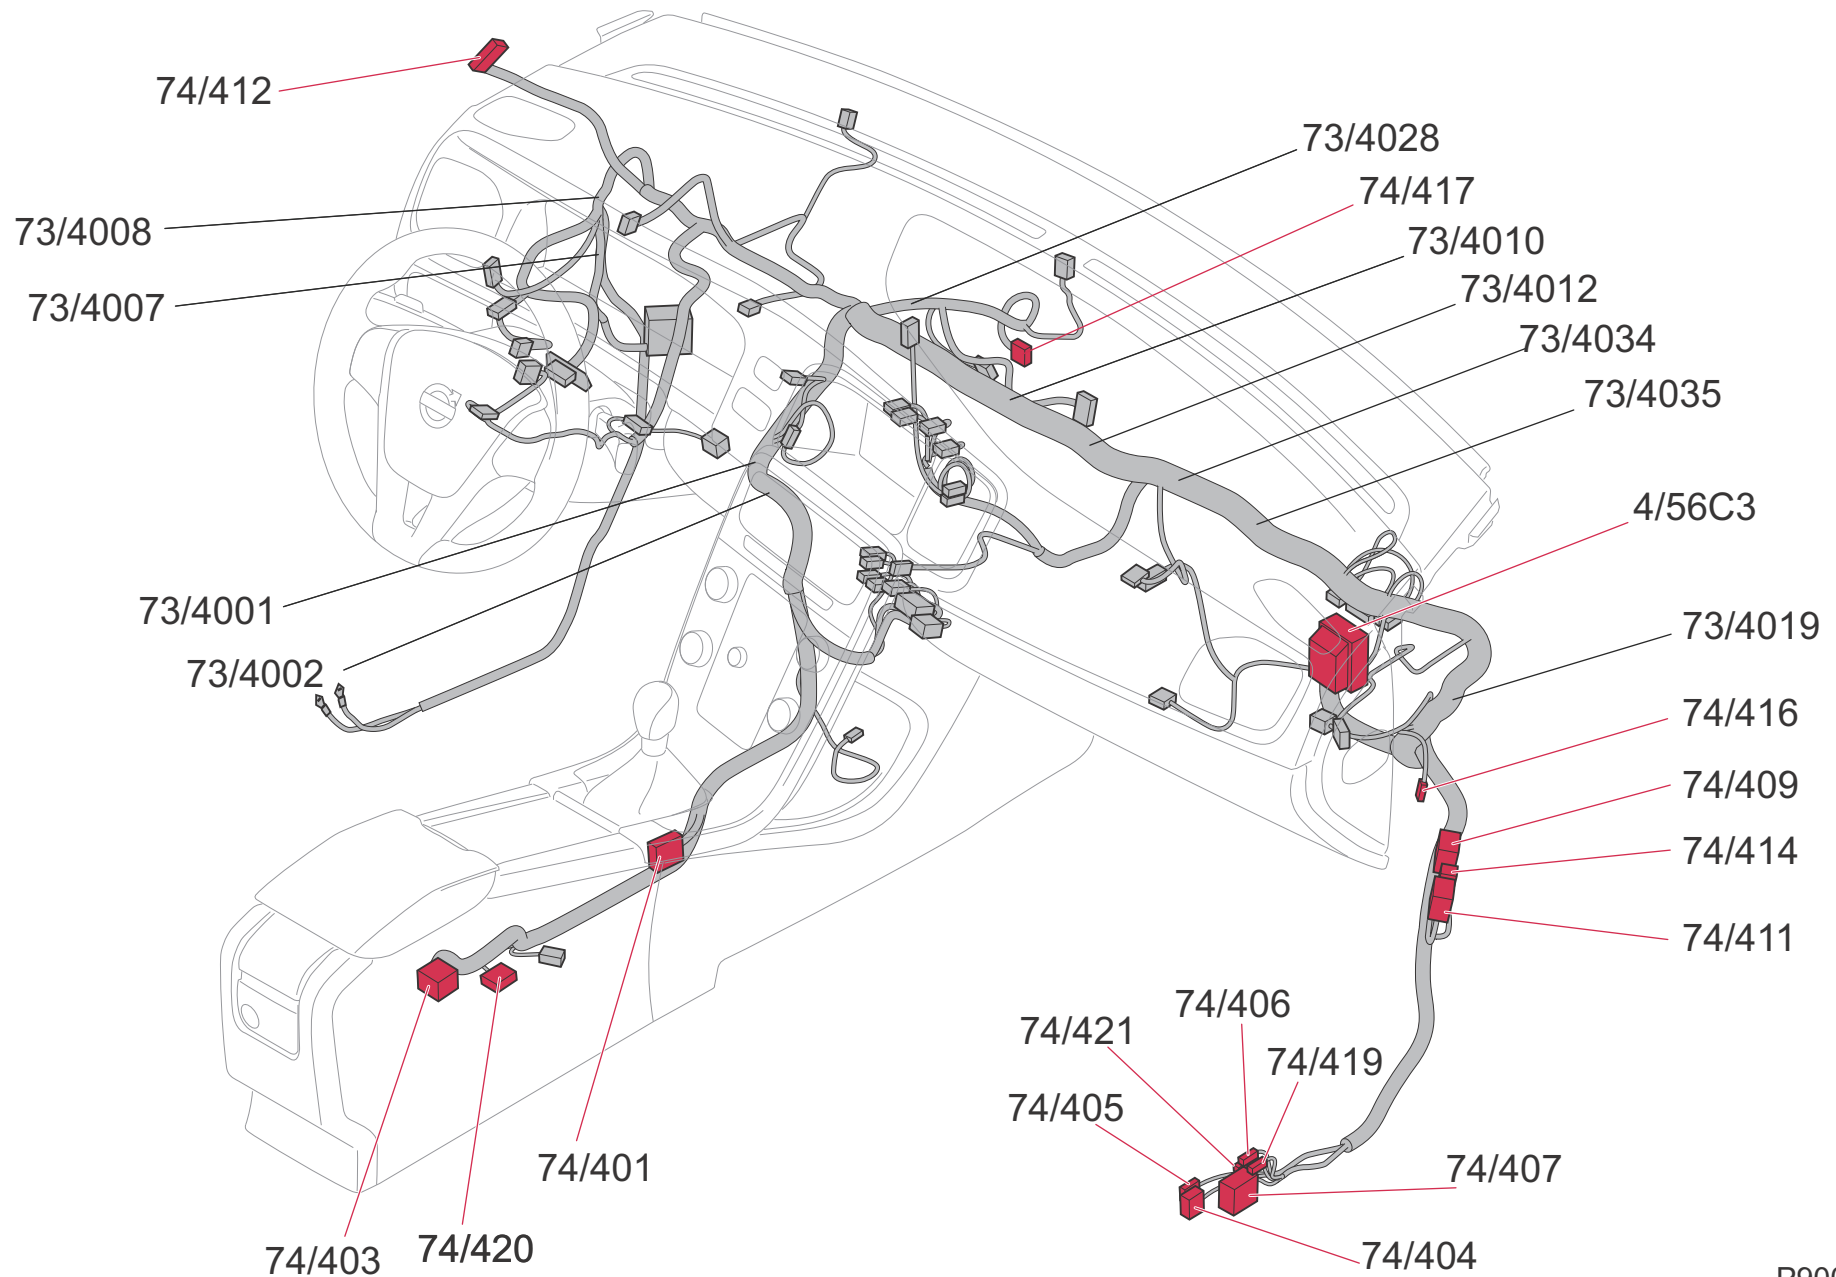


P90003

Cable harness routing in vehicle Harness Dashboard, RHD

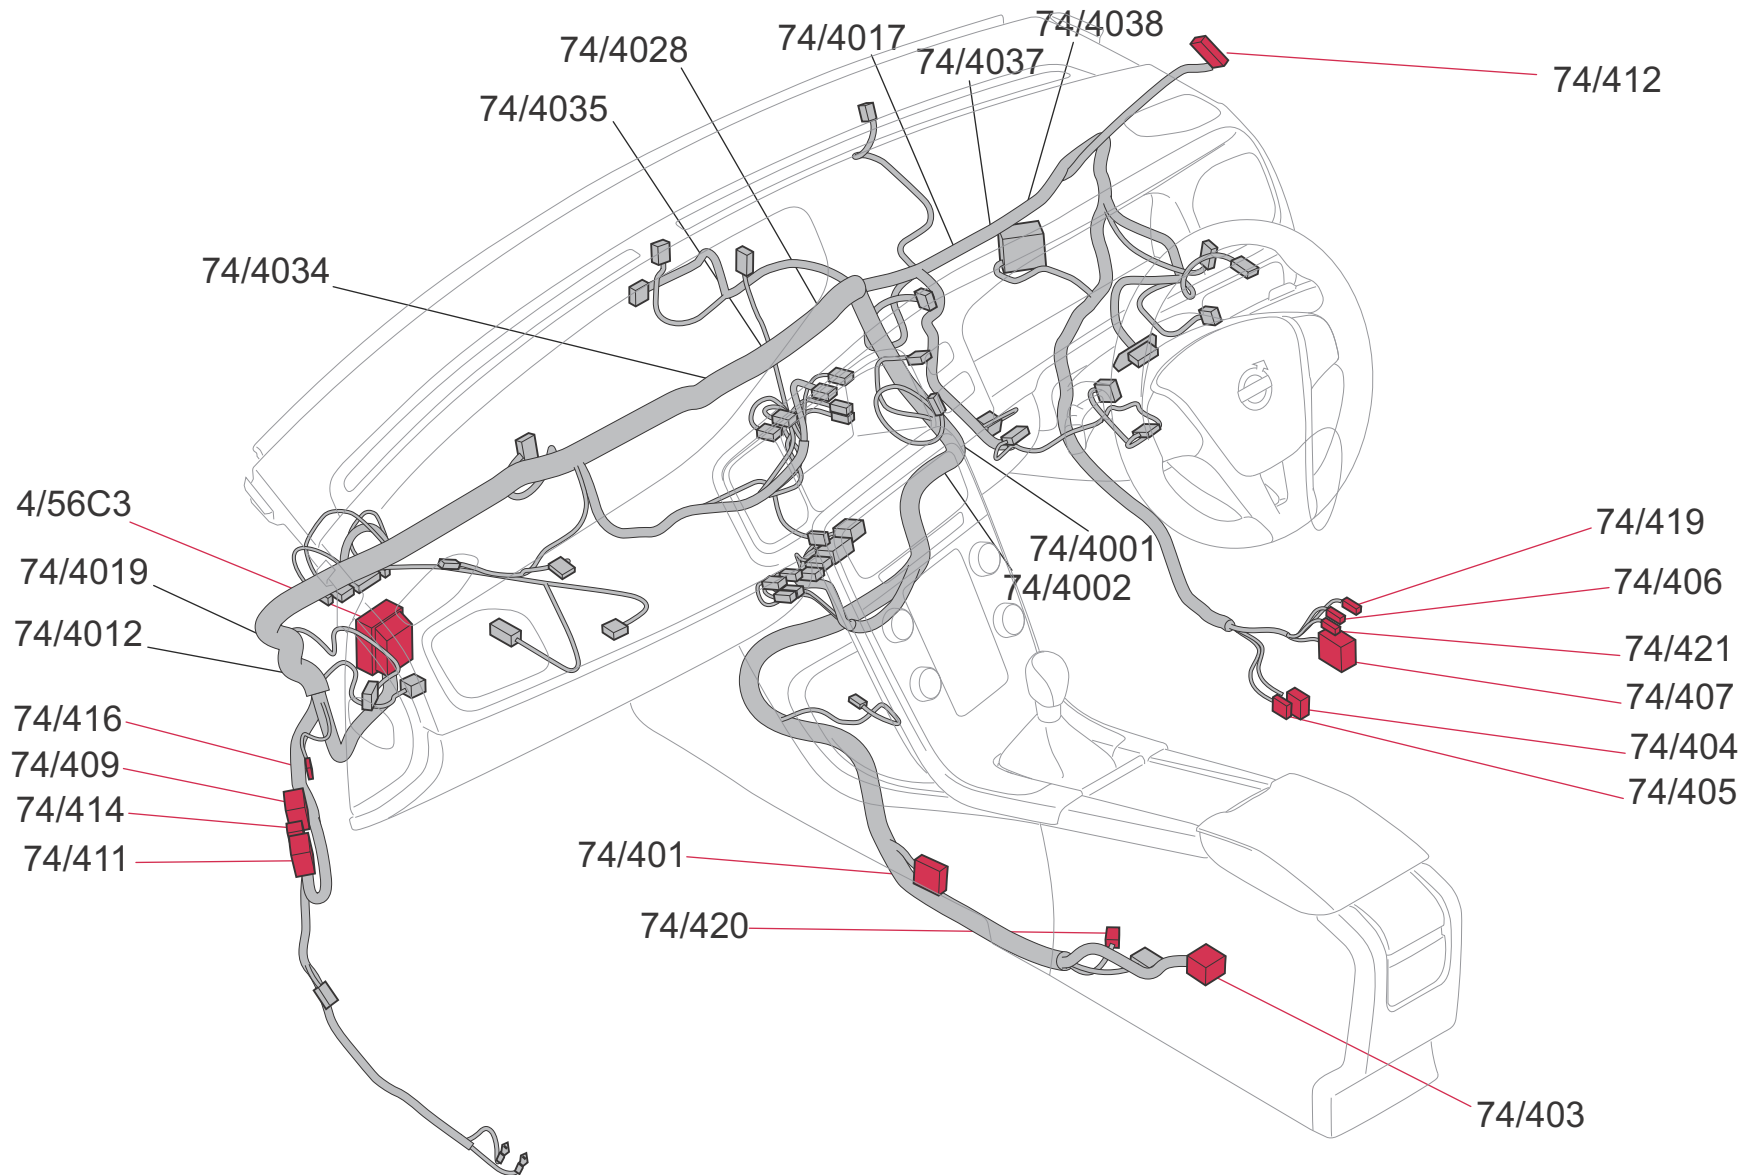


P90004

Cable harness routing in vehicle Harness Floor, LHD S60

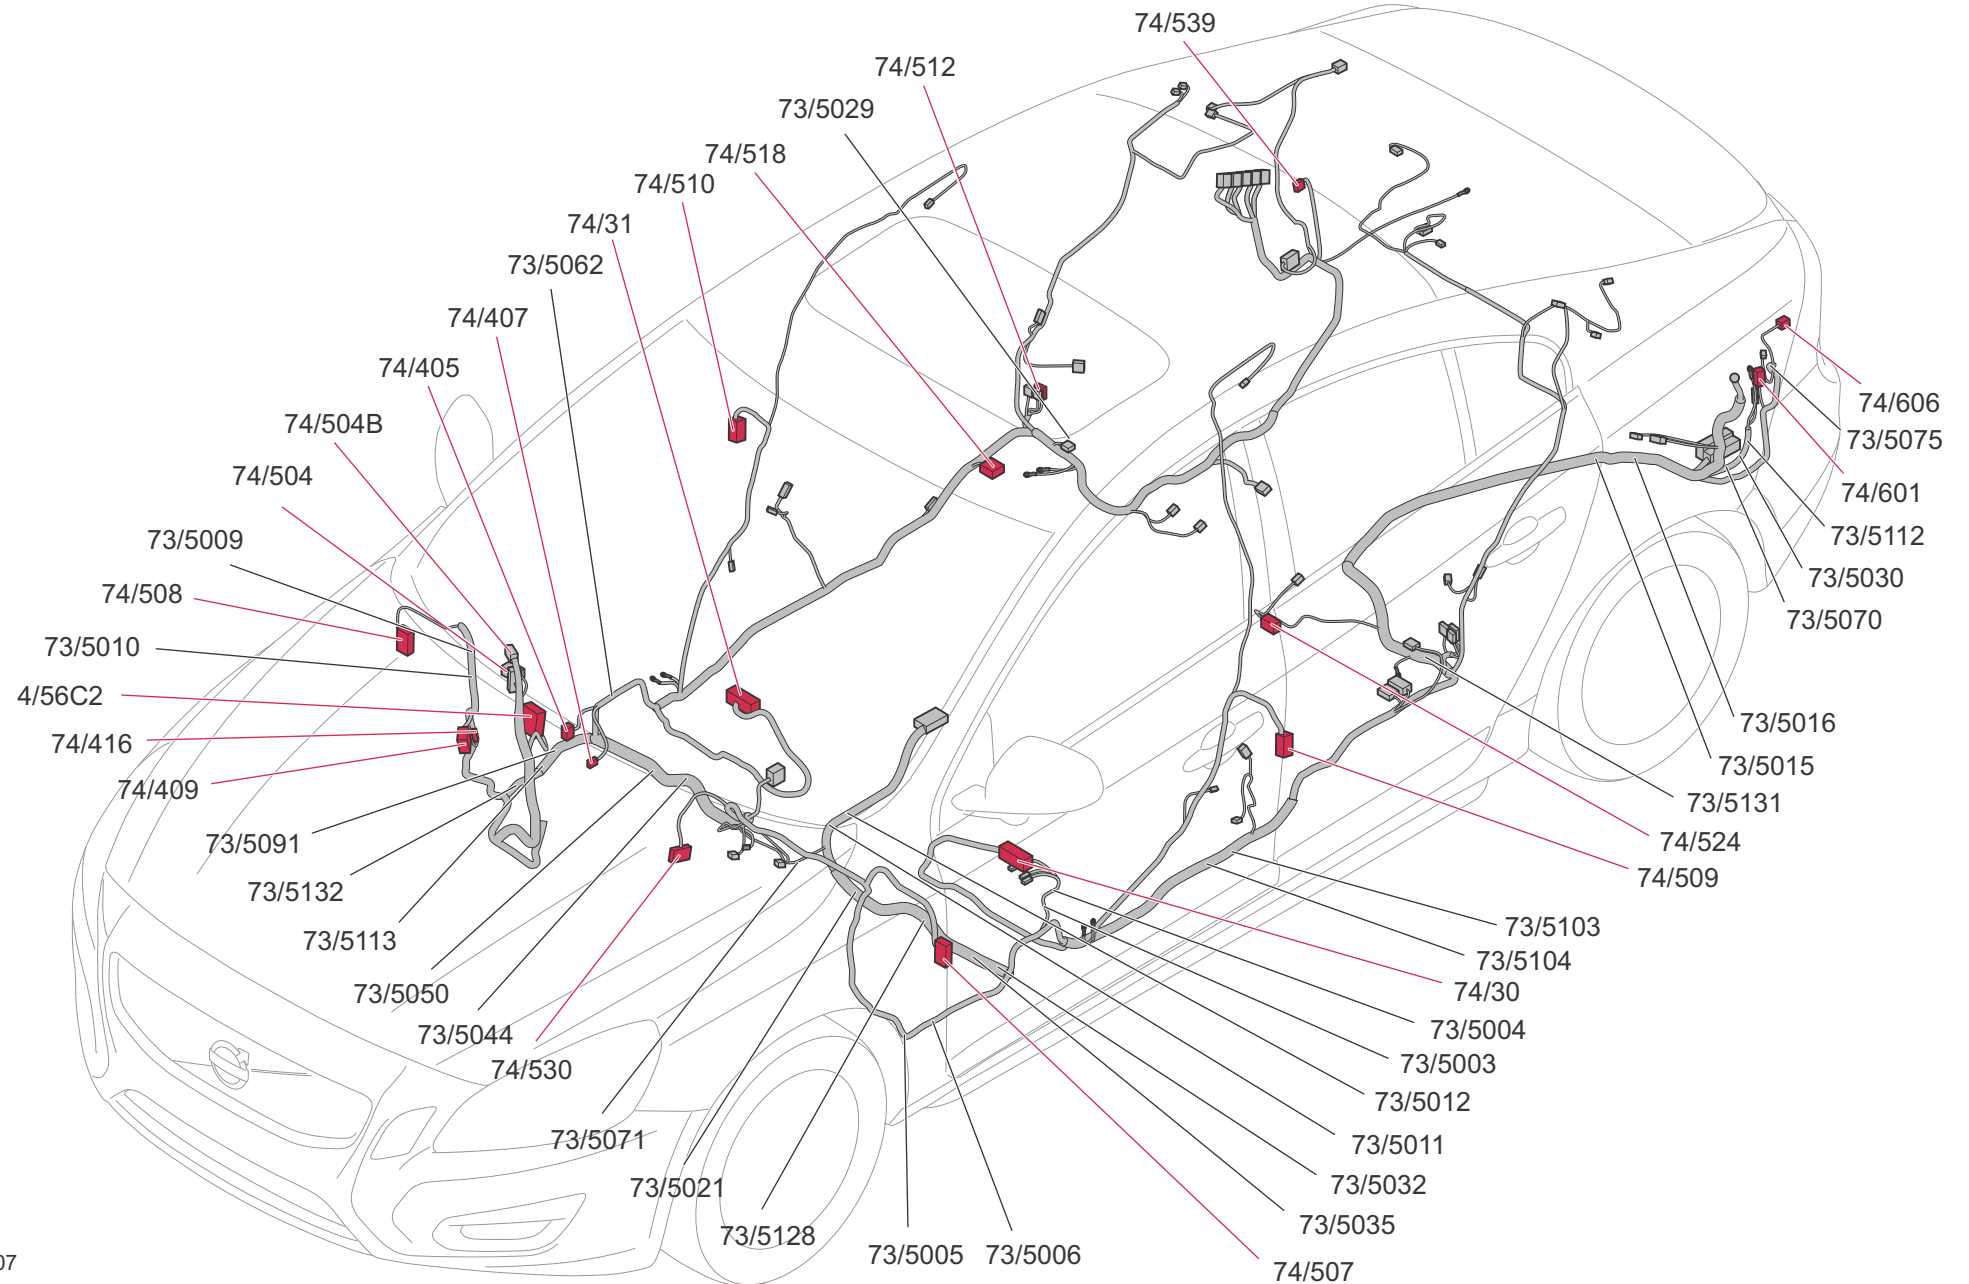


101407

Cable harness routing in vehicle Harness Floor, RHD S60

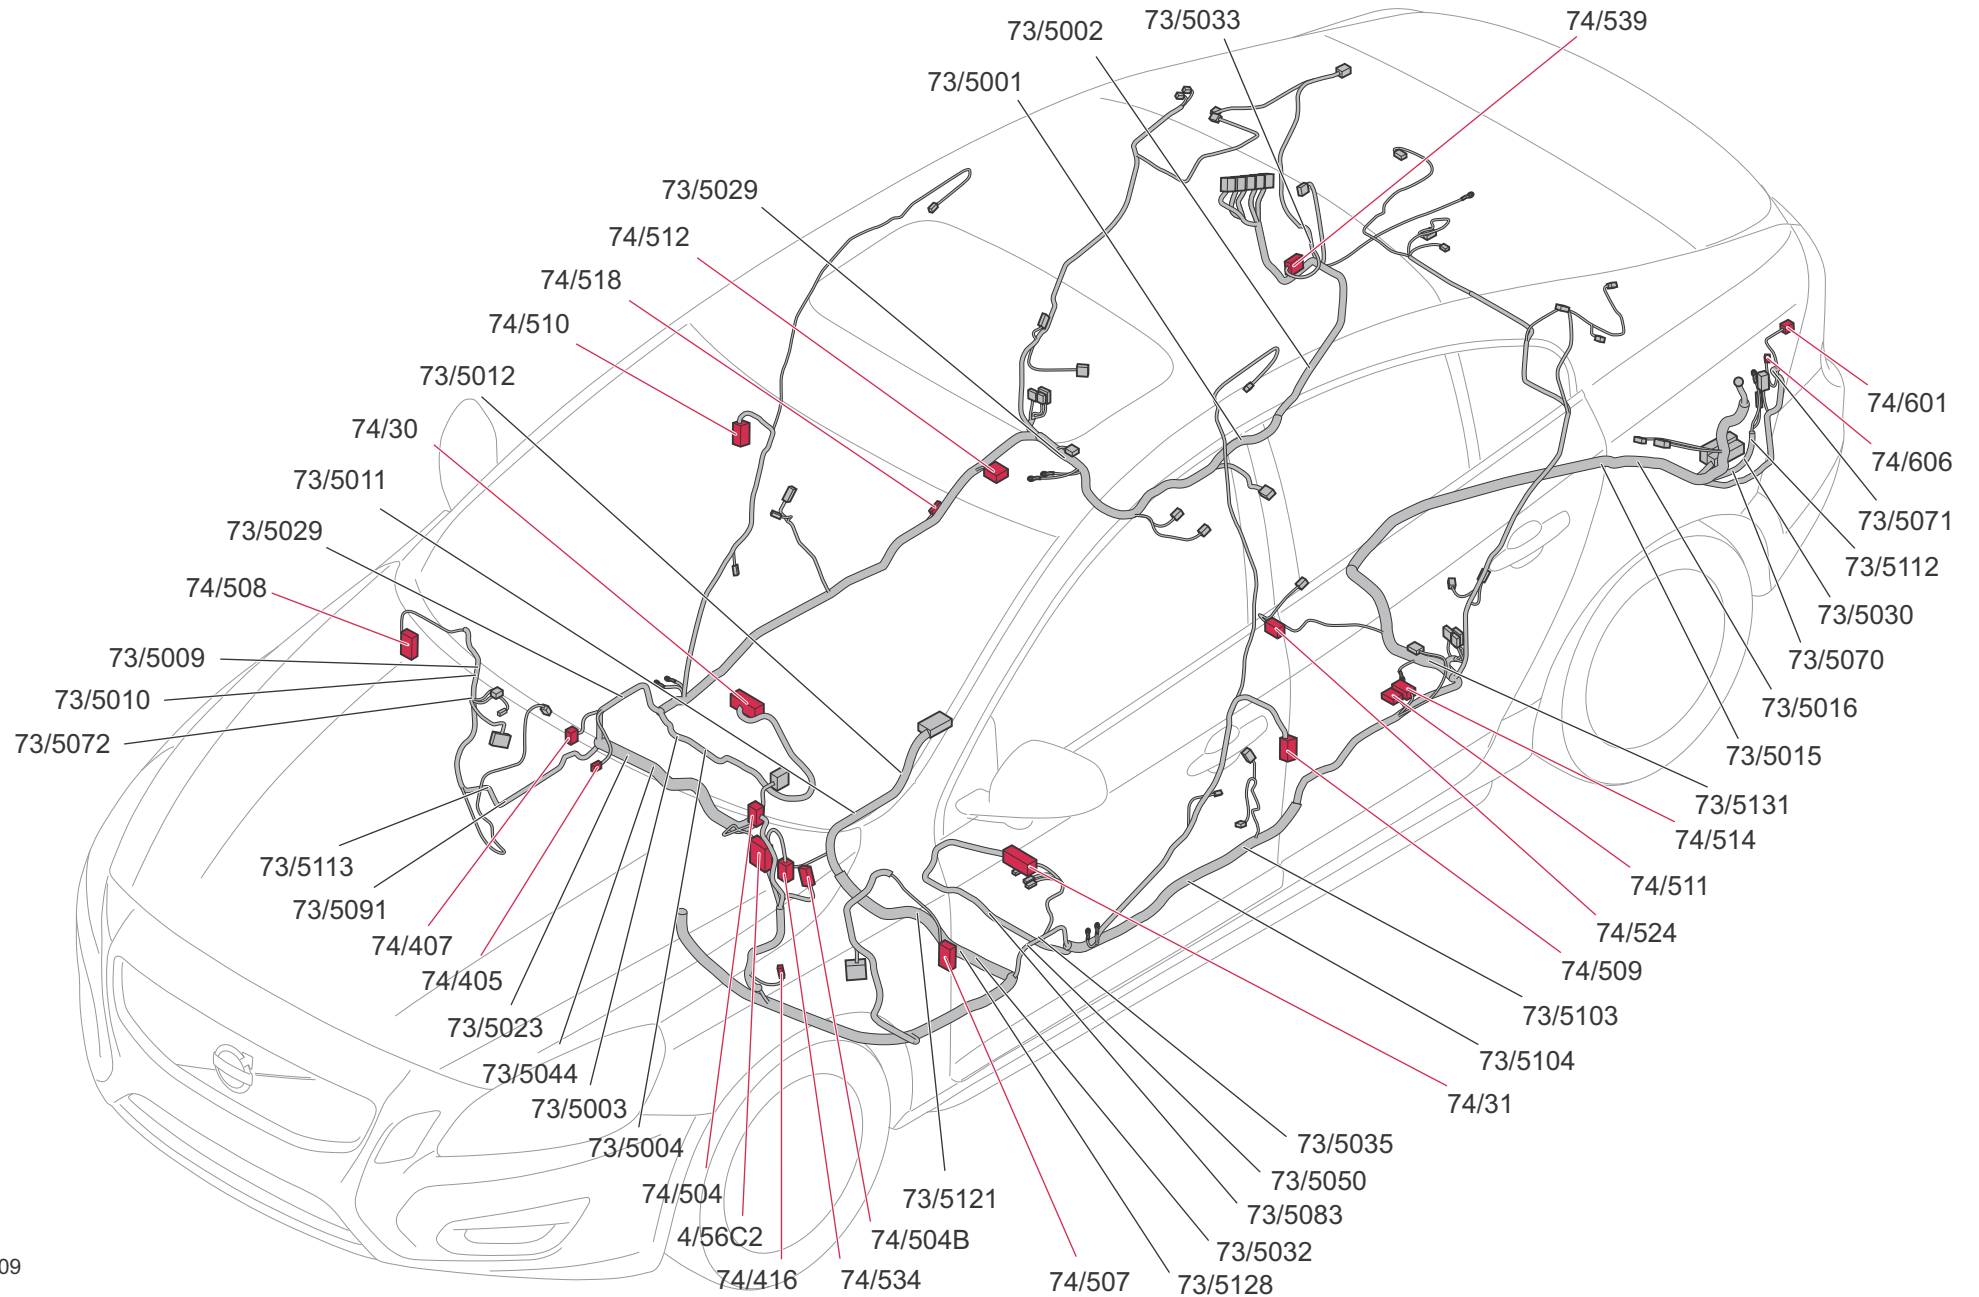

101409


Cable harness routing in vehicle Floor Harness, LHD V60

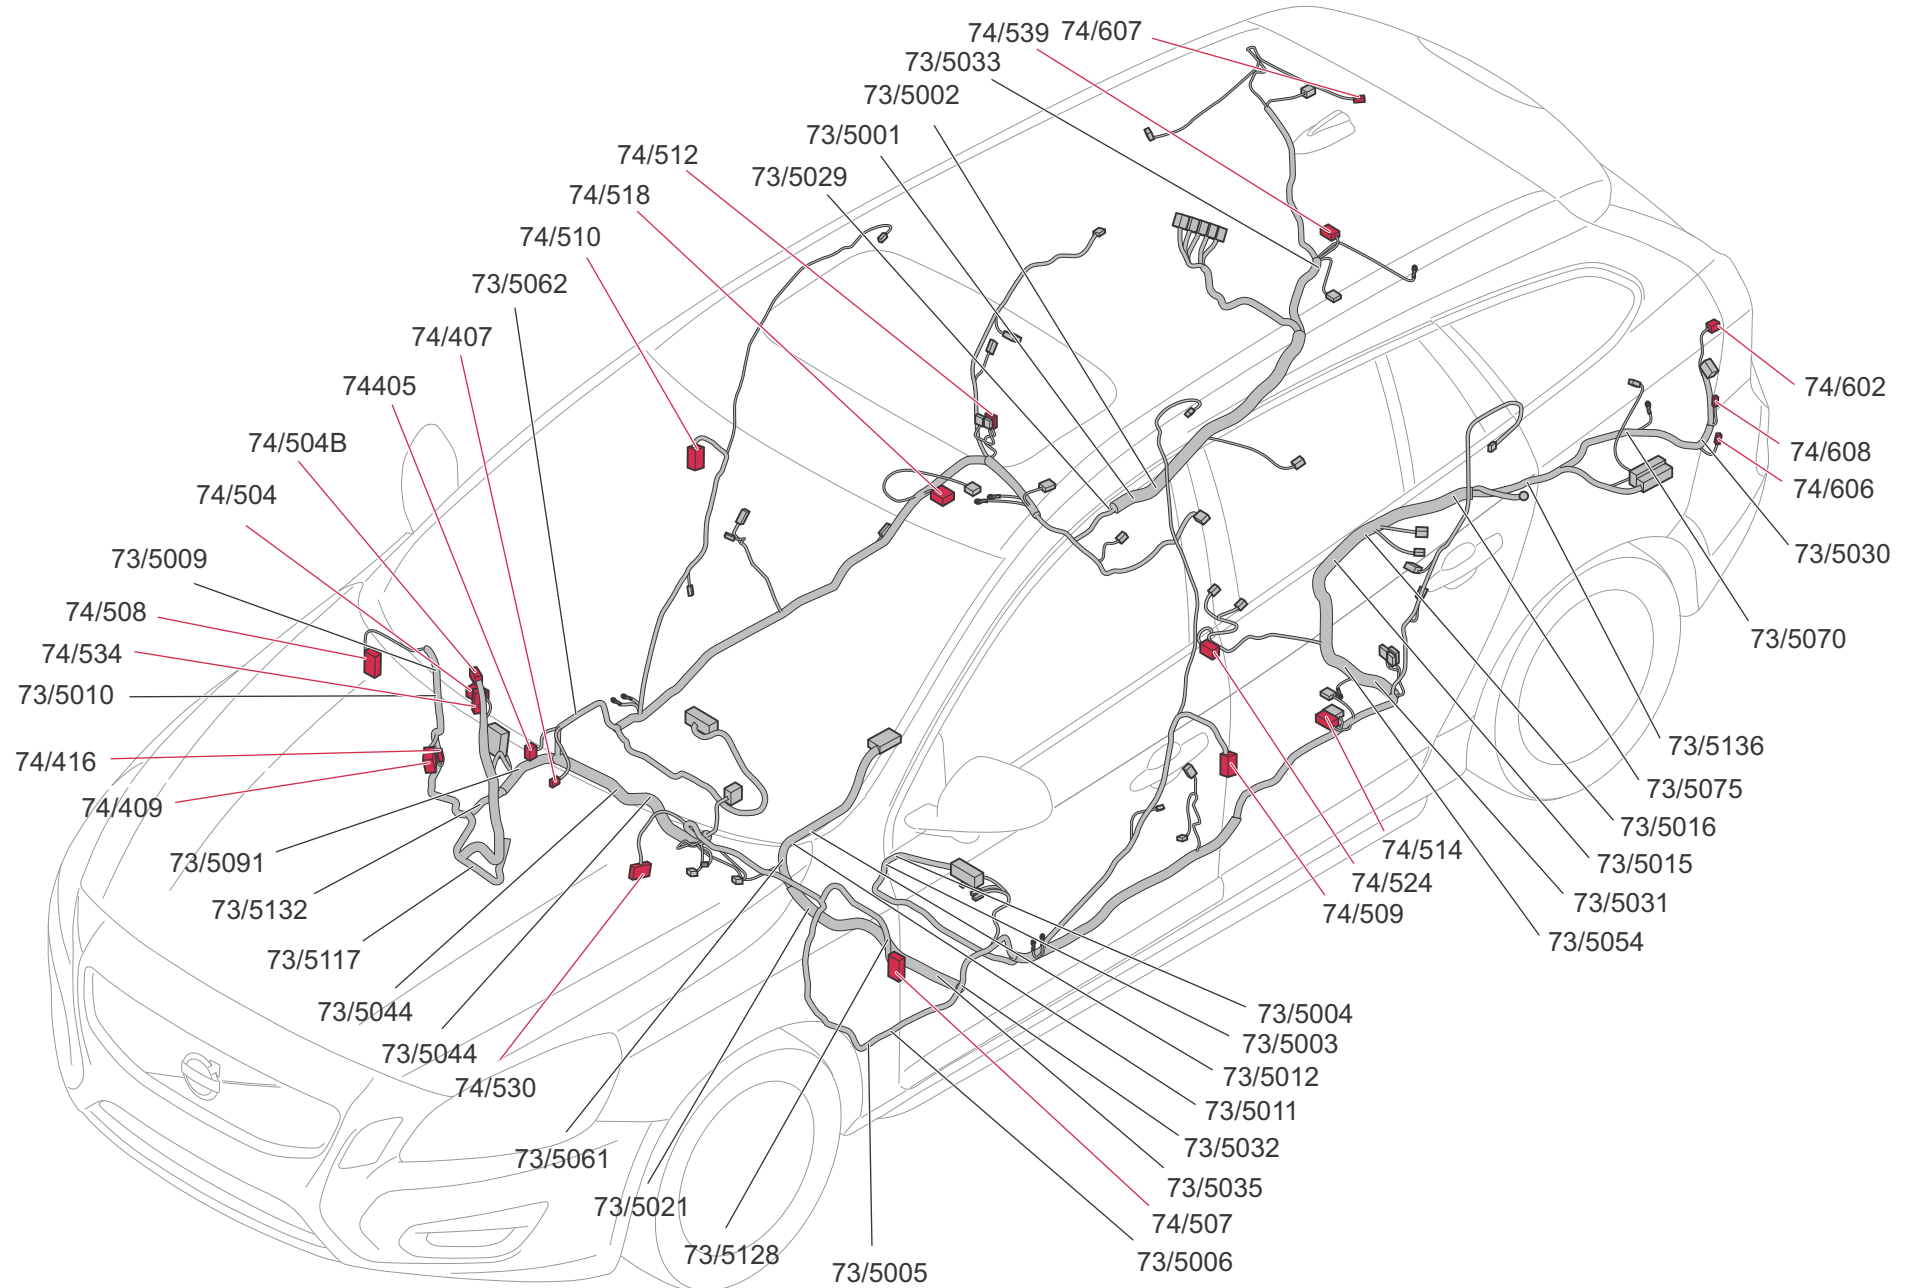

101408

Cable harness routing in vehicle


Harness Floor, RHD V60

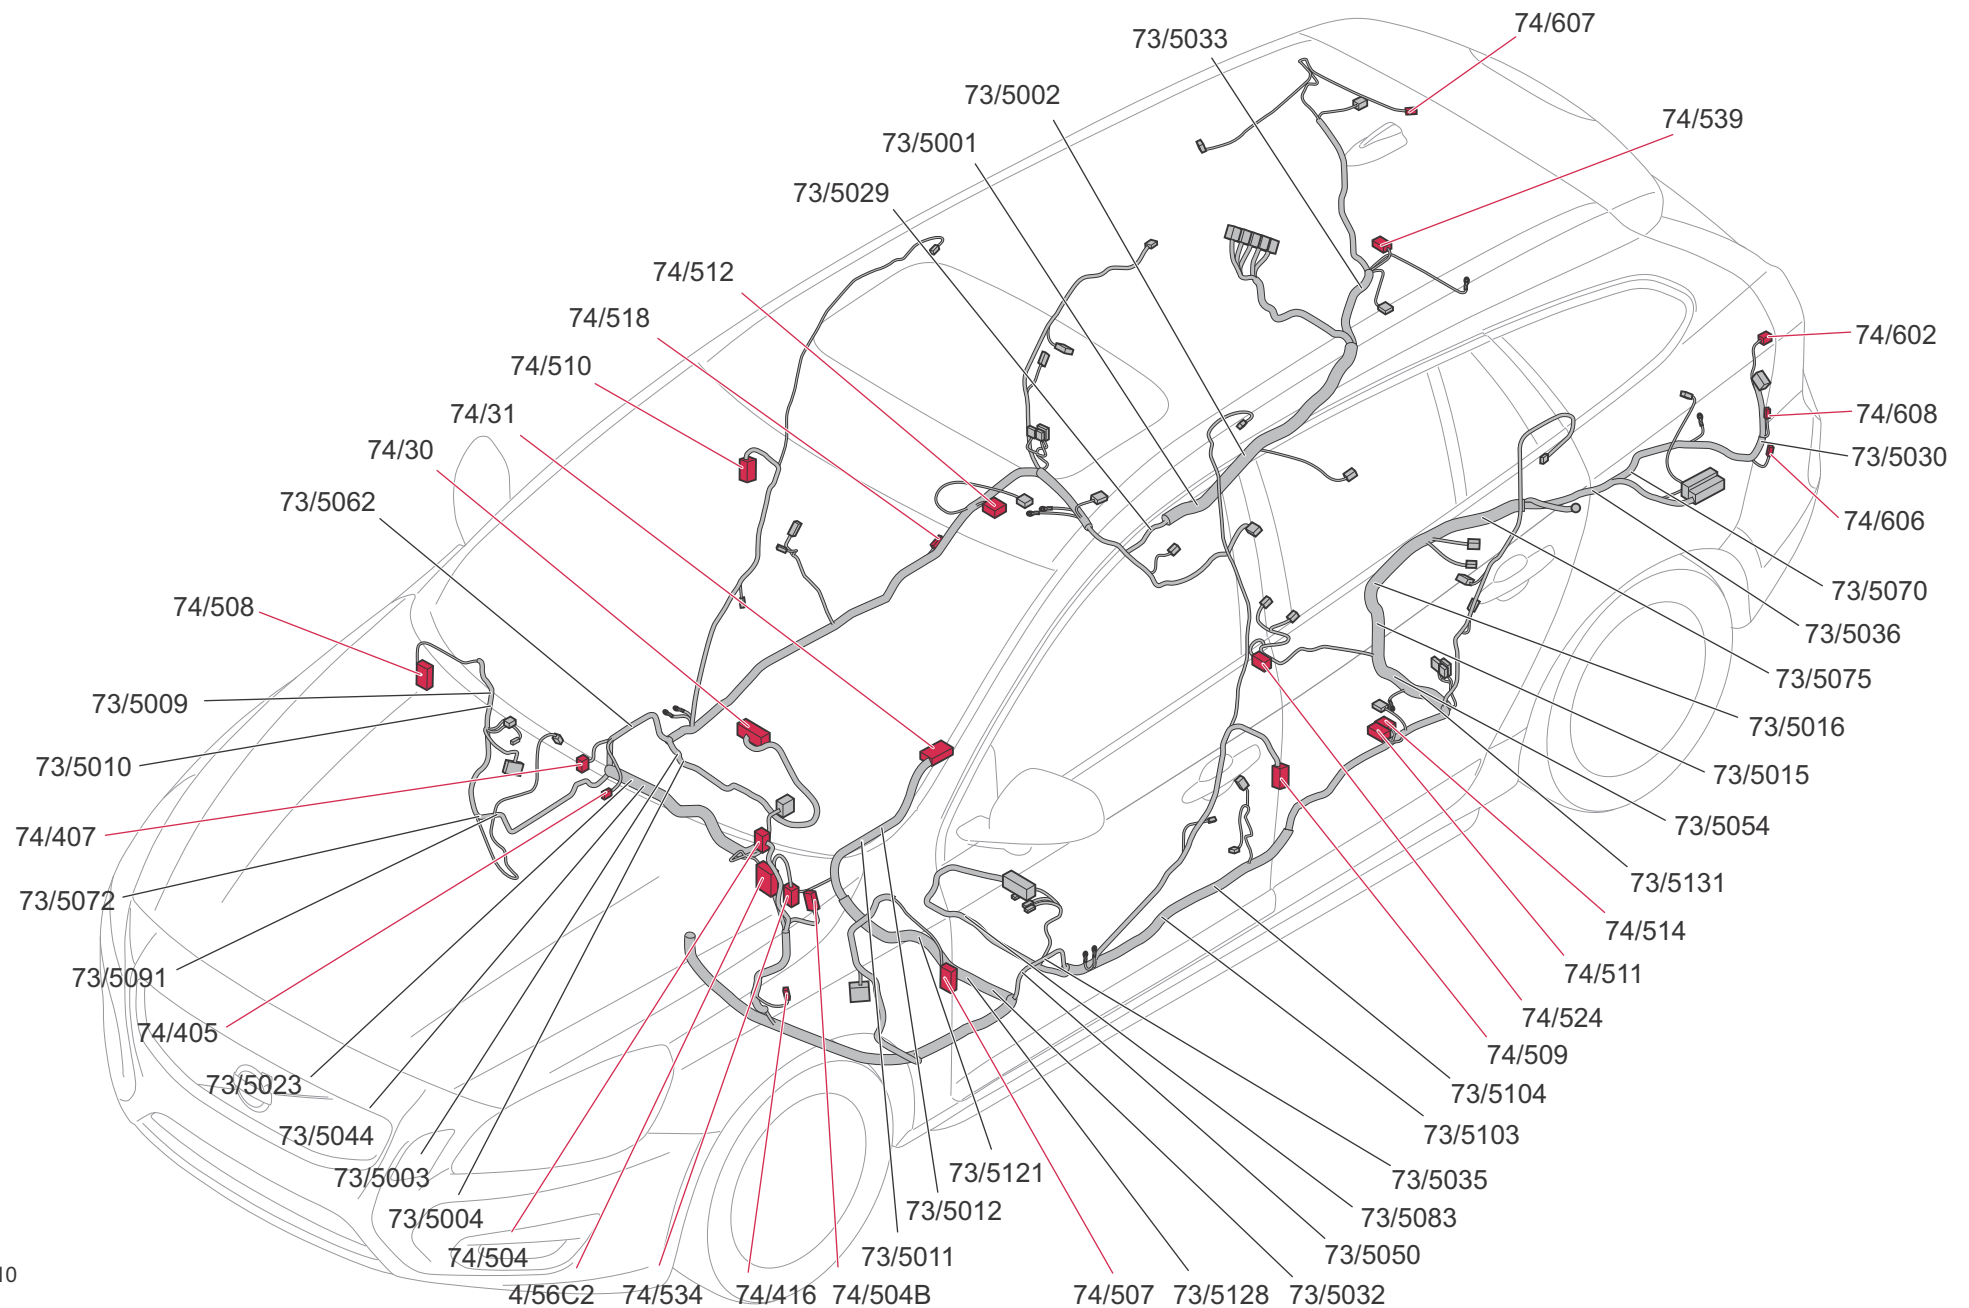

101410

Cable harness routing in vehicle


Harness infotainment, LHD S60

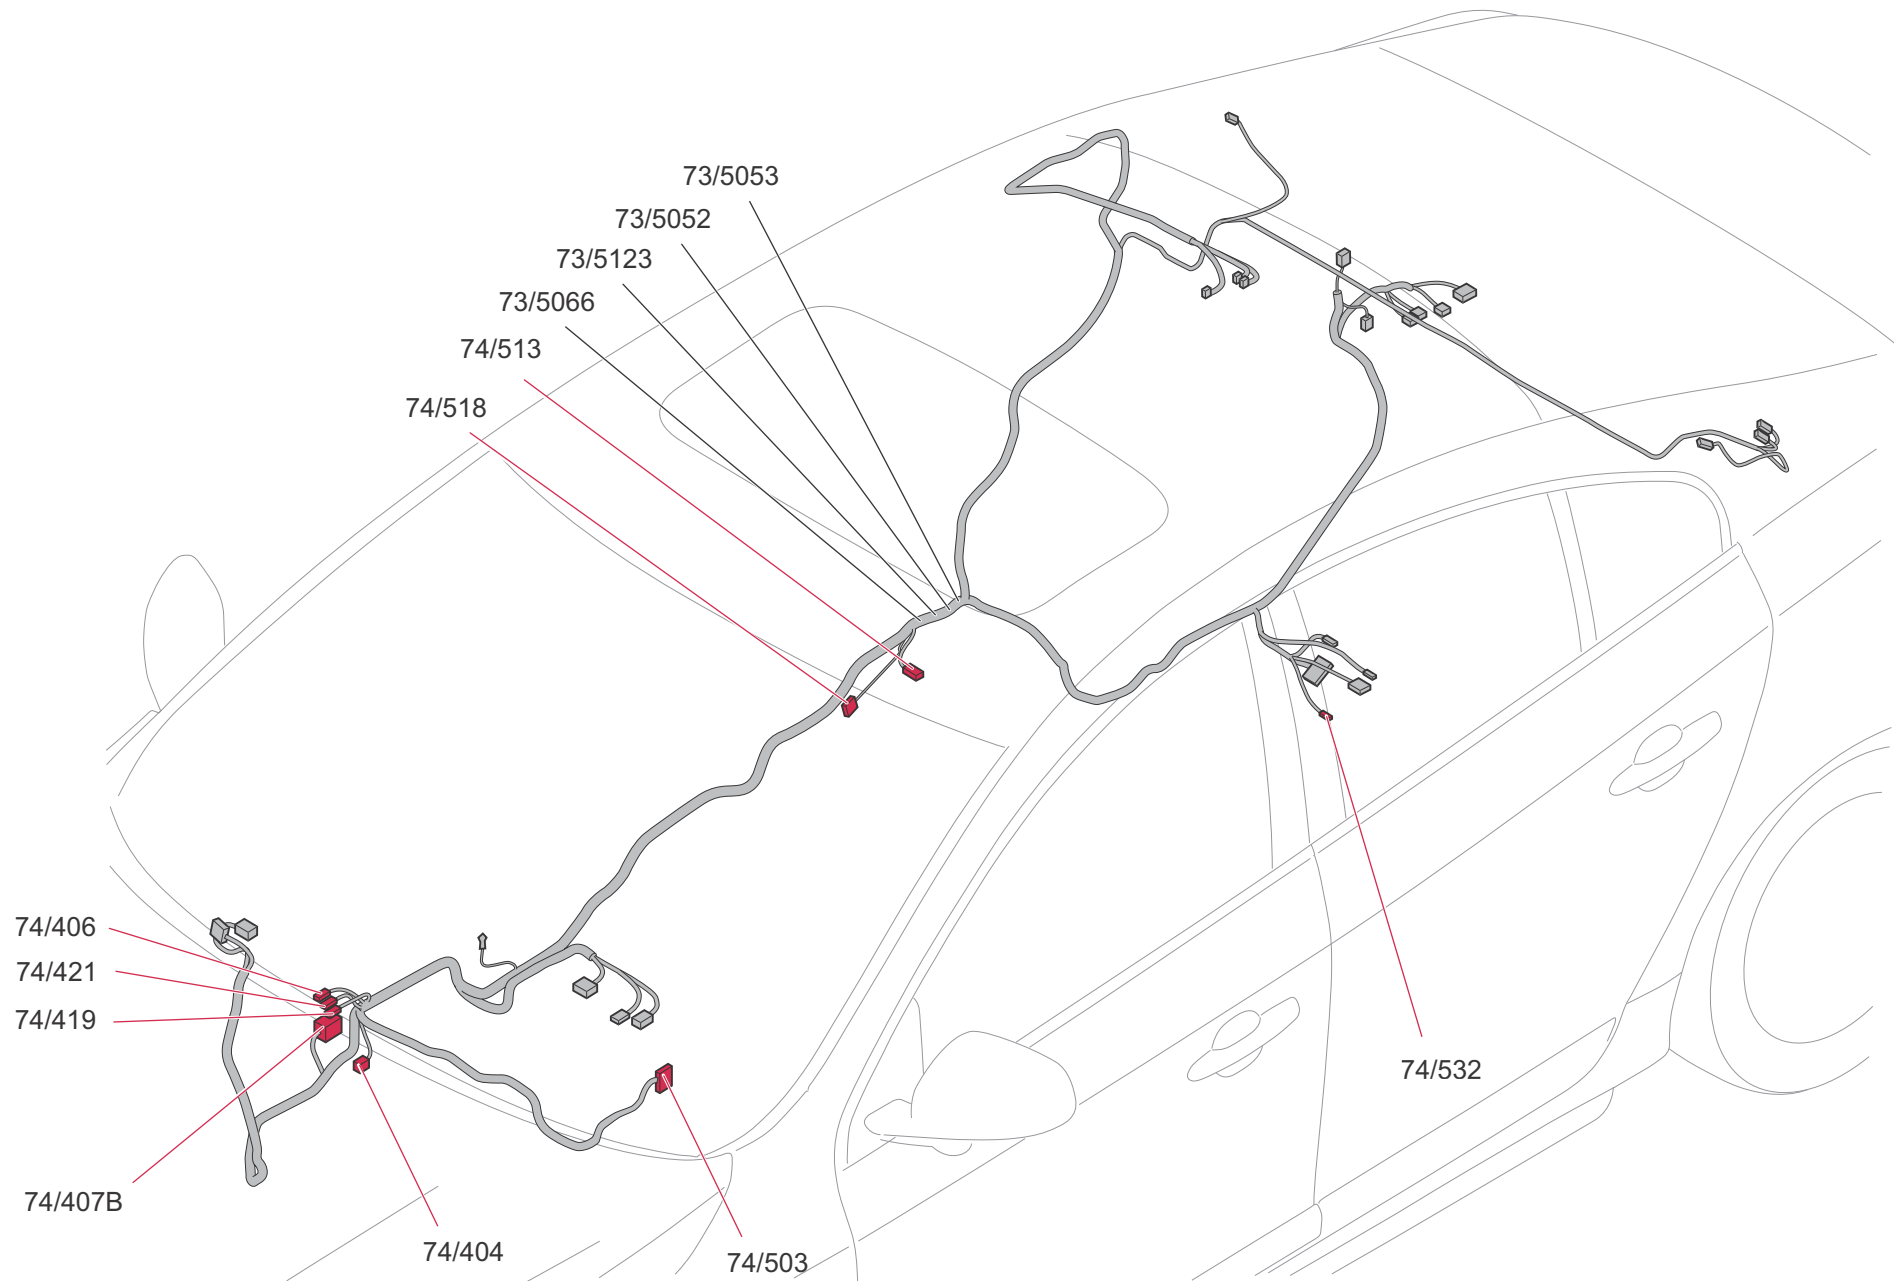

I01411


Cable harness routing in vehicle

Harness infotainment, RHD S60

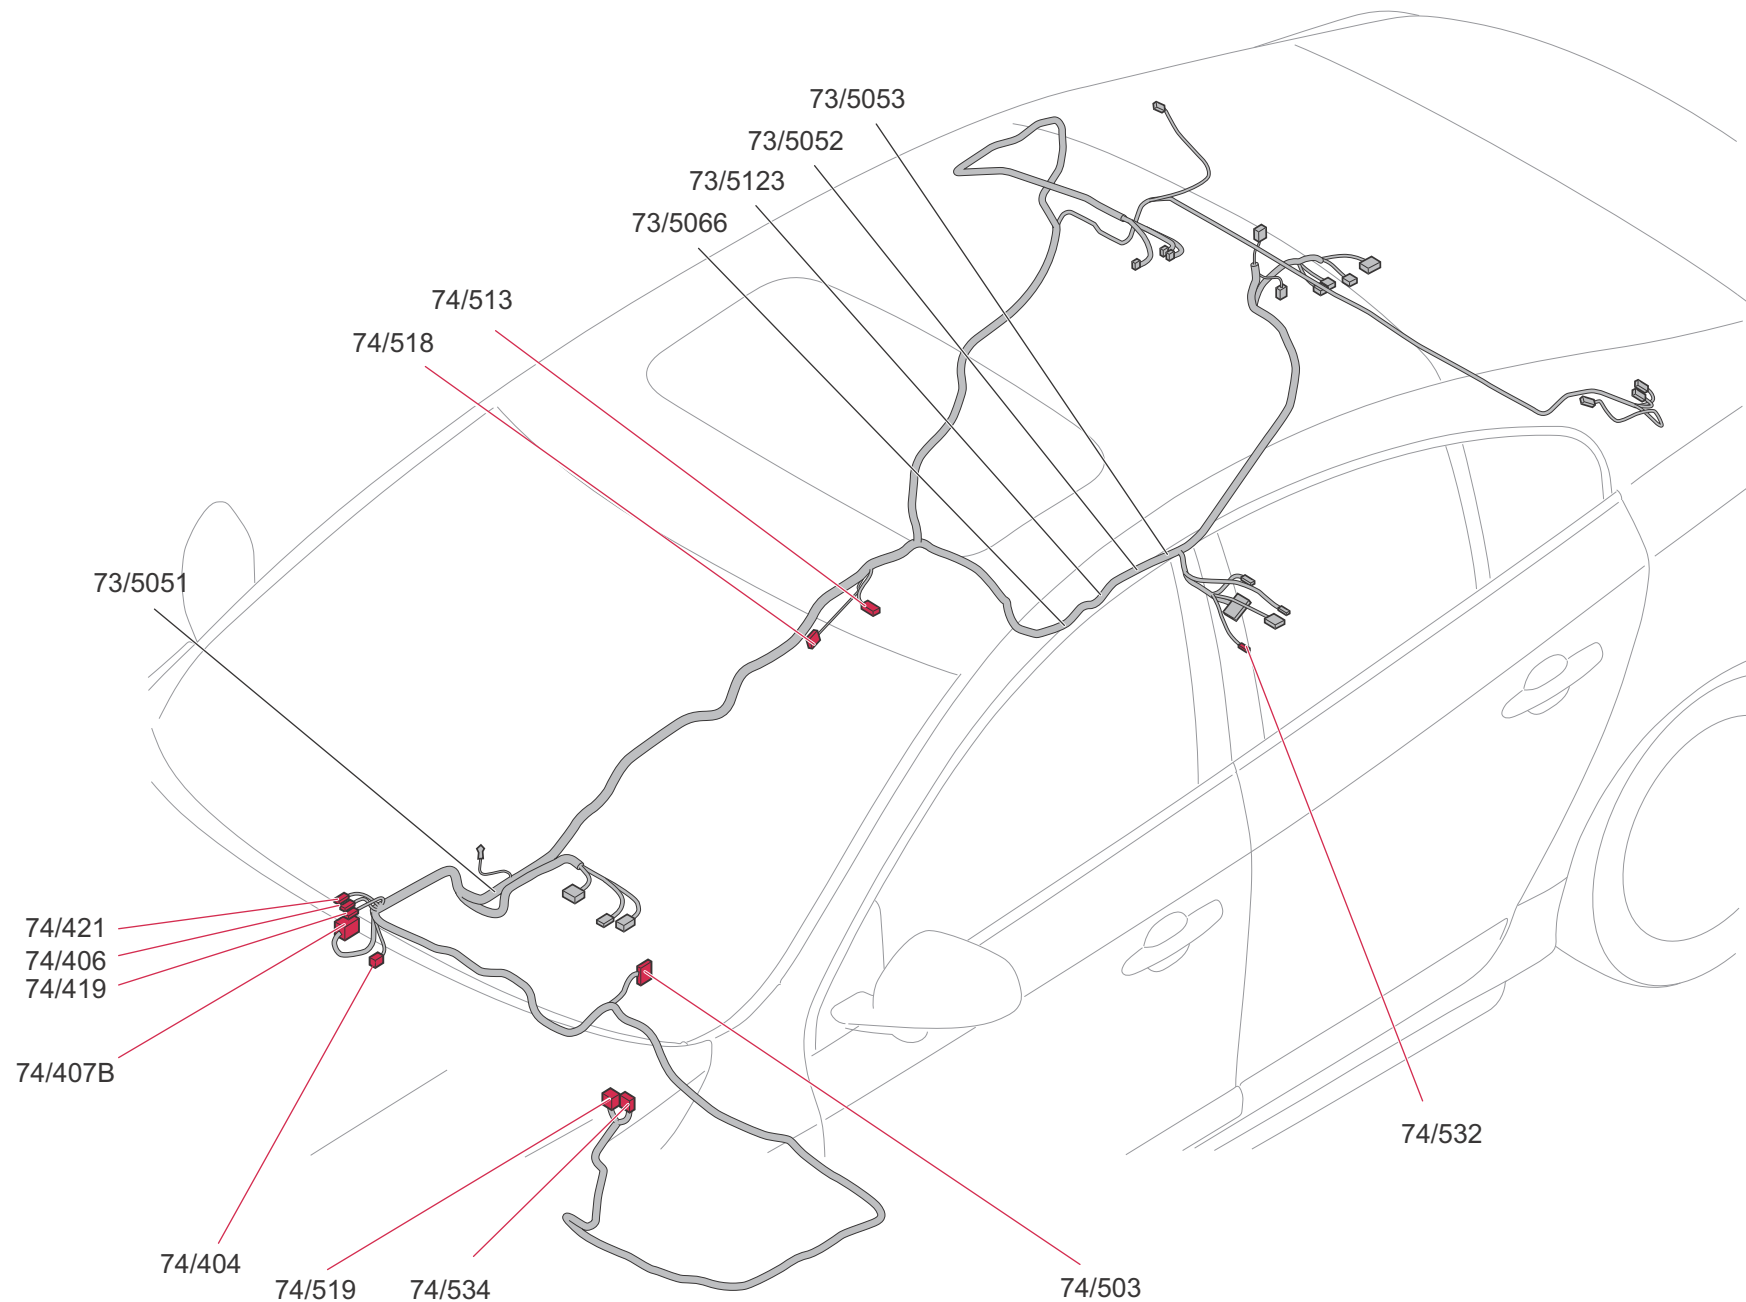

Cable harness routing in vehicle


Harness infotainment, LHD V60

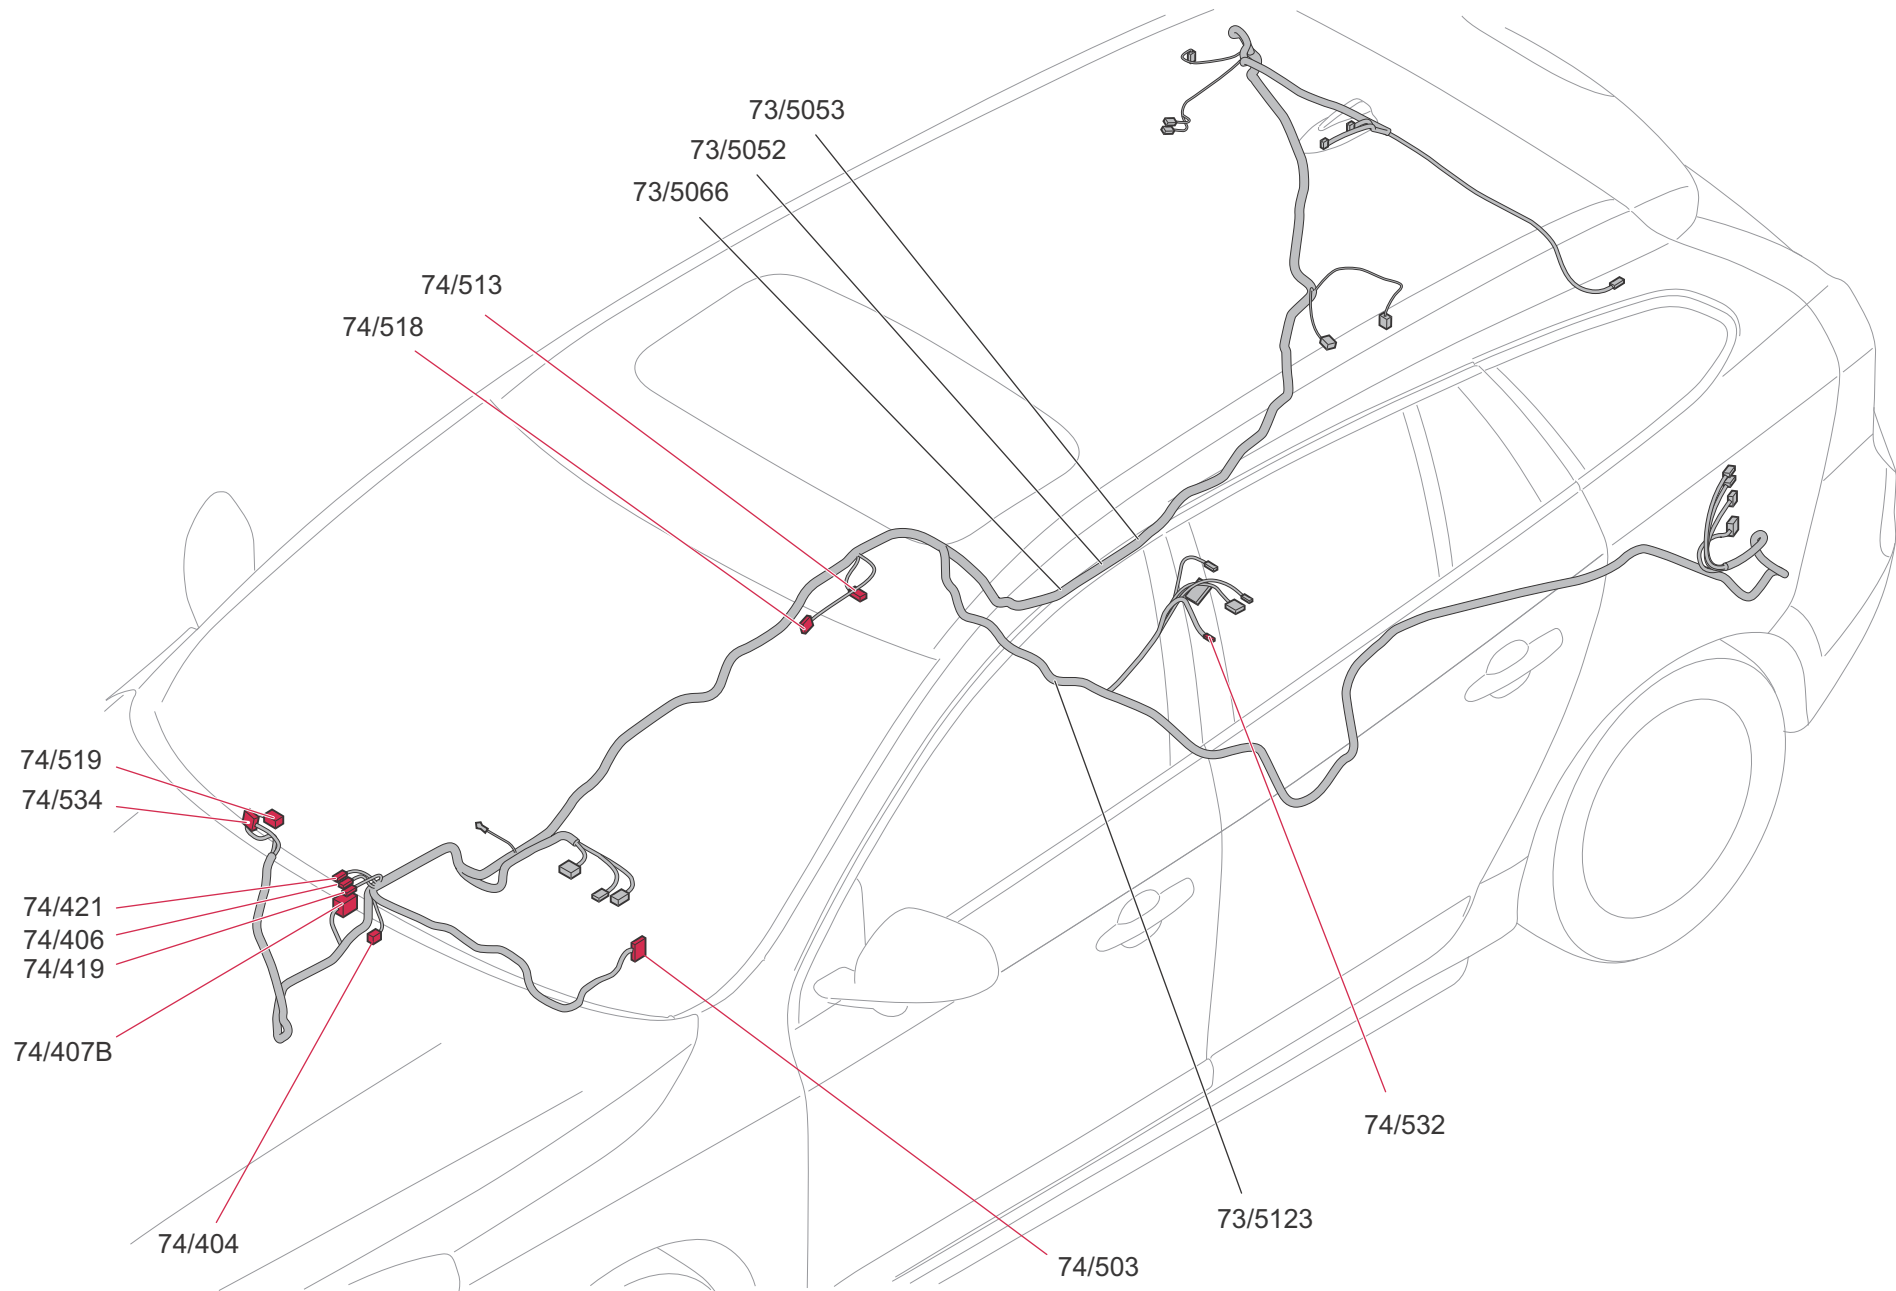

I01412

Cable harness routing in vehicle


Harness infotainment, RHD V60

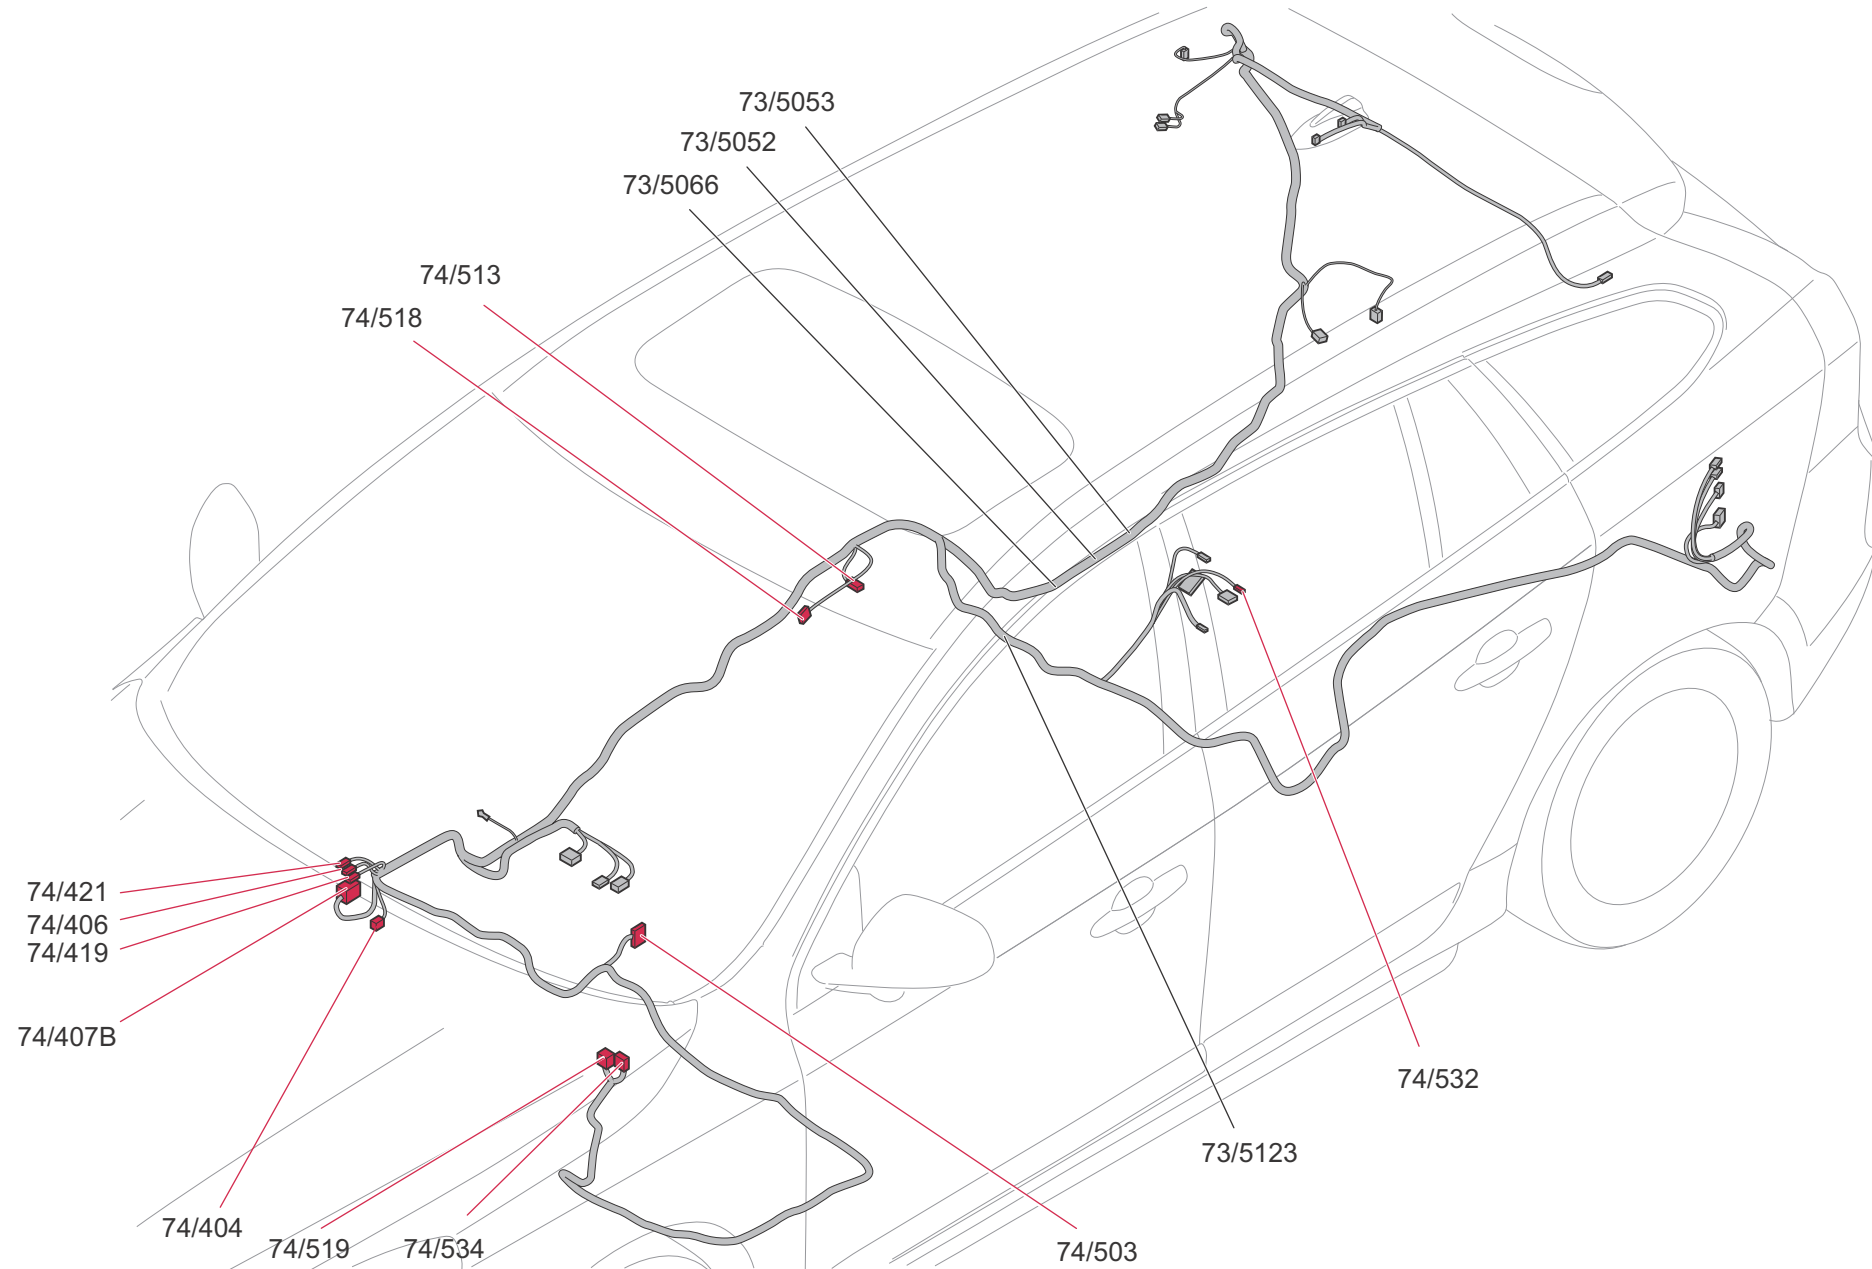

I01414

Cable harness routing in vehicle


Roof harness, S60

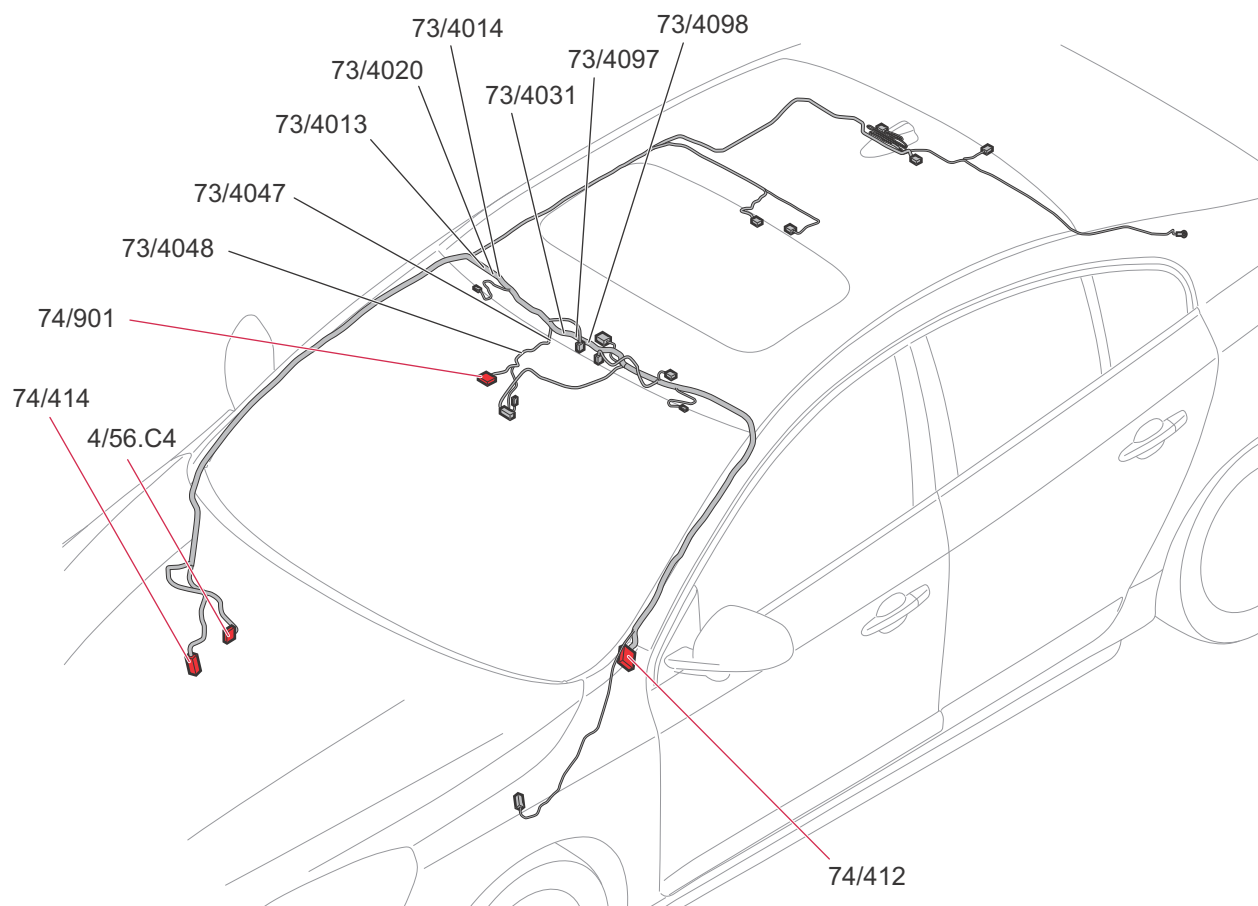

I01415


Cable harness routing in vehicle

Roof harness V60

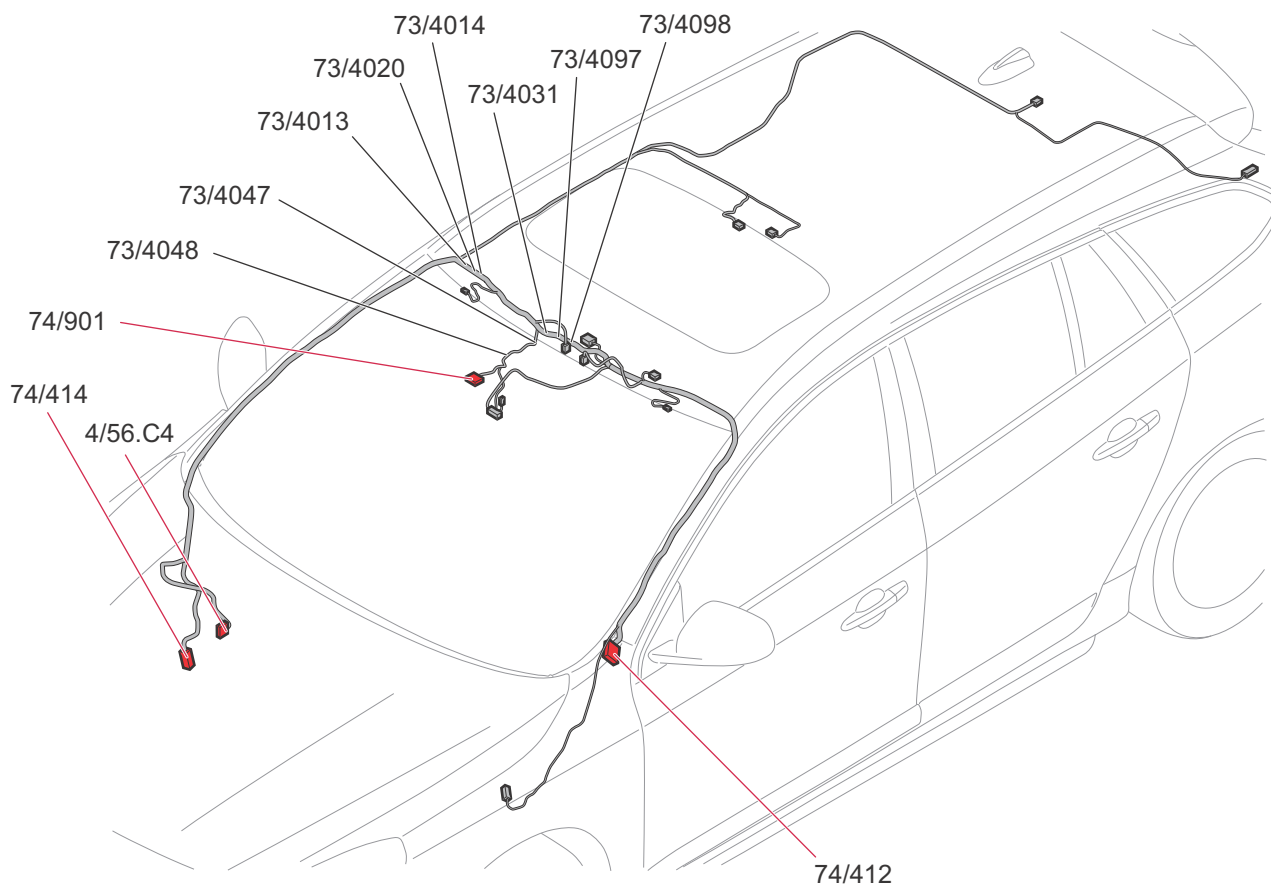


I01416

Cable harness routing in vehicle
Center console harness

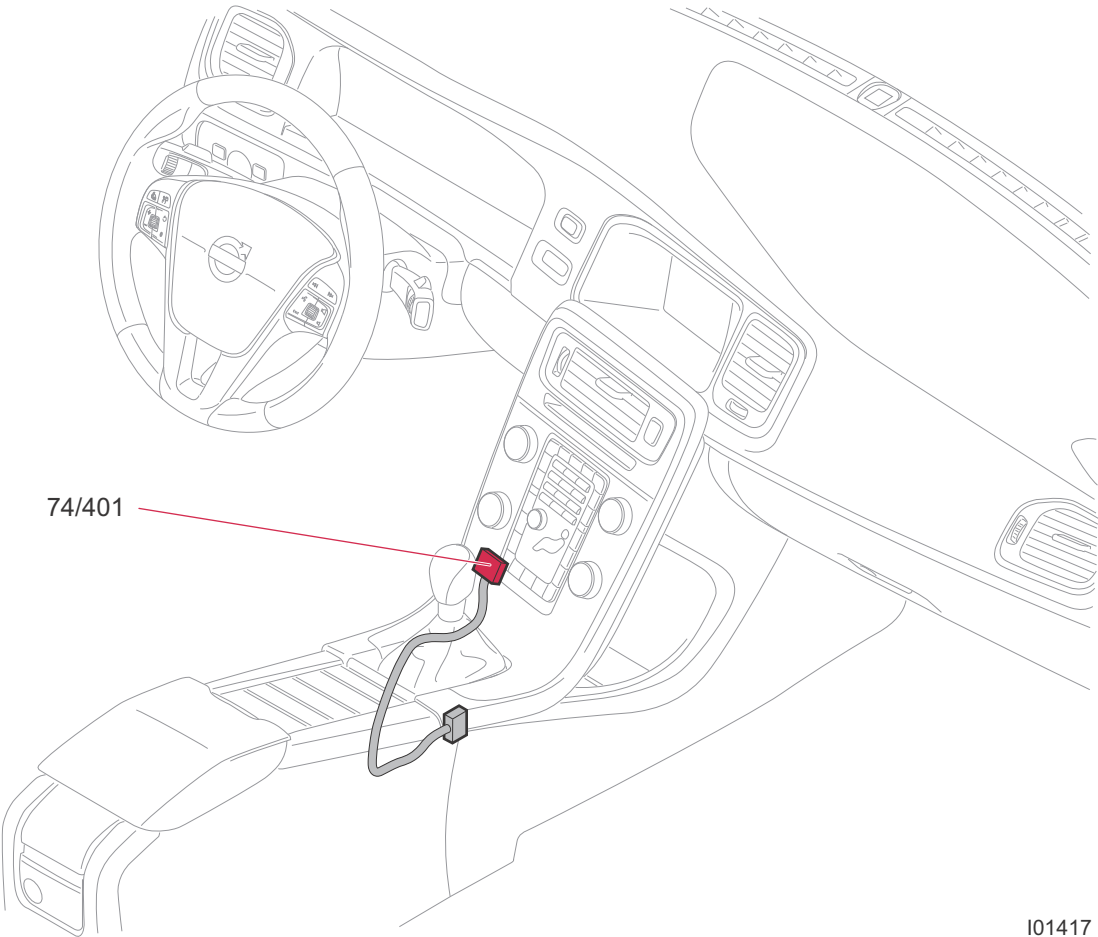

I01417

Cable harness routing in vehicle
Tunnel harness

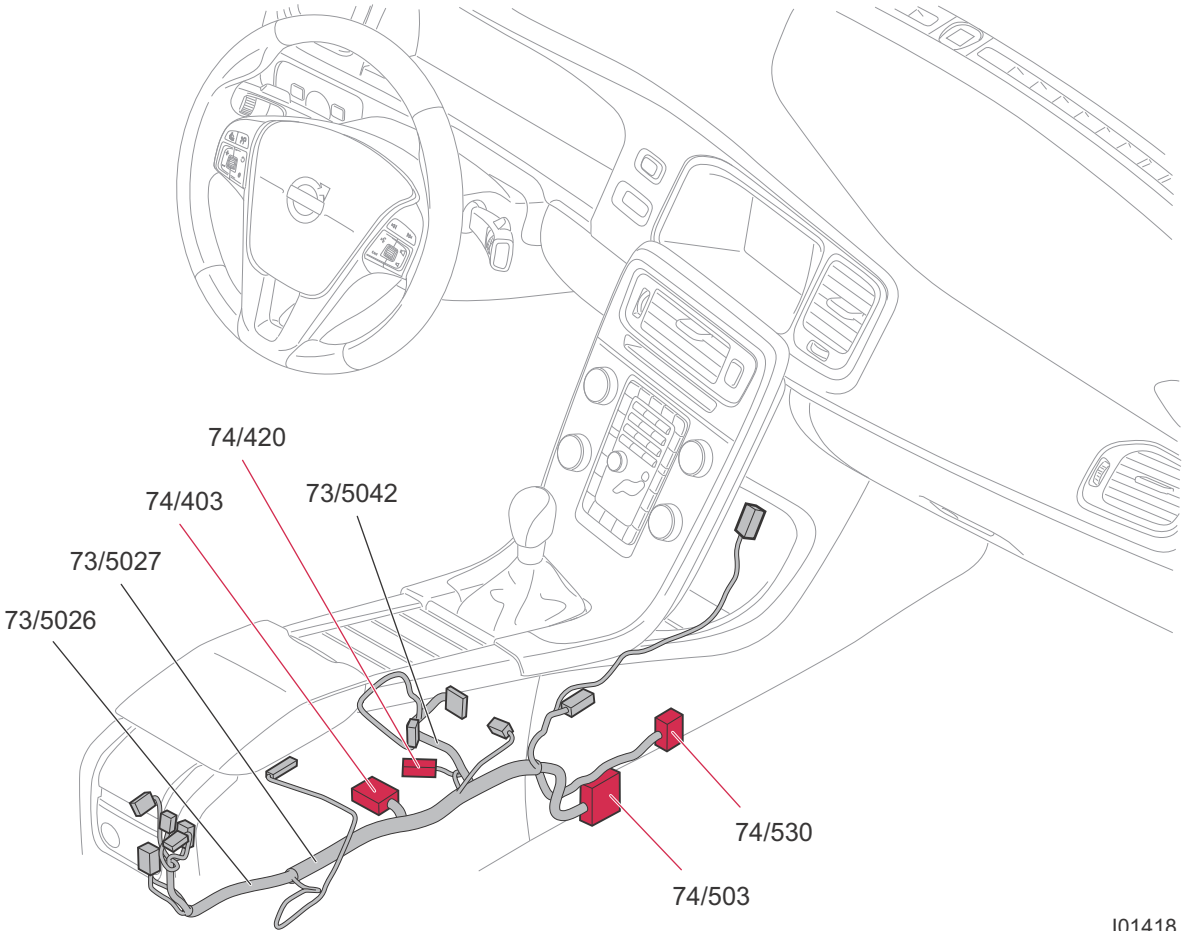

I01418


Cable harness routing in vehicle
Harness front door, left



Cable harness routing in vehicle
Harness front door, right




Cable harness routing in vehicle
Harness rear door, left

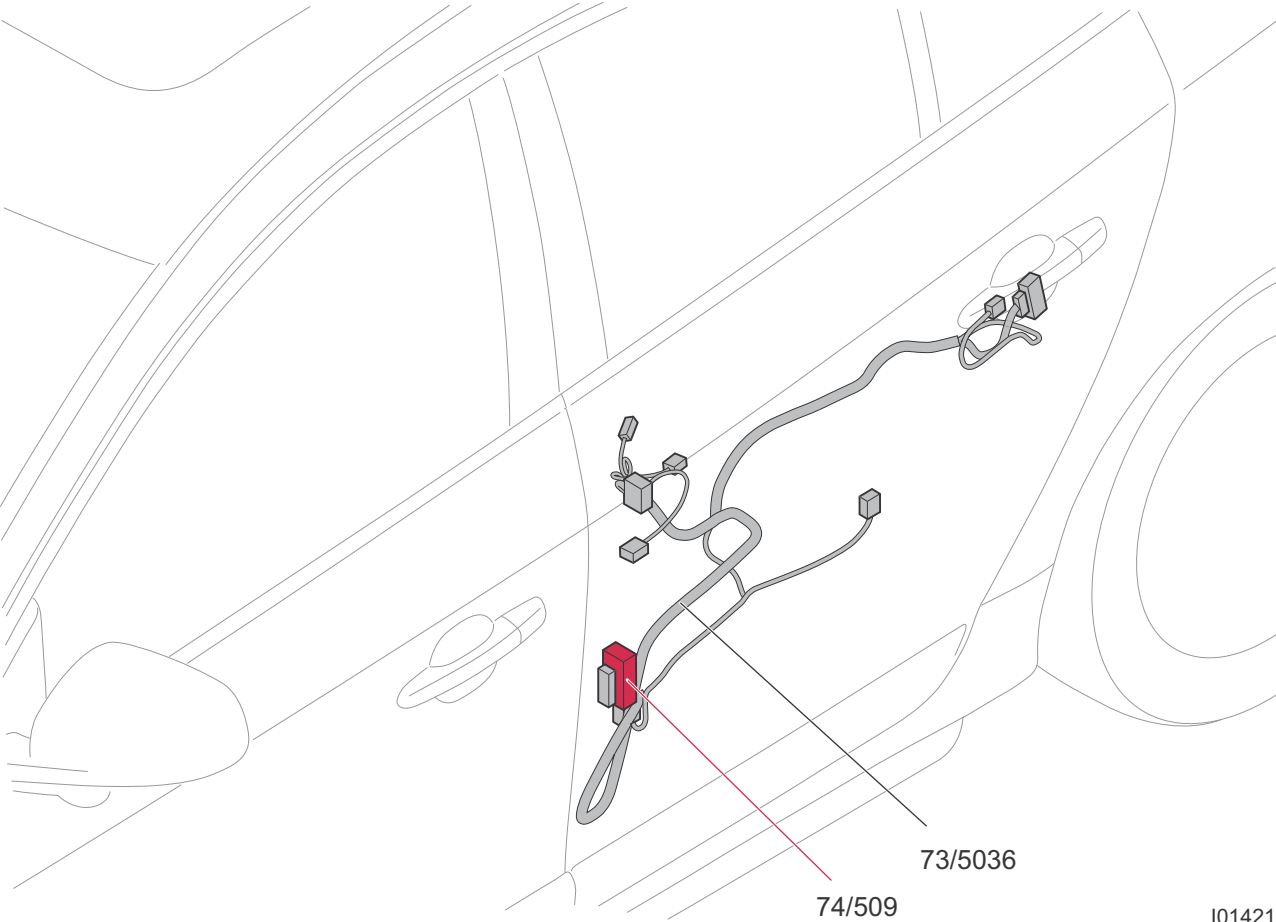


I01421

Cable harness routing in vehicle
Harness rear door, right

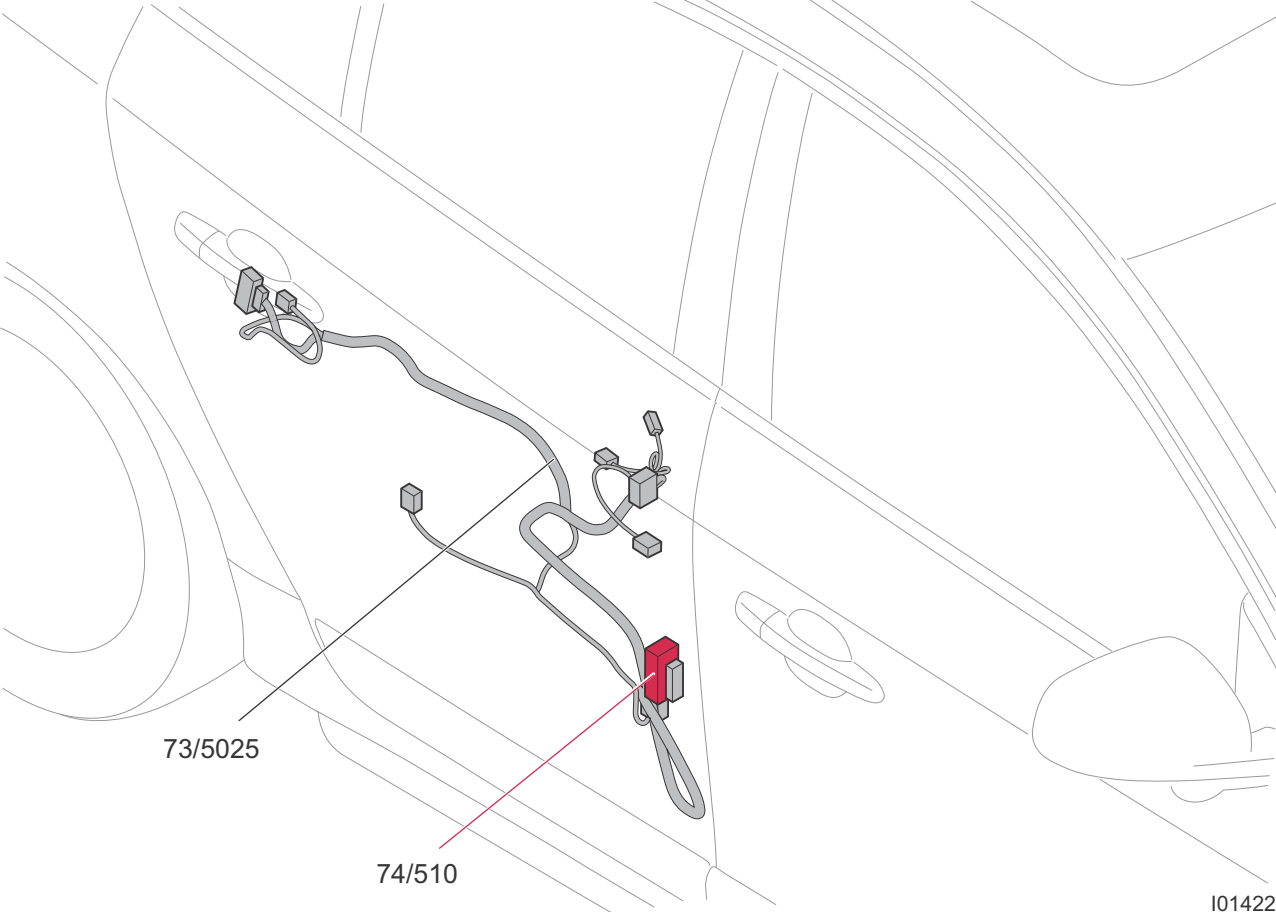


I01422


Cable harness routing in vehicle Trunk lid/tailgate harness, S60

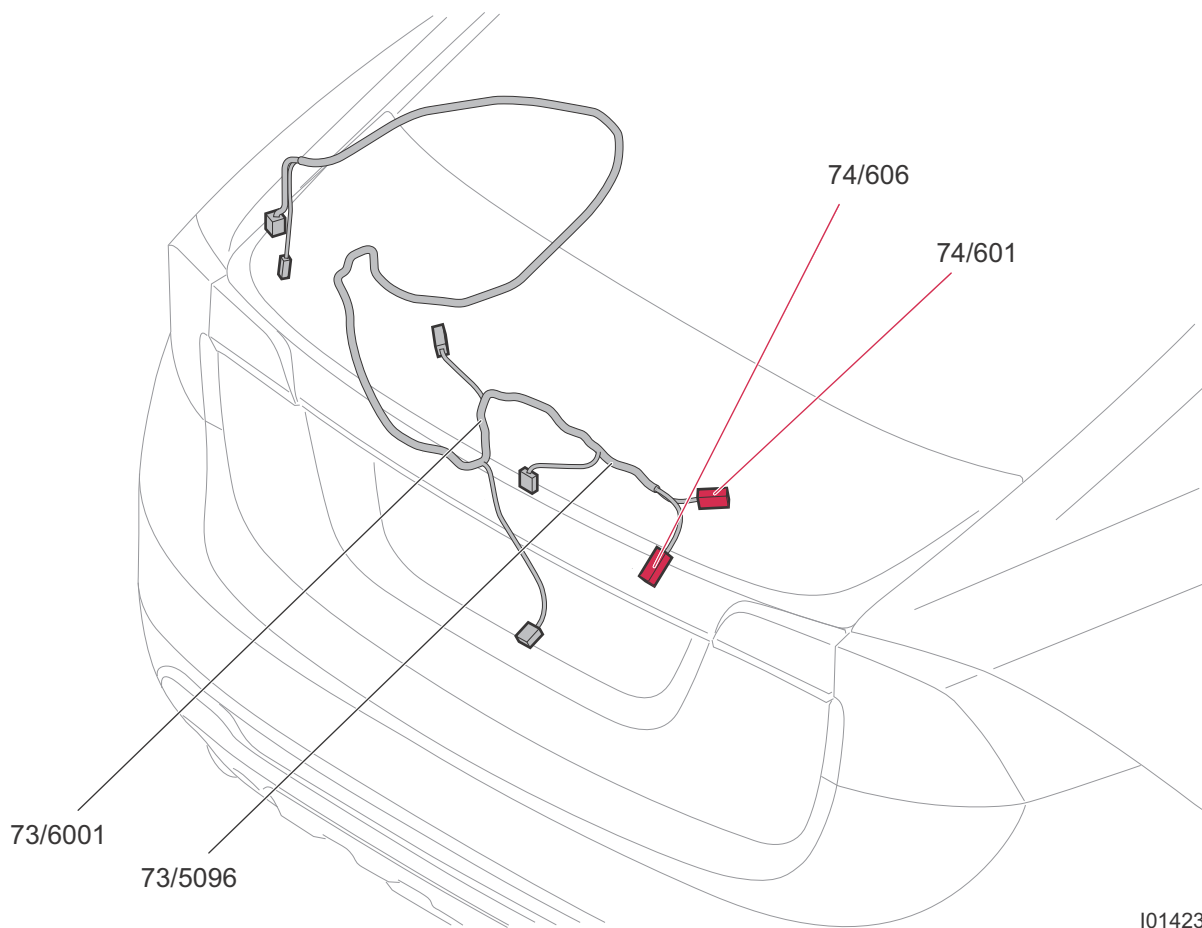

Cable harness routing in vehicle Trunk lid/tailgate harness, V60

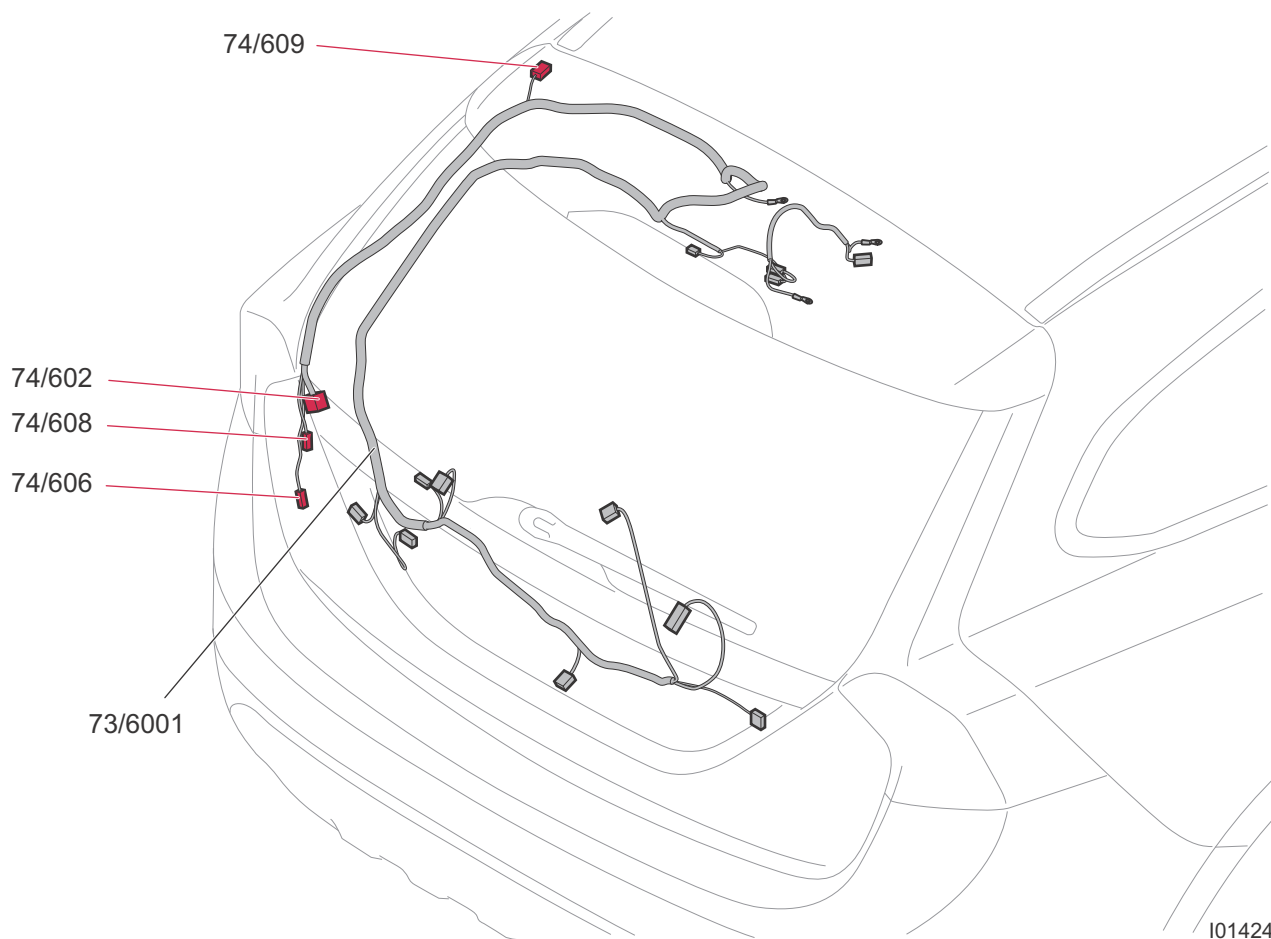

Cable harness routing in vehicle
Harnesses rear axle

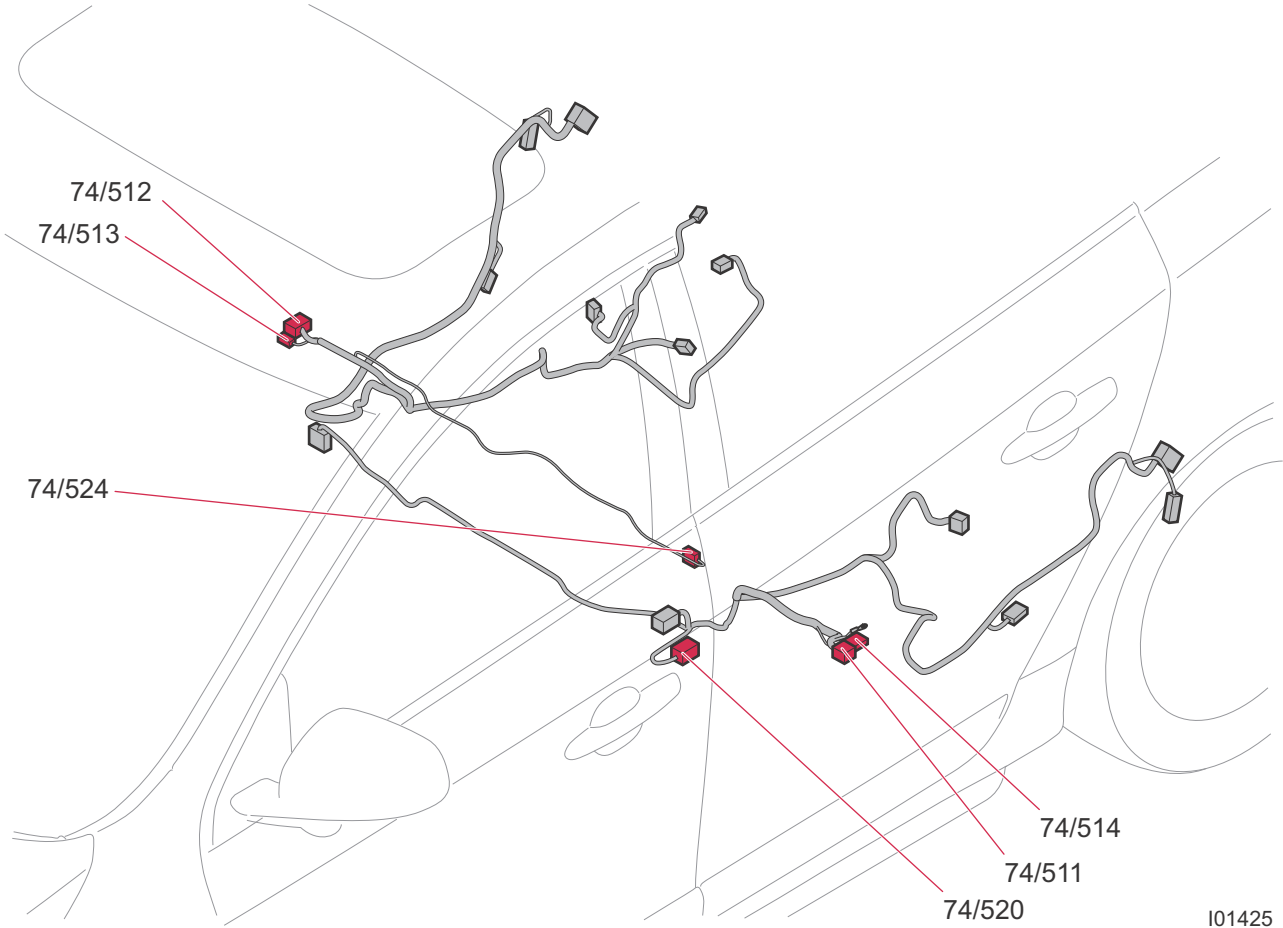


I01425


Component illustrations

1/1 - 2/64


1/1 Battery

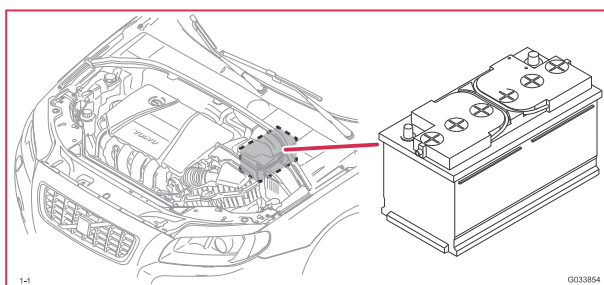


2/22 Relay, climate control system

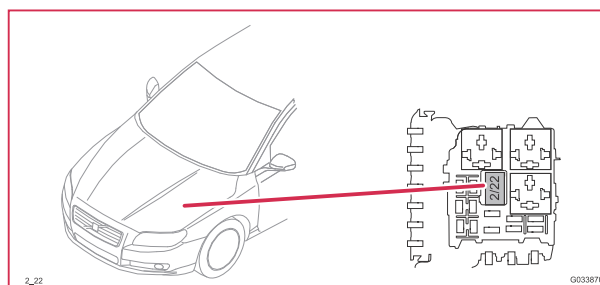


1/2 Secondary battery

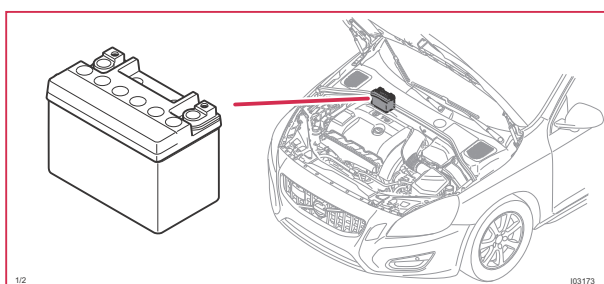


2/31 Relay, 15-feed

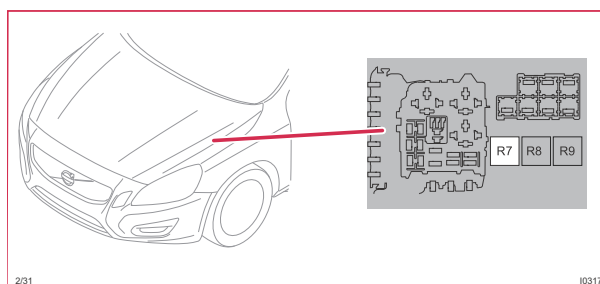


2/14 Relay, glow plug system

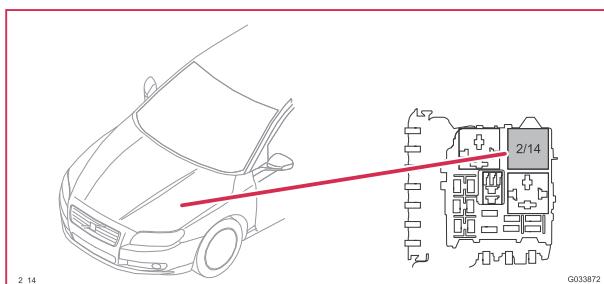


2/32 Main relay, engine management system

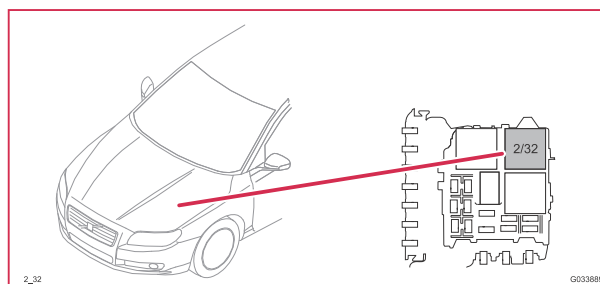


2/16 Relay, rear window wiper

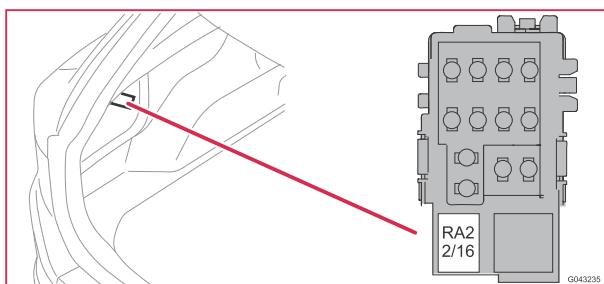


2/35 Starter motor relay

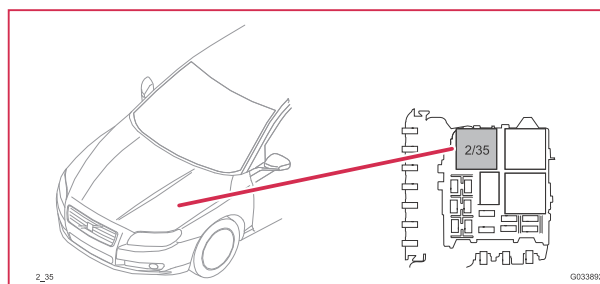

2/17 Relay, horn

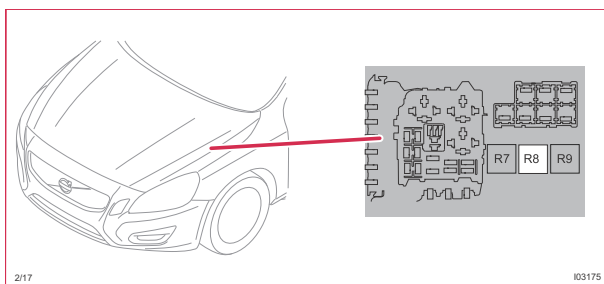


2/64 Relay auxiliary lights

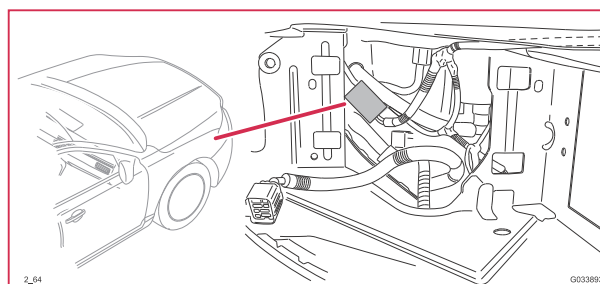


Component illustrations

2/82- 3/8


2/82 Relay, heated rear window

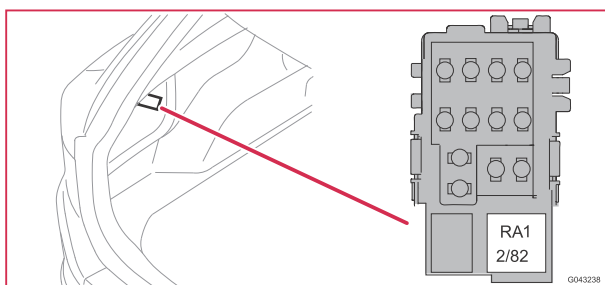


2/246 Secondary battery relay

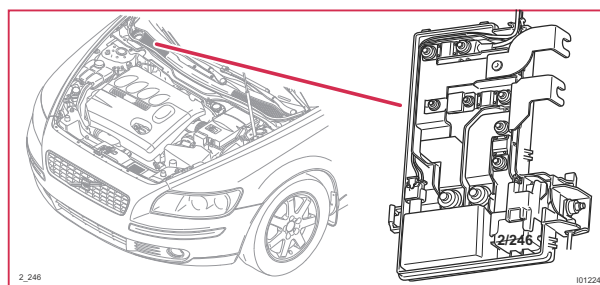


2/88 Relay, 15-feed rear

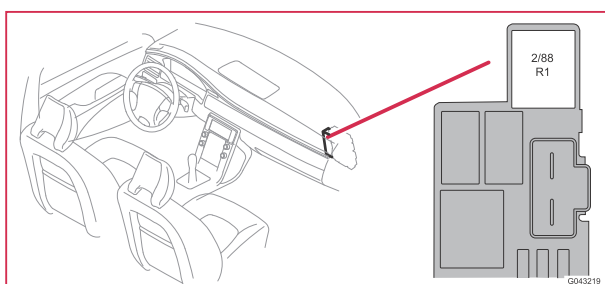


3/1 Ignition switch

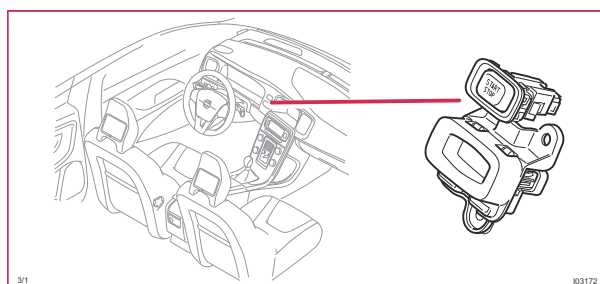


2/166 Battery relay

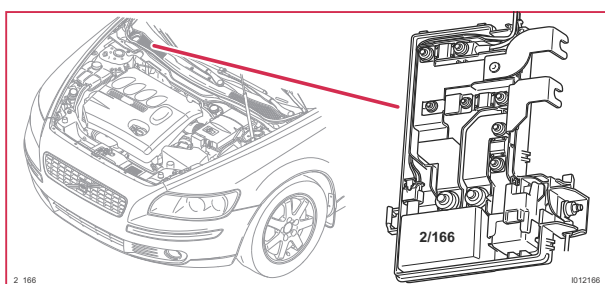


3/4 Steering wheel switch left (SWSL)

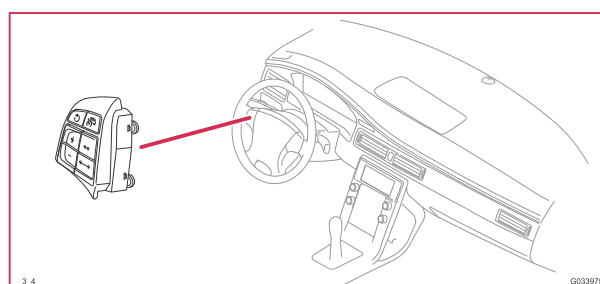


2/182 Relay, headlight washer motor

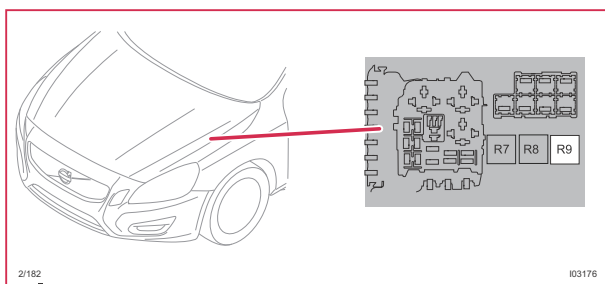


3/6 Hazard warning flasher switch

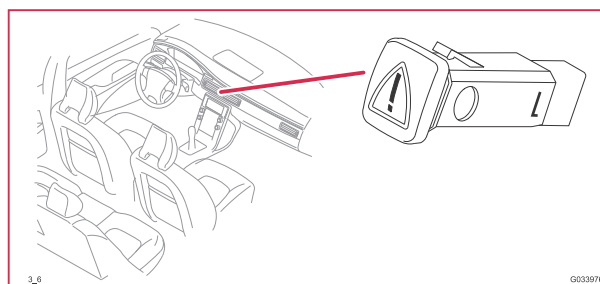

2/193 Relay, comfort functions

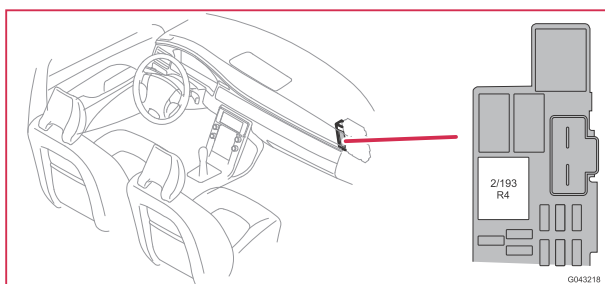


3/8 Switch, heated rear window/door mirrors

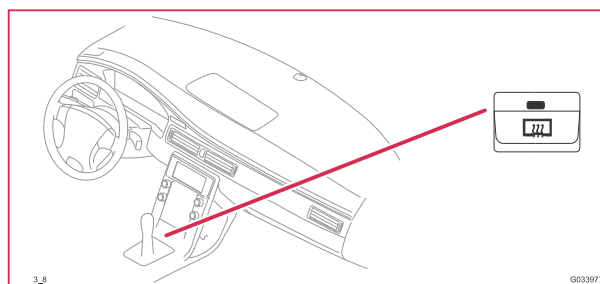


Component illustrations

3/9 - 3/37


3/9 Brake light contact

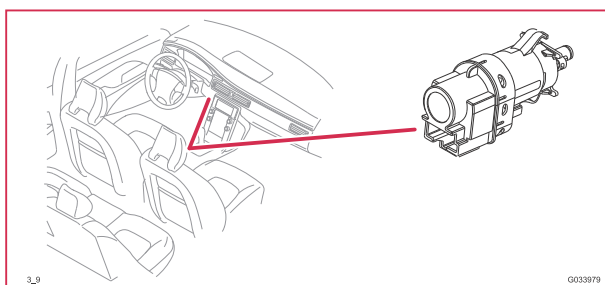


3/26 Switch unit, power driver's seat

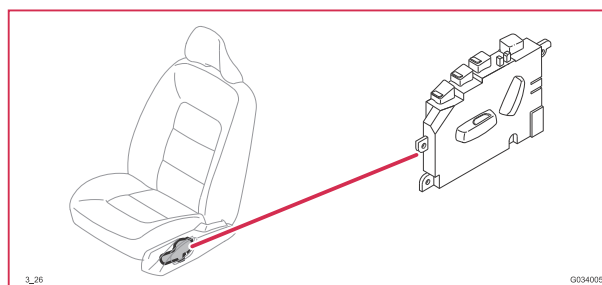


3/10 Reversing light contact

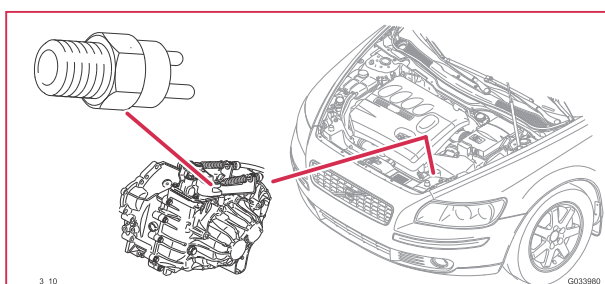


3/27 Switch unit, power passenger seat

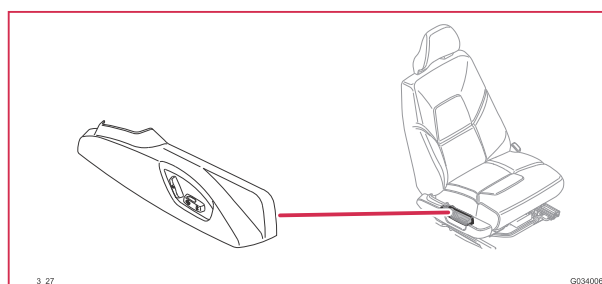


3/19 Rear left door power window switch

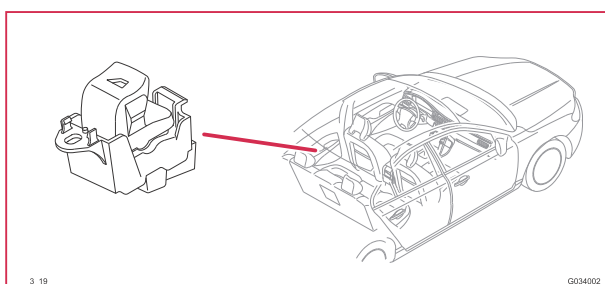


3/35 Trunk handle switch, S60

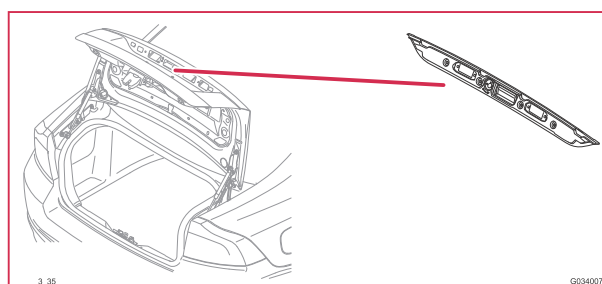


3/21 Rear right door power window switch

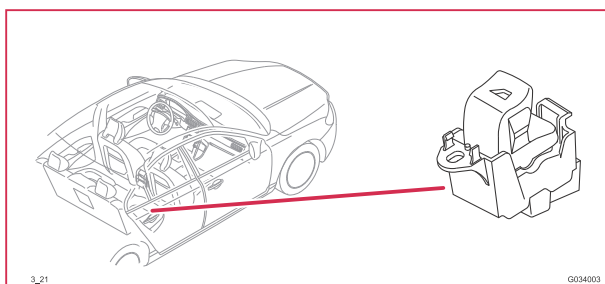


3/35 Trunk handle switch, V60

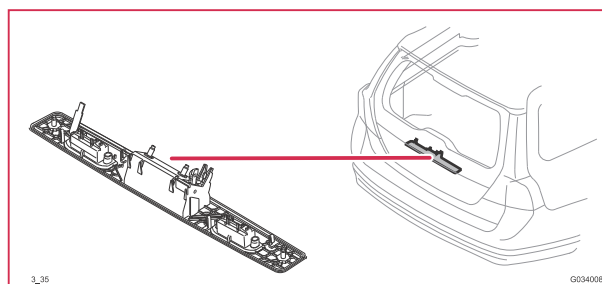

3/25 Power sunroof switch

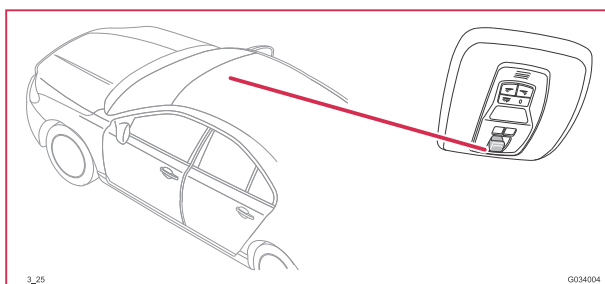


3/37 Horn contact

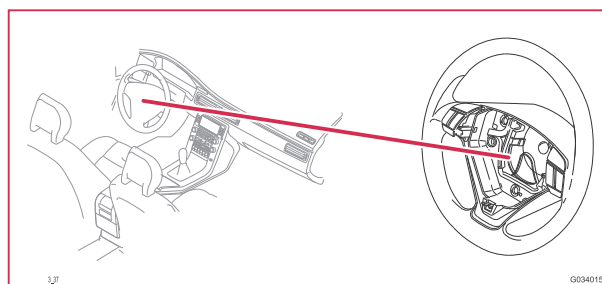


Component illustrations

3/60- 3/93


3/60 Auxiliary light switch

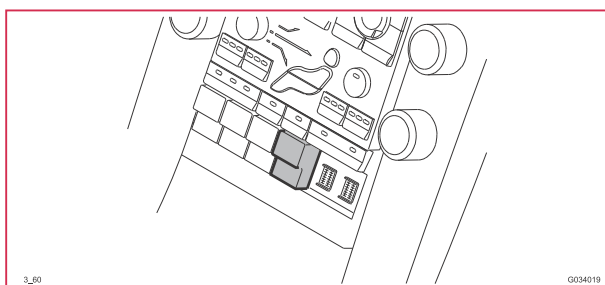


3/82 Switch, central locking system, passenger door

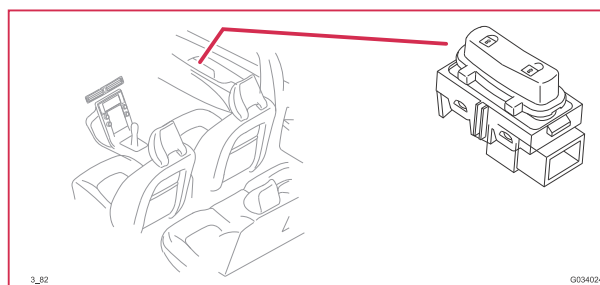


3/62 Hood alarm contact

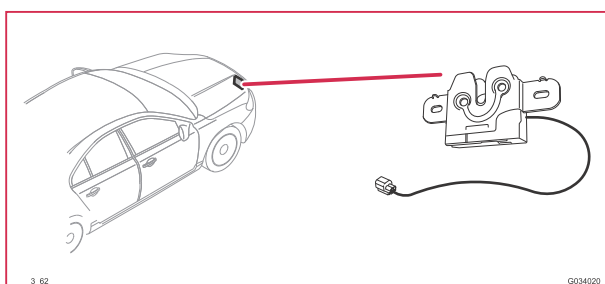


3/83 Switch, passenger door power window

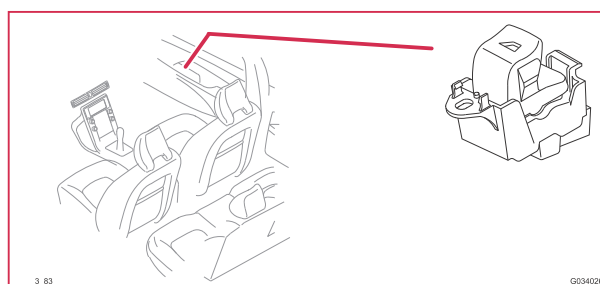


3/65 Switch, heated rear seat

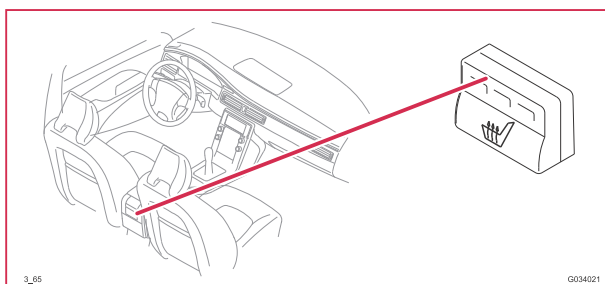


3/85 Power window switch, rear left door

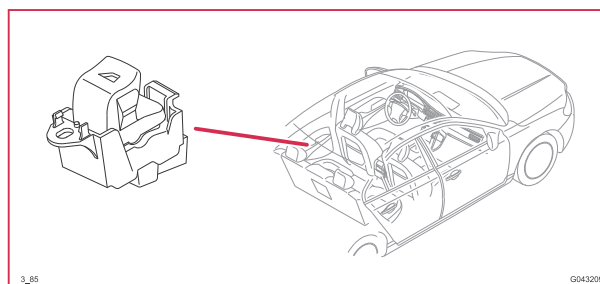


3/80 Switch, central locking system, driver's door

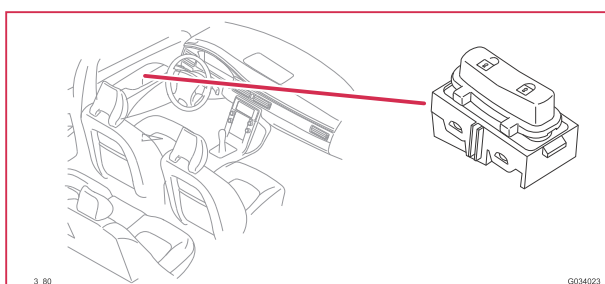


3/86 Power window switch, right rear door

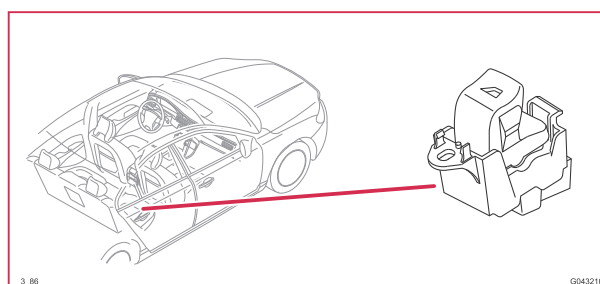

3/81 Power window switches, driver's door

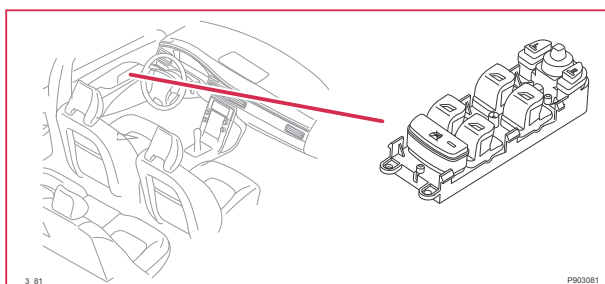


3/93 Belt buckle contact, driver's seat

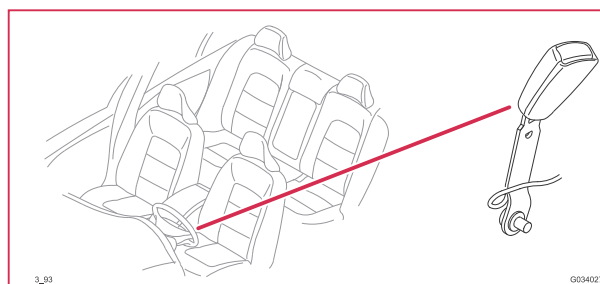


Component illustrations

3/94 - 3/130


3/94 Belt buckle contact, passenger seat

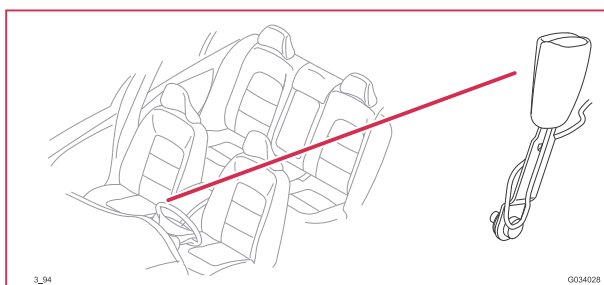


3/126 Driver door module (DDM)

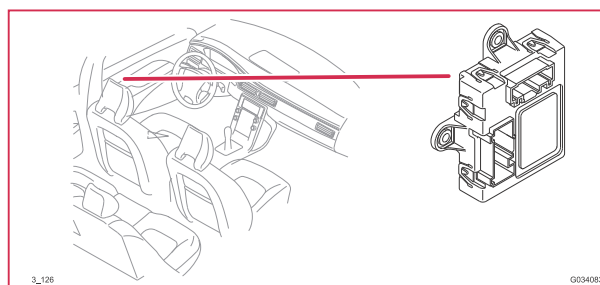


3/111 Light Switch Module (LSM)

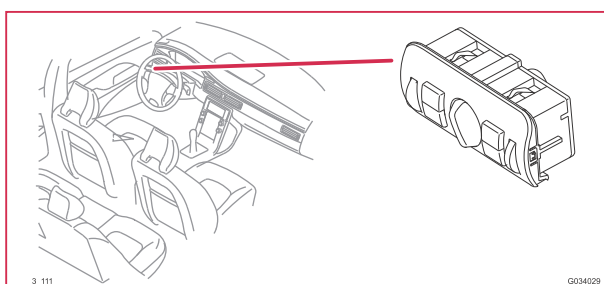


3/127 Passenger door module (PDM)

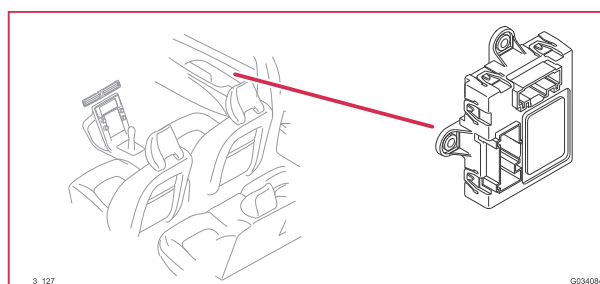


3/112 Climate control system

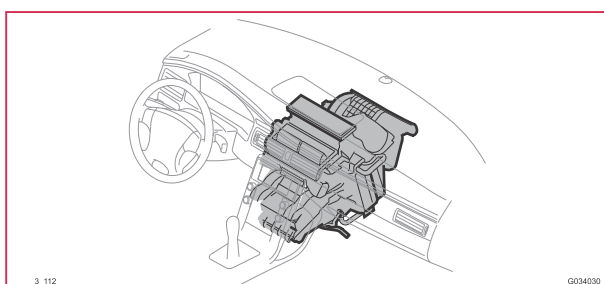


3/128 Left rear door module (LDM)

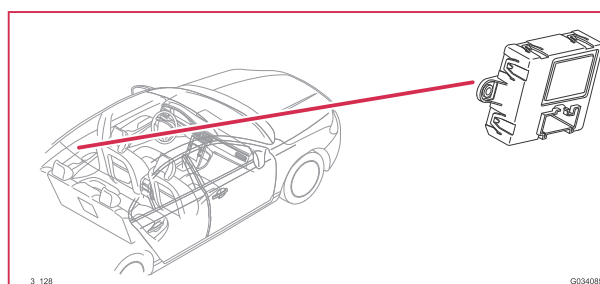


3/113 Rear adjustable head restraint relay

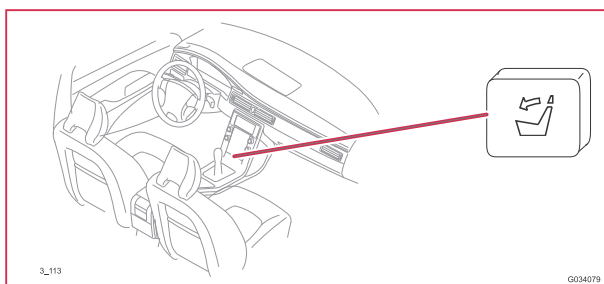


3/129 Right rear door module (RDM)

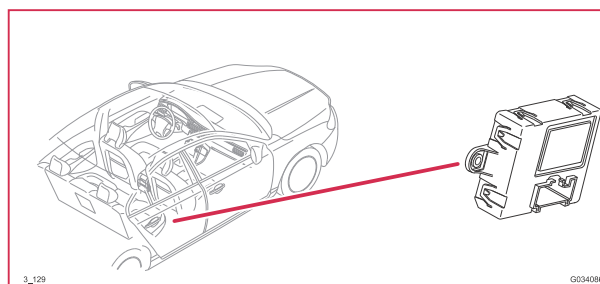

3/117 Switch unit, dome light

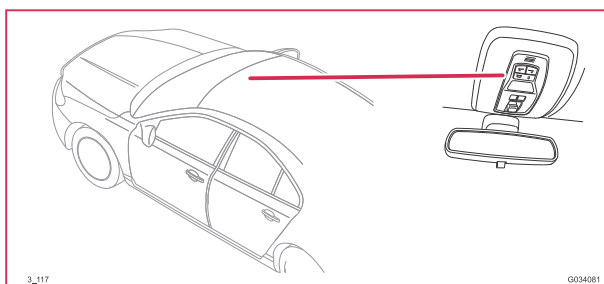


3/130 Steering Wheel Module (SWM)

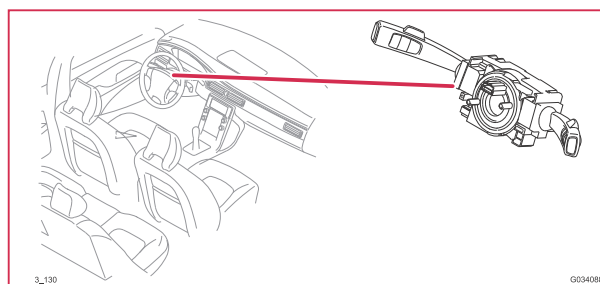


Component illustrations

3/131 - 3/225


3/131 Steering wheel switch right (SWSR)

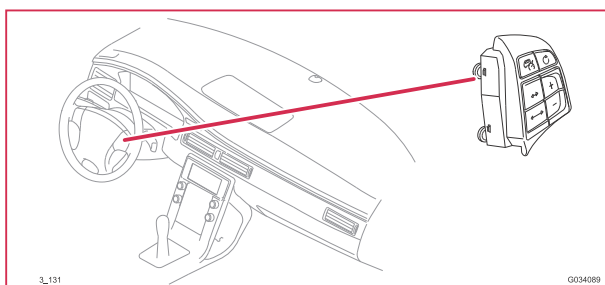


3/176 Power window switches, driver's door

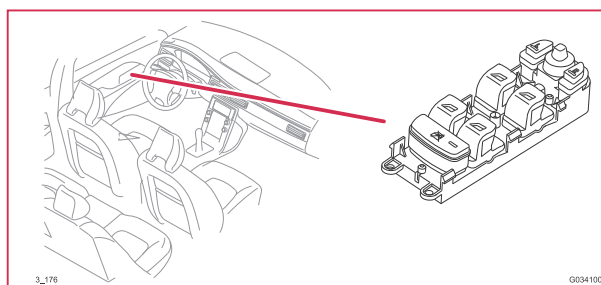


3/135 RTI switch

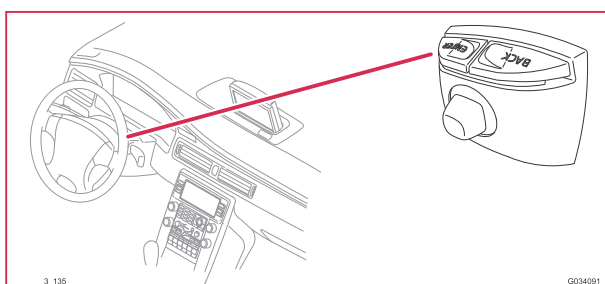


3/217 Belt buckle contact, rear left

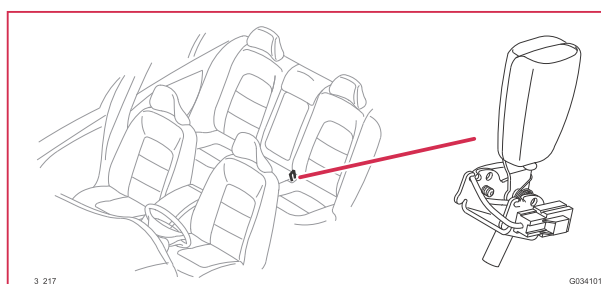


3/156 Gear Selector Module (GSM)

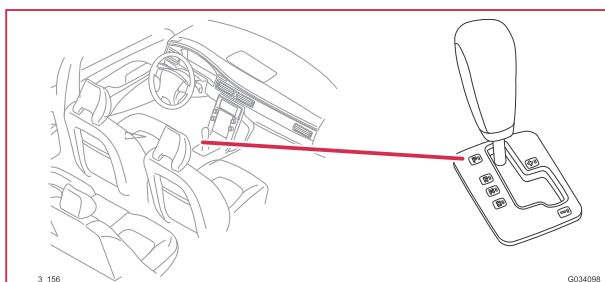


3/218 Belt buckle contact, center rear

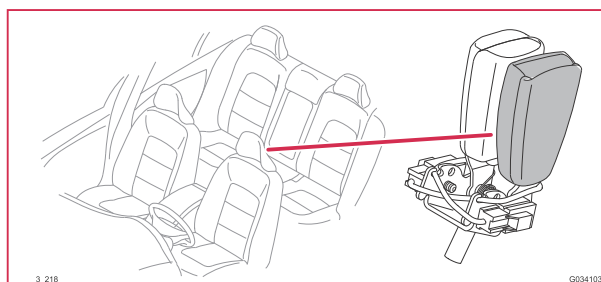


3/157 Switch, passenger side airbag

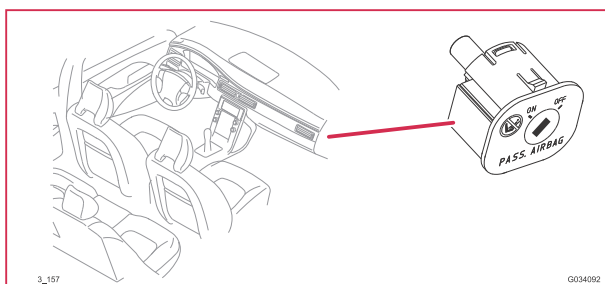


3/219 Belt buckle contact, rear right

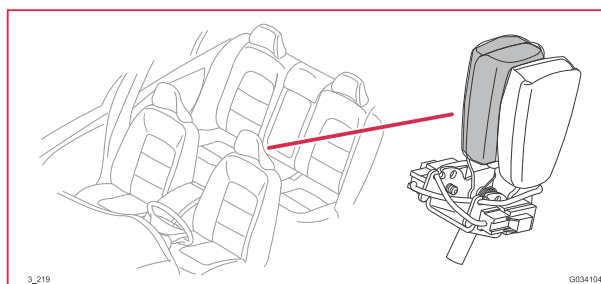

3/173 Switch, trunk lid private lock

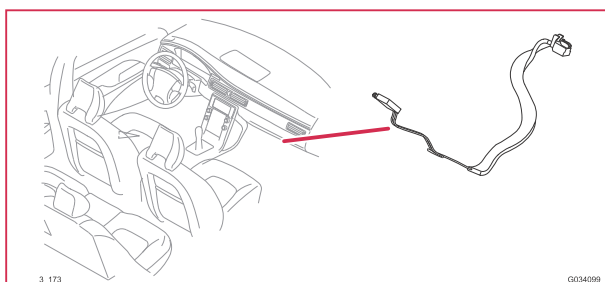


3/225 Continuously Controlled Damping (CCD)

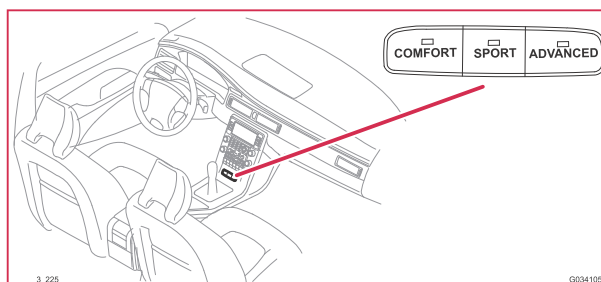


Component illustrations

3/255 - 3/281


3/255 Position sensor, driver's seat

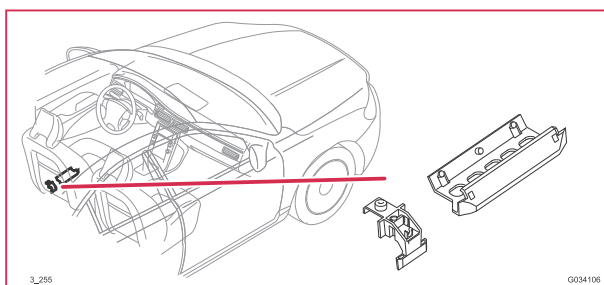


3/273 Lock contact, LH front door

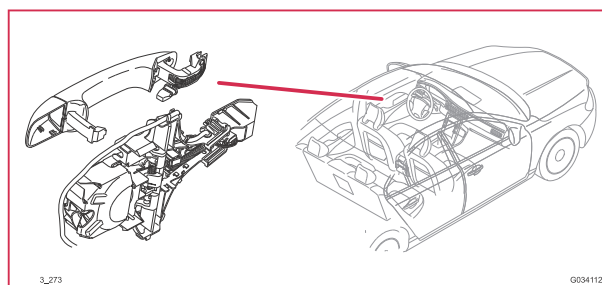


3/256 Position sensor, passenger seat

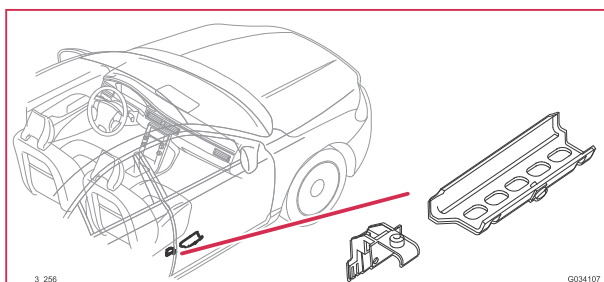


3/274 Lock contact, RH front door

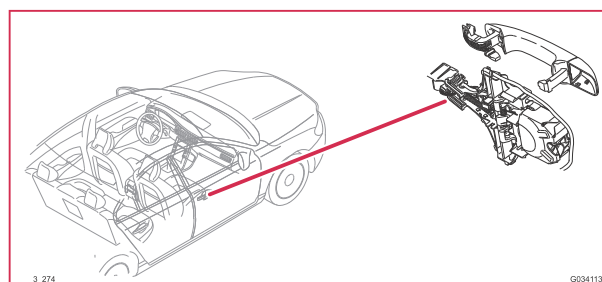


3/267 Switch unit, telematics

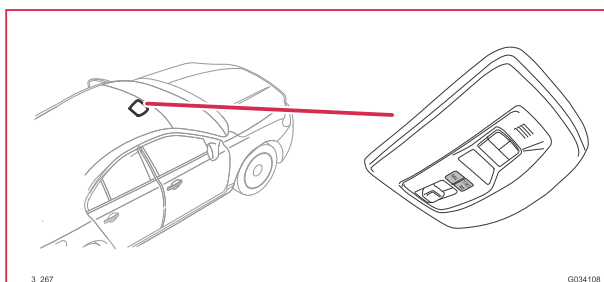


3/275 Lock contact, left rear door

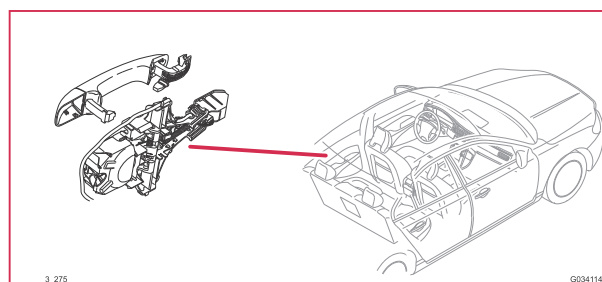


3/271 Contact, immobilizer, clutch pedal

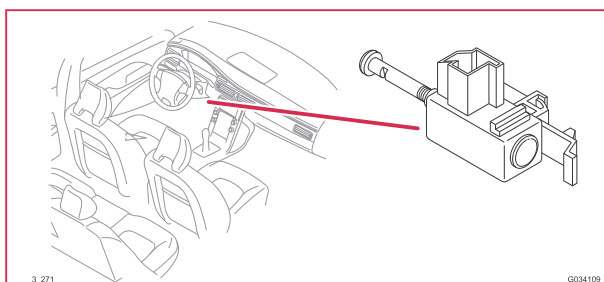


3/276 Lock contact, RH rear door

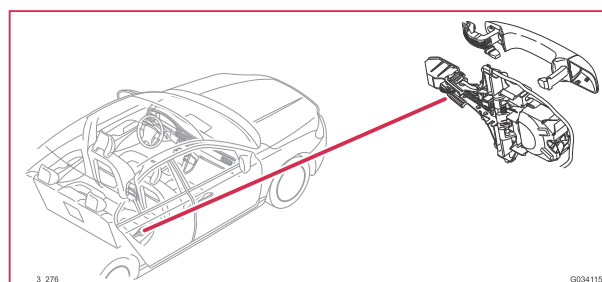

3/272 Switch, parking brake

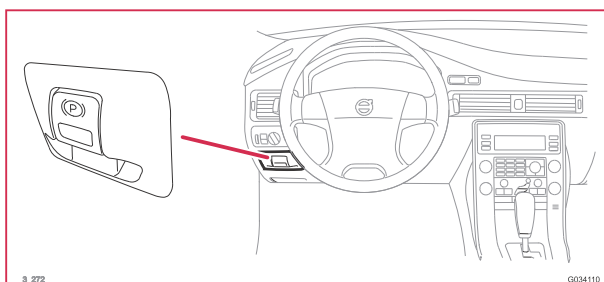


3/281 Infotainment control module (ICM)

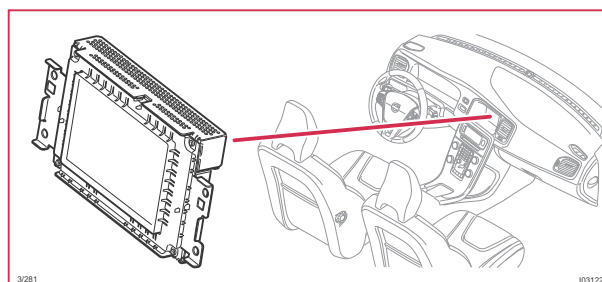


Component illustrations

3/282 - 4/33


3/282 Switch indicator 1st gear

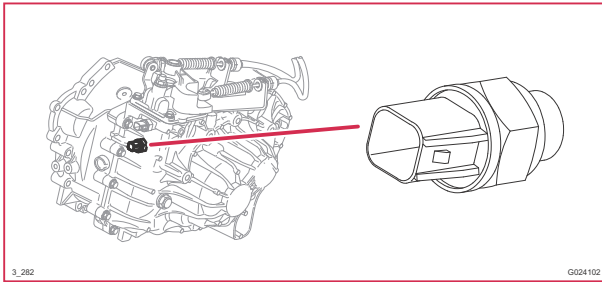


4/9 Supplemental Restraint System (SRS)

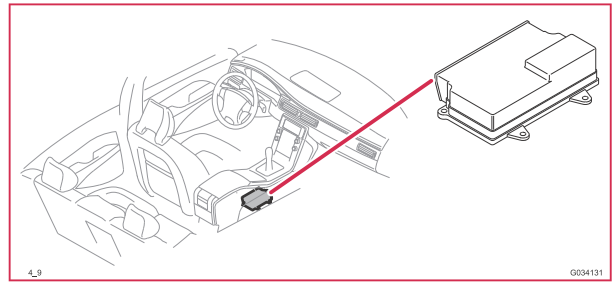


3/284 Diagnostic contact, brake light

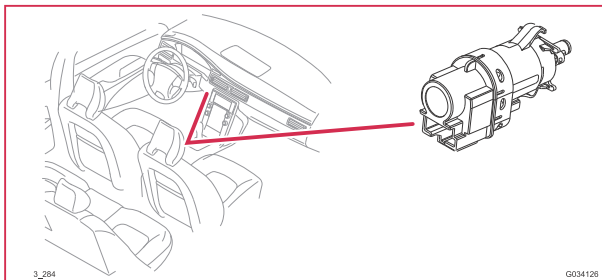


4/16 Brake Control Module (BCM)

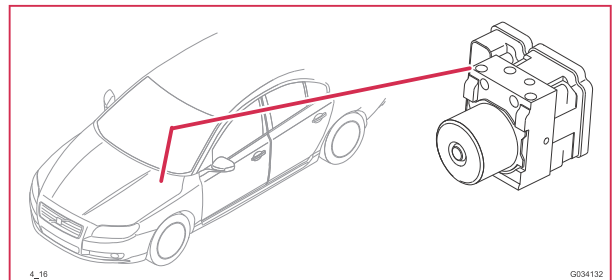


3/293 Handsfree control panel cellular phone

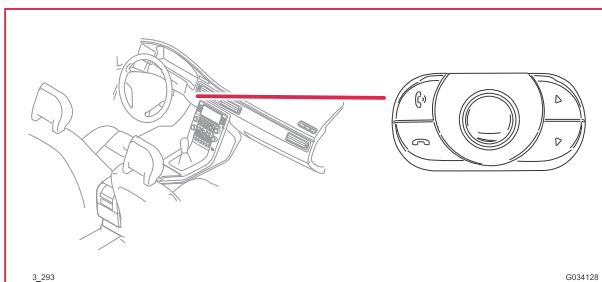


4/28 Transmission Control Module (TCM), TF-80SC

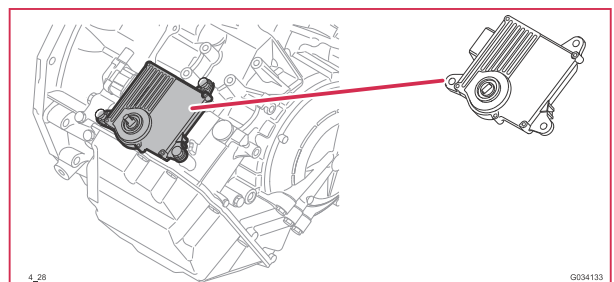


4/6 Climate Control Module (CCM)

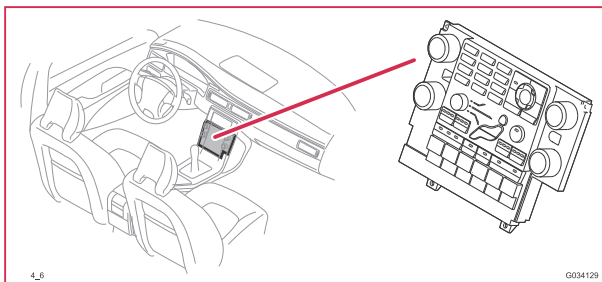


4/28 Transmission Control Module (TCM), MPS6

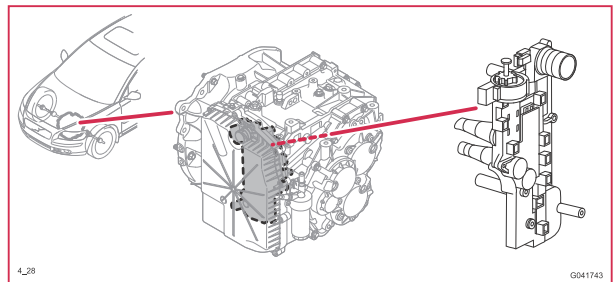

4/7 Combustion Preheater Module (CPM)

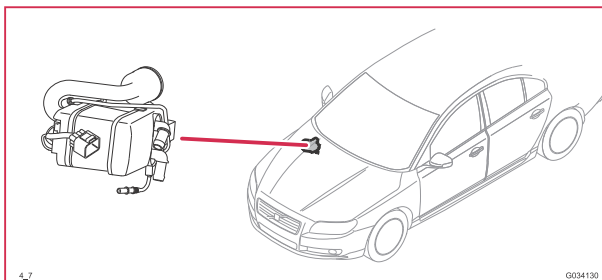


4/33 Sunroof control module

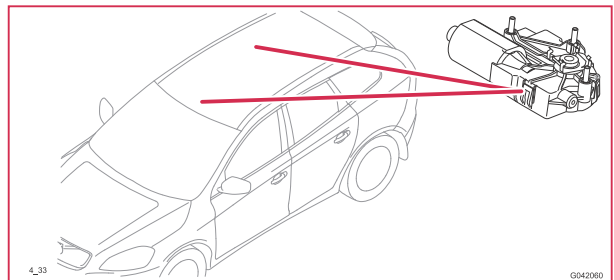


Component illustrations

4/46 - 4/56


**4/46 Engine Control Module (ECM), 4-Cyl.
Turbo 1,6L**

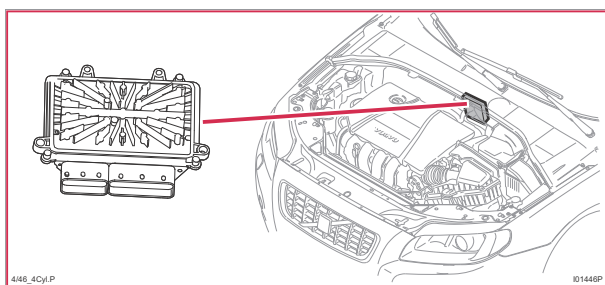


4/46 Engine Control Module (ECM), 6-Cyl.

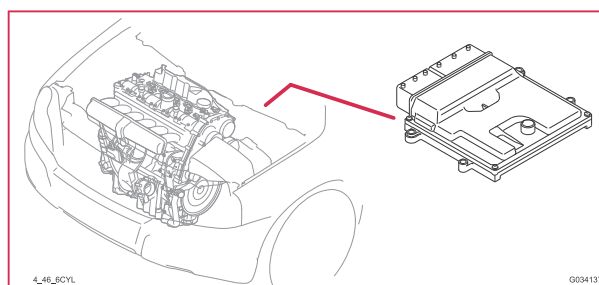


**4/46 Engine Control Module (ECM), 4-Cyl.
Turbo 2,0L**

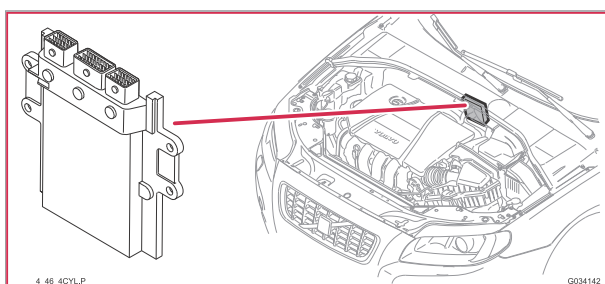


4/52 Power Seat Module (PSM)

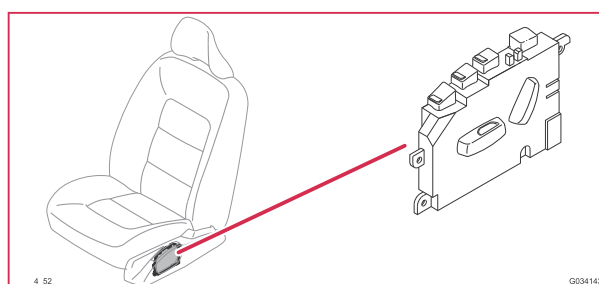


**4/46 Engine Control Module (ECM), 4-Cyl.
Diesel**

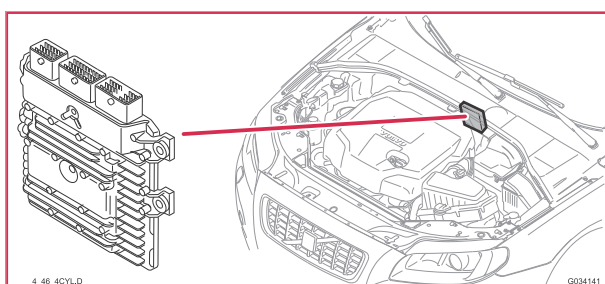


4/56 Central Electronic Module (CEM)

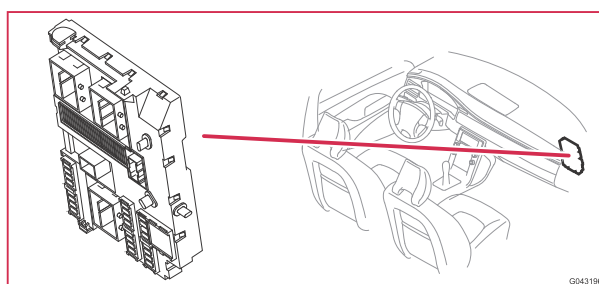


**4/46 Engine Control Module (ECM), 5-Cyl.
Turbo**

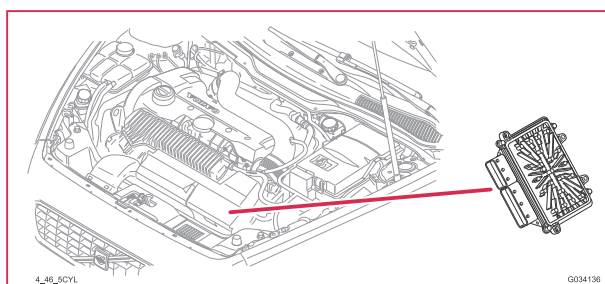


4/56:C1 Central Electronic Module (CEM)

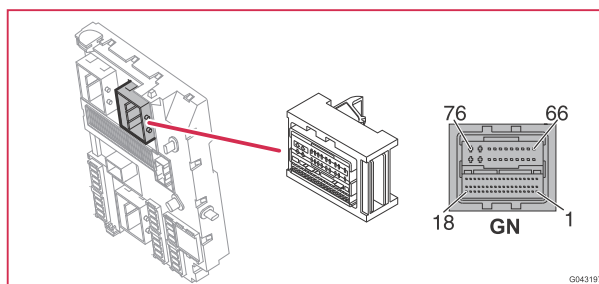

**4/46 Engine Control Module (ECM), 5-Cyl.
Diesel**

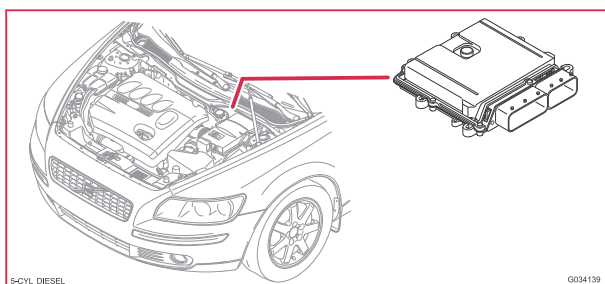


4/56:C2 Central Electronic Module (CEM)

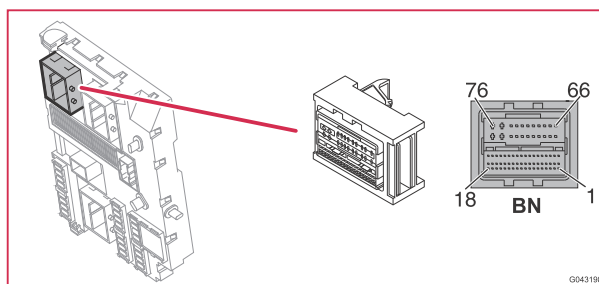


Component illustrations

4/56 - 4/86


4/56:C3 Central Electronic Module (CEM)

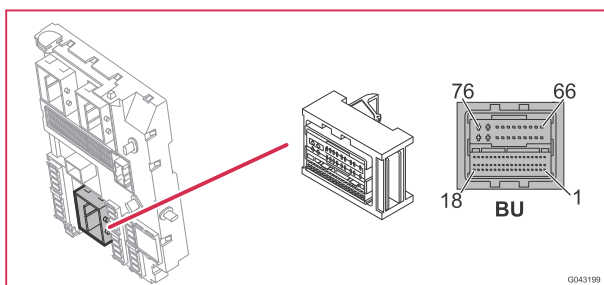


4/80 Forward Sensing Module (FSM)

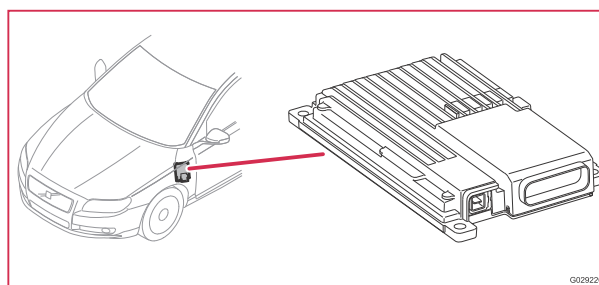


4/56:C4 Central Electronic Module (CEM)

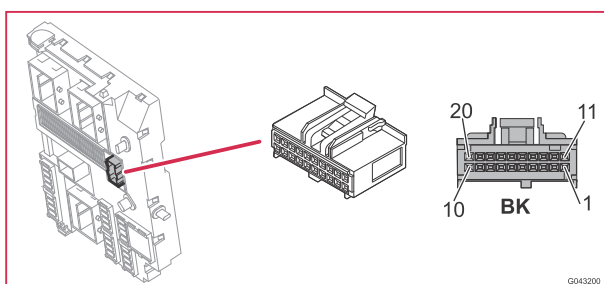


4/82 Differential Electronic Module (DEM)

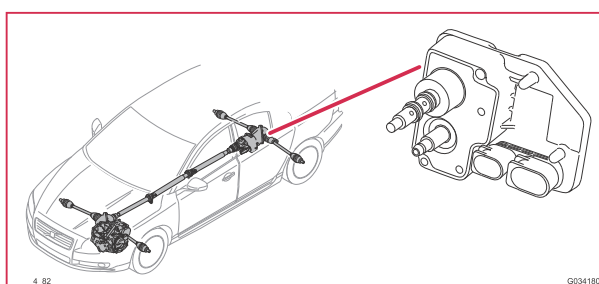


4/56:C5 Central Electronic Module (CEM)

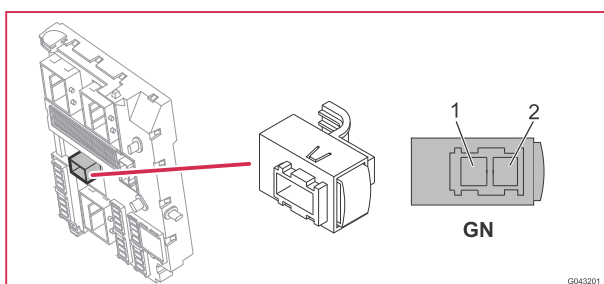


4/83 Fuel pump control module

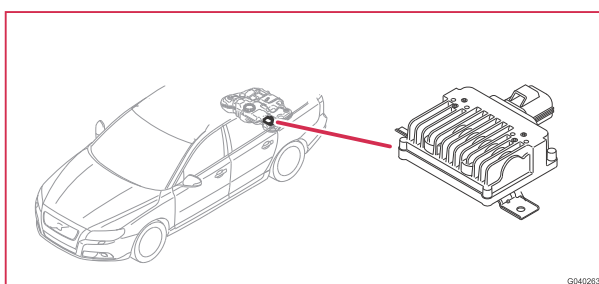


4/68 Steering Wheel Angle Sensor Module (SAS)

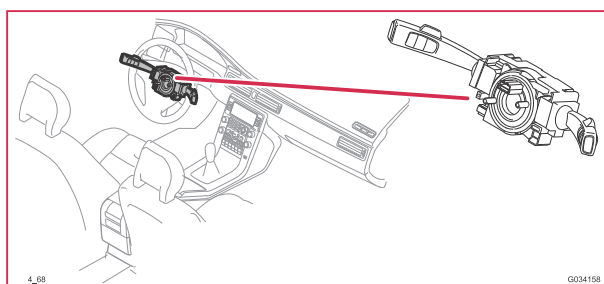


4/84 Suspension Module (SUM)

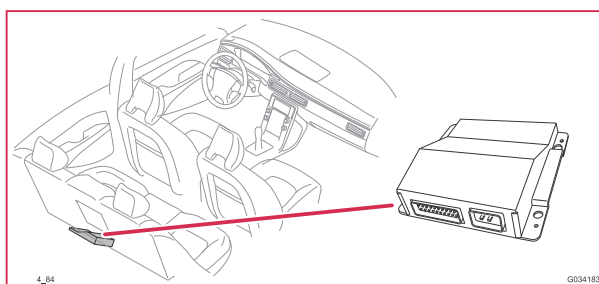

4/71 Cooling fan control module

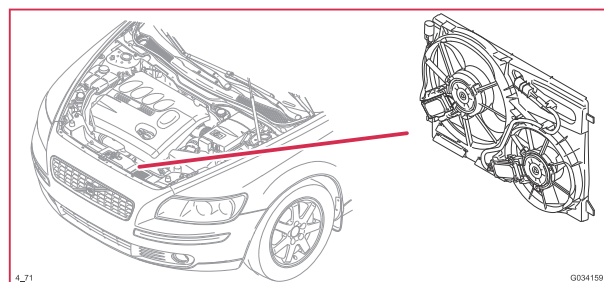


4/86 Parking Assistance Module (PAM)

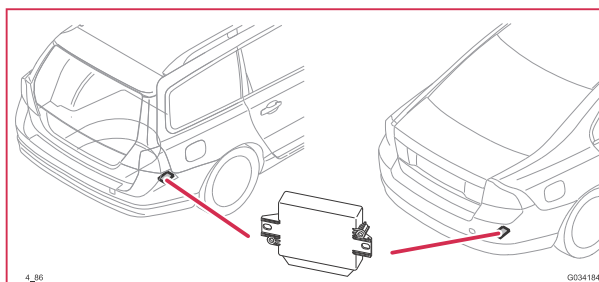


Component illustrations

4/93 - 4/125


4/93 Keyless vehicle module (KVM)

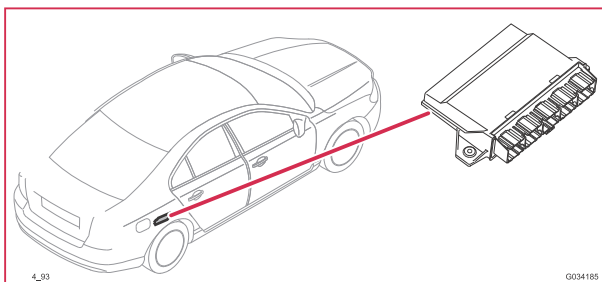


4/115 Park Brake Module (PBM)

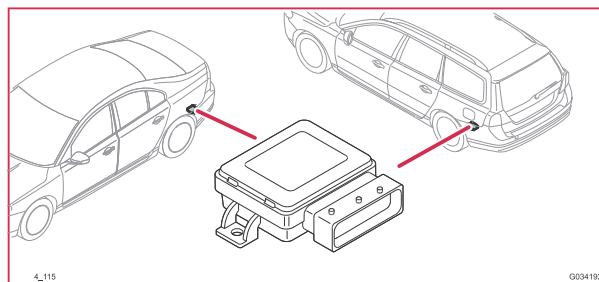


4/99 Control module speed dependent power steering

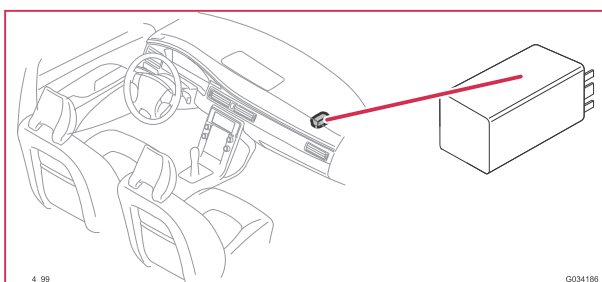


4/119 Remote Keyless Entry (TRX)

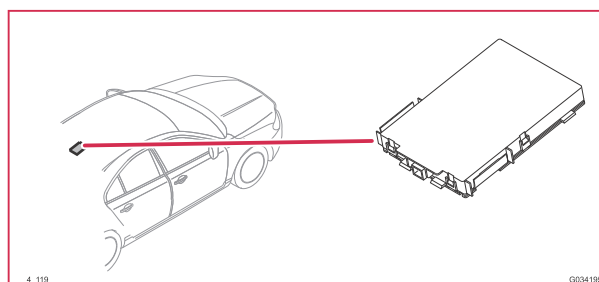


4/102 Steering column lock module (SCL)

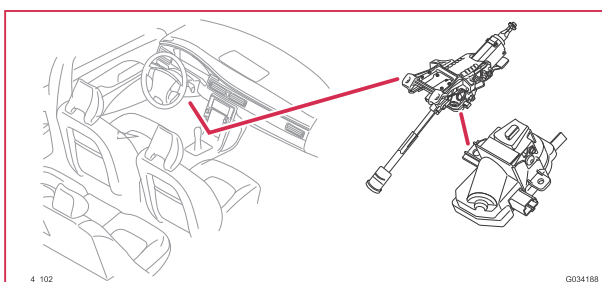


4/119.2 Signal receiver (LRX)

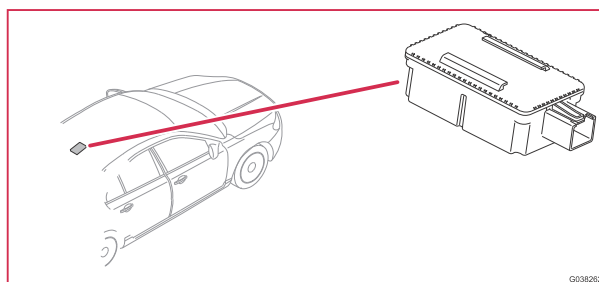


4/109 Glow plug control module

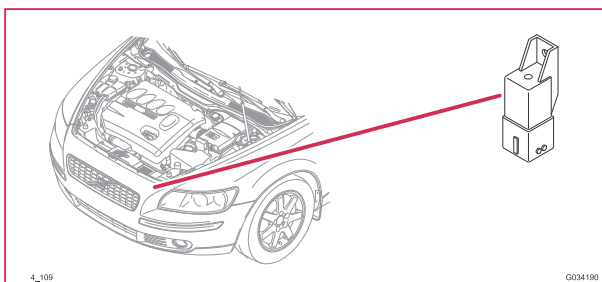


4/120 Parking Assistance Camera (PAC)

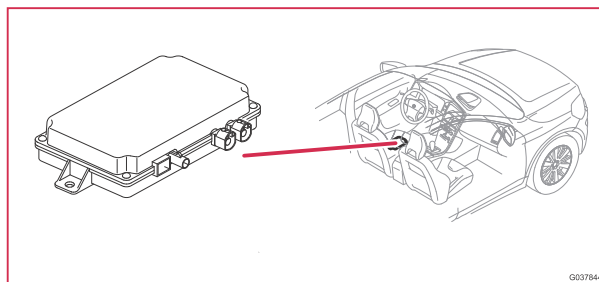

4/110 Trailer Module (TRM)

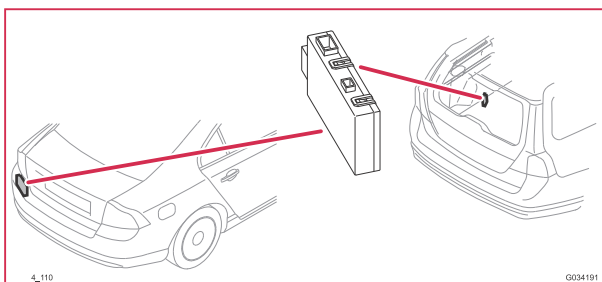


4/125 Closing velocity module (CVM)

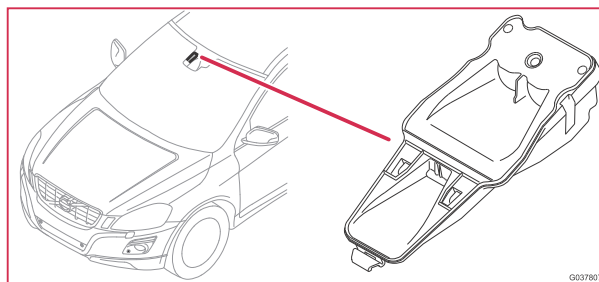


Component illustrations

4/136 - 6/20


4/136 Active Grillshutter Module (AGM)

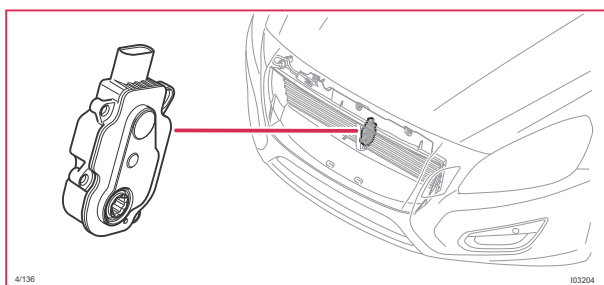


6/16 Driver seat motor, backrest angle

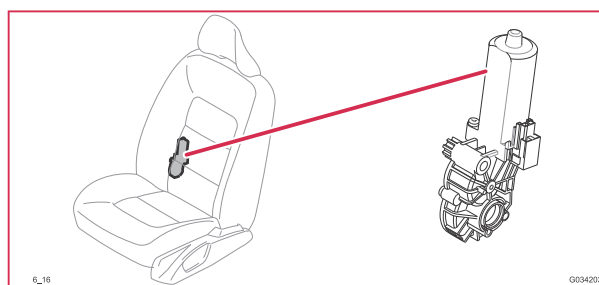


5/1 Driver Information Module (DIM)

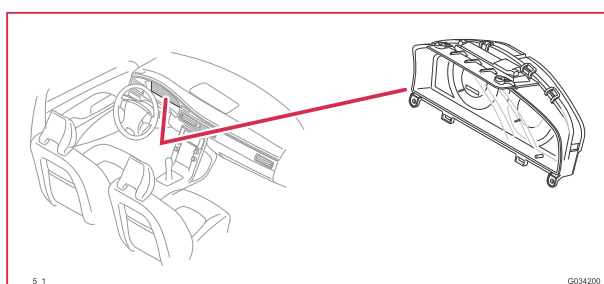


6/17 Driver seat motor, up/down front edge

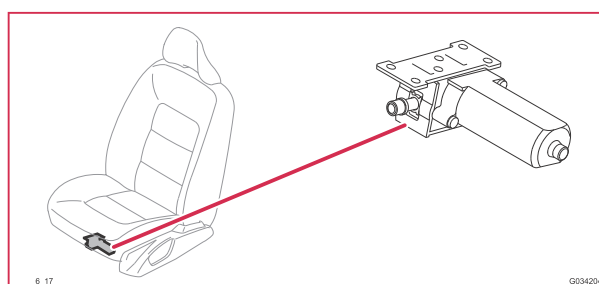


6/1 Wiper motor module (WMM)

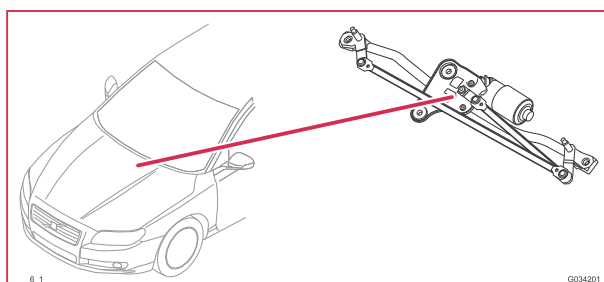


6/18 Driver seat motor, up/down rear edge

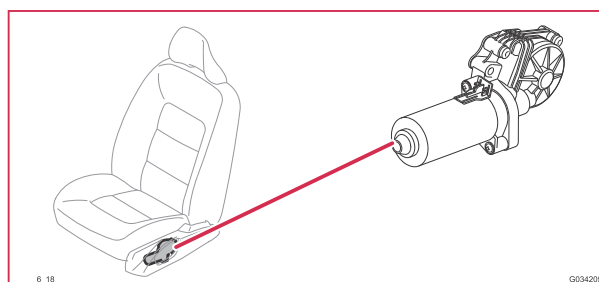


6/8 Lock motor central locking, trunk lid/tailgate, S60

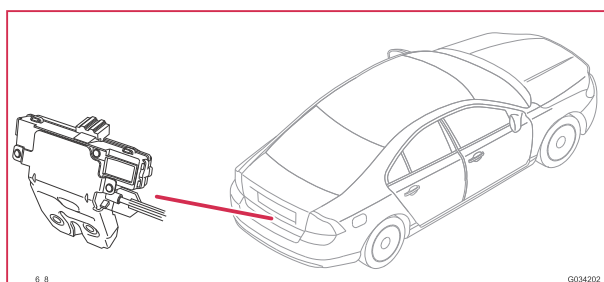


6/19 Driver seat motor, forward/backward

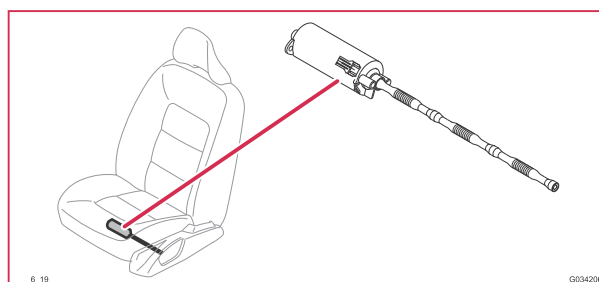

6/8 Lock motor central locking, trunk lid/tailgate, V60

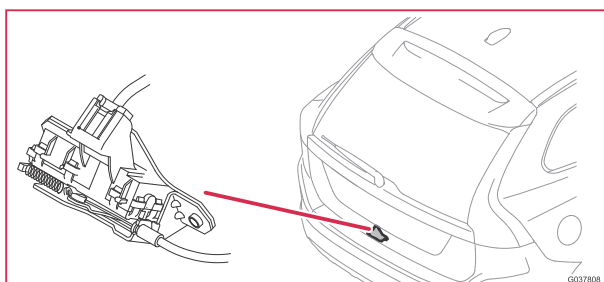


6/20 Passenger seat motor, forward/backward

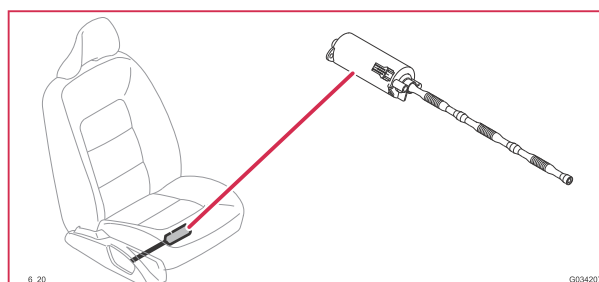


Component illustrations

6/21 - 6/36


6/21 Passenger seat motor, up/down front edge

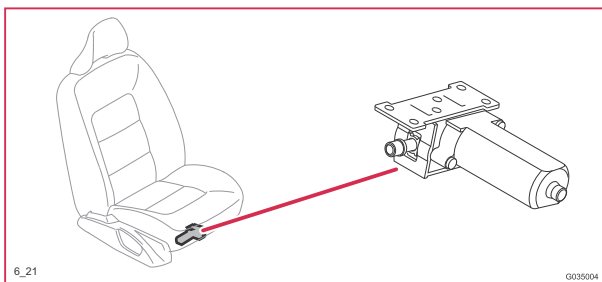


6/28 Motor, passenger compartment fan

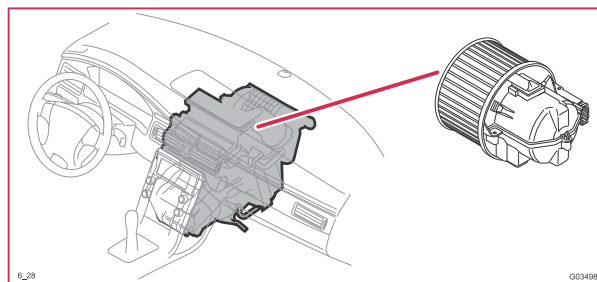


6/22 Passenger seat motor, up/down rear edge

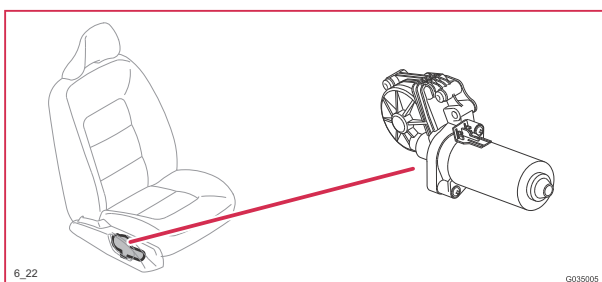


6/32 Rear window wiper motor, V60

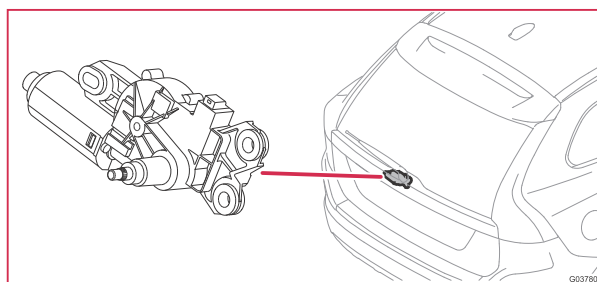


6/23 Passenger seat motor, backrest angle

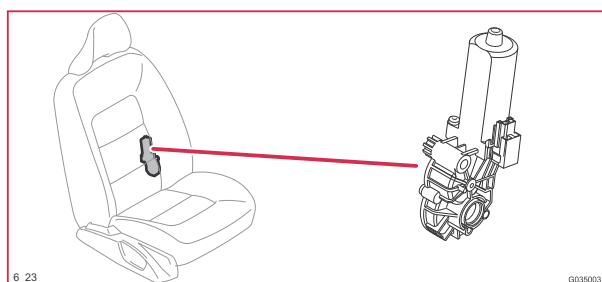


6/33 Fuel pump

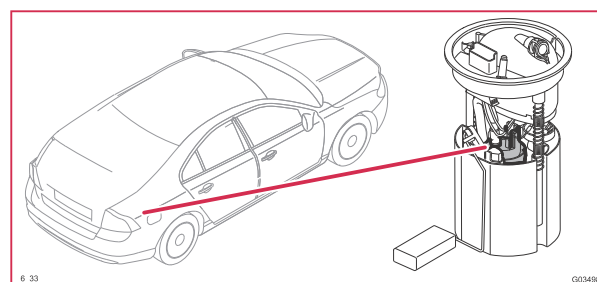


6/25 Starter motor

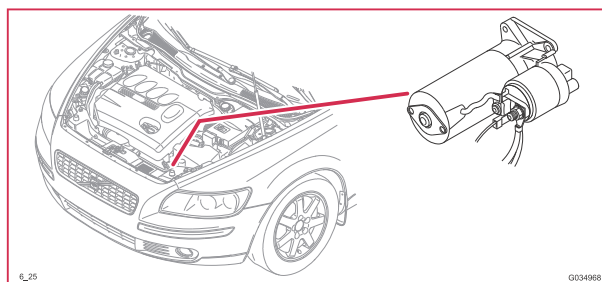


6/35 Fuel pump, auxiliary heater

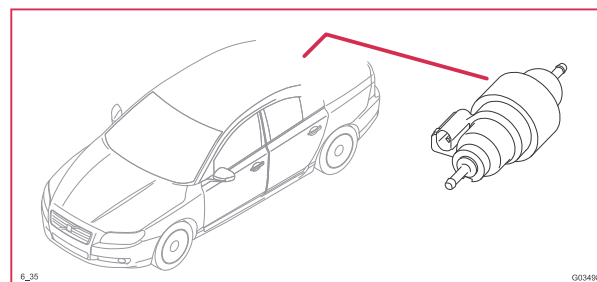

6/26 Alternator Control Module (ACM)

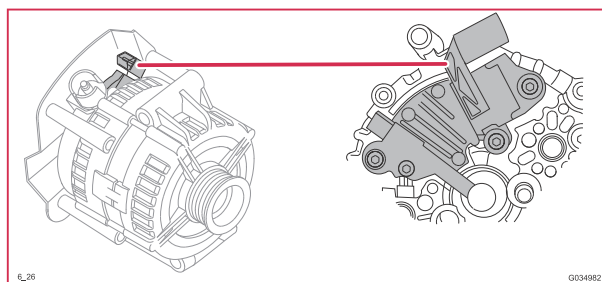


6/36 Lock motor, central locking, LH front door

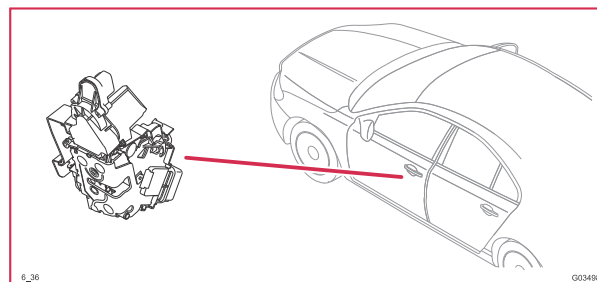


Component illustrations

6/37 - 6/60


6/37 Lock motor, fuel filler cover

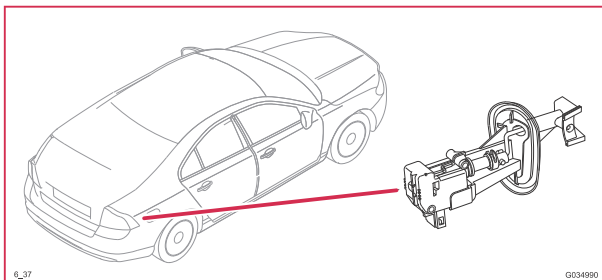


6/56 Lock motor, central locking, RH rear door

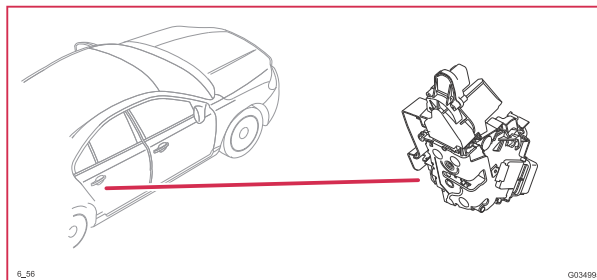


6/38 Left-hand headlight level adjustment motor

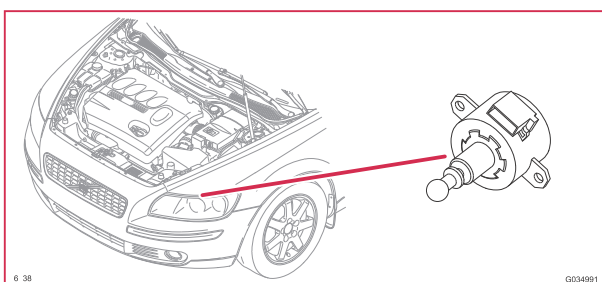


6/57 Lock motor, central locking, LH rear door

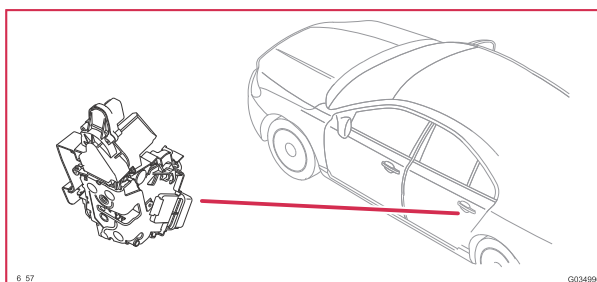


6/39 Right-hand headlight level adjustment motor

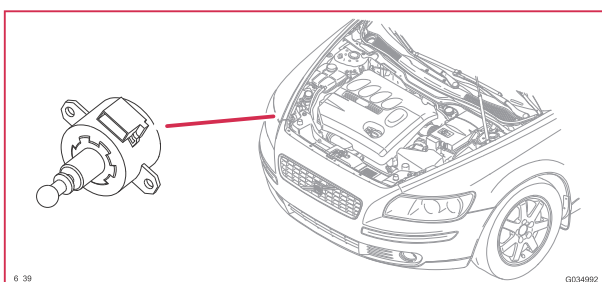


6/58 Motor, front driver's door power window

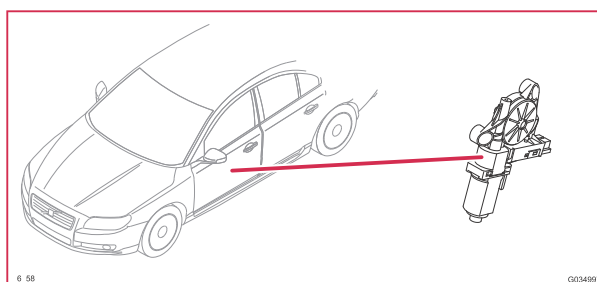


6/48 Damper Motor Module (DMM), recirculation

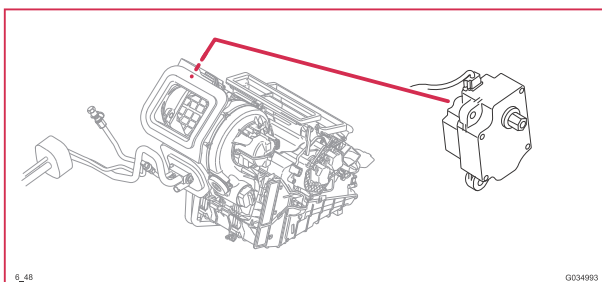


6/59 Motor, rear left power window

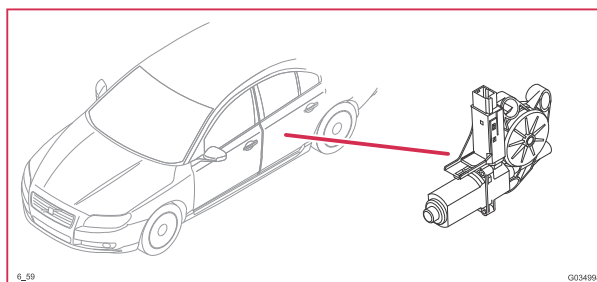

6/55 Lock motor, central locking, RH front door

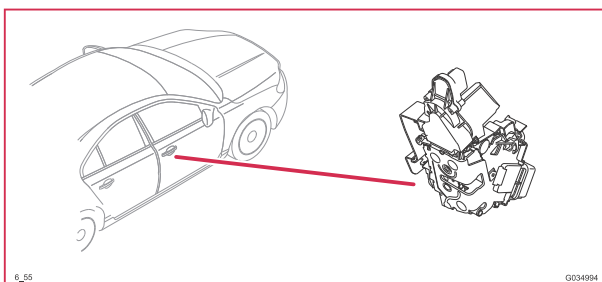


6/60 Motor, front passenger door power window

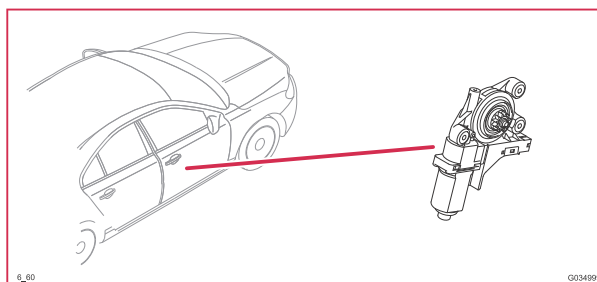


Component illustrations

6/61 - 6/103


6/61 Motor, rear right power window

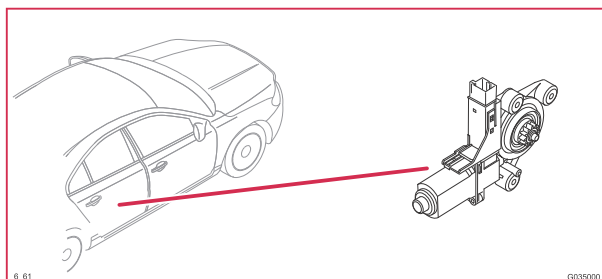


6/73 Coolant pump

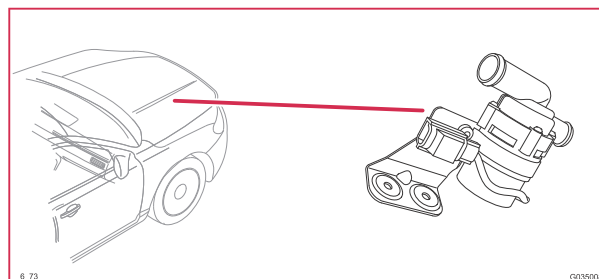


6/62 Left-hand power door mirror

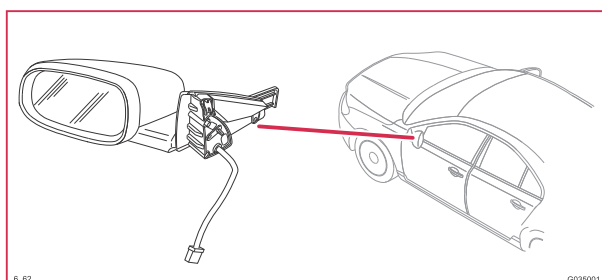


6/95 Damper Motor Module (DMM), temperature, left side

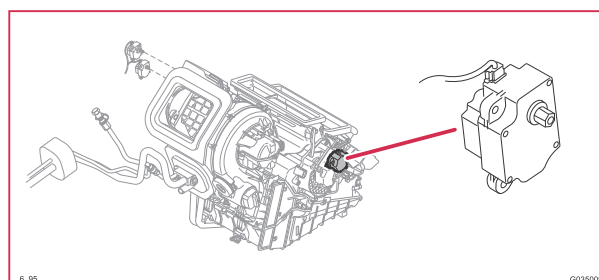


6/63 Right-hand power door mirror

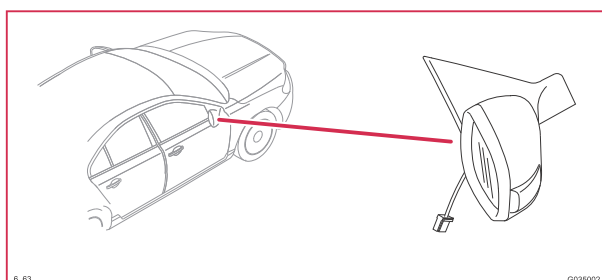


6/96 Damper Motor Module (DMM), temperature, right side

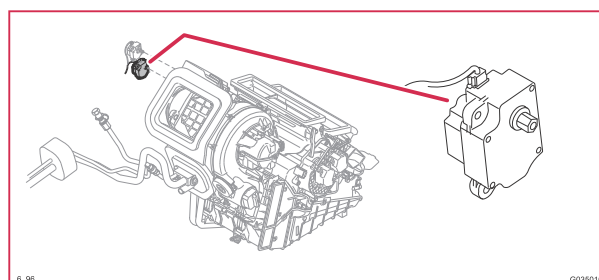


6/67 Pump, fuel leakage control

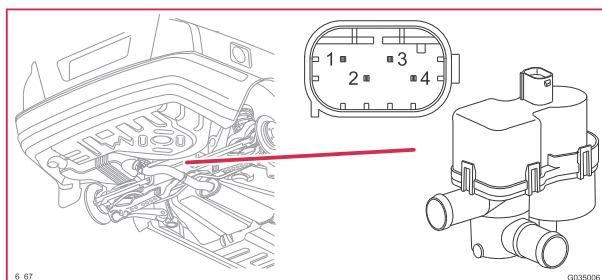


6/102 Damper Motor Module (DMM), defroster

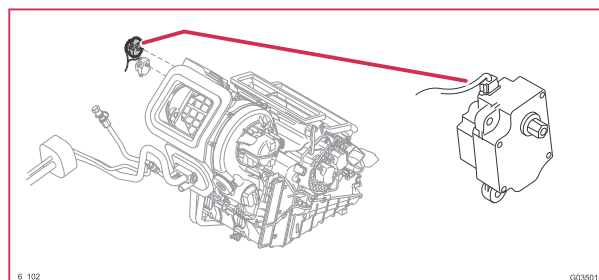

6/71 Valve, speed-dependent power steering

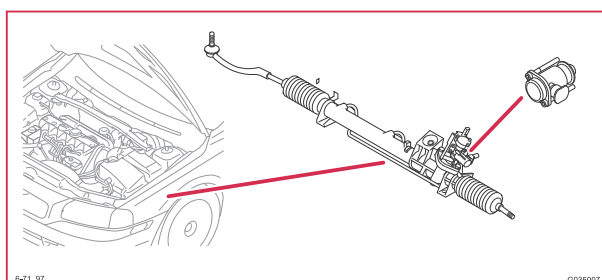


6/103 Damper Motor Module (DMM), floor/ventilation

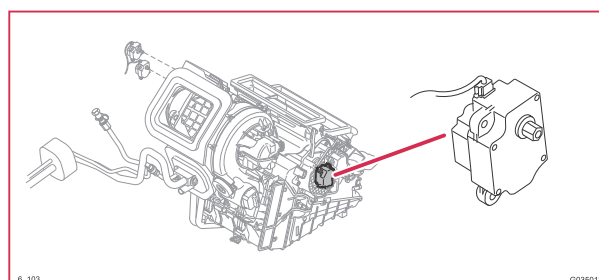


Component illustrations

6/104 - 6/147


6/104 High pressure headlight washer motor

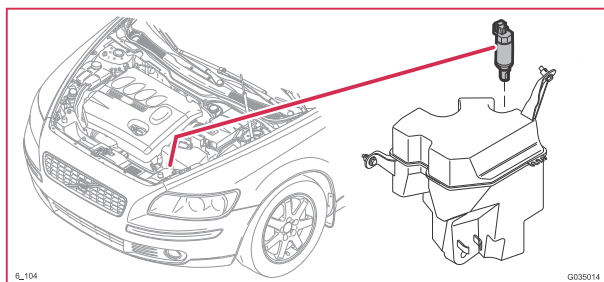


6/127 Washer motor

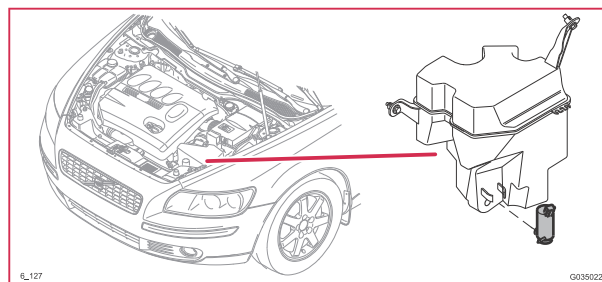


6/120 Throttle unit, 4-Cyl. Turbo

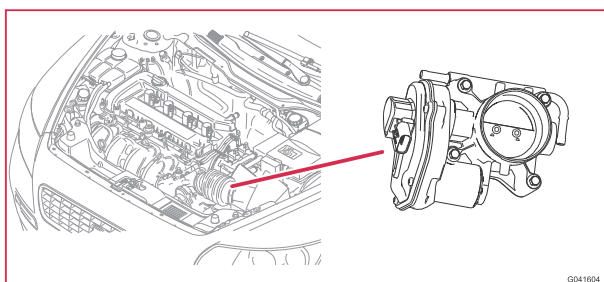


6/141 Motor folding head restraint left

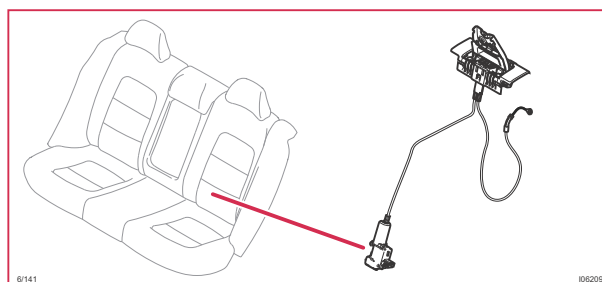


6/120 Throttle unit, 5-Cyl.

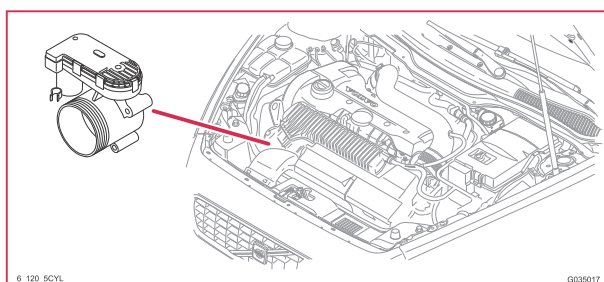


6/142 Motor folding head restraint right

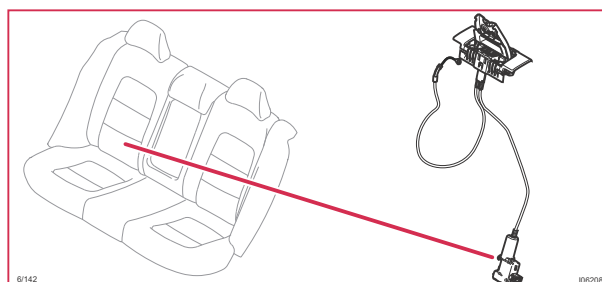


6/120 Throttle unit, 6-Cyl.

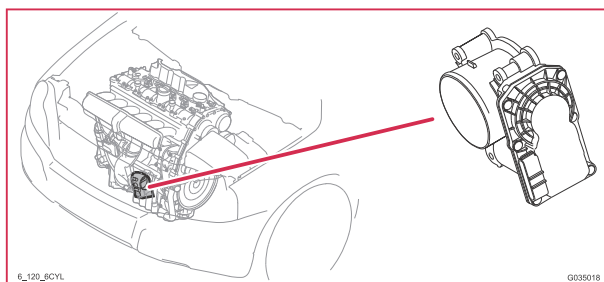


6/146 Lock motor, rear left brake disc

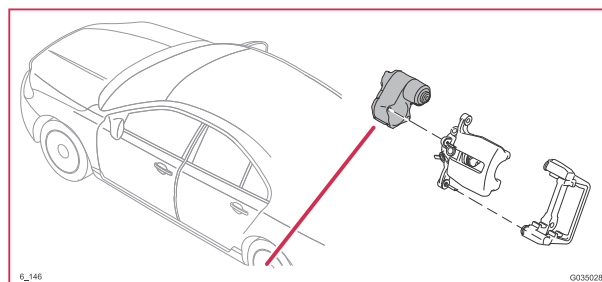

6/120 Throttle unit, Diesel

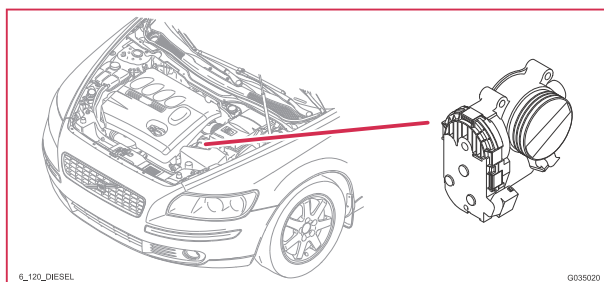


6/147 Lock motor, rear right brake disc

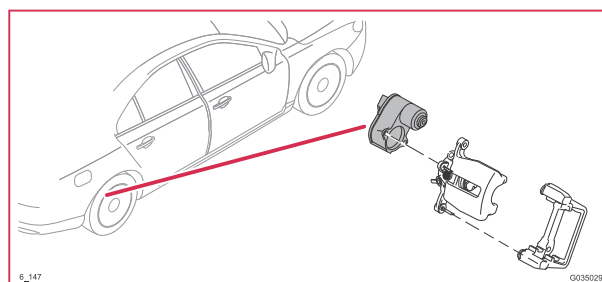

Component illustrations


6/164 - 7/15

6/164 Electrical power steering module (EHPS)

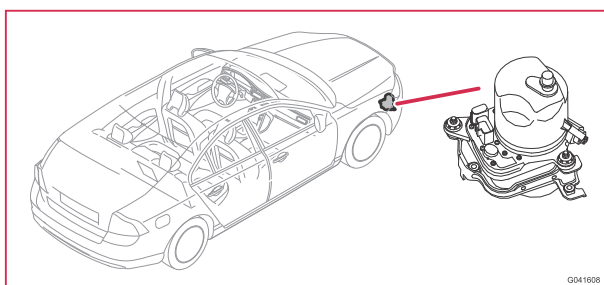

G041608


7/8 Pressure sensor, climate control system

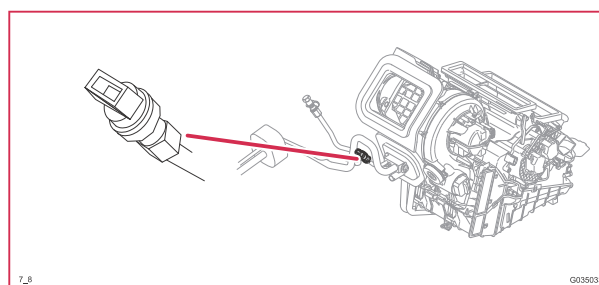

7_8

G035033


6/179 Electric oil pump

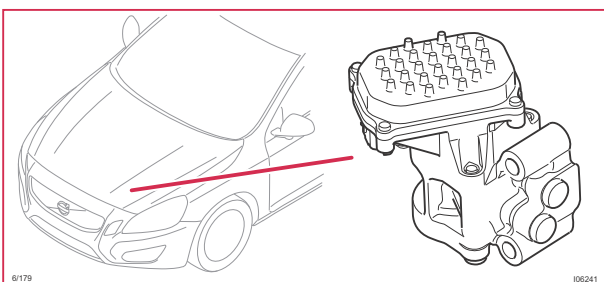

6/179

ID8241


7/12 Solar sensor, twilight sensor and indicator alarm

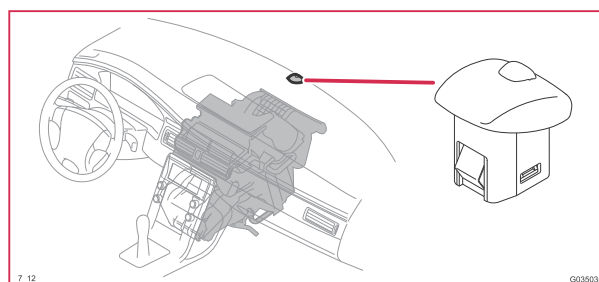

7_12

G035035


7/4 Brake fluid level sensor

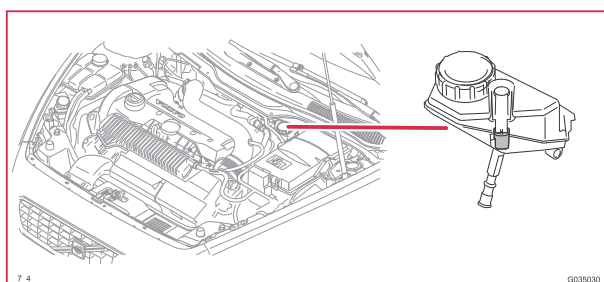

7_4

G035030


7/15 Front heated oxygen sensor, 4-Cyl. Turbo

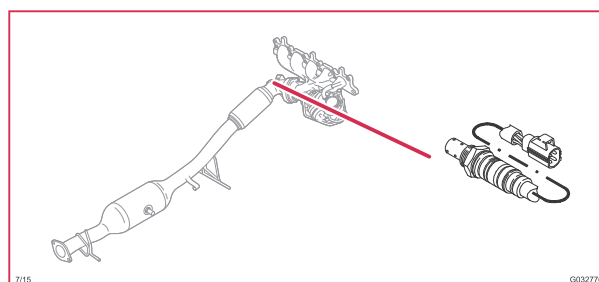

7/15

G032776


7/5 Washer fluid level sensor

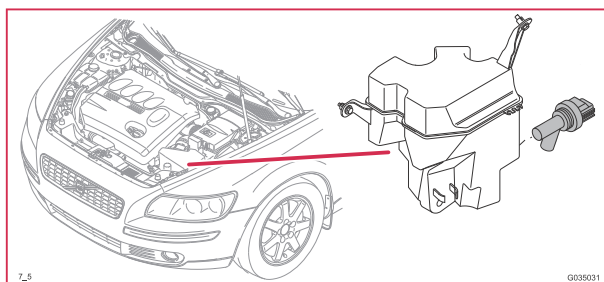

7_5

G035031


7/15 Front heated oxygen sensor, 5-Cyl.

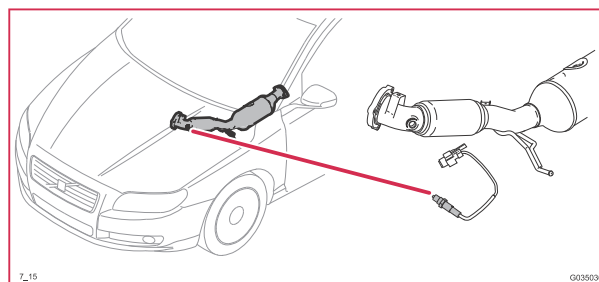

7_15

G035036


7/6 Oil pressure sensor

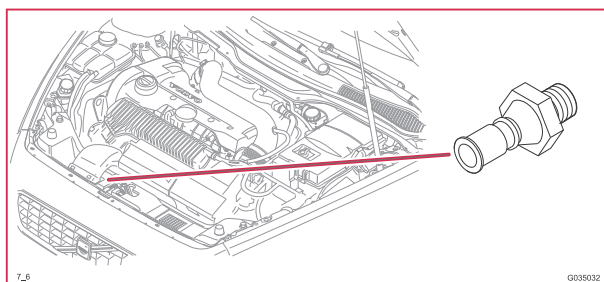

7_6

G035032

7/15 Front oxygen sensor, bank 1, 6-Cyl.

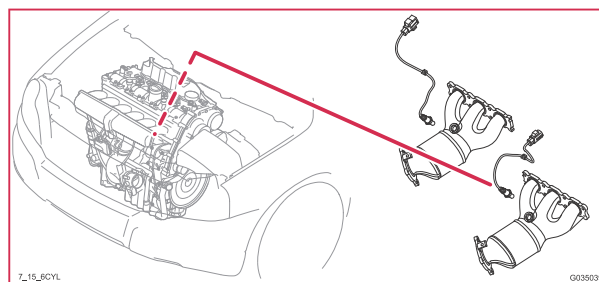


7_15_6CYL

G035039


Component illustrations

7/15 - 7/35


7/15 Front heated oxygen sensor, Diesel

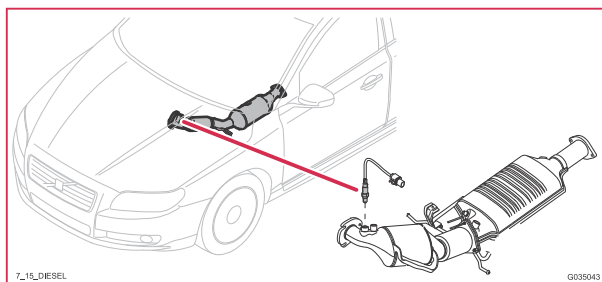


7/25 Impulse sensor, Diesel

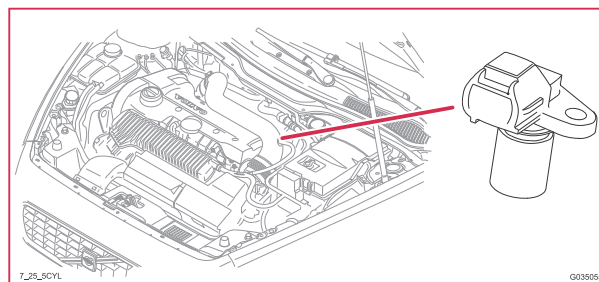


7/16 Coolant temperature sensor

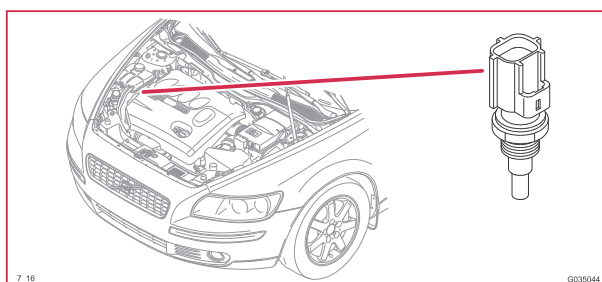


7/25 Impulse sensor

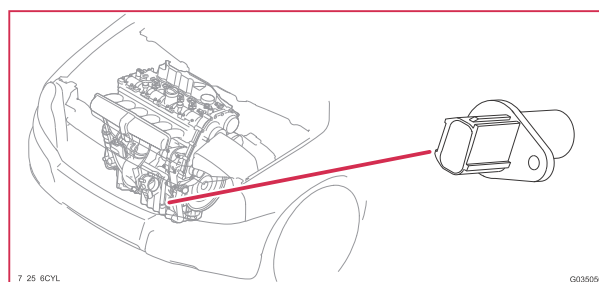


7/17 Mass airflow sensor (MAF)

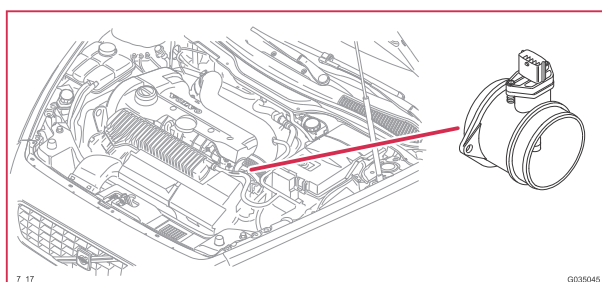


7/31 Left-hand front ABS sensor

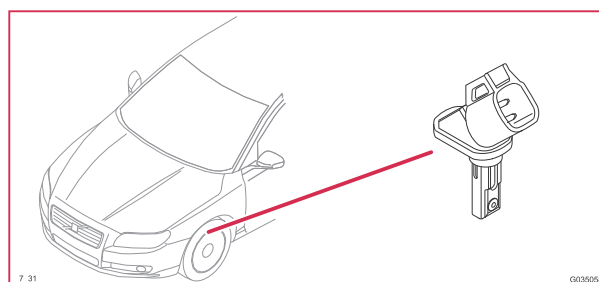


7/23 Rear knock sensor

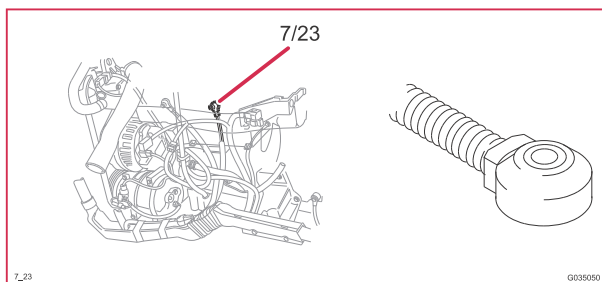


7/32 Right-hand front ABS sensor

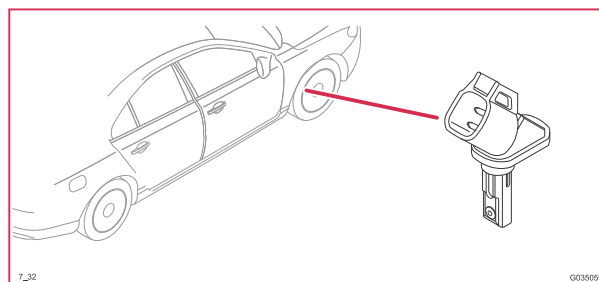

7/24 Front knock sensor

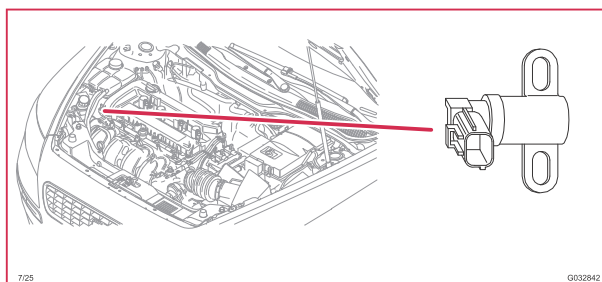


7/35 Oil level sensor

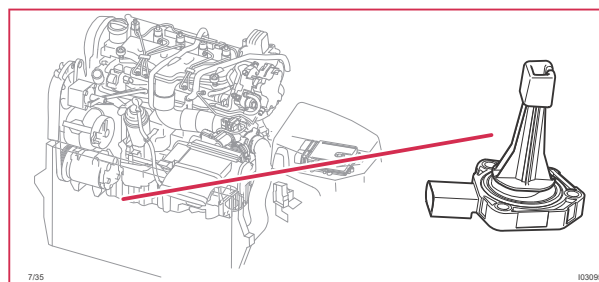


Component illustrations

7/41 - 7/81


7/41 Temperature sensor, evaporator

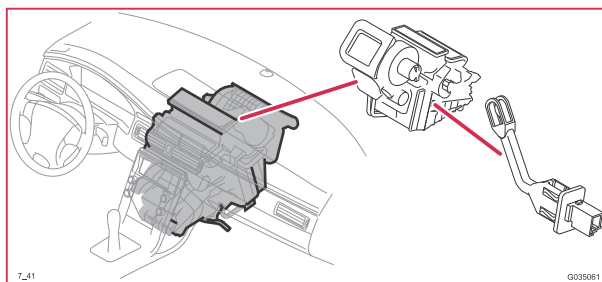


7/73 Coolant level sensor

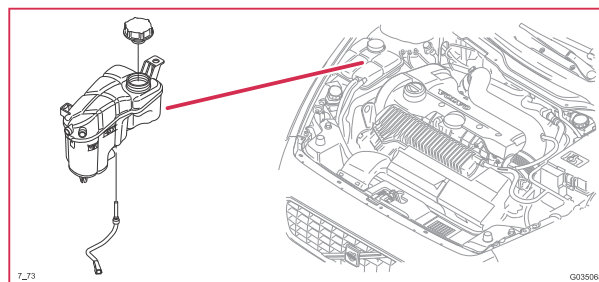


7/51 Accelerator pedal sensor

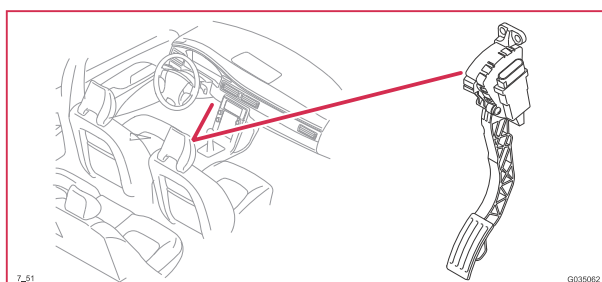


7/81 Pressure sensor, intake manifold, 4-Cyl. Turbo

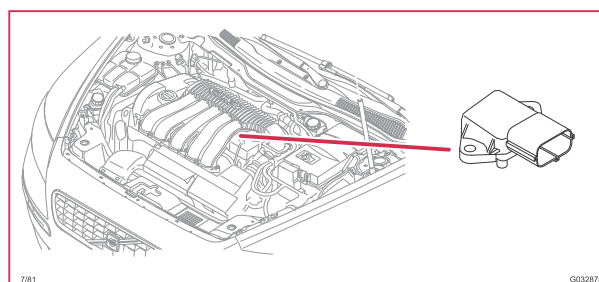


7/56 Left-hand rear ABS sensor

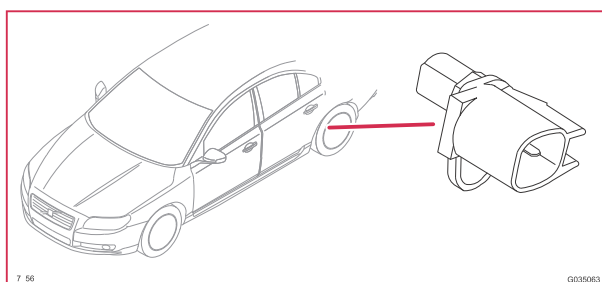


7/81 Pressure sensor, intake manifold, 5-Cyl. Turbo

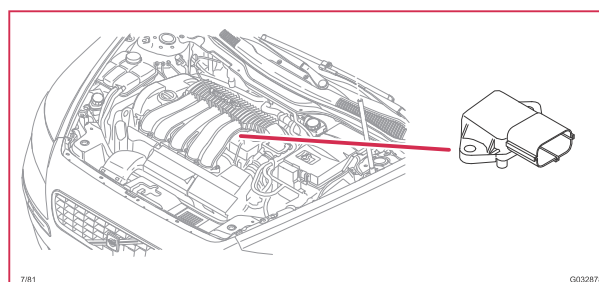


7/57 Right-hand rear ABS sensor

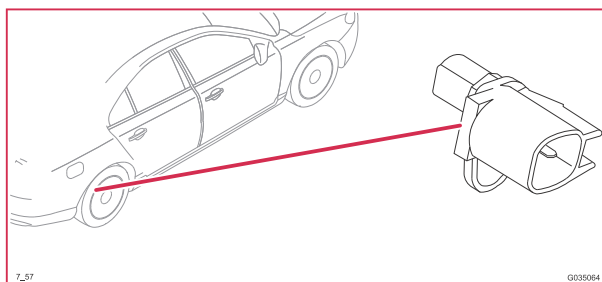


7/81 Pressure sensor intake manifold, Diesel

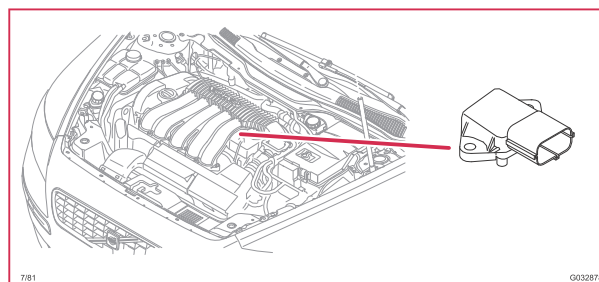

7/69 Outside temperature sensor

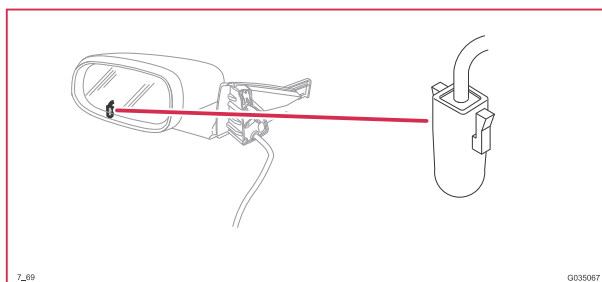


7/81 Pressure sensor, intake manifold, 6-Cyl.

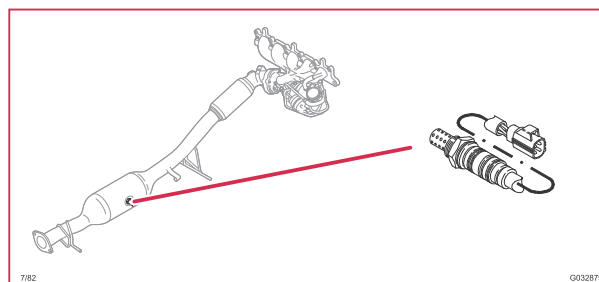


Component illustrations

7/82 - 7/103


7/82 Rear oxygen sensor, 4-Cyl.

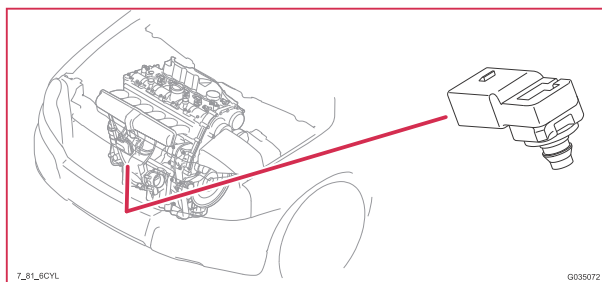


7/90 Moisture sensor

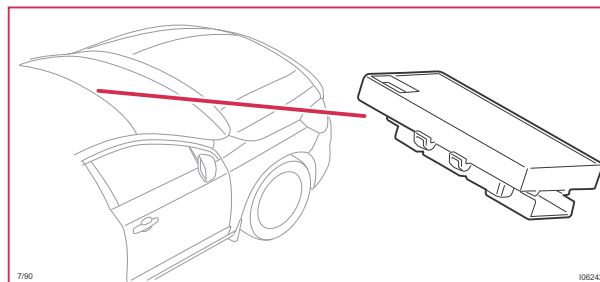


7/82 Rear oxygen sensor, bank 1, 6-Cyl.

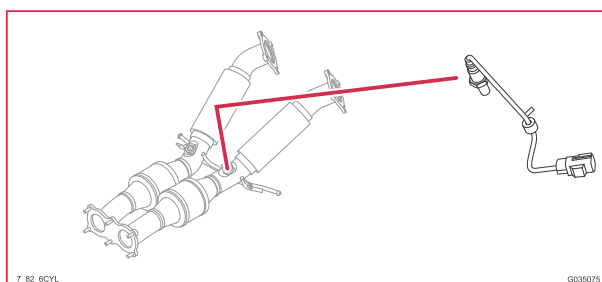


7/91 Steering angle sensor

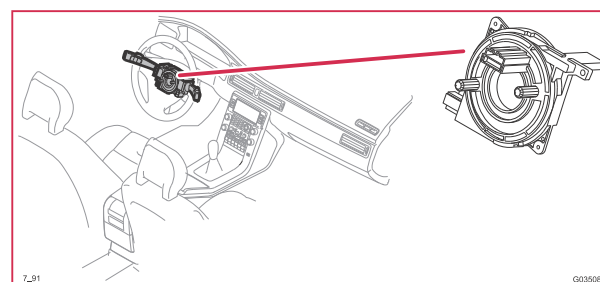


7/87 Acceleration sensor, Four-C, front left

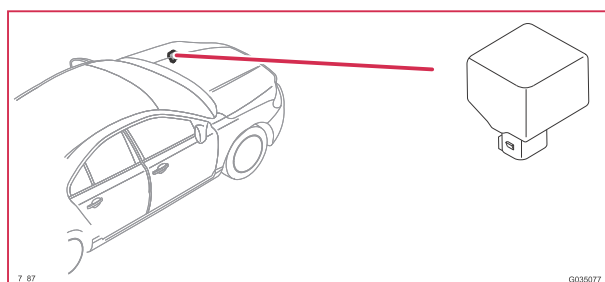


7/93 Occupant Weight Sensor (OWS)

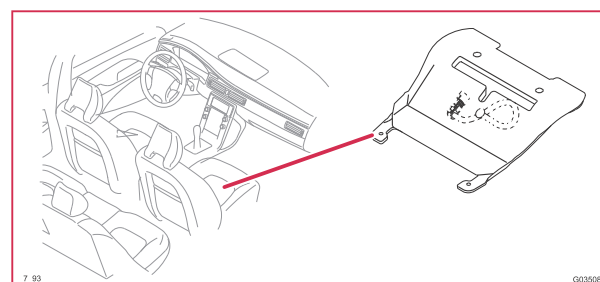


7/88 Acceleration sensor, Four-C, front right

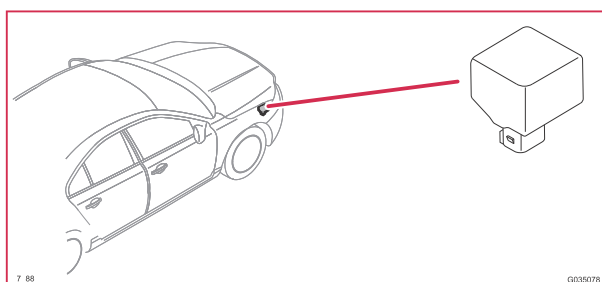


7/100 Inclination Sensor Module (ISM)

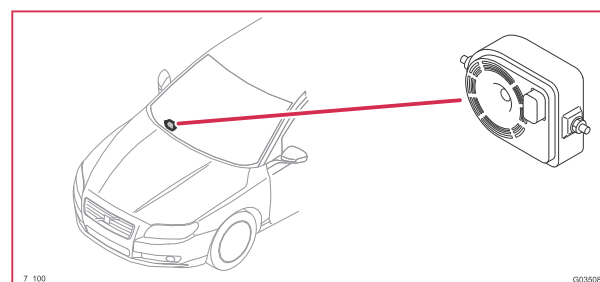

7/89 Acceleration sensor, Four-C, rear left

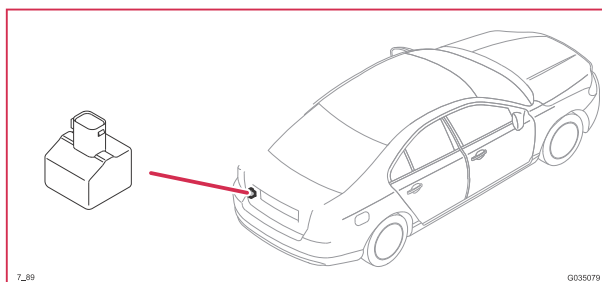


7/103 Front oxygen sensor, bank 2, 6-Cyl.

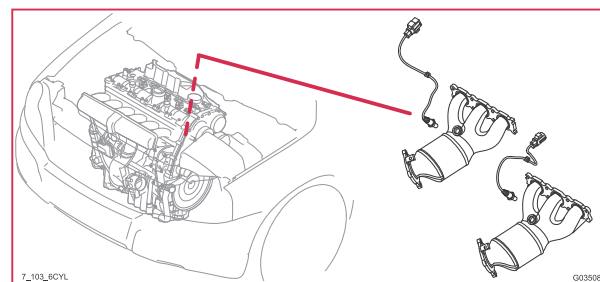


Component illustrations

7/104 - 7/118


7/104 Rear oxygen sensor, bank 2, 6-Cyl.

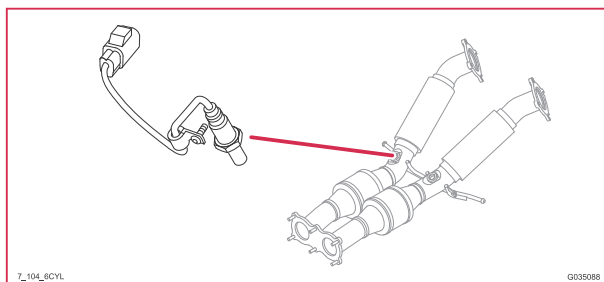


7/112 Seat temperature sensor, LH rear

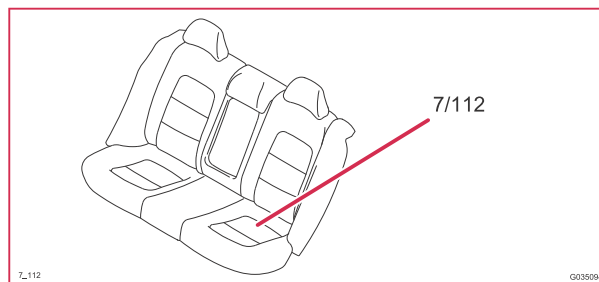


7/108 Left-hand rear side impact sensor

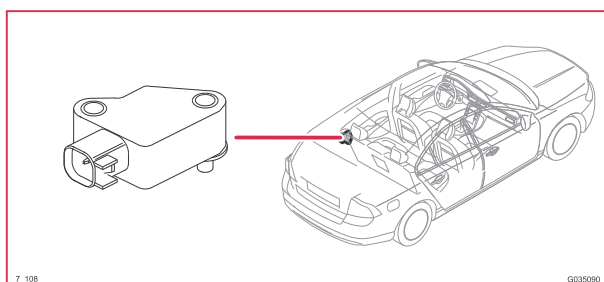


7/113 Seat temperature sensor, RH rear

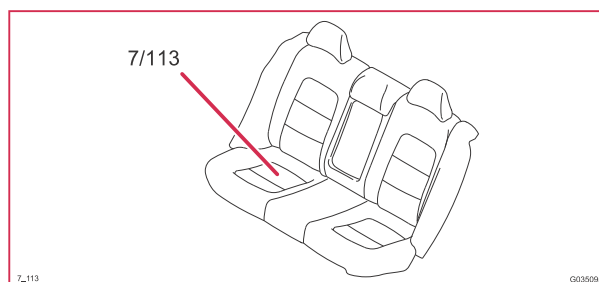


7/109 Right-hand rear side impact sensor

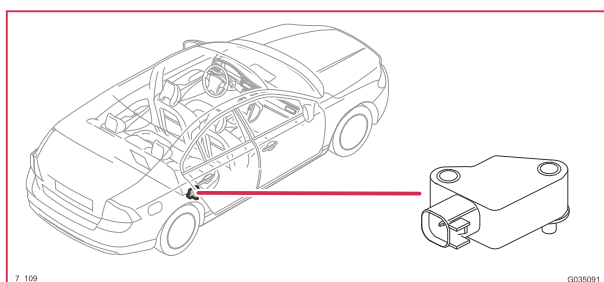


7/115 Side impact sensor, left B-post

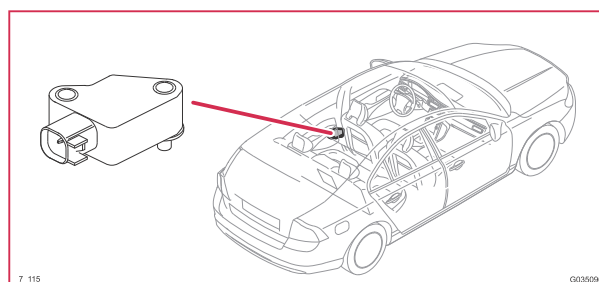


7/110 Sensor temperature driver's seat

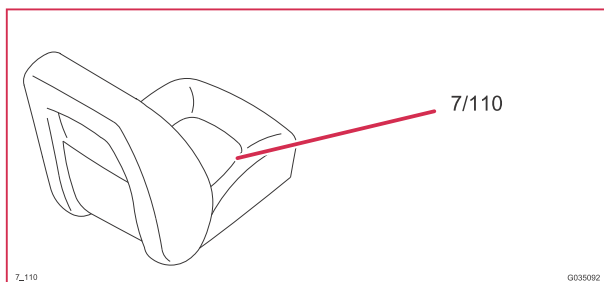


7/116 Side impact sensor, right B-post

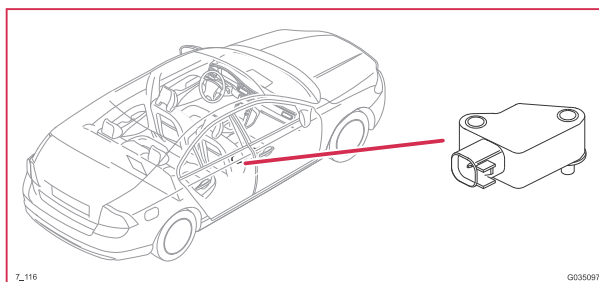

7/111 Sensor temperature passenger seat

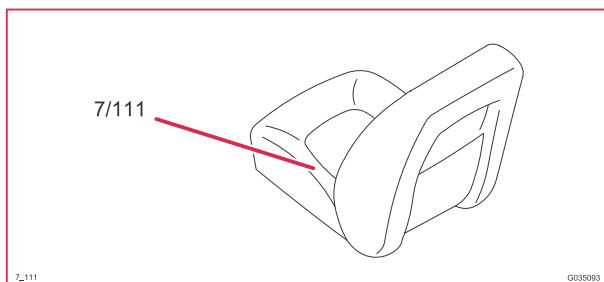


7/118 Height sensor, suspension, front left

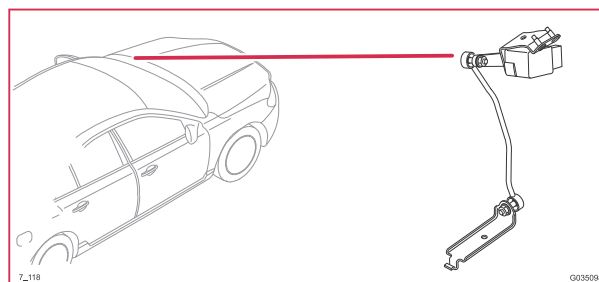


Component illustrations

7/119 - 7/154


7/119 Height sensor, suspension, front right

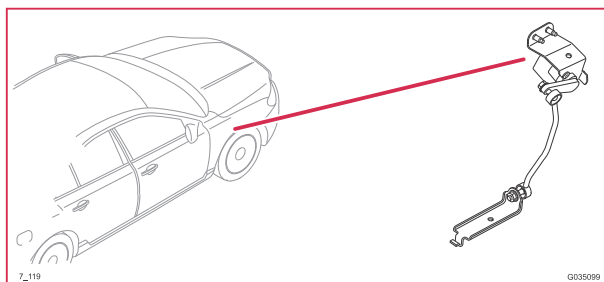


7/130 Fuel level sensor, ejector side

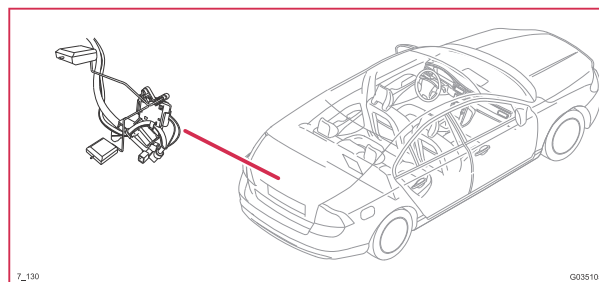


7/120 Height sensor, suspension, rear left

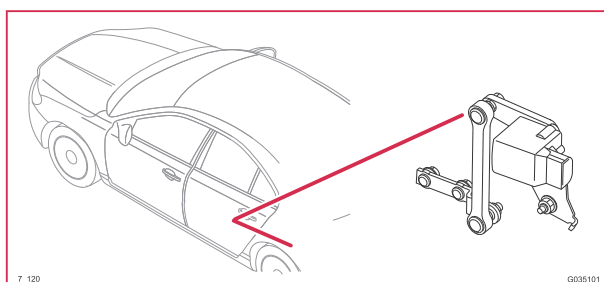


**7/131-
7/134 Rear parking assistance sensor**

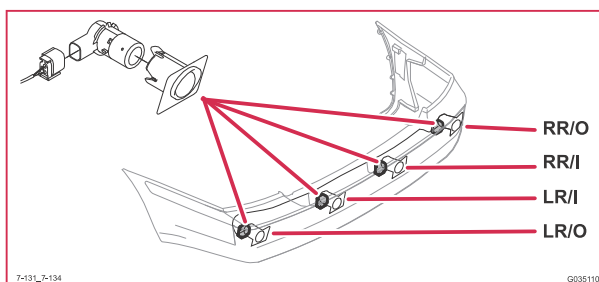


7/121 Height sensor, suspension, rear right

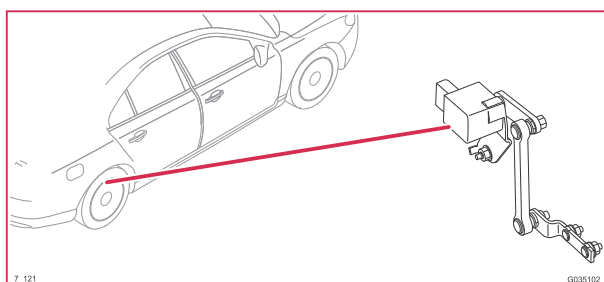


7/143 Fuel level sensor, pump side

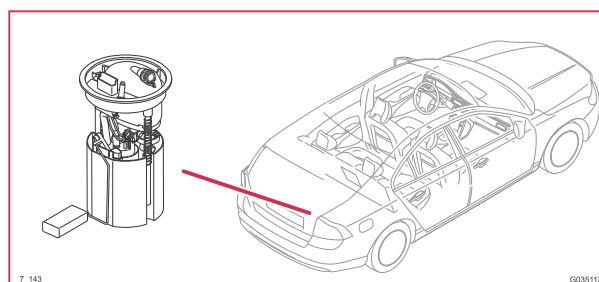


7/123 Clutch pedal sensor

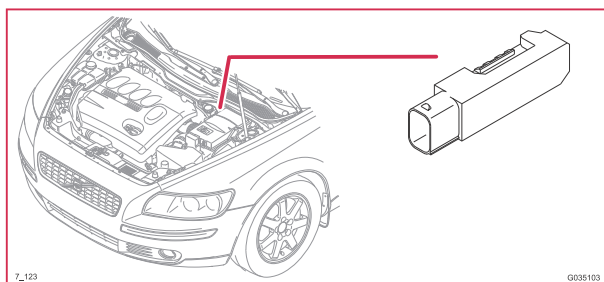


7/149 Rain Sensor Module (RSM)

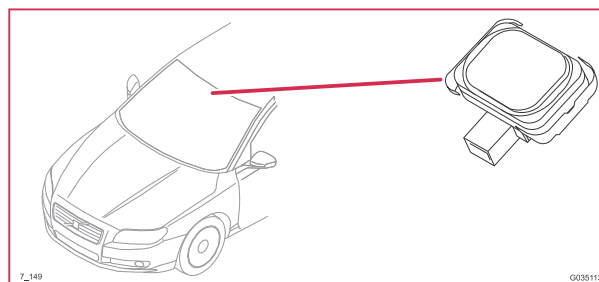

7/124 Brake pedal sensor

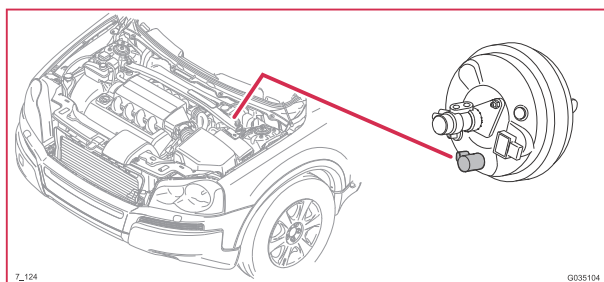


7/154 Sensor fuel temperature

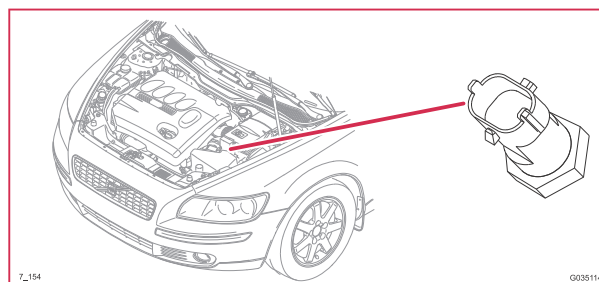


Component illustrations

7/156 - 7/172


7/156 Pressure and temperature sensor, fuel

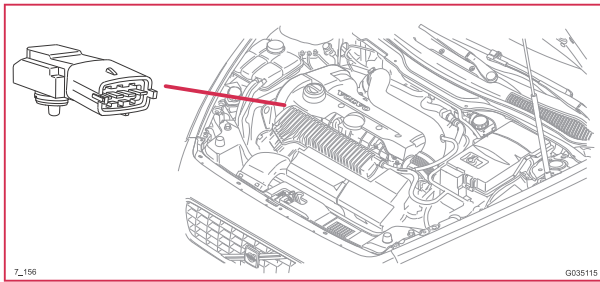


7/165 Pressure and temperature sensor, intake manifold, Diesel

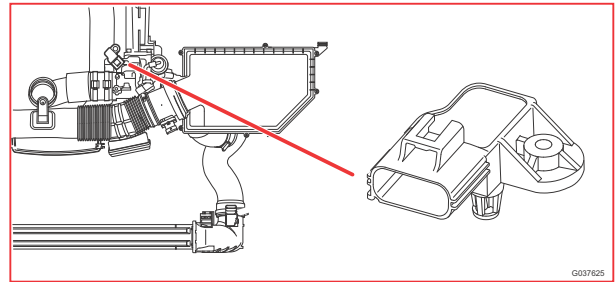


7/159 Air Quality Sensor (AQS)

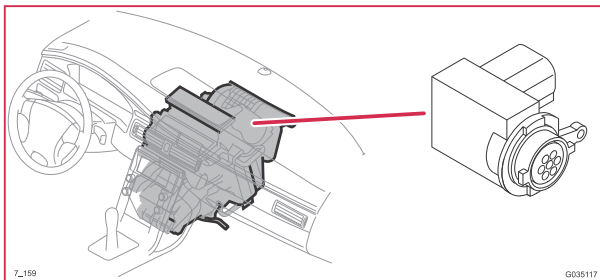


7/165 Pressure and temperature sensor, intake manifold, 6-Cyl.

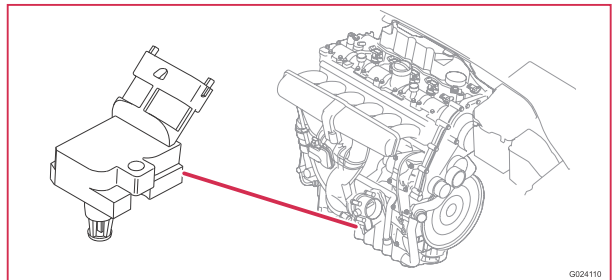


7/162 Pressure sensor, fuel line

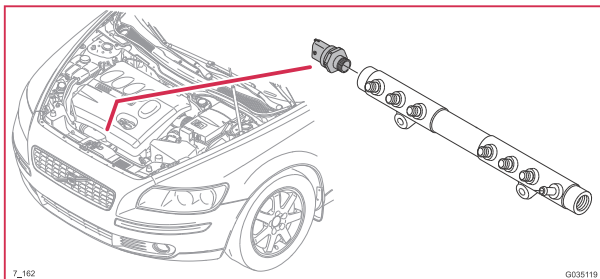


7/166 Oil level sensor, 6-Cyl.

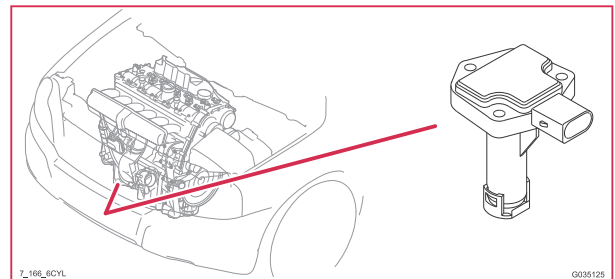


7/165 Pressure and temperature sensor, intake manifold

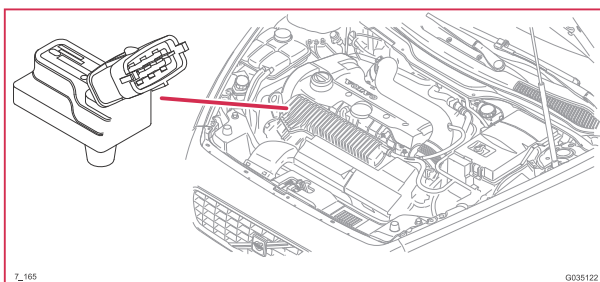


7/168 Fuel pressure sensor, low

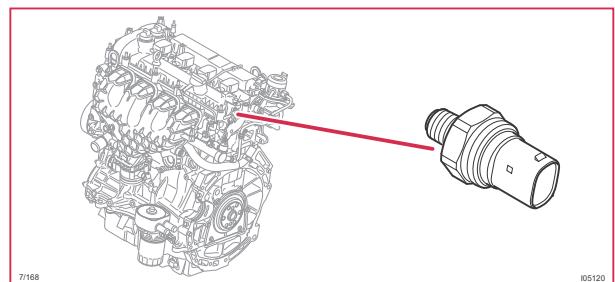

7/165 Pressure and temperature sensor, intake manifold, 4-Cyl.

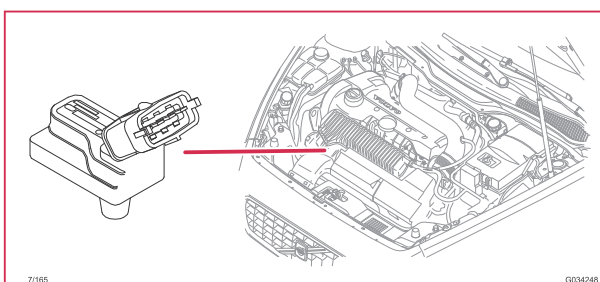


7/172 Position sensor camshaft, intake side, 4-Cyl.

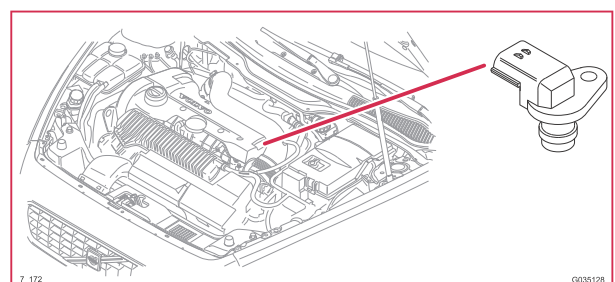


Component illustrations

7/172 - 7/200


7/172 Camshaft position sensor, intake side, 6-Cyl.

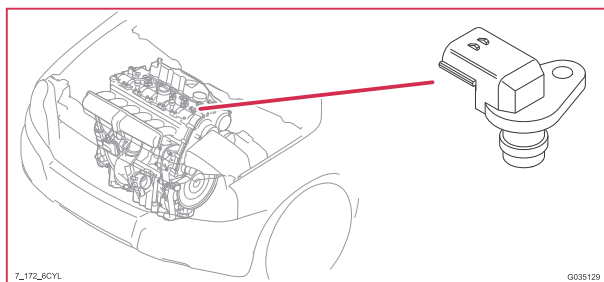


7/175 Weight sensor passenger seat, seat belt reminder

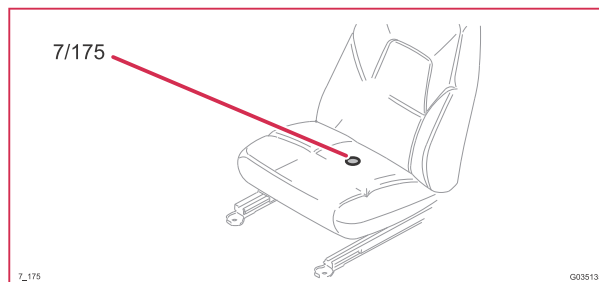


7/173 Position sensor camshaft, outlet side, 4-Cyl.

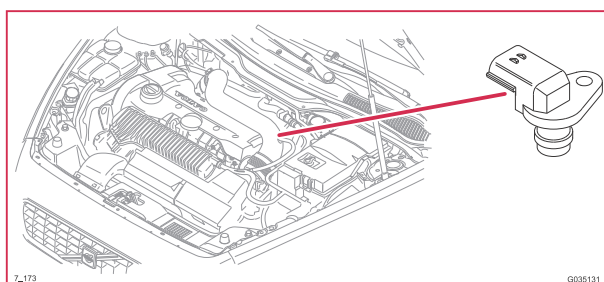


7/190 Temperature sensor, catalytic converter

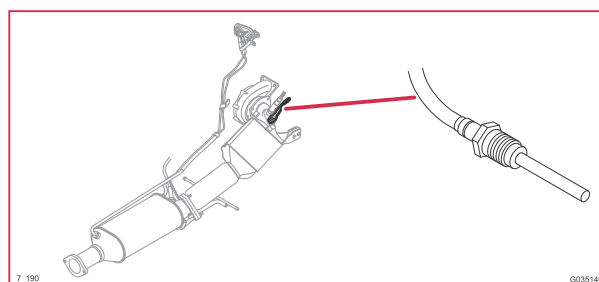


7/173 Camshaft position sensor, exhaust side, 6-Cyl.

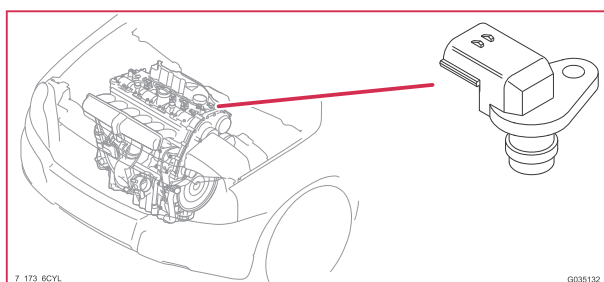


7/191 Temperature sensor, particle filter

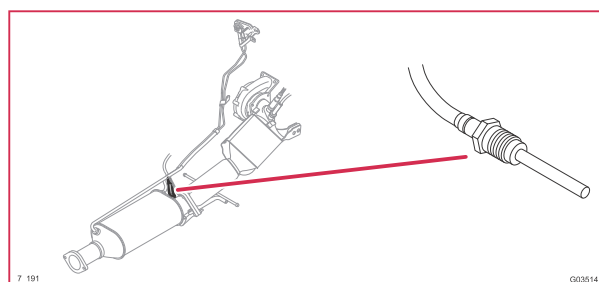


7/173 Camshaft position sensor, exhaust side, Diesel

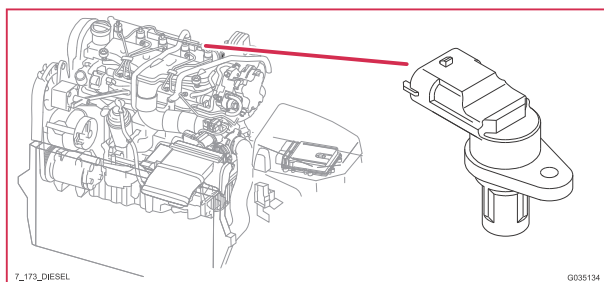


7/193 Position sensor turbo

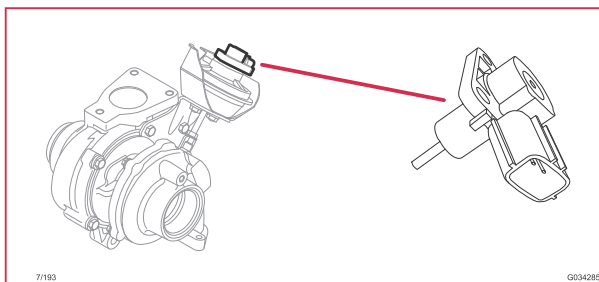

7/174 Differential pressure sensor particulate filter

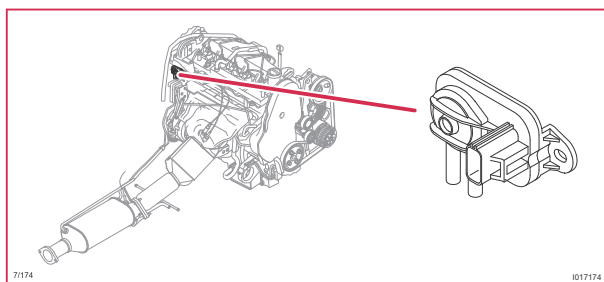


7/200 Sensor, coolant temperature

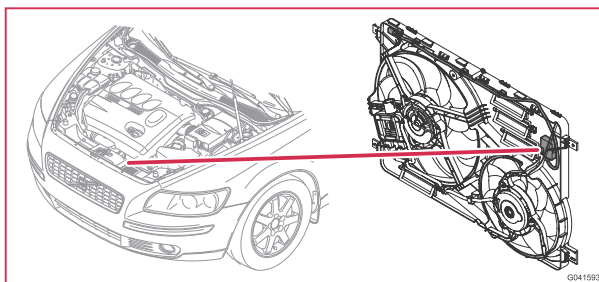

Component illustrations


7/202 - 7/243

7/202 EGR Bypass position sensor

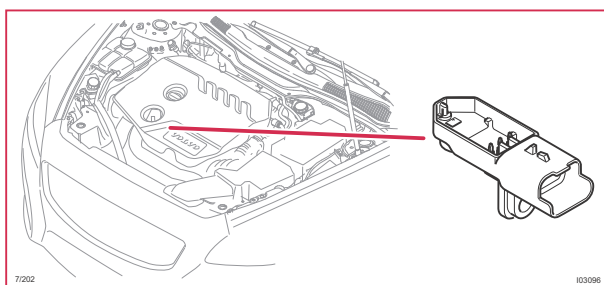


7/210-


7/213 Tire pressure sensor

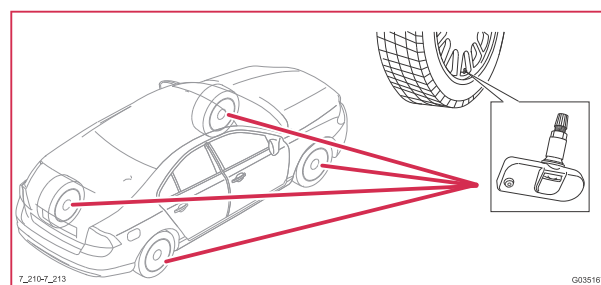

7/203 Forward-aimed radar (FLR)

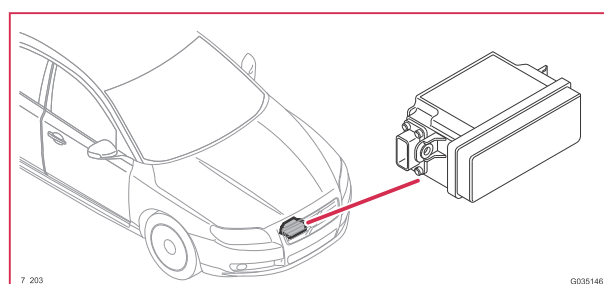


7/215 Rear heated oxygen sensor, 5-Cyl. Diesel

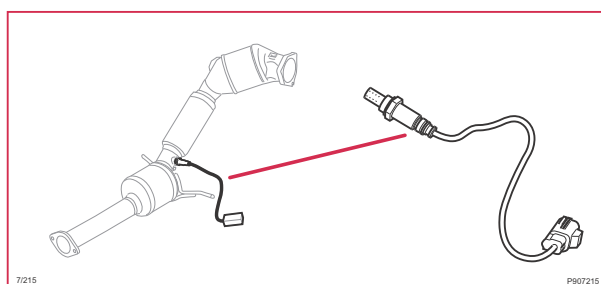


7/204-


7/207 Front parking assistance sensor

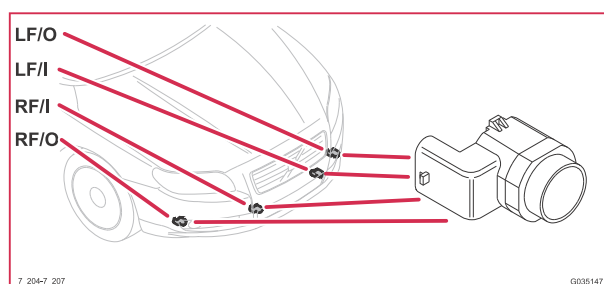


7/238 Alcohol lock sensor

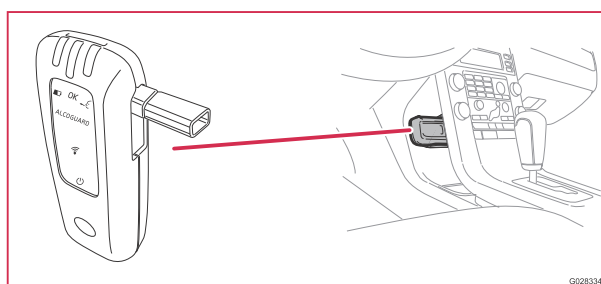


7/208 Side impact sensor, left front door

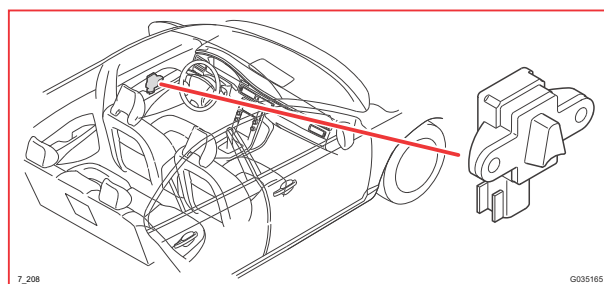


7/240 Battery monitoring sensor (BMS)

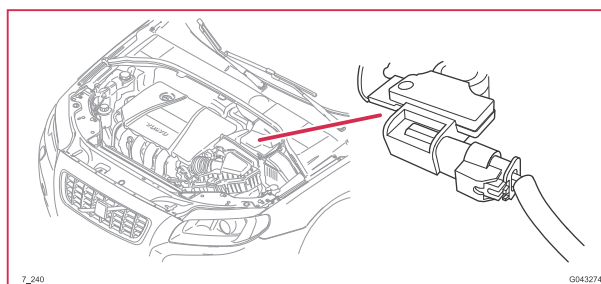

7/209 Side impact sensor, right front door

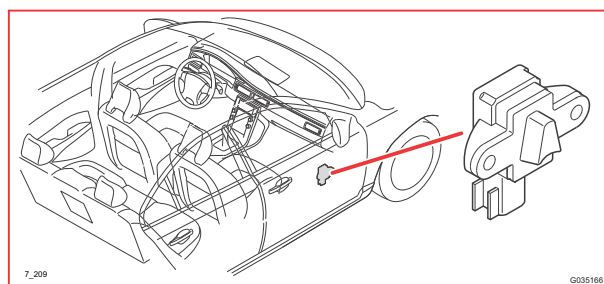


7/243 Gear position sensor neutral position

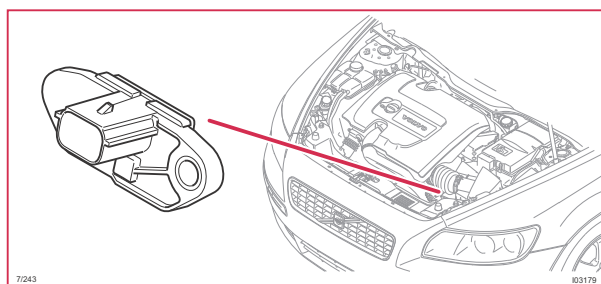


Component illustrations

7/248 - 8/21


7/248 Oil pressure and temperature sensor

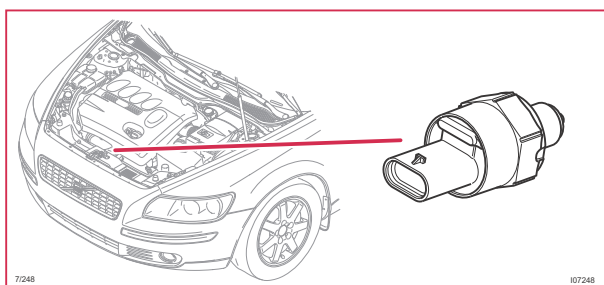


8/18 EVAP valve, 5-Cyl.

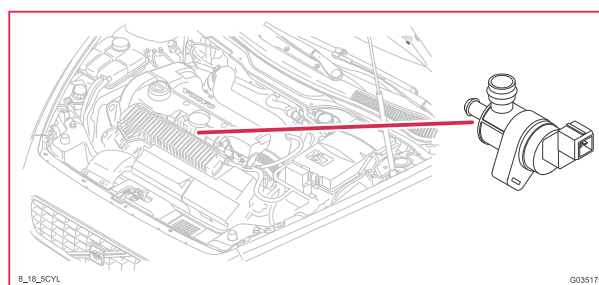


7/251 Brake vacuum sensor

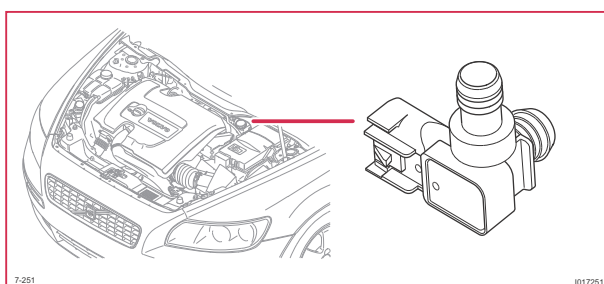


8/18 EVAP valve, 6-Cyl.

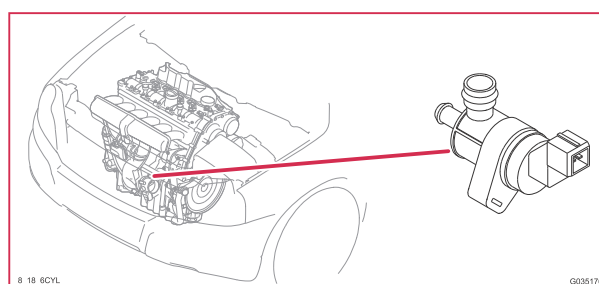


8/3 Electromagnetic clutch, climate control system

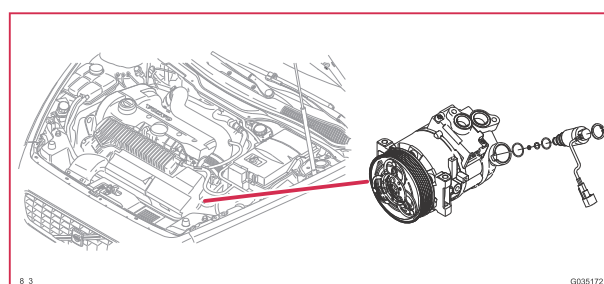


8/19 Reset valve, camshaft intake

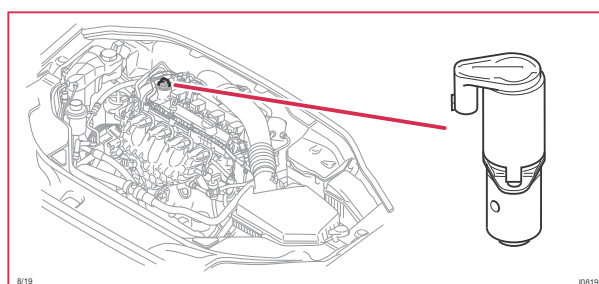


8/6-11 Injectors

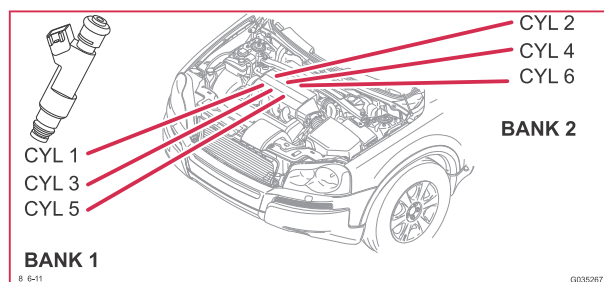


8/20 Shock absorber, Four-C, front left

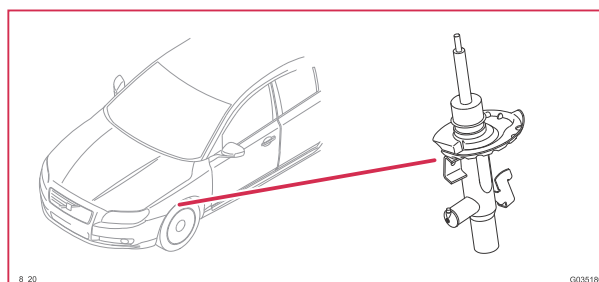

8/18 EVAP valve, 4-Cyl.

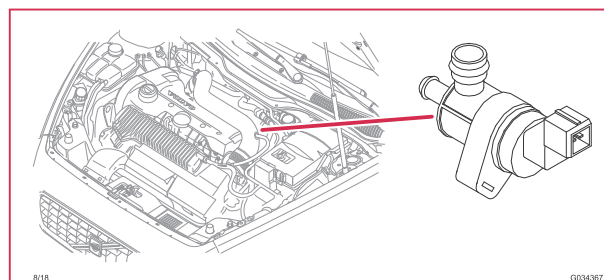


8/21 Shock absorber, Four-C, front right

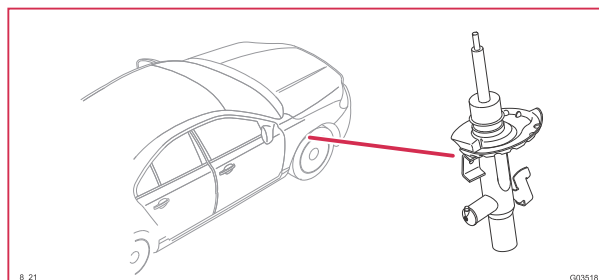


Component illustrations

8/22 - 8/37


8/22 Shock absorber, Four-C, rear left

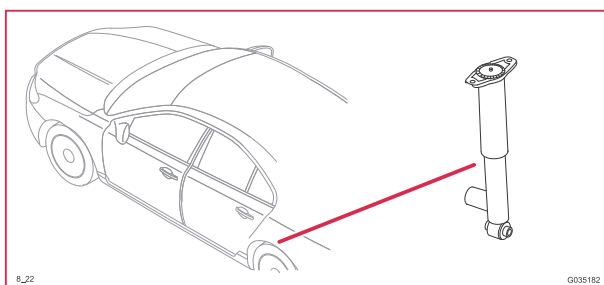


8/32 Igniter, passenger side airbag stage 2

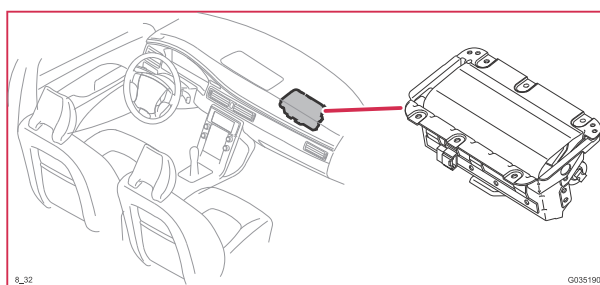


8/23 Shock absorber, Four-C, rear right

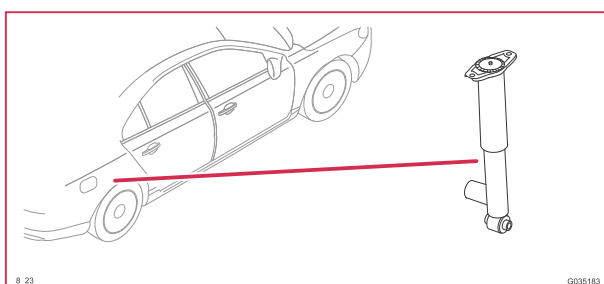


8/33 Igniter, belt tensioner, driver's side

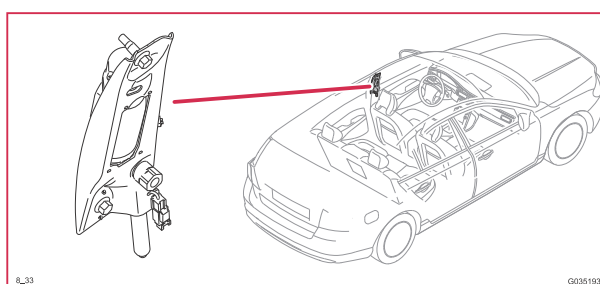


8/28 Turbo control valve

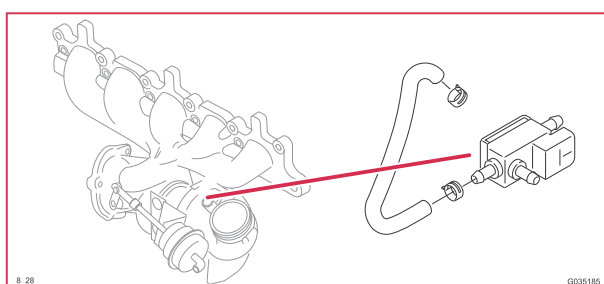


8/34 Igniter, belt tensioner, passenger side

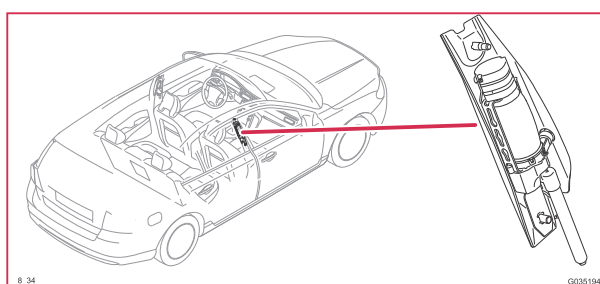


8/30 Driver's side airbag igniter, stage 1

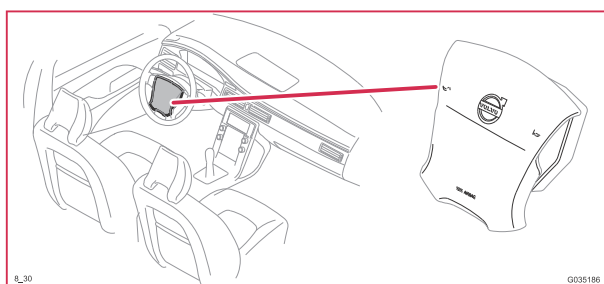


8/36 Shift lock solenoid

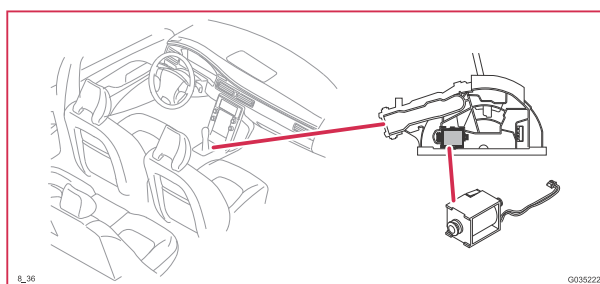

8/31 Passenger side airbag igniter, stage 1

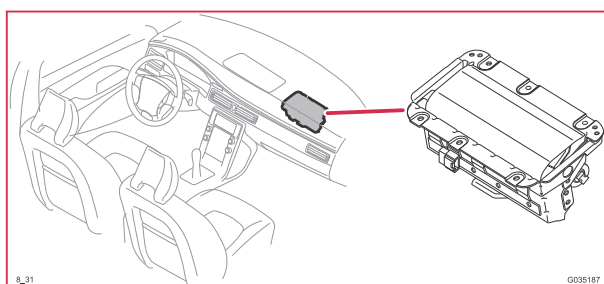


8/37 Automatic transmission

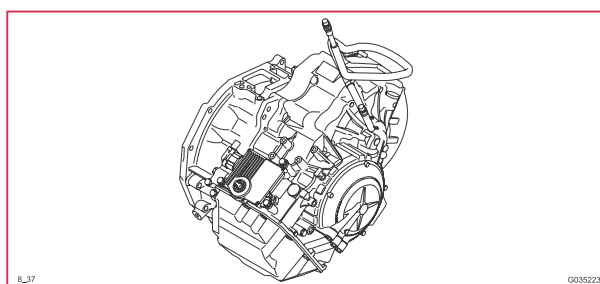


Component illustrations

8/46 - 8/62


8/46 Archive unit, DSTC

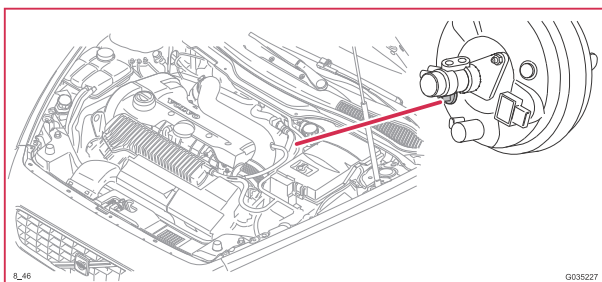


8/56 Rear right belt tensioner igniter

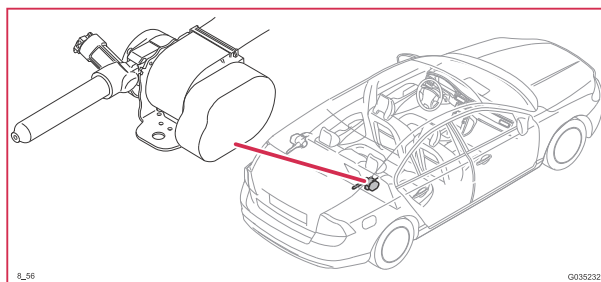


8/48 Auto-dimming rearview mirror

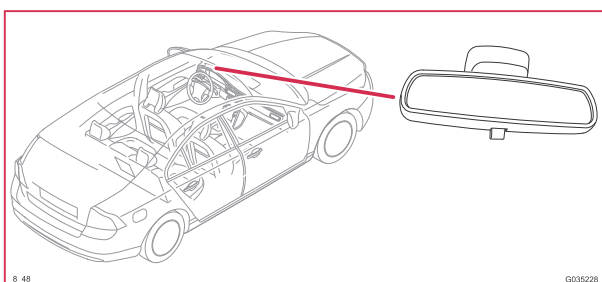


8/59 Rear left head restraint solenoid

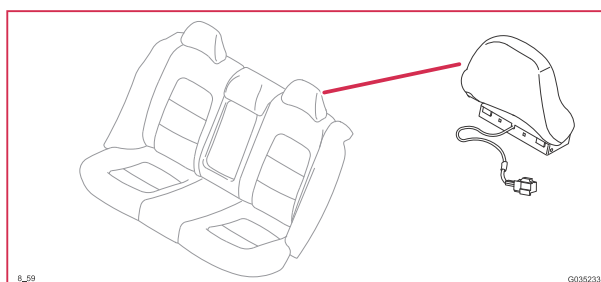


8/51 Igniter side airbag front driver's seat

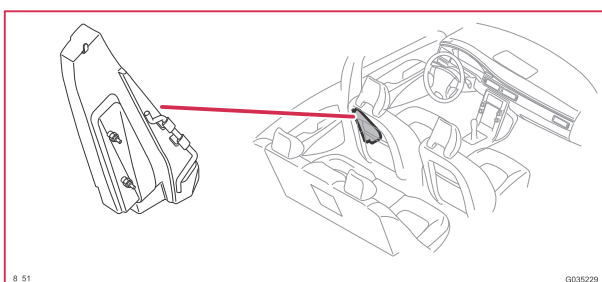


8/60 Rear right head restraint solenoid

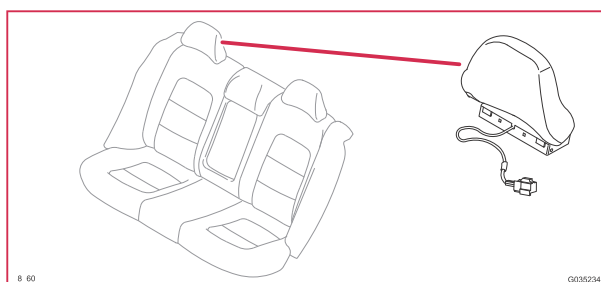


8/52 Igniter side airbag front passenger seat

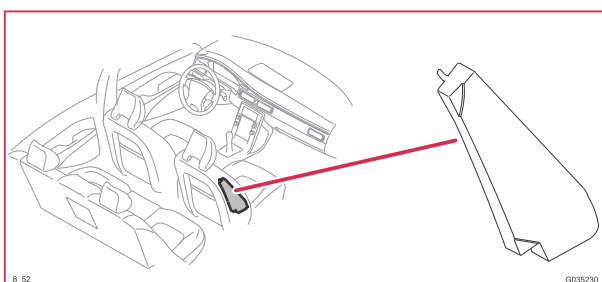


8/61 Driver's side airbag igniter, stage 2

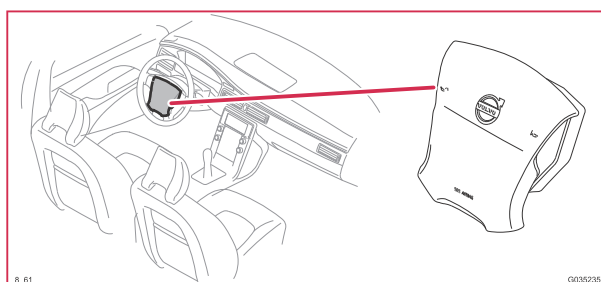

8/55 Rear left belt tensioner igniter

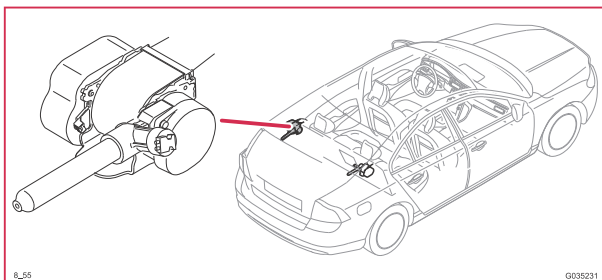


8/62 Belt tensioner igniter, center rear seat

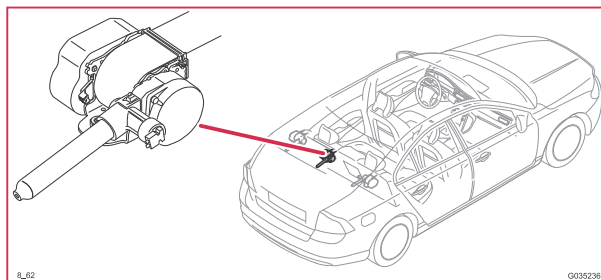


Component illustrations

8/66 - 8/93


8/66 Left-hand inflatable curtain igniter

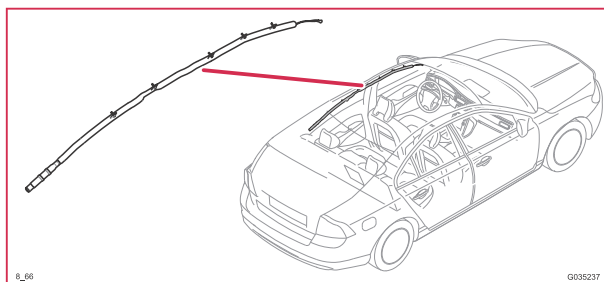


8/81 Reset valve, camshaft exhaust, 4-Cyl

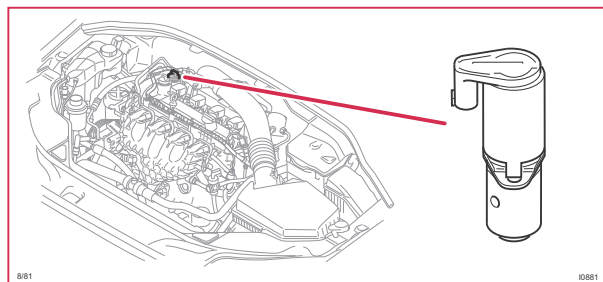


8/67 Right-hand inflatable curtain igniter

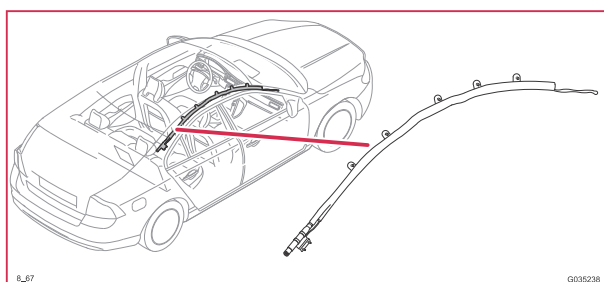


8/81 Reset valve, camshaft exhaust, 5-Cyl

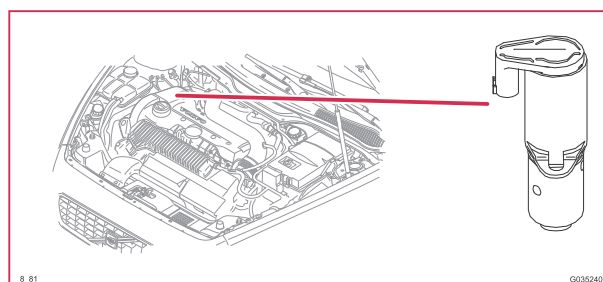


8/68 Relief valve

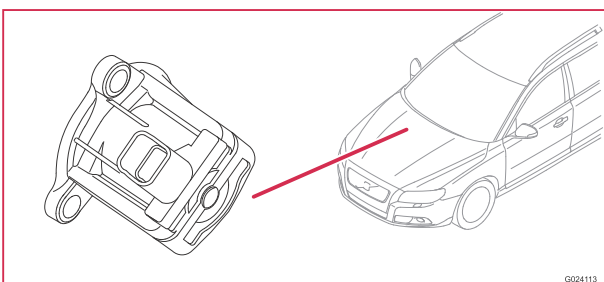


8/84 Switch, vacuum pump

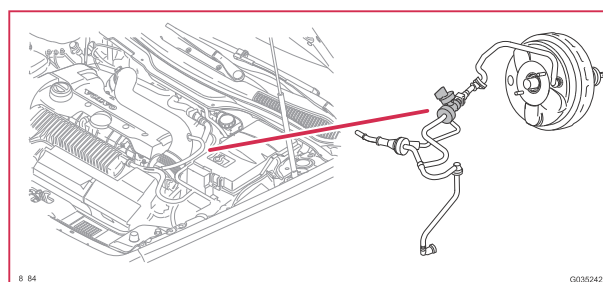


8/77 Control valve, fuel volume

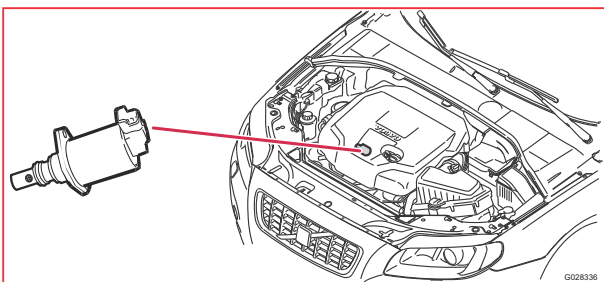


8/92 Lap belt tensioner, driver

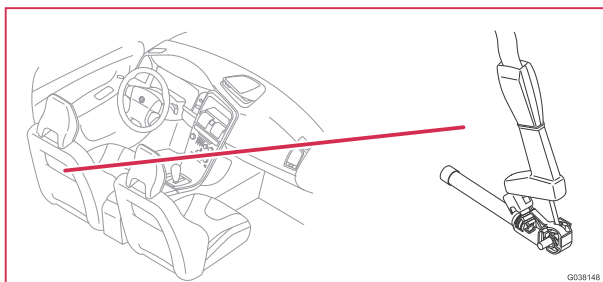

8/78 Power steering pressure monitor

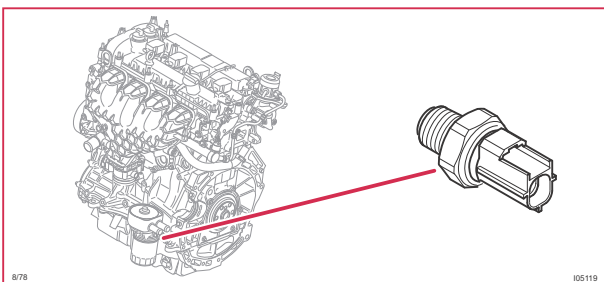


8/93 Lap belt tensioner passenger

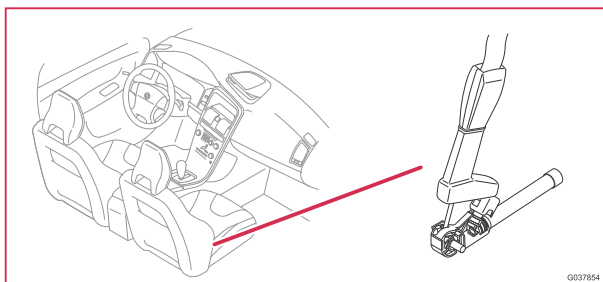


Component illustrations

8/98 - 8/124


8/98 Control valve fuel pressure

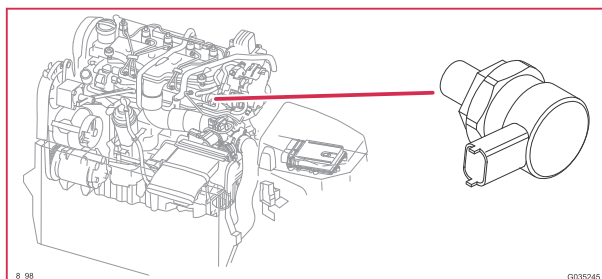


8/117 Solenoid, variable valve timing, intake, 6-Cyl.

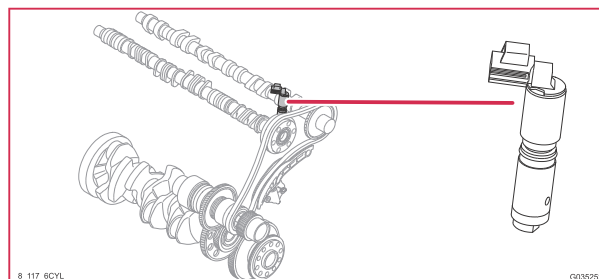


8/99 Igniter, steering column

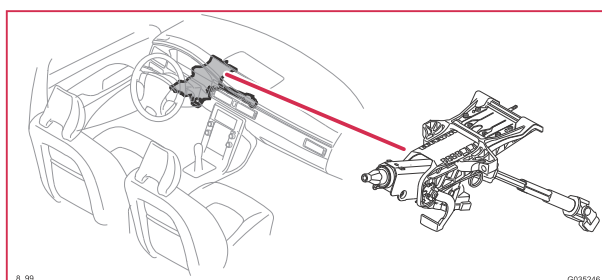


8/120 EGR valve 4-Cyl. Diesel

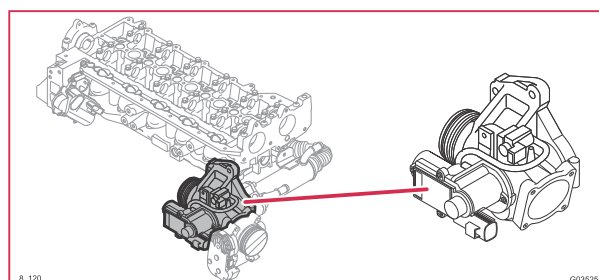


8/111 Fuel flow control valve

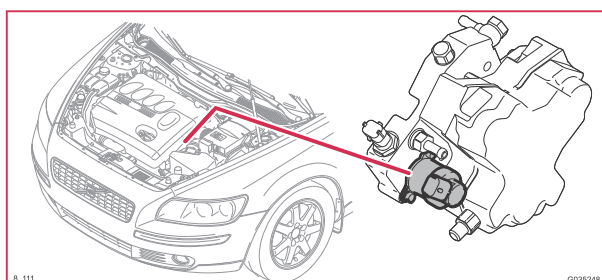


8/120 EGR valve, 5-Cyl. Diesel

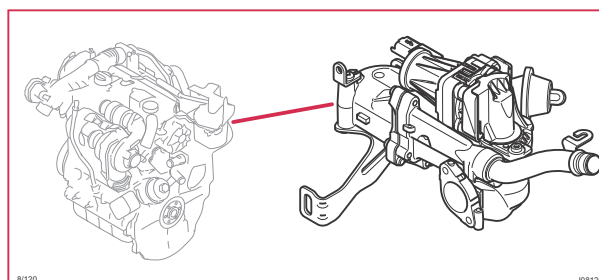


8/113 Bypass valve, EGR cooling

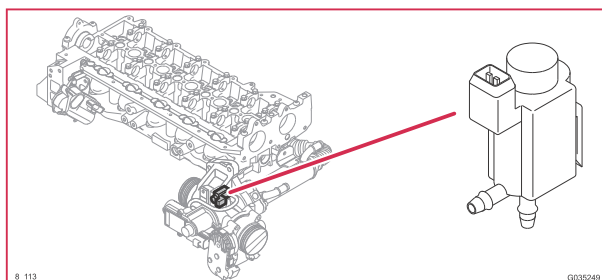


8/121 Radiator valve

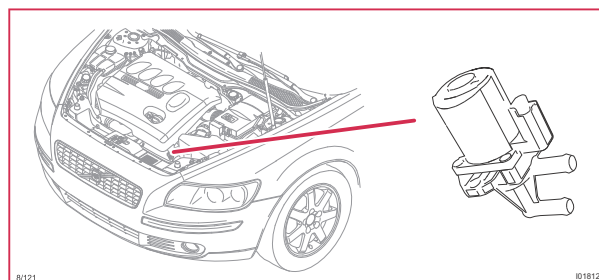

8/113 Bypass valve, EGR cooling, EURO5

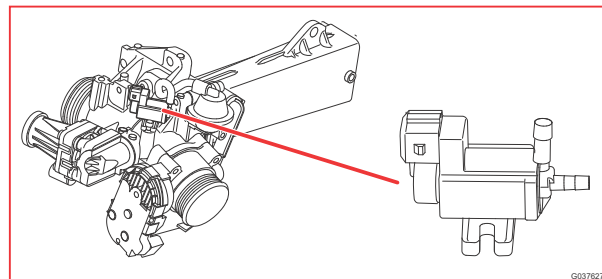


8/124 Igniter, airbag stage 3, passenger side

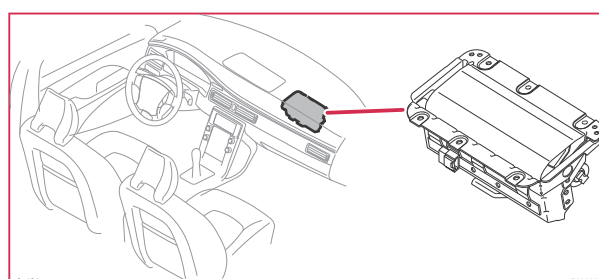


Component illustrations

8/125 - 9/1


8/125 Solenoid front cam profile

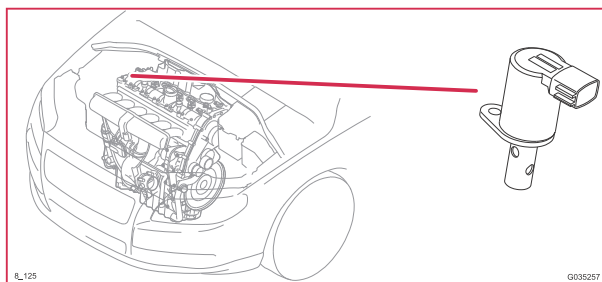


8/157 Turbocharger control valve, 5-Cyl. Diesel 2.4l

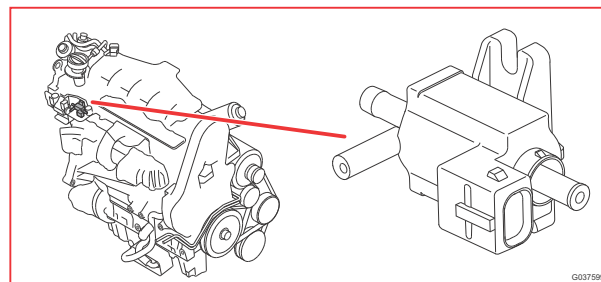


8/126 Solenoid rear cam profile

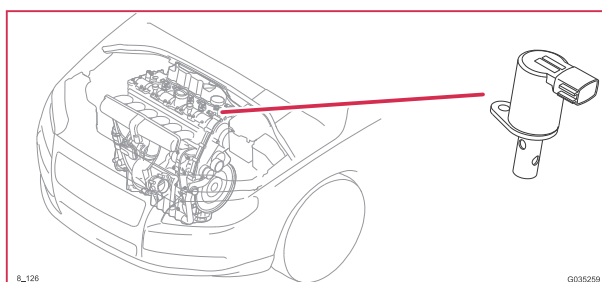


8/159 Bypass valve

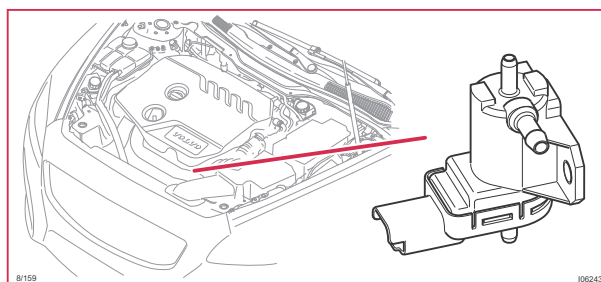


8/128 Driver's belt force limiter

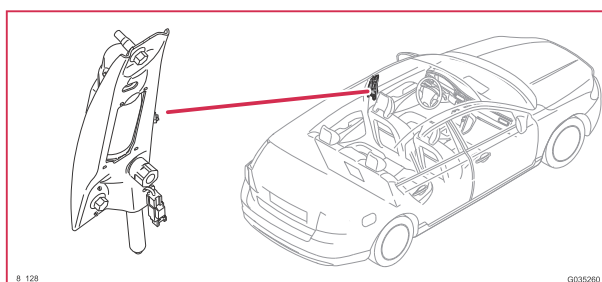


8/164 Electric piston cooling valve

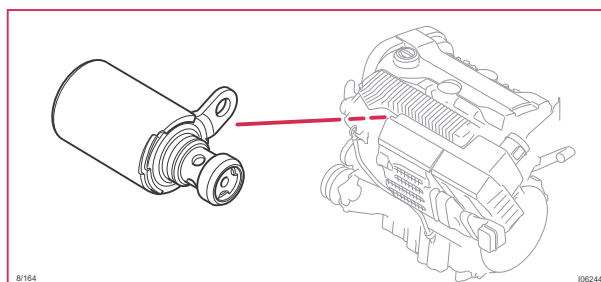


8/129 Passenger belt force limiter

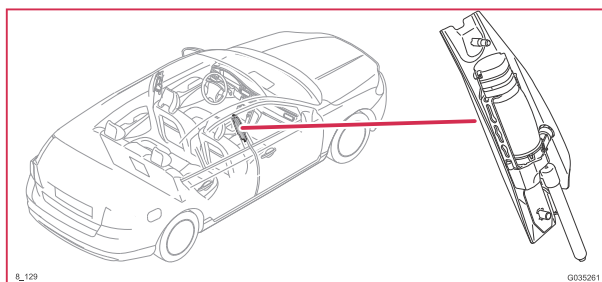


8/167 Bypass solenoid

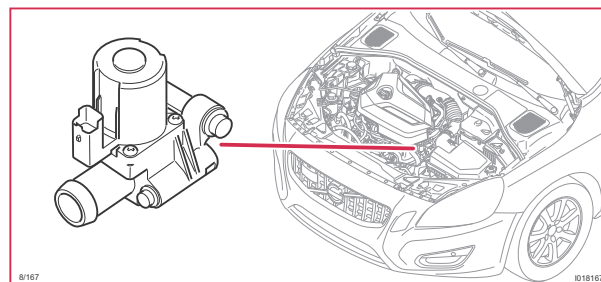

8/134 Solenoid, reverse interlock, manual

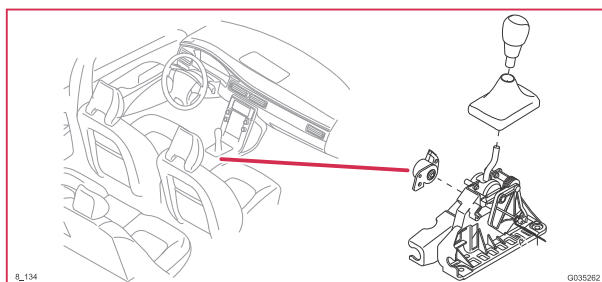


9/1 Outlet 12V front

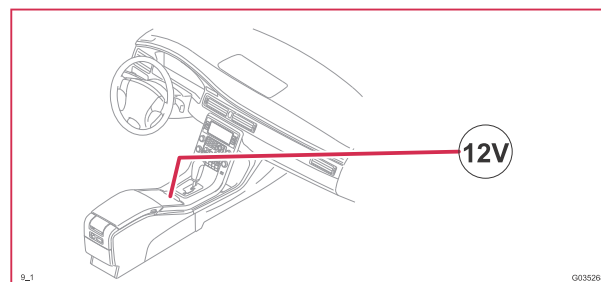


Component illustrations

9/2 - 9/16


9/2 Heated rear window

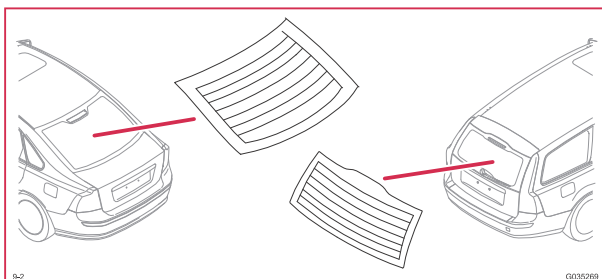


9/12 Seat Heating Module (SHM), driver's side

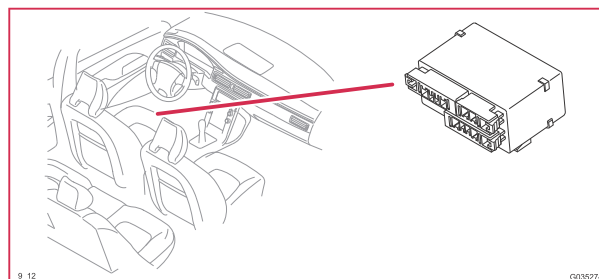


9/8 Heating element, LH rear seat cushion

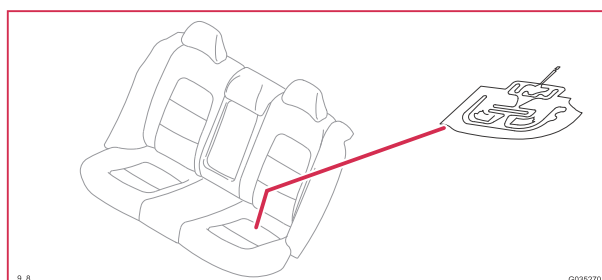


9/13 Seat Heating Module (SHM), passenger side

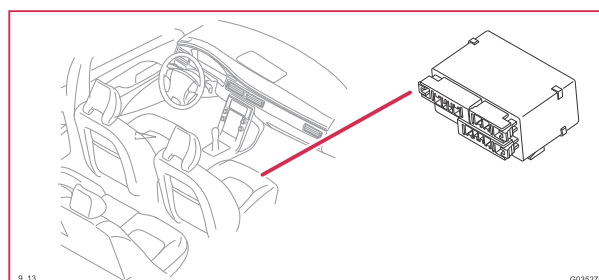


9/9 Heating element, LH rear seat backrest

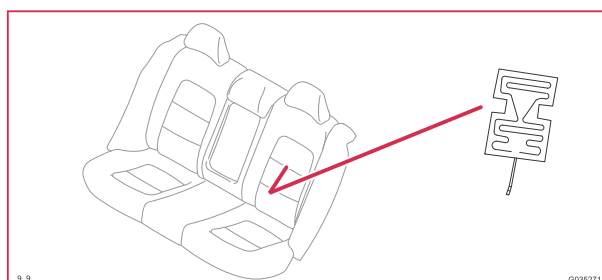


9/14 Control module, rear left seat heater

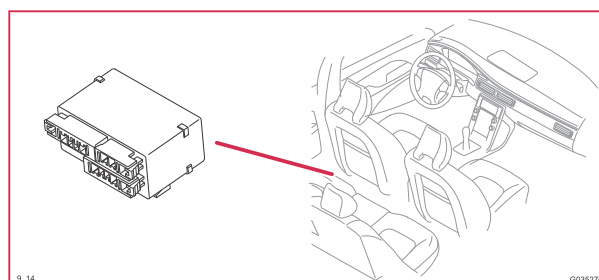


9/10 Heating element, RH rear seat cushion

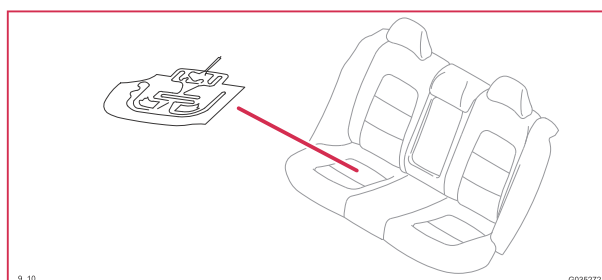


9/15 Control module, rear right seat heater

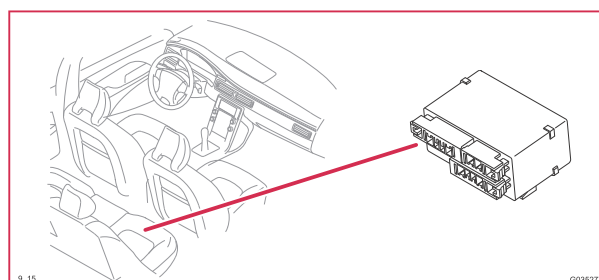

9/11 Heating element, RH rear seat backrest

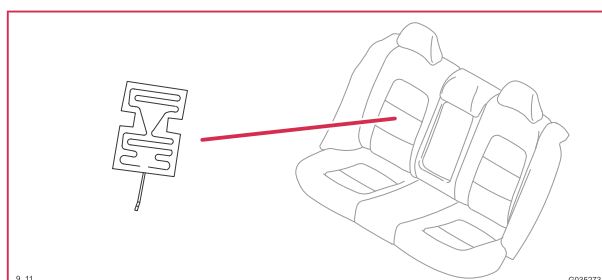


9/16 Heating element, driver's seat backrest

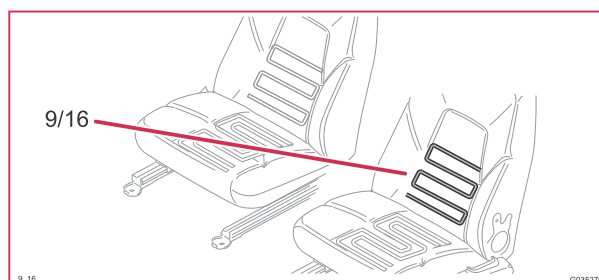


Component illustrations

9/17 - 9/43


9/17 Heating element, passenger seat backrest

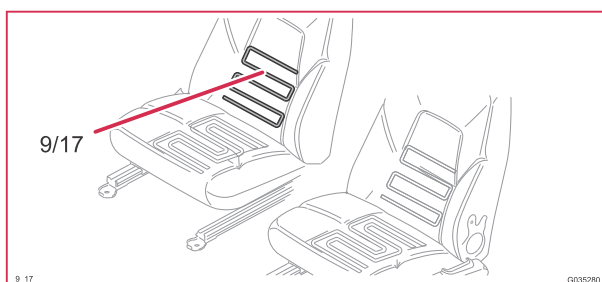


9/32 PTC resistor, crankcase ventilation

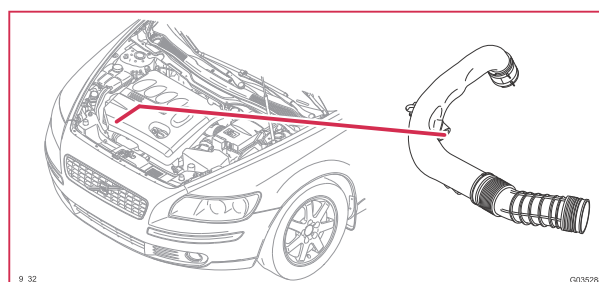


9/18 Heating element, driver's seat cushion

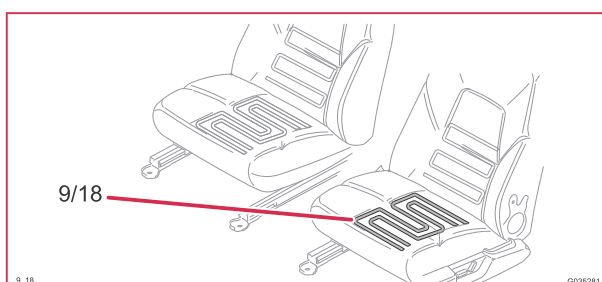


9/38 Electrically heated fuel filter

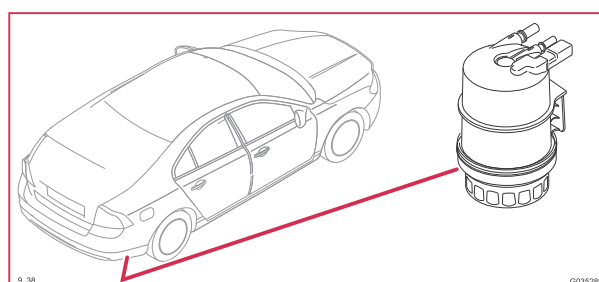


9/19 Heating element, passenger seat cushion

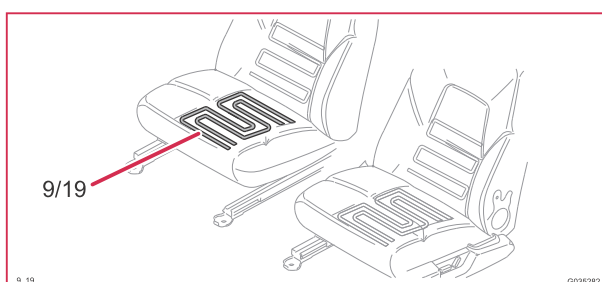


9/39 Heating element camera

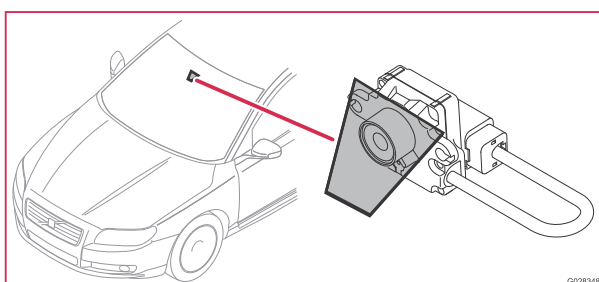


9/25 Outlet 12V rear

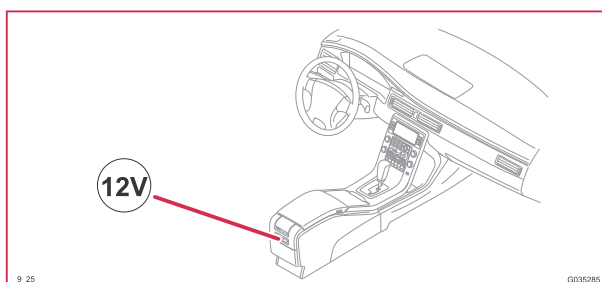


9/42 PTC-element

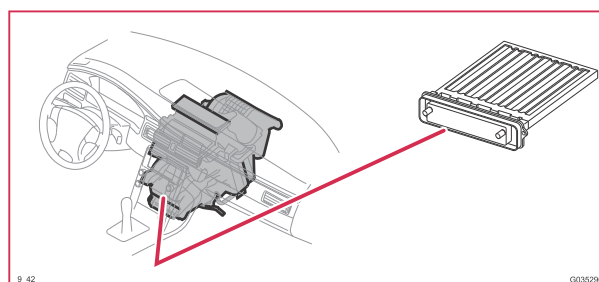

9/30 Auxiliary heater

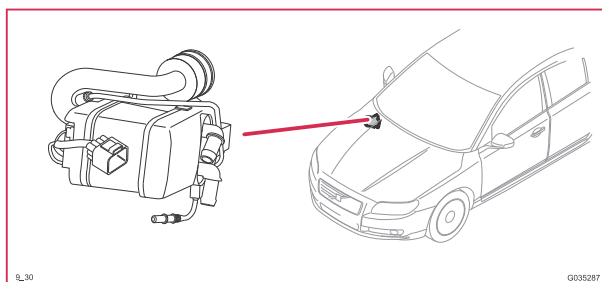


9/43 Heated windshield washer nozzle, left

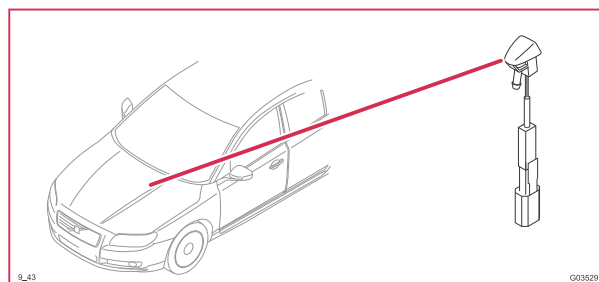


Component illustrations

9/44 - 10/14


9/44 Heated windshield washer nozzle, right

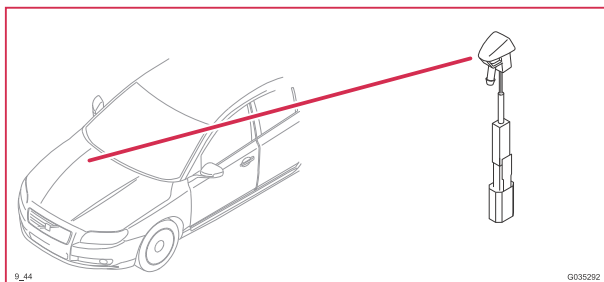


10/11 Front left running/parking light

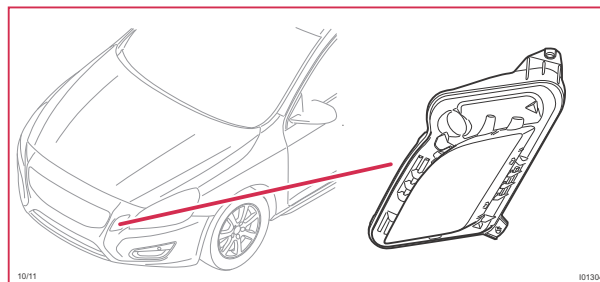


10/1 Left-hand front lamp housing

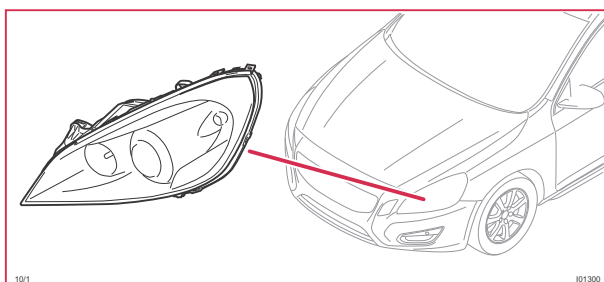


10/12 Front right running/parking light

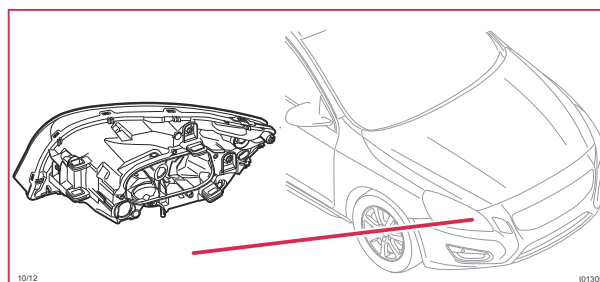


10/2 Right-hand front lamp housing

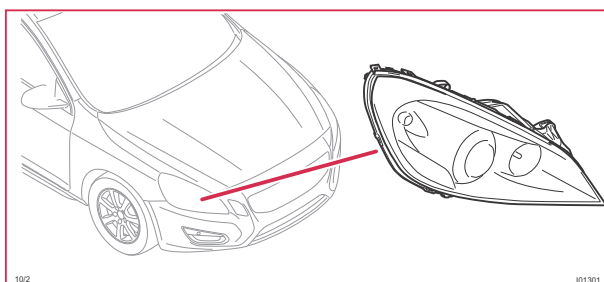


10/12 Front right running/parking light

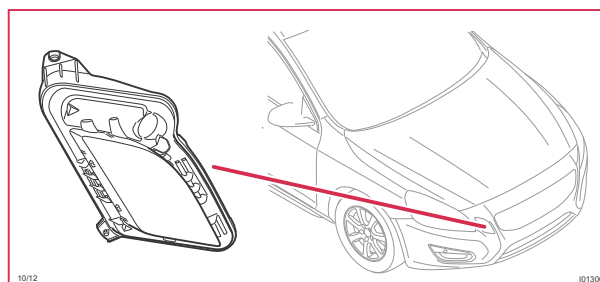


10/3 License plate lighting

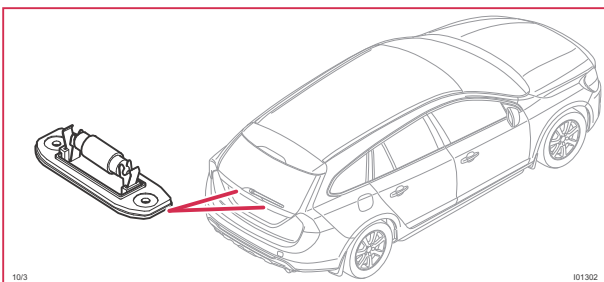


10/13 Front left direction indicator

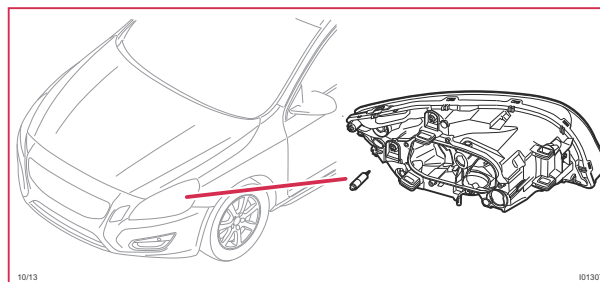

10/11 Front left running/parking light

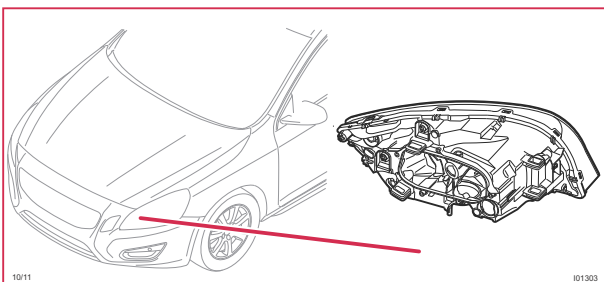


10/14 Front right direction indicator

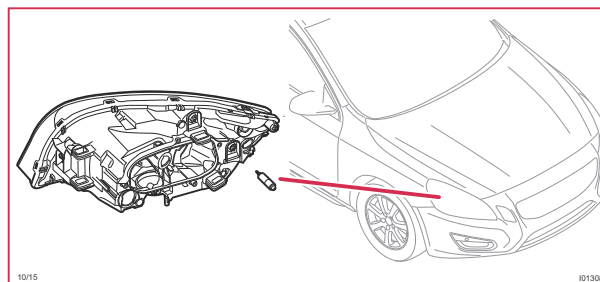


Component illustrations

10/15 - 10/25


10/15 Direction indicator, left door mirror

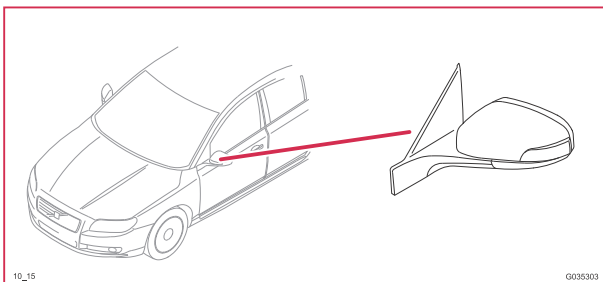


10/18 Lamp housing, rear left, V60

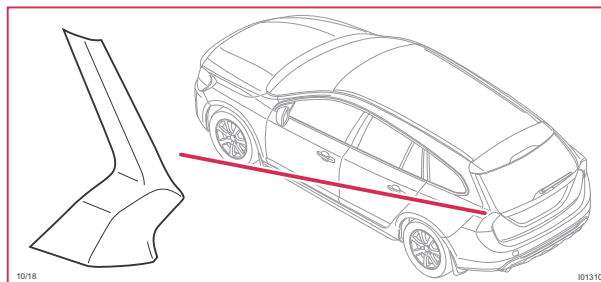


10/16 Direction indicator, right door mirror

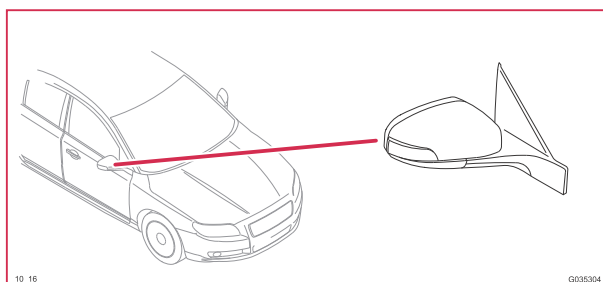


10/19 Auxiliary brake lights, S60

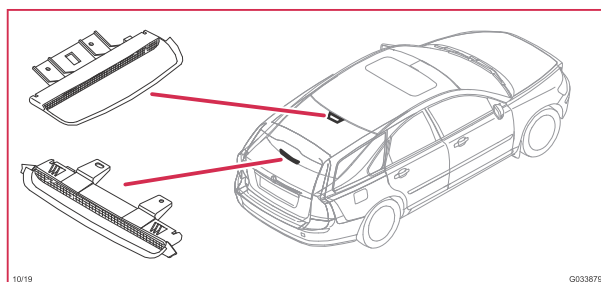


10/17 Lamp housing, rear right, S60

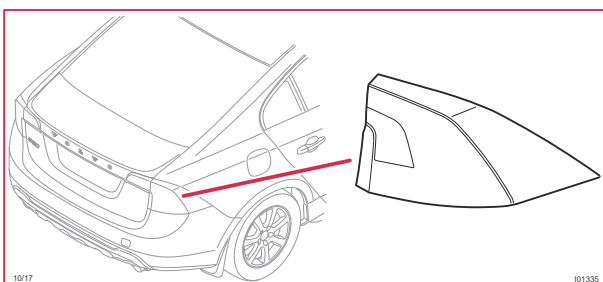


10/19 Auxiliary brake lights V60

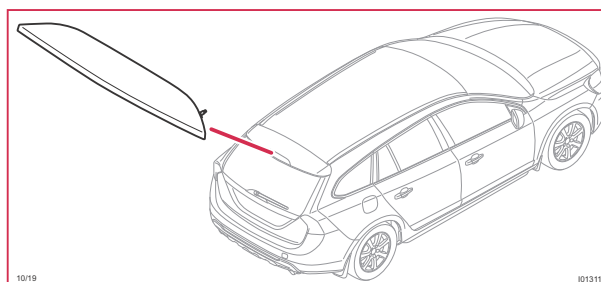


10/17 Lamp housing, rear right V60

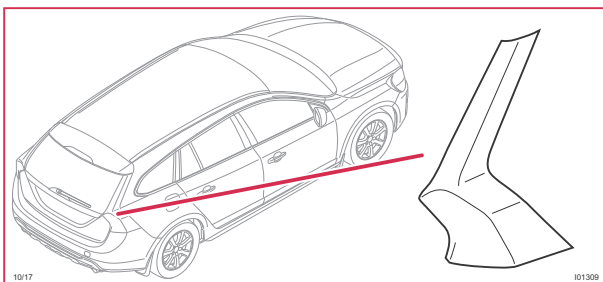


10/22 Ceiling light

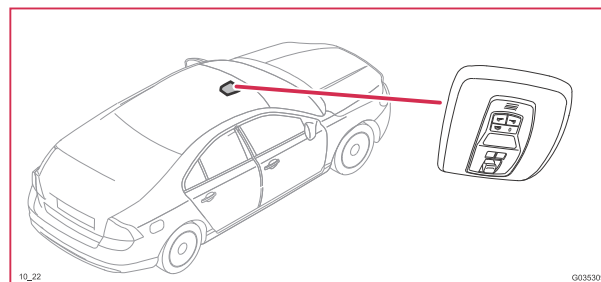

10/18 Lamp housing, rear left, S60

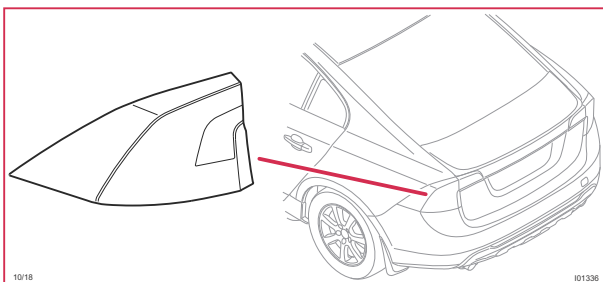


10/25 Ceiling light, cargo compartment, S60

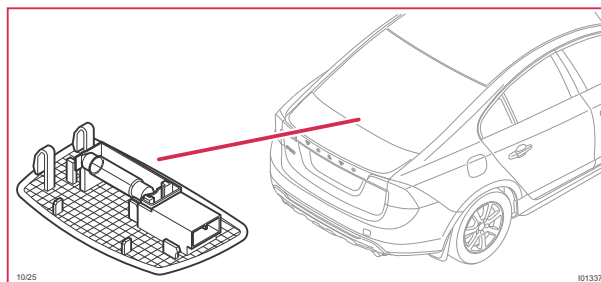


Component illustrations 10/25 - 10/47


10/25 Ceiling light, cargo compartment, V60

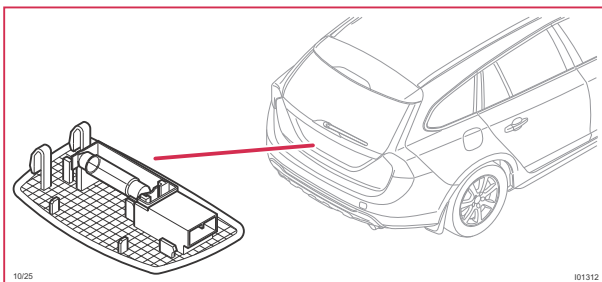


10/44 Tail lamp 1 right, V60

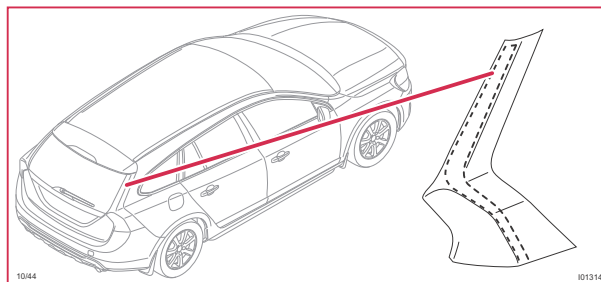


10/29 Glove compartment lighting

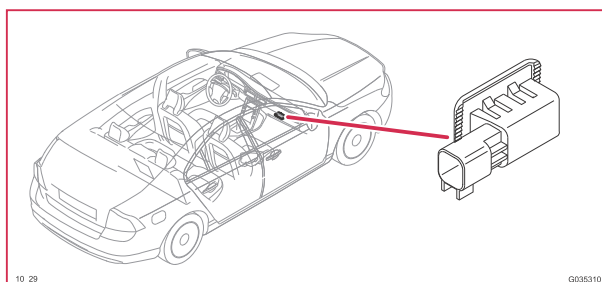


10/46 Fog lights, right rear, S60

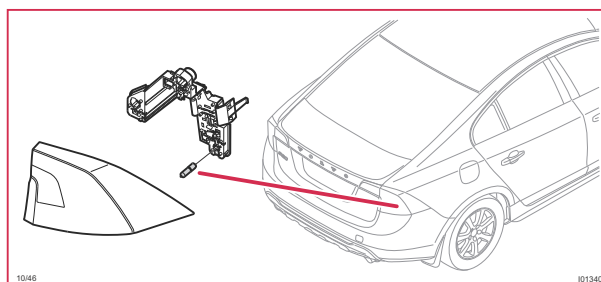


10/43 Right brake light, S60

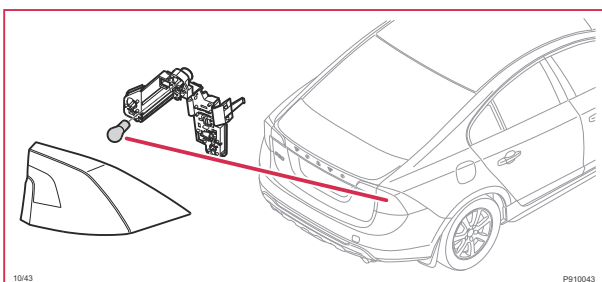


10/46 Fog lights, rear right, V60

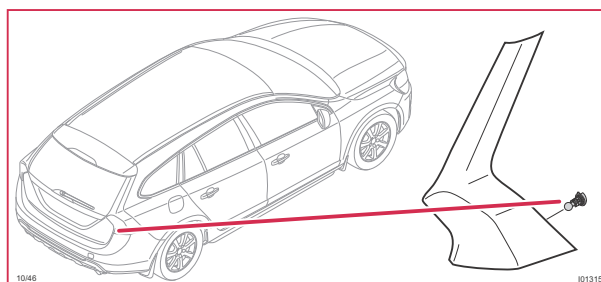


10/43 Right brake light, V60

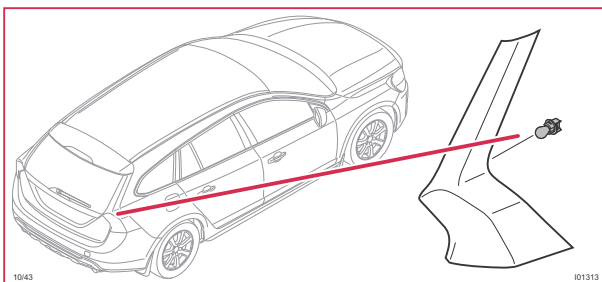


10/47 Direction indicator, right rear, S60

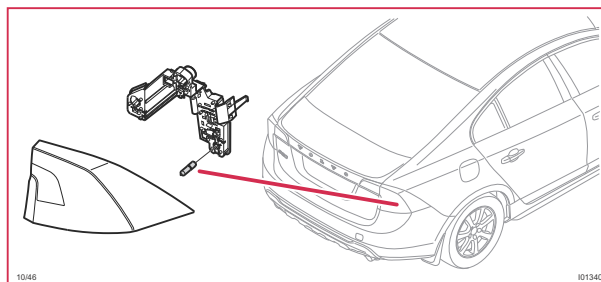

10/44 Tail lamp 1 right, S60

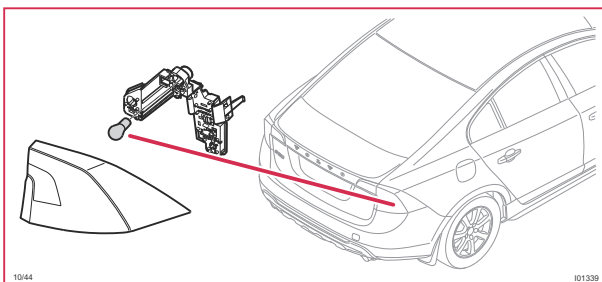


10/47 Direction indicator, right rear, V60

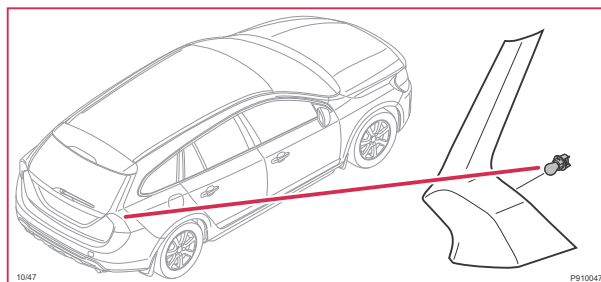


Component illustrations

10/48 - 10/54


10/48 Reversing lights right, S60

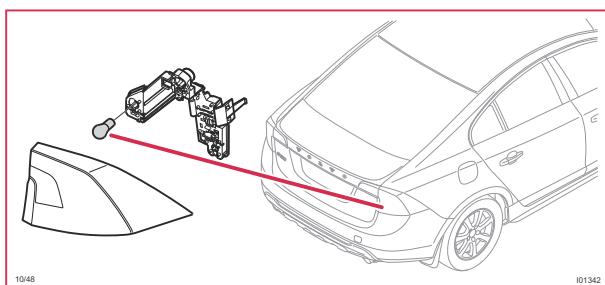


10/51 Tail lamp 1 left, V60

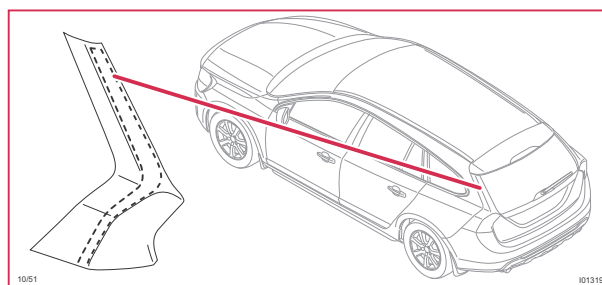


10/48 Reversing lights, right, V60

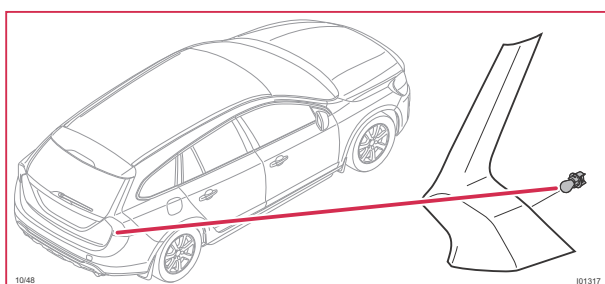


10/53 Fog lights, rear left, S60

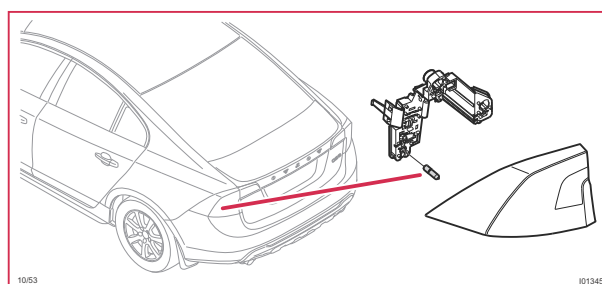


10/50 Brake lights left, S60

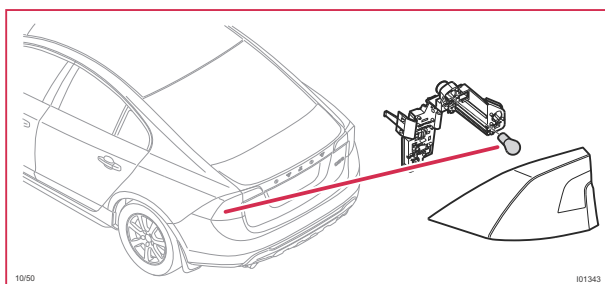


10/53 Fog lights, left rear, V60

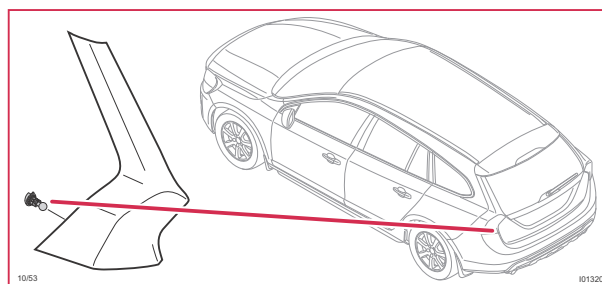


10/50 Brake lights, left, V60

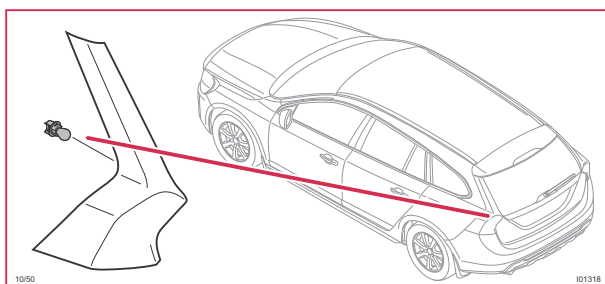


10/54 Direction indicator, rear left, S60

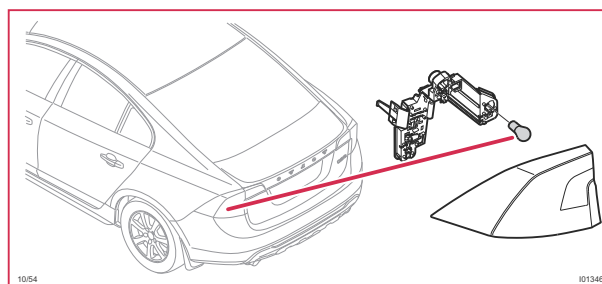

10/51 Tail lamp 1 left, S60

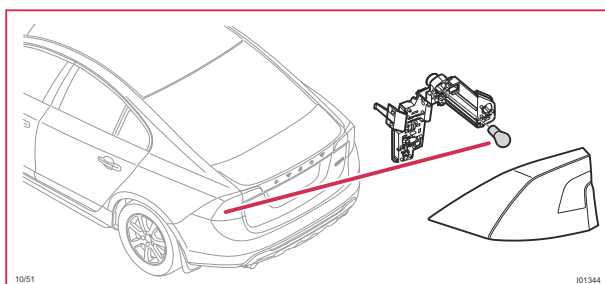


10/54 Direction indicator, left rear, V60

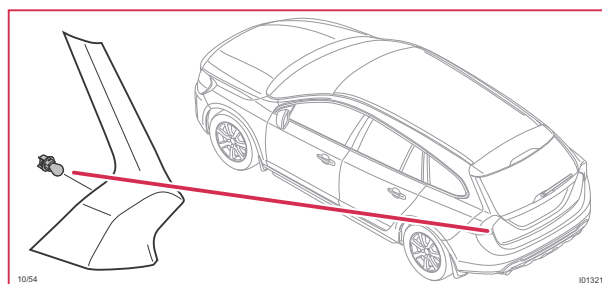


Component illustrations

10/55 - 10/114


10/55 Reversing lights left, S60

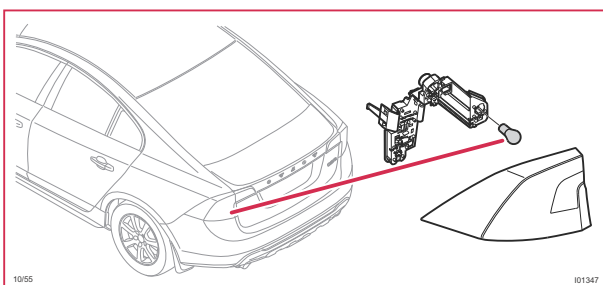


10/68 Left-hand high beam

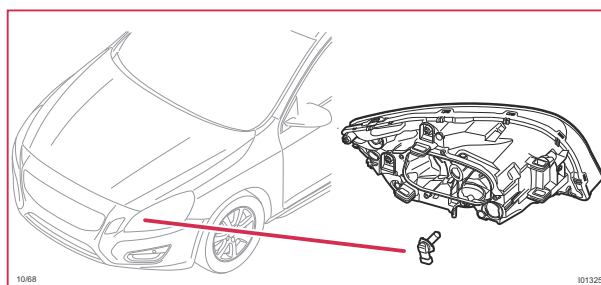


10/55 Reversing lights left, V60

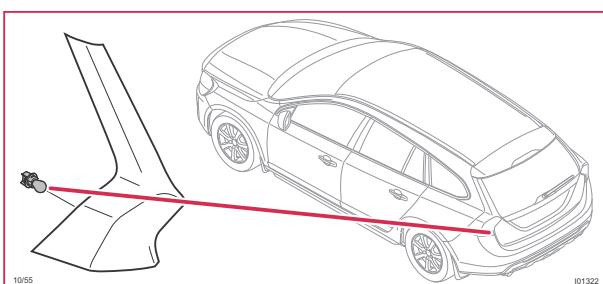


10/69 Auxiliary light, front left

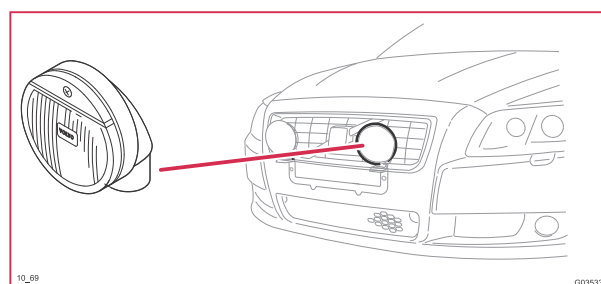


10/64 Right-hand high beam

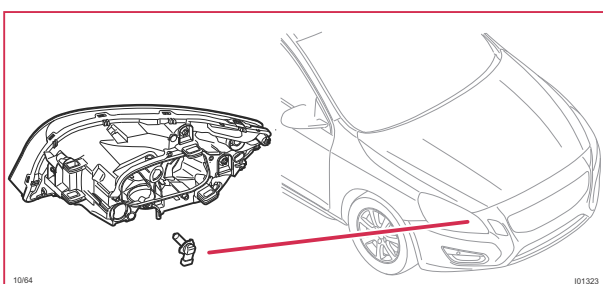


10/70 Left-hand low beam

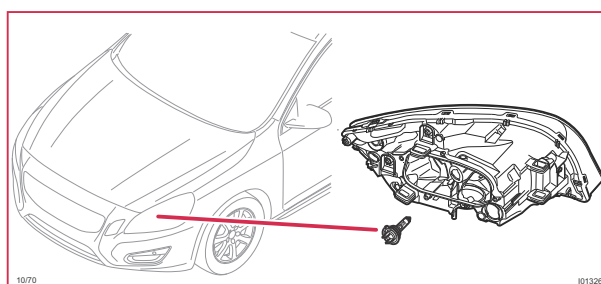


10/65 Auxiliary light, front right

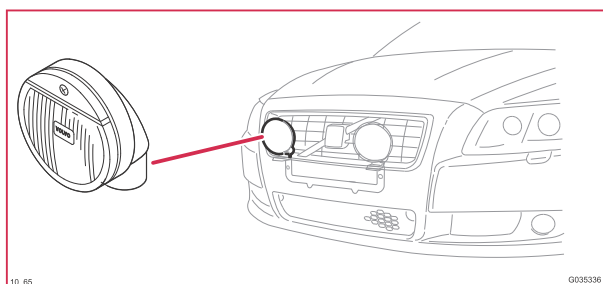


10/72 Front ashtray lighting

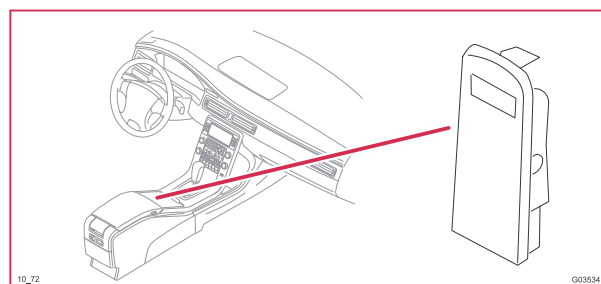

10/66 Right-hand low beam

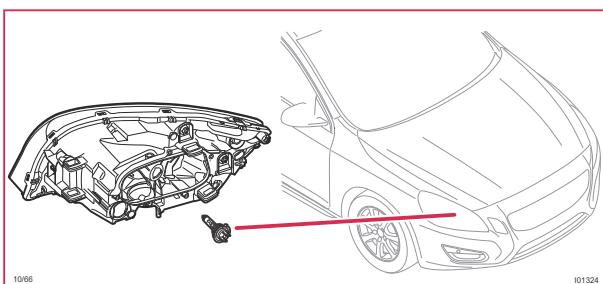


10/114 Left-hand vanity mirror lighting

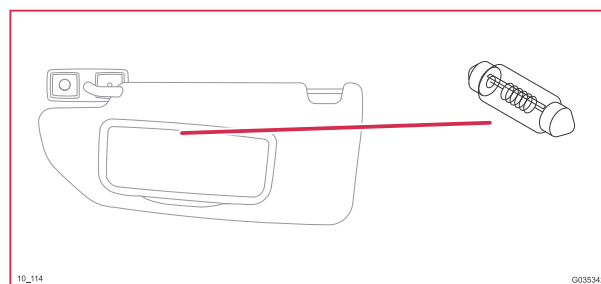


Component illustrations 10/115 - 11A/no.


10/115 Right-hand vanity mirror lighting

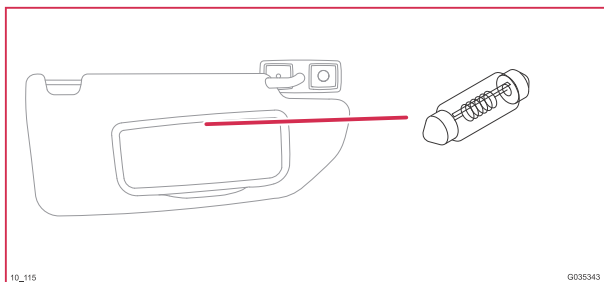


10/149 Lighting, right front door mirror

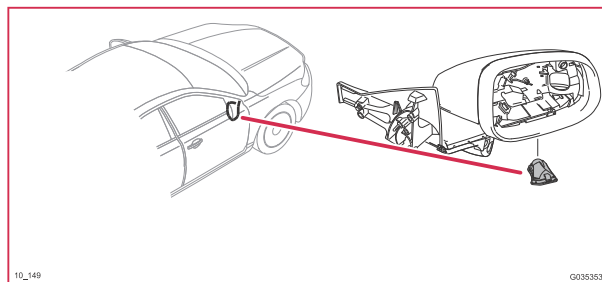


10/125 Left-hand front courtesy lighting

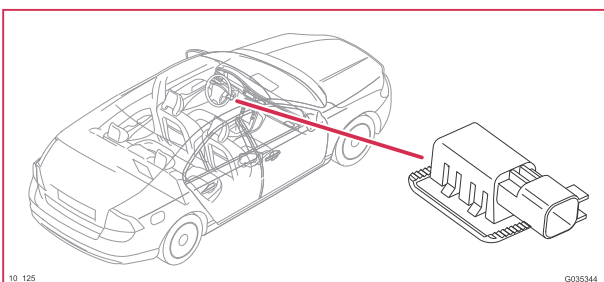


10/150A Rear reading light

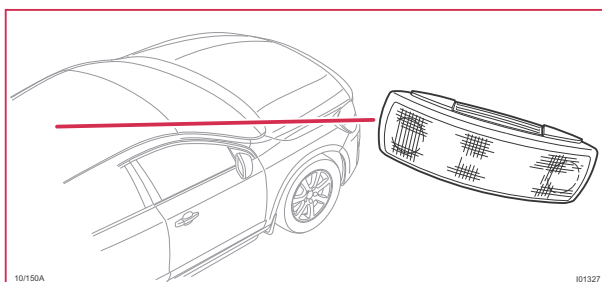


10/126 Right-hand front courtesy lighting

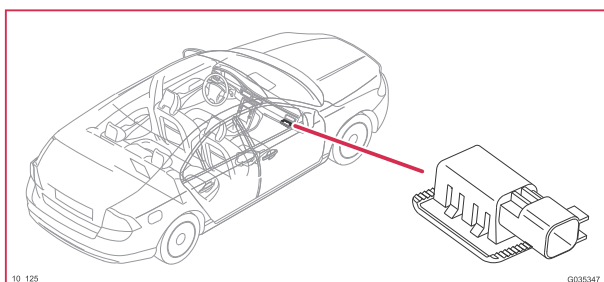


10/249 Sill lighting, front driver's side

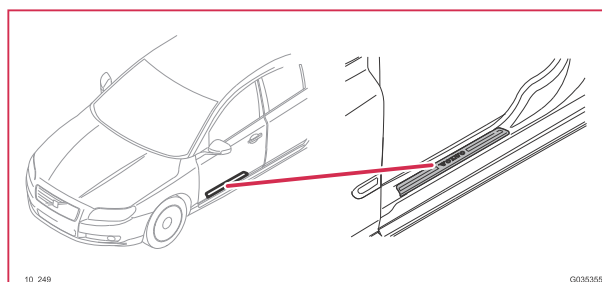


10/127 Lighting, cargo compartment, left-hand side, S60

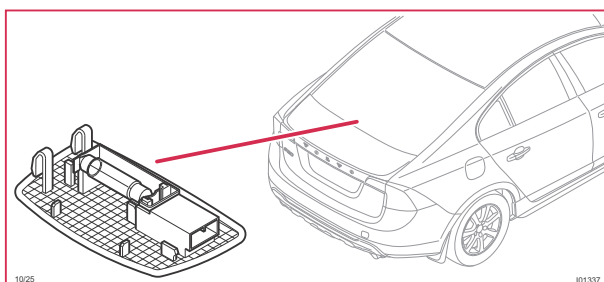


10/250 Sill lighting, front passenger side

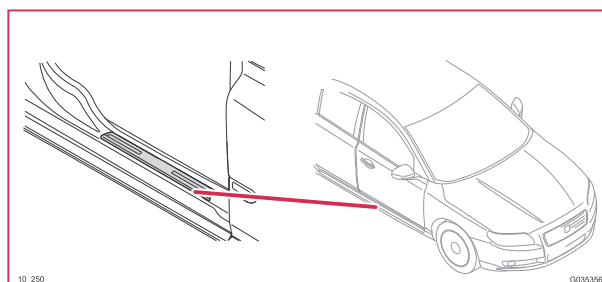

10/148 Lighting, left front door mirror

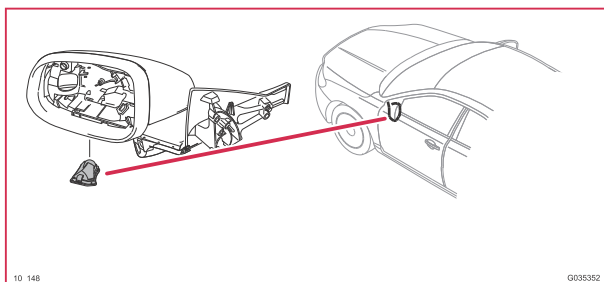


11A/no. Main fuses in engine compartment fuse box

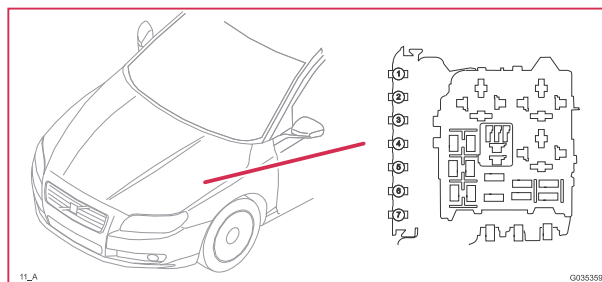


Component illustrations 11B/no. - 16/3.1


11B/no. Fuses in engine compartment fuse box

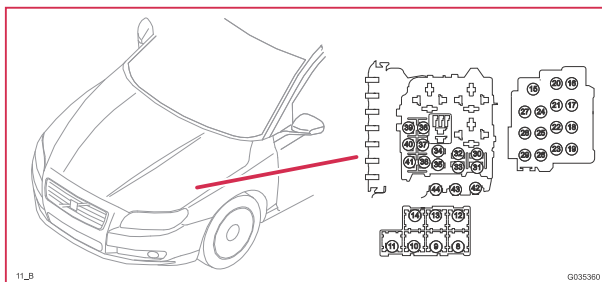


11C/no Fuses in distribution box passenger compartment

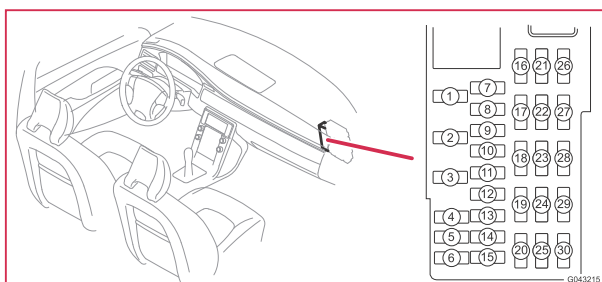


11D/A Fuses in cargo compartment fuse box

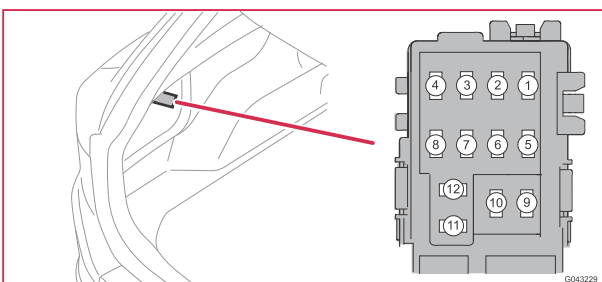


15/31 Distribution box in engine compartment

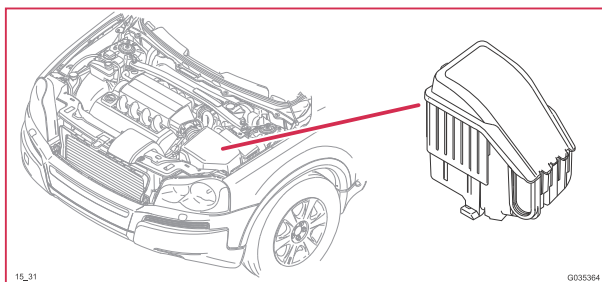


15/32 Distribution box in cargo compartment, S60

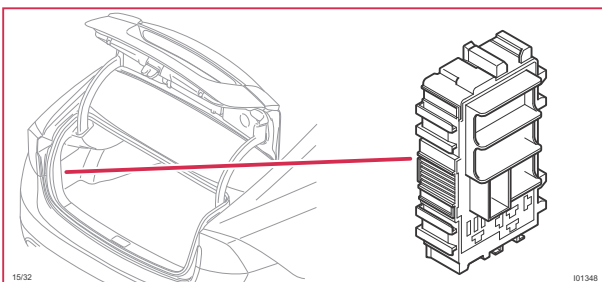


15/32 Distribution box in cargo compartment, V60

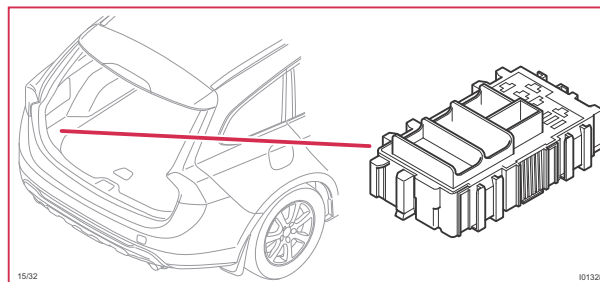


15/36 Distribution box in passenger compartment

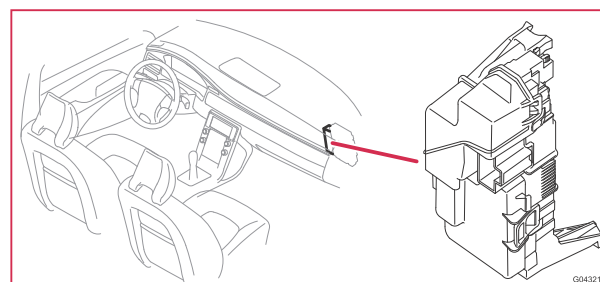


15/37 Engine compartment cold zone

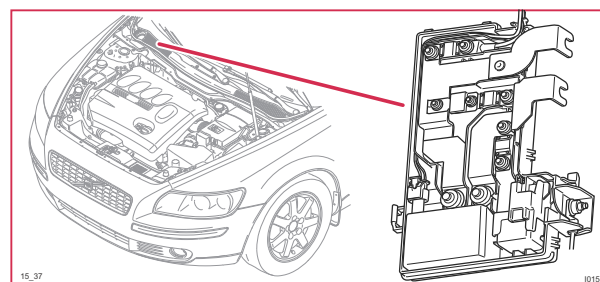

16/1 Integrated Audio Module (IAM)

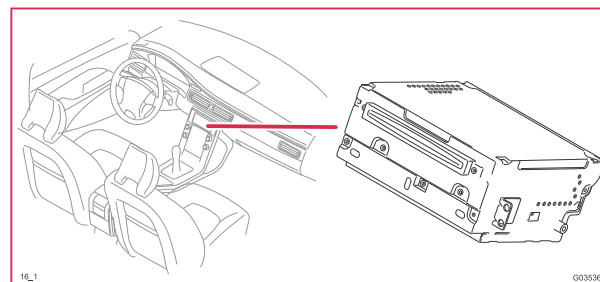


16/3.1 Right-hand front door speaker

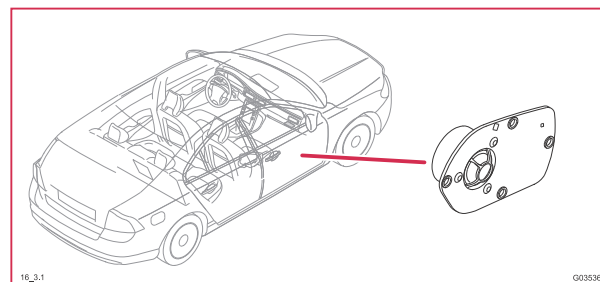


Component illustrations

16/3.2 - 16/26


16/3.2 Right-hand front door speaker

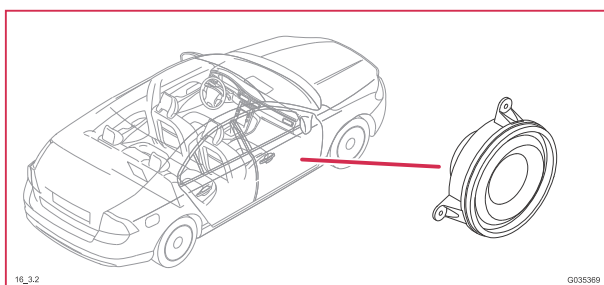


16/10 Horn 1

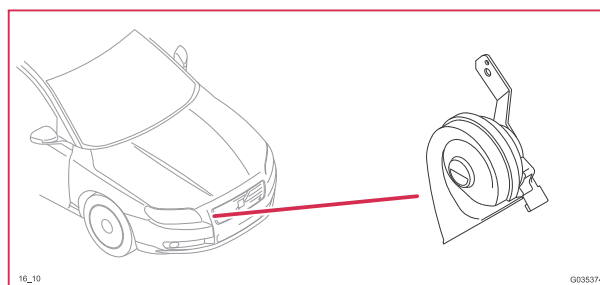


16/4 Left-hand front door speaker

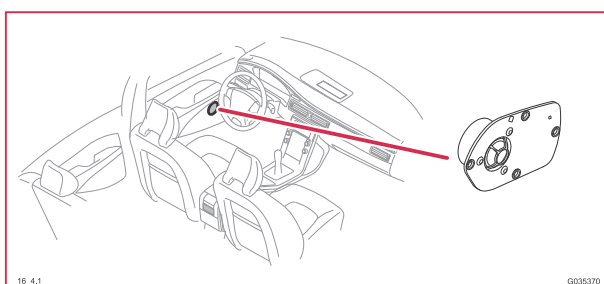


16/11 Horn 2

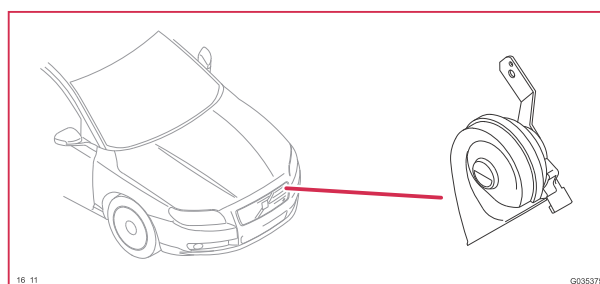


16/4 Left-hand front door speaker

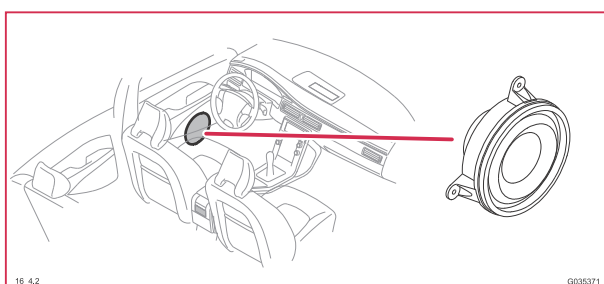


16/16 Amplifier window antenna, S60

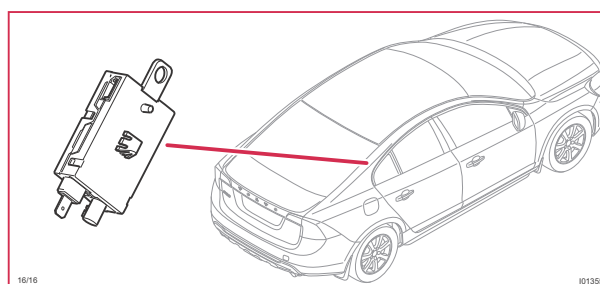


16/5 Right-hand rear door speaker

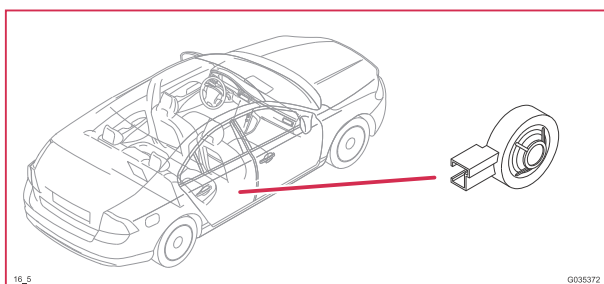


16/16 Amplifier window antenna, V60

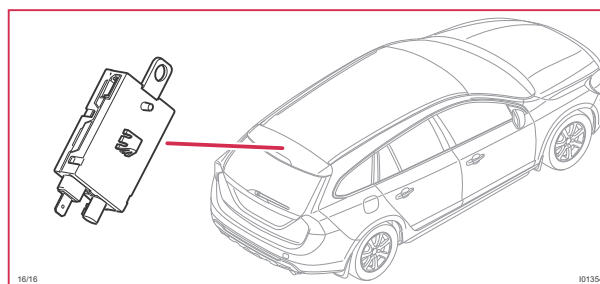

16/6 Left-hand rear door speaker

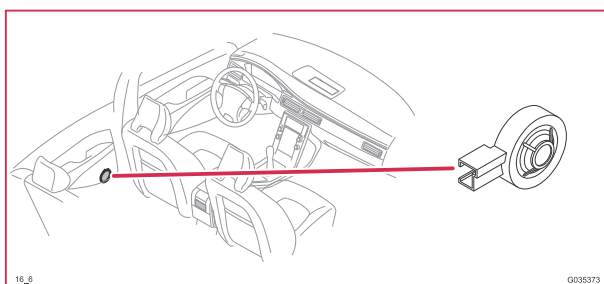


16/26 Center dashboard speaker

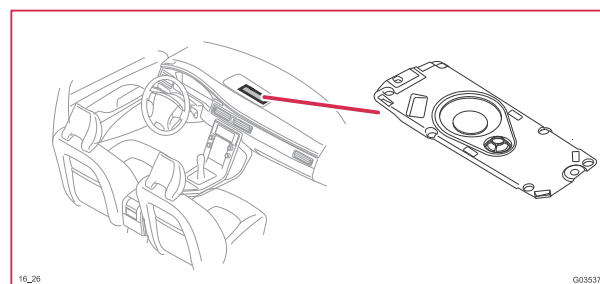


Component illustrations

16/29 - 16/60


16/29 Loudspeaker mid-range left front

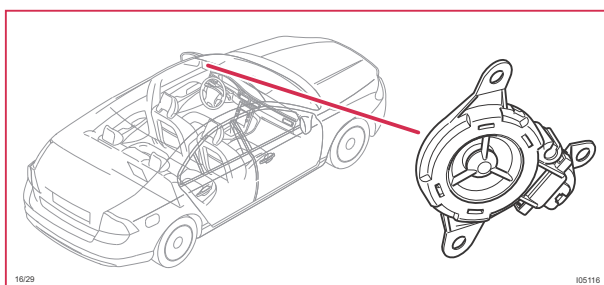


16/47 Antenna GSM/GPS/RDAR

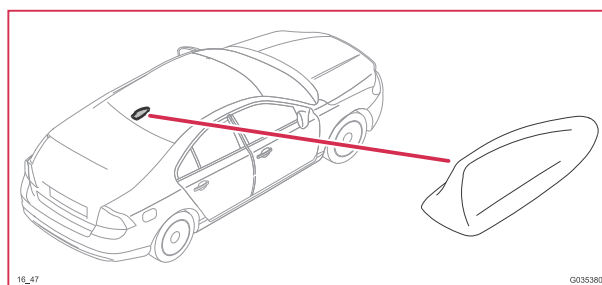


16/30 Loudspeaker mid-range right front

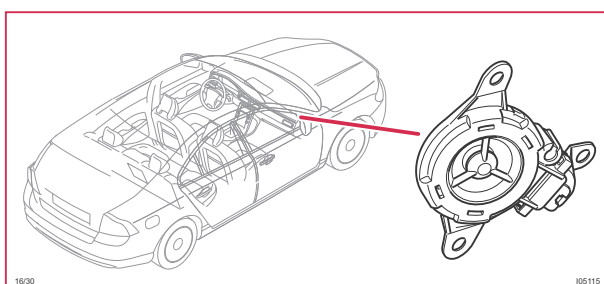


16/49 Traffic message channel module (TMC)

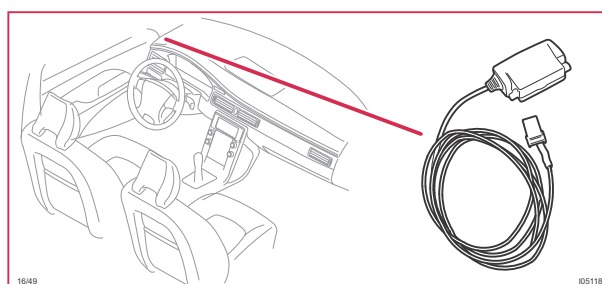


16/35 Siren Control Module (SCM)

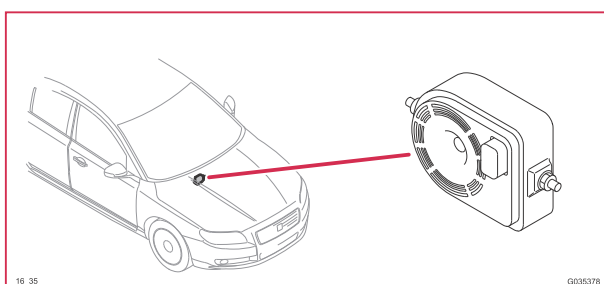


16/55 Left-hand front tweeter

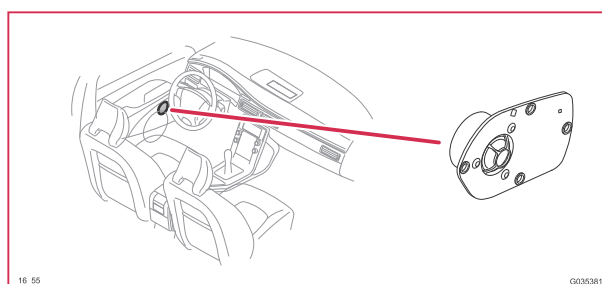

16/36 TV receiver

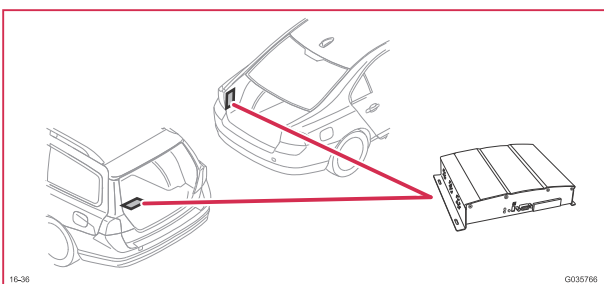


16/56 Right-hand front tweeter

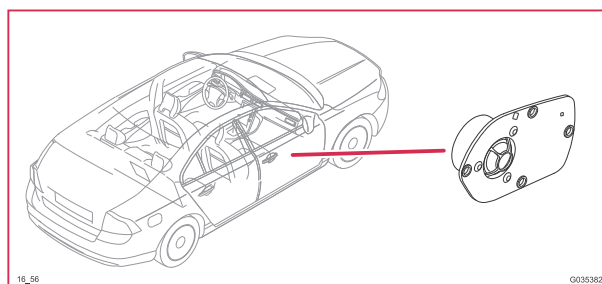

16/45 Portable navigation system




16/60 Phone Module (PHM)

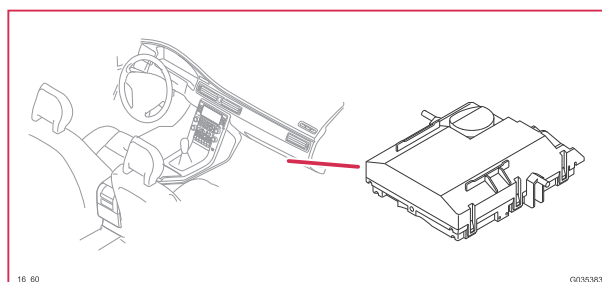


Component illustrations

16/63 - 16/123


16/63 GPS antenna, cellular phone

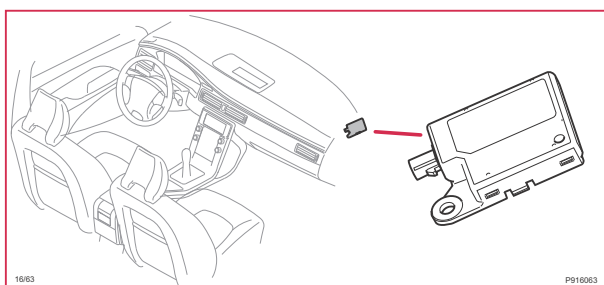


16/98 Microphone

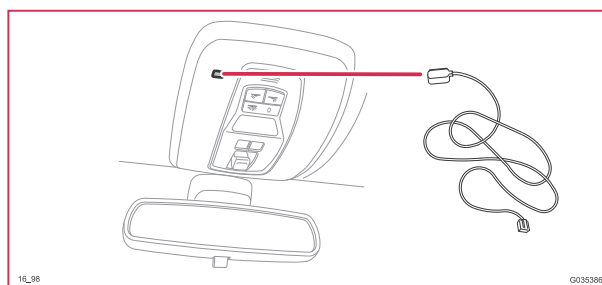


16/65 Immobilizer Antenna Unit (IAU)

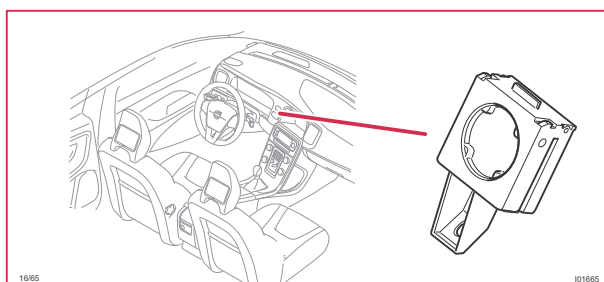


16/105 Audio module (AUD)

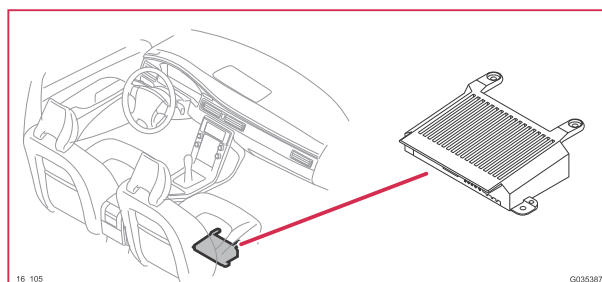


16/71 Amplifier window antenna 1, S60

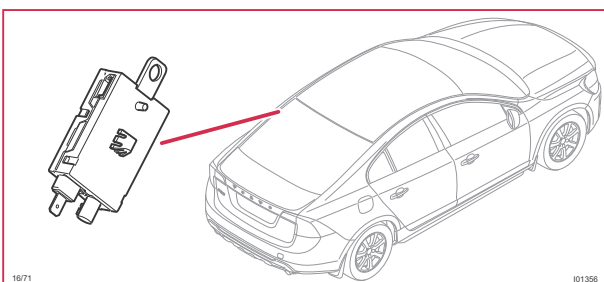


16/109 Control module (RSE)

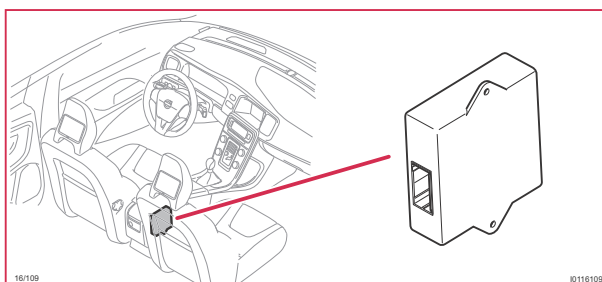


16/71 Amplifier window antenna 1, V60

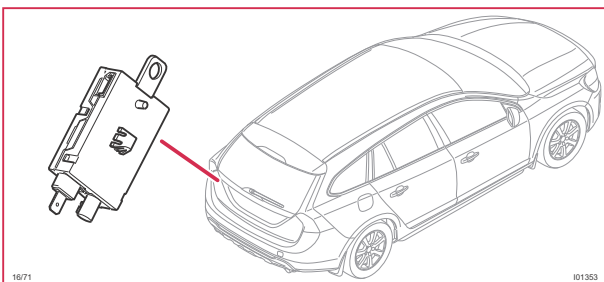


16/121 VICS-antenna

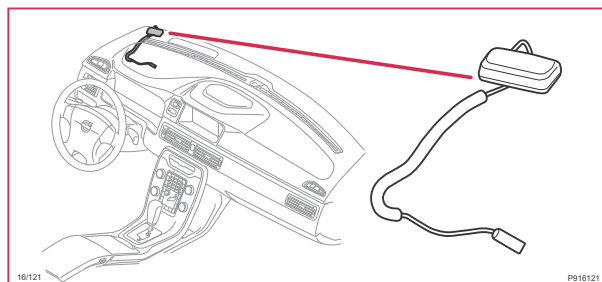

16/73 Amplifier window antenna 2, V60 (TV/DAB)

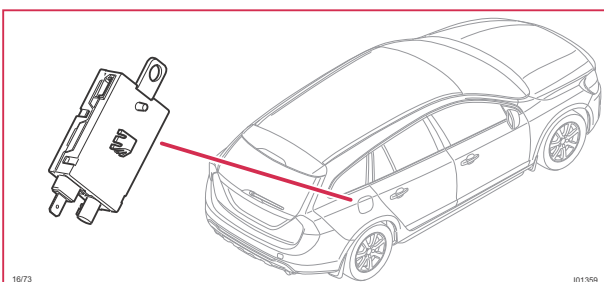


16/123 Auxiliary input (AUX)

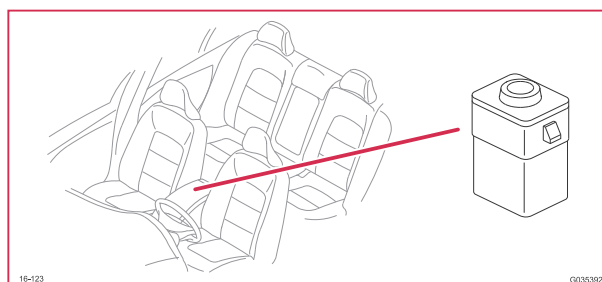


Component illustrations

16/127 - 16/145


16/127 Microphone, mobile phone handsfree

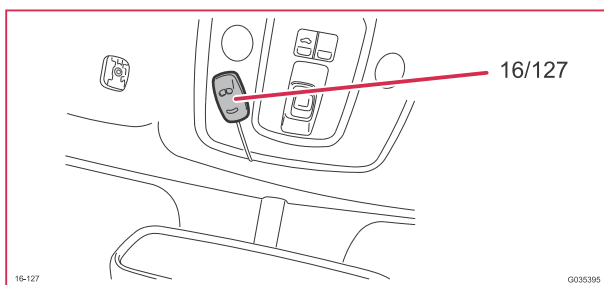


16/136 LH rear door tweeter

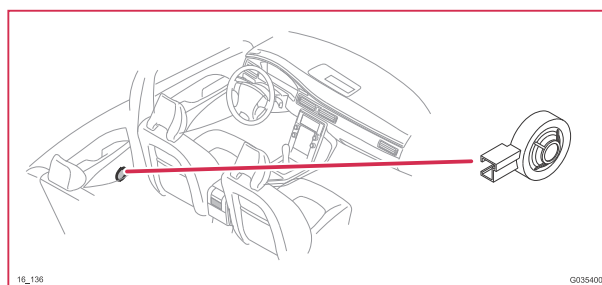


16/132 Antenna door lock trunk lid/tailgate, V60

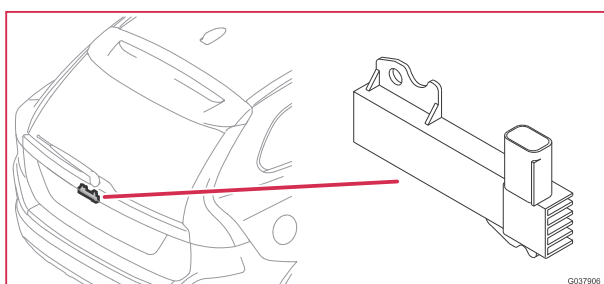


16/137 RH rear door tweeter

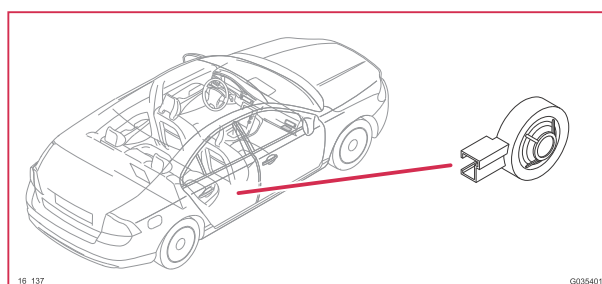


16/133 Antenna, door lock, cargo compartment, S60

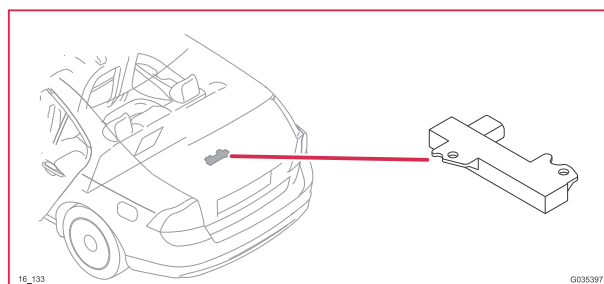


16/140 SIM card reader

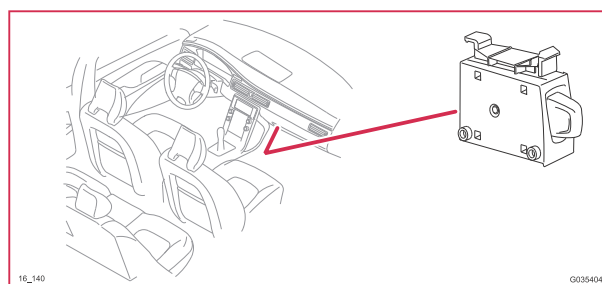


16/134 Antenna, door lock, passenger compartment 2

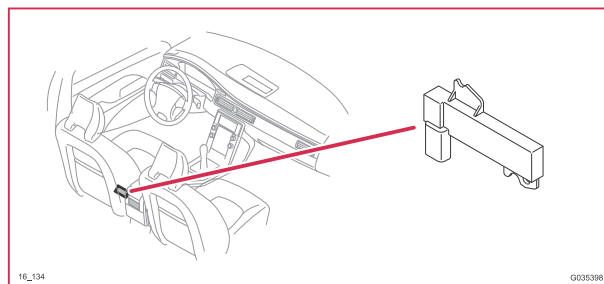


16/141 Interference filter, rear window, left

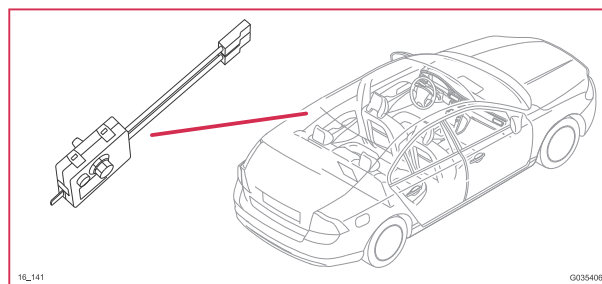

16/135 Antenna, door lock, passenger compartment 3

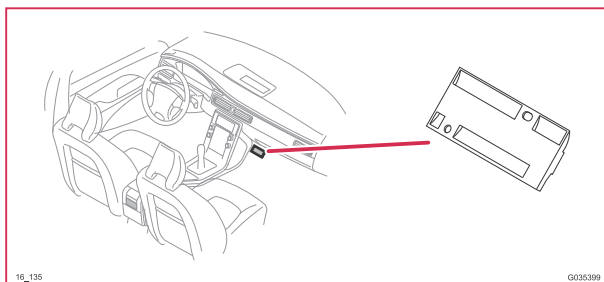


16/145 Remote Digital Audio Receiver (RDAR)

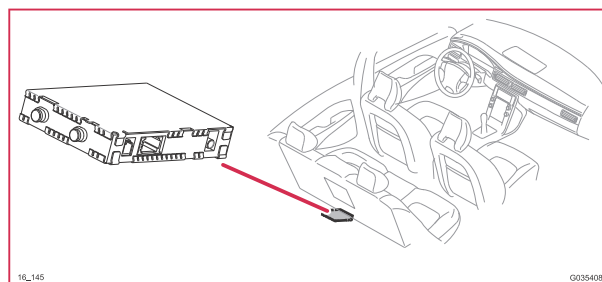


Component illustrations

16/159 - 17/19


16/159 Control module, mobile phone handsfree

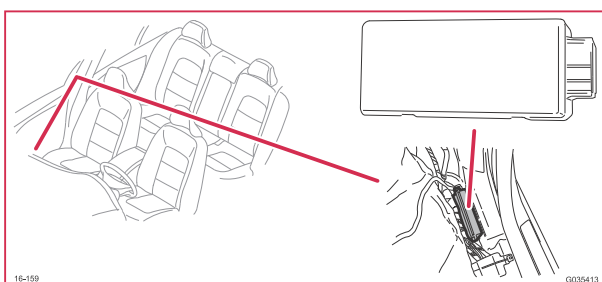


16/185 TV Antenna

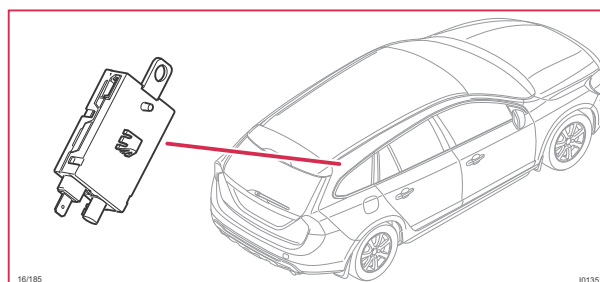


16/162 Digital Audio Broadcast Module (DABM)

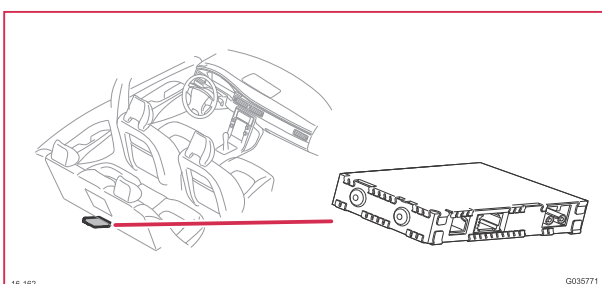


16/186 TV-Antenna, V60

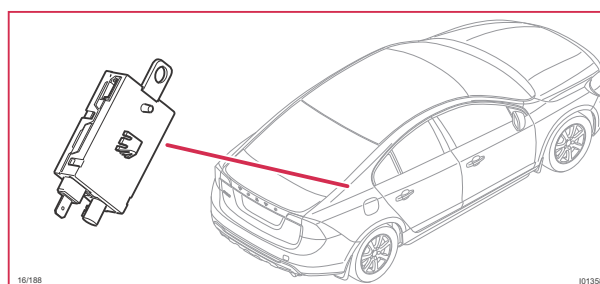


16/164 Display/DVD headrest left (RSE)

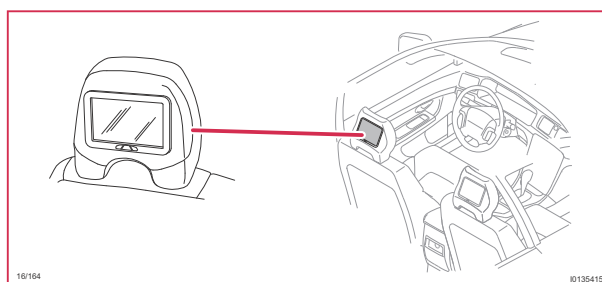


16/188 TV Antenna

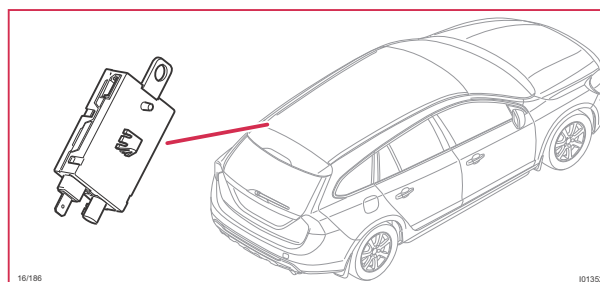


16/165 Display/DVD headrest right (RSE)

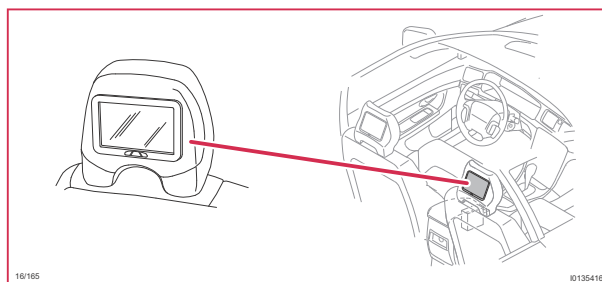


17/13 Data link connector

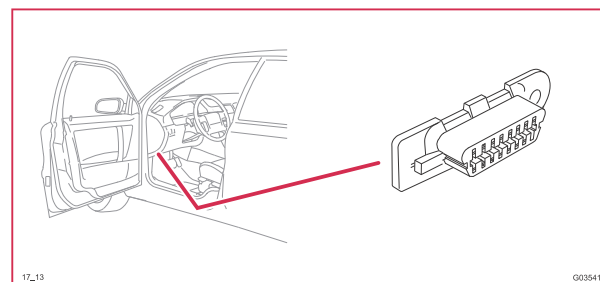

16/181 Rear headphone sockets

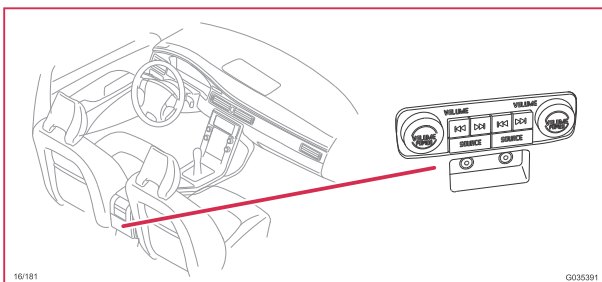


17/19 12 V outlet, cargo compartment

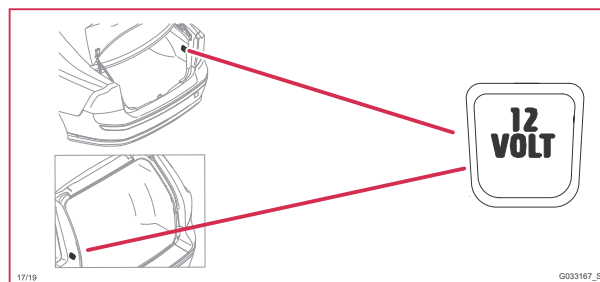


Component illustrations 17/39 - 26/7


17/39 13-pin outlet, tow hitch cable harness

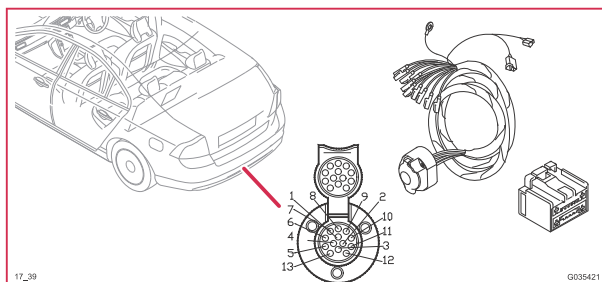


20/3-8 Spark plug and ignition coil

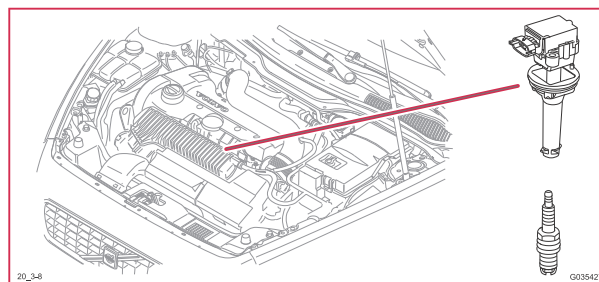


17/42 USB-port

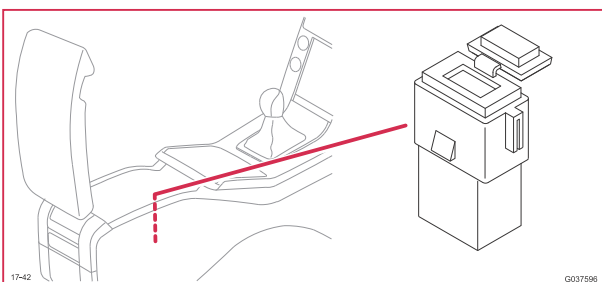


20/16 Capacitor

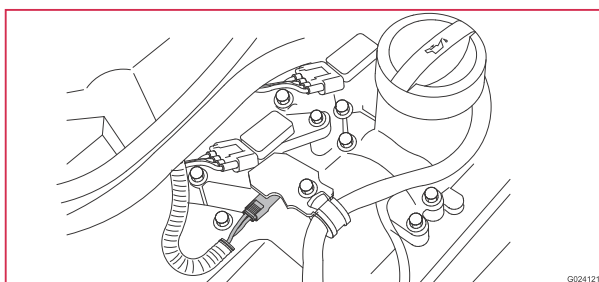


17/42 USB port, accessories

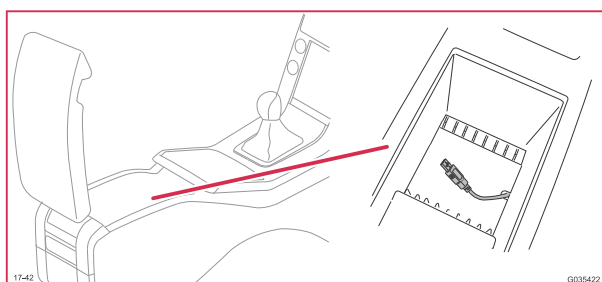


20/22-26 Glow plug

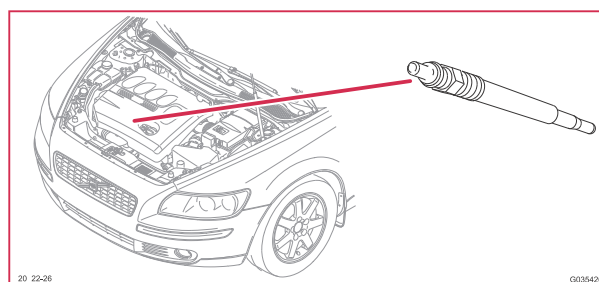


17/45 Alcohol lock outlet

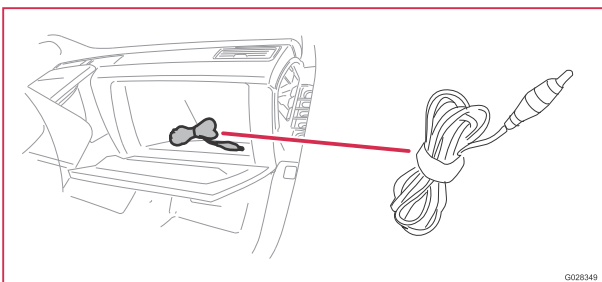


26/6 Converter/control module, sill moldings, driver's side

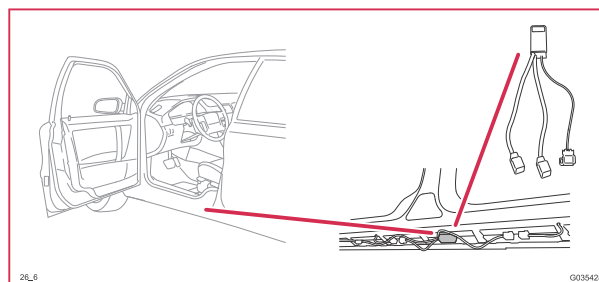

18/4 Contact reel

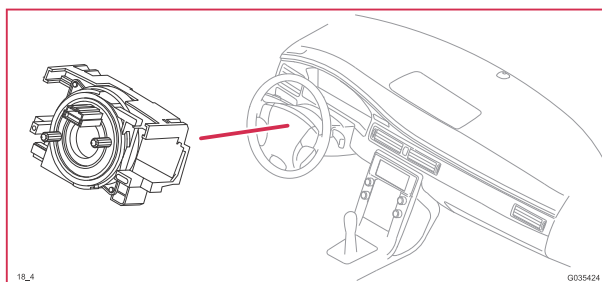


26/7 Converter/control module, sill moldings, passenger side

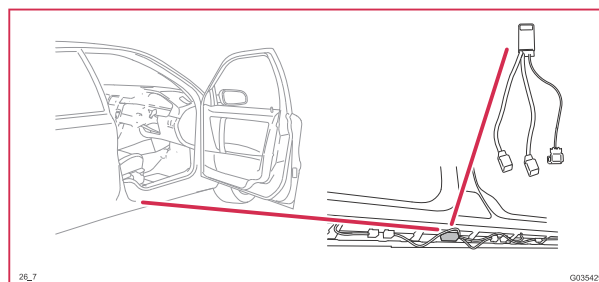


Component illustrations 26/8 - 31/4


26/8 Alcohol lock charging cradle

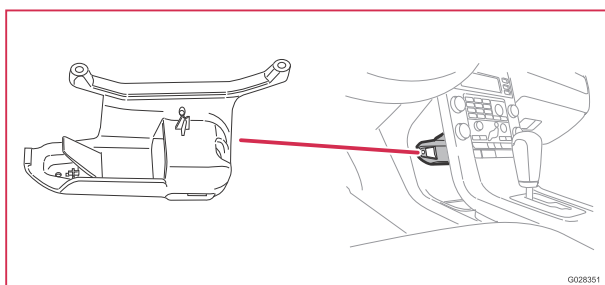


27/8 Camera, wide angle front

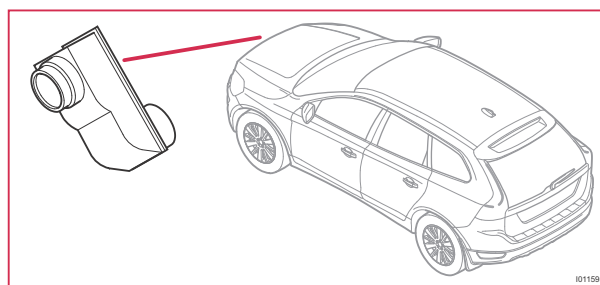


27/2 Indicator, visual collision warning

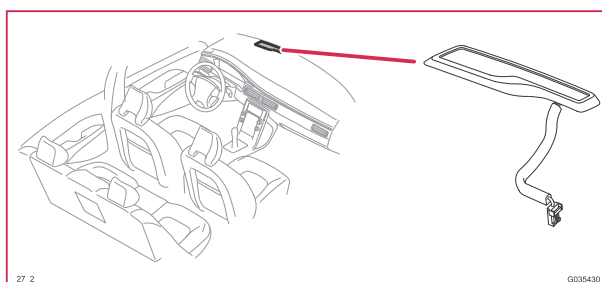


31/1 Ground connection, PTC

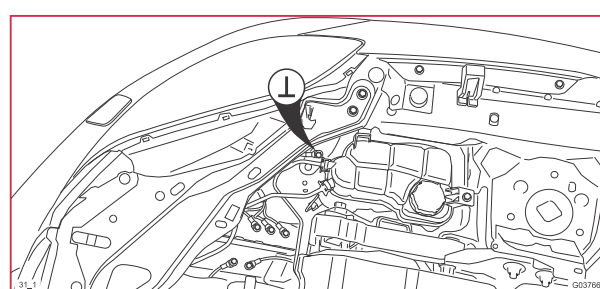


27/3 Left Camera Module (LCM)

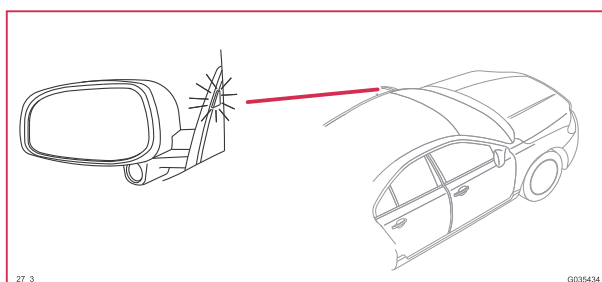


31/2 Ground connection, Left wheel housing

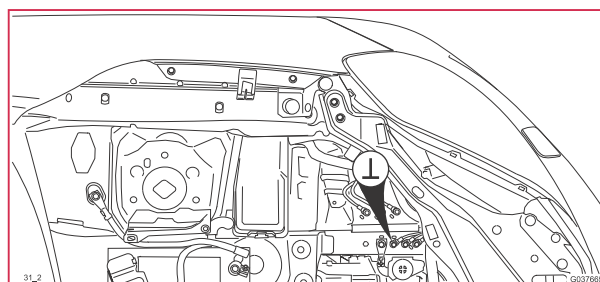


27/4 Right Camera Module (RCM)

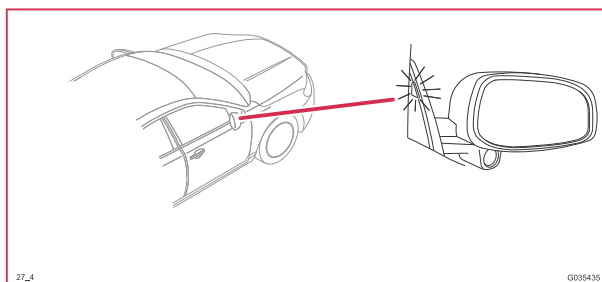


31/3 Ground connection, Body battery

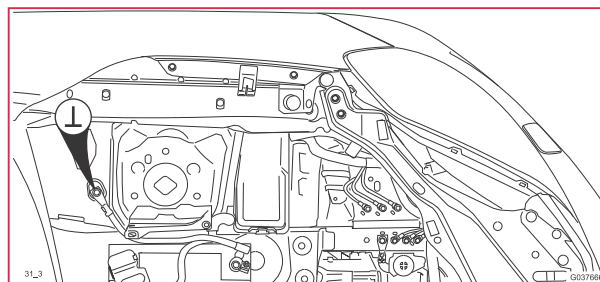

27/6 Camera

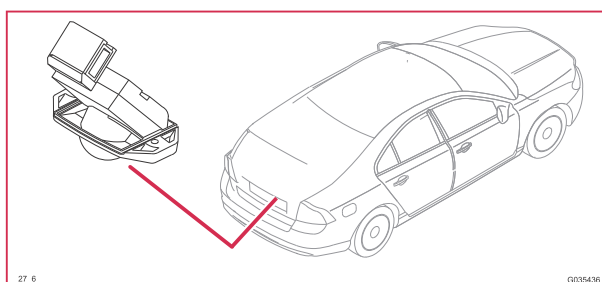


31/4 Ground connection, engine

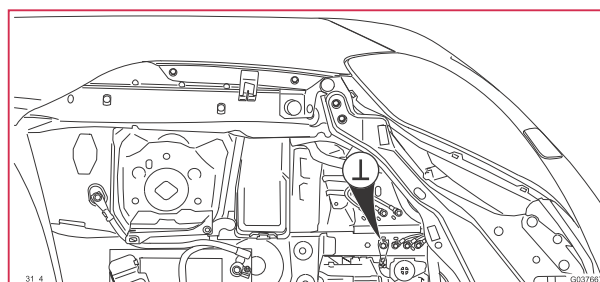


Component illustrations

31/5 - 31/67


31/5 Ground connection, rear edge roof

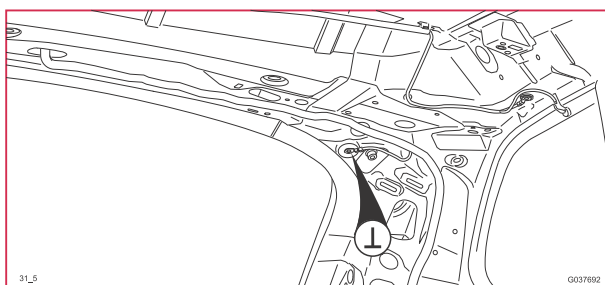


31/6 Ground connection, Left bottom rail

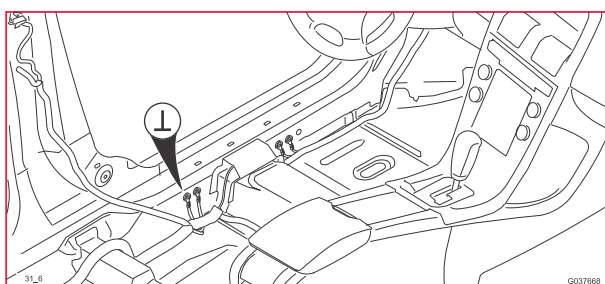


31/7 Ground connection, Left bottom rail

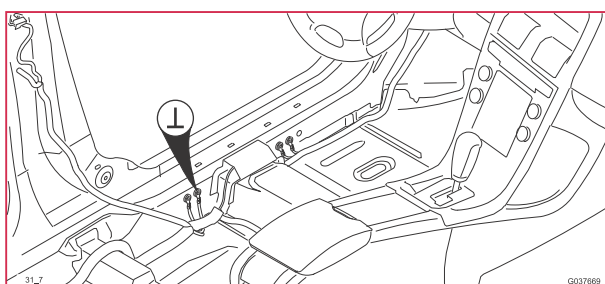


31/10 Ground connection, Left bottom rail

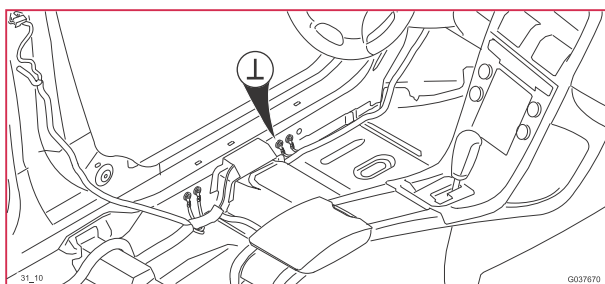


31/15 Ground connection, Right bottom rail

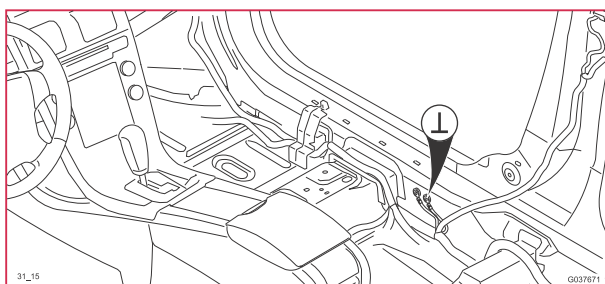


31/47 Ground connection, Left rear bumper abutment

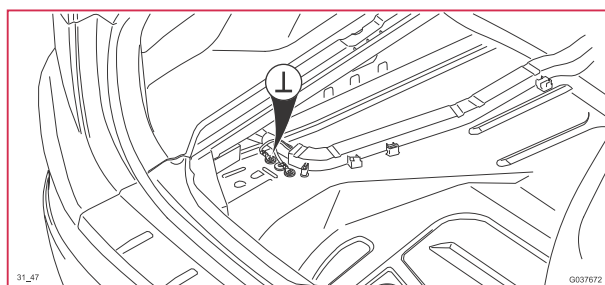


31/48 Ground connection, Right rear bumper abutment

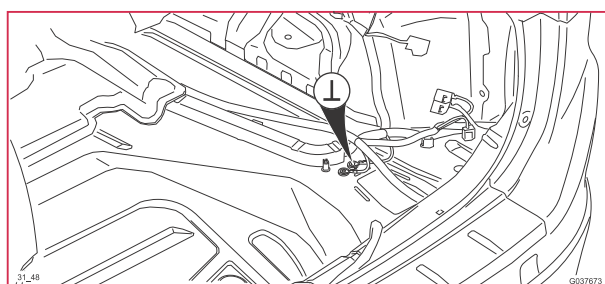


31/65 Ground connection, Rear seat riser, left side 1

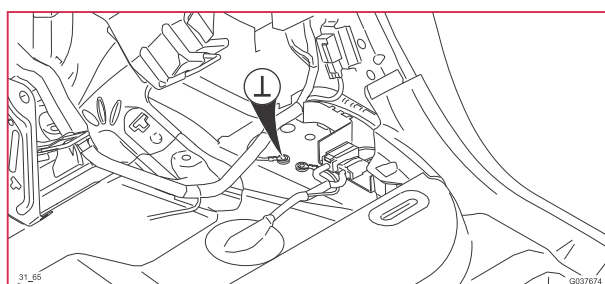

31/66 Ground connection, Rear seat riser, left side 2

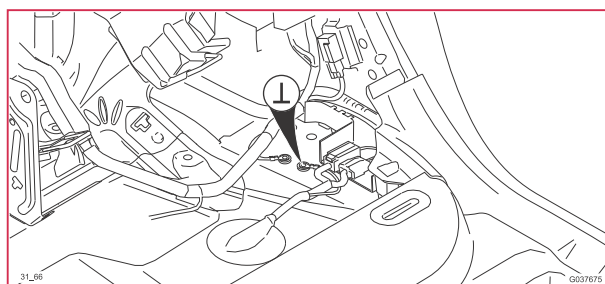


31/67 Ground connection, Rear seat riser, right side 1

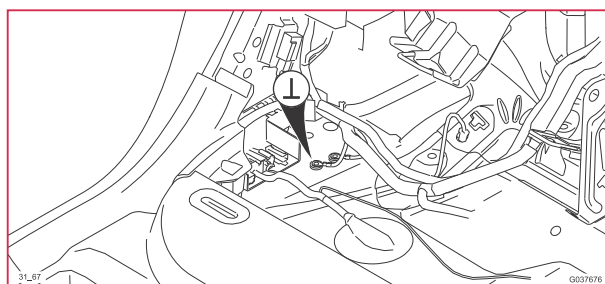


Component illustrations

31/68 - 31/90


31/68 Ground connection, Rear seat riser, right side 2

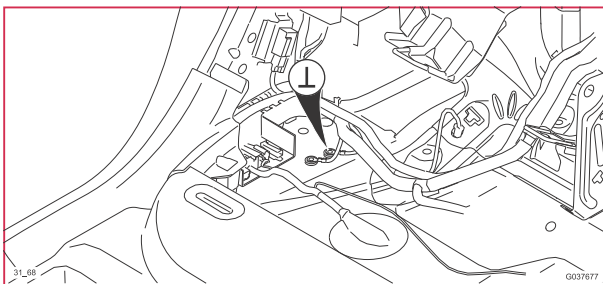


31/88 Ground connection, Engine ignition coils, 6-Cyl.

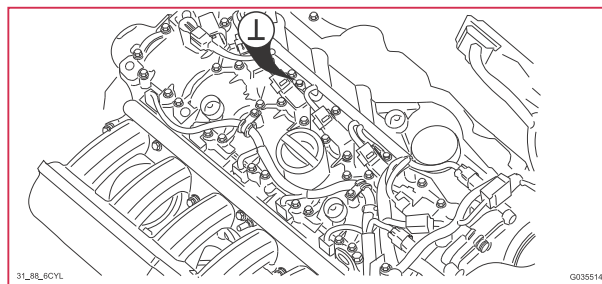


31/83 Ground connection, Left bottom rail

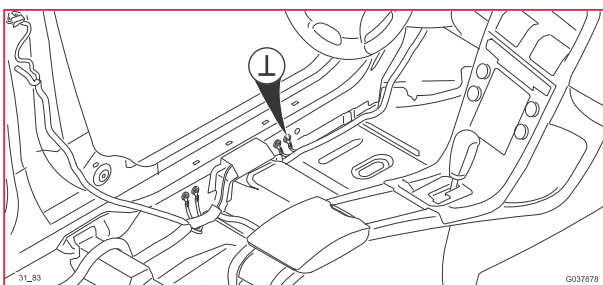


31/89 Ground connection, Engine ignition coils, 4-Cyl.

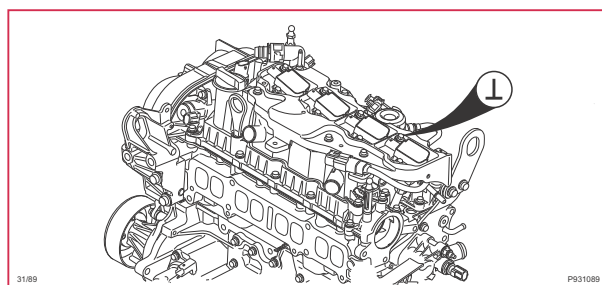


31/84 Ground connection, Right bottom rail

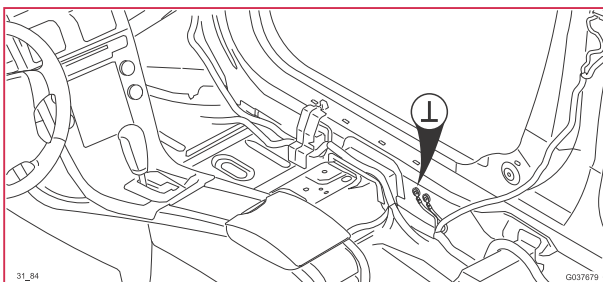


31/89 Ground connection, Engine ignition coils, 5-Cyl.

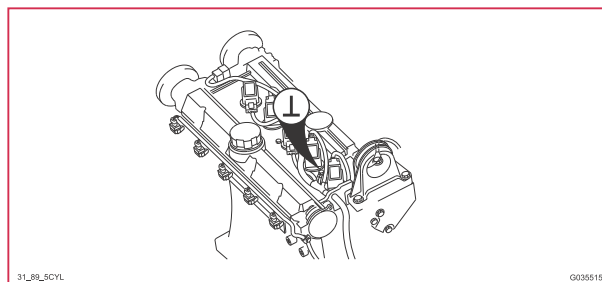


31/88 Ground connection, Engine ignition coils, 4-Cyl.

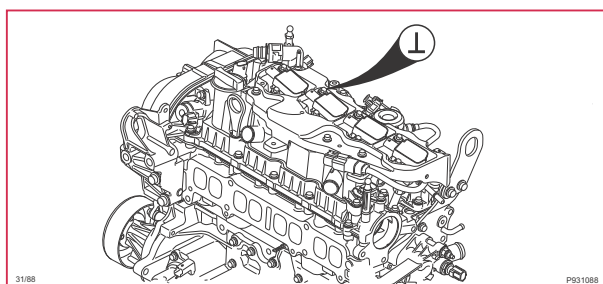


31/89 Ground connection, Engine ignition coils, 6-Cyl.

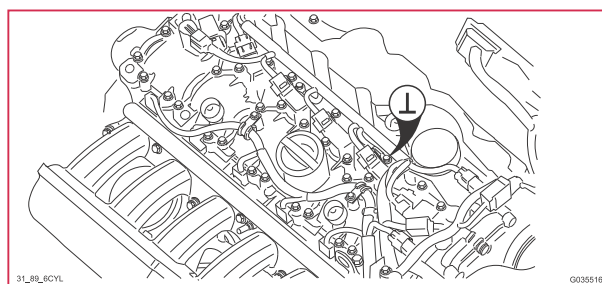

31/88 Ground connection, Engine ignition coils, 5-Cyl.

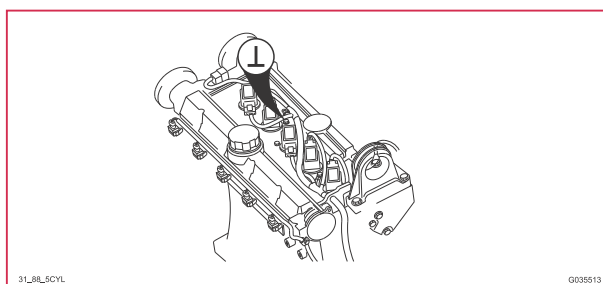


31/90 Ground connection, Engine ignition coils, 6-Cyl.

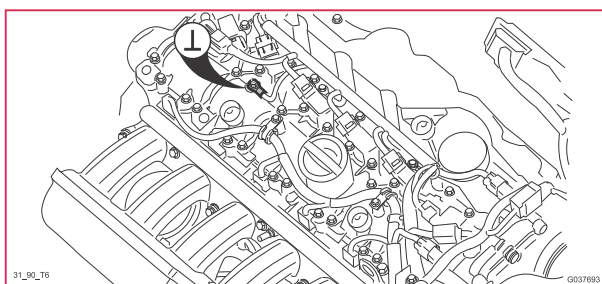


Component illustrations

31/93 - 31/XX10


31/93 Ground connection, Left wheel housing 2

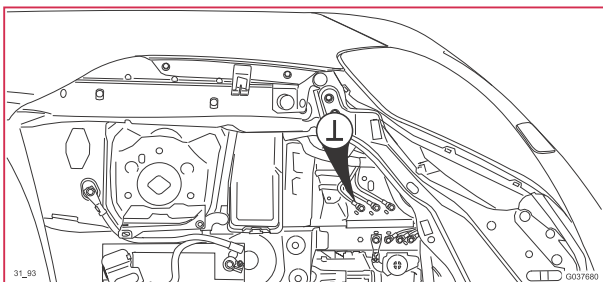


31/117 Ground connection, tailgate upper V60

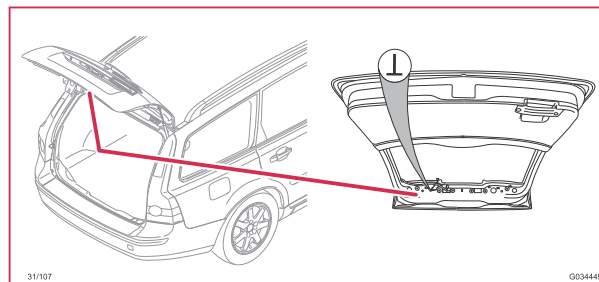


31/94 Ground connection, Right wheel housing 2

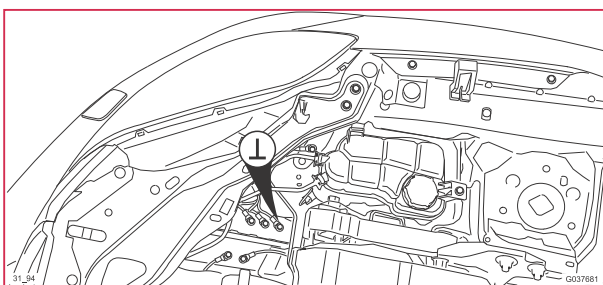


31/130 Ground connection, left roof, C-pillar

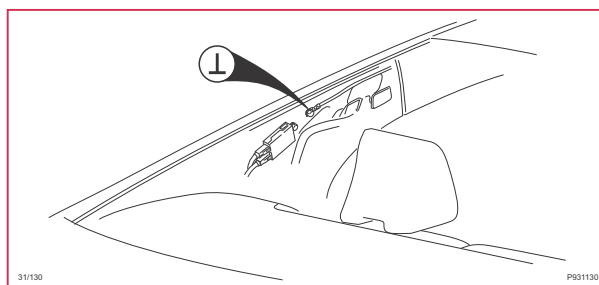


31/95 Ground connection, Left wheel housing 3

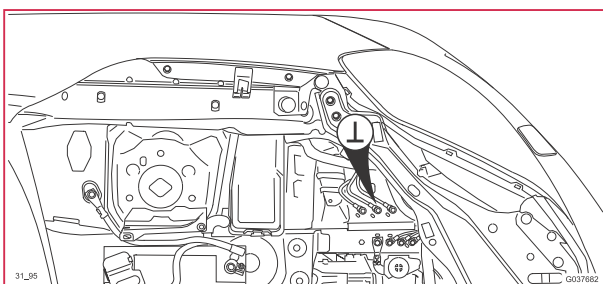


31/131 Ground connection, support battery

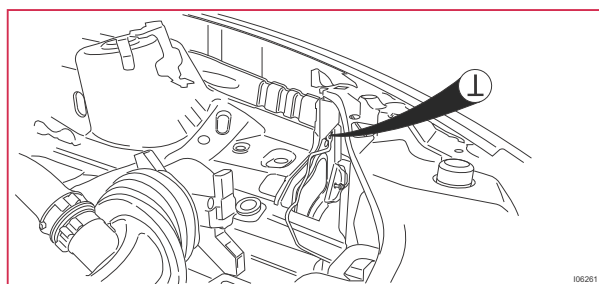


31/96 Ground connection, Right wheel housing 3

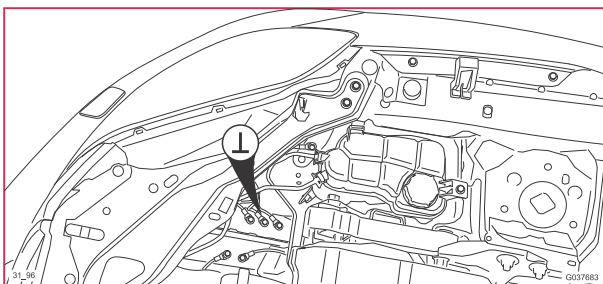


31/XX4 Ground connection, Engine-Body

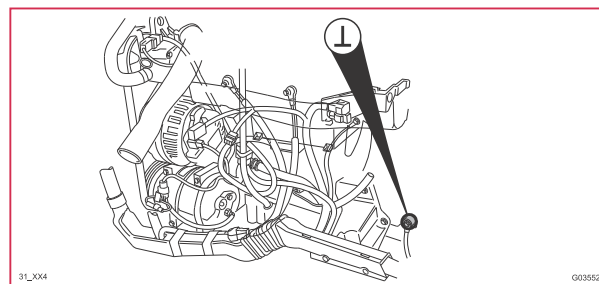

31/107 Ground connection, roof rear

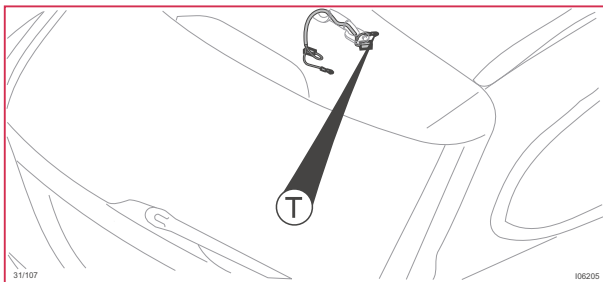


31/XX10 Ground connection, Left wheel housing 1

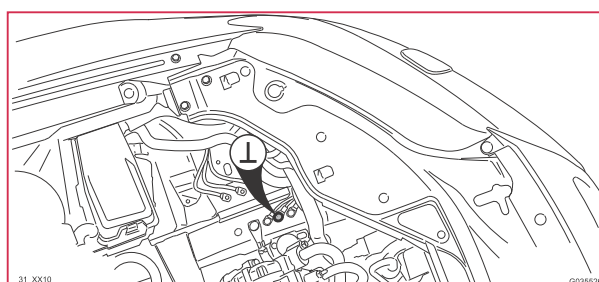


Component illustrations

31/XX14 - 74/302


31/XX14 Ground connection, Left wheel housing 3 (ABS)

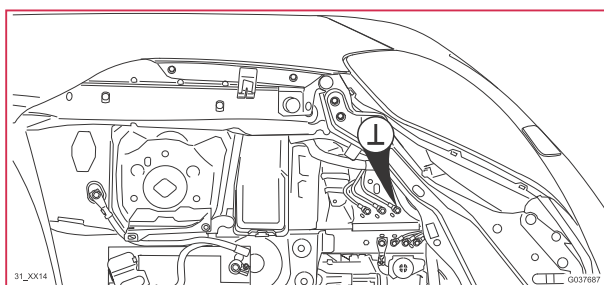


74/9 Connector

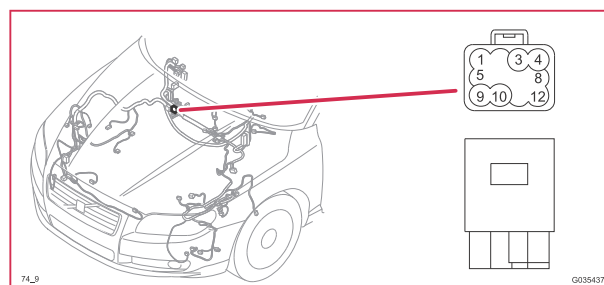


31/XX15 Ground connection, Right wheel housing

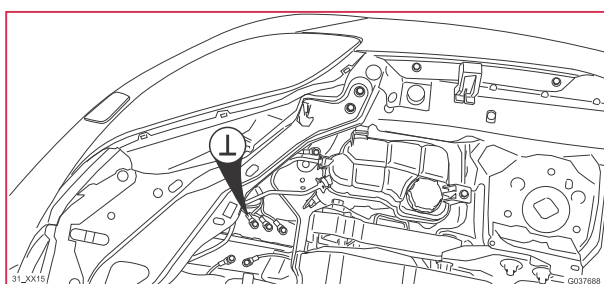


74/30 Connector

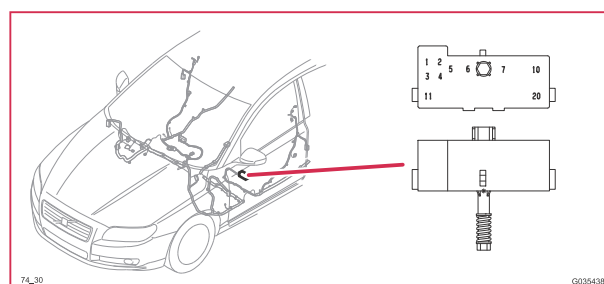


31/AL Ground connection, Auxiliary lights

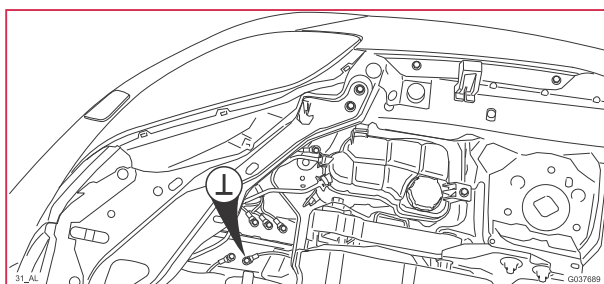


74/31 Connector

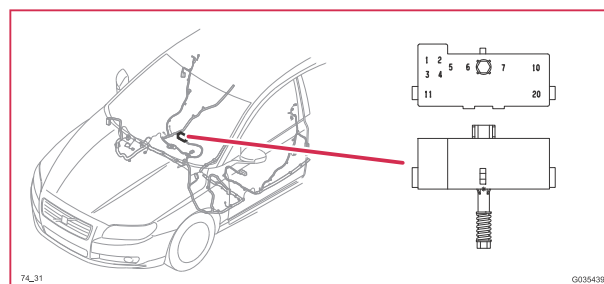


31/INFOT Ground connection, Infotainment

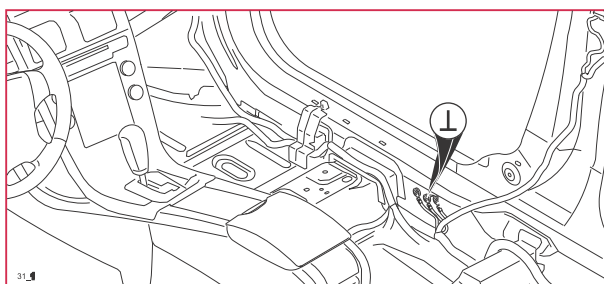


74/301 Connector

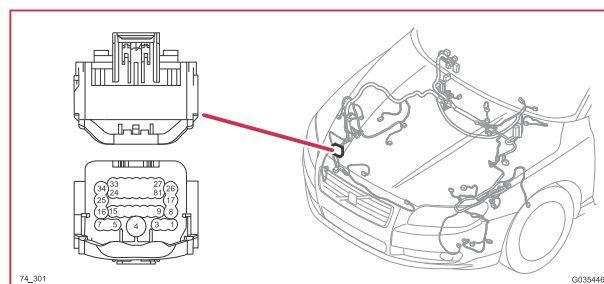

31/TRM Ground connection, Accessories

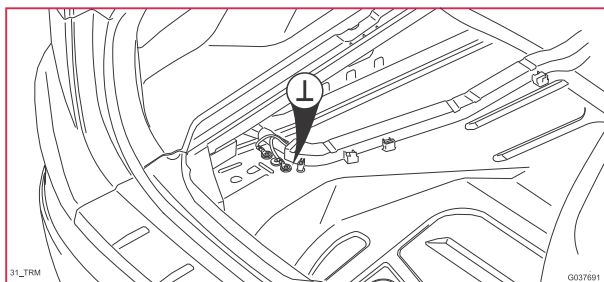


74/302 Connector

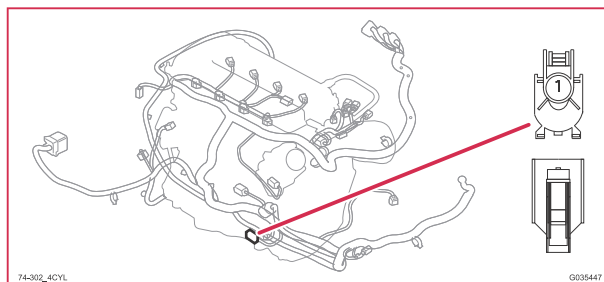


Component illustrations

74/304 - 74/403


74/304 Connector

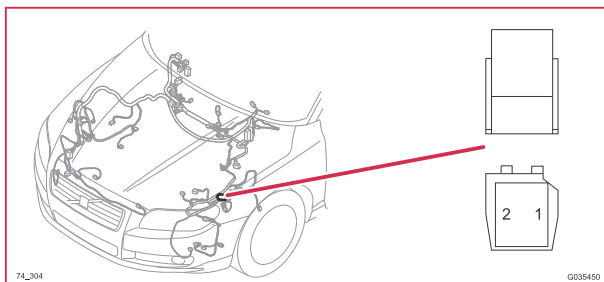


74/313 Connector

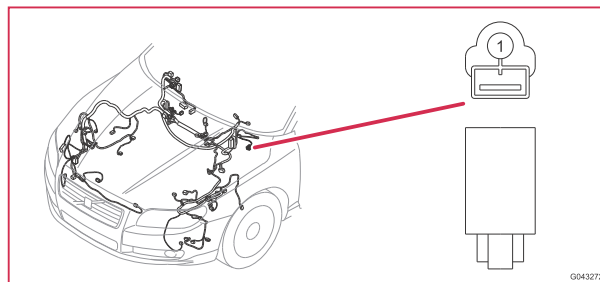


74/307 Connector

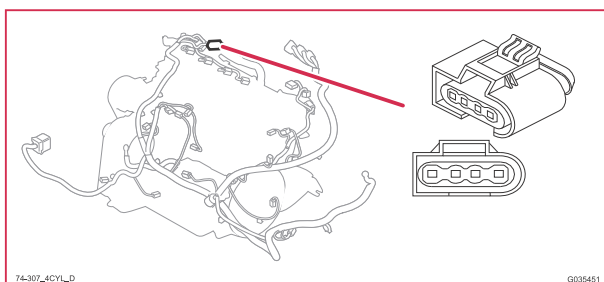


74/316 Connector

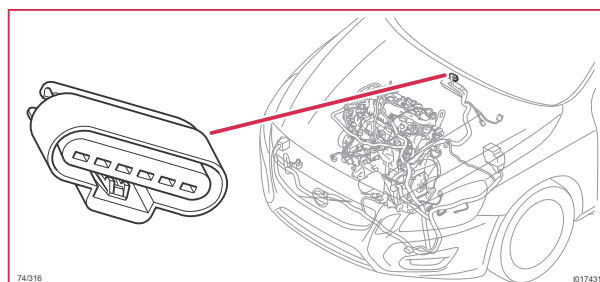


74/309 Connector

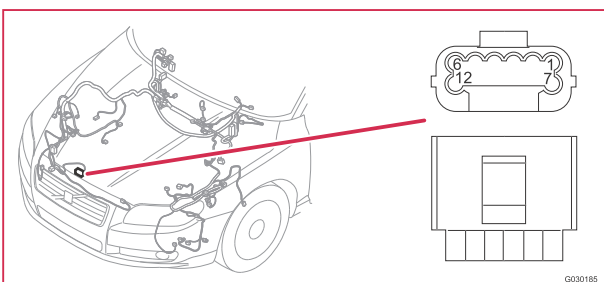


74/321 Connector

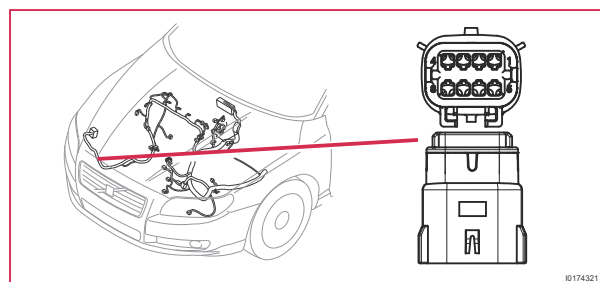


74/310 Connector not 1,6L

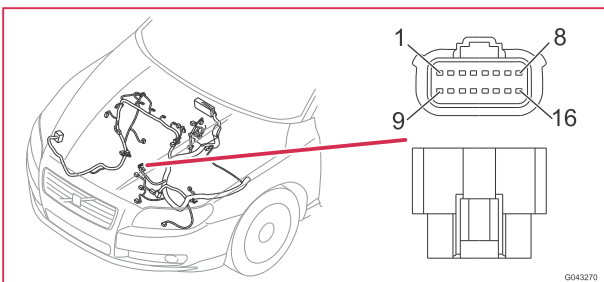


74/401 Connector

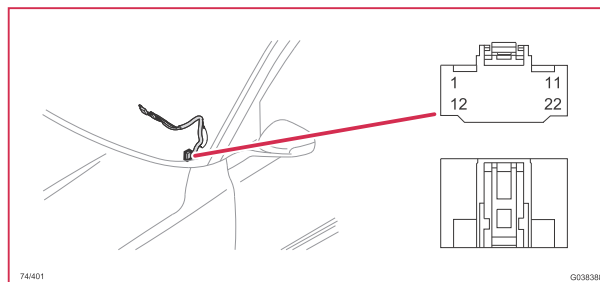

74/310 Connector only 1,6L

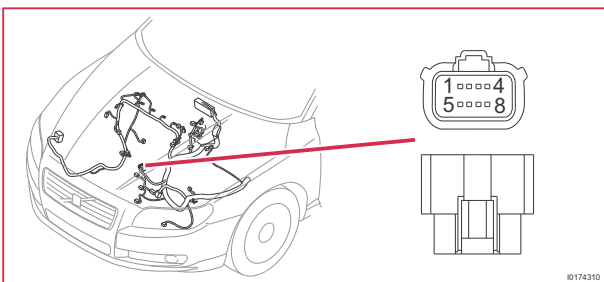


74/403 Connector

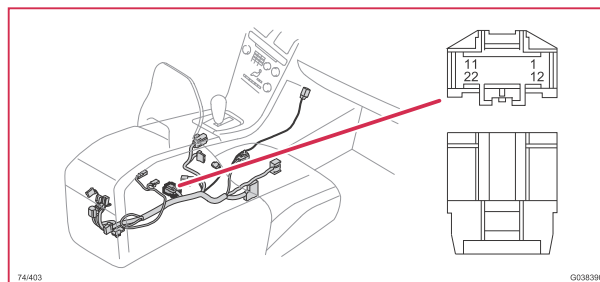


Component illustrations

74/404 - 74/416


74/404 Connector

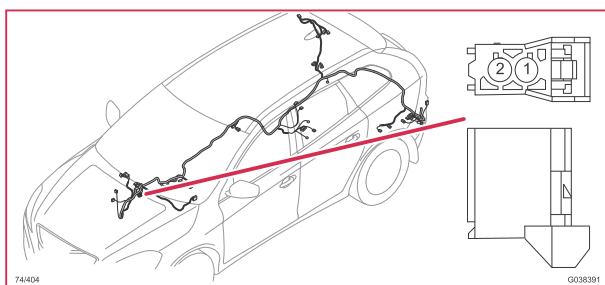


74/409 Connector

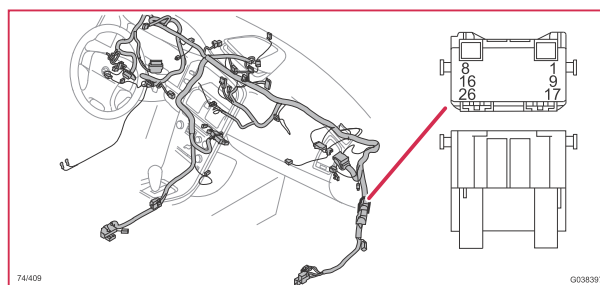


74/405 Connector

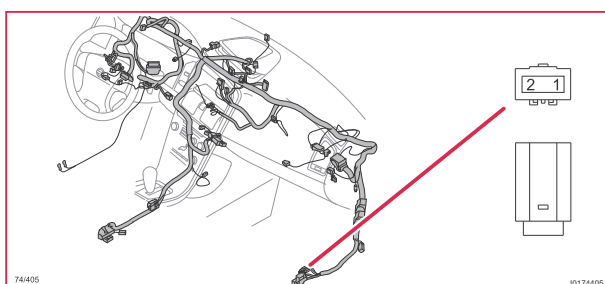


74/411 Connector

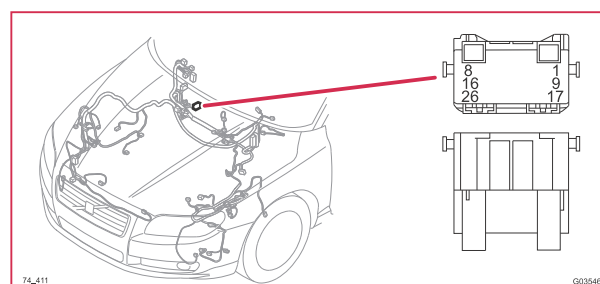


74/406 Connector

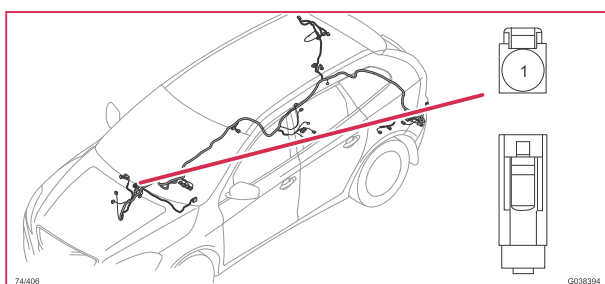


74/412 Connector

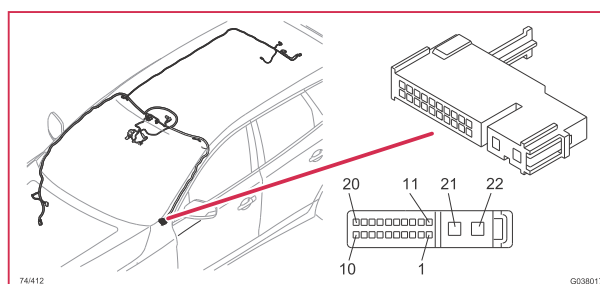


74/407 Connector

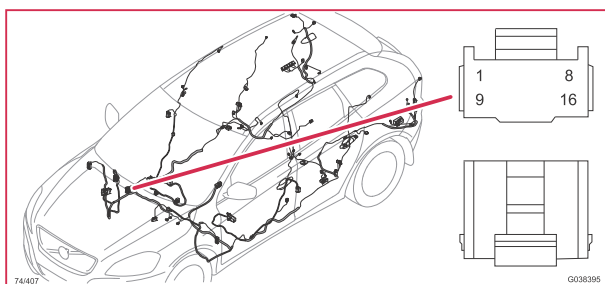


74/414 Connector

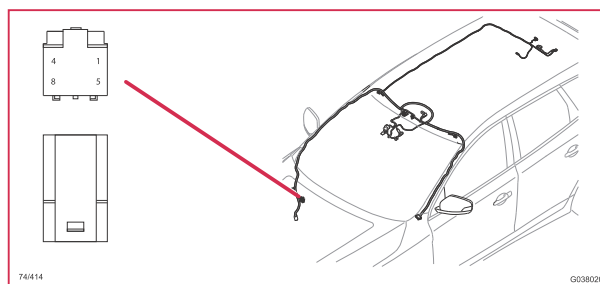

74/407B Connector

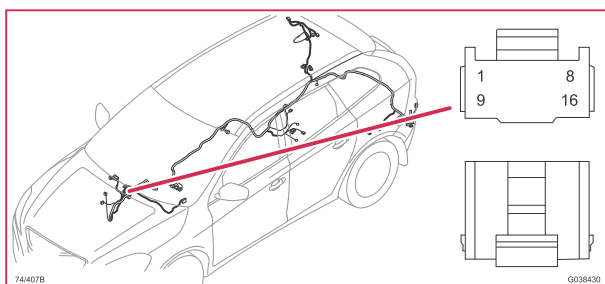


74/416 Connector

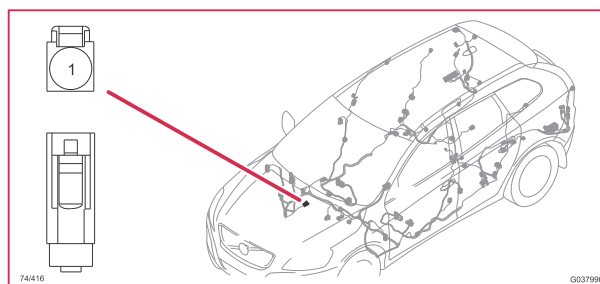


Component illustrations

74/417 - 74/508


74/417 Connector

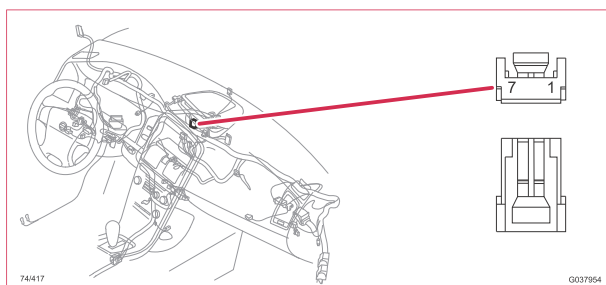


74/503 Connector

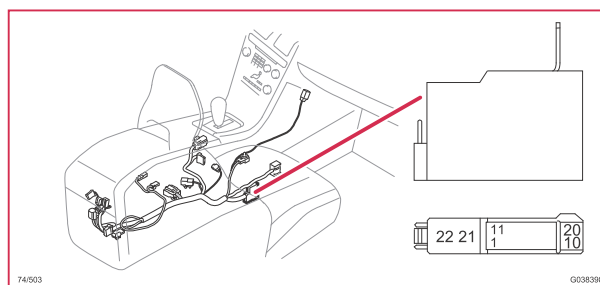


74/418 Connector

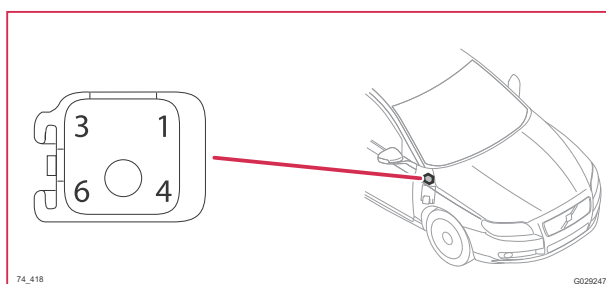


74/504 Connector

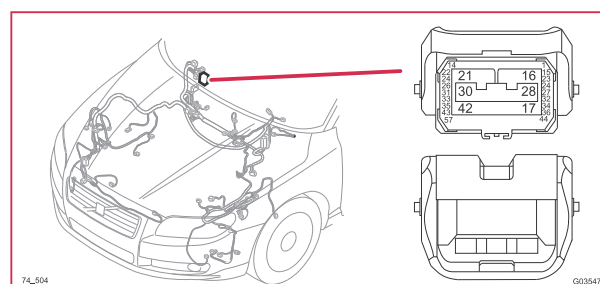


74/419 Connector

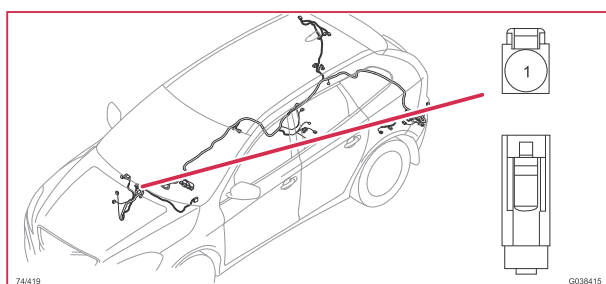


74/504B Connector

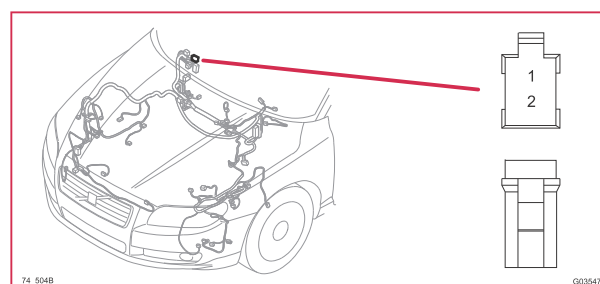


74/420 Connector

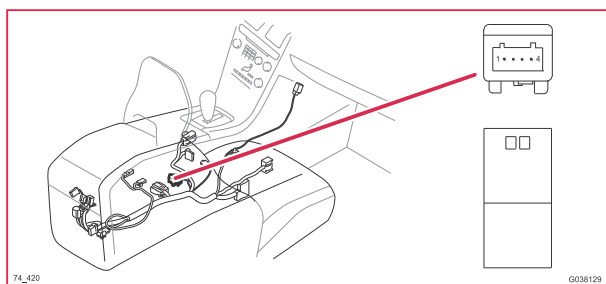


74/507 Connector

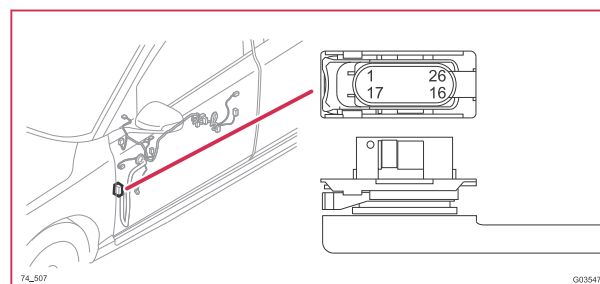

74/421 Connector

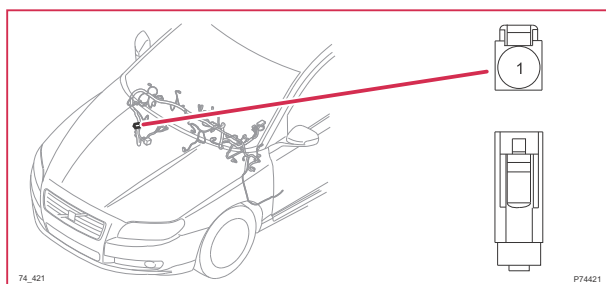


74/508 Connector

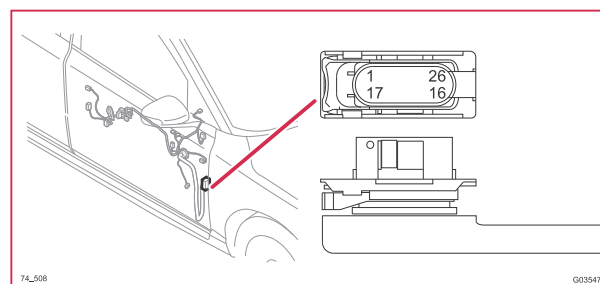


Component illustrations

74/509 - 74X/524


74/509 Connector

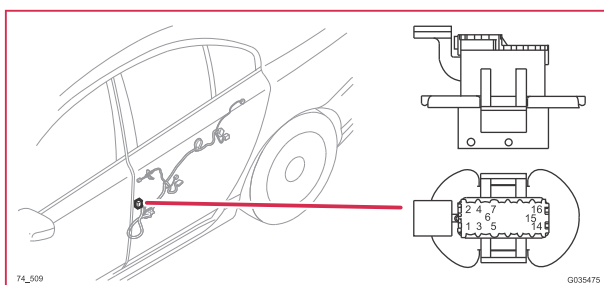


74/514 Connector

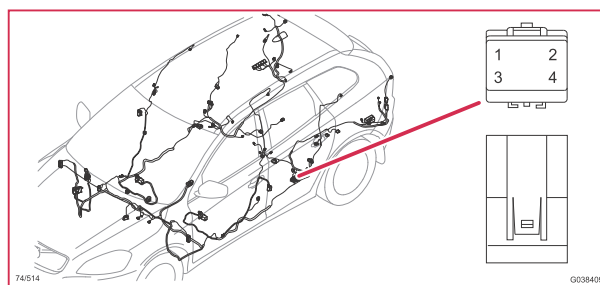


74/510 Connector

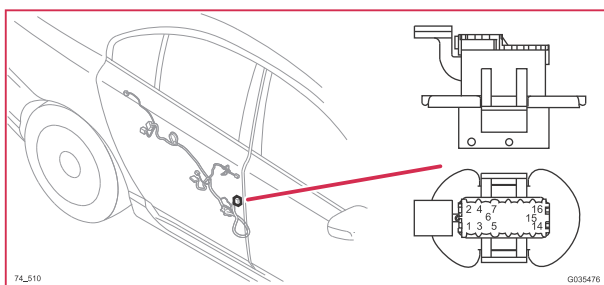


74/518 Connector

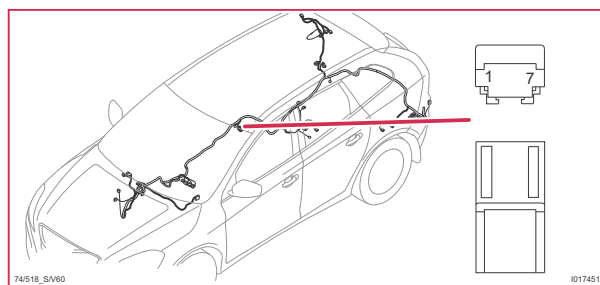


74/511 Connector

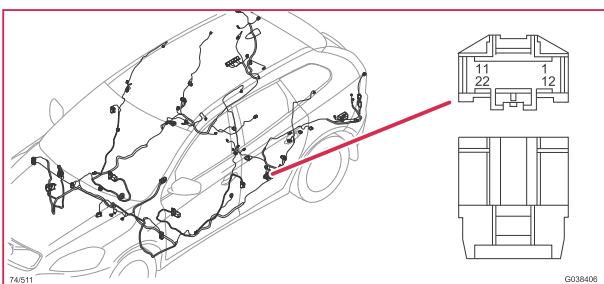


74/519 Connector

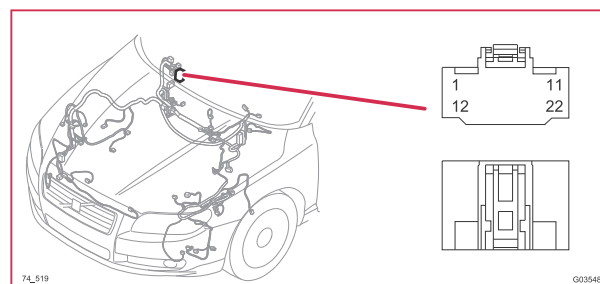


74/512 Connector

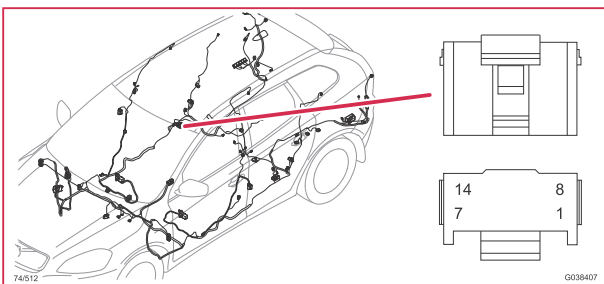


74/520 Connector

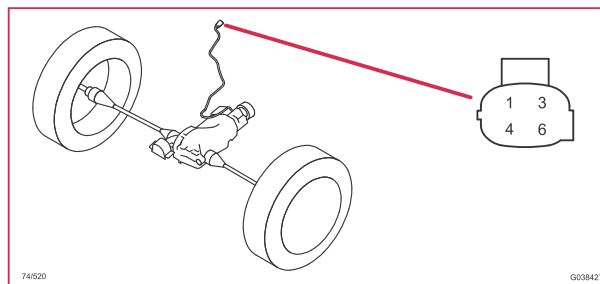

74/513 Connector

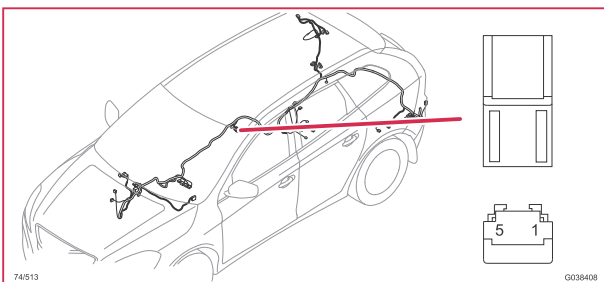


74/524 Connector

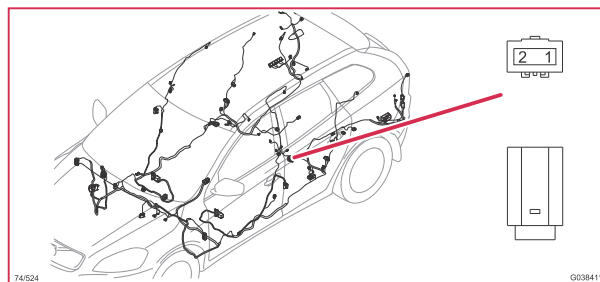


Component illustrations

74/529 - 74X/602


74/529 Connector

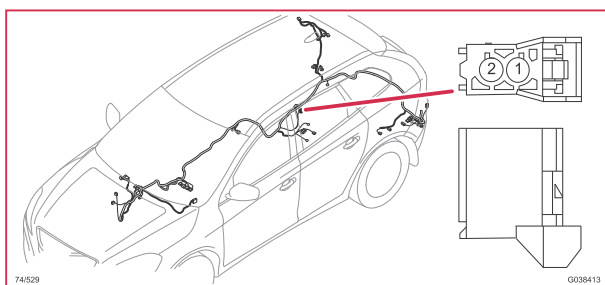


74/537 Connector

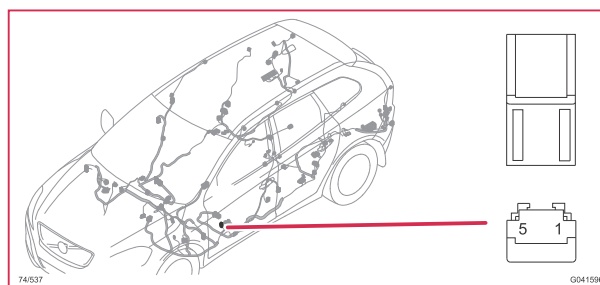


74/530 Connector

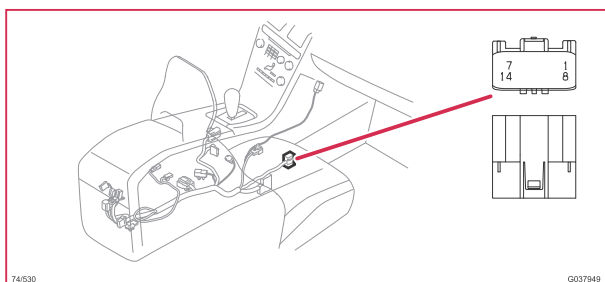


74/539 Connector

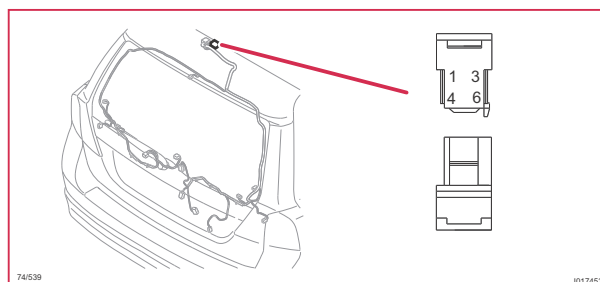


74/531 Connector

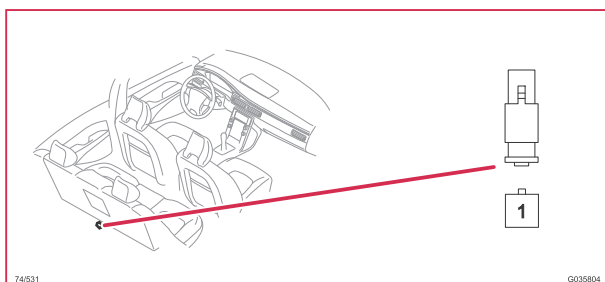


74/540 Connector

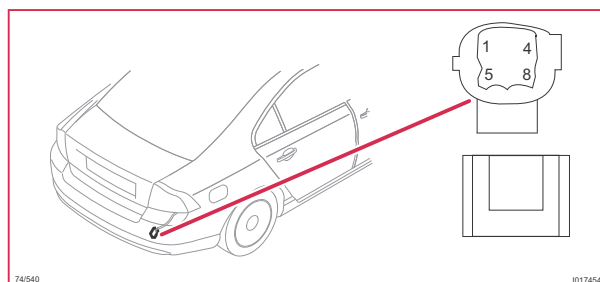


74/532 Connector

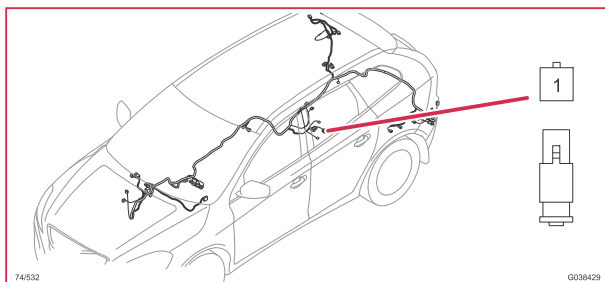


74/601 Connector, S60

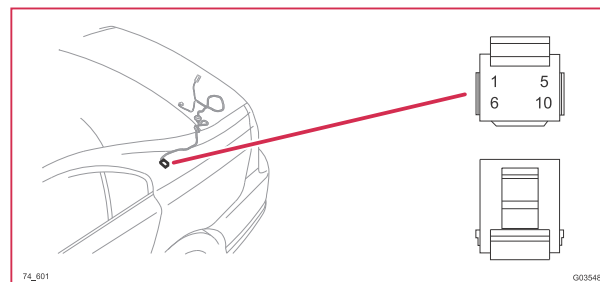

74/534 Connector

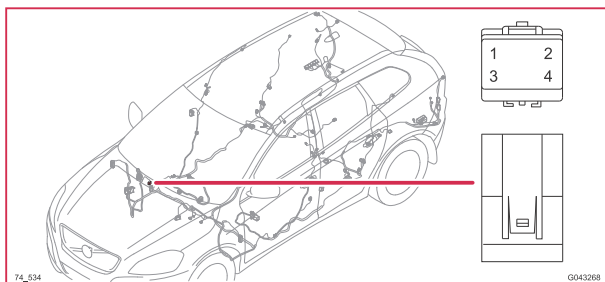


74/602 Connector, V60

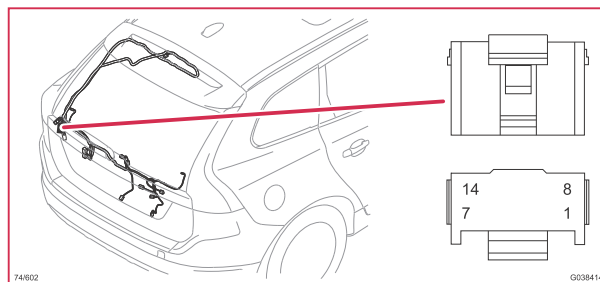


Component illustrations

74/606 - 74X/414


74/606 Connector

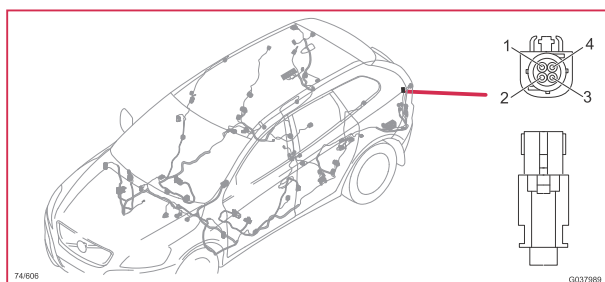


F/no. Fuses

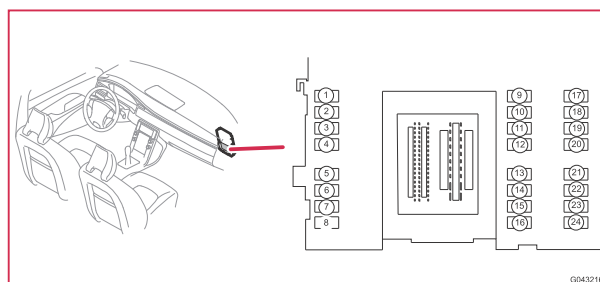


74/607 Connector

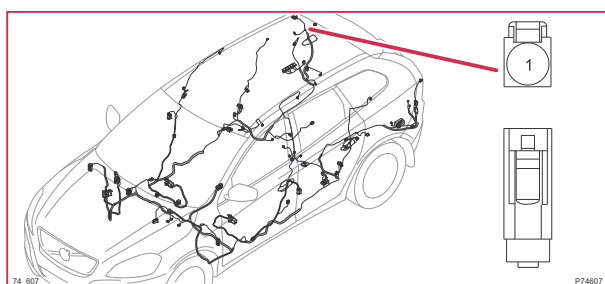

PF/no. Main fuse by battery

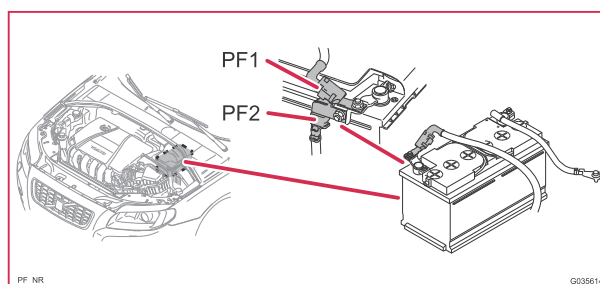


74/608 Connector

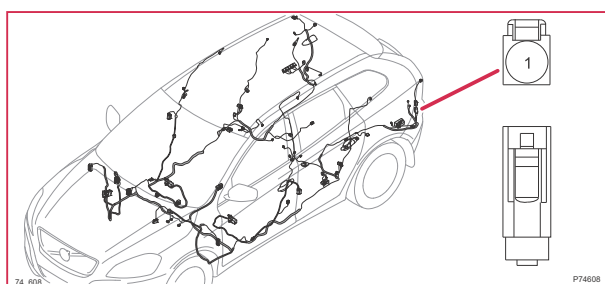


- 10X/29 Connector interface, original car
- 10X/125 Connector interface, original car
- 10X/126 Connector interface, original car
- 16X/1 Connector interface, original car
- 74X/9 Connector interface, original car
- 74X/414 Connector interface, original car

74/609 Connector

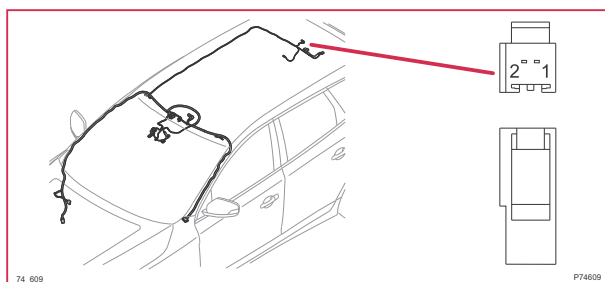

74/901 Connector

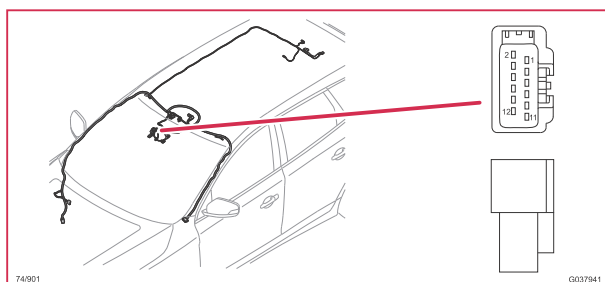

Index 1:2

A

Abbreviations	6
Active headlight	102
Additional electrical equipment, Group 36	105
Alcolock	120
Alternator and voltage regulator, Group 32	80
Anti-theft alarm	116
Audio	132
Audio Premium	129
Automatic transmission AWF21	147
Automatic transmission MPS6	148
Auxiliary lights	104

B

Beam length adjustment, manual	87
Blind spot information system LHD	169
Blind spot information system RHD	170
Bluetooth Handsfree	140
Bodywork other, Group 89	193
Brake control system & DSTC	151
Brake lights	92
Brake system, Group 59	151
Branching points	229

C

Cable harness towbar/tow hitch 13-pin	125
Cellular phone	134
Center console harness	264
Central Electronic Module (CEM)	39
Central locking front doors LHD	154
Central locking front doors RHD	155
Central locking fuel filler flap	158
Central locking rear doors	156
Central locking tailgate	157
Climate control system PTC-elements	179
Climate control system, 4-Cyl.	180
Climate control system, 5-Cyl.	184
Climate control system, 6-Cyl.	184
Climate control system, Group 87	179
Collision warning with power brake booster	118
Color, abbreviations	6
Component illustrations	269
Connectors	194
Control modules	37
Control modules overview designations	38
Control modules overview locations	37
Cooling fan 4-Cyl. Turbo	50
Cooling fan 6-Cyl.	53
Cooling fan, 5-Cyl. Diesel	52
Cooling system, Group 26	50
Countries/Markets, abbreviations	6
Cruise control 4-Cyl. Turbo 1.6l	54
Cruise control 4-Cyl. Turbo 2.0l	55
Cruise control 5-Cyl. Diesel	57
Cruise control 5-Cyl. Turbo	58
Cruise control 6-Cyl.	58
Cruise control, 4-Cyl. Diesel DV6C	56

D

DAB Radio	136
Dashboard harness	254
Data communication intermediate speed CAN, LHD ..	43
Data communication intermediate speed CAN, RHD ..	44
Data communication LIN	46
Data communication Local CAN	45
Data communication MOST	48
Data communication, High speed CAN	42
Designations ignition switch	6
Diagnostics system	121
Diesel engine harness	250
Differential Electronic Module (DEM)	149
Direction indicator LHD	106, 108
Doors and openings, Group 83	154
Driver Information Module	128

E

Electric parking brake	150
Electrical distribution, overview cargo compartment ...	13
Electrical distribution, overview engine compartment ..	11
Electrical distribution, overview passenger compartment	12
Electrical distribution, overview with Start/stop function	10
Electrical distribution, overview without Start/stop function	9
Emission control 4-Cyl.	76
Emission control 5-Cyl. Turbo	78
Emission control 6-Cyl.	79
Engine compartment harness	251, 252, 253
Engine controls, Group 27	54
Engine harness 6-Cyl.	249
Engine management system, 4-Cyl.	62
Engine management system, 4-Cyl. Diesel	70
Engine management system, 4-Cyl. Turbo	64
Engine management system, 5-Cyl. Diesel	73
Engine management system, 5-Cyl. Turbo	66
Engine management system, 6-Cyl. Turbo	68
Explanation of symbols	8
Exterior decorative elements, etc, Group 84	165

F

Fog lights	90
Follow-me-home lighting LHD	96
Follow-me-home lighting RHD	97
Four-C	153
Fuses	14
Fuses at Battery	26
Fuses in Cold zone engine compartment	24
Fuses in distribution box cargo compartment	25
Fuses in Distribution box passenger compartment	22, 23
Fuses in the Central Electronic Module (CEM)	19, 20, 21
Fuses in the engine compartment distribution box	14, 15, 16, 17, 18

Index 2:2

G

Ground connections	30
Ground connections overview	30
Group number, abbreviations	6

H

Harness engine 6-Cyl. Turbo	249
Harness floor, LHD	255, 256, 257
Harness floor, RHD	258
Harness front door	265
Harness rear door	266
Harnesses rear axle	267, 268
Hazard warning flashers LHD	106
Hazard warning flashers RHD	108
Heated door mirrors LHD	167
Heated door mirrors RHD	168
Heated front seats	177
Heated front seats, with fans	176
Heated rear seat	178
Heated rear window	171
High and low beam	85
High and low beam (Dual Xenon)	86
Horn	113
How to use the wiring diagrams	7

I

Ignition and control system, Group 28	62
Infotainment harness	259, 260, 261, 262
Instruments, Group 38	127
Interior equipment, Group 85	172
Interior lighting, LHD	98
Interior lighting, RHD	100
Internal equipment, Group 88	188

K

Keyless vehicle	114
-----------------	-----

L

Lighting in door sill trims	103
Lighting, Group 35	85

M

Manual headlamp range adjustment	87
Memory function driver's seat RHD	173
MOST	48
Multimedia monitor with DVD, Dual Screen	137

O

Other, abbreviations	6
Other, Group 39	129
Outlet 12 V	122
Outlet 12V, V60 Accessories	123

P

Parking assistance	117
Parking brake, Group 55	150
Parking camera front	145
Parking camera rear	143

Parking heater, auxiliary heater	186
Parking heater, remote start	187
Parking lights	88
Power door mirrors LHD	165
Power door mirrors RHD	166
Power driver's seat with memory function	172
Power driver's seat with memory function, LHD	172
Power driver's seat with memory function, RHD	173
Power folding headrest	192
Power passenger seat, LHD	174
Power passenger seat, RHD	175
Power sunroof	164
Power supply 4-Cyl. without Start/Stop	80
Power supply 5-Cyl. without start/stop	81
Power windows front doors LHD	161
Power windows front doors RHD	162
Power windows rear doors	163

R

Radiator masking blind	193
Rain sensor	105
Rear-view mirror with automatic dimming	190
Relays	27
Relays in Distribution box cargo compartment	29
Relays in the engine compartment distribution box	27
Remote control opener garage door	191
Reversing lights	94
Roof harness	263
Running lights	88

S

Satellite radio	142
Seat belt reminder	127
Shock absorbers, Group 76	153
Signal receiver central locking	159
Speed dependent power steering	152
Start-/Stop function 4-Cyl. 1.6l	59
Start-/Stop function 4-Cyl. 1.6L. Diesel	60
Start-/Stop function 5-Cyl. Diesel	61
Starting system	84
Starting system 4-Cyl.	83
Starting system, Group 33	83
Steering Wheel Module (SWM)	49
Steering, Group 64	152
Supplemental restraint system	188

T

Table of Contents	3
Tail lights	88
Tailgate harness	267
Telephone system Bluetooth	139
Tire pressure monitoring system (TPMS)	119
Transmission, Group 43	146
Tunnel harness	264
TV	138

W

Wiper/washer rear window	112
Wiper/washer Windshield	110
Wiring and fuses, Group 37	121

List of components 1:6

1/1	Battery	3/218	Belt buckle contact, center rear
1/2	Secondary battery	3/219	Belt buckle contact, rear right
2/14	Relay, glow plug system	3/225	Continuously Controlled Damping (CCD)
2/16	Relay, rear window wiper	3/255	Position sensor, driver's seat
2/17	Relay, horn	3/256	Position sensor, passenger seat
2/22	Relay, climate control system	3/267	Switch unit, telematics
2/31	Relay, 15-feed	3/271	Contact, immobilizer, clutch pedal
2/32	Main relay, engine management system	3/272	Switch, parking brake
2/35	Starter motor relay	3/273	Lock contact, LH front door
2/64	Relay auxiliary lights	3/274	Lock contact, RH front door
2/82	Relay, heated rear window	3/275	Lock contact, left rear door
2/88	Relay, 15-feed rear	3/276	Lock contact, RH rear door
2/166	Battery relay	3/281	Infotainment control module (ICM)
2/182	Relay, headlight washer motor	3/282	Switch indicator 1st gear
2/193	Relay, comfort functions	3/284	Diagnostic contact, brake light
2/246	Secondary battery relay	3/293	Handsfree control panel cellular phone
3/1	Ignition switch	4/6	Climate Control Module (CCM)
3/4	Steering wheel switch left (SWSL)	4/7	Combustion Preheater Module (CPM)
3/6	Hazard warning flasher switch	4/9	Supplemental Restraint System (SRS)
3/8	Switch, heated rear window/door mirrors	4/16	Brake Control Module (BCM)
3/9	Brake light contact	4/28	Transmission Control Module (TCM), TF-80SC
3/10	Reversing light contact	4/28	Transmission Control Module (TCM), MPS6
3/19	Rear left door power window switch	4/33	Sunroof control module
3/21	Rear right door power window switch	4/46	Engine Control Module (ECM), 4-Cyl. Turbo 1,6L
3/25	Power sunroof switch	4/46	Engine Control Module (ECM), 4-Cyl. Turbo 2,0L
3/26	Switch unit, power driver's seat	4/46	Engine Control Module (ECM), 4-Cyl. Diesel
3/27	Switch unit, power passenger seat	4/46	Engine Control Module (ECM), 5-Cyl. Turbo
3/35	Trunk handle switch, S60	4/46	Engine Control Module (ECM), 5-Cyl. Diesel
3/35	Trunk handle switch, V60	4/46	Engine Control Module (ECM), 6-Cyl.
3/37	Horn contact	4/52	Power Seat Module (PSM)
3/60	Auxiliary light switch	4/56	Central Electronic Module (CEM)
3/62	Hood alarm contact	4/56:C1	Central Electronic Module (CEM)
3/65	Switch, heated rear seat	4/56:C2	Central Electronic Module (CEM)
3/80	Switch, central locking system, driver's door	4/56:C3	Central Electronic Module (CEM)
3/81	Power window switches, driver's door	4/56:C4	Central Electronic Module (CEM)
3/82	Switch, central locking system, passenger door	4/56:C5	Central Electronic Module (CEM)
3/83	Switch, passenger door power window	4/68	Steering Wheel Angle Sensor Module (SAS)
3/85	Power window switch, rear left door	4/71	Cooling fan control module
3/86	Power window switch, right rear door	4/80	Forward Sensing Module (FSM)
3/93	Belt buckle contact, driver's seat	4/82	Differential Electronic Module (DEM)
3/94	Belt buckle contact, passenger seat	4/83	Fuel pump control module
3/111	Light Switch Module (LSM)	4/84	Suspension Module (SUM)
3/112	Climate control system	4/86	Parking Assistance Module (PAM)
3/113	Rear adjustable head restraint relay	4/93	Keyless vehicle module (KVM)
3/117	Switch unit, dome light	4/99	Control module speed dependent power steering
3/126	Driver door module (DDM)	4/102	Steering column lock module (SCL)
3/127	Passenger door module (PDM)	4/109	Glow plug control module
3/128	Left rear door module (LDM)	4/110	Trailer Module (TRM)
3/129	Right rear door module (RDM)	4/115	Park Brake Module (PBM)
3/130	Steering Wheel Module (SWM)	4/119	Remote Keyless Entry (TRX)
3/131	Steering wheel switch right (SWSR)	4/119.2	Signal receiver (LRX)
3/135	RTI switch	4/120	Parking Assistance Camera (PAC)
3/156	Gear Selector Module (GSM)	4/125	Closing velocity module (CVM)
3/157	Switch, passenger side airbag	4/136	Active Grillshutter Module (AGM)
3/173	Switch, trunk lid private lock		
3/176	Power window switches, driver's door		
3/217	Belt buckle contact, rear left		

List of components 2:6

5/1	Driver Information Module (DIM)	6/179	Electric oil pump
6/1	Wiper motor module (WMM)	7/4	Brake fluid level sensor
6/8	Lock motor central locking, trunk lid/tailgate, S60	7/5	Washer fluid level sensor
6/8	Lock motor central locking, trunk lid/tailgate, V60	7/6	Oil pressure sensor
6/16	Driver seat motor, backrest angle	7/8	Pressure sensor, climate control system
6/17	Driver seat motor, up/down front edge	7/12	Solar sensor, twilight sensor and indicator alarm
6/18	Driver seat motor, up/down rear edge	7/15	Front heated oxygen sensor, 4-Cyl. Turbo
6/19	Driver seat motor, forward/backward	7/15	Front heated oxygen sensor, 5-Cyl.
6/20	Passenger seat motor, forward/backward	7/15	Front oxygen sensor, bank 1, 6-Cyl.
6/21	Passenger seat motor, up/down front edge	7/15	Front heated oxygen sensor, Diesel
6/22	Passenger seat motor, up/down rear edge	7/16	Coolant temperature sensor
6/23	Passenger seat motor, backrest angle	7/17	Mass airflow sensor (MAF)
6/25	Starter motor	7/23	Rear knock sensor
6/26	Alternator Control Module (ACM)	7/24	Front knock sensor
6/28	Motor, passenger compartment fan	7/25	Impulse sensor, Diesel
6/32	Rear window wiper motor, V60	7/25	Impulse sensor
6/33	Fuel pump	7/31	Left-hand front ABS sensor
6/35	Fuel pump, auxiliary heater	7/32	Right-hand front ABS sensor
6/36	Lock motor, central locking, LH front door	7/35	Oil level sensor
6/37	Lock motor, fuel filler cover	7/41	Temperature sensor, evaporator
6/38	Left-hand headlight level adjustment motor	7/51	Accelerator pedal sensor
6/39	Right-hand headlight level adjustment motor	7/56	Left-hand rear ABS sensor
6/48	Damper Motor Module (DMM), recirculation	7/57	Right-hand rear ABS sensor
6/55	Lock motor, central locking, RH front door	7/69	Outside temperature sensor
6/56	Lock motor, central locking, RH rear door	7/73	Coolant level sensor
6/57	Lock motor, central locking, LH rear door	7/81	Pressure sensor, intake manifold, 4-Cyl. Turbo
6/58	Motor, front driver's door power window	7/81	Pressure sensor, intake manifold, 5-Cyl. Turbo
6/59	Motor, rear left power window	7/81	Pressure sensor intake manifold, Diesel
6/60	Motor, front passenger door power window	7/81	Pressure sensor, intake manifold, 6-Cyl.
6/61	Motor, rear right power window	7/82	Rear oxygen sensor, 4-Cyl.
6/62	Left-hand power door mirror	7/82	Rear oxygen sensor, bank 1, 6-Cyl.
6/63	Right-hand power door mirror	7/87	Acceleration sensor, Four-C, front left
6/67	Pump, fuel leakage control	7/88	Acceleration sensor, Four-C, front right
6/71	Valve, speed-dependent power steering	7/89	Acceleration sensor, Four-C, rear left
6/73	Coolant pump	7/90	Moisture sensor
6/95	Damper Motor Module (DMM), temperature, left side	7/91	Steering angle sensor
6/96	Damper Motor Module (DMM), temperature, right side	7/93	Occupant Weight Sensor (OWS)
6/102	Damper Motor Module (DMM), defroster	7/100	Inclination Sensor Module (ISM)
6/103	Damper Motor Module (DMM), floor/ventilation	7/103	Front oxygen sensor, bank 2, 6-Cyl.
6/104	High pressure headlight washer motor	7/104	Rear oxygen sensor, bank 2, 6-Cyl.
6/120	Throttle unit, 4-Cyl. Turbo	7/108	Left-hand rear side impact sensor
6/120	Throttle unit, 5-Cyl.	7/109	Right-hand rear side impact sensor
6/120	Throttle unit, 6-Cyl.	7/110	Sensor temperature driver's seat
6/120	Throttle unit, Diesel	7/111	Sensor temperature passenger seat
6/127	Washer motor	7/112	Seat temperature sensor, LH rear
6/141	Motor folding head restraint left	7/113	Seat temperature sensor, RH rear
6/142	Motor folding head restraint right	7/115	Side impact sensor, left B-post
6/146	Lock motor, rear left brake disc	7/116	Side impact sensor, right B-post
6/147	Lock motor, rear right brake disc	7/118	Height sensor, suspension, front left
6/164	Electrical power steering module (EHPS)	7/119	Height sensor, suspension, front right

List of components 3:6

7/120	Height sensor, suspension, rear left	8/18	EVAP valve, 5-Cyl.
7/121	Height sensor, suspension, rear right	8/18	EVAP valve, 6-Cyl.
7/123	Clutch pedal sensor	8/19	Reset valve, camshaft intake
7/124	Brake pedal sensor	8/20	Shock absorber, Four-C, front left
7/130	Fuel level sensor, ejector side	8/21	Shock absorber, Four-C, front right
7/131-		8/22	Shock absorber, Four-C, rear left
7/134	Rear parking assistance sensor	8/23	Shock absorber, Four-C, rear right
7/143	Fuel level sensor, pump side	8/28	Turbo control valve
7/149	Rain Sensor Module (RSM)	8/30	Driver's side airbag igniter, stage 1
7/154	Sensor fuel temperature	8/31	Passenger side airbag igniter, stage 1
7/156	Pressure and temperature sensor, fuel	8/32	Igniter, passenger side airbag stage 2
7/159	Air Quality Sensor (AQS)	8/33	Igniter, belt tensioner, driver's side
7/162	Pressure sensor, fuel line	8/34	Igniter, belt tensioner, passenger side
7/165	Pressure and temperature sensor, intake manifold	8/36	Shift lock solenoid
7/165	Pressure and temperature sensor, intake manifold, 4-Cyl.	8/37	Automatic transmission
7/165	Pressure and temperature sensor, intake manifold, Diesel	8/46	Archive unit, DSTC
7/165	Pressure and temperature sensor, intake manifold, 6-Cyl.	8/48	Auto-dimming rearview mirror
7/166	Oil level sensor, 6-Cyl.	8/51	Igniter side airbag front driver's seat
7/168	Fuel pressure sensor, low	8/52	Igniter side airbag front passenger seat
7/172	Position sensor camshaft, intake side, 4-Cyl.	8/55	Rear left belt tensioner igniter
7/172	Camshaft position sensor, intake side, 6-Cyl.	8/56	Rear right belt tensioner igniter
7/173	Position sensor camshaft, outlet side, 4-Cyl.	8/59	Rear left head restraint solenoid
7/173	Camshaft position sensor, exhaust side, 6-Cyl.	8/60	Rear right head restraint solenoid
7/173	Camshaft position sensor, exhaust side, Diesel	8/61	Driver's side airbag igniter, stage 2
7/174	Differential pressure sensor particulate filter	8/62	Belt tensioner igniter, center rear seat
7/175	Weight sensor passenger seat, seat belt reminder	8/66	Left-hand inflatable curtain igniter
7/190	Temperature sensor, catalytic converter	8/67	Right-hand inflatable curtain igniter
7/191	Temperature sensor, particle filter	8/68	Relief valve
7/193	Position sensor turbo	8/77	Control valve, fuel volume
7/200	Sensor, coolant temperature	8/78	Power steering pressure monitor
7/202	EGR Bypass position sensor	8/81	Reset valve, camshaft exhaust, 4-Cyl
7/203	Forward-aimed radar (FLR)	8/81	Reset valve, camshaft exhaust, 5-Cyl
7/204-		8/84	Switch, vacuum pump
7/207	Front parking assistance sensor	8/92	Lap belt tensioner, driver
7/208	Side impact sensor, left front door	8/93	Lap belt tensioner passenger
7/209	Side impact sensor, right front door	8/98	Control valve fuel pressure
7/210-		8/99	Igniter, steering column
7/213	Tire pressure sensor	8/111	Fuel flow control valve
7/215	Rear heated oxygen sensor, 5-Cyl. Diesel	8/113	Bypass valve, EGR cooling
7/238	Alcohol lock sensor	8/113	Bypass valve, EGR cooling, EURO5
7/240	Battery monitoring sensor (BMS)	8/117	Solenoid, variable valve timing, intake, 6-Cyl.
7/243	Gear position sensor neutral position	8/120	EGR valve 4-Cyl. Diesel
7/248	Oil pressure and temperature sensor	8/120	EGR valve, 5-Cyl. Diesel
7/251	Brake vacuum sensor	8/121	Radiator valve
8/3	Electromagnetic clutch, climate control system	8/124	Igniter, airbag stage 3, passenger side
8/6-11	Injectors	8/125	Solenoid front cam profile
8/18	EVAP valve, 4-Cyl.	8/126	Solenoid rear cam profile
		8/128	Driver's belt force limiter
		8/129	Passenger belt force limiter
		8/134	Solenoid, reverse interlock, manual
		8/157	Turbocharger control valve, 5-Cyl. Diesel 2.4l
		8/159	Bypass valve
		8/164	Electric piston cooling valve
		8/167	Bypass solenoid

List of components 4:6

9/1	Outlet 12V front	10/44	Tail lamp 1 right, V60
9/2	Heated rear window	10/46	Fog lights, right rear, S60
9/8	Heating element, LH rear seat cushion	10/46	Fog lights, rear right, V60
9/9	Heating element, LH rear seat backrest	10/47	Direction indicator, right rear, S60
9/10	Heating element, RH rear seat cushion	10/47	Direction indicator, right rear, V60
9/11	Heating element, RH rear seat backrest	10/48	Reversing lights right, S60
9/12	Seat Heating Module (SHM), driver's side	10/48	Reversing lights, right, V60
9/13	Seat Heating Module (SHM), passenger side	10/50	Brake lights left, S60
9/14	Control module, rear left seat heater	10/50	Brake lights, left, V60
9/15	Control module, rear right seat heater	10/51	Tail lamp 1 left, S60
9/16	Heating element, driver's seat backrest	10/51	Tail lamp 1 left, V60
9/17	Heating element, passenger seat backrest	10/53	Fog lights, rear left, S60
9/18	Heating element, driver's seat cushion	10/53	Fog lights, left rear, V60
9/19	Heating element, passenger seat cushion	10/54	Direction indicator, rear left, S60
9/25	Outlet 12V rear	10/54	Direction indicator, left rear, V60
9/30	Auxiliary heater	10/55	Reversing lights left, S60
9/32	PTC resistor, crankcase ventilation	10/55	Reversing lights left, V60
9/38	Electrically heated fuel filter	10/64	Right-hand high beam
9/39	Heating element camera	10/65	Auxiliary light, front right
9/42	PTC-element	10/66	Right-hand low beam
9/43	Heated windshield washer nozzle, left	10/68	Left-hand high beam
9/44	Heated windshield washer nozzle, right	10/69	Auxiliary light, front left
		10/70	Left-hand low beam
10/1	Left-hand front lamp housing	10/72	Front ashtray lighting
10/2	Right-hand front lamp housing	10/114	Left-hand vanity mirror lighting
10/3	License plate lighting	10/115	Right-hand vanity mirror lighting
10/11	Front left running/parking light	10/125	Left-hand front courtesy lighting
10/11	Front left running/parking light	10/126	Right-hand front courtesy lighting
10/12	Front right running/parking light	10/127	Lighting, cargo compartment, left-hand side, S60
10/12	Front right running/parking light		
10/13	Front left direction indicator	10/148	Lighting, left front door mirror
10/14	Front right direction indicator	10/149	Lighting, right front door mirror
10/15	Direction indicator, left door mirror	10/150A	Rear reading light
10/16	Direction indicator, right door mirror	10/249	Sill lighting, front driver's side
10/17	Lamp housing, rear right, S60	10/250	Sill lighting, front passenger side
10/17	Lamp housing, rear right V60		
10/18	Lamp housing, rear left, S60	11A/no.	Main fuses in engine compartment fuse box
10/18	Lamp housing, rear left, V60	11B/no.	Fuses in engine compartment fuse box
10/19	Auxiliary brake lights, S60	11C/no	Fuses in distribution box passenger compartment
10/19	Auxiliary brake lights V60		
10/22	Ceiling light	11D/A	Fuses in cargo compartment fuse box
10/25	Ceiling light, cargo compartment, S60		
10/25	Ceiling light, cargo compartment, V60	15/31	Distribution box in engine compartment
10/29	Glove compartment lighting	15/32	Distribution box in cargo compartment, S60
10/43	Right brake light, S60	15/32	Distribution box in cargo compartment, V60
10/43	Right brake light, V60	15/36	Distribution box in passenger compartment
10/44	Tail lamp 1 right, S60	15/37	Engine compartment cold zone

List of components 5:6

16/1	Integrated Audio Module (IAM)	26/6	Converter/control module, sill moldings, driver's side
16/3.1	Right-hand front door speaker	26/7	Converter/control module, sill moldings, passenger side
16/3.2	Right-hand front door speaker	26/8	Alcohol lock charging cradle
16/4	Left-hand front door speaker	27/2	Indicator, visual collision warning
16/4	Left-hand front door speaker	27/3	Left Camera Module (LCM)
16/5	Right-hand rear door speaker	27/4	Right Camera Module (RCM)
16/6	Left-hand rear door speaker	27/6	Camera
16/10	Horn 1	27/8	Camera, wide angle front
16/11	Horn 2	31/1	Ground connection, PTC
16/16	Amplifier window antenna, S60	31/2	Ground connection, Left wheel housing
16/16	Amplifier window antenna, V60	31/3	Ground connection, Body battery
16/26	Center dashboard speaker	31/4	Ground connection, engine
16/29	Loudspeaker mid-range left front	31/5	Ground connection, rear edge roof
16/30	Loudspeaker mid-range right front	31/6	Ground connection, Left bottom rail
16/35	Siren Control Module (SCM)	31/7	Ground connection, Left bottom rail
16/36	TV receiver	31/10	Ground connection, Left bottom rail
16/45	Portable navigation system	31/15	Ground connection, Right bottom rail
16/47	Antenna GSM/GPS/RDAR	31/47	Ground connection, Left rear bumper abutment
16/49	Traffic message channel module (TMC)	31/48	Ground connection, Right rear bumper abutment
16/55	Left-hand front tweeter	31/65	Ground connection, Rear seat riser, left side 1
16/56	Right-hand front tweeter	31/66	Ground connection, Rear seat riser, left side 2
16/60	Phone Module (PHM)	31/67	Ground connection, Rear seat riser, right side 1
16/63	GPS antenna, cellular phone	31/68	Ground connection, Rear seat riser, right side 2
16/65	Immobilizer Antenna Unit (IAU)	31/83	Ground connection, Left bottom rail
16/71	Amplifier window antenna 1, S60	31/84	Ground connection, Right bottom rail
16/71	Amplifier window antenna 1, V60	31/88	Ground connection, Engine ignition coils, 4-Cyl.
16/73	Amplifier window antenna 2, V60 (TV/DAB)	31/88	Ground connection, Engine ignition coils, 5-Cyl.
16/98	Microphone	31/88	Ground connection, Engine ignition coils, 6-Cyl.
16/105	Audio module (AUD)	31/89	Ground connection, Engine ignition coils, 4-Cyl.
16/109	Control module (RSE)	31/89	Ground connection, Engine ignition coils, 5-Cyl.
16/121	VICS-antenna	31/89	Ground connection, Engine ignition coils, 6-Cyl.
16/123	Auxiliary input (AUX)	31/90	Ground connection, Engine ignition coils, 6-Cyl.
16/127	Microphone, mobile phone handsfree	31/93	Ground connection, Left wheel housing 2
16/132	Antenna door lock trunk lid/tailgate, V60	31/94	Ground connection, Right wheel housing 2
16/133	Antenna, door lock, cargo compartment, S60	31/95	Ground connection, Left wheel housing 3
16/134	Antenna, door lock, passenger compartment 2	31/96	Ground connection, Right wheel housing 3
16/135	Antenna, door lock, passenger compartment 3	31/107	Ground connection, roof rear
16/136	LH rear door tweeter	31/117	Ground connection, tailgate upper V60
16/137	RH rear door tweeter	31/130	Ground connection, left roof, C-pillar
16/140	SIM card reader	31/131	Ground connection, support battery
16/141	Interference filter, rear window, left	31/XX4	Ground connection, Engine-Body
16/145	Remote Digital Audio Receiver (RDAR)	31/XX10	Ground connection, Left wheel housing 1
16/159	Control module, mobile phone handsfree	31/XX14	Ground connection, Left wheel housing 3 (ABS)
16/162	Digital Audio Broadcast Module (DABM)	31/XX15	Ground connection, Right wheel housing
16/164	Display/DVD headrest left (RSE)	31/AL	Ground connection, Auxiliary lights
16/165	Display/DVD headrest right (RSE)	31/INFOT	Ground connection, Infotainment
16/181	Rear headphone sockets	31/TRM	Ground connection, Accessories
16/185	TV Antenna		
16/186	TV-Antenna, V60		
16/188	TV Antenna		
17/13	Data link connector		
17/19	12 V outlet, cargo compartment		
17/39	13-pin outlet, tow hitch cable harness		
17/42	USB-port		
17/42	USB port, accessories		
17/45	Alcohol lock outlet		
18/4	Contact reel		
20/3-8	Spark plug and ignition coil		
20/16	Capacitor		
20/22-26	Glow plug		

List of components 6:6

74/9	Connector	74/509	Connector
74/30	Connector	74/510	Connector
74/31	Connector	74/511	Connector
74/301	Connector	74/512	Connector
74/302	Connector	74/513	Connector
74/304	Connector	74/514	Connector
74/307	Connector	74/518	Connector
74/309	Connector	74/519	Connector
74/310	Connector not 1,6L	74/520	Connector
74/310	Connector only 1,6L	74/524	Connector
74/313	Connector	74/529	Connector
74/316	Connector	74/530	Connector
74/321	Connector	74/531	Connector
74/401	Connector	74/532	Connector
74/403	Connector	74/534	Connector
74/404	Connector	74/537	Connector
74/405	Connector	74/539	Connector
74/406	Connector	74/540	Connector
74/407	Connector	74/601	Connector, S60
74/407B	Connector	74/602	Connector, V60
74/409	Connector	74/606	Connector
74/411	Connector	74/607	Connector
74/412	Connector	74/608	Connector
74/414	Connector	74/609	Connector
74/416	Connector	74/901	Connector
74/417	Connector		
74/418	Connector	F/no.	Fuses
74/419	Connector	PF/no.	Main fuse by battery
74/420	Connector		
74/421	Connector	10X/29	Connector interface, original car
74/503	Connector	10X/125	Connector interface, original car
74/504	Connector	10X/126	Connector interface, original car
74/504B	Connector	16X/1	Connector interface, original car
74/507	Connector	74X/9	Connector interface, original car
74/508	Connector	74X/414	Connector interface, original car