


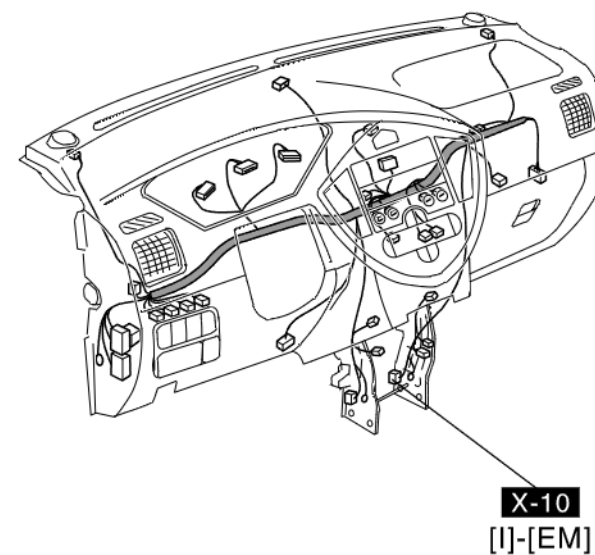


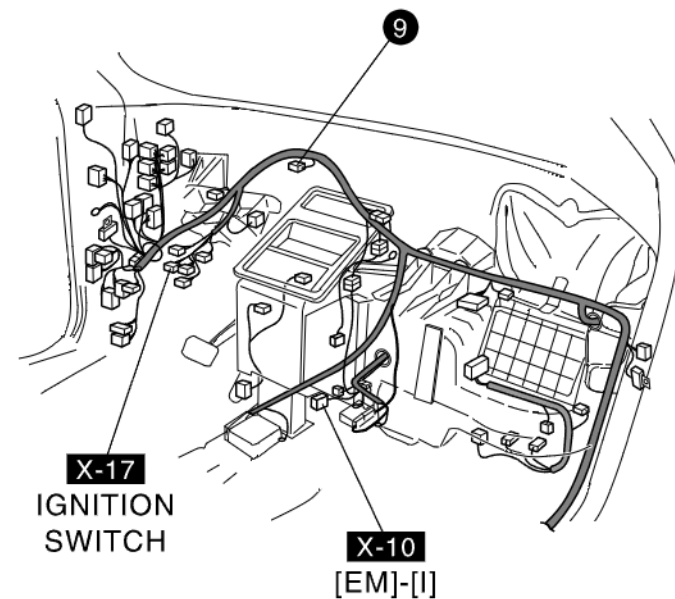


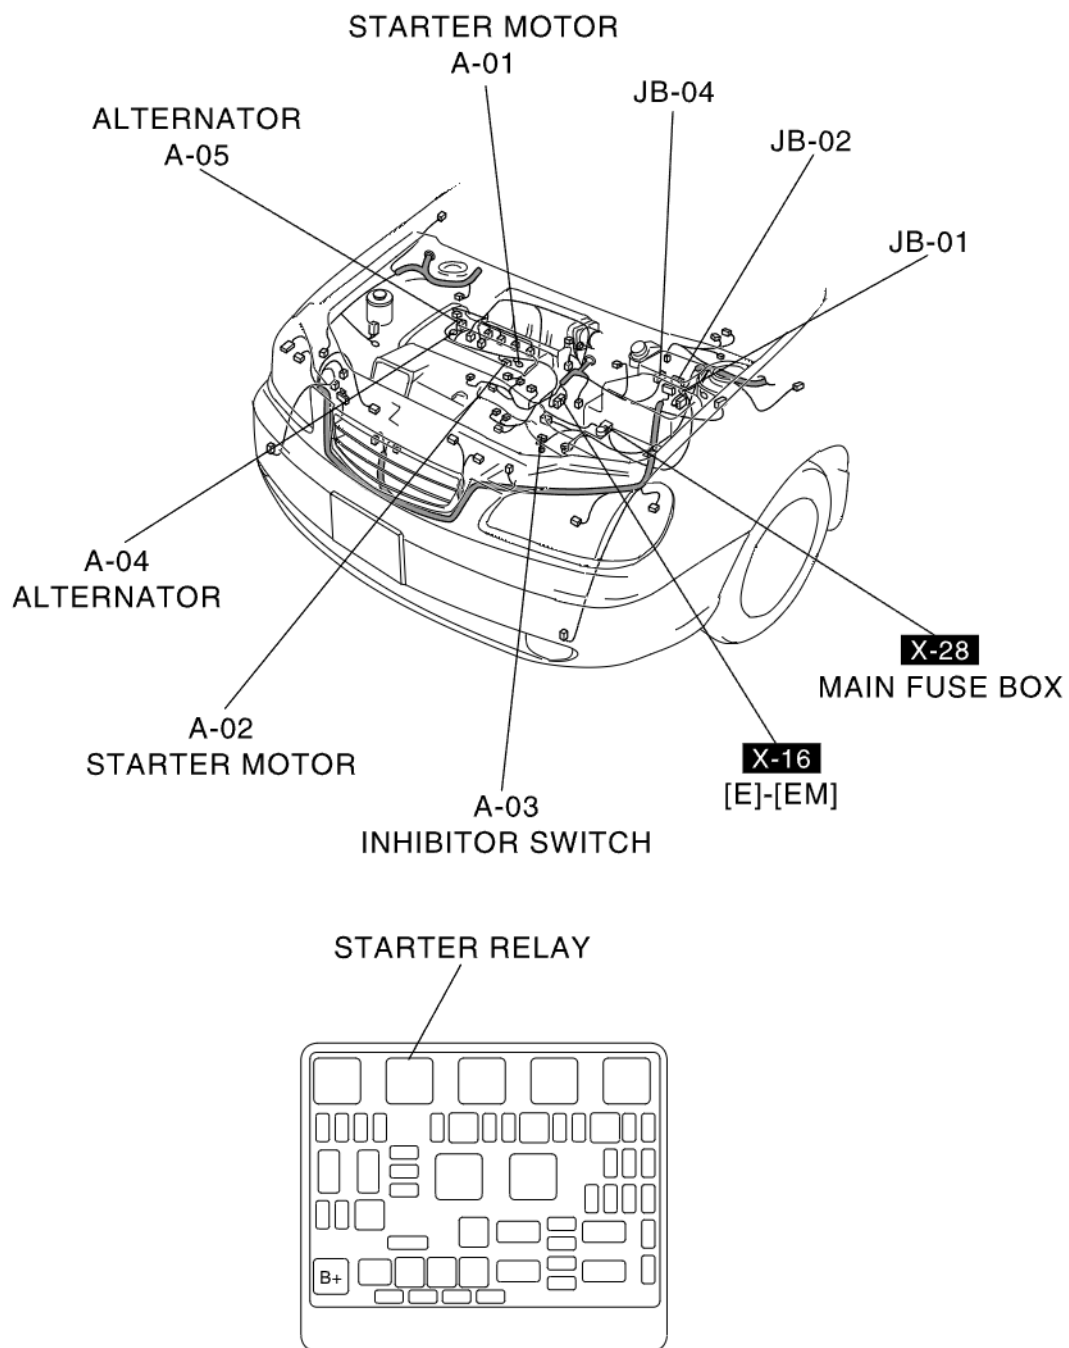


A-01 STARTER MOTOR [E]

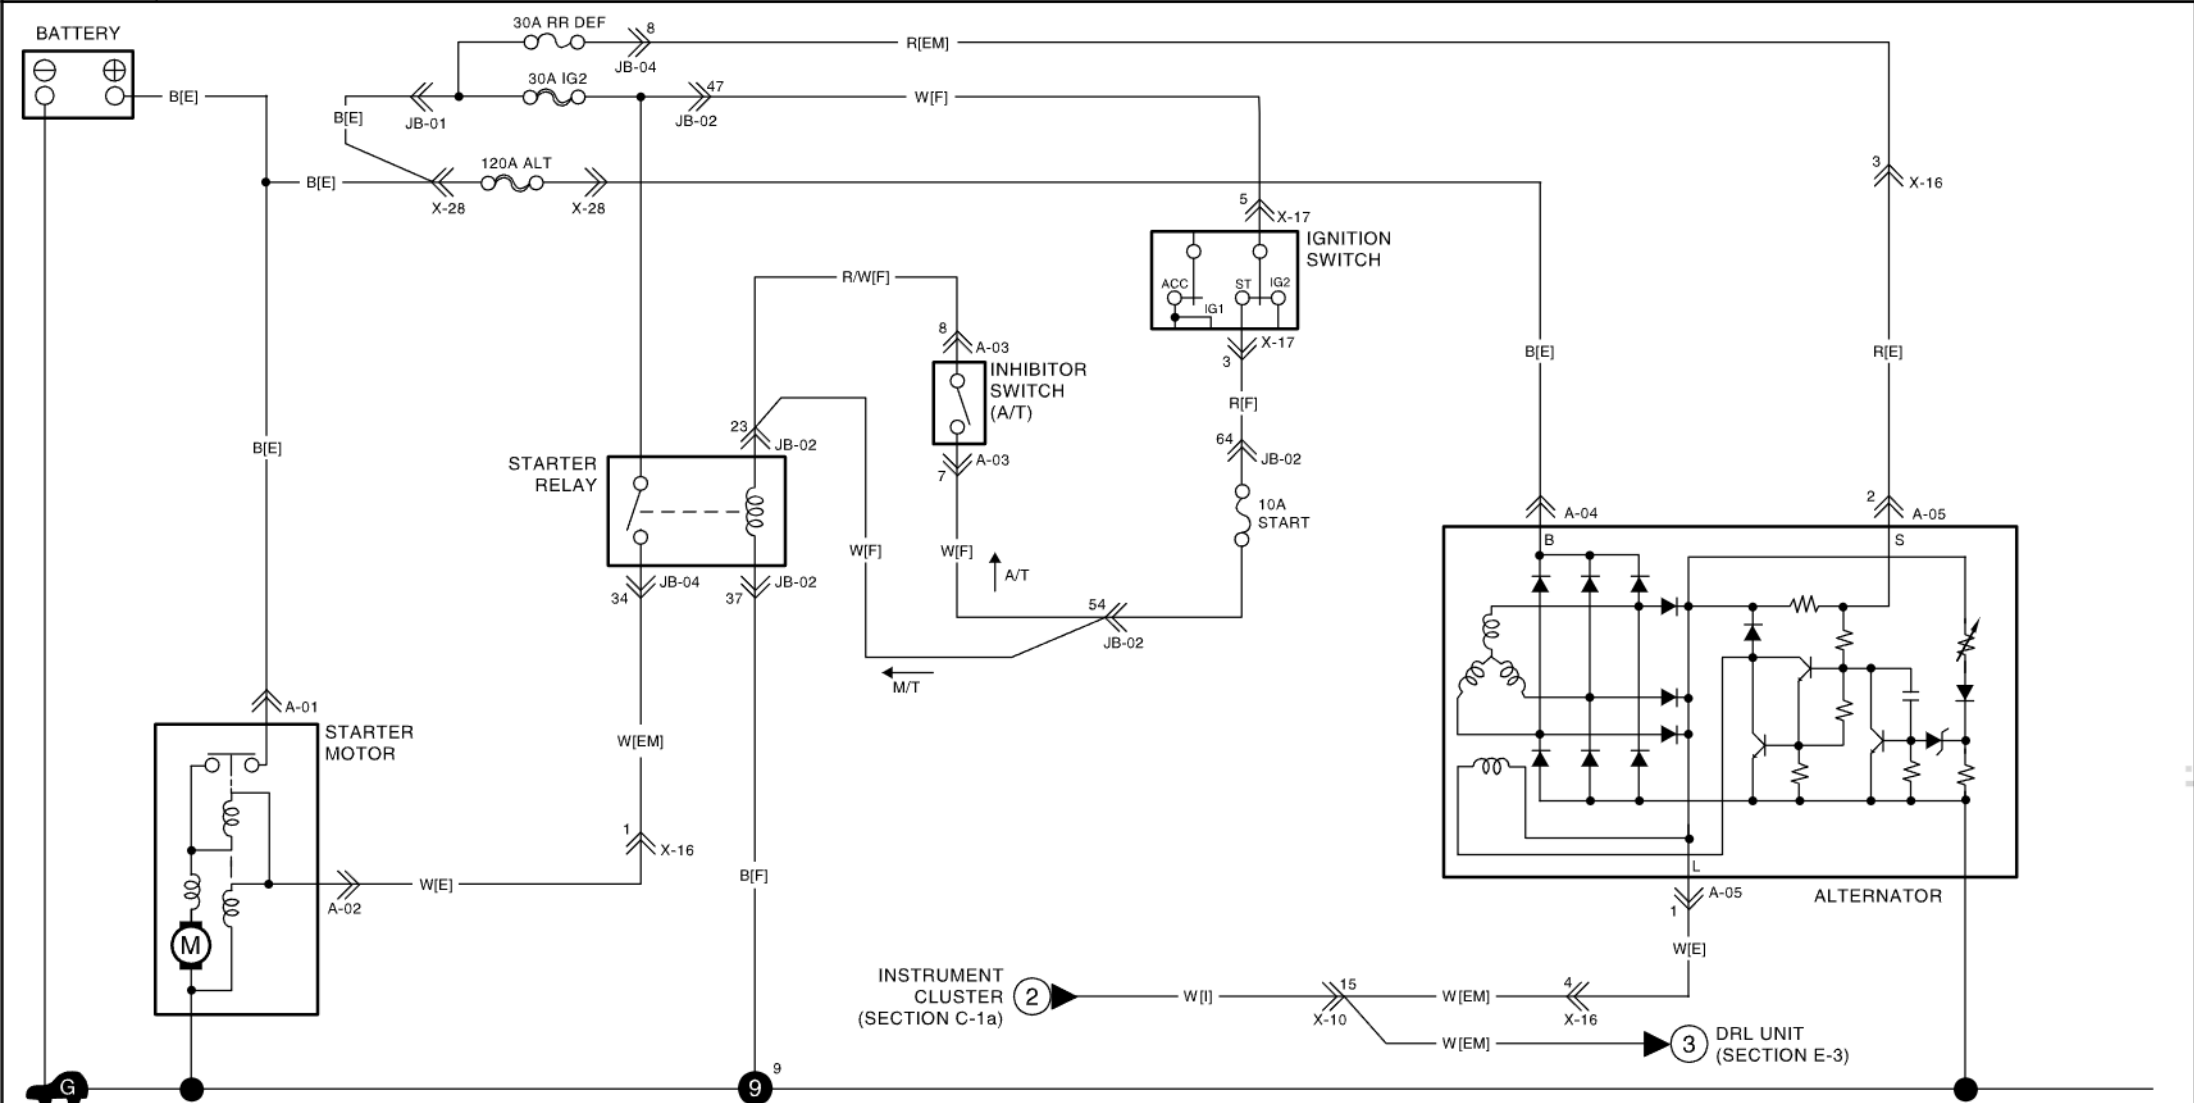

 A-02 STARTER MOTOR [E]




A-03 INHIBITOR SWITCH [F]




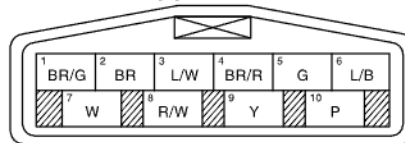



A-04 ALTERNATOR [E]





  
A-05 ALTERNATOR [E] B



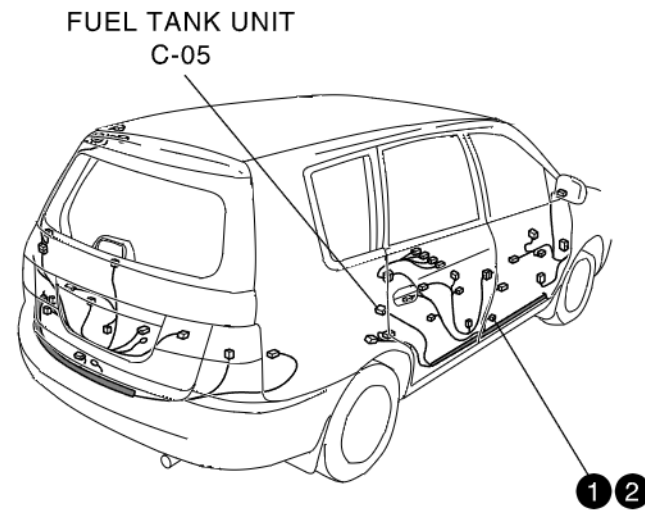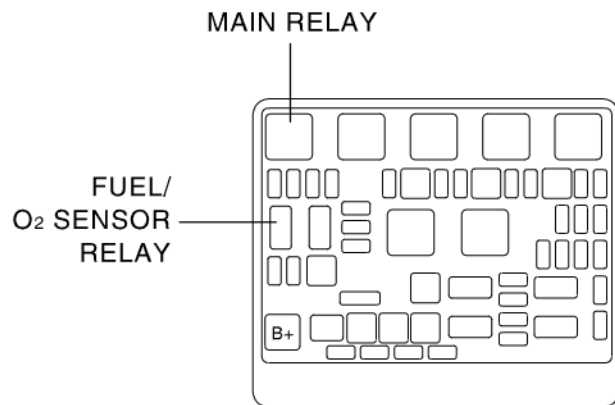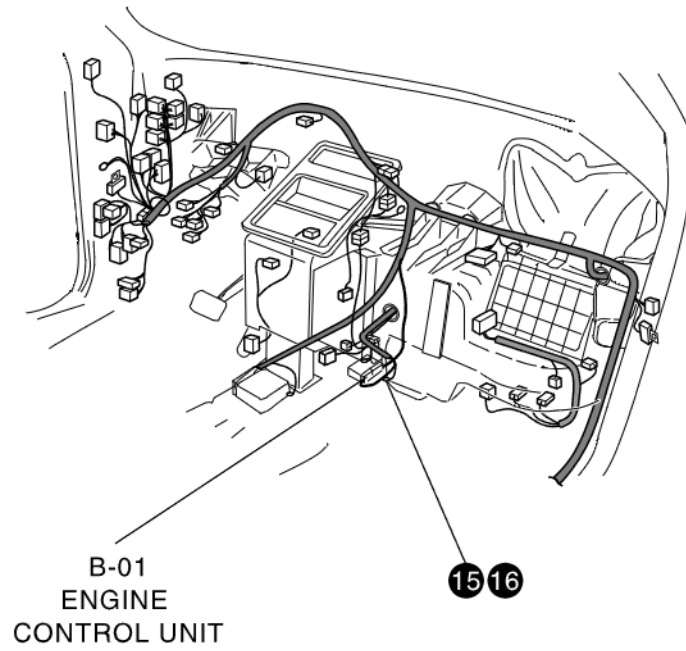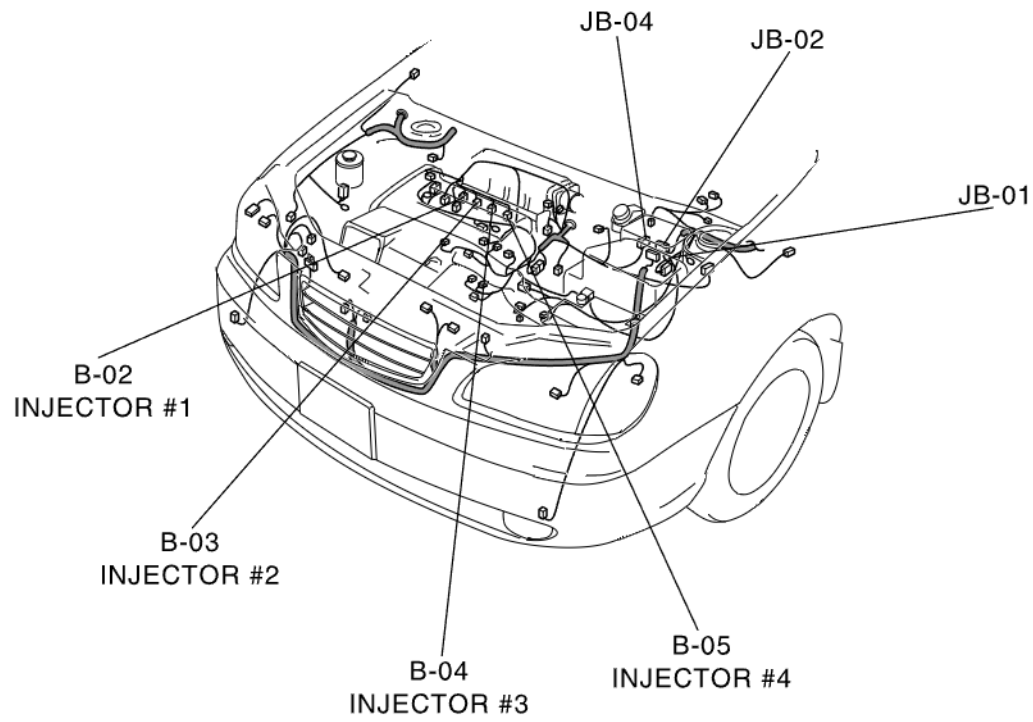




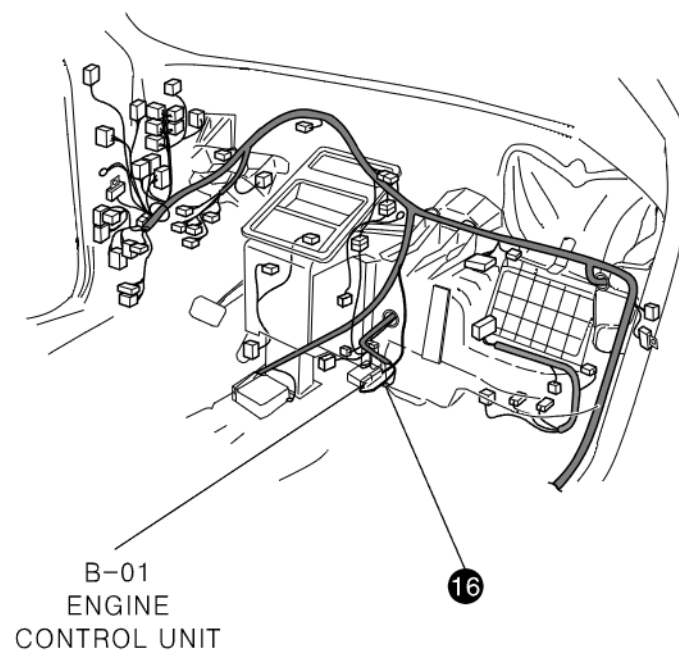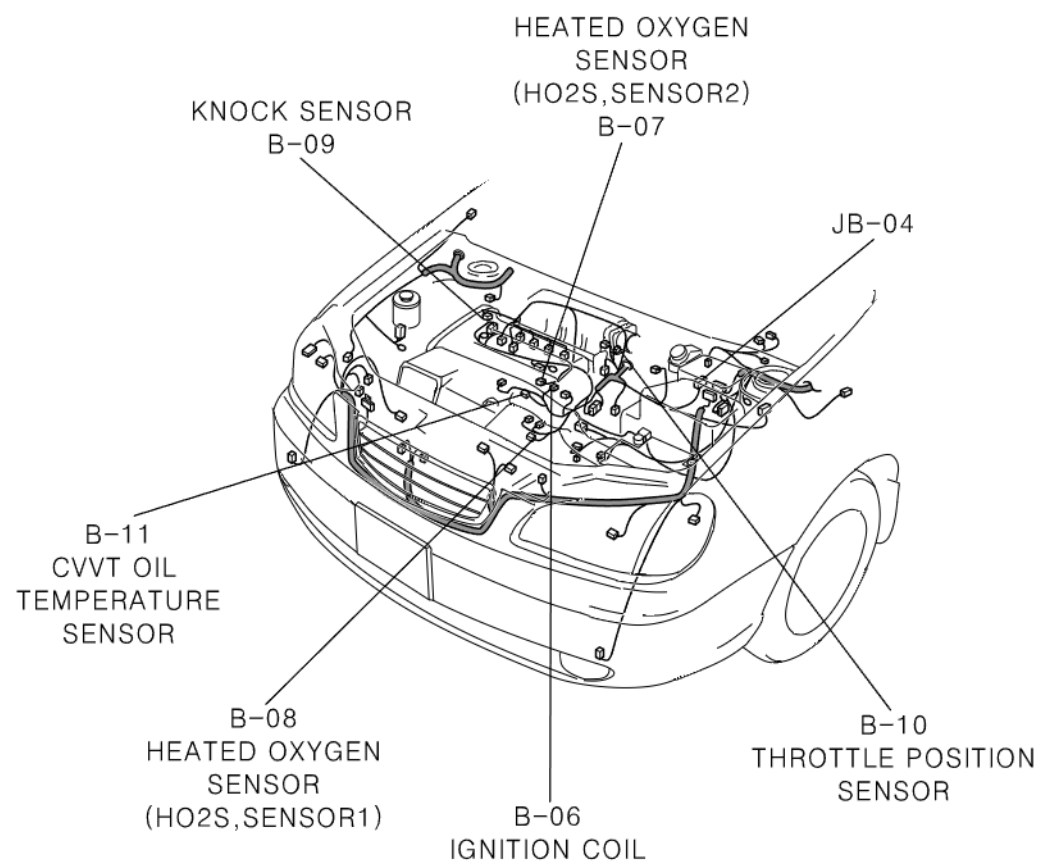



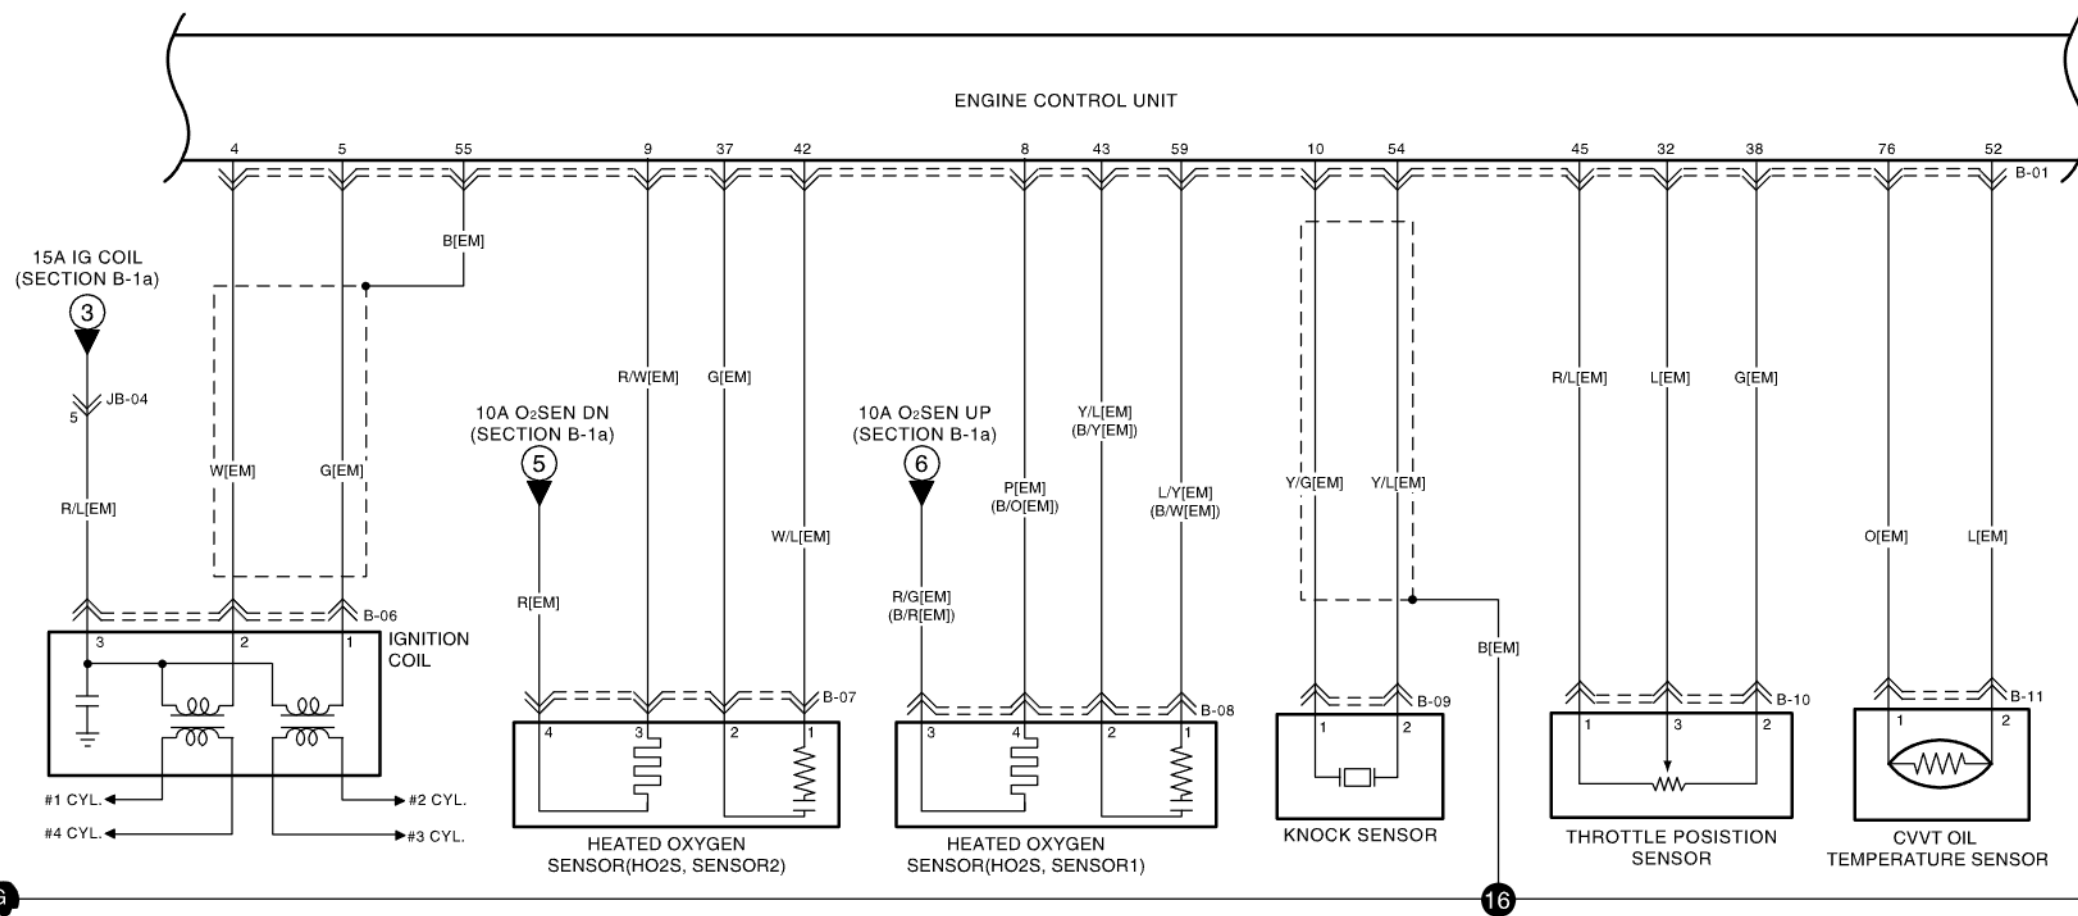


B-01 ENGINE CONTROL UNIT [EM]

() : A/T

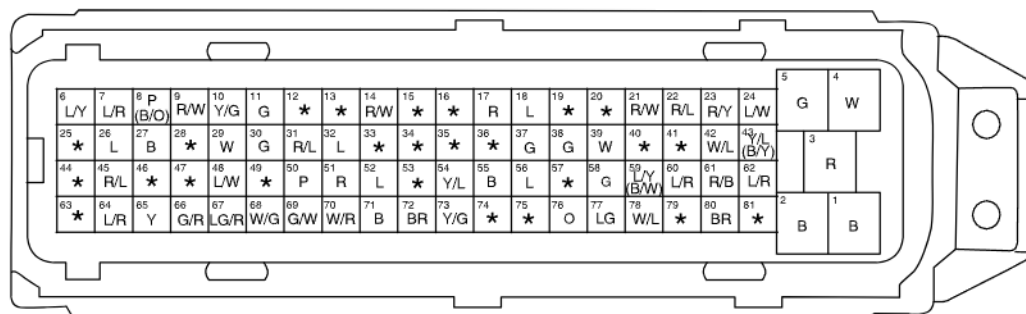


B-06 IGNITION COIL [EM]

 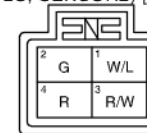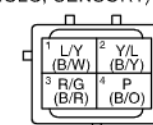
B-07 HEATED OXYGEN SENSOR (HO₂S, SENSOR2) [EM]BB-08 HEATED OXYGEN SENSOR (HO₂S, SENSOR1) [EM]B

() : A/T

 
B-09 KNOCK SENSOR [EM]B






B-10 THROTTLE POSITION SENSOR [EM]

 

B-11 CVVT OIL TEMPERATURE SENSOR [EM]B

 


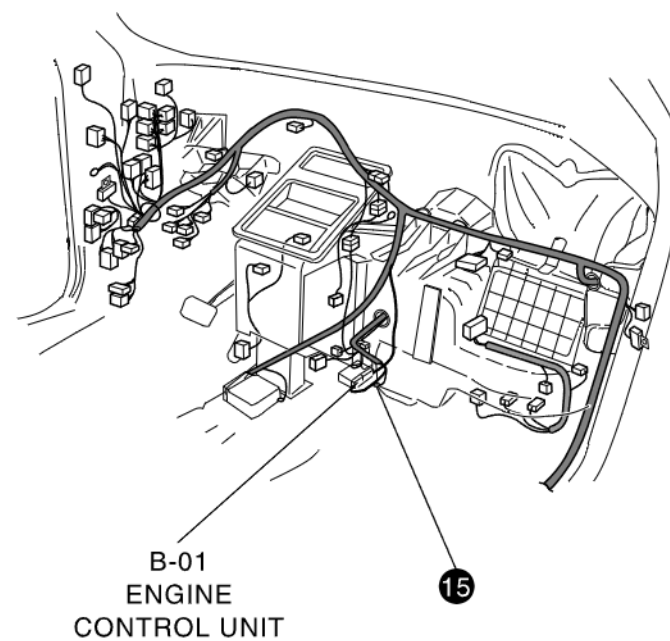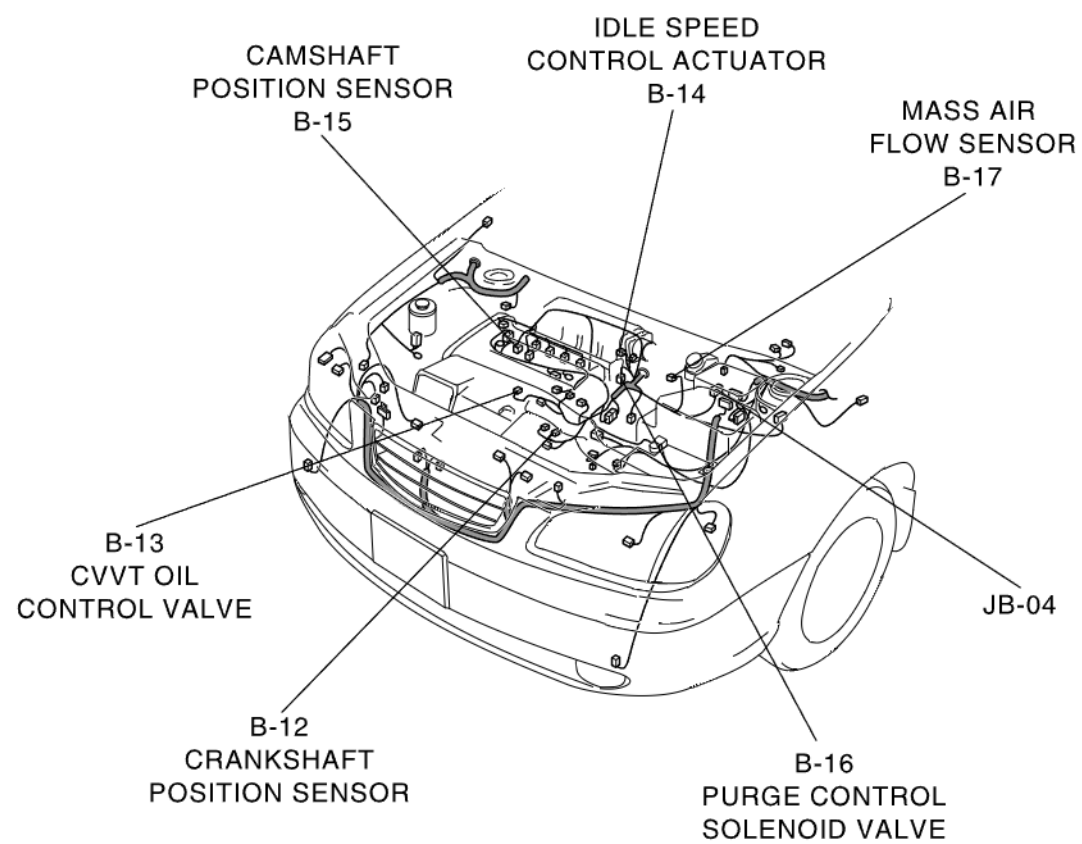

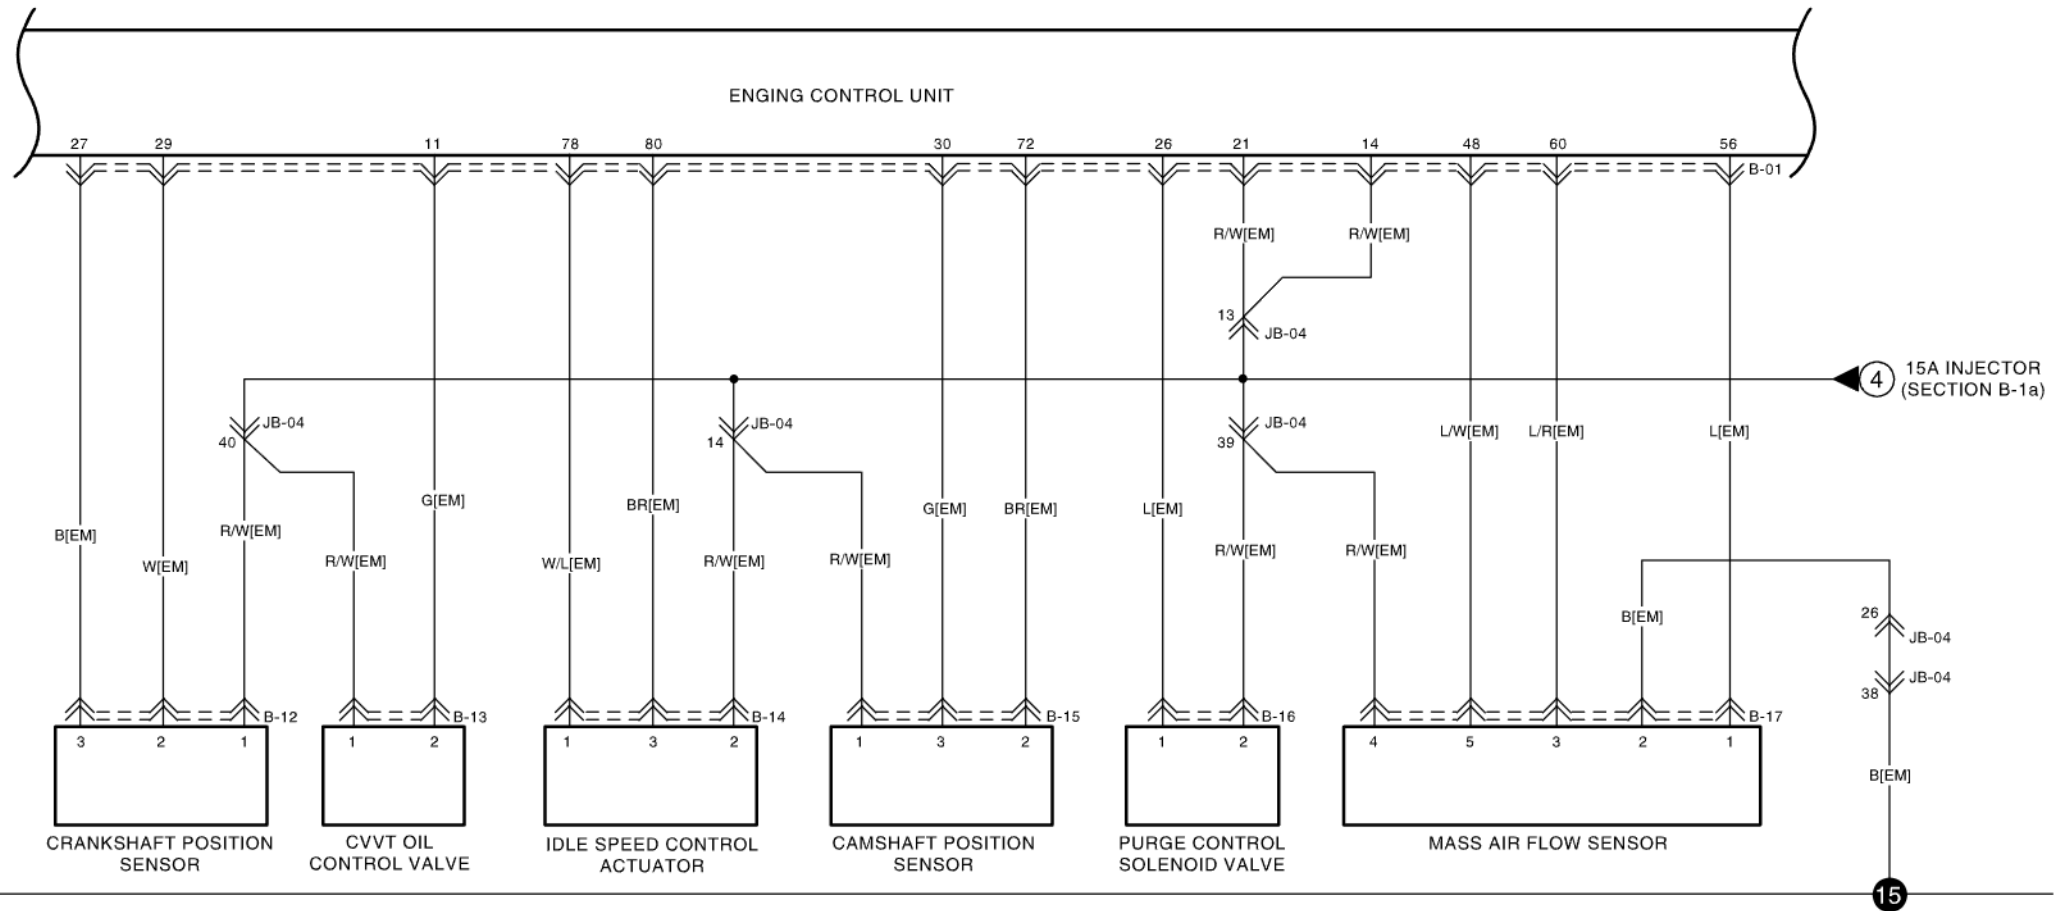

B-01 ENGINE CONTROL UNIT [EM]


() : A/T

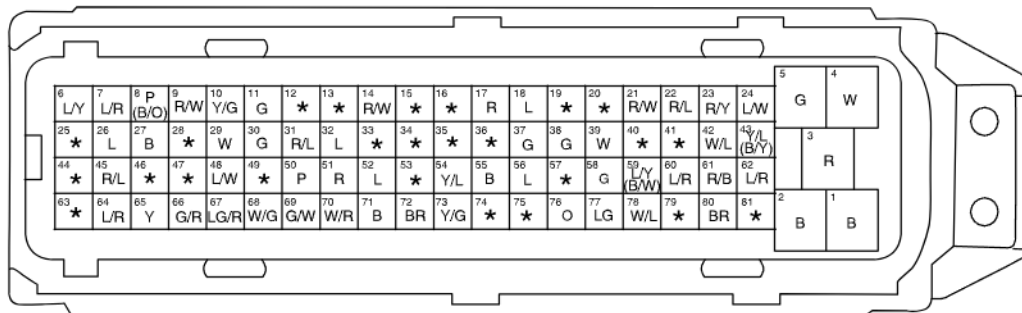


B-12 CRANKSHAFT POSITION SENSOR [EM]B



 
B-13 CVVT OIL CONTROL VALVE [EM]




B-14 IDLE SPEED CONTROL ACTUATOR [EM]

 


B-15 CAMSHAFT POSITION SENSOR [EM]B

 



B-16 PURGE CONTROL SOLENOID VALVE [EM]B

 

B-17 MASS AIR FLOW SENSOR [EM]

 


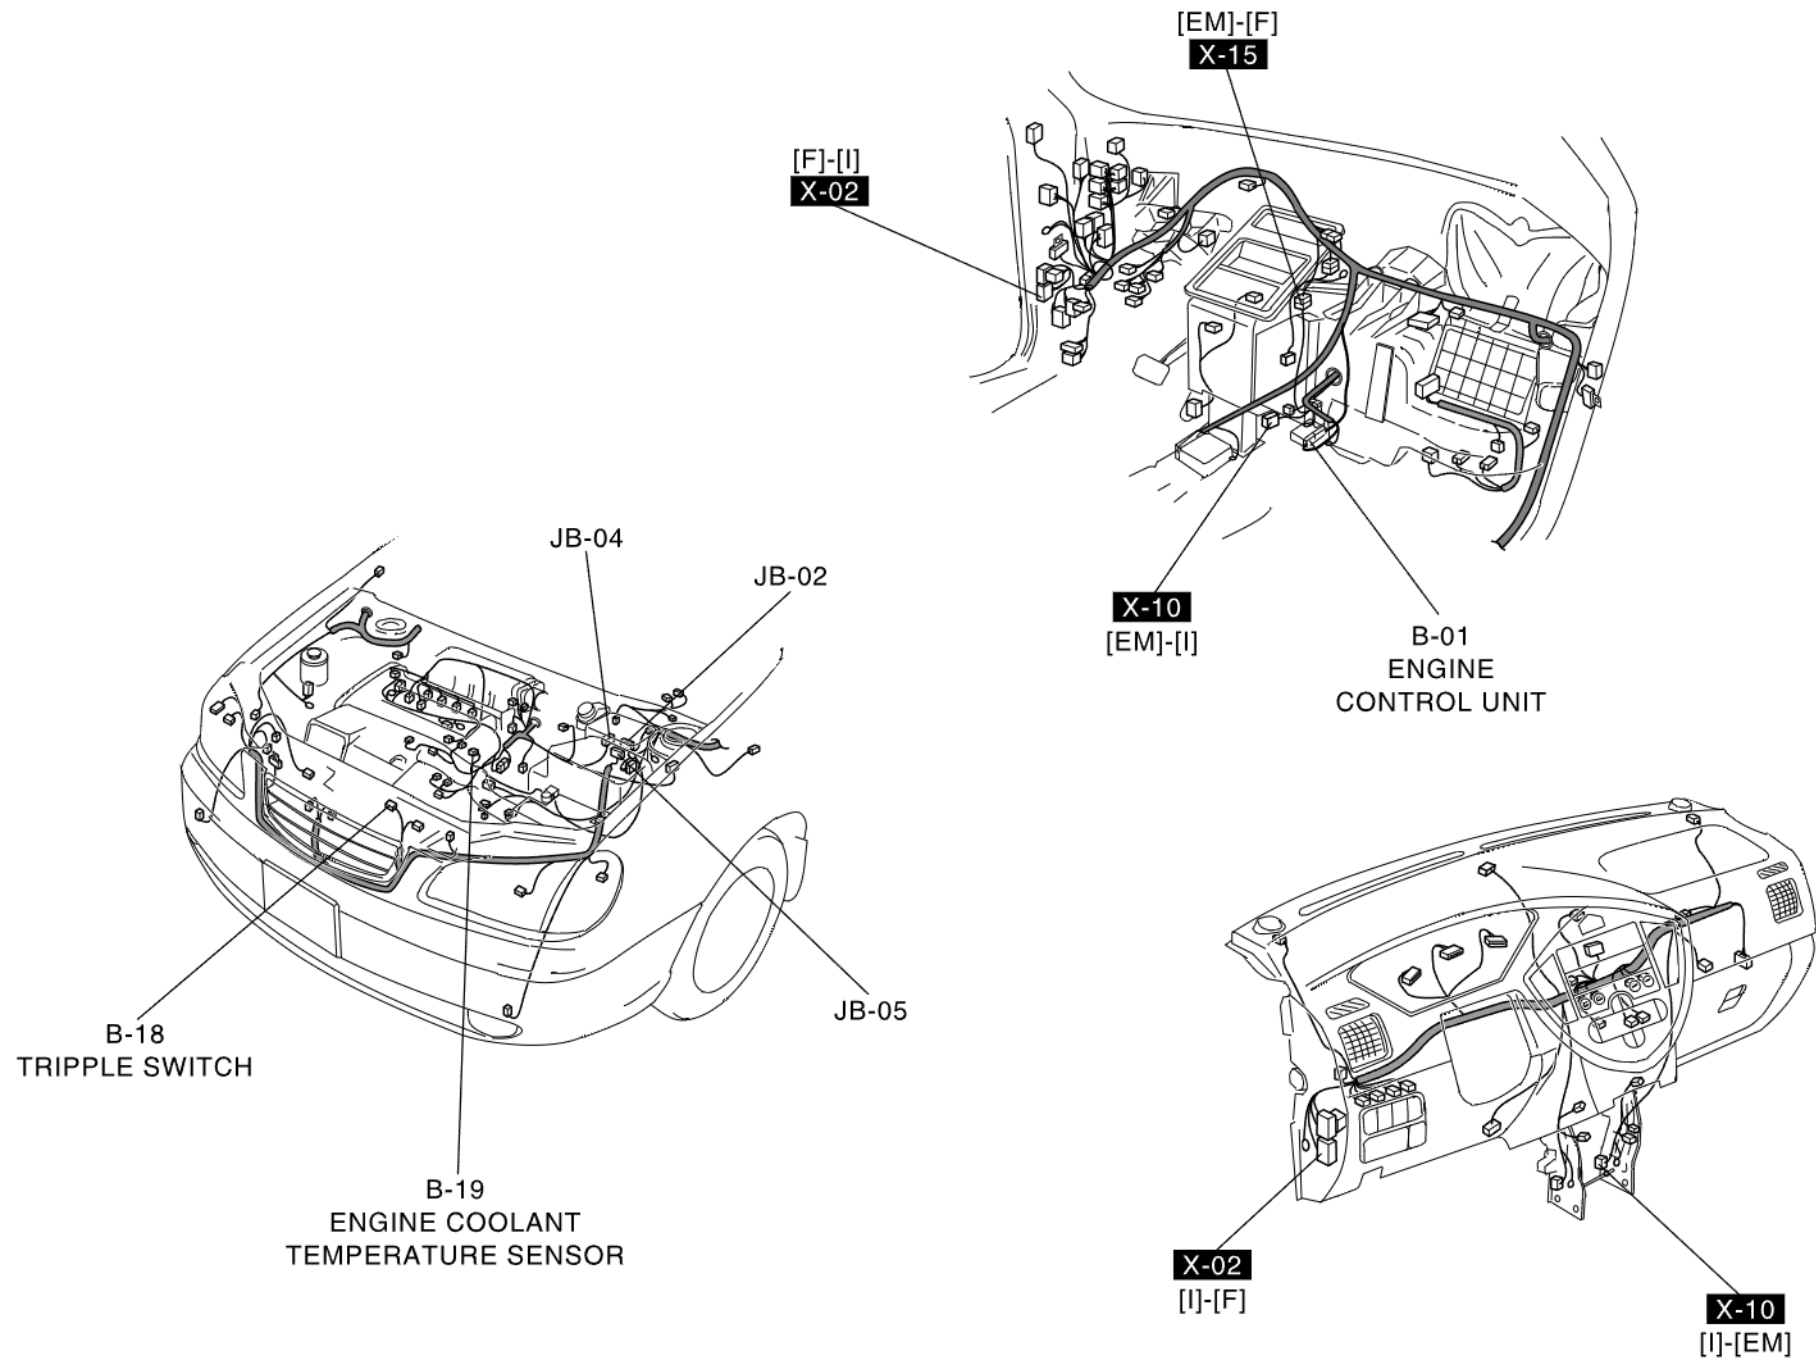

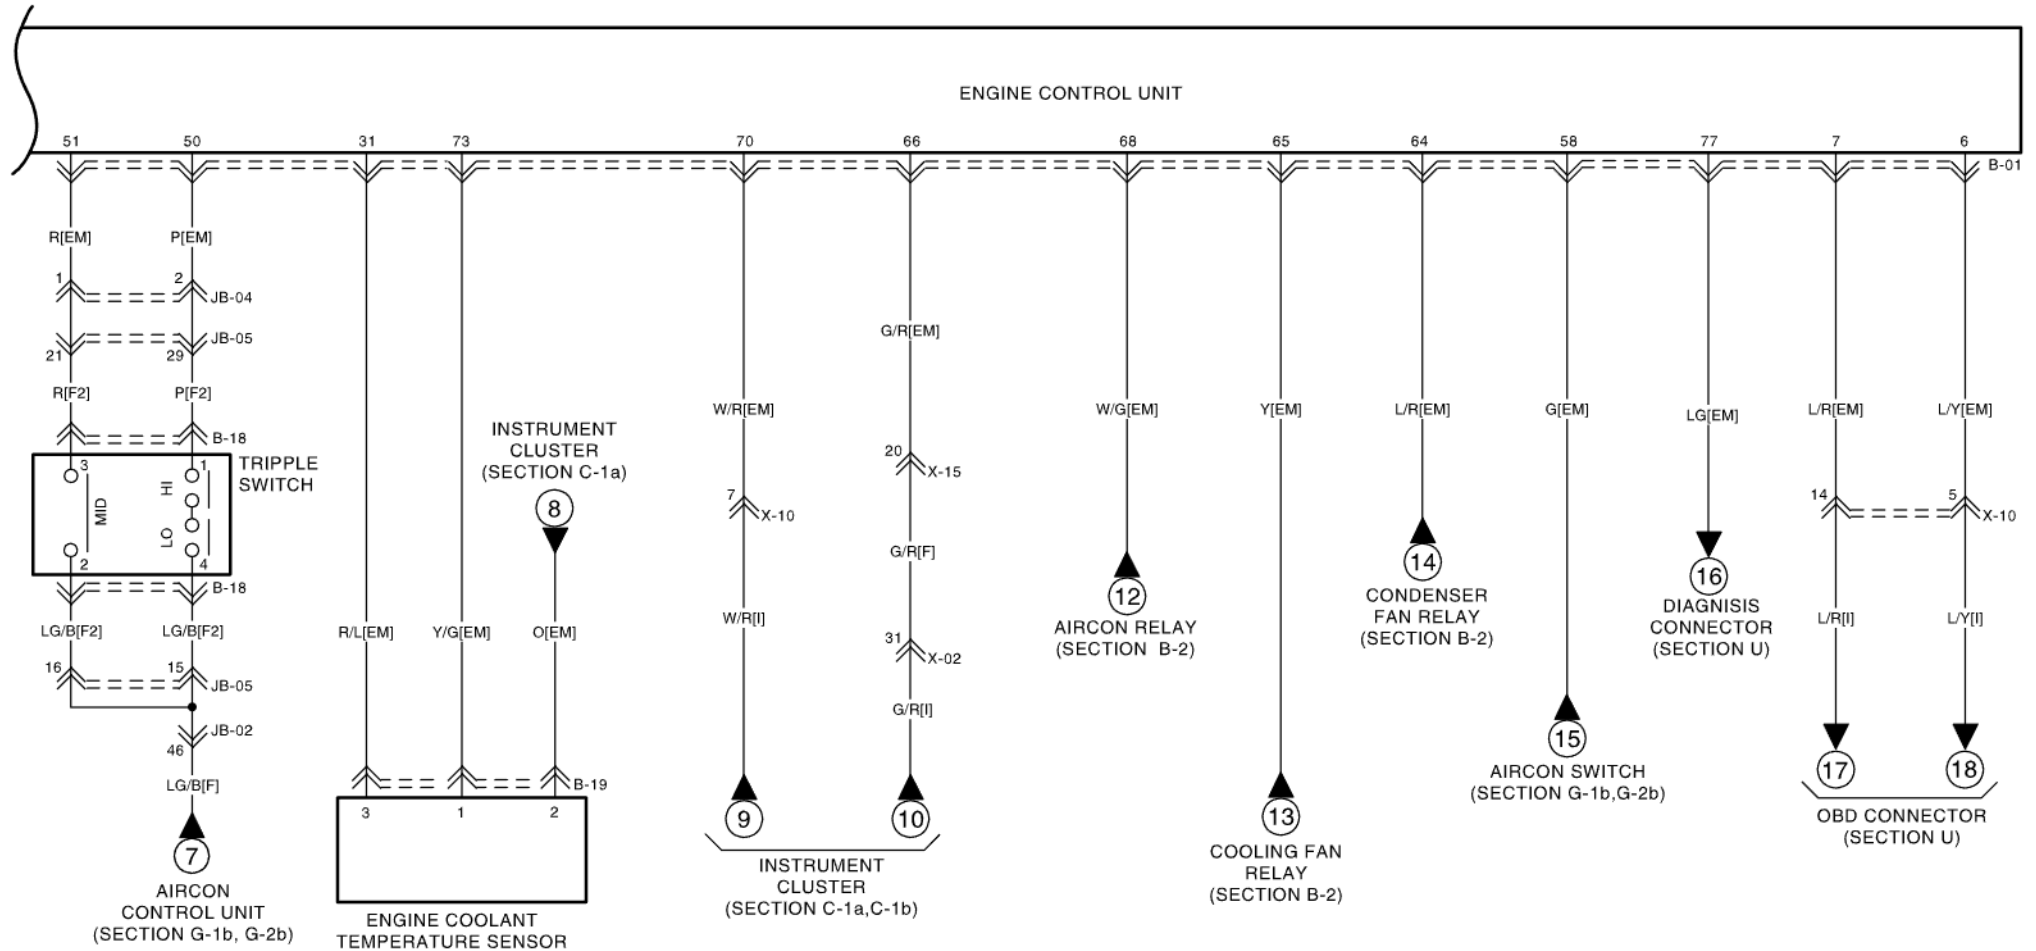


B-01 ENGINE CONTROL UNIT [EM]


() : A/T

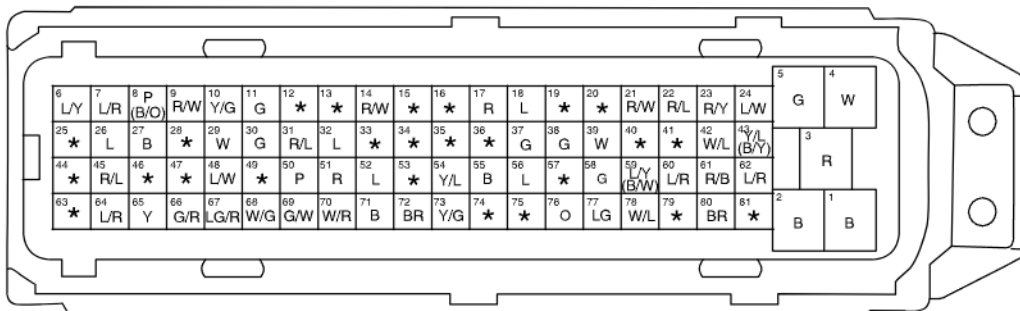



B-18 TRIPPLE SWITCH [F2]

 

 B-19 ENGINE COOLANT TEMPERATURE SENSOR [EM]



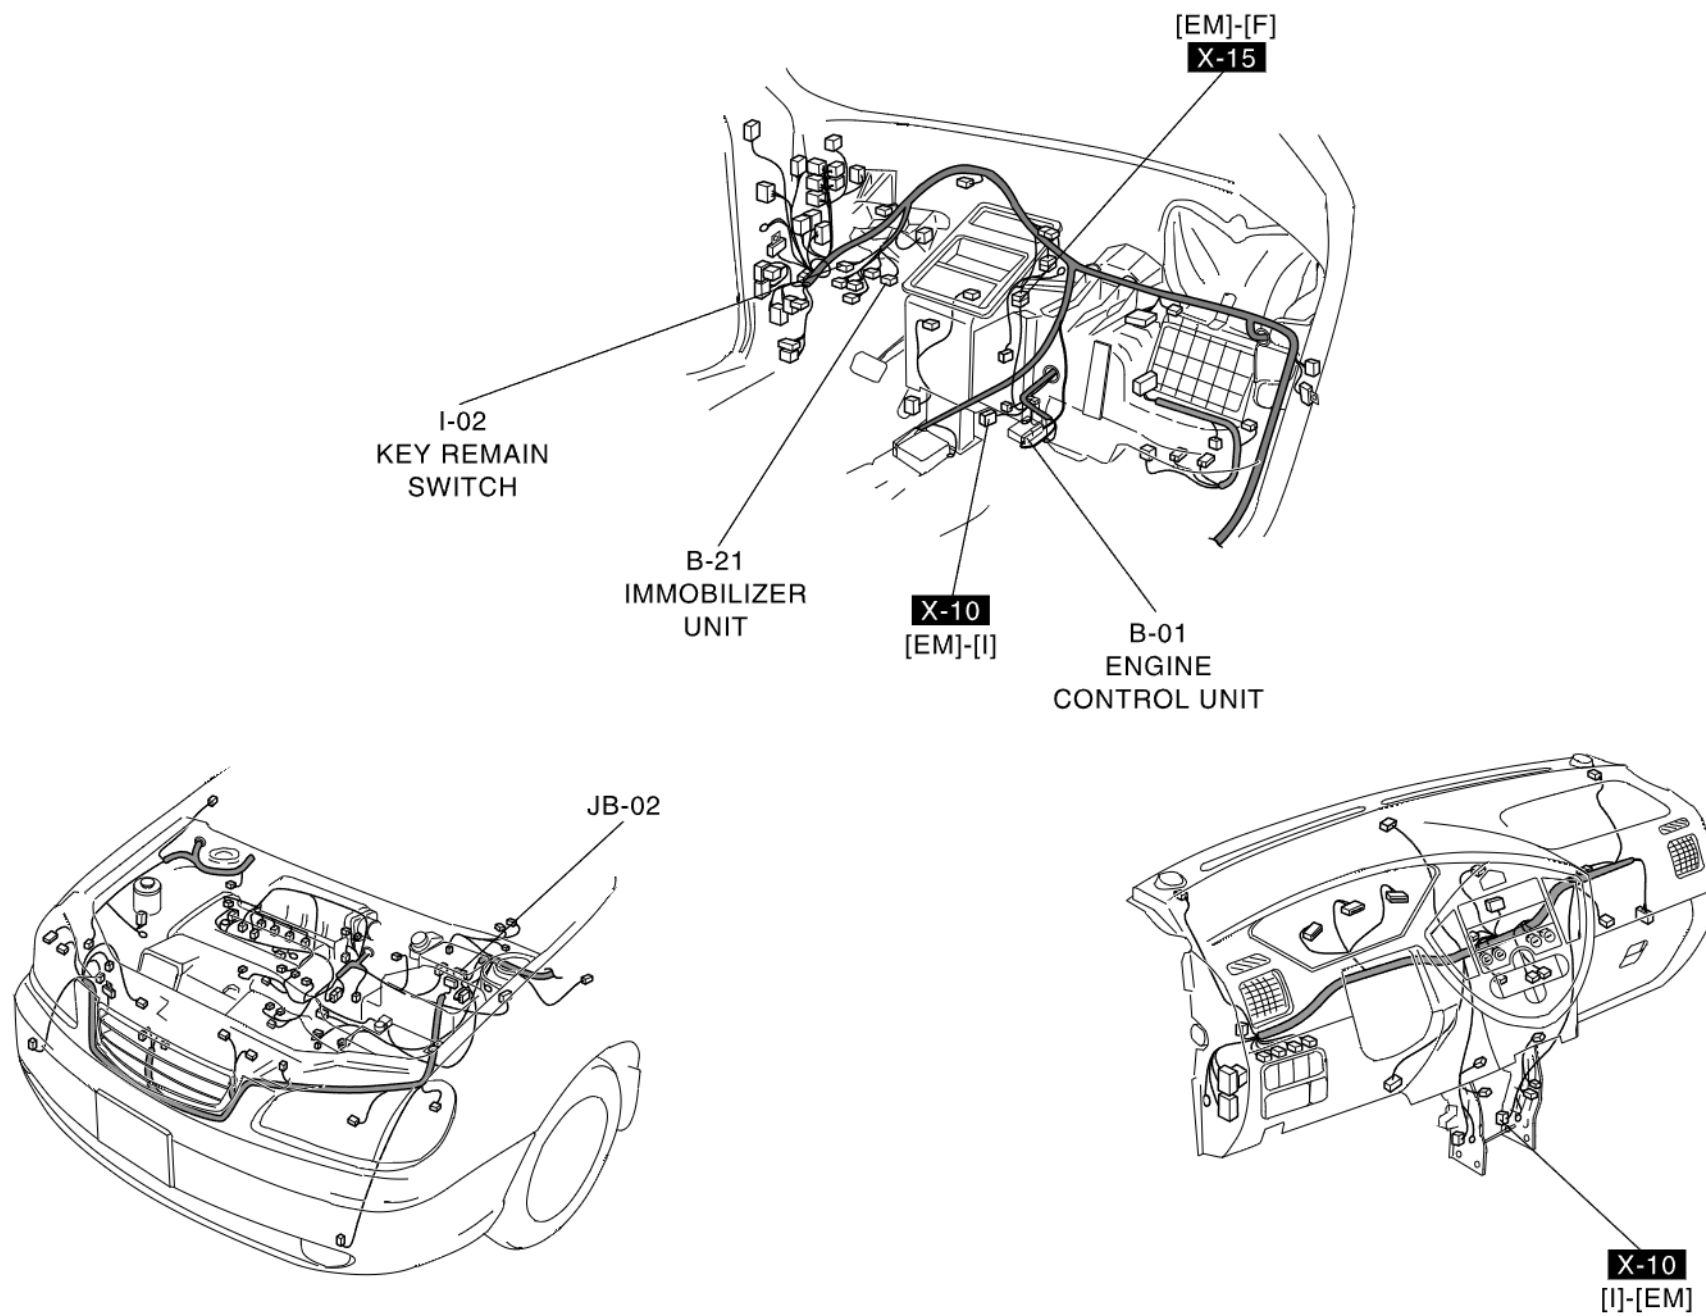

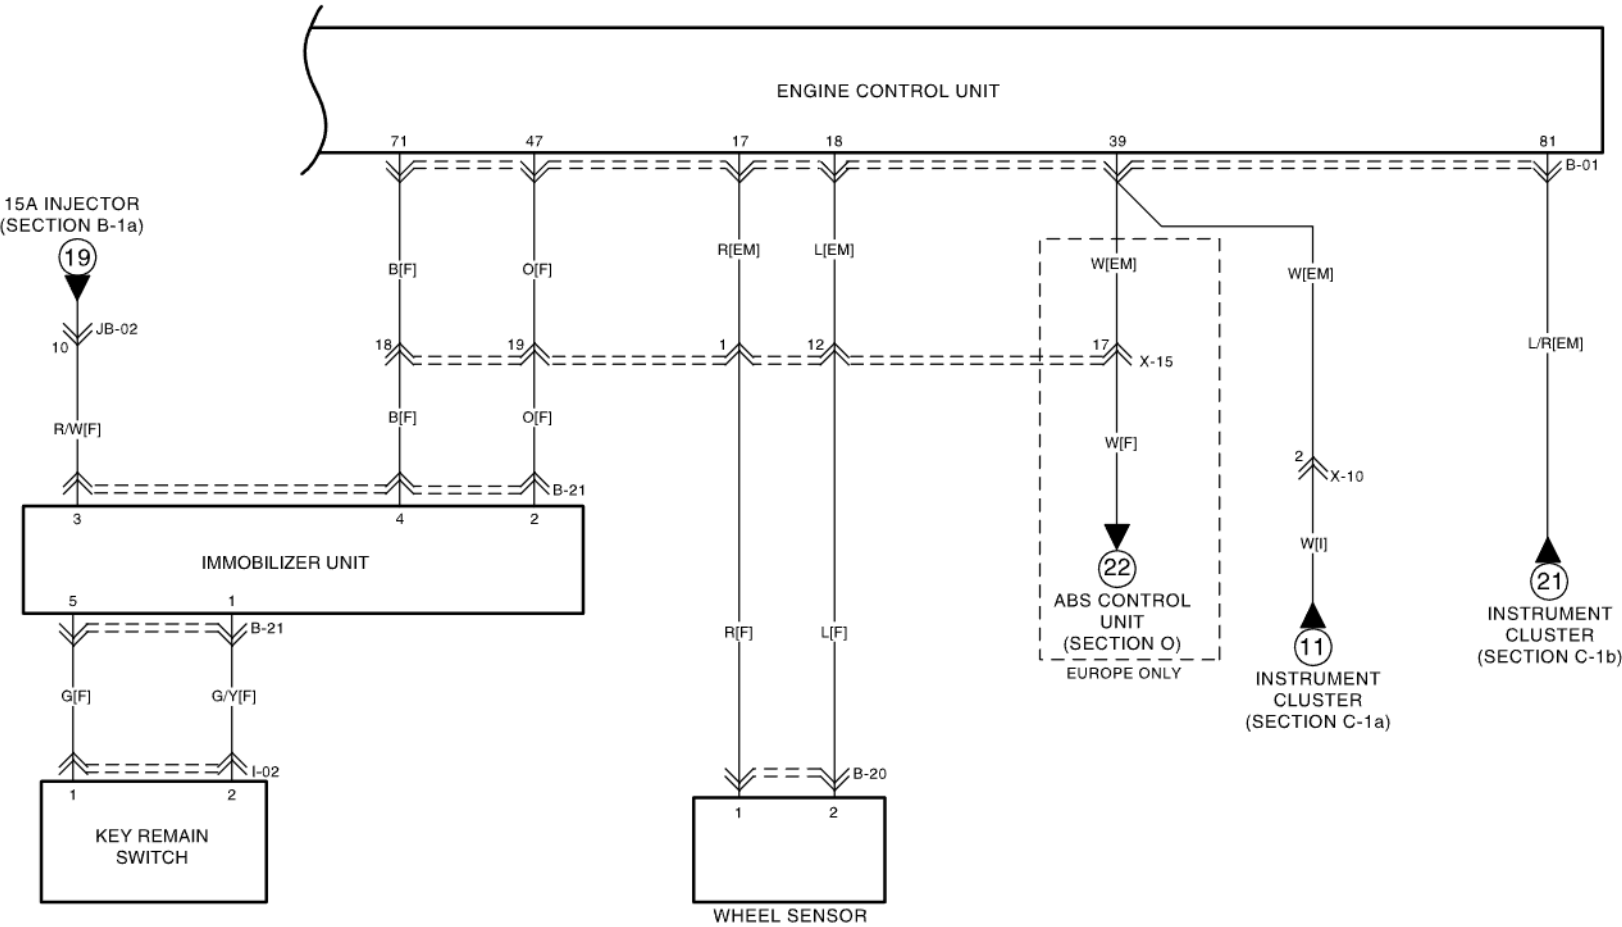





B-01 ENGINE CONTROL UNIT [EM]




() : A/T


B-20 WHEEL SENSOR [EM]

B-21 IMMOBILIZER UNIT [F]

   
I-02 KEY REMAIN SWITCH [F]

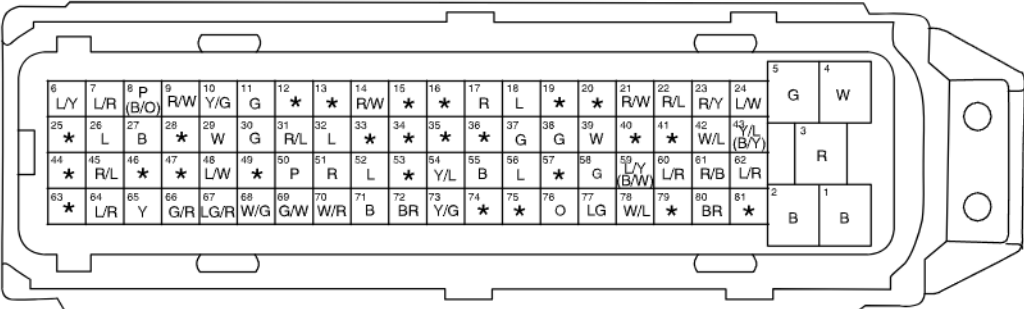

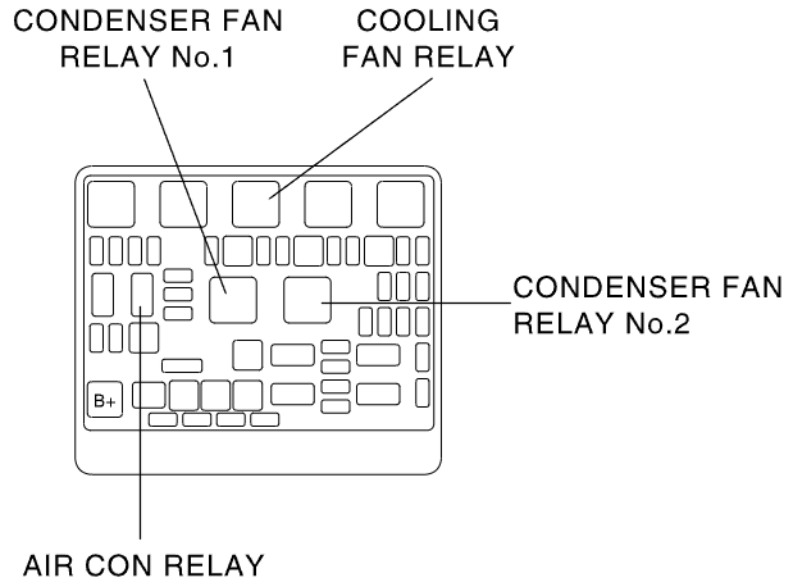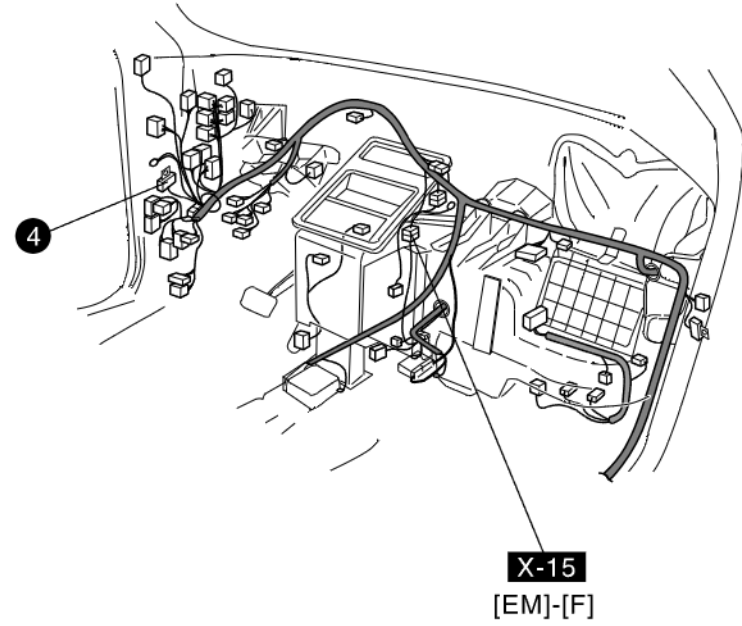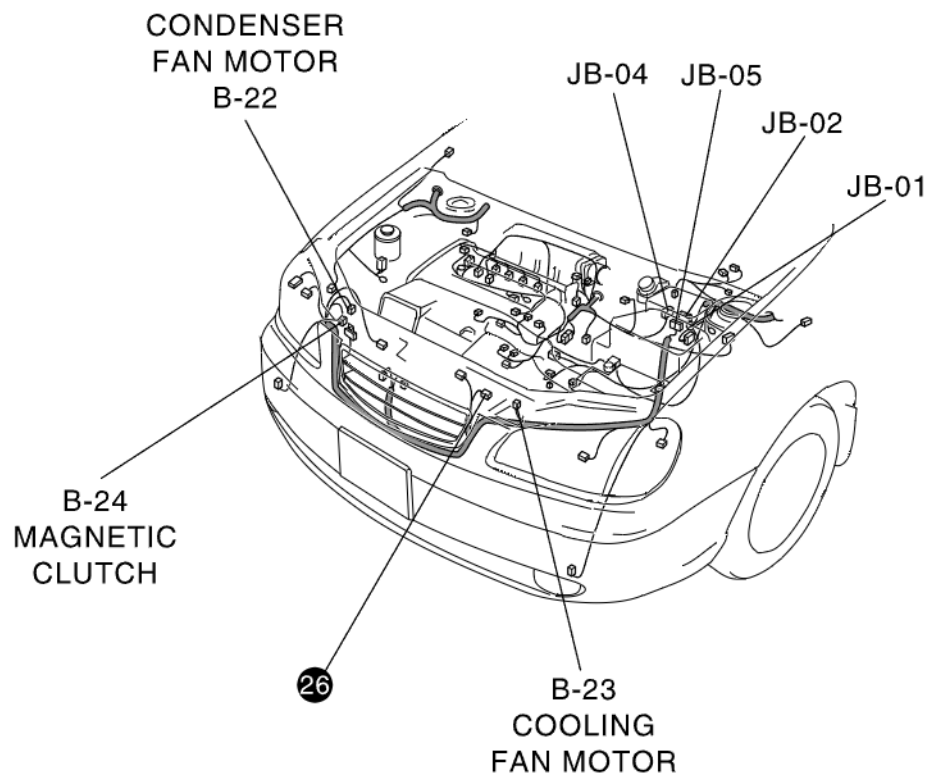


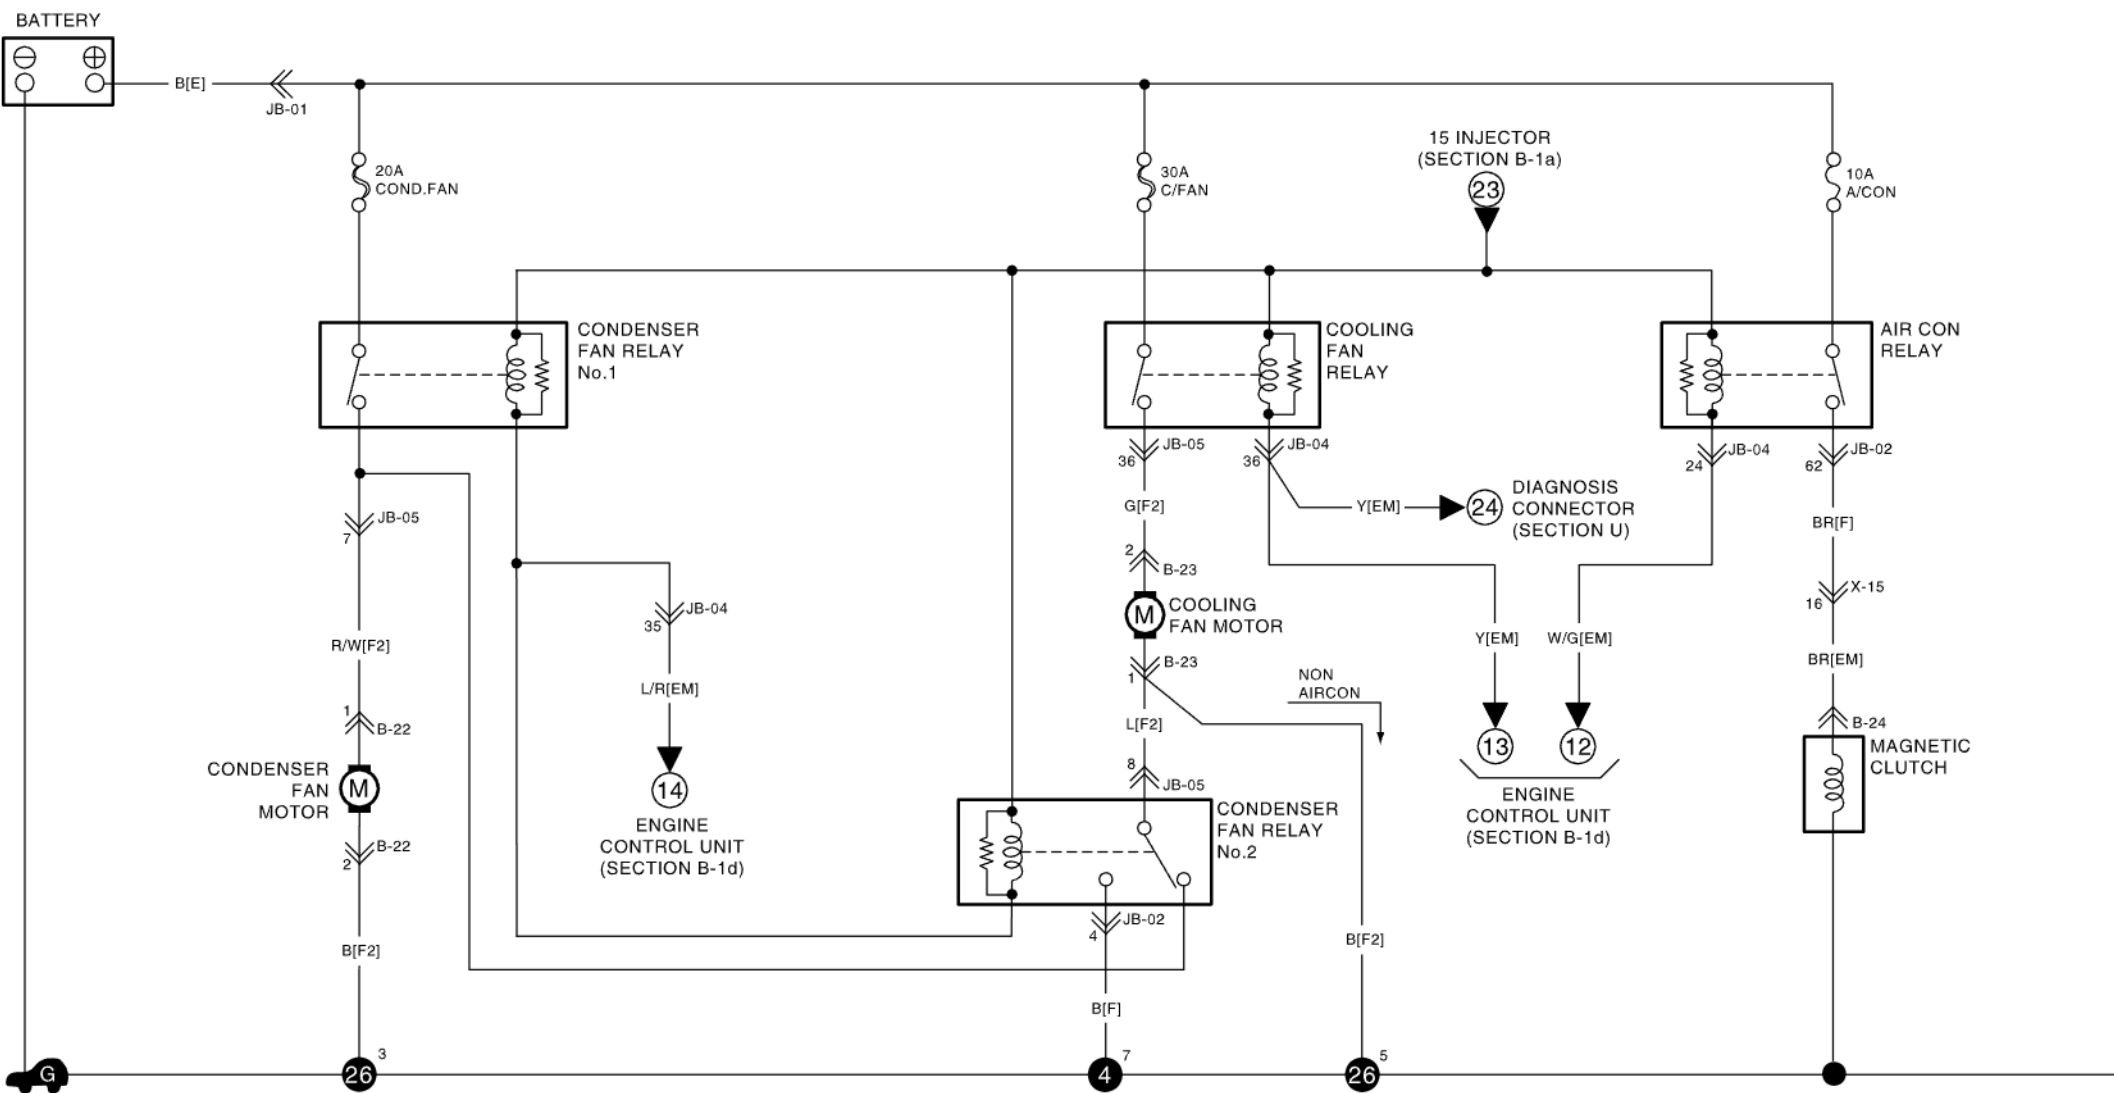

B-22 CONDENSER FAN MOTOR [F2] B

 





B-23 COOLING FAN MOTOR [F2] B

 


() : NON AIRCON


B-24 MAGNETIC CLUTCH [EM] B



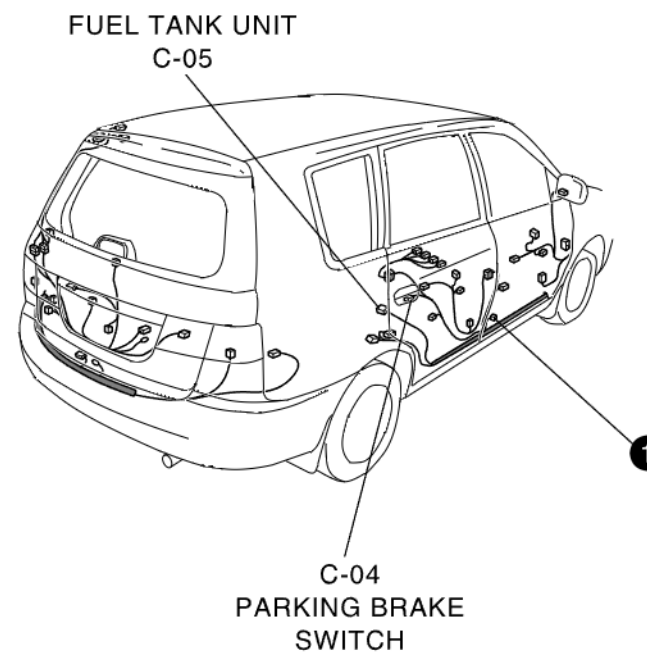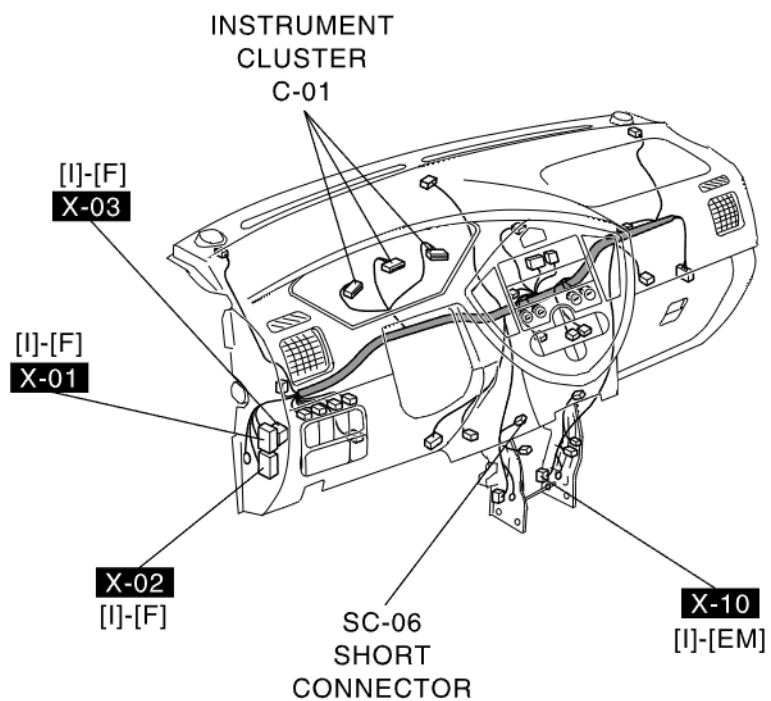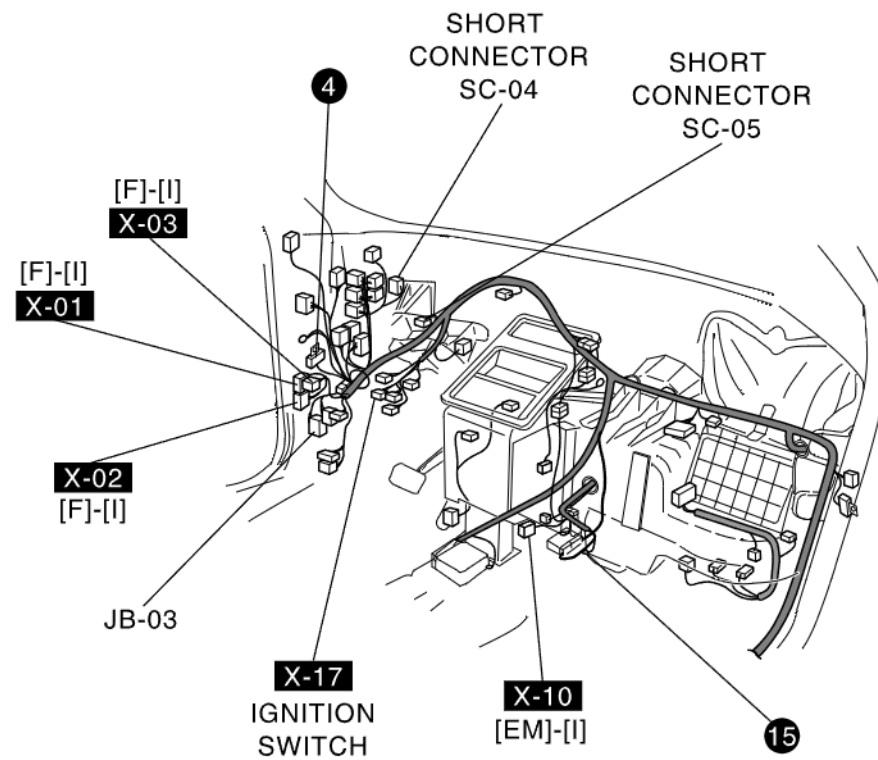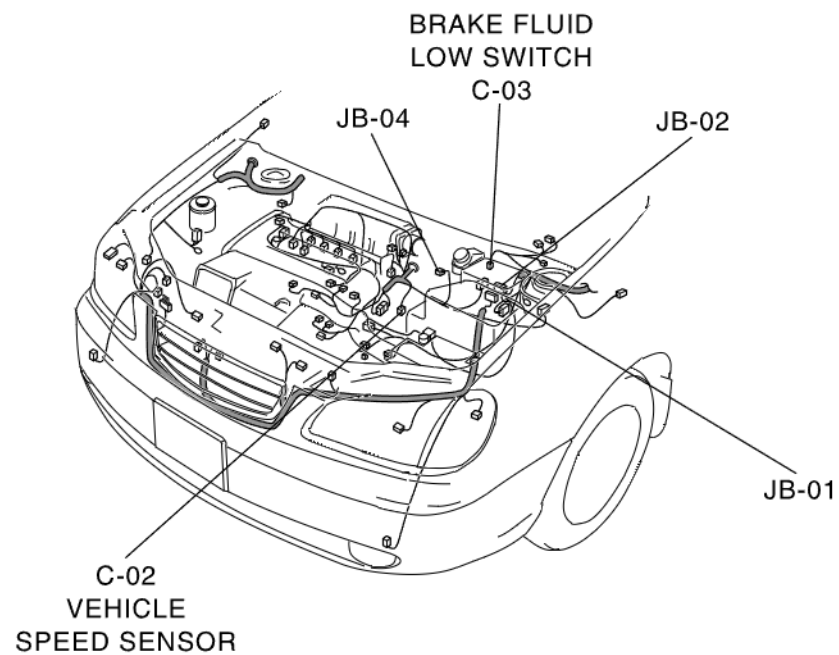


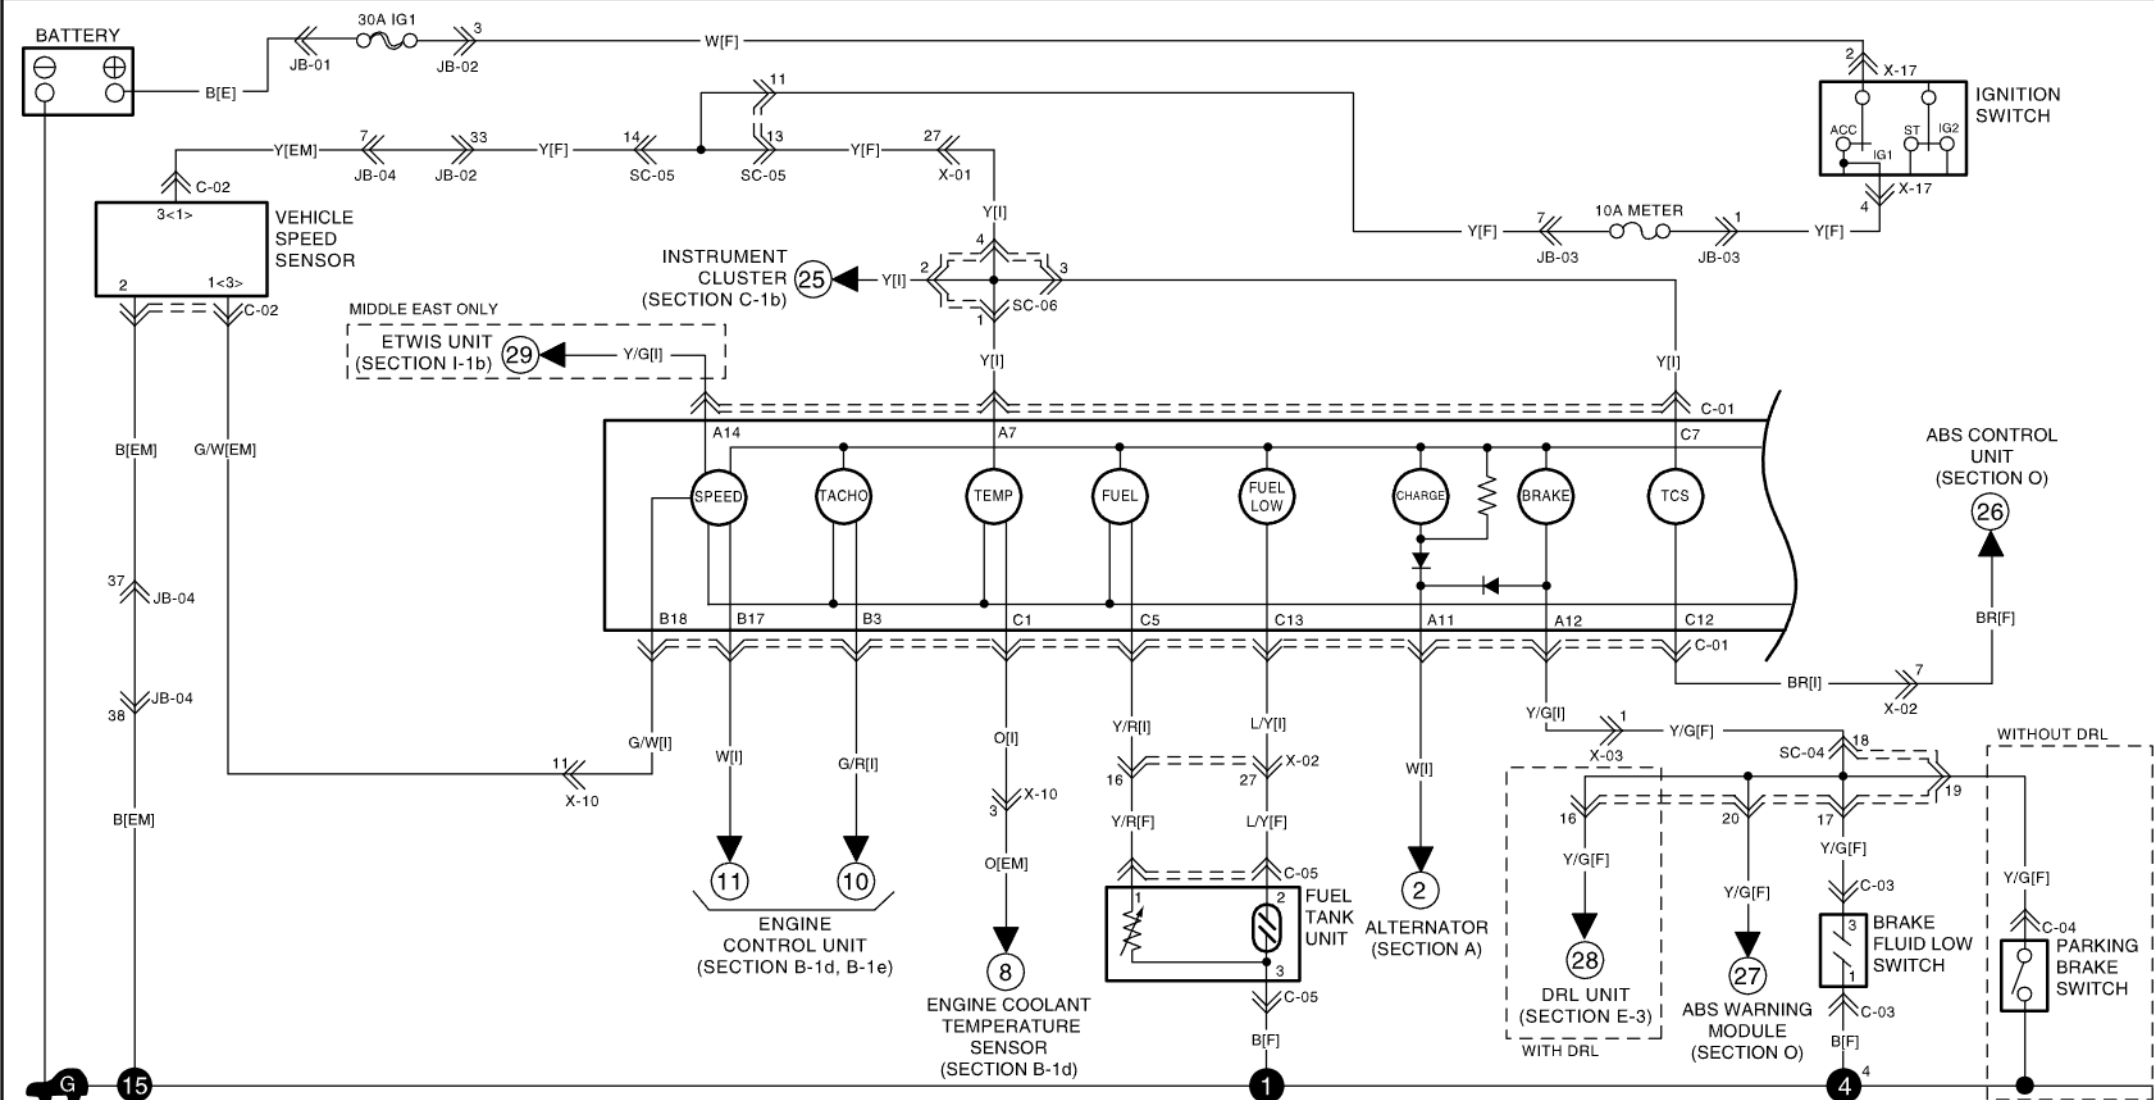


C-01 INSTRUMENT CLUSTER [I]
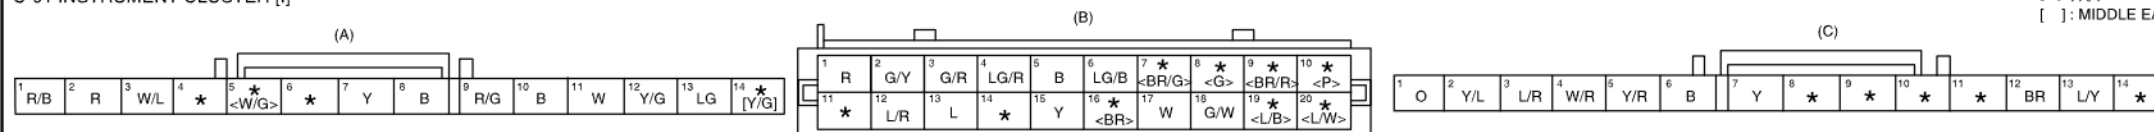
< > : A/T
[] : MIDDLE EAST

C-02 VEHICLE SPEED SENSOR [EM] B

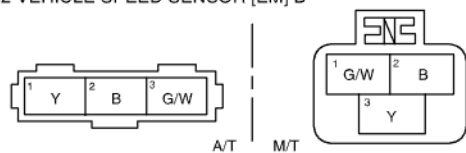


C-03 BRAKE FLUID LOW SWITCH [F] B



 



C-04 PARKING BRAKE SWITCH [F] B



 
C-05 FUEL TANK UNIT [F] B



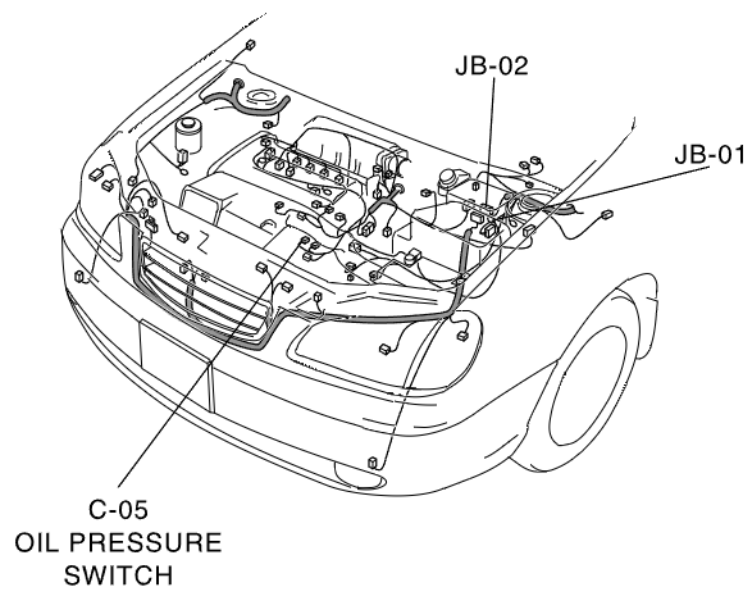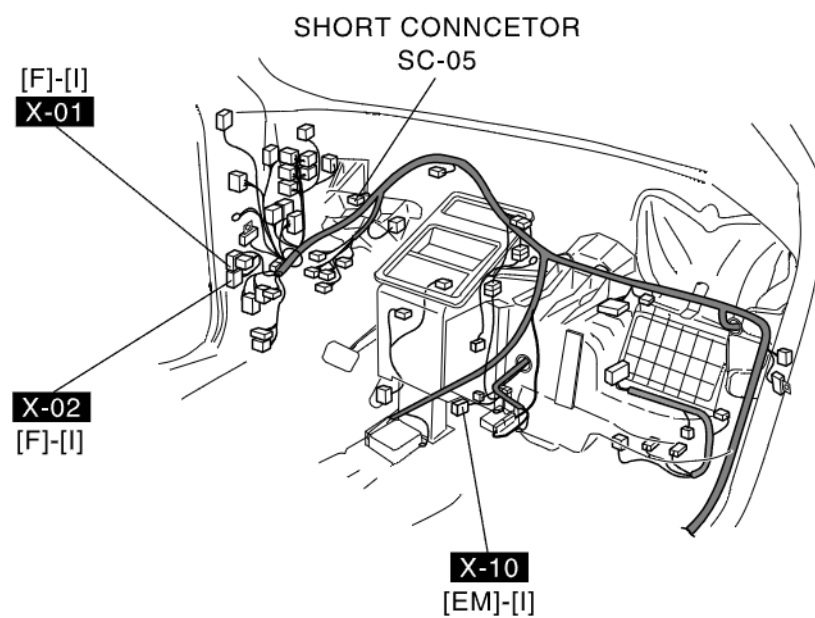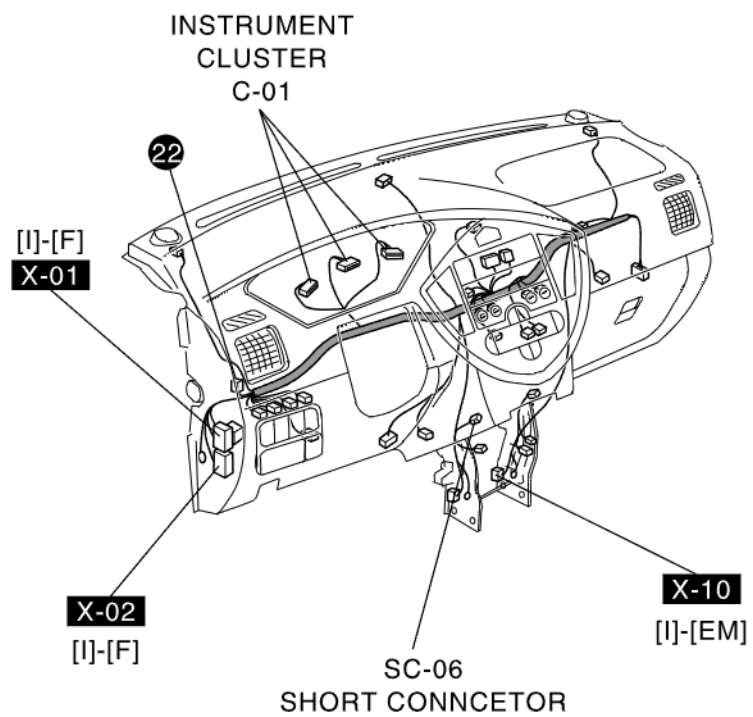

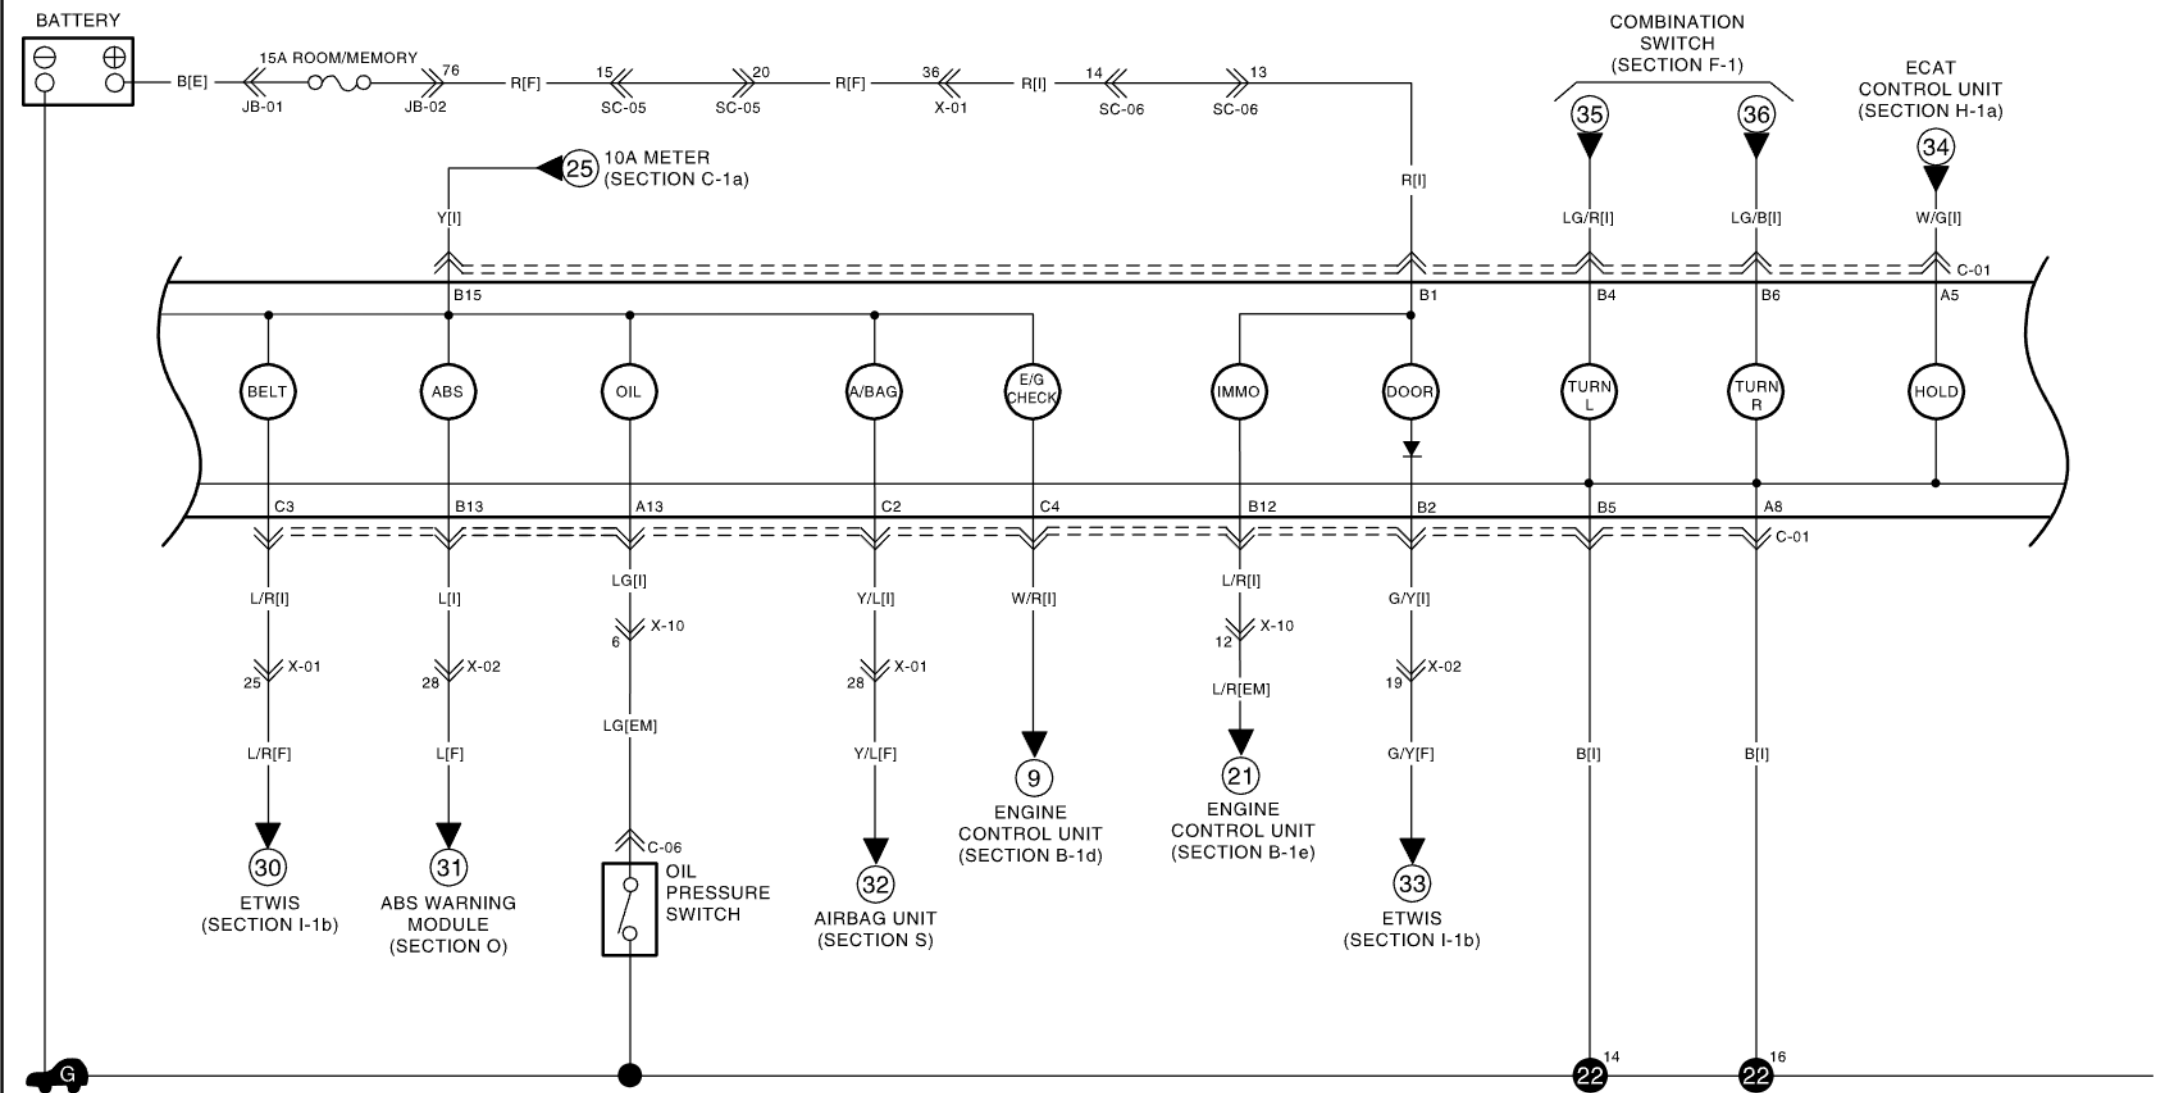


C-01 INSTRUMENT CLUSTER [I]

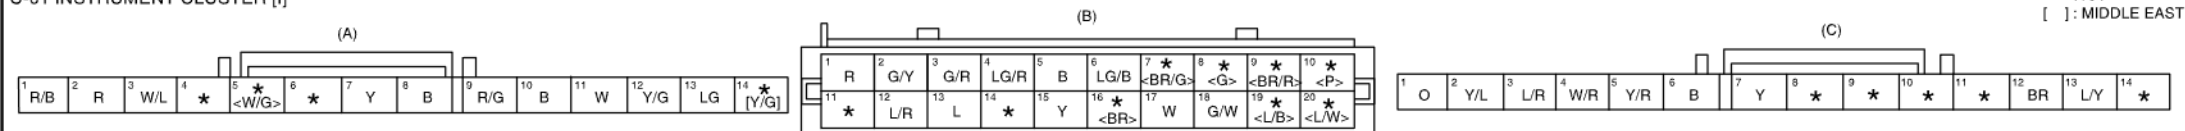


C-06 OIL PRESSURE SWITCH [EM] B



LG

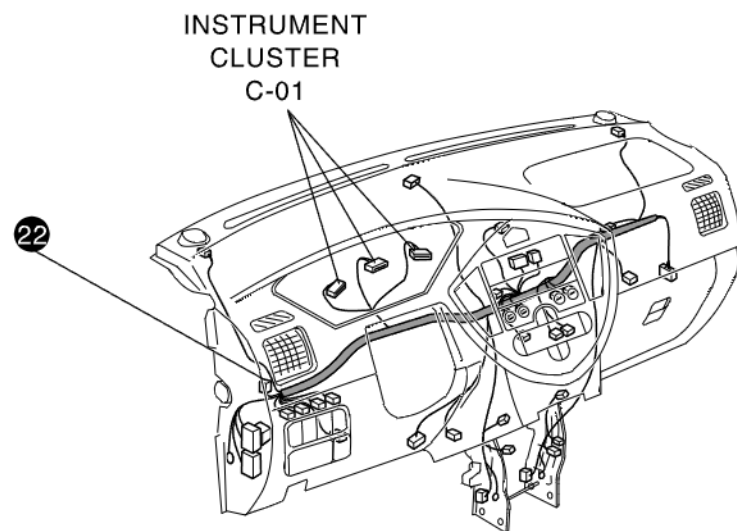

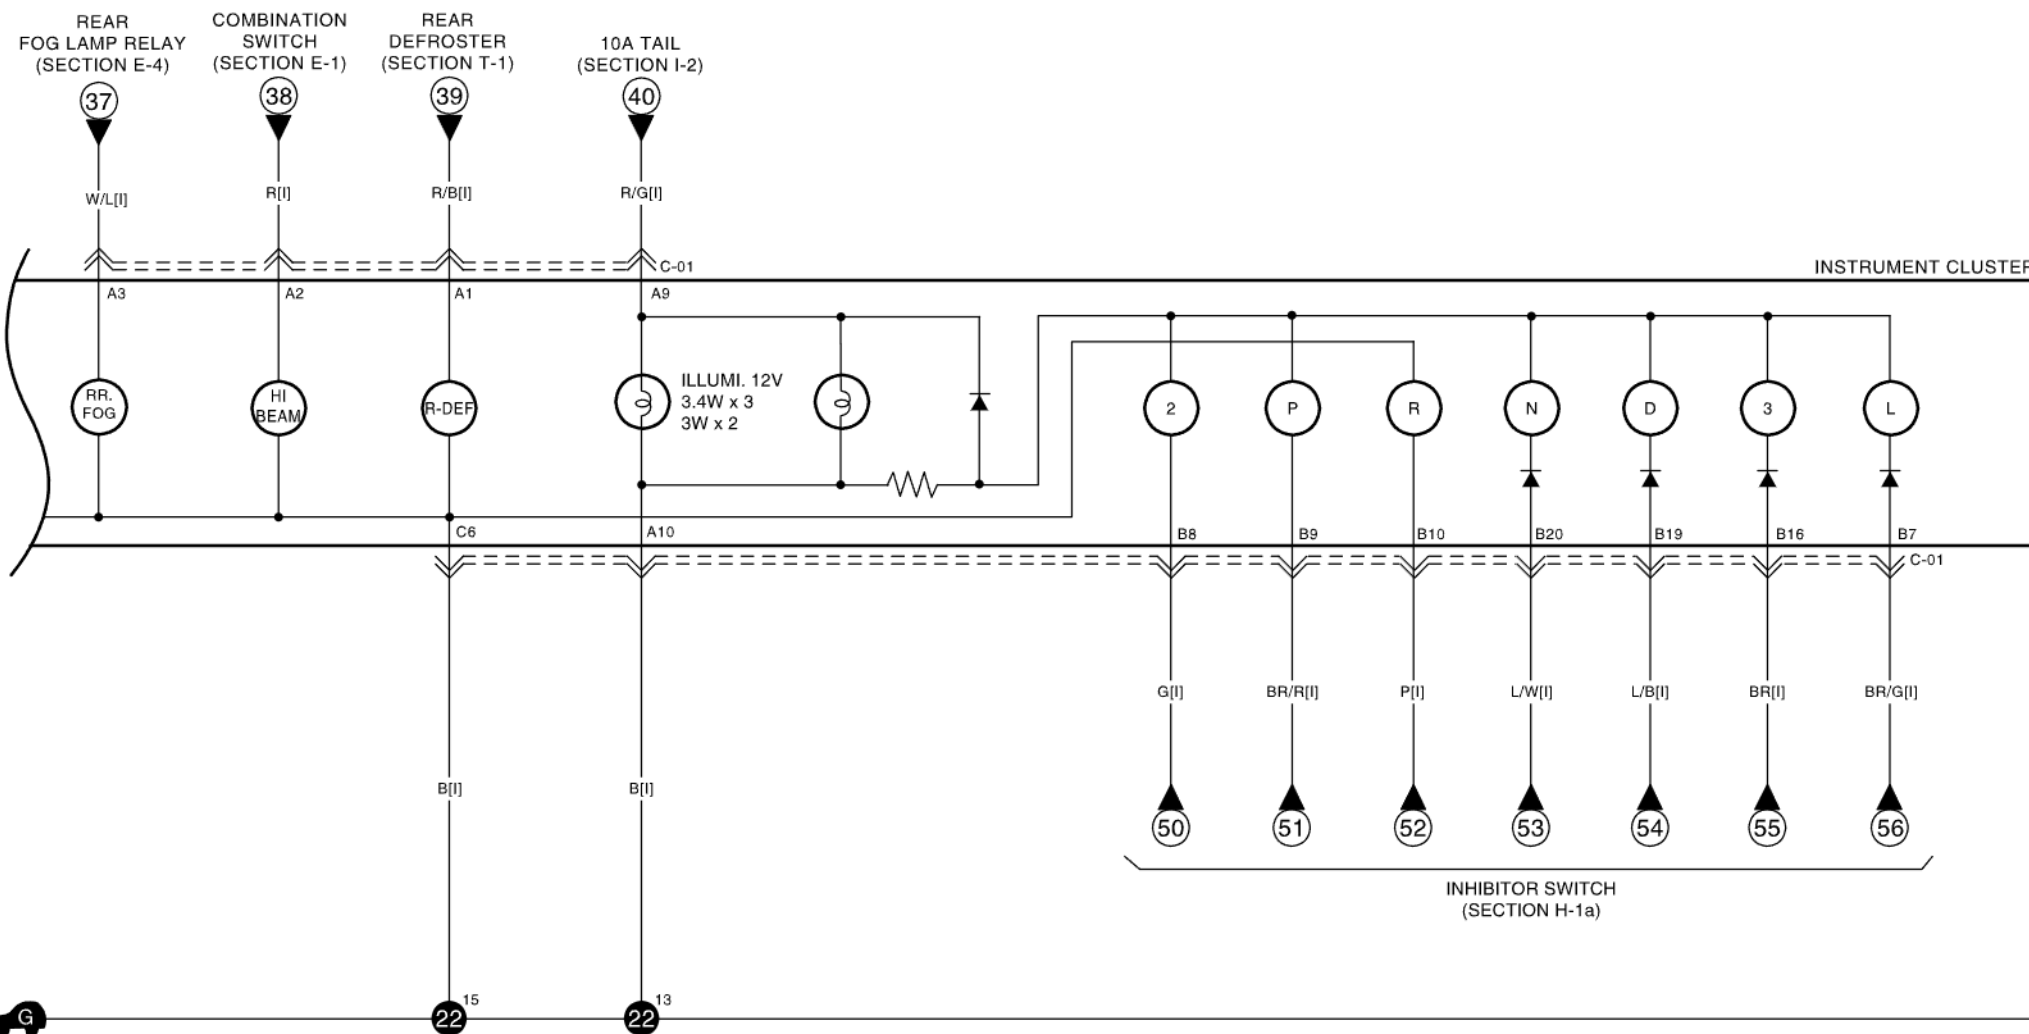

C-01 INSTRUMENT CLUSTER [I]

< > : A/T
[] : MIDDLE EAST

(A)


(B)

(C)


1	R/B	2	R	3	W/L	4	*	5	<W/G>	6	*	7	Y	8	B	9	R/G	10	B	11	W	12	Y/G	13	LG	14	* [Y/G]
---	-----	---	---	---	-----	---	---	---	-------	---	---	---	---	---	---	---	-----	----	---	----	---	----	-----	----	----	----	---------

1	R	2	G/Y	3	G/R	4	LG/R	5	B	6	LG/B	7	* <BR/G>	8	* <G>	9	* <BR/R>	10	* <P>
11	*	12	L/R	13	L	14	*	15	Y	16	* 	17	W	18	G/W	19	* <L/B>	20	* <L/W>


1	O	2	Y/L	3	L/R	4	W/R	5	Y/R	6	B	7	Y	8	*	9	*	10	*	11	*	12	BR	13	L/Y	14	*
---	---	---	-----	---	-----	---	-----	---	-----	---	---	---	---	---	---	---	---	----	---	----	---	----	----	----	-----	----	---

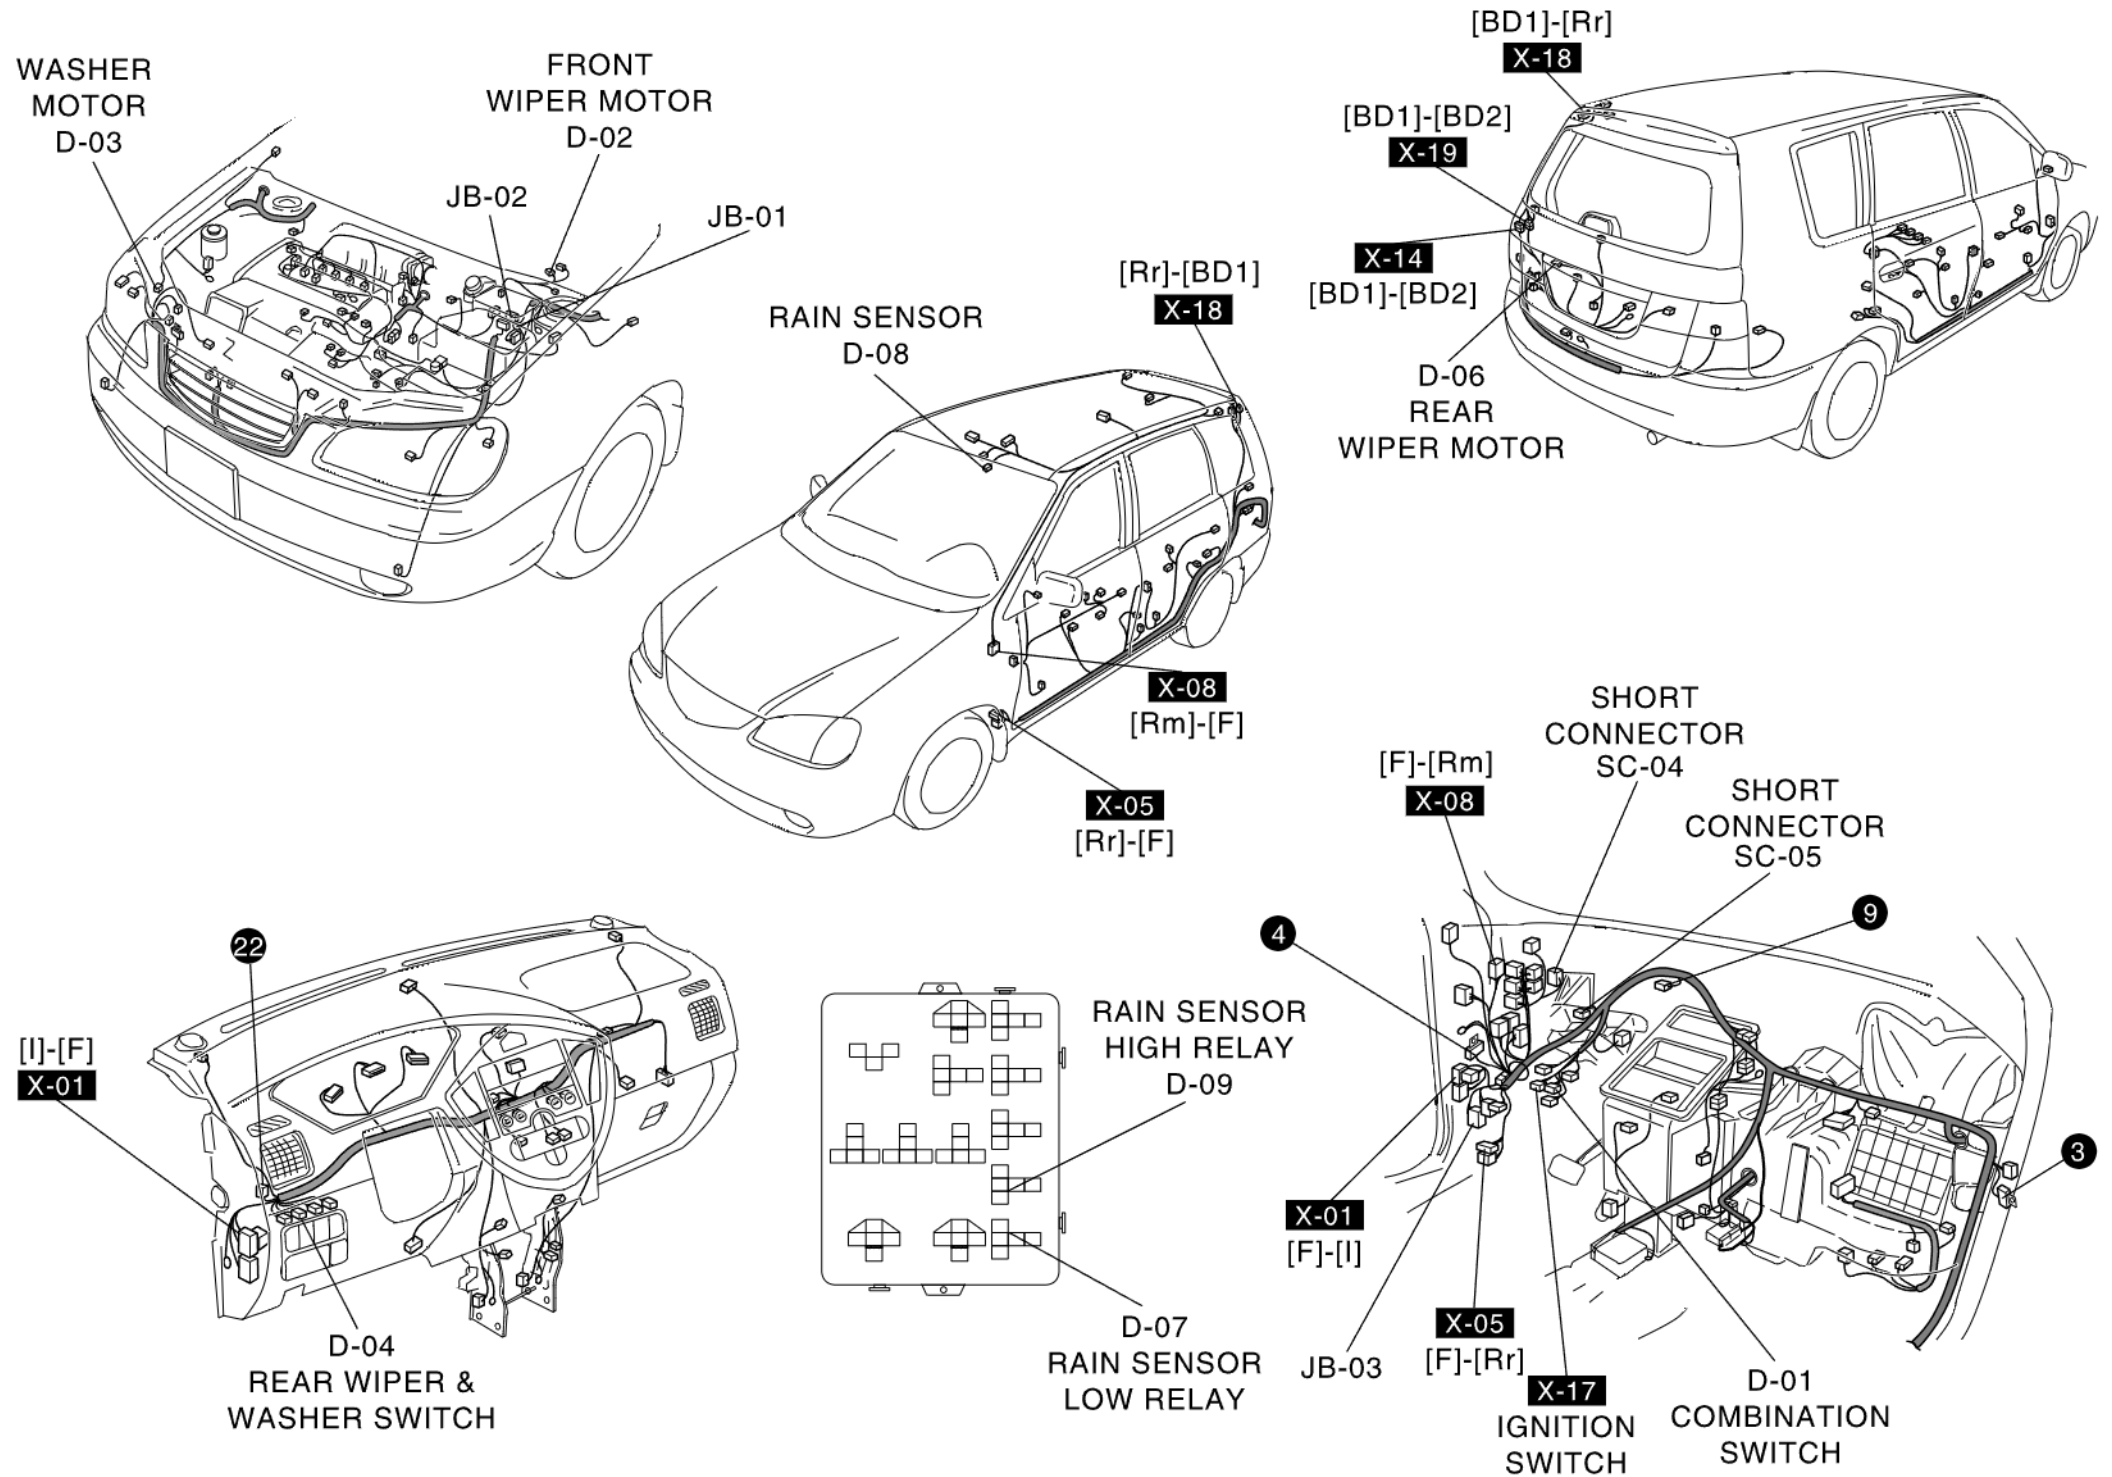


D-1 WIPER & WASHER SYSTEM (WITH RAIN SENSOR)




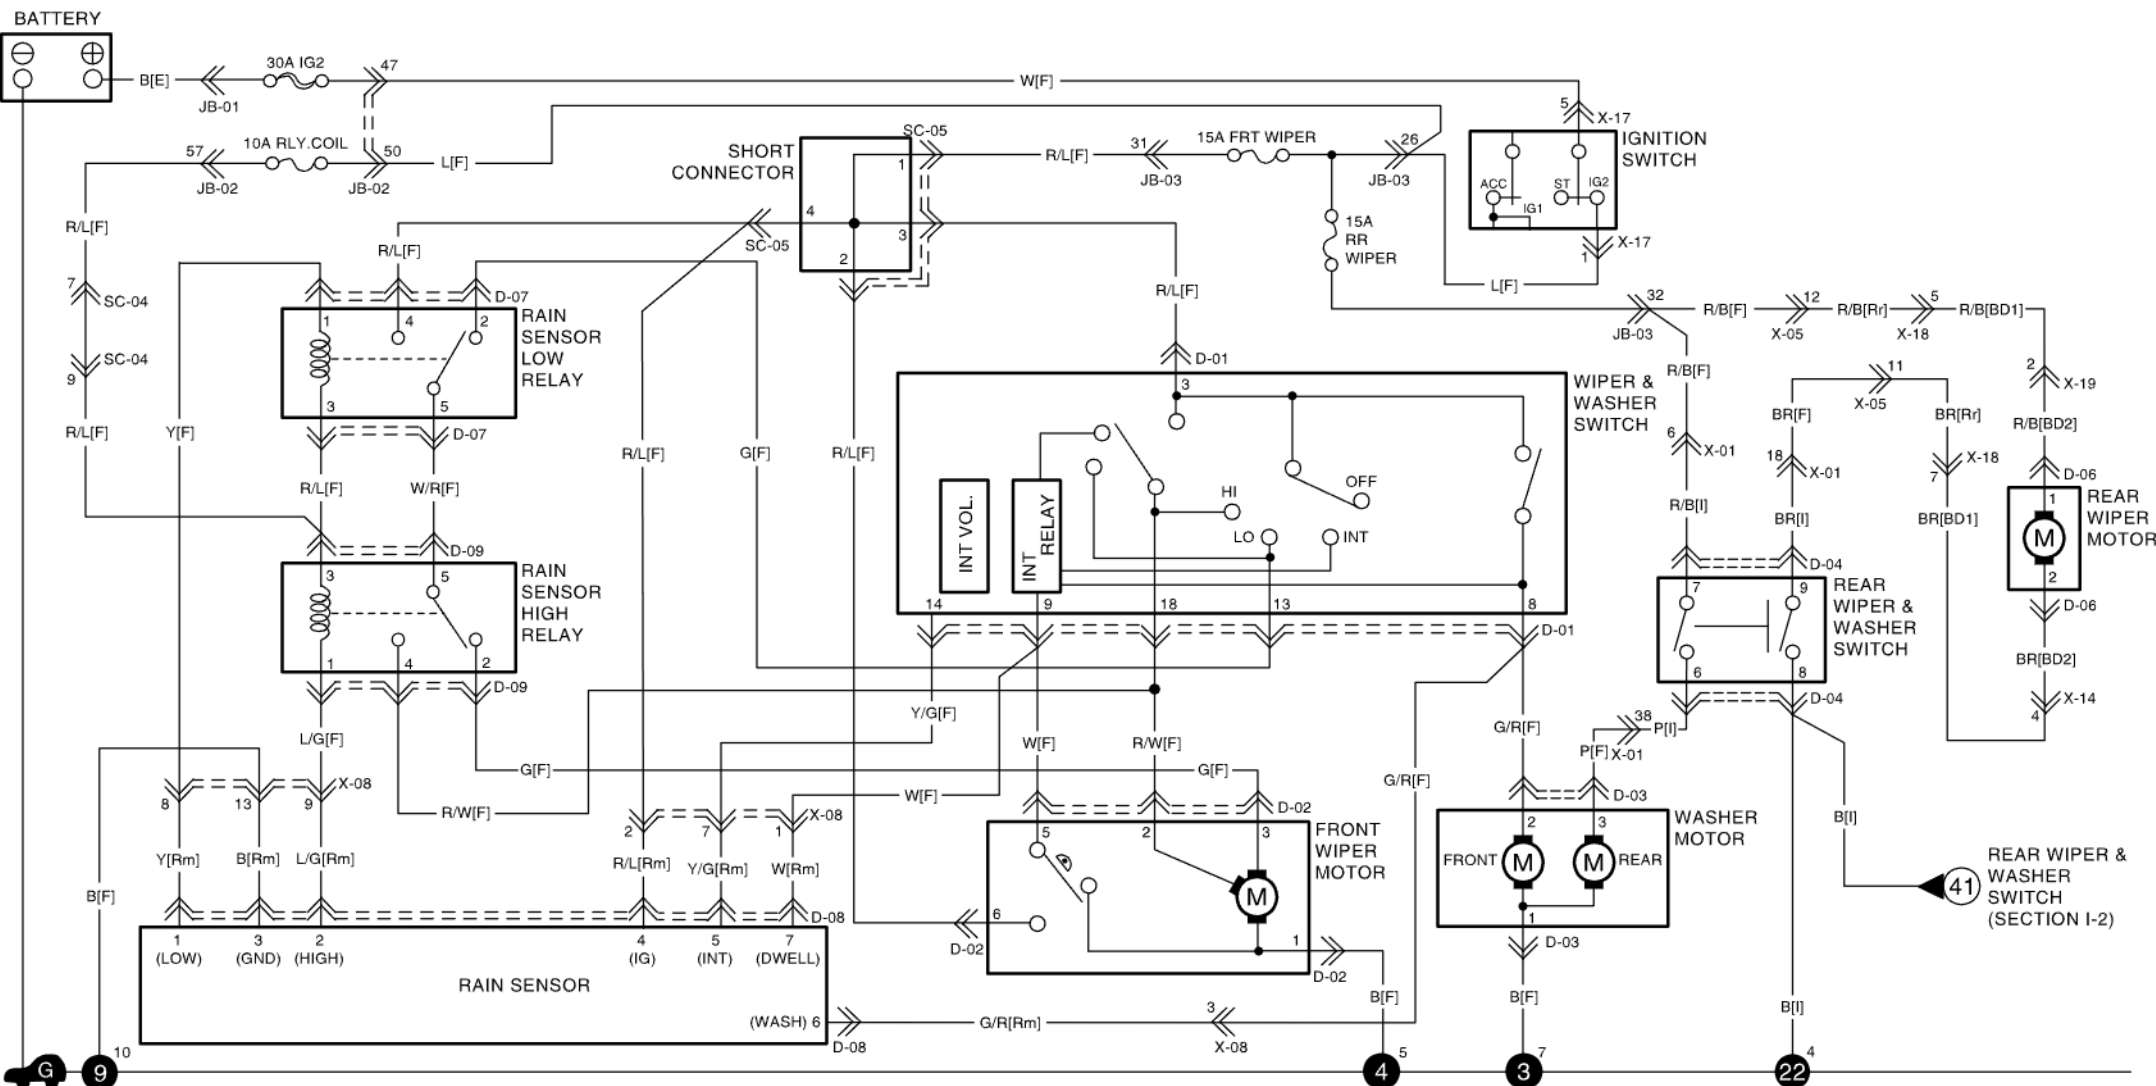



D-01 FRONT WIPER & WASHER SWITCH [F] 	D-02 FRONT WIPER MOTOR [F] B 	D-03 WASHER MOTOR [F] GY 	D-04 REAR WIPER & WASHER SWITCH [I] 	D-06 REAR WIPER MOTOR [BD2]
D-07 RAIN SENSOR LOW RELAY [F] 	D-08 RAIN SENSOR [Rm] 	D-09 RAIN SENSOR HIGH RELAY [F] B 	D-09 RAIN SENSOR HIGH RELAY [F] B 	

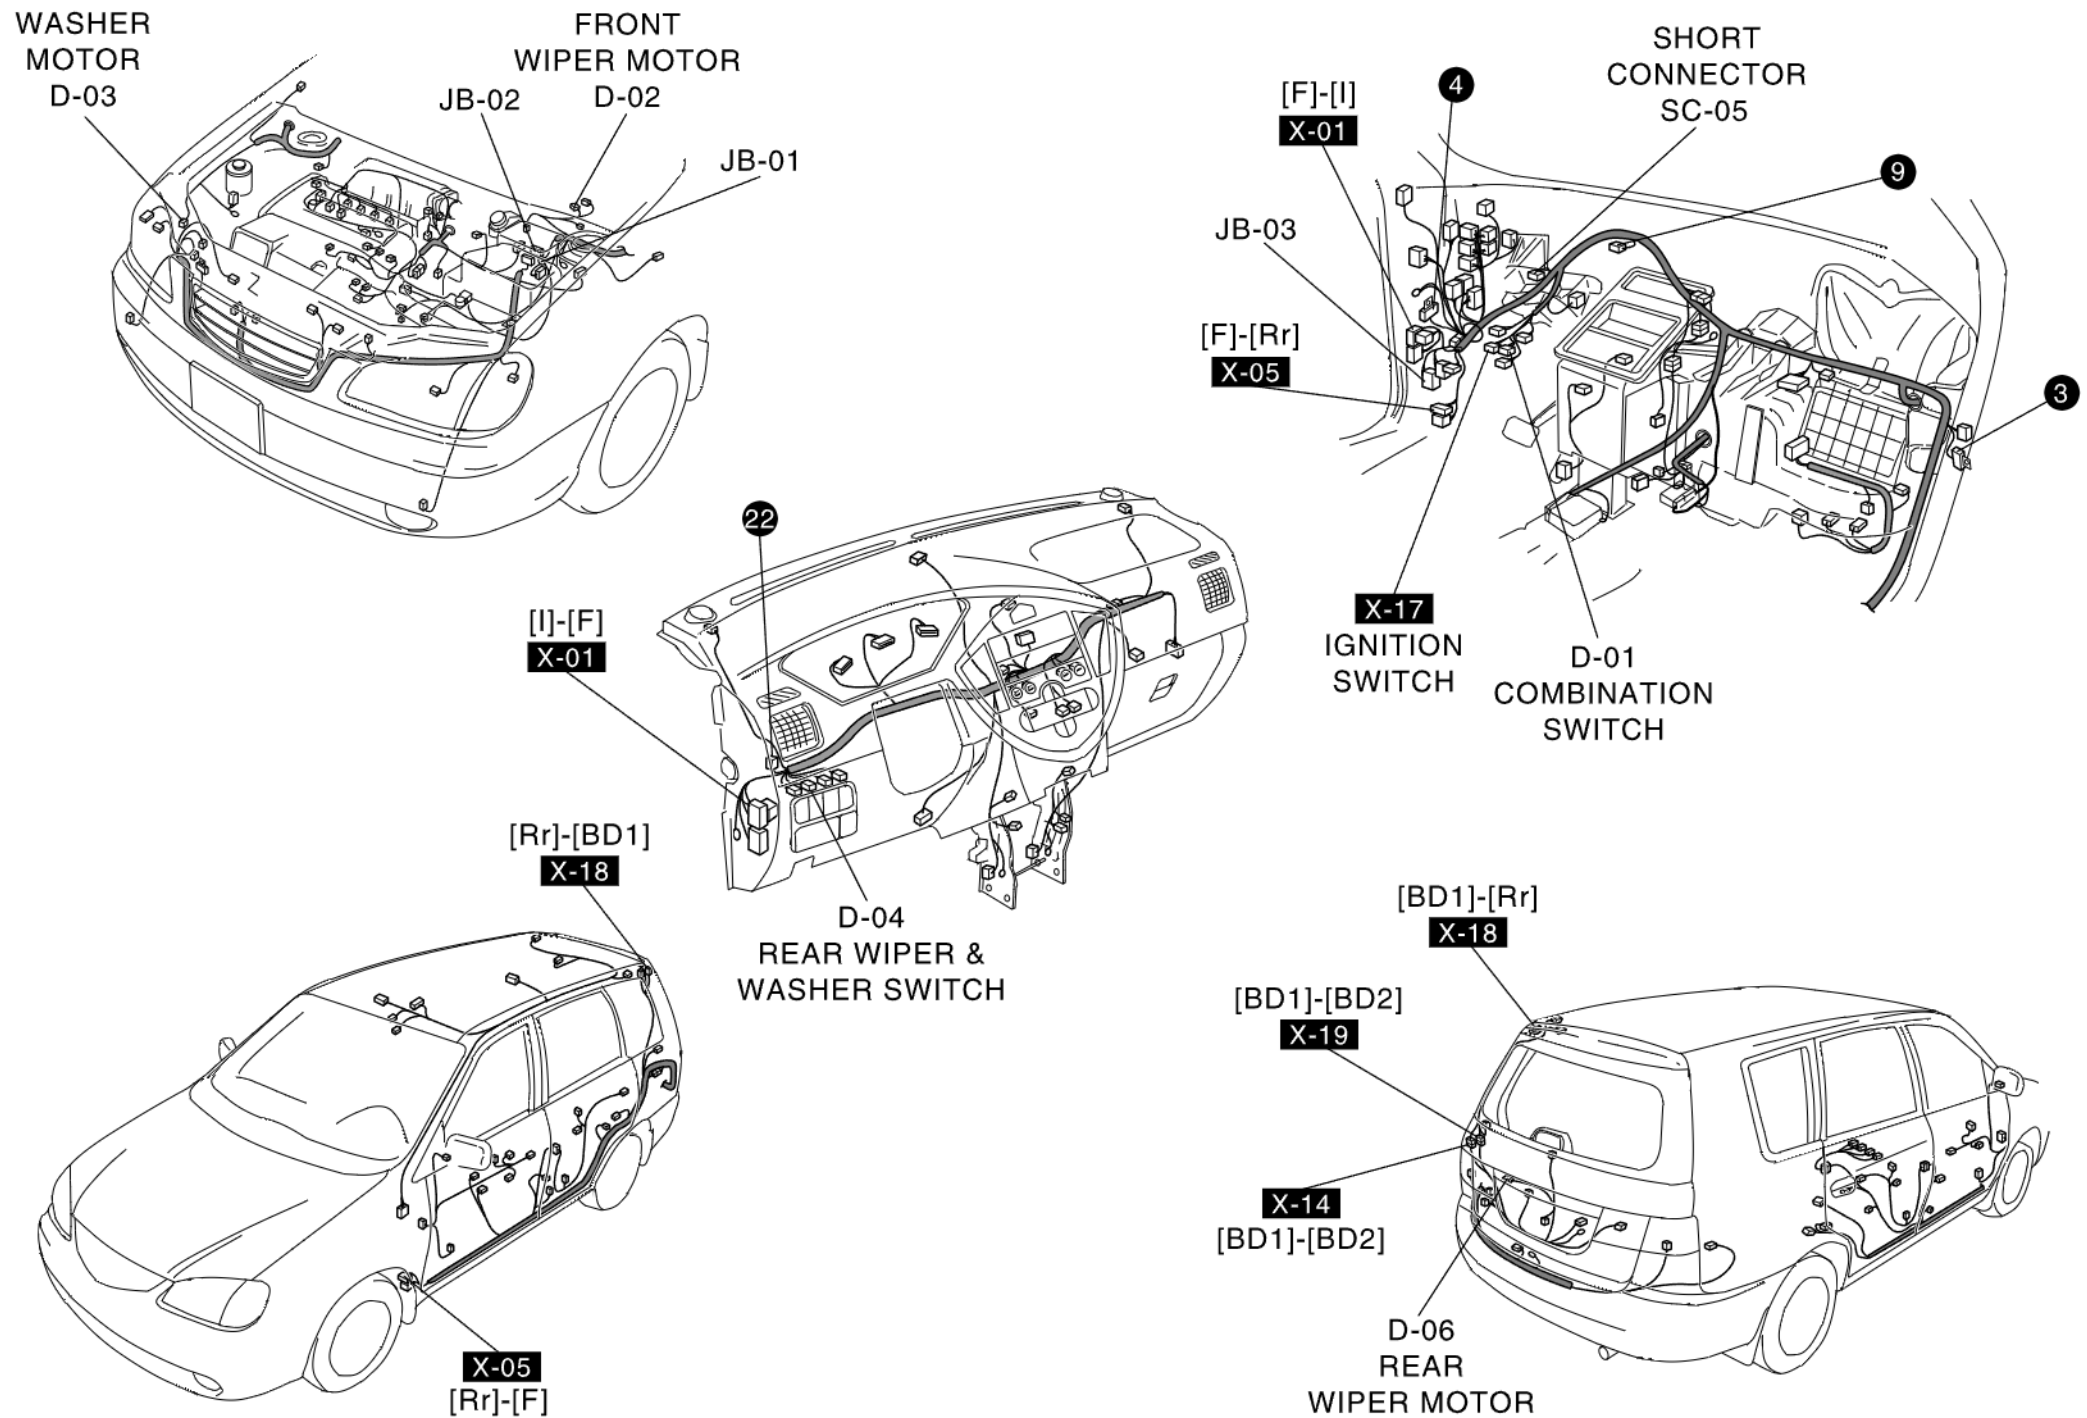

D-2 WIPER & WASHER SYSTEM (WITHOUT RAIN SENSOR)

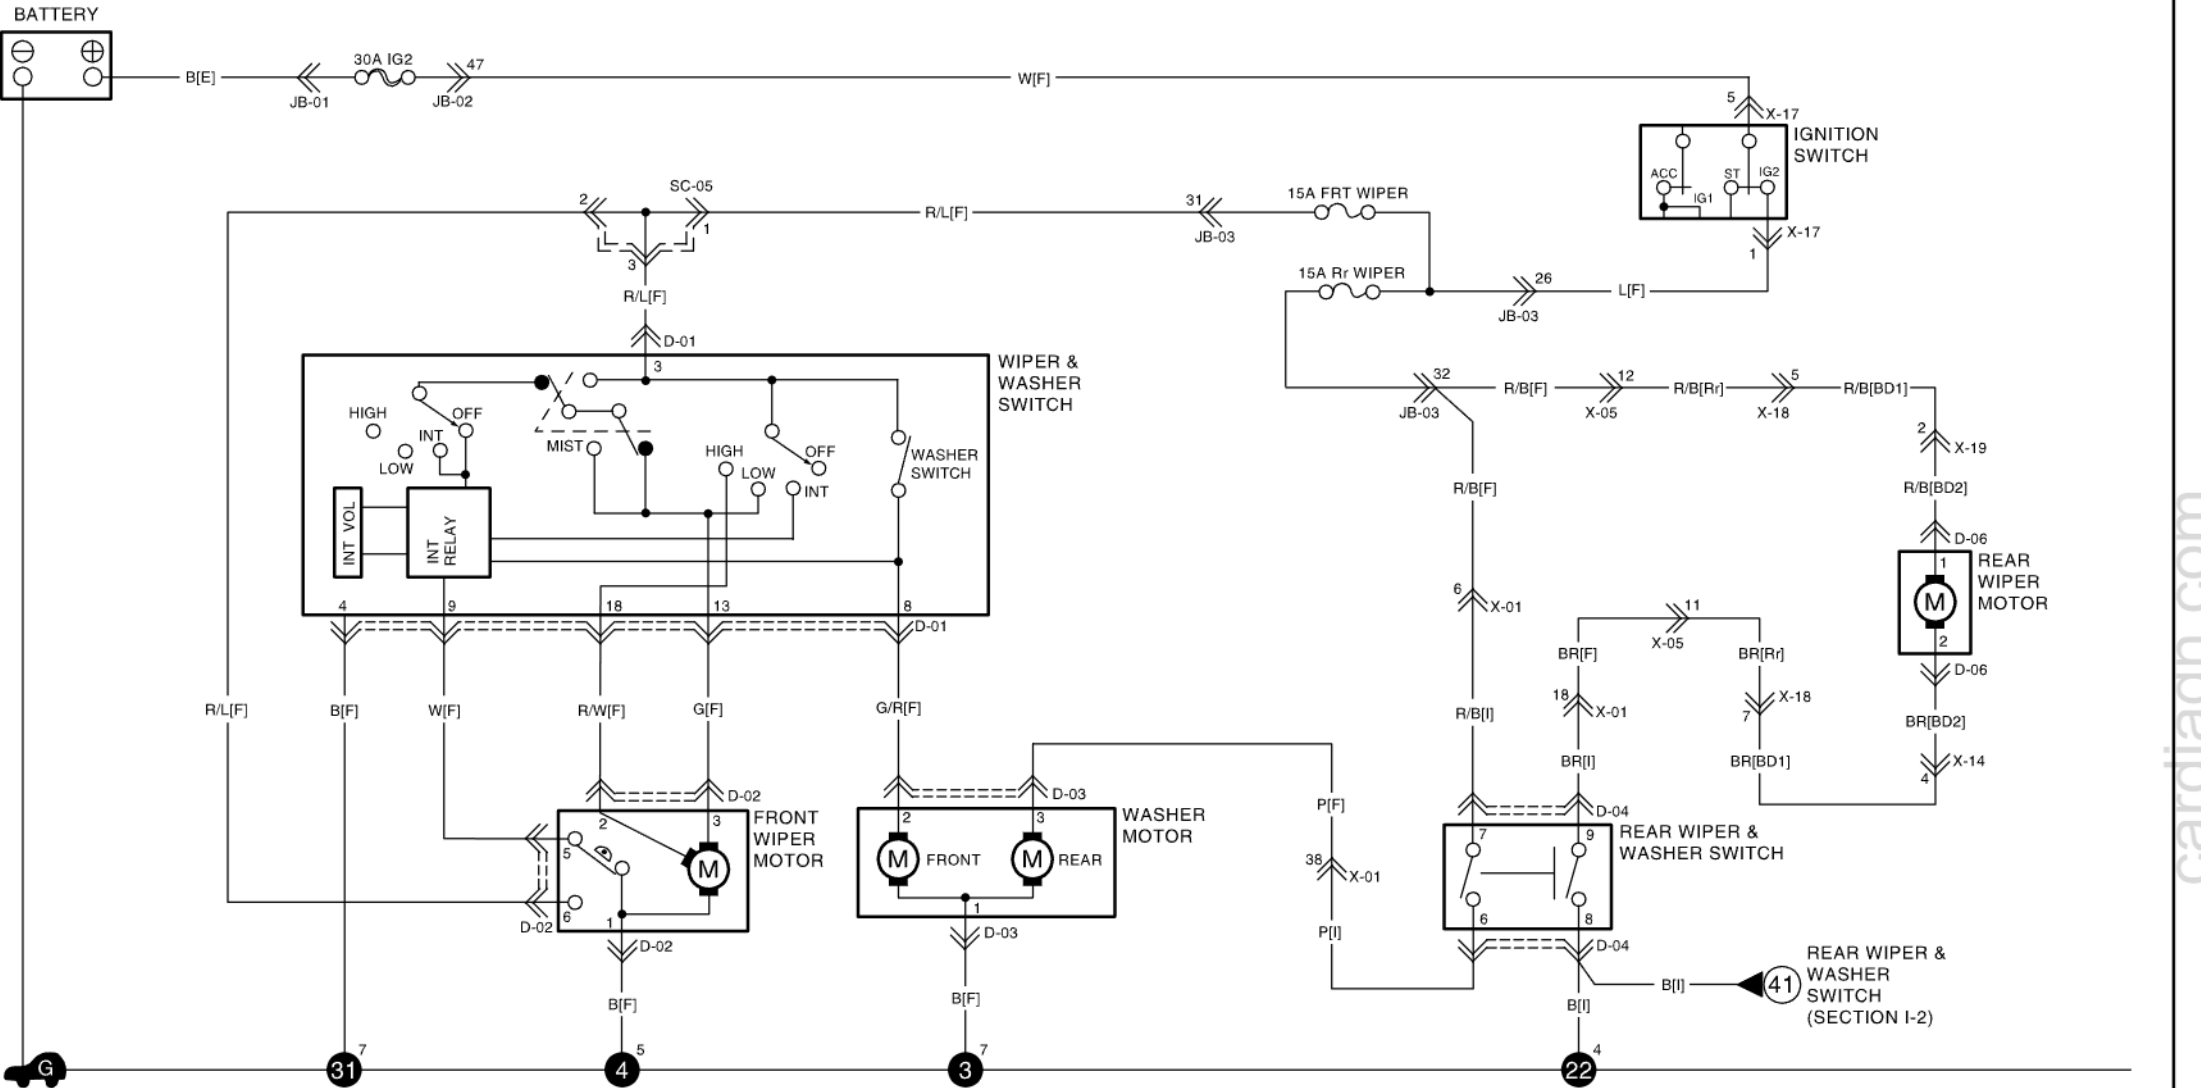

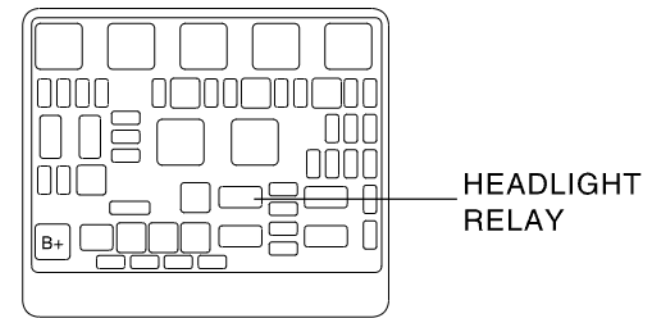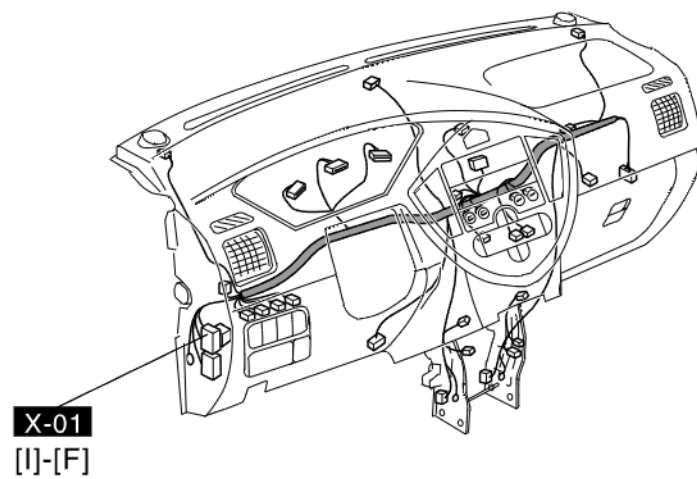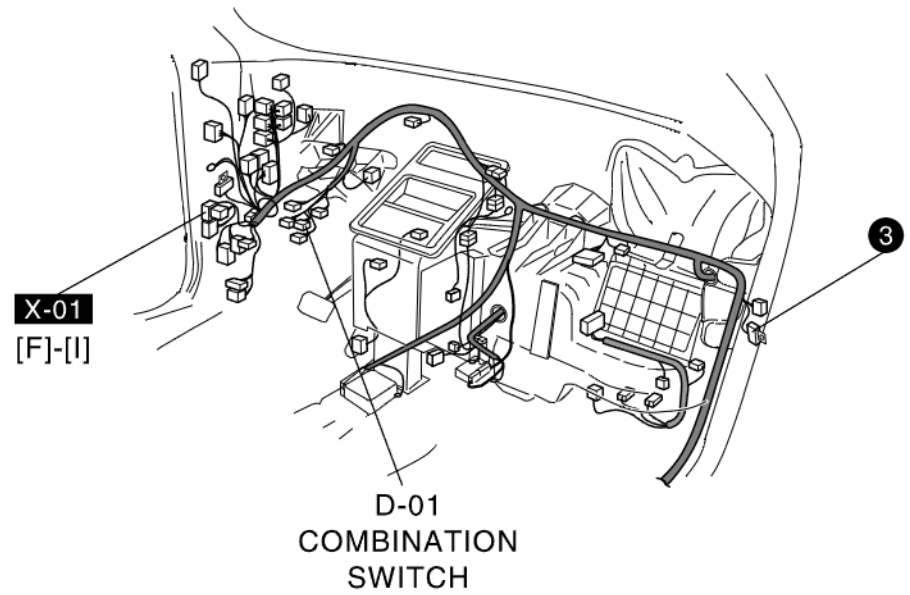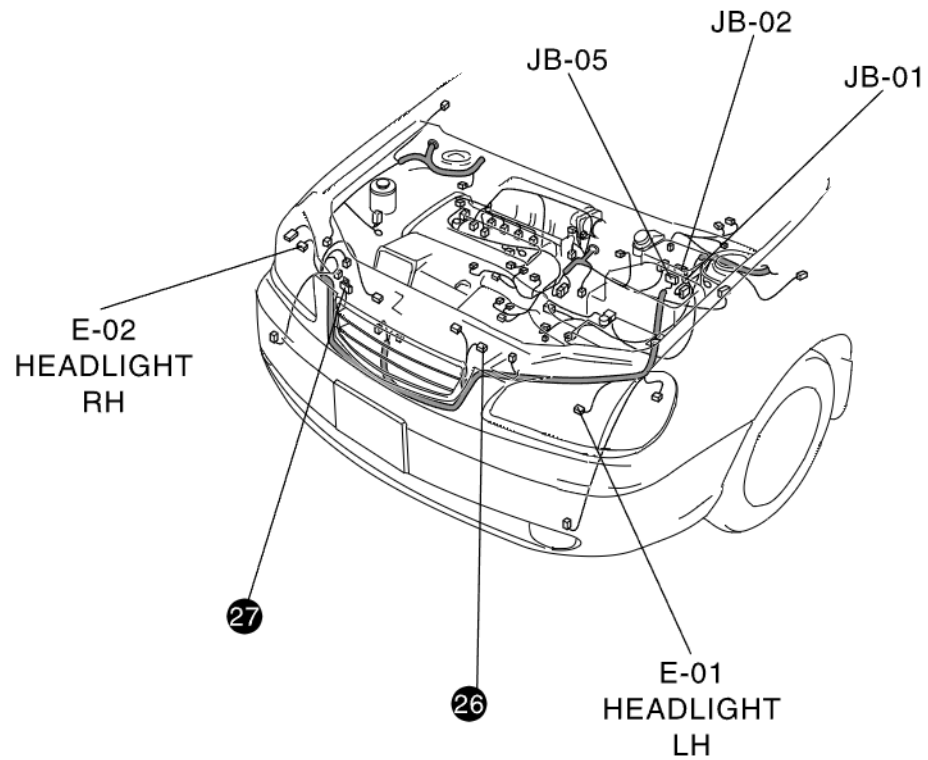

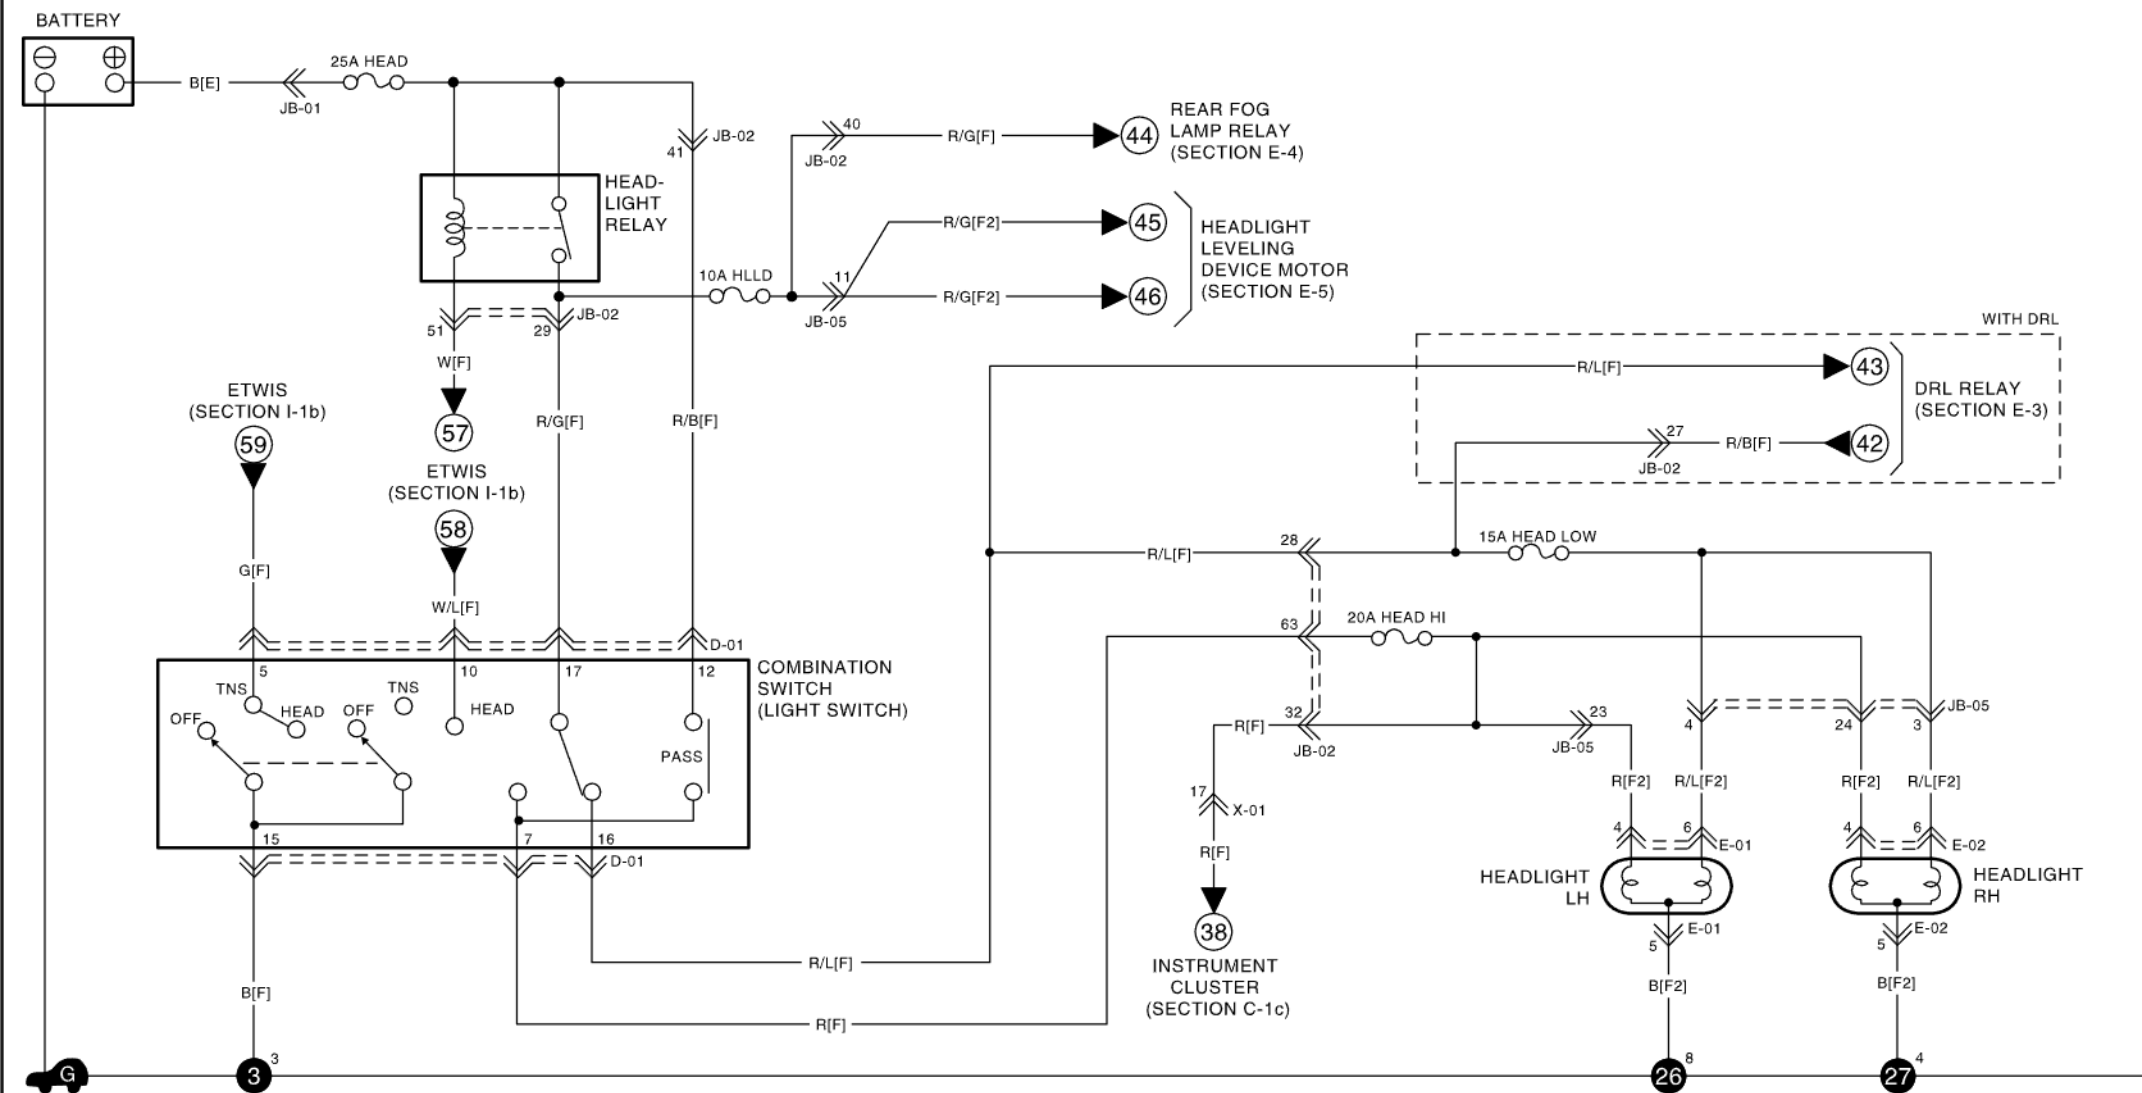

D-01 COMBINATION SWITCH [F]

1	*	2	P	3	R/L	4	B
5	G	6	LG/B	7	R	8	G/R
9	W/L	10	LG/R	11	R/B	12	W
13	B	14	R/L	15	R/G	16	W/G
17	*	18	R/W	19	W/G	20	*
21	*	22	*	23	*	24	*


< > : RAIN SENSOR

E-01 HEADLIGHT LH [F2] B


1	*	2	R/G	3	L/W
4	R	5	B	6	R/L






E-02 HEADLIGHT RH [F2] B




1	*	2	R/G	3	L/W
4	R	5	B	6	R/L

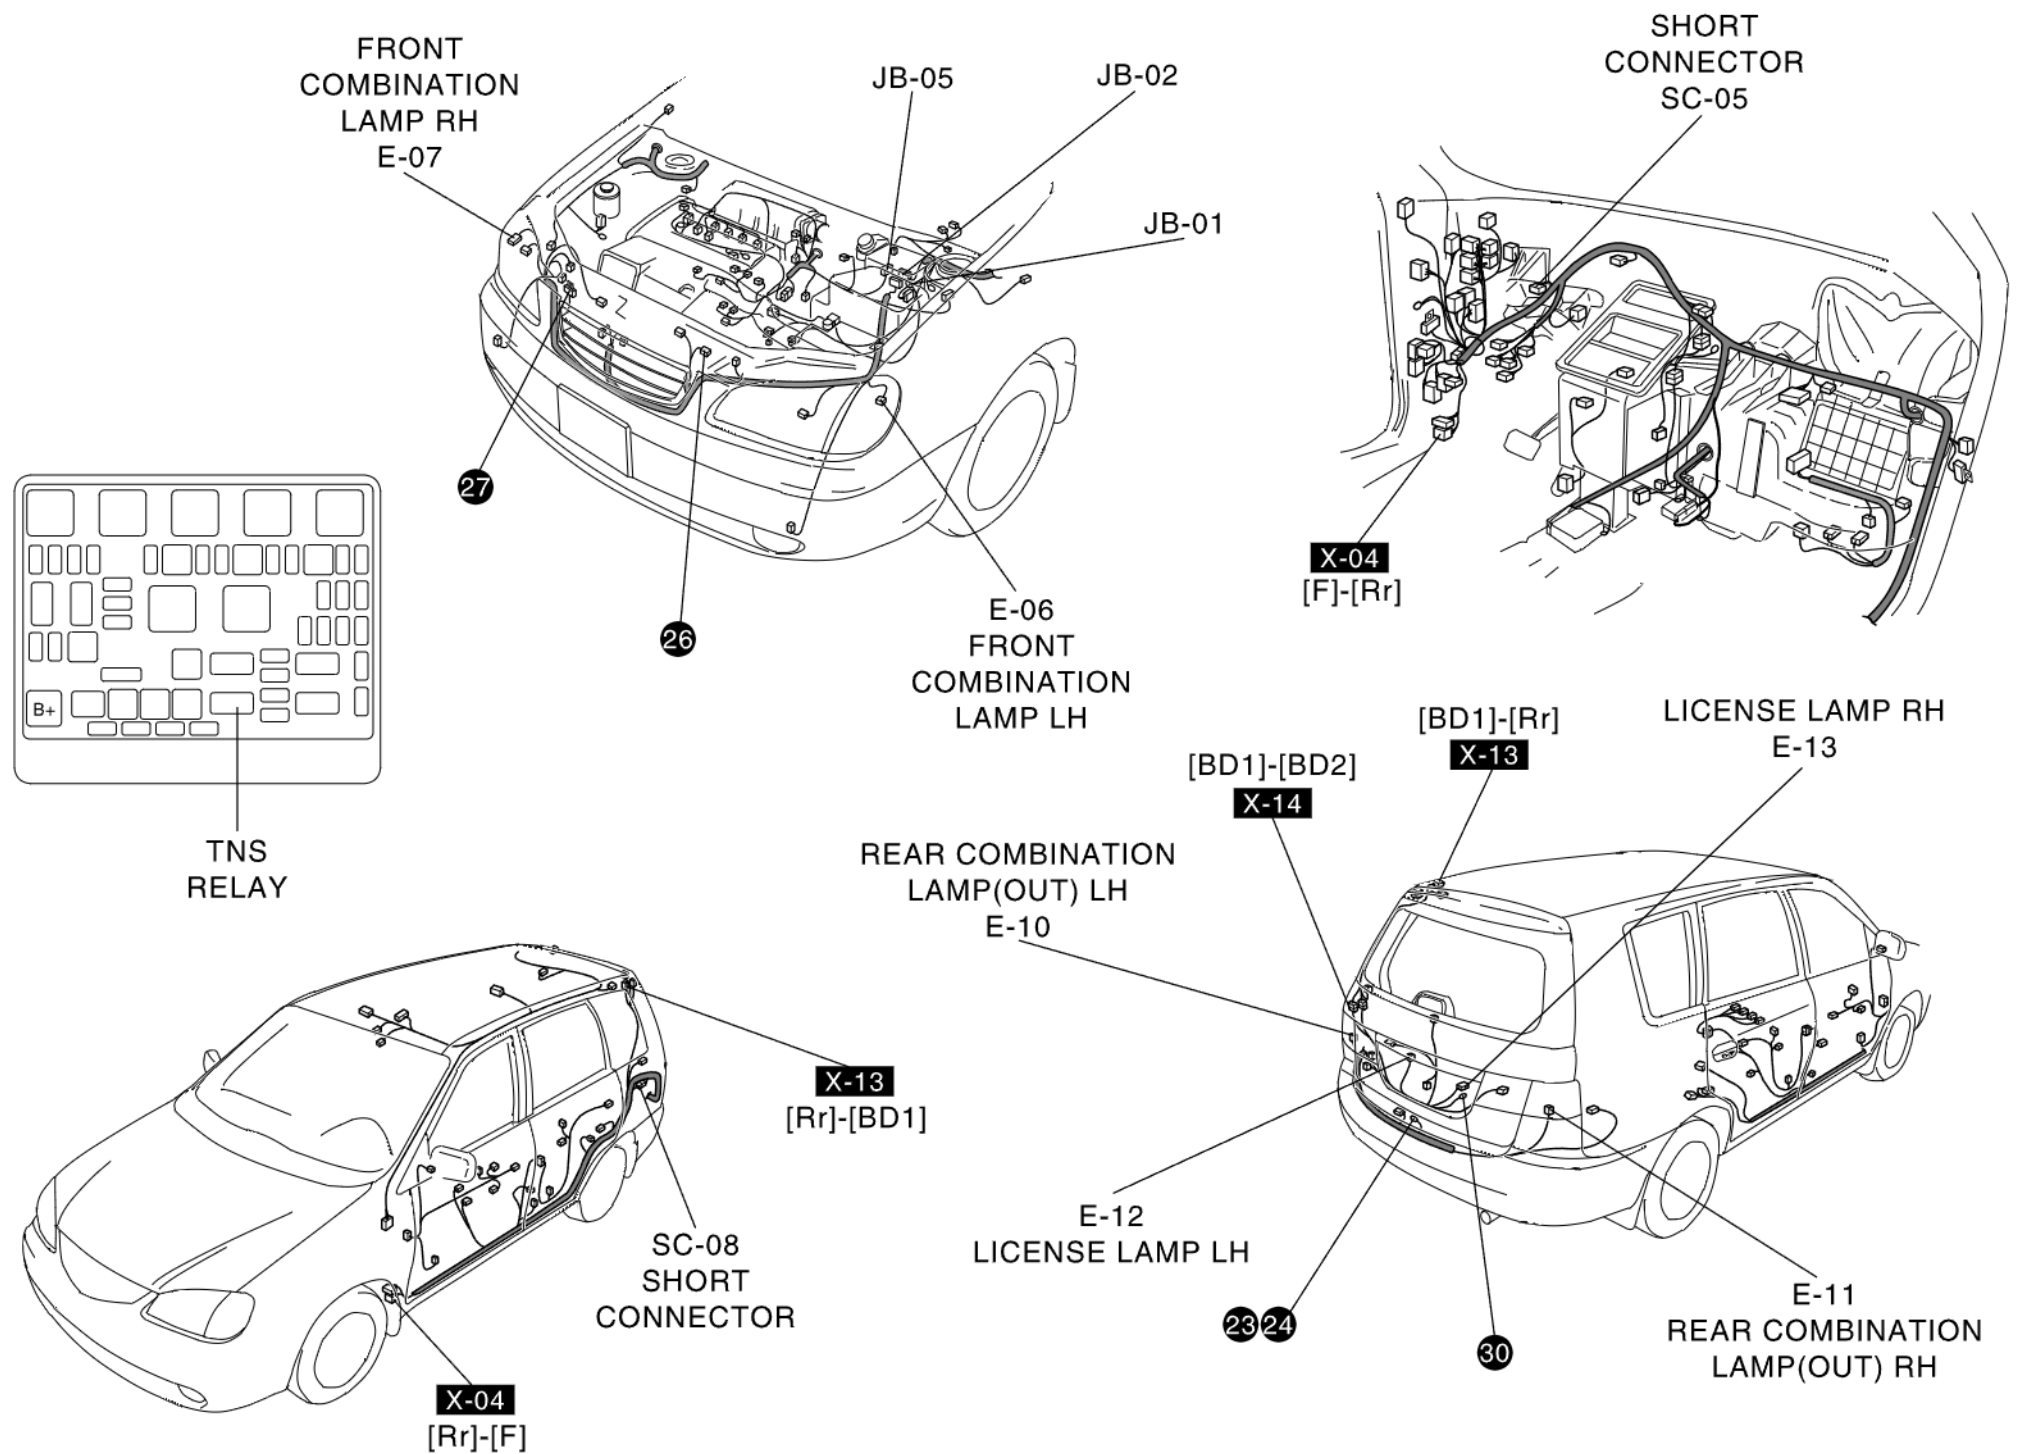

     
E-2 POSITION LAMPS, TAIL LAMPS, LICENSE LAMPS

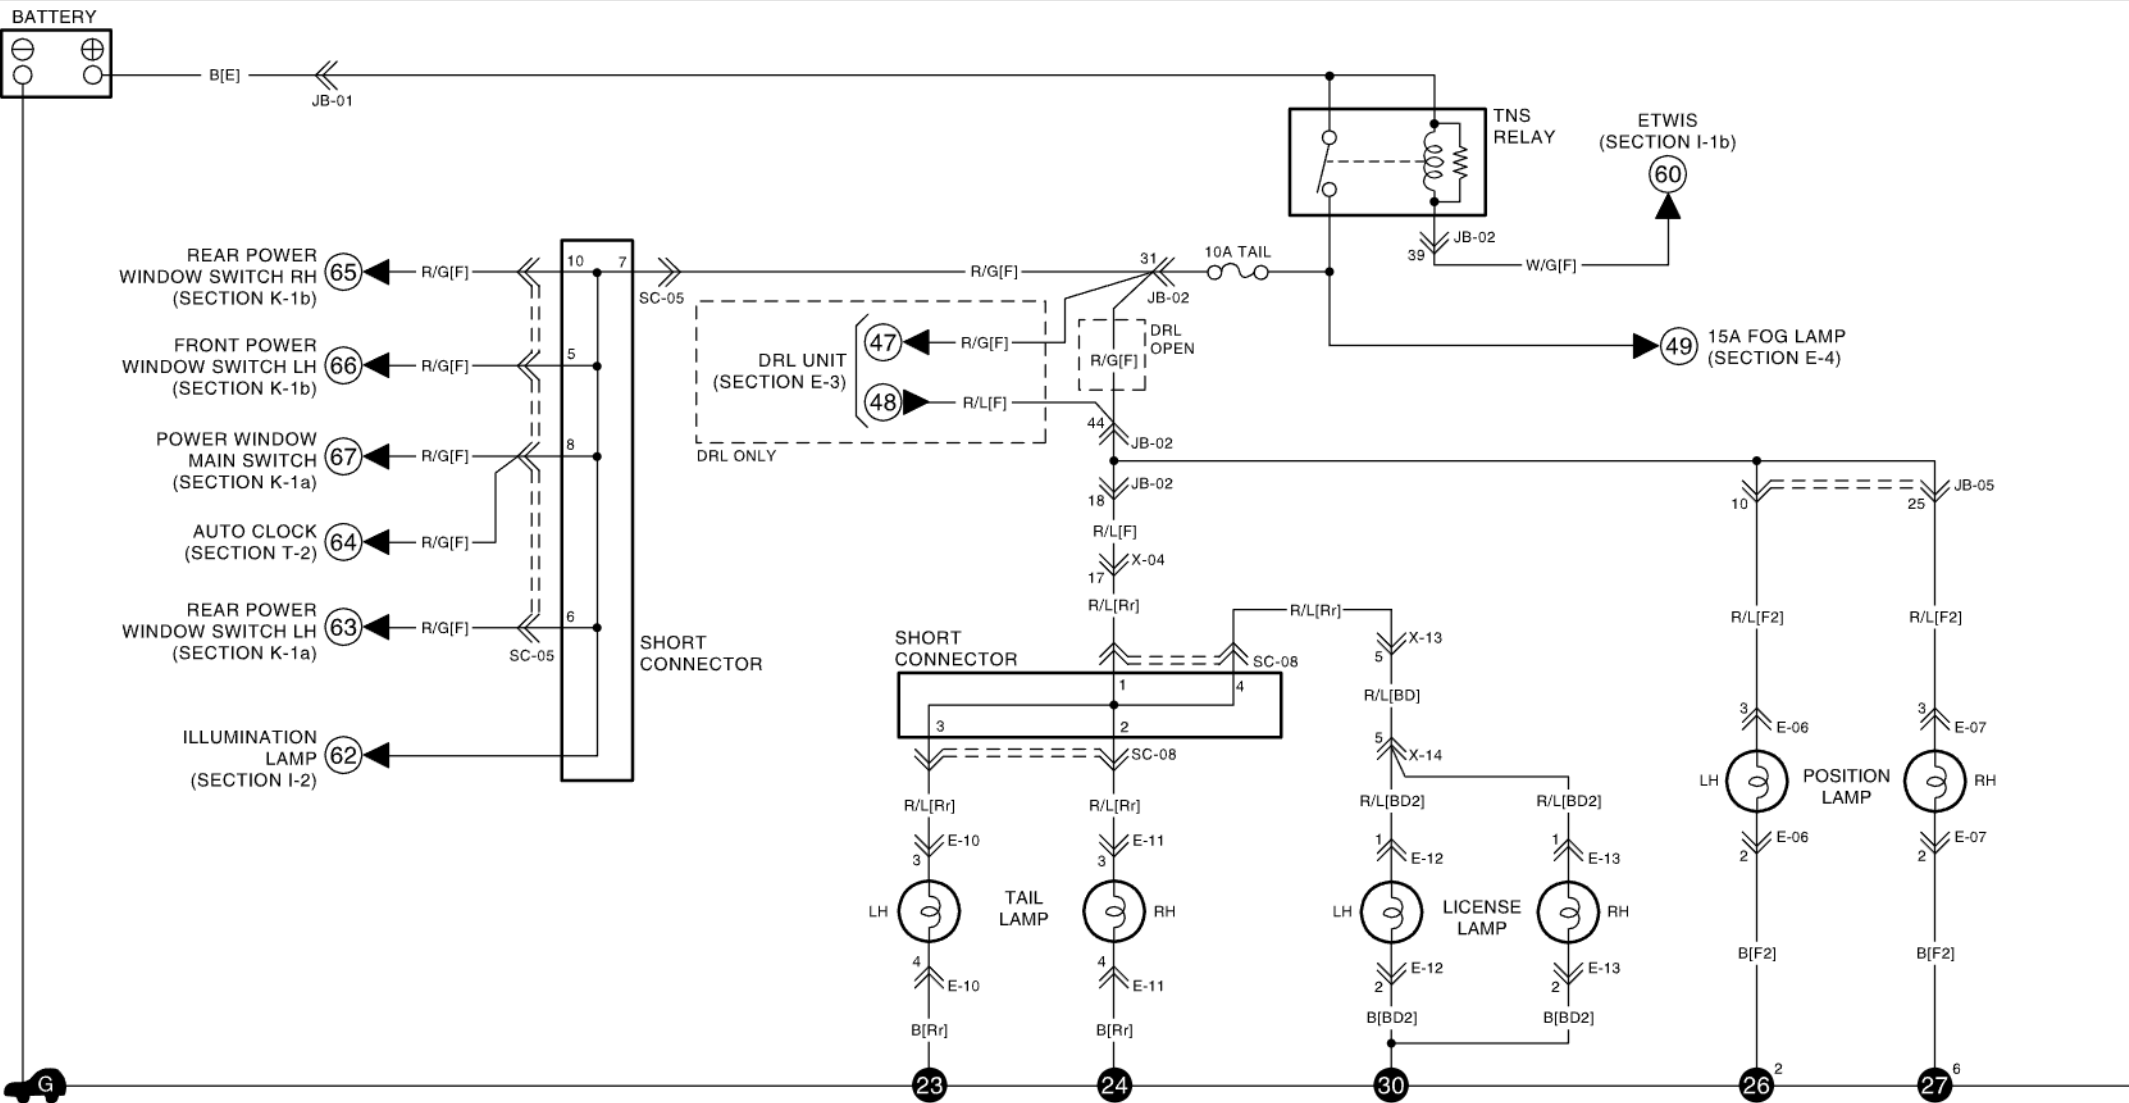

E-06 FRONT COMBINATION LAMP LH [F2] B	E-07 FRONT COMBINATION LAMP RH [F2] B	E-10 REAR COMBINATION LAMP(OUT) LH [Rr]	E-11 REAR COMBINATION LAMP(OUT) RH [Rr]	E-12 LICENSE LAMP LH [BD2] GY
				
E-13 LICENSE LAMP RH [BD2] GY				
				

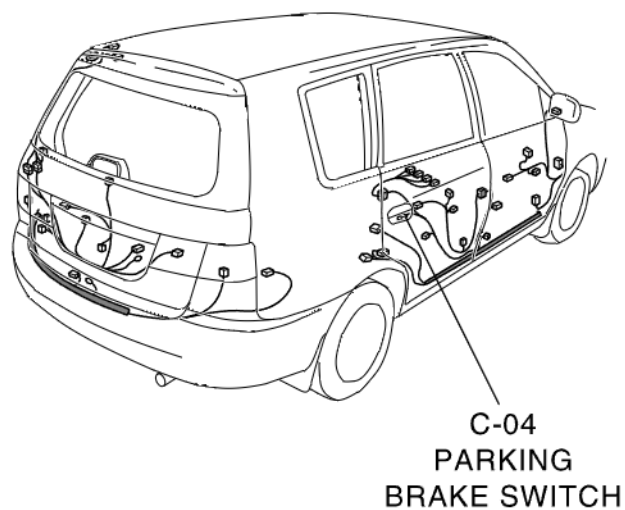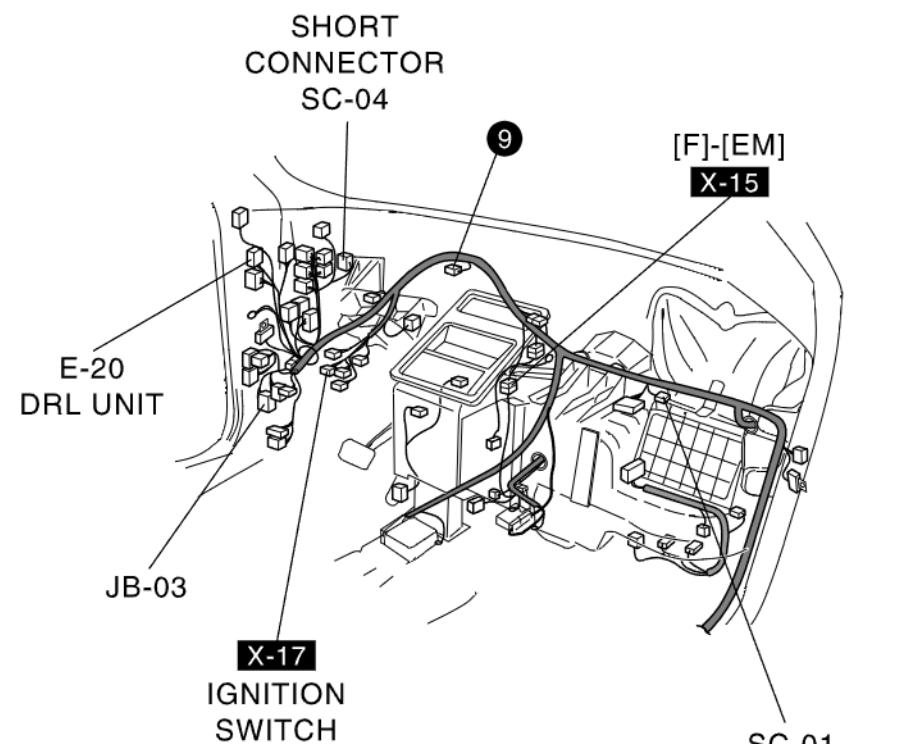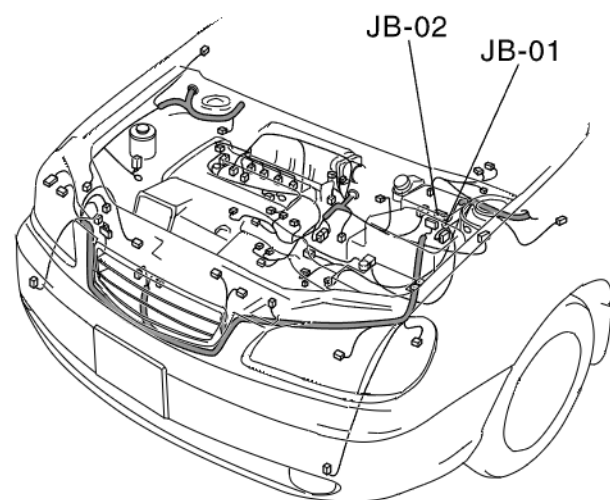

DRL RELAY
E-19

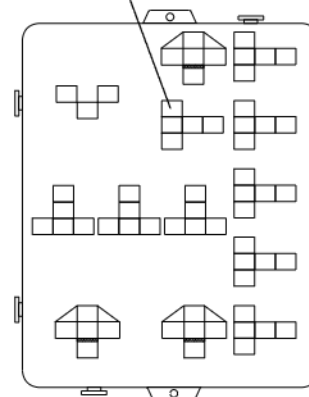




	5 R/B	
	4 R/B	
1 Y	2 R/L	3 R/L


1	R/Y	2	★	3	Y/G			4	★	5	B		
6	R/G	7	R	8	W	9	★	10	Y	11	Y/G	12	R/L



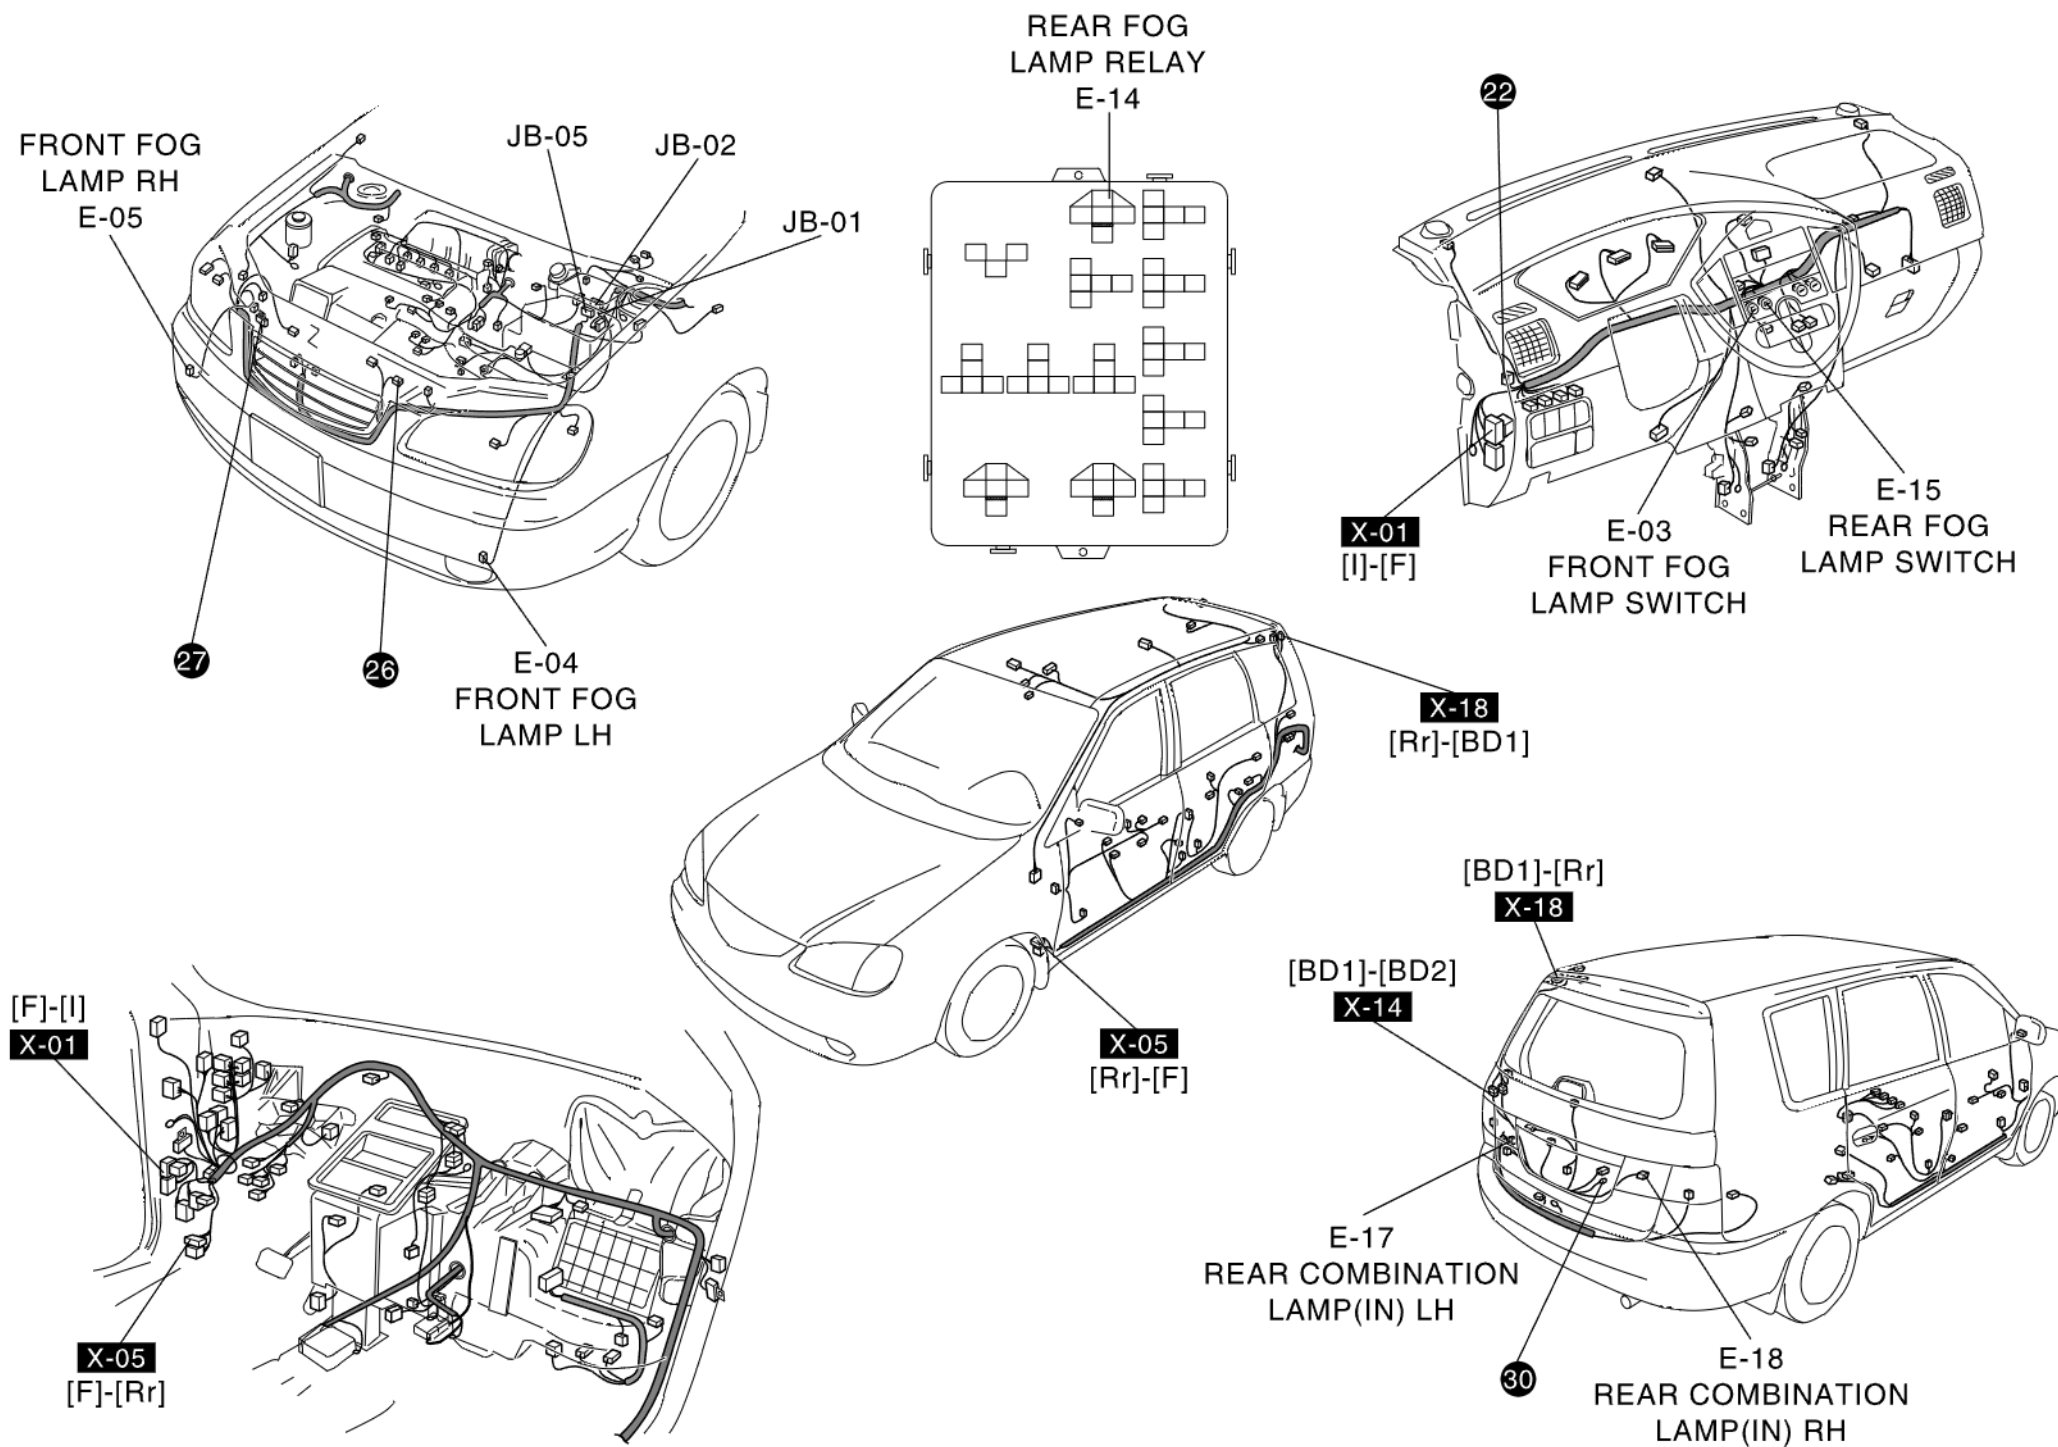








E-15 REAR FOG LAMP SWITCH [I]

 


E-18 REAR COMBINATION LAMP(IN) RH [BD2]

 

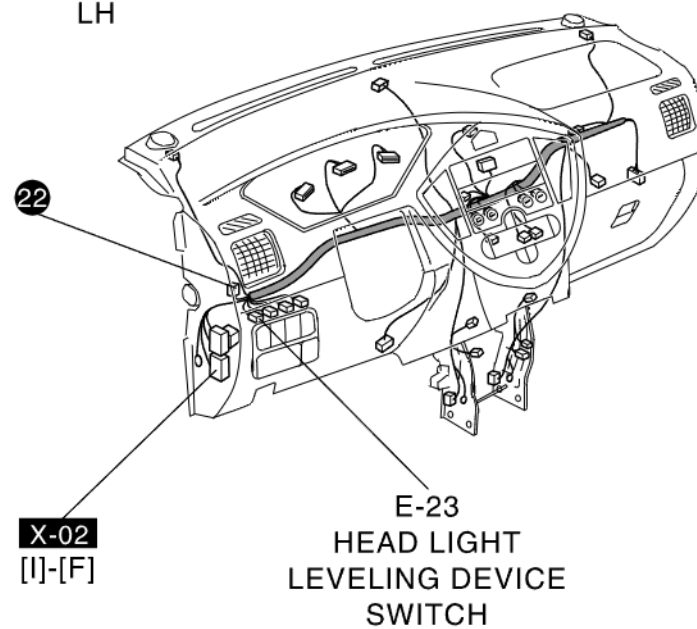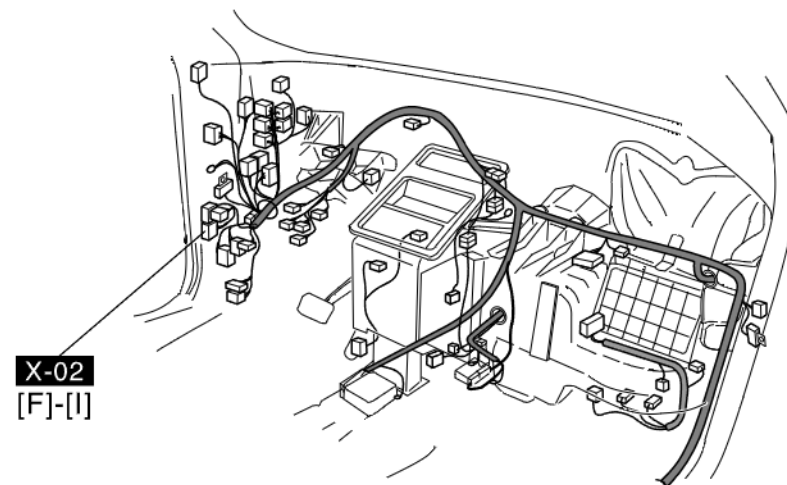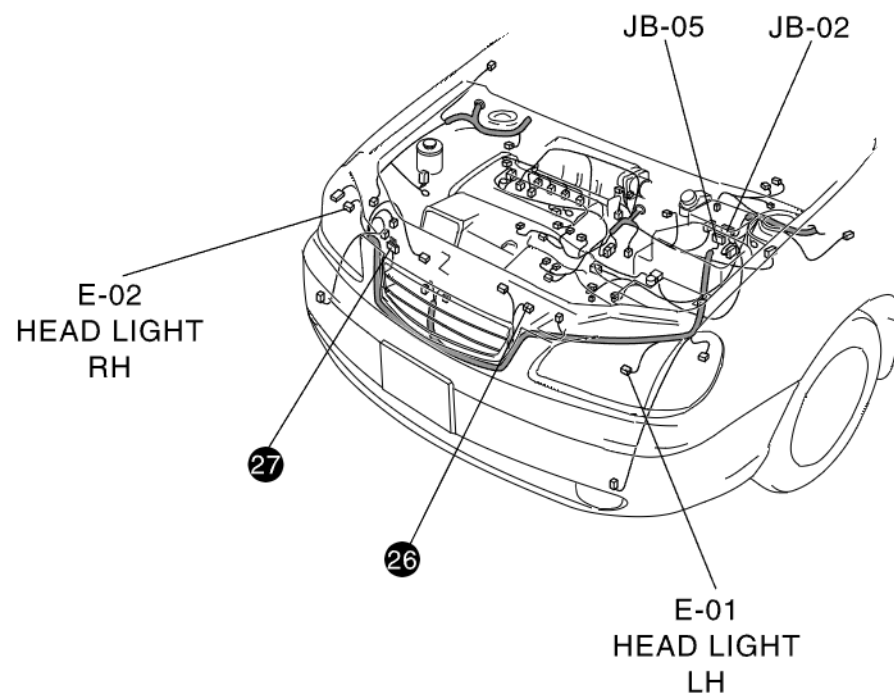


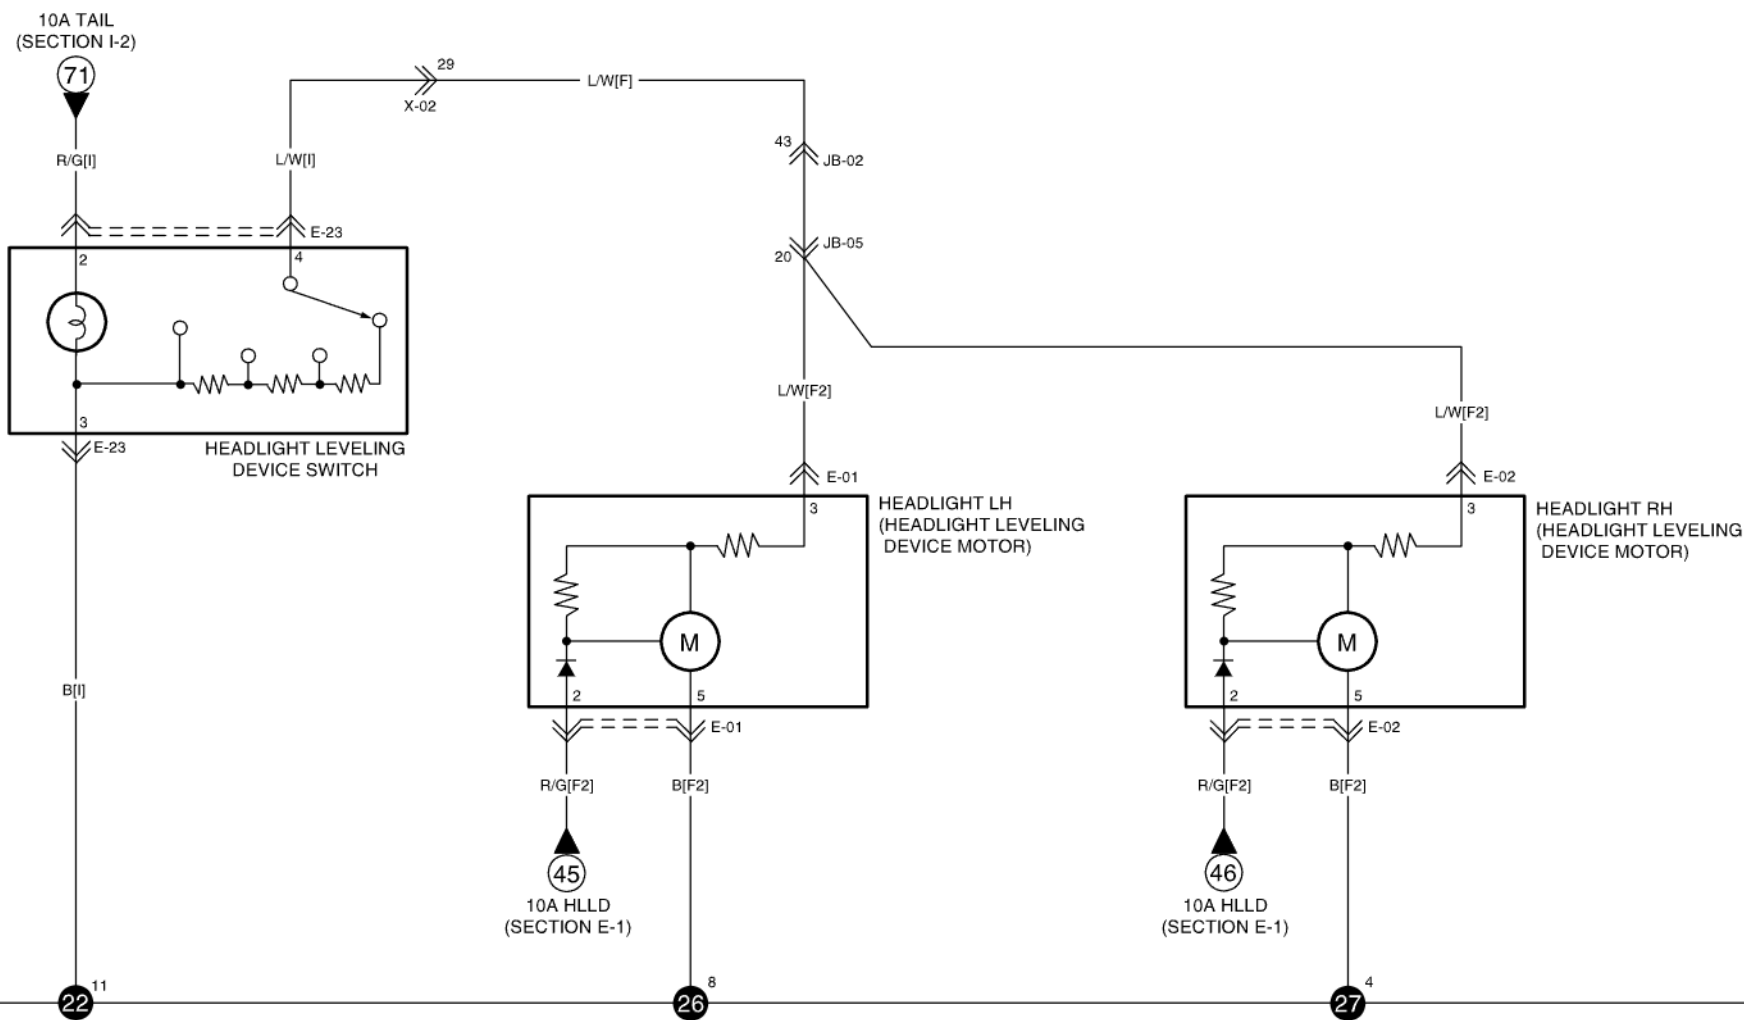


E-01 HEADLIGHT LH [F2] B

 



E-02 HEADLIGHT RH [F2] B

 

 E-23 HEADLIGHT LEVELING DEVICE SWITCH [I]




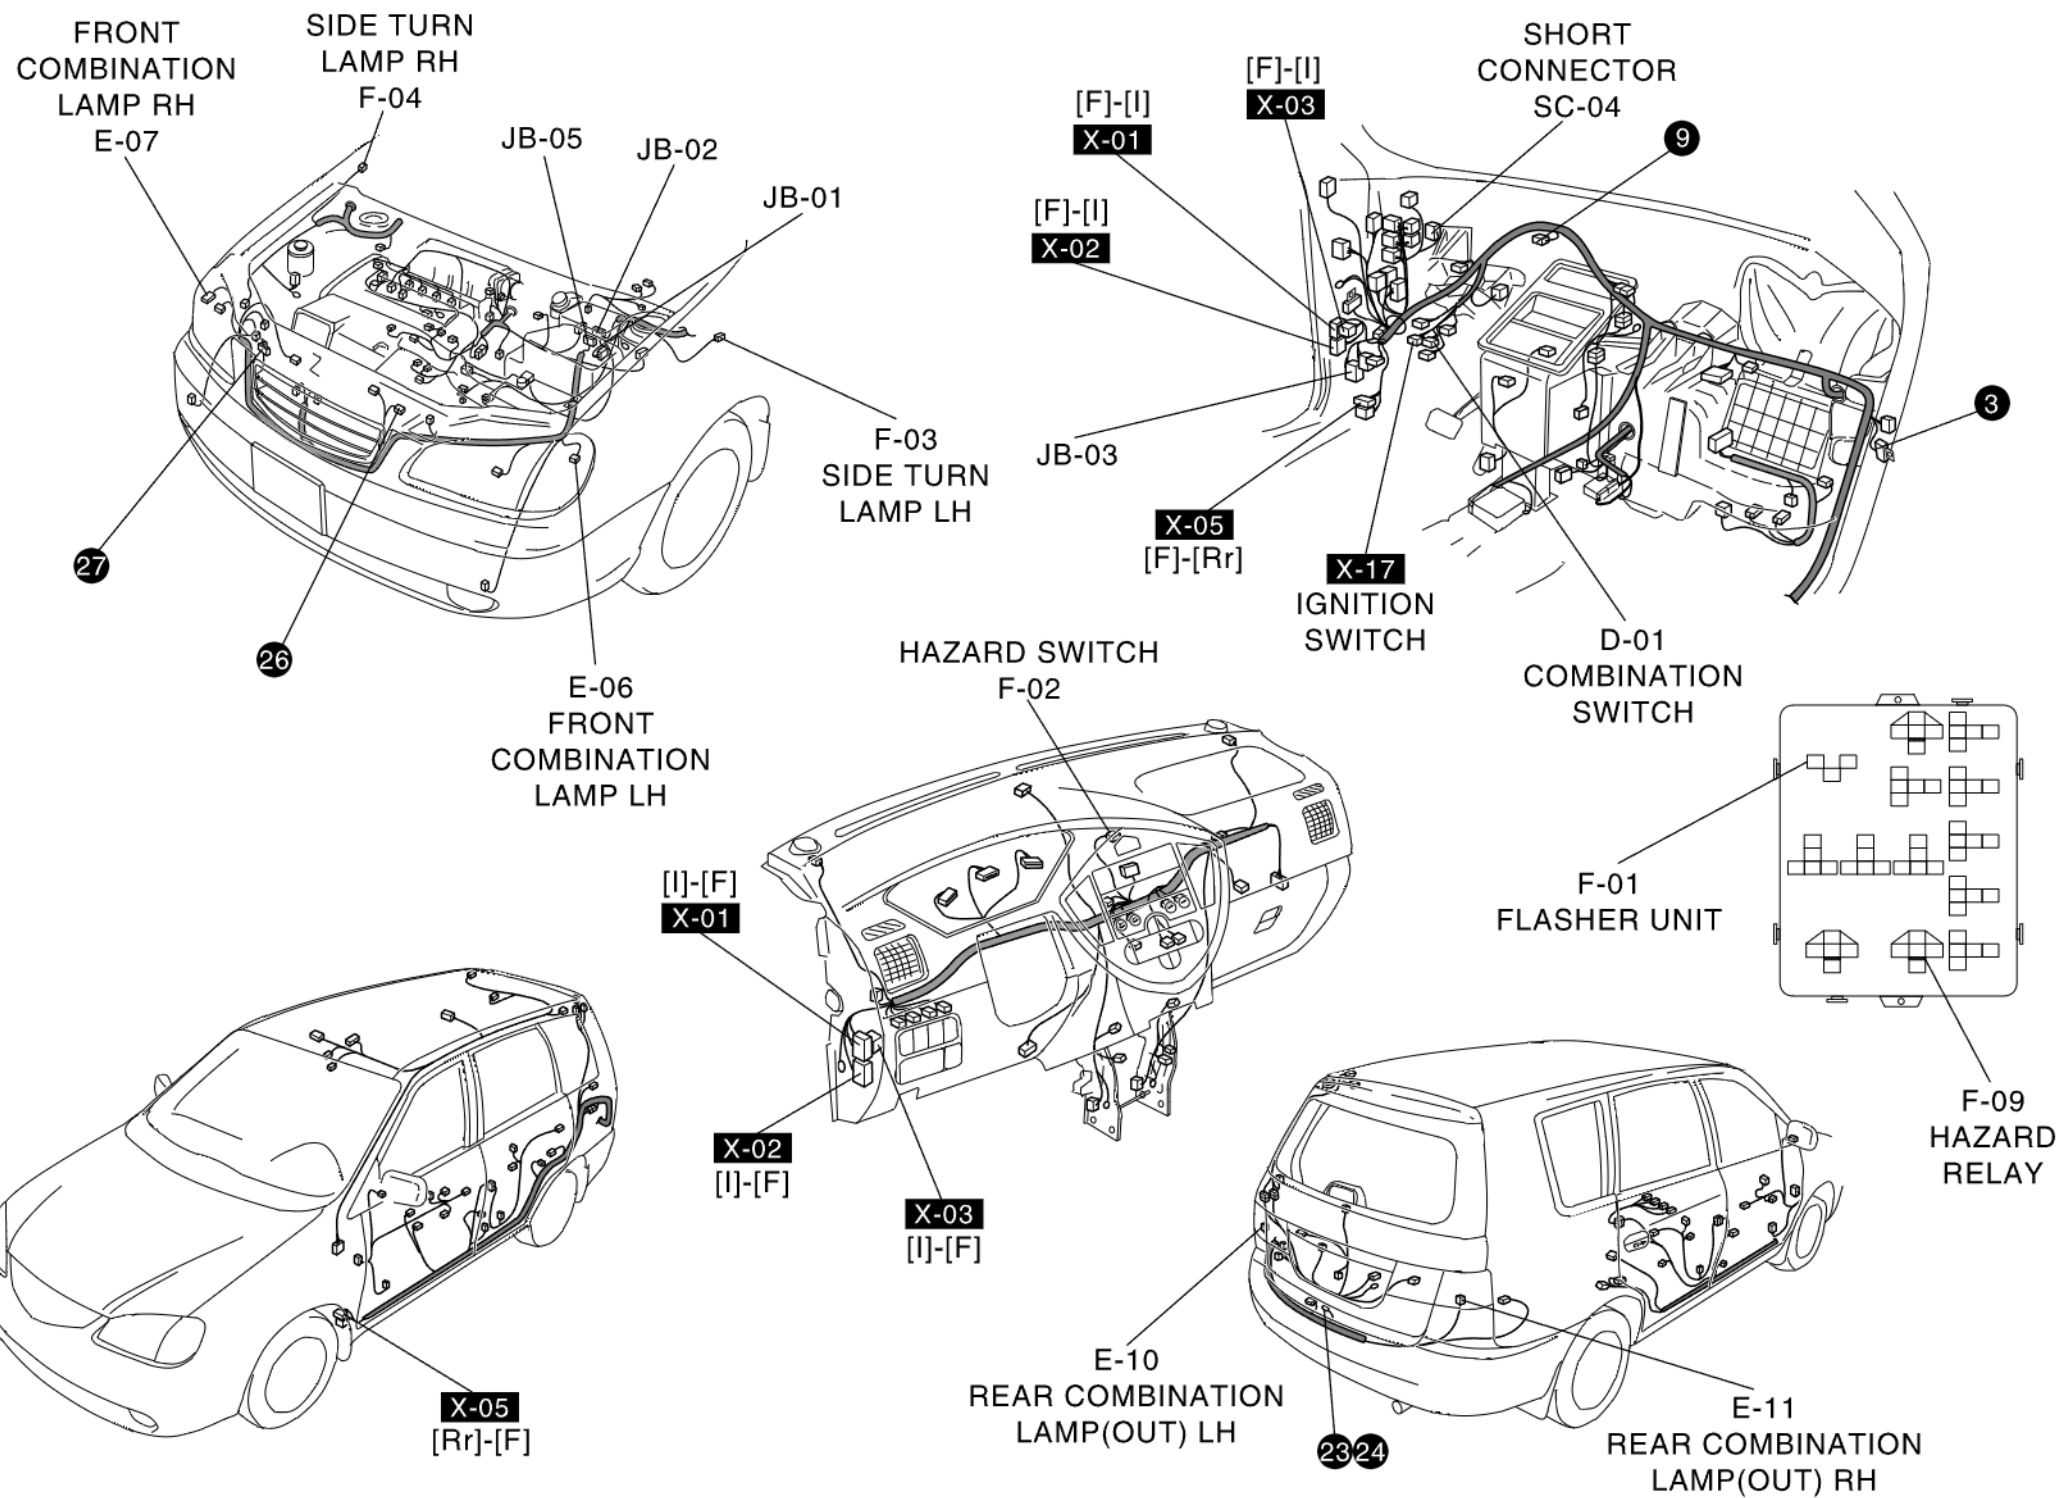

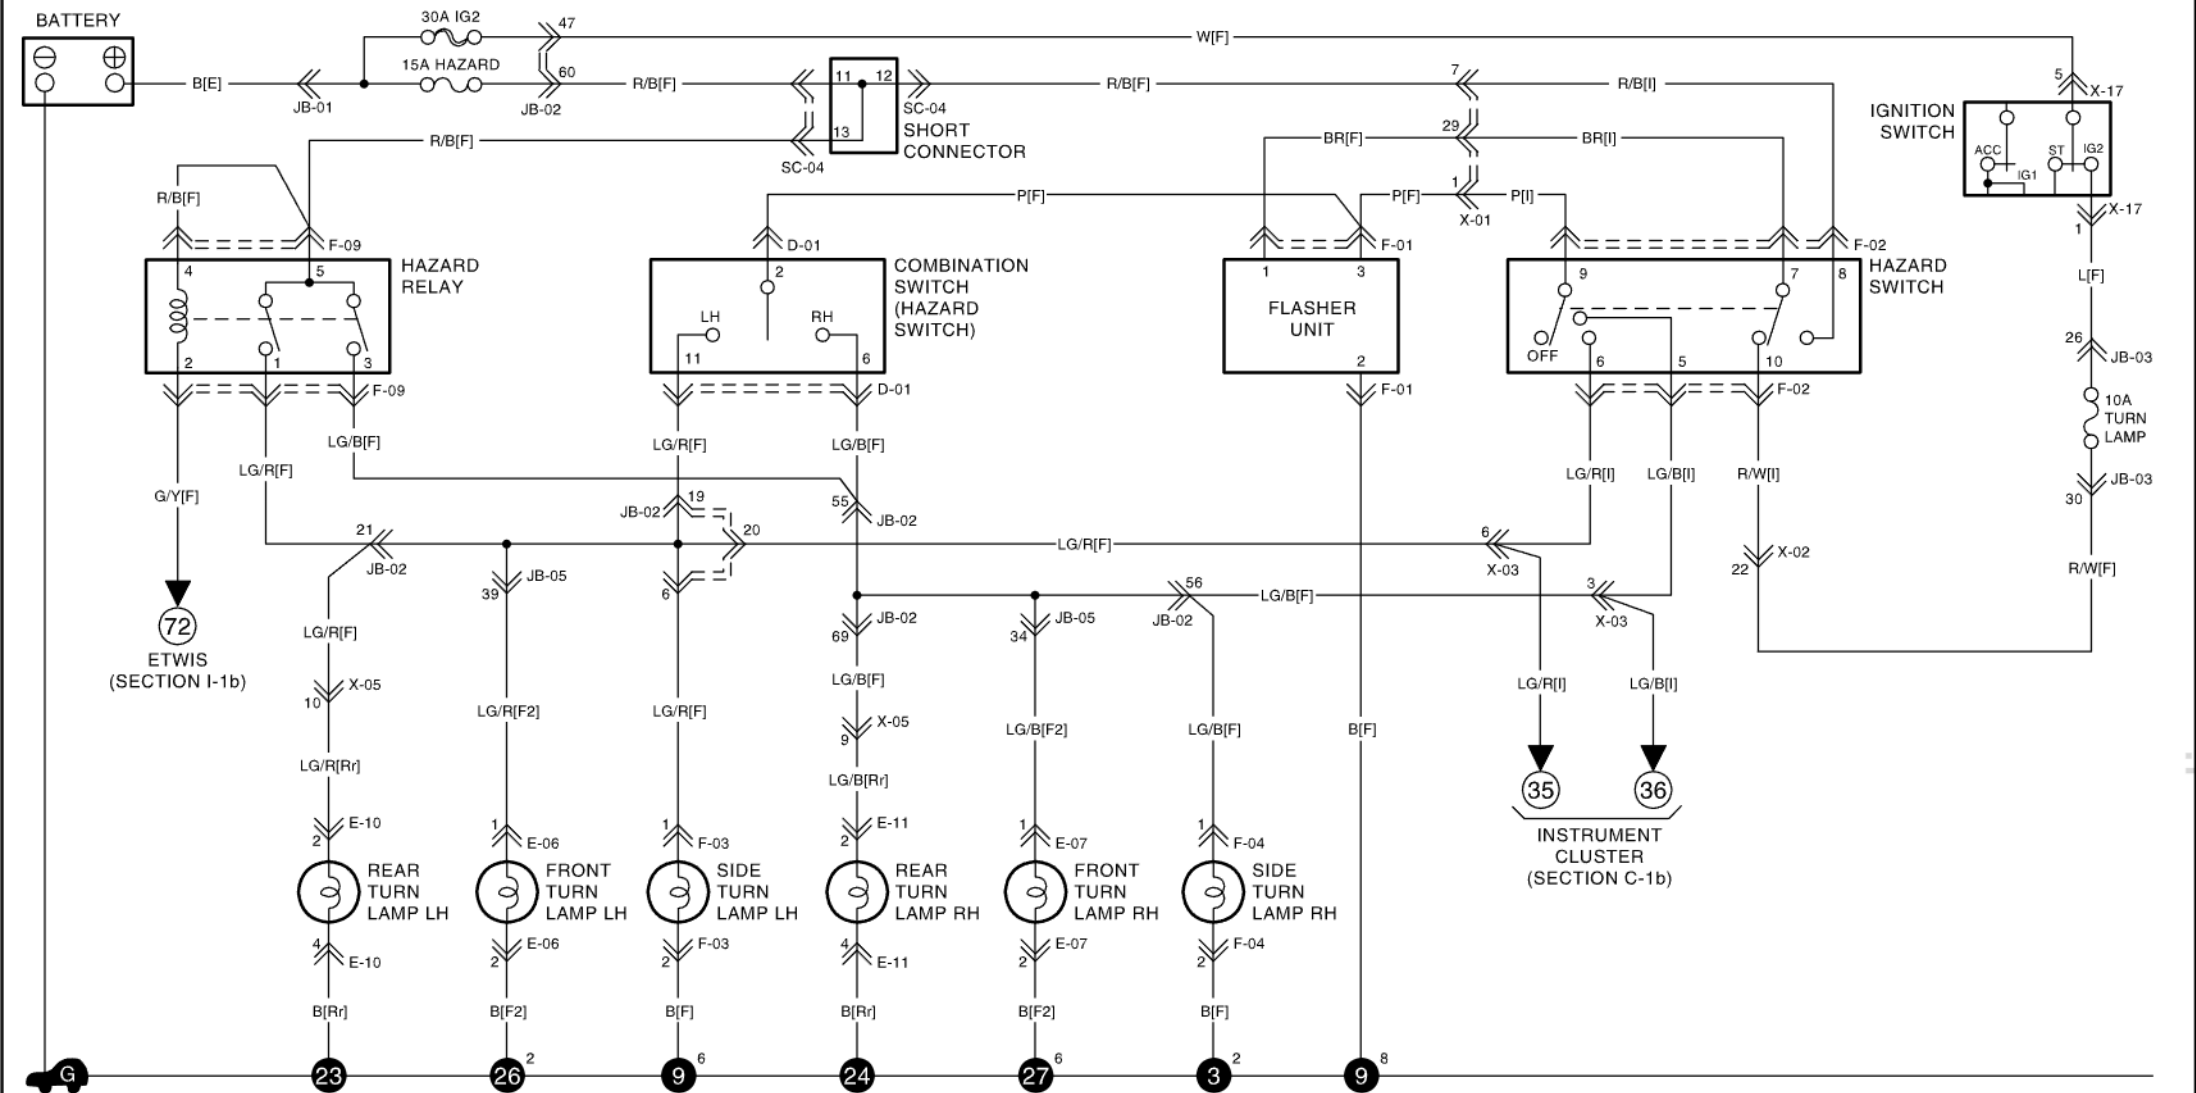


D-01 COMBINATION SWITCH (TURN) [F]


< > : RAIN SENSOR

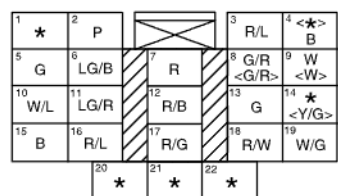


F-01 FLASHER UNIT [F]

 


F-02 HAZARD SWITCH [I]

 


F-03 SIDE TURN LAMP LH [F] B

 


F-04 SIDE TURN LAMP RH [F] B

 


F-09 HAZARD RELAY [F]

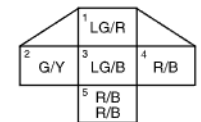


E-06 FRONT COMBINATION LAMP LH [F2] B

 


E-07 FRONT COMBINATION LAMP RH [F2] B

 


E-10 REAR COMBINATION LAMP(OUT) LH [Rr]

 


E-11 REAR COMBINATION LAMP(OUT) RH [Rr]

 

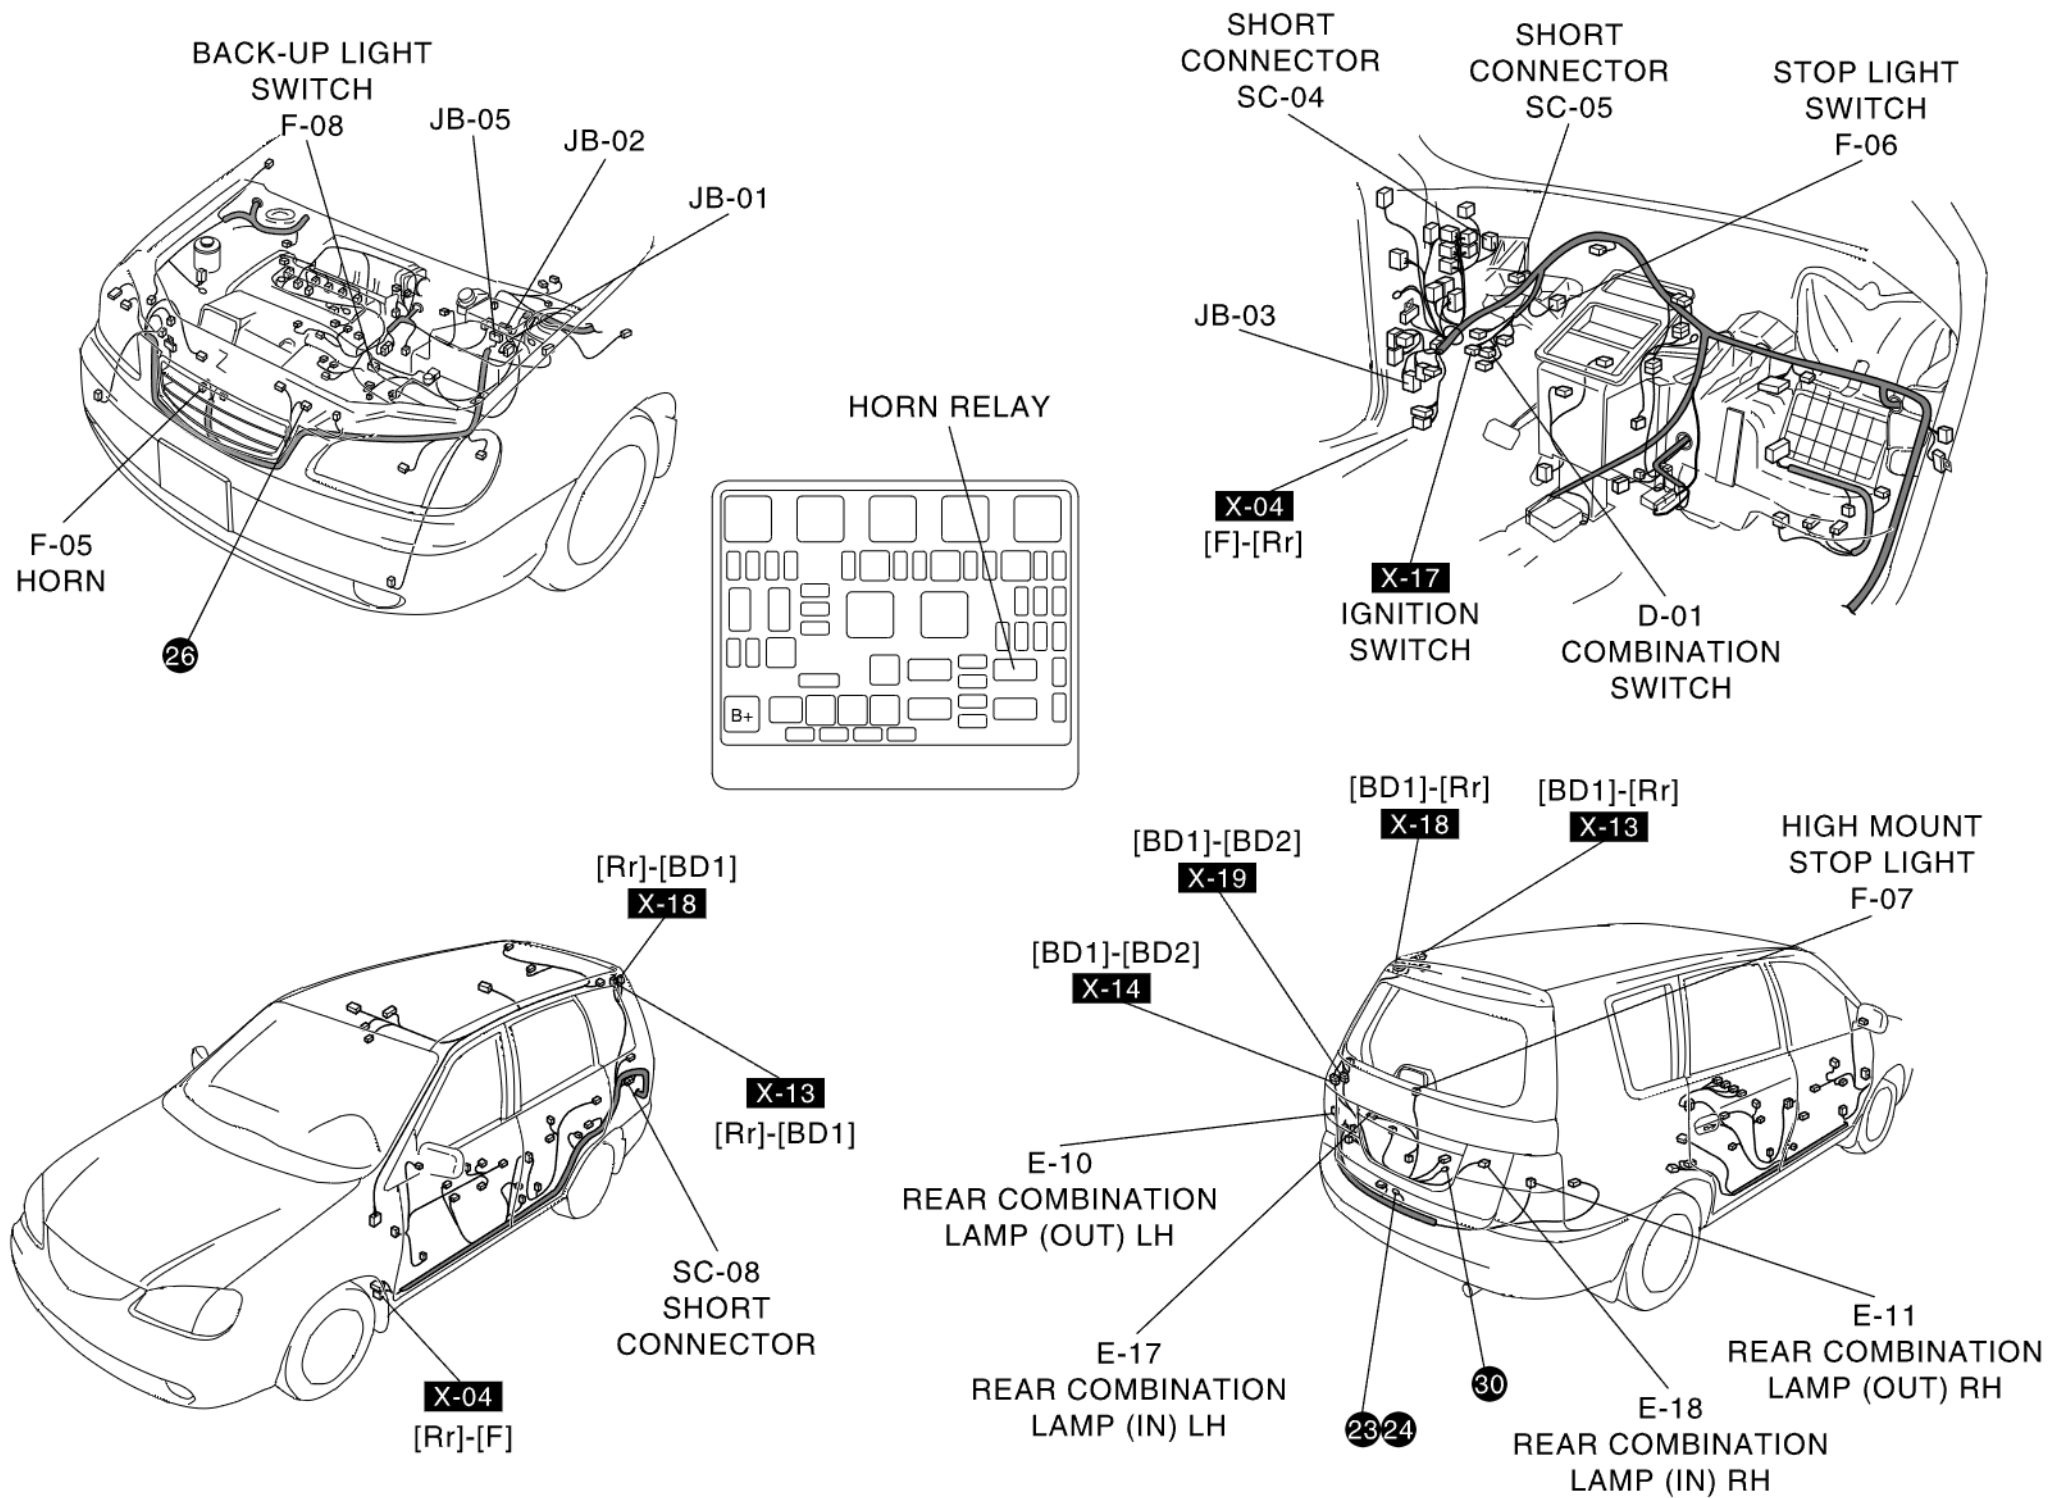





< > : RAIN SENSOR

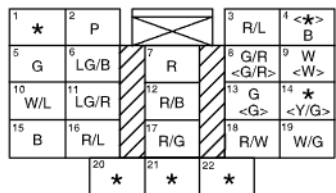


F-05 HORN [F2] B

 


E-10 REAR COMBINATION LAMP(OUT) LH [Rr]

 


F-06 STOP LIGHT SWITCH [F]	
----------------------------	--

 


E-11 REAR COMBINATION LAMP(OUT) RH [Rr]

 


F-07 HIGH MOUNT STOP LIGHT [BD2] B

 


E-17 REAR COMBINATION LAMP(IN) LH [BD2]

 



F-08 BACK-UP LIGHT SWITCH [F] B

 

E-18 REAR COMBINATION LAMP(IN) RH [BD2]

 

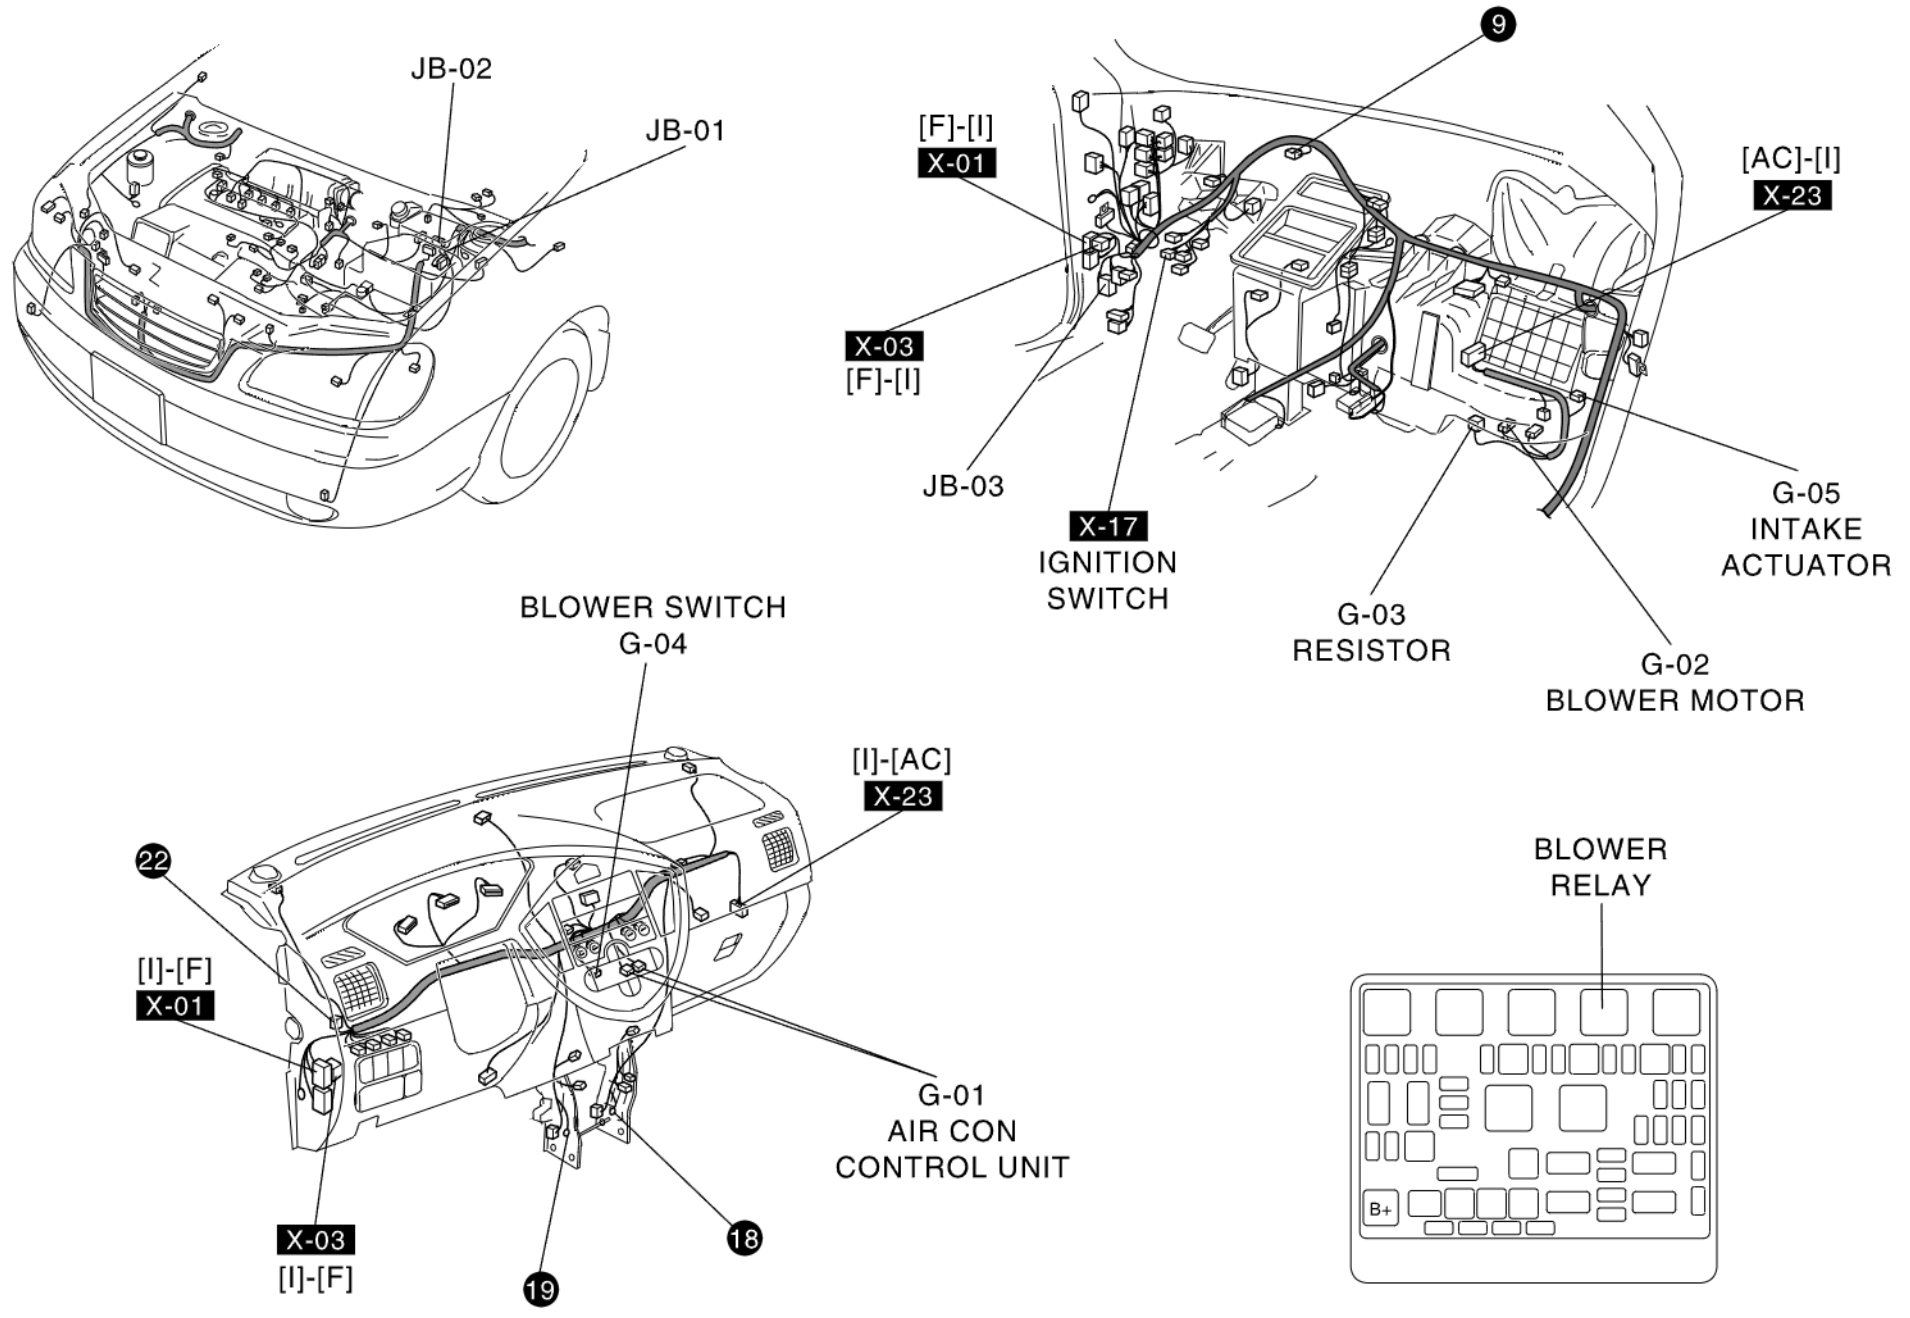

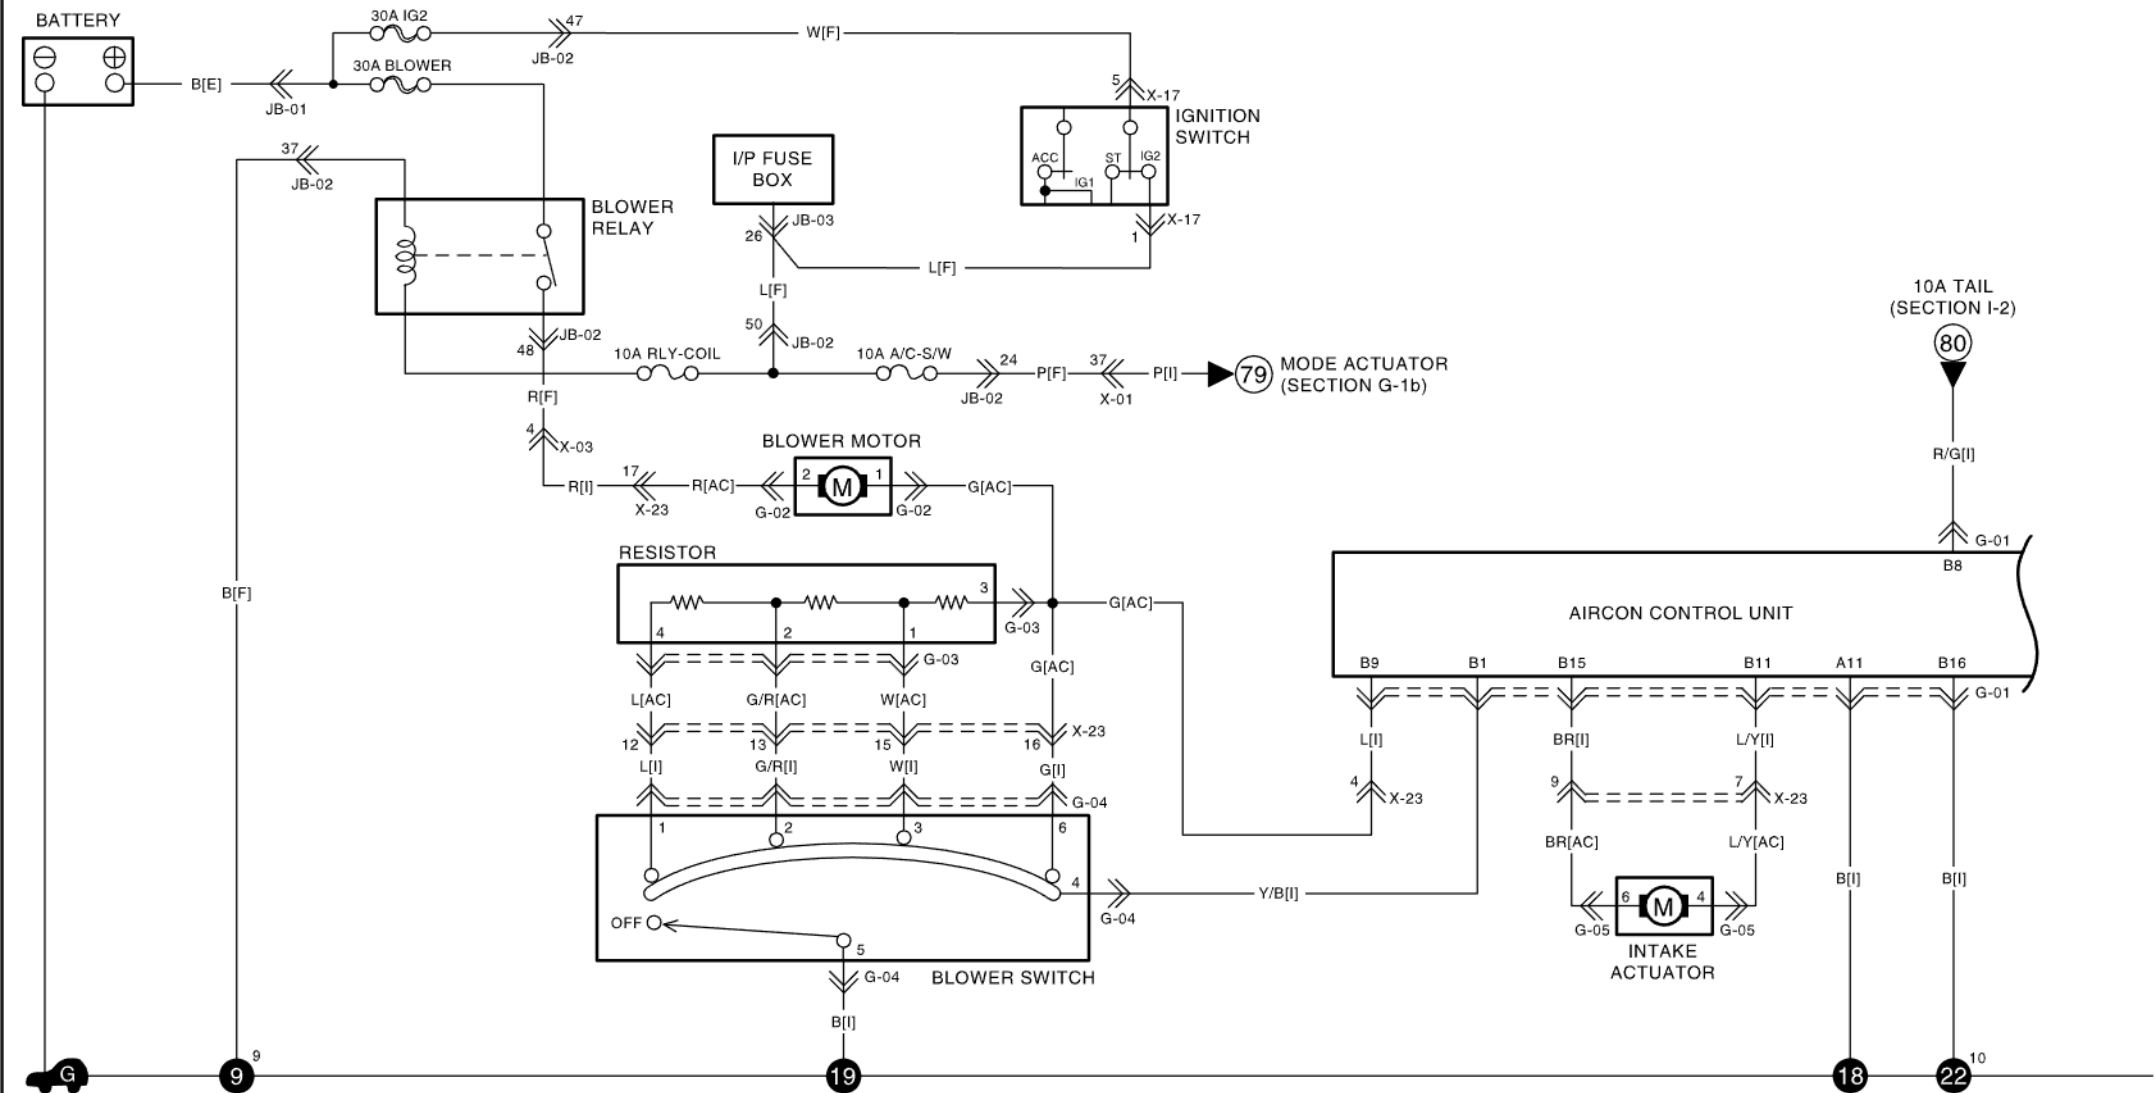


G-01 AIRCON CONTROL UNIT [I]


1	R	2	Y	3	P	4	L	5	Y	6	O	7	BR	8	G	9	*	10	*
11	B	12	G/W	13	L/B	14	G/B	15	*	16	*	17	G/R	18	W	19	*	20	*

1	Y/B	2	*	3	*	4	*	5	G	6	*	7	*	8	R/G
9	L	10	*	11	L/Y	12	*	13	LG/B	14	*	15	BR	16	B

 G-02 BLOWER MOTOR [AC]




G-03 RESISTOR [AC]

 



G-04 BLOWER SWITCH [I]



 G-05 INTAKE ACTUATOR [AC]



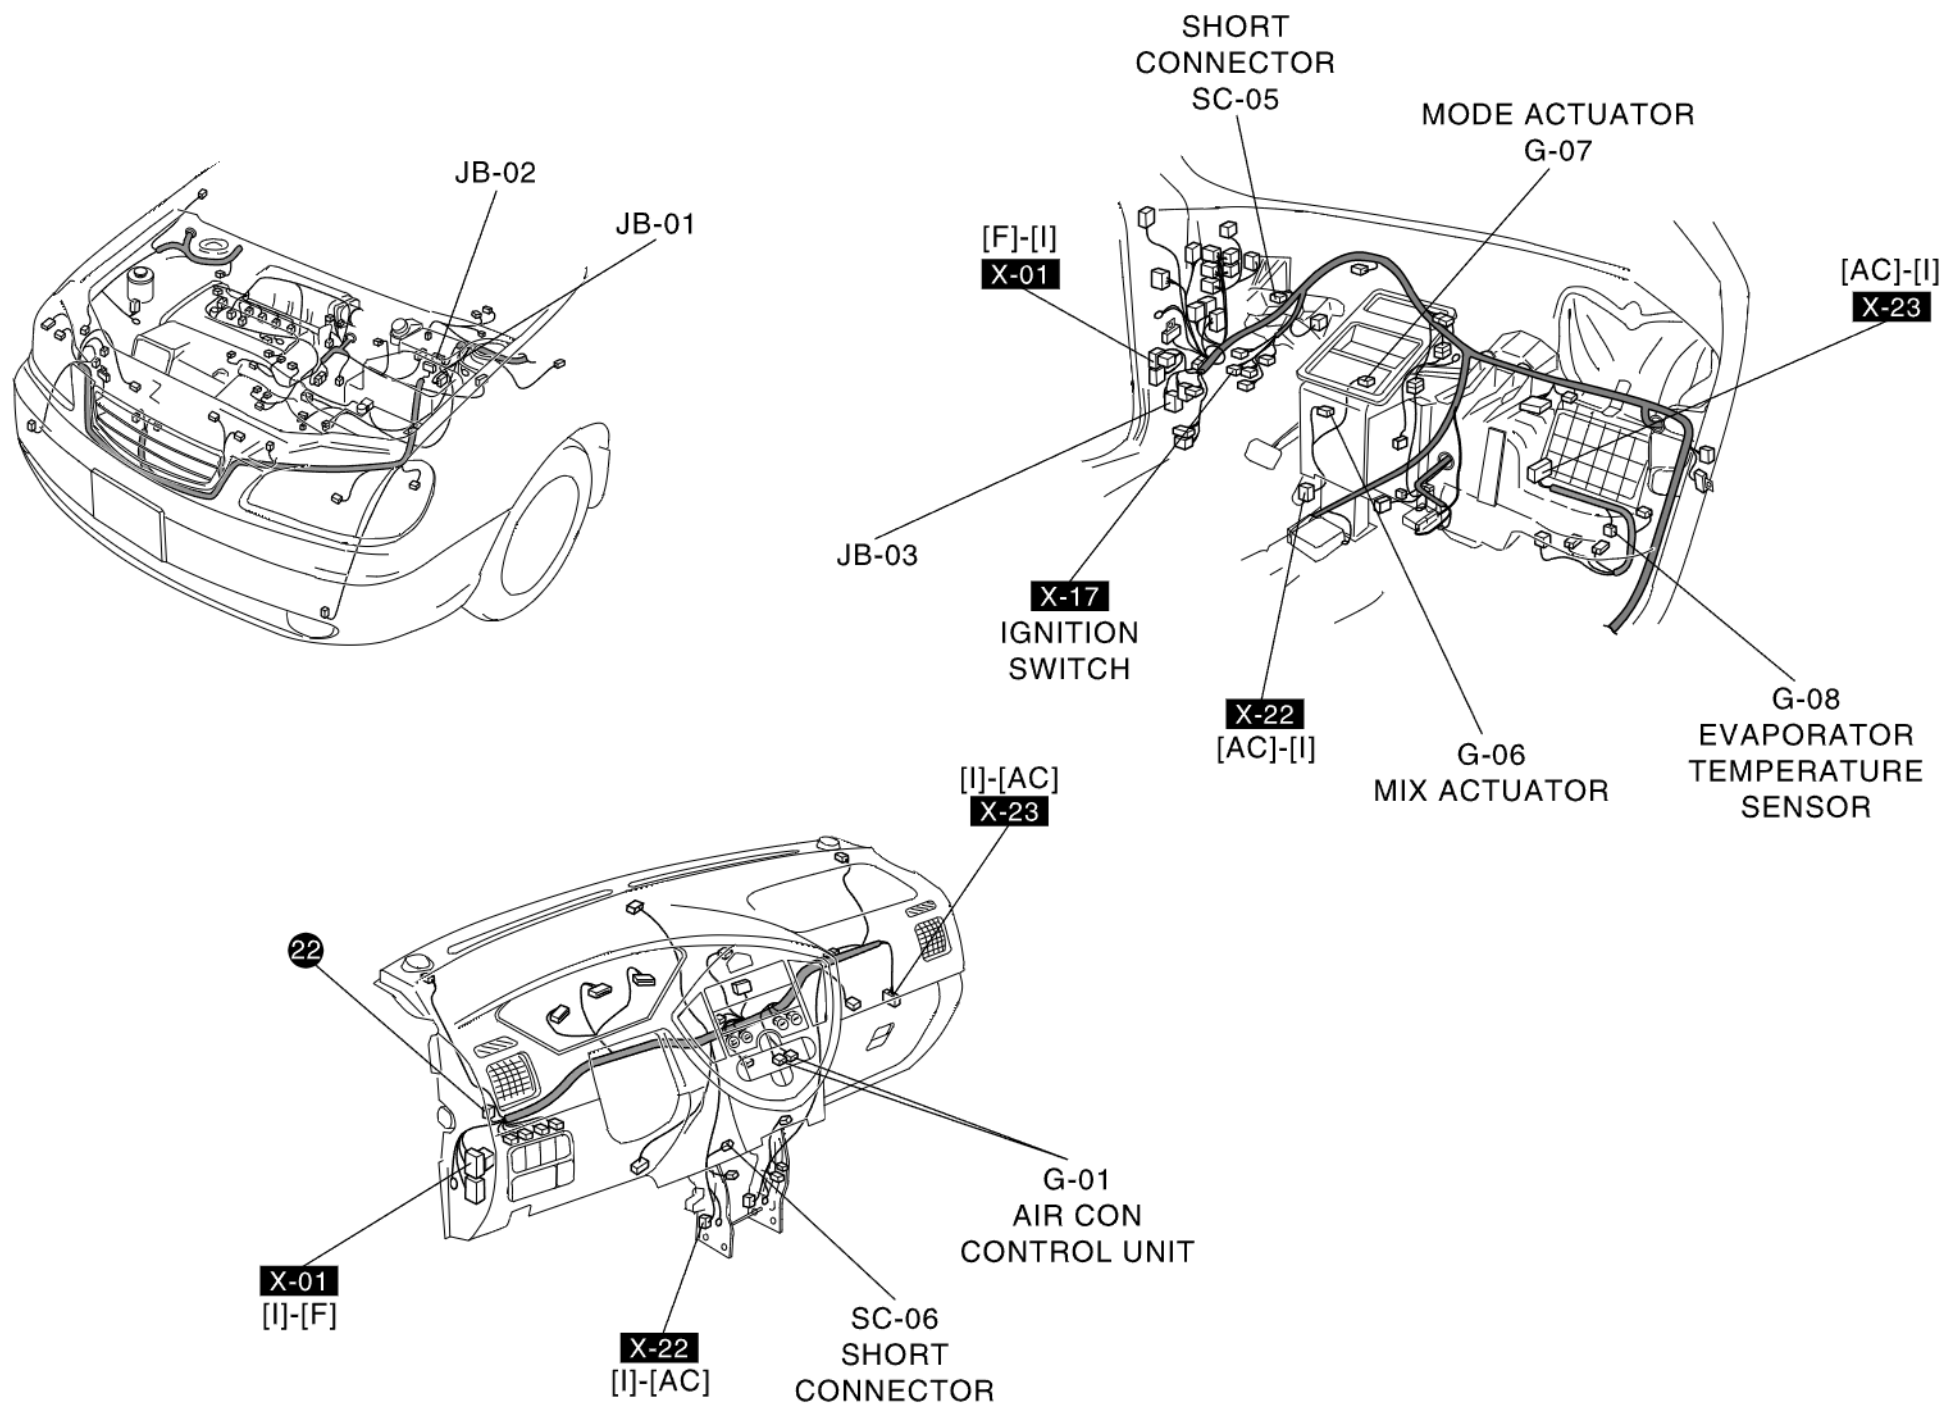

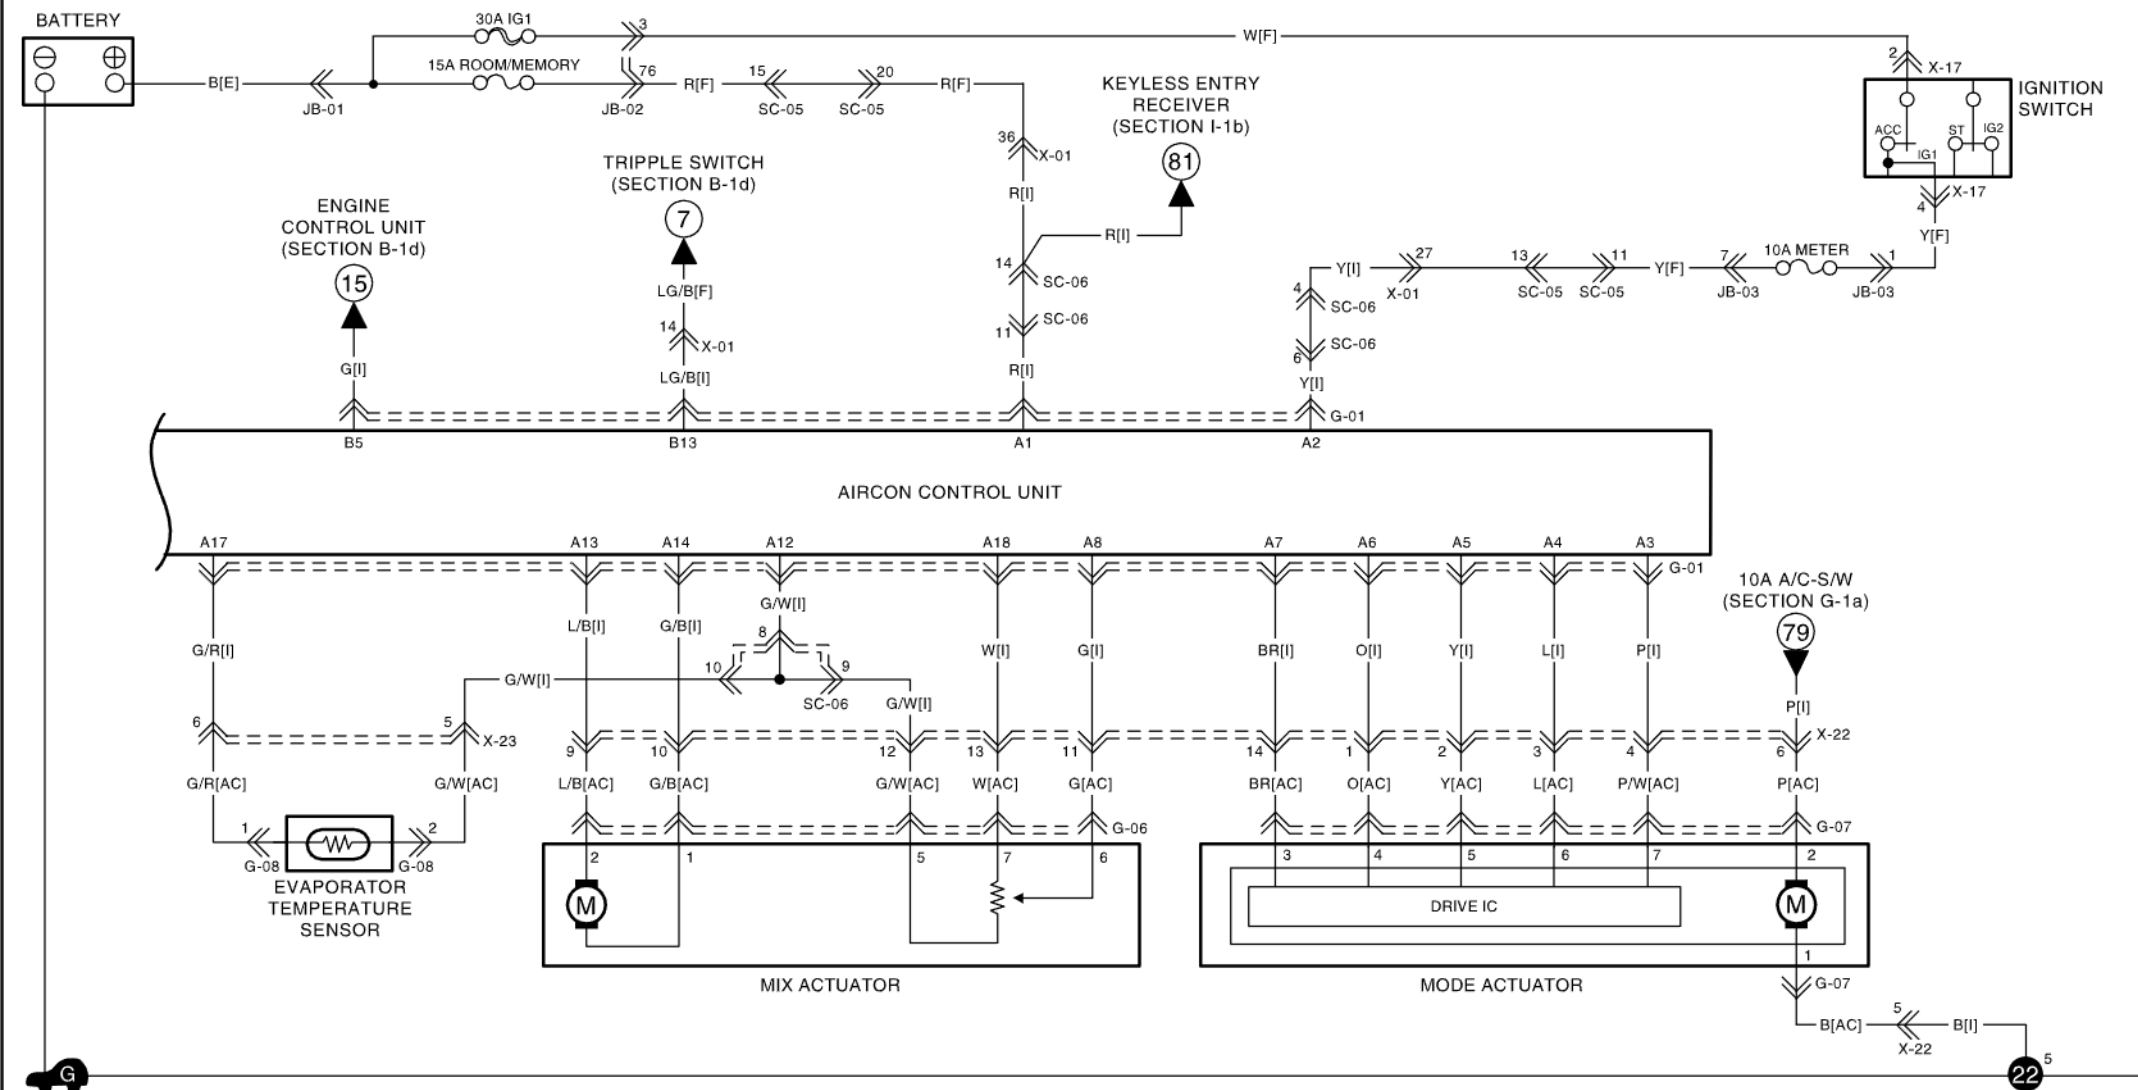

G-01 AIRCON CONTROL UNIT [I]

1	2	3	4	5	6	7	8	9	10
R	Y	P	L	Y	O	BR	G	*	*
11	B	G/W	L/B	G/B	*	G/R	W	*	*

1	2	3	4	5	6	7	8
Y/B	*	*	*	G	*	*	R/G
9	L	*	L/Y	*	LG/B	*	BR

G-06 MIX ACTUATOR [AC]


1	2
G/B	L/B
3	4
*	*
5	6
G/W	G
7	8
W	

G-07 MODE ACTUATOR [AC]

1	2
B	P
3	4
BR	O
5	6
Y	L
7	8
P/W	

G-08 EVAPORATOR TEMPERATURE SENSOR [AC]

1	2
G/R	G/W

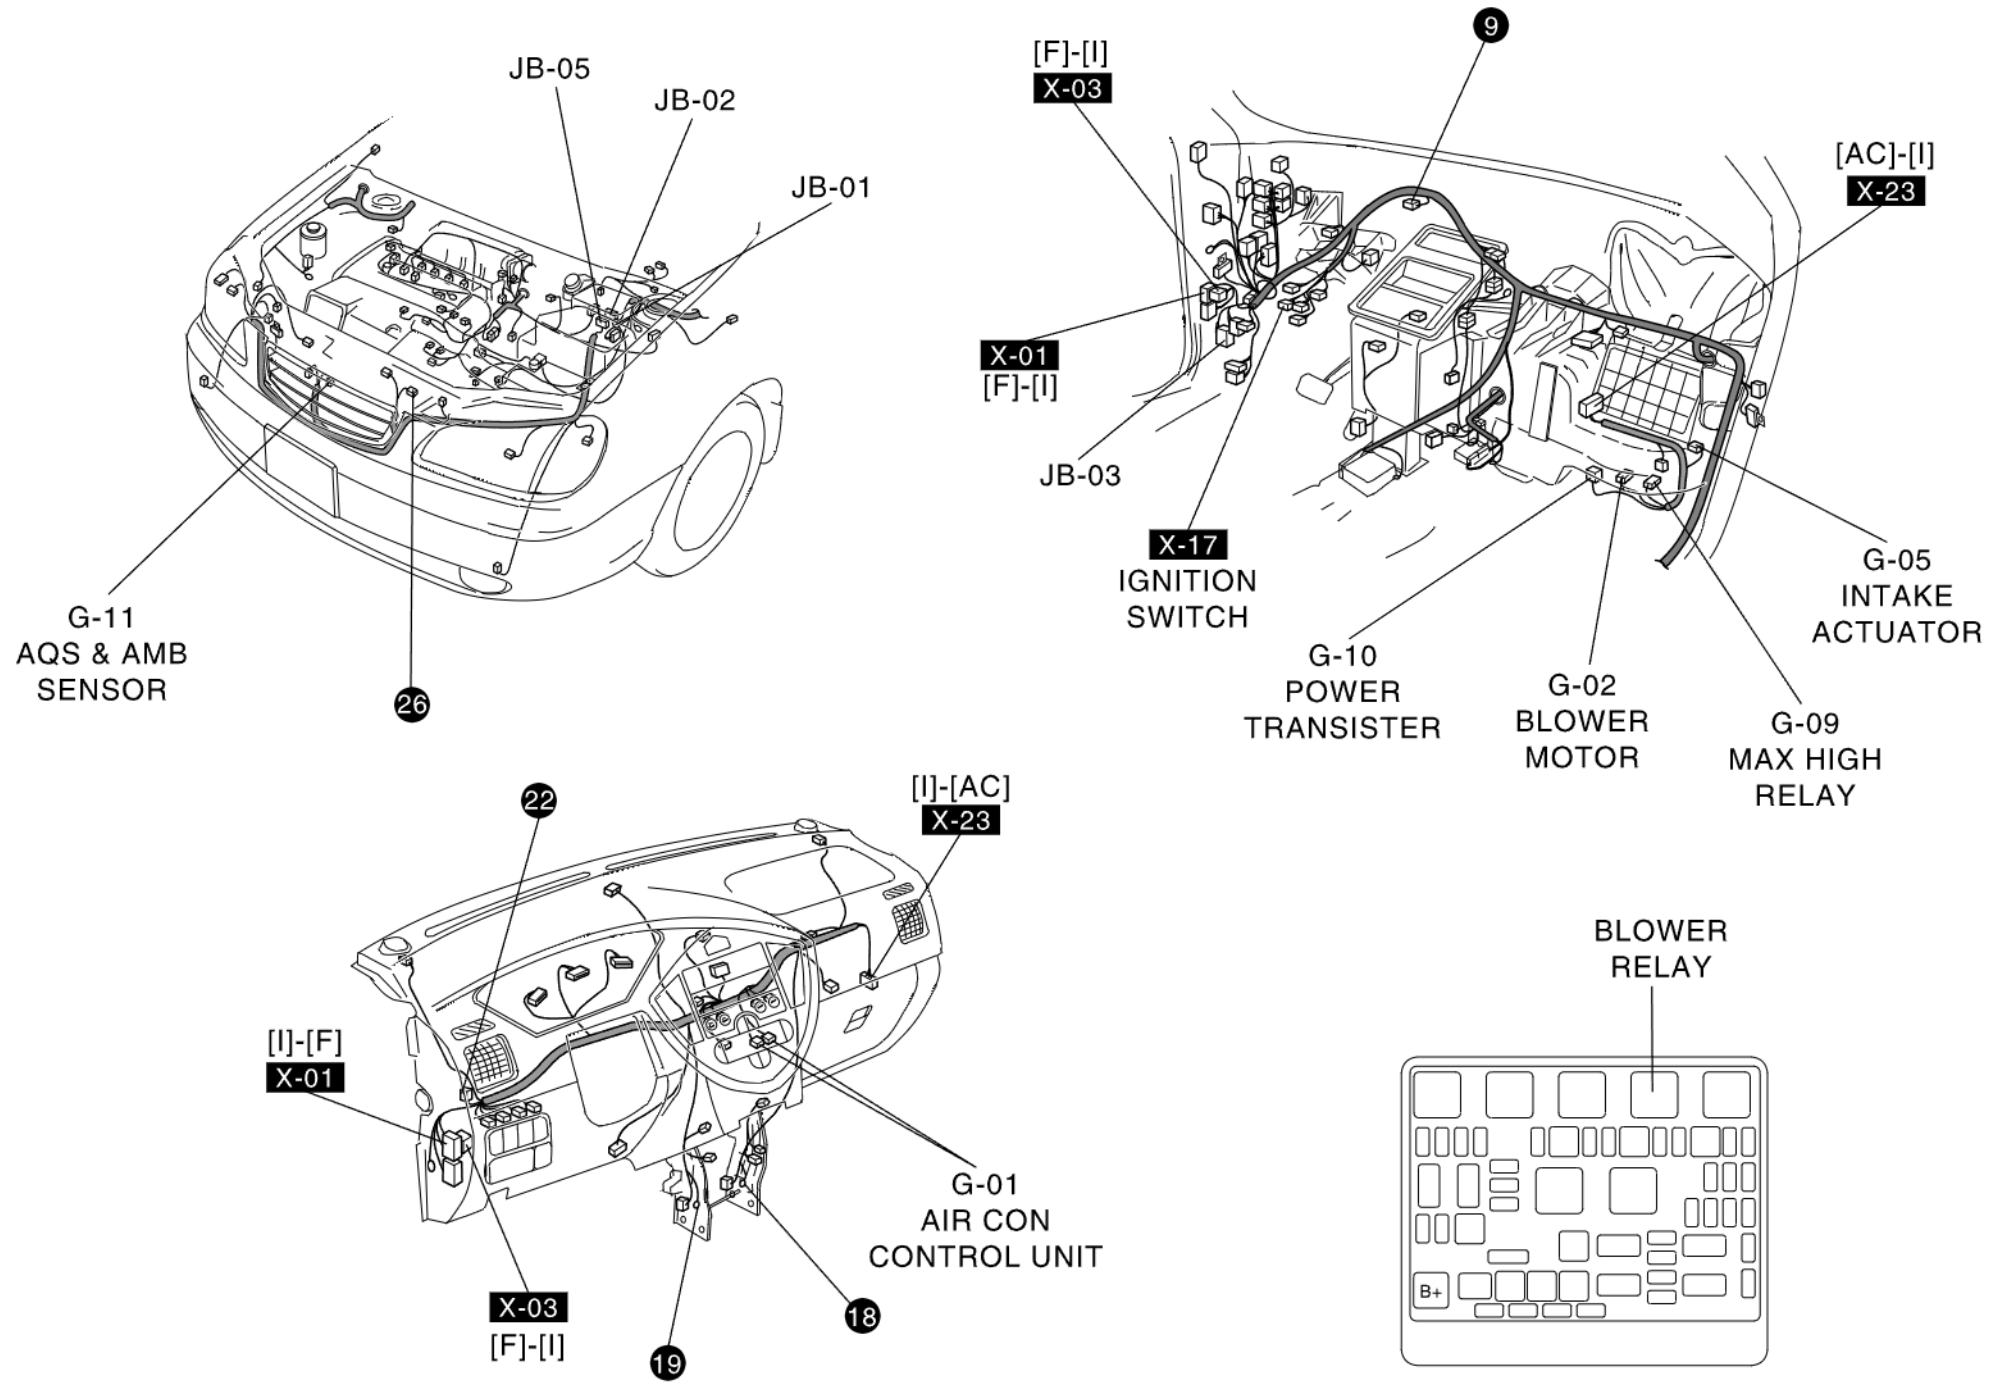



(A)

1	R	2	Y	3	P	4	L	5	Y	6	O	7	BR	8	G	9	G/Y	10	L
11	B	12	G/W	13	L/B	14	G/B	15	★	16	W/R	17	G/R	18	W	19	Y/W	20	R


1	G	2	*	3	*	4	*	5	G	6	*	7	Y	8	R/G
9	L	10	*	11	L/Y	12	*	13	LG/B	14	*	15	BR	16	B


1					2
3	4	5	6	7	
*	L/Y	*	BR	*	

1	2	3
P	*	Y
4	5	
L	B	

Diagram of a three-story building. The ground floor has two rooms, B and L. The first floor has a single room G. The second floor has a single room, indicated by a small square above the first floor room G.

1 ★	2 G/W	3 G/Y
4 W/R	5 B	6 R/L

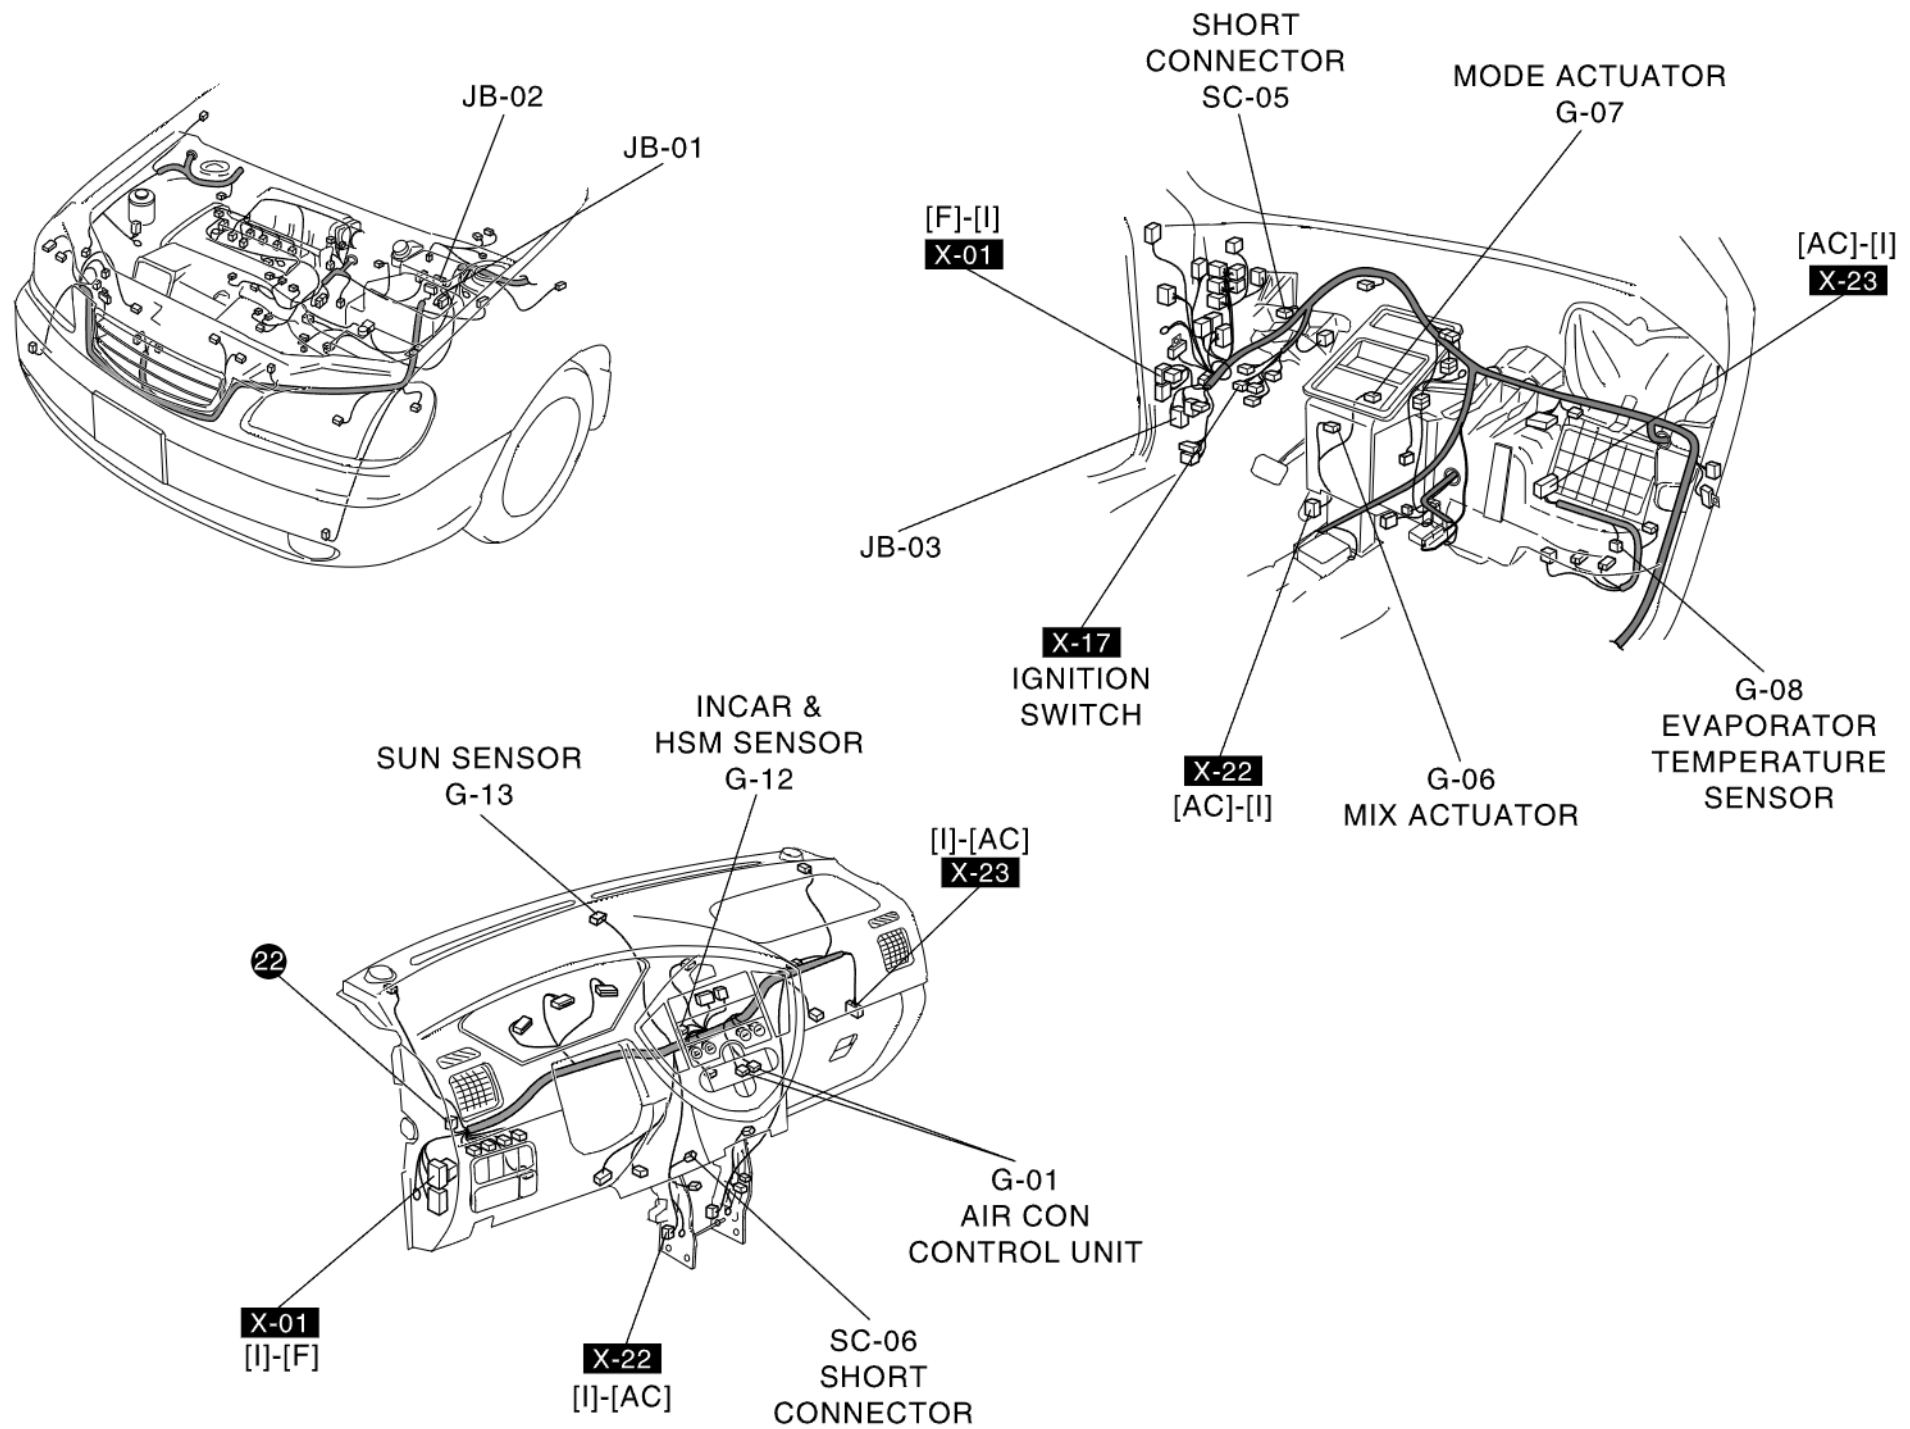

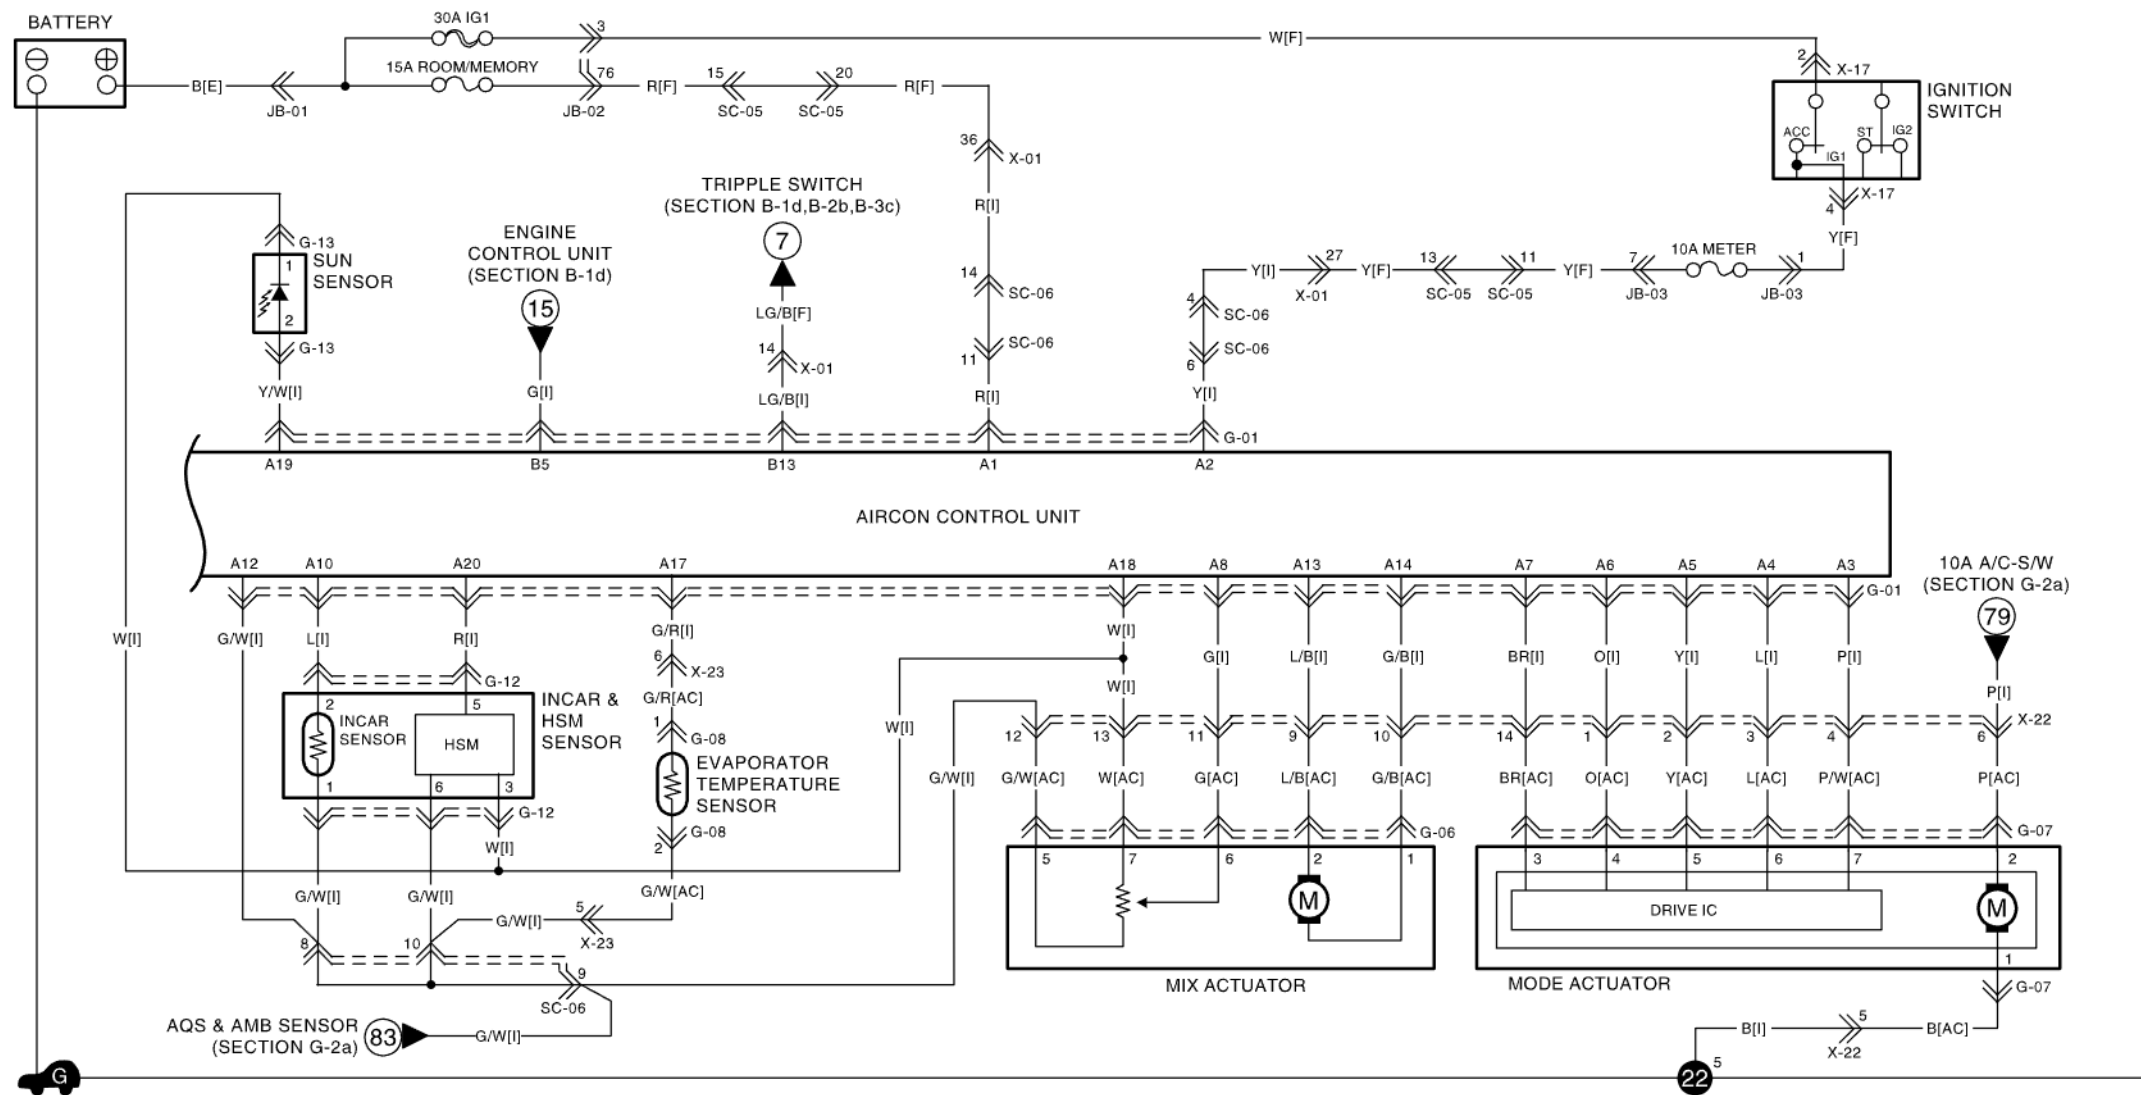

G-01 AIRCON CONTROL UNIT [I]

1	R	2	Y	3	P	4	L	5	Y	6	O	7	BR	8	G	9	G/Y	10	L
11	B	12	G/W	13	L/B	14	G/B	15	*	16	W/R	17	G/R	18	W	19	Y/W	20	R

1	G	2	*	3	*	4	*	5	G	6	*	7	Y	8	R/G
9	L	10	*	11	L/Y	12	*	13	LG/B	14	*	15	BR	16	B

G-06 MIX ACTUATOR [AC]

1	G/B	2	L/B
3	*	4	*
5	G/W	6	G
7	W		

G-07 MODE ACTUATOR [AC]

1	B	2	P
3	BR	4	O
5	Y	6	L
7	P/W		

G-08 EVAPORATOR TEMPERATURE SENSOR [AC]


1	G/R	2	G/W
---	-----	---	-----


G-12 INCAR & HSM SENSOR [I]

1	G/W	2	L
3	W	4	*
5	R	6	G/W


G-13 SUN SENSOR [I]

1	W	2	Y/W
---	---	---	-----

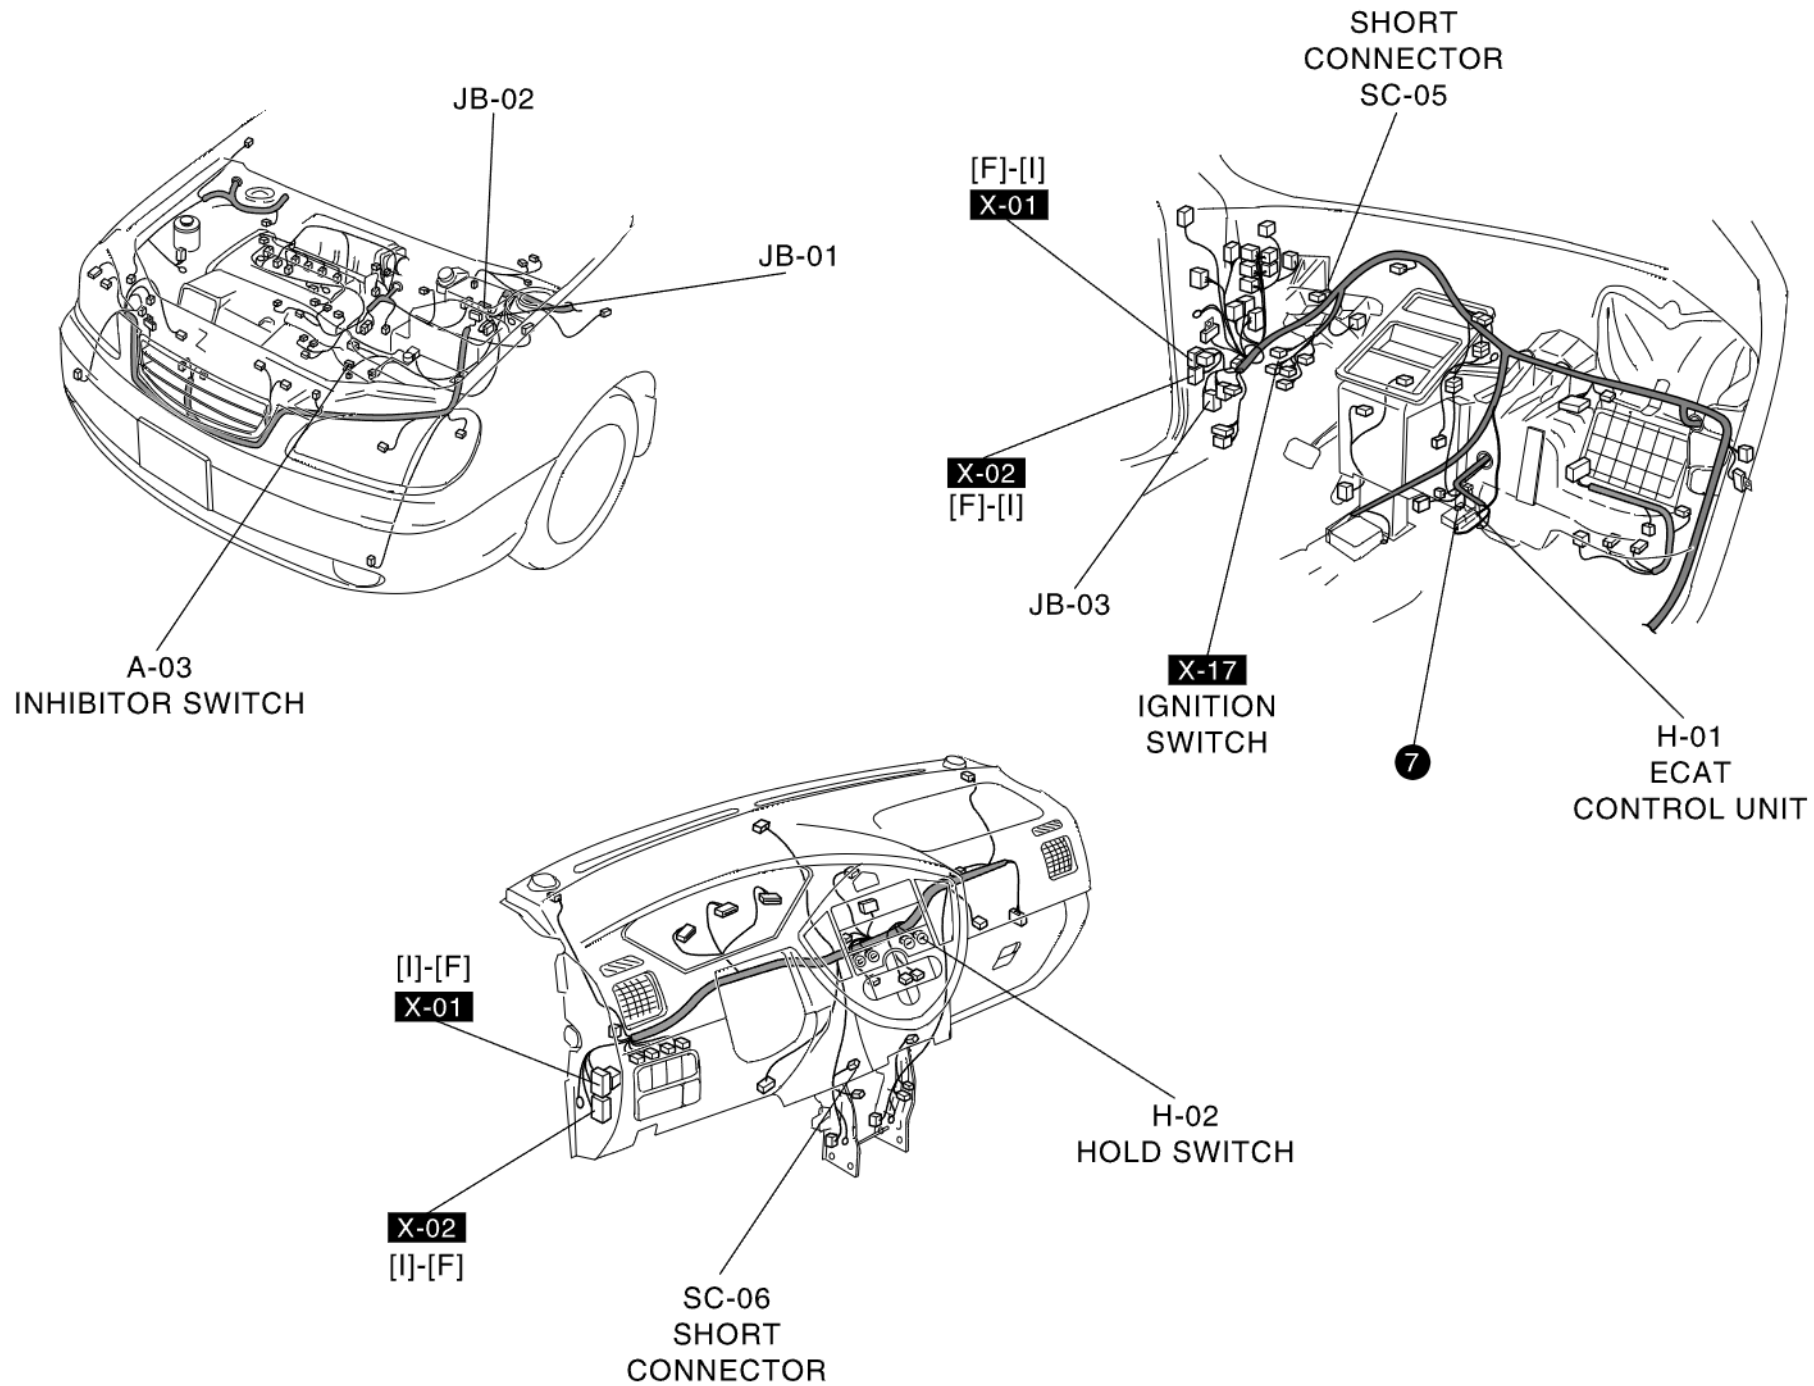


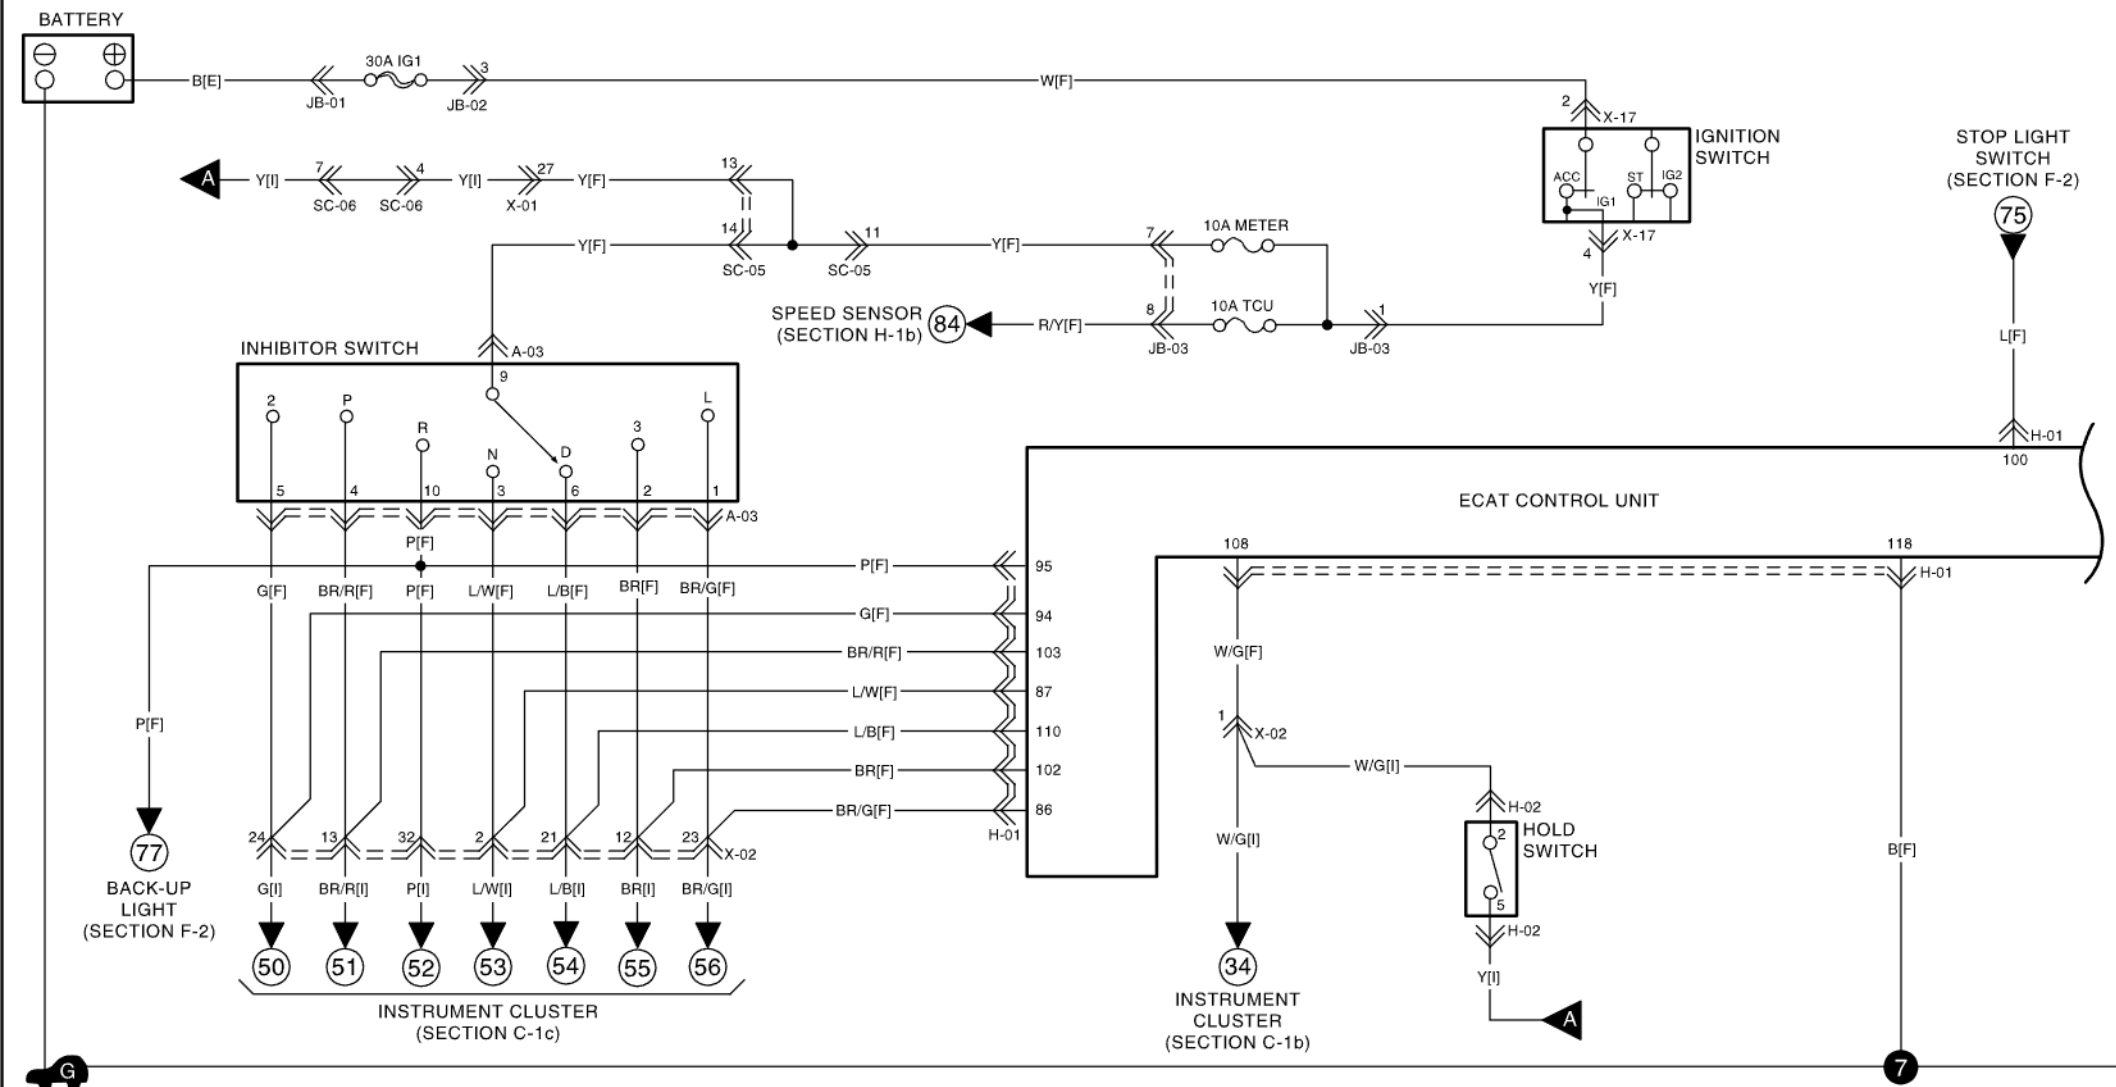


H-01 ECAT CONTROL UNIT [F]

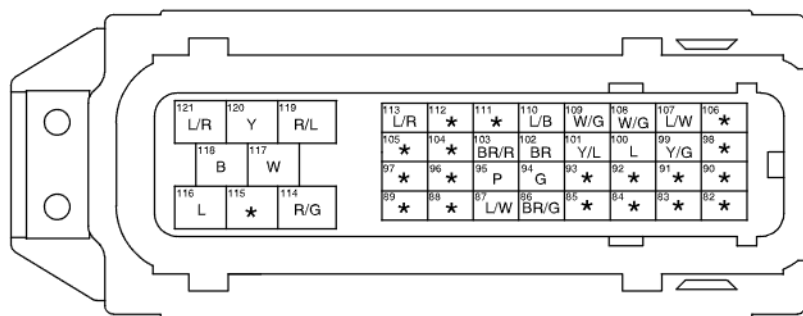



H-02 HOLD SWITCH [I] Y

 


A-03 INHIBITOR SWITCH [F]

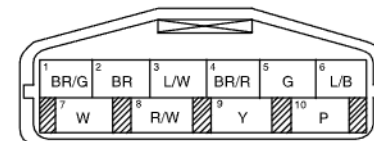

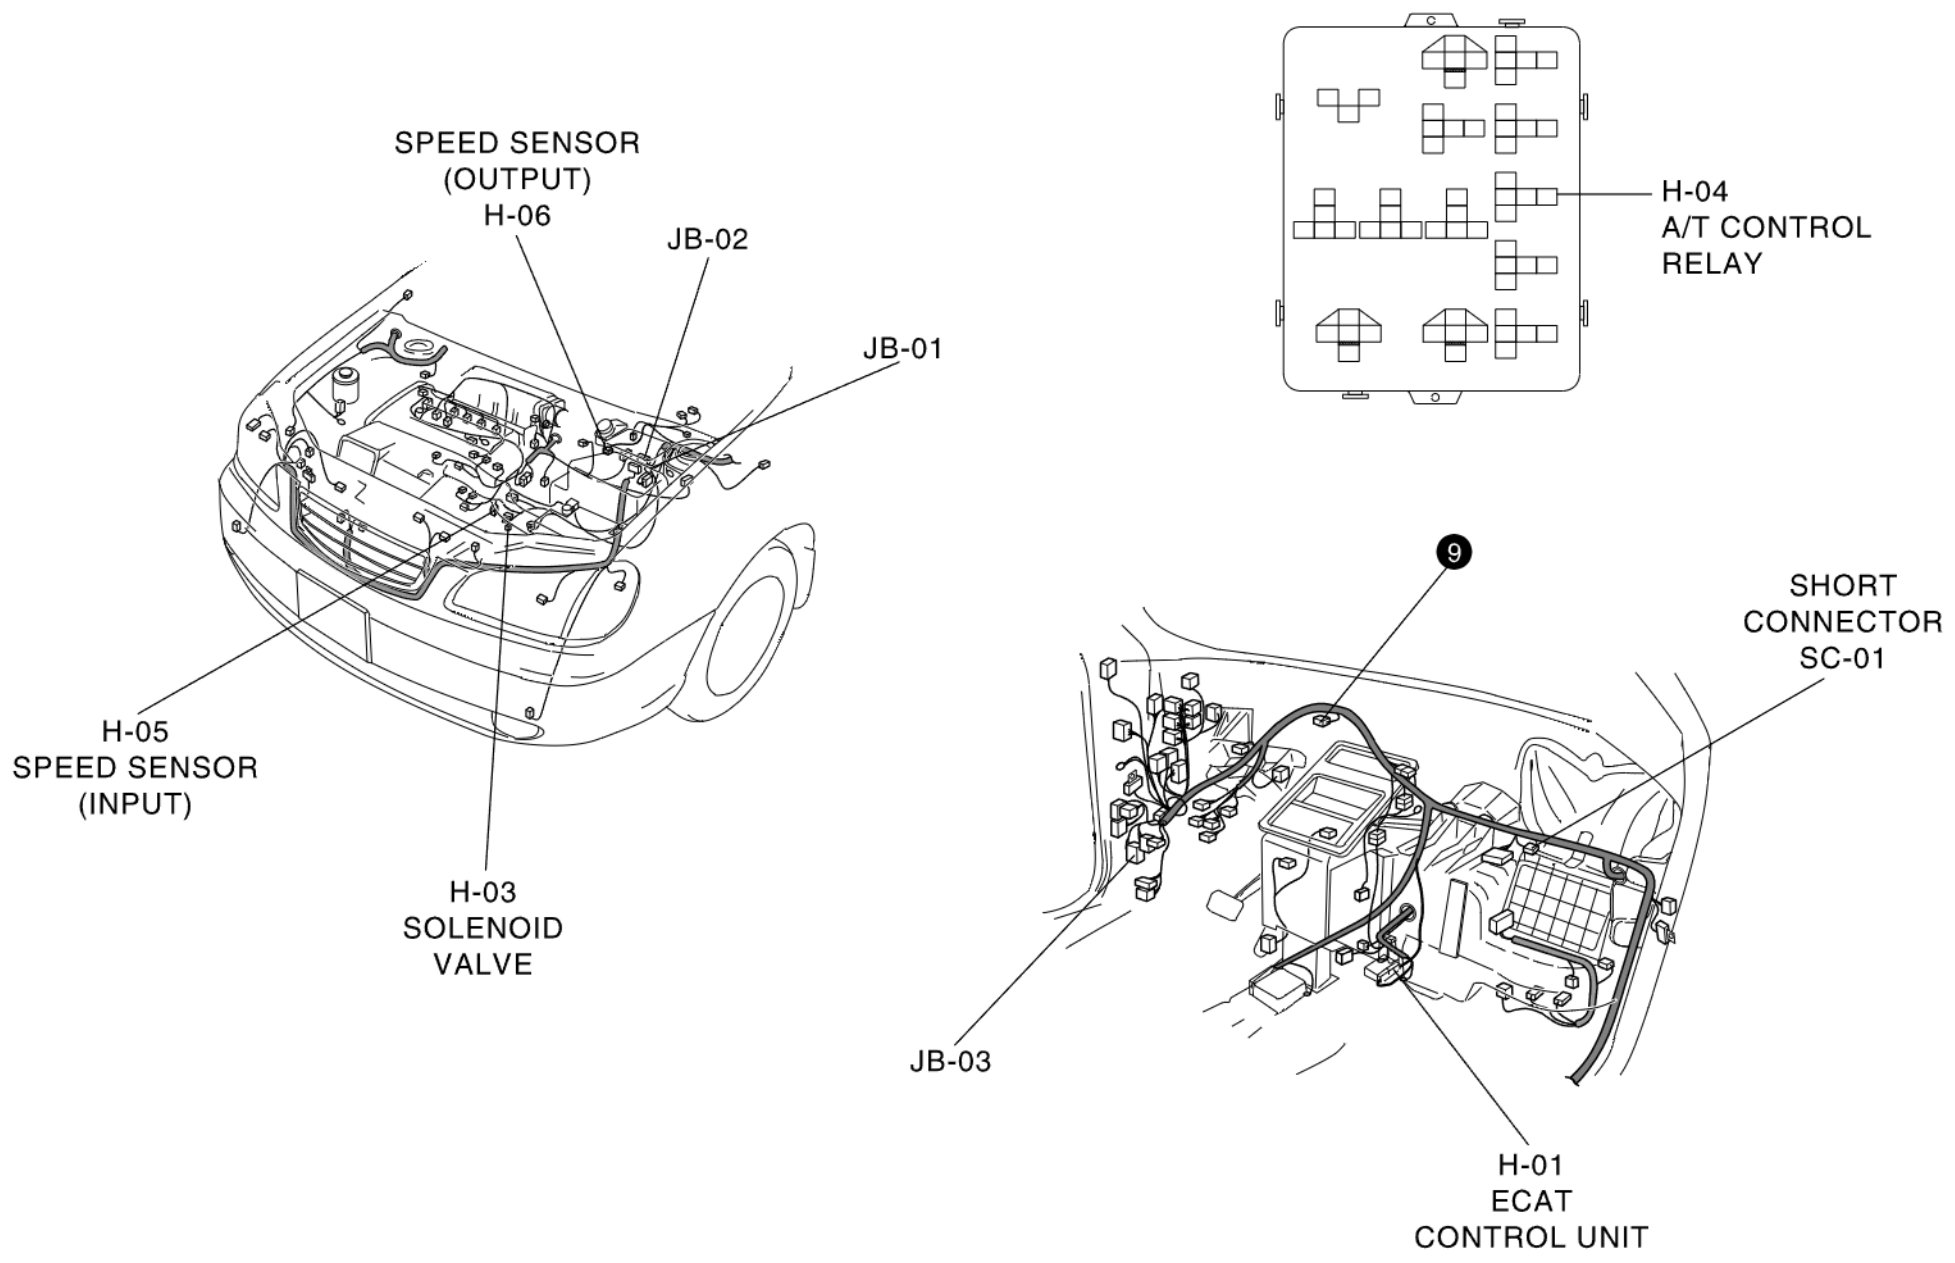


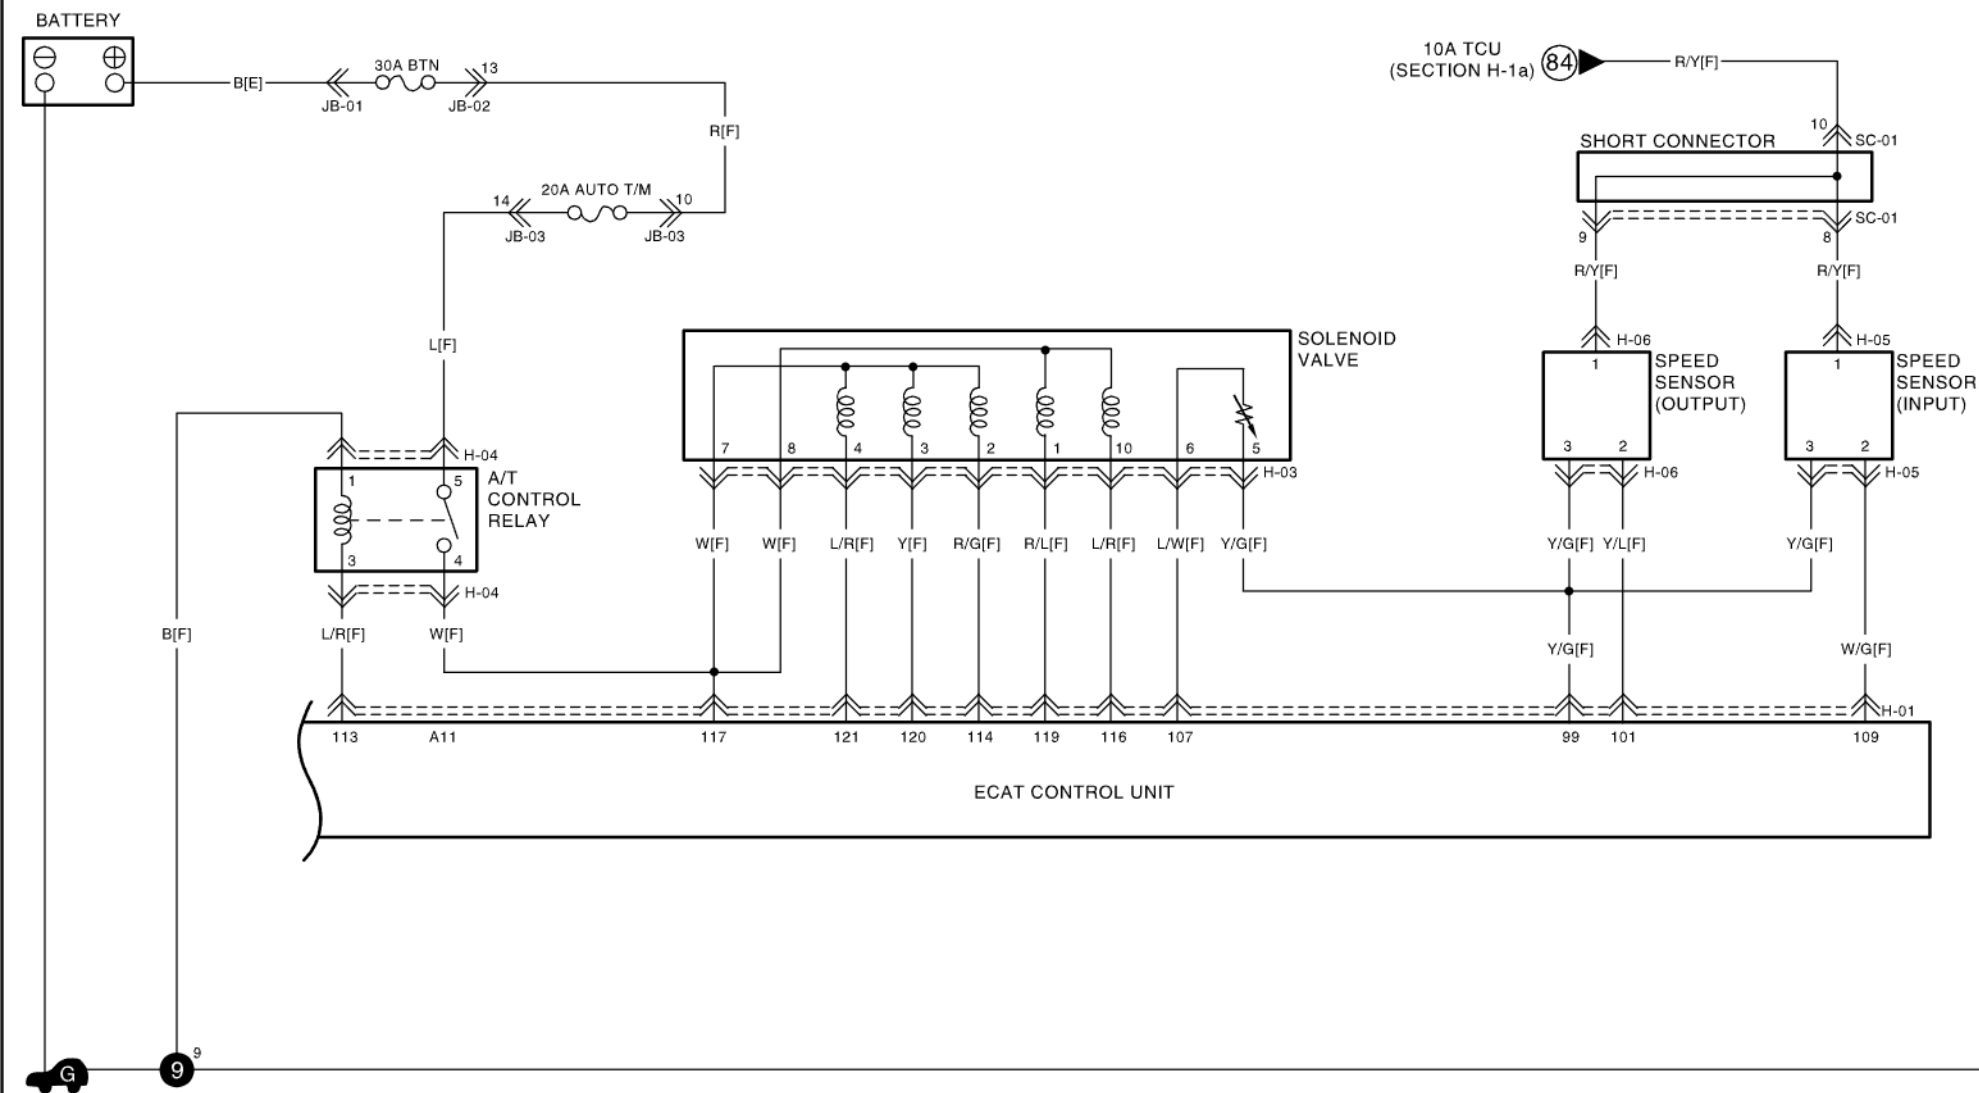


H-01 ECAT CONTROL UNIT [F] Y

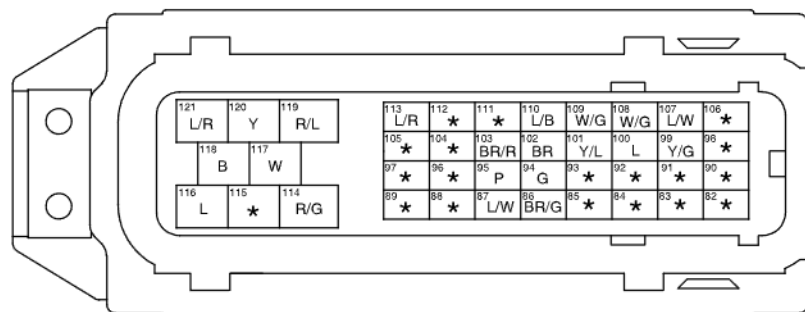


H-03 SOLENOID VALVE [F]

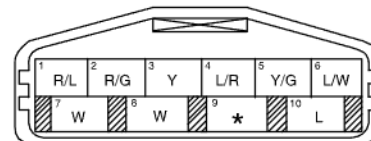


H-06 SPEED SENSOR (OUTPUT) [F]

 



H-04 A/T CONTROL RELAY [F]

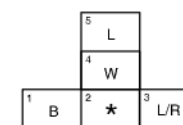


H-05 SPEED SENSOR (INPUT) [F]

 

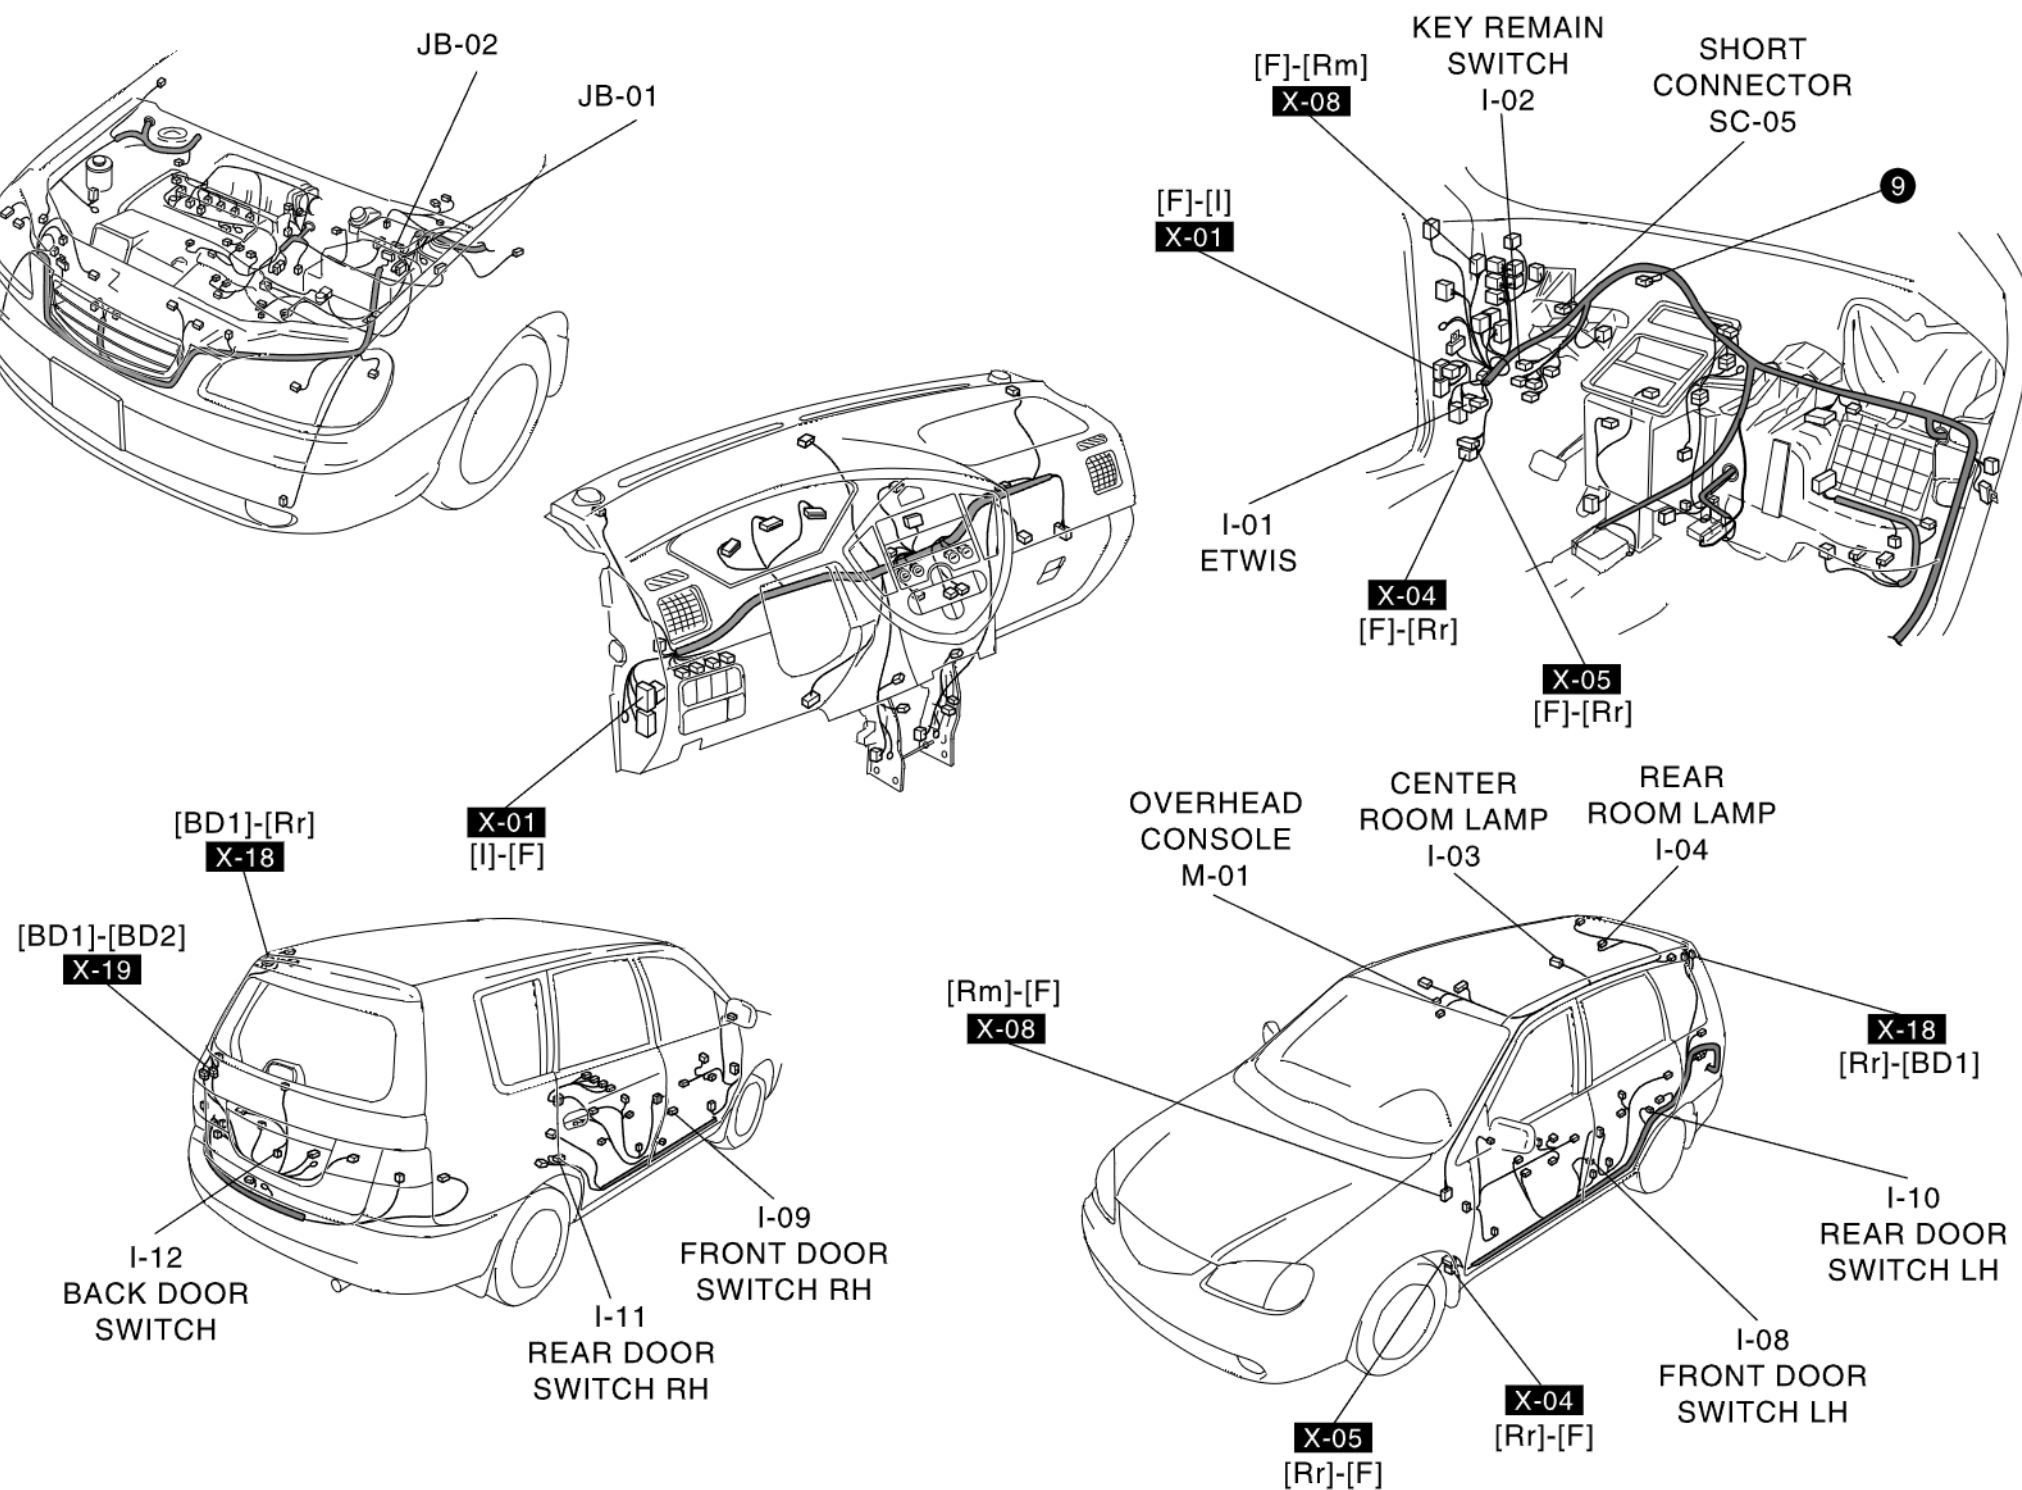

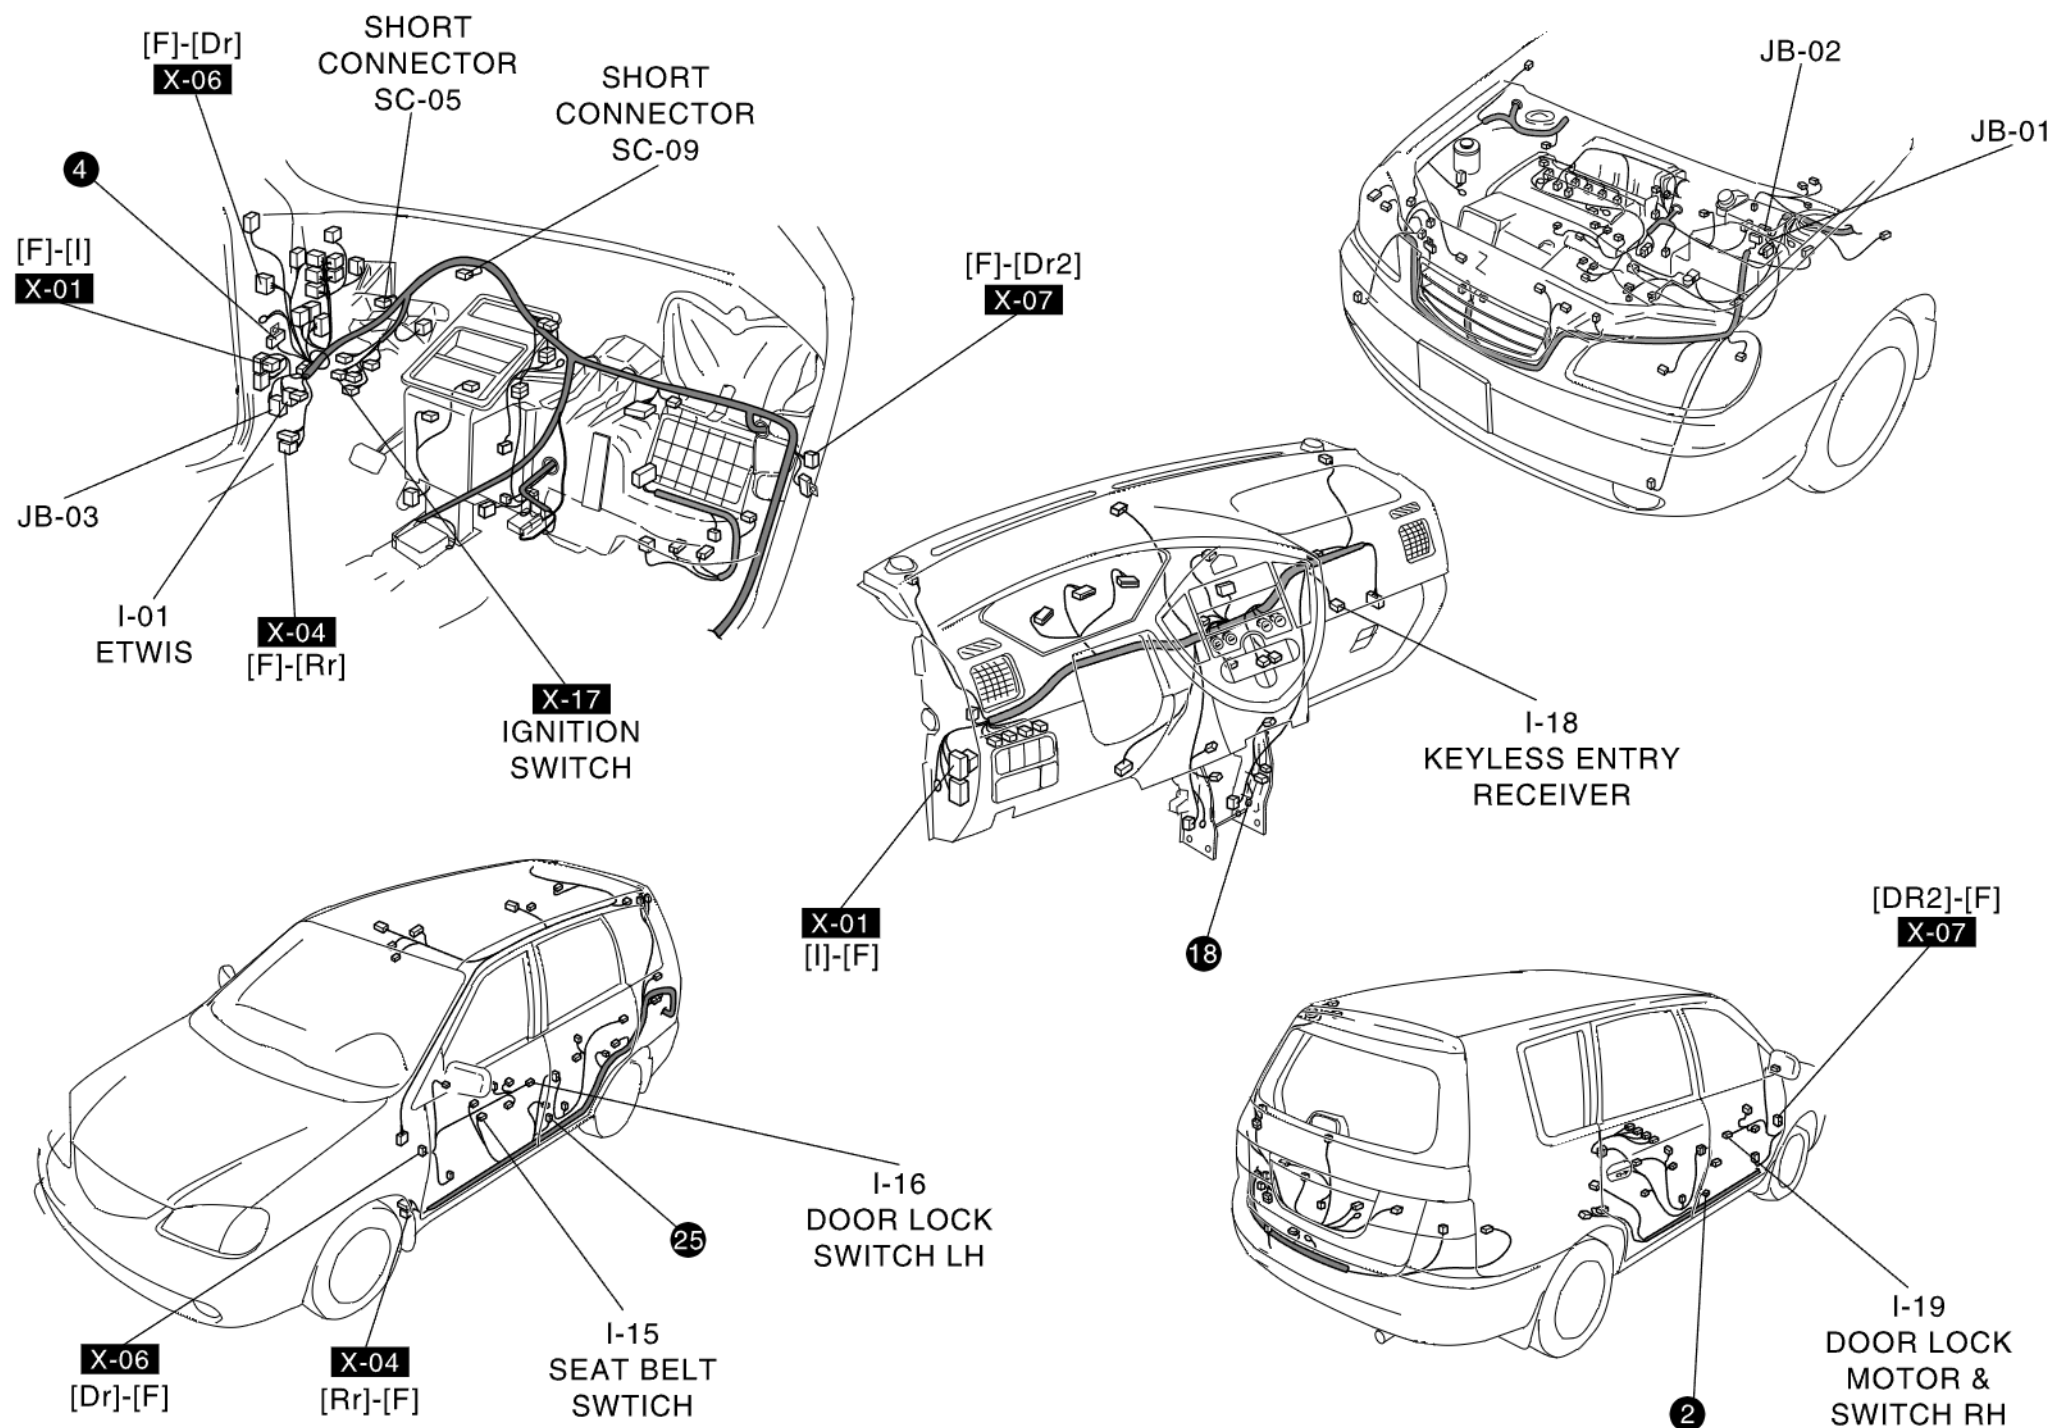

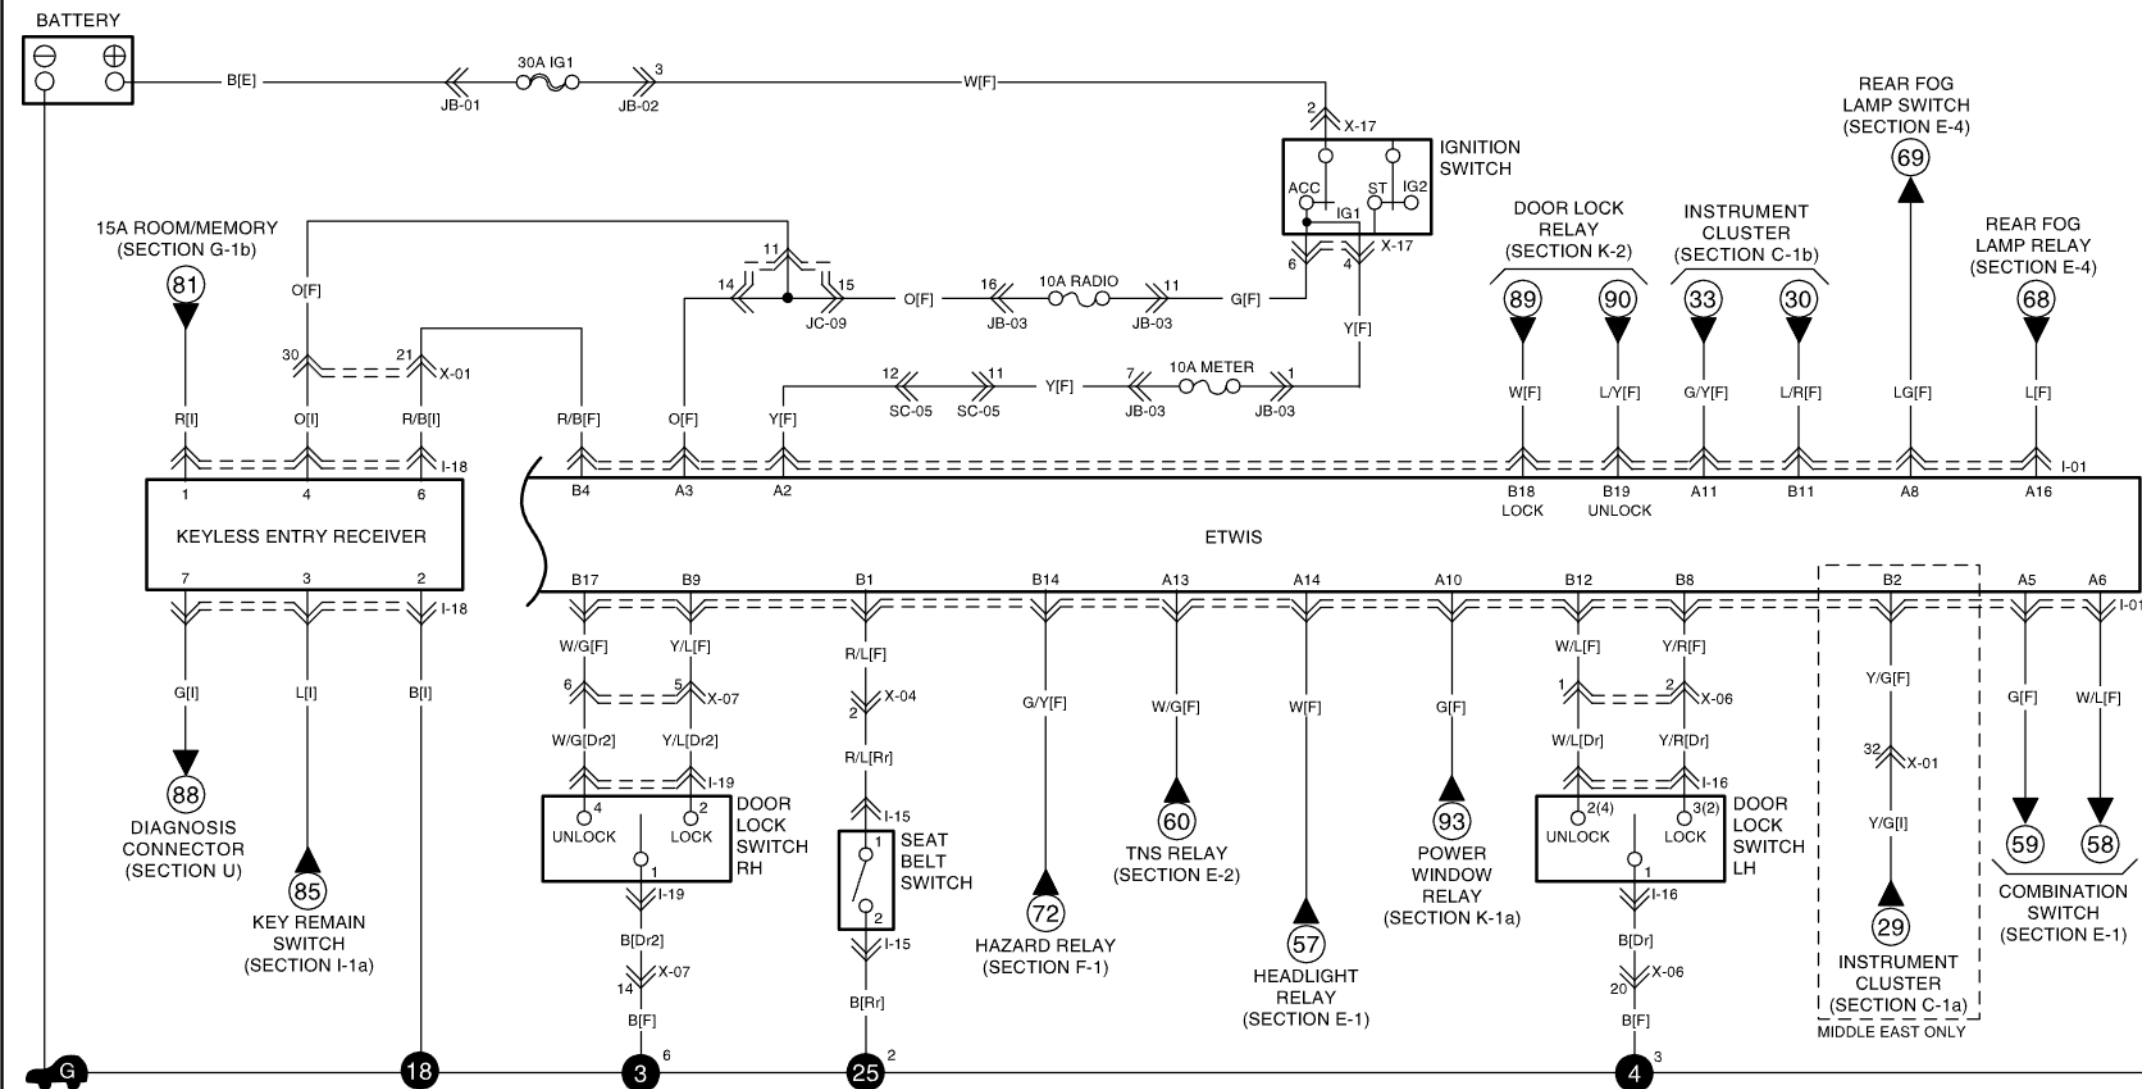

I-01 ETWIS [F]

(A)


1	R	2	Y	3	O	4	L	5	G	6	W/L	7	Y/G	8	LG
9	★	10	G	11	G/Y	12	O	13	W/G	14	W	15	P	16	L

(B)



1	R/L	2	★	3	P	4	R/B	5	W/O	6	Y	7	G	8	Y/R	9	Y/L	10	★
11	L/R	12	W/L	13	★	14	G/Y	15	L	16	L/G	17	W/G	18	W	19	L/Y	20	B

() : EUROPE
< > : MIDDLE EAST

 
I-15 SEAT BELT SWITCH [Rr] B




I-16 DOOR LOCK SWITCH LH [Dr] B

  
KEYLESS
ENTRY
RECEIVER

 
I-18 KEYLESS ENTRY RECEIVER [I]



 
I-19 DOOR LOCK MOTOR & SWITCH RH [Dr2] B

KEYLESS
ENTRY
RECEIVER

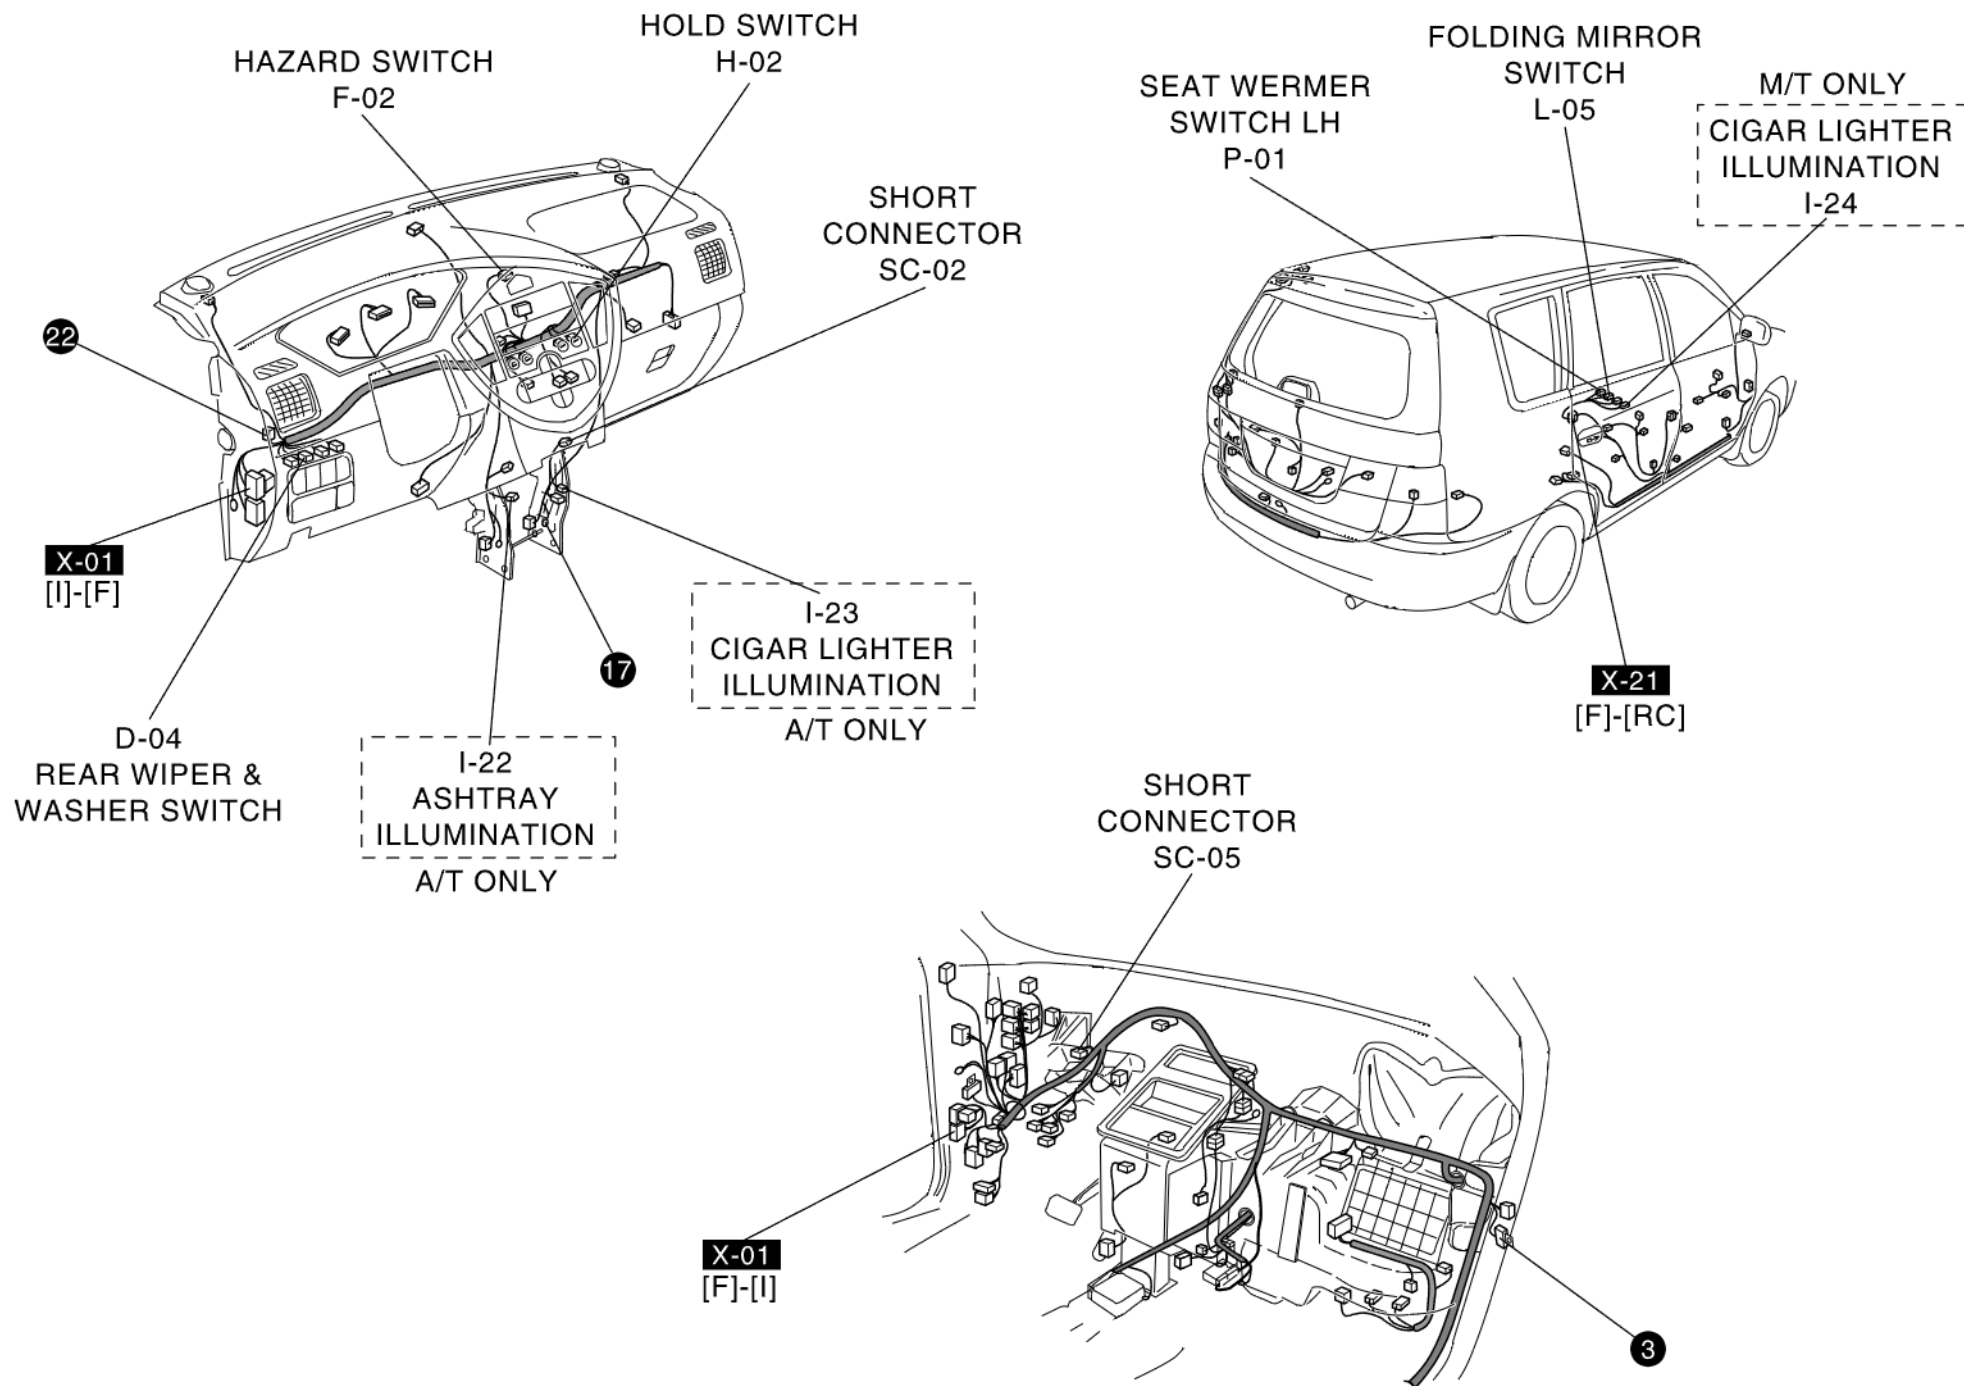

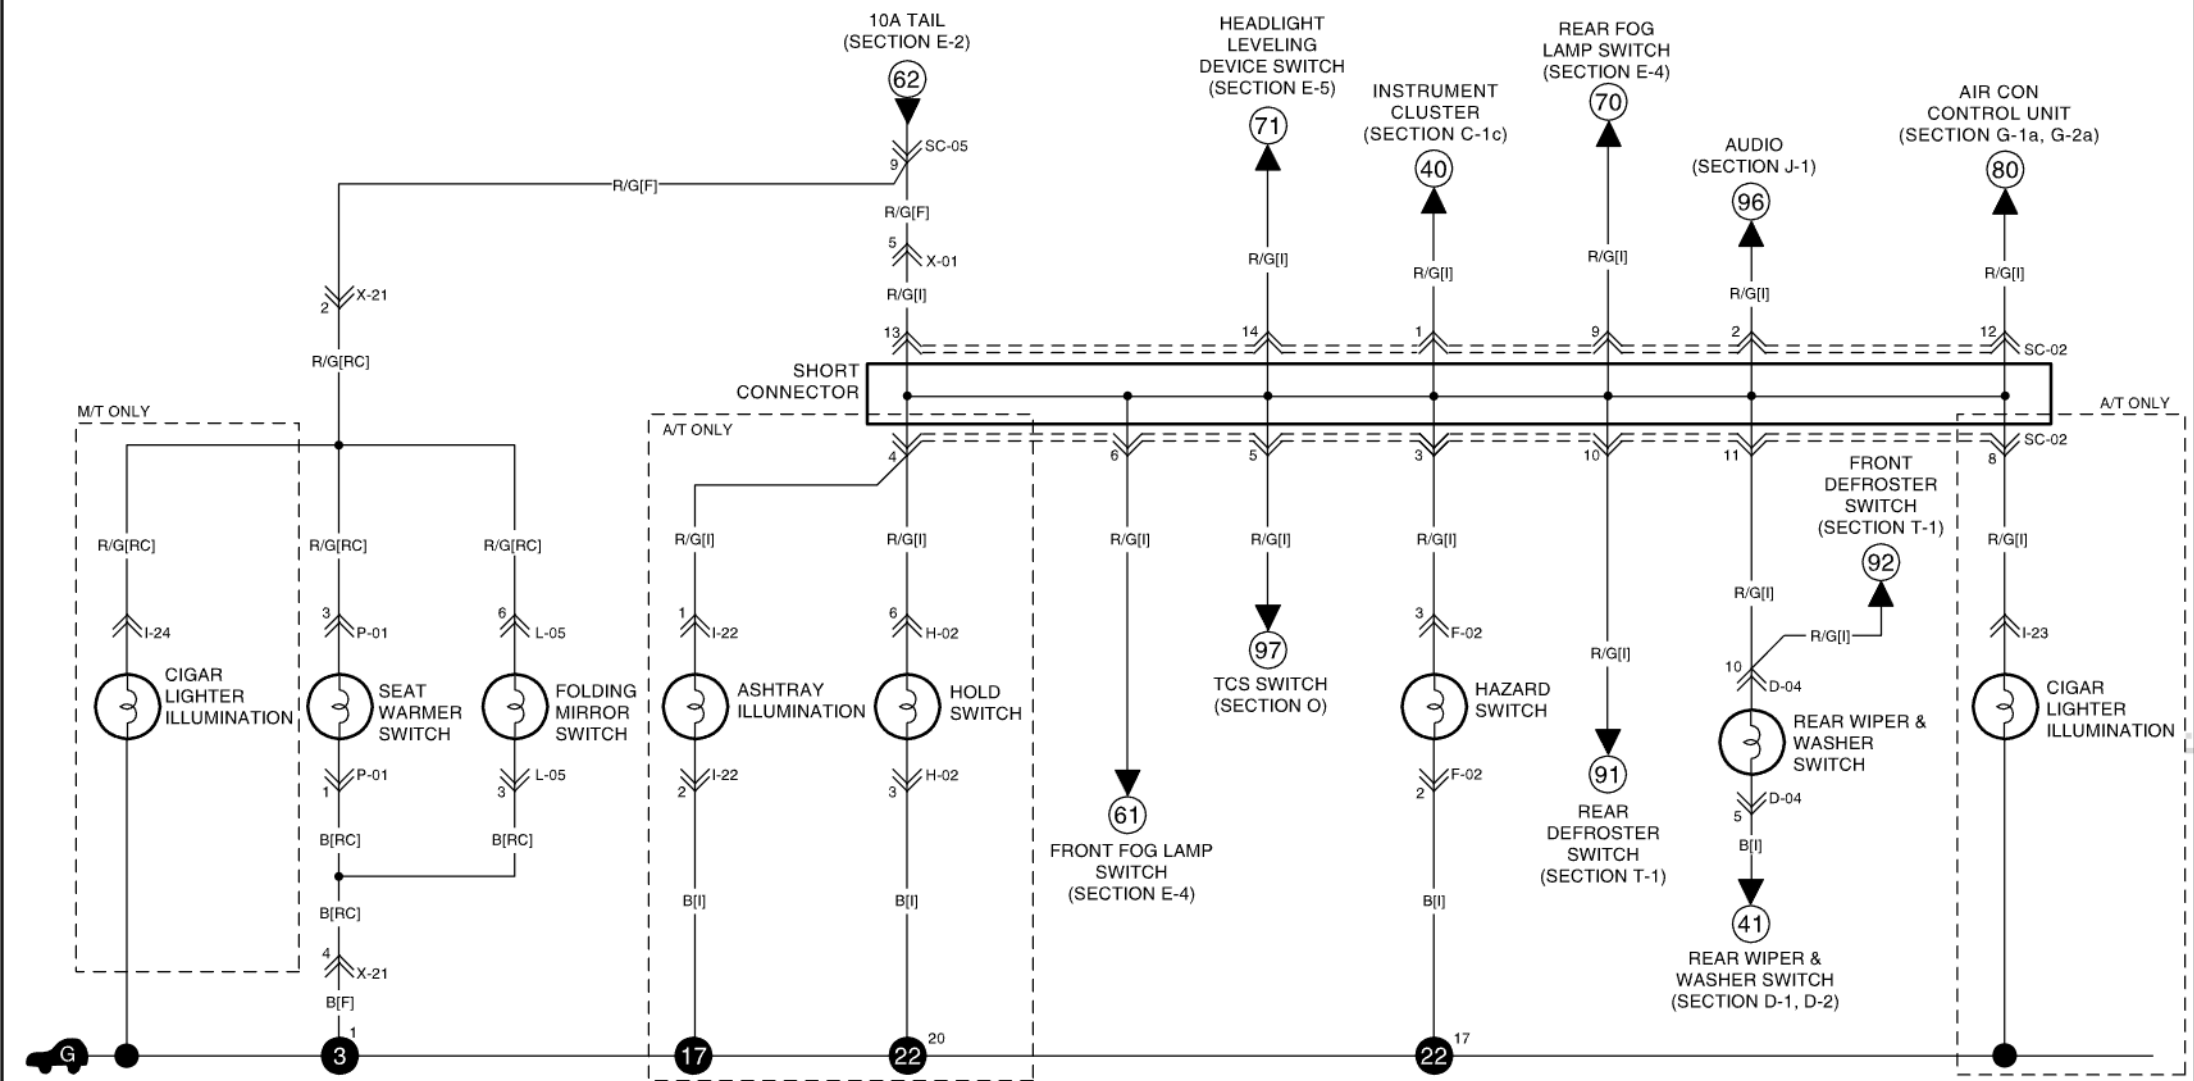

I-22 ASHTRAY ILLUMINATION [I] B

 

A/T ONLY

I-23 CIGAR LIGHTER ILLUMINATION [I]



 
A/T ONLY

I-24 CIGAR LIGHTER ILLUMINATION [RC]




M/T ONLY


D-04 REAR WIPER & WASHER SWITCH [I]




F-02 HAZARD SWITCH [I]

 


L-05 FOLDING MIRROR SWITCH [RC] L

 



P-01 SEAT WARMER SWITCH [RC] Y

 


H-02 HOLD SWITCH [I] Y

 

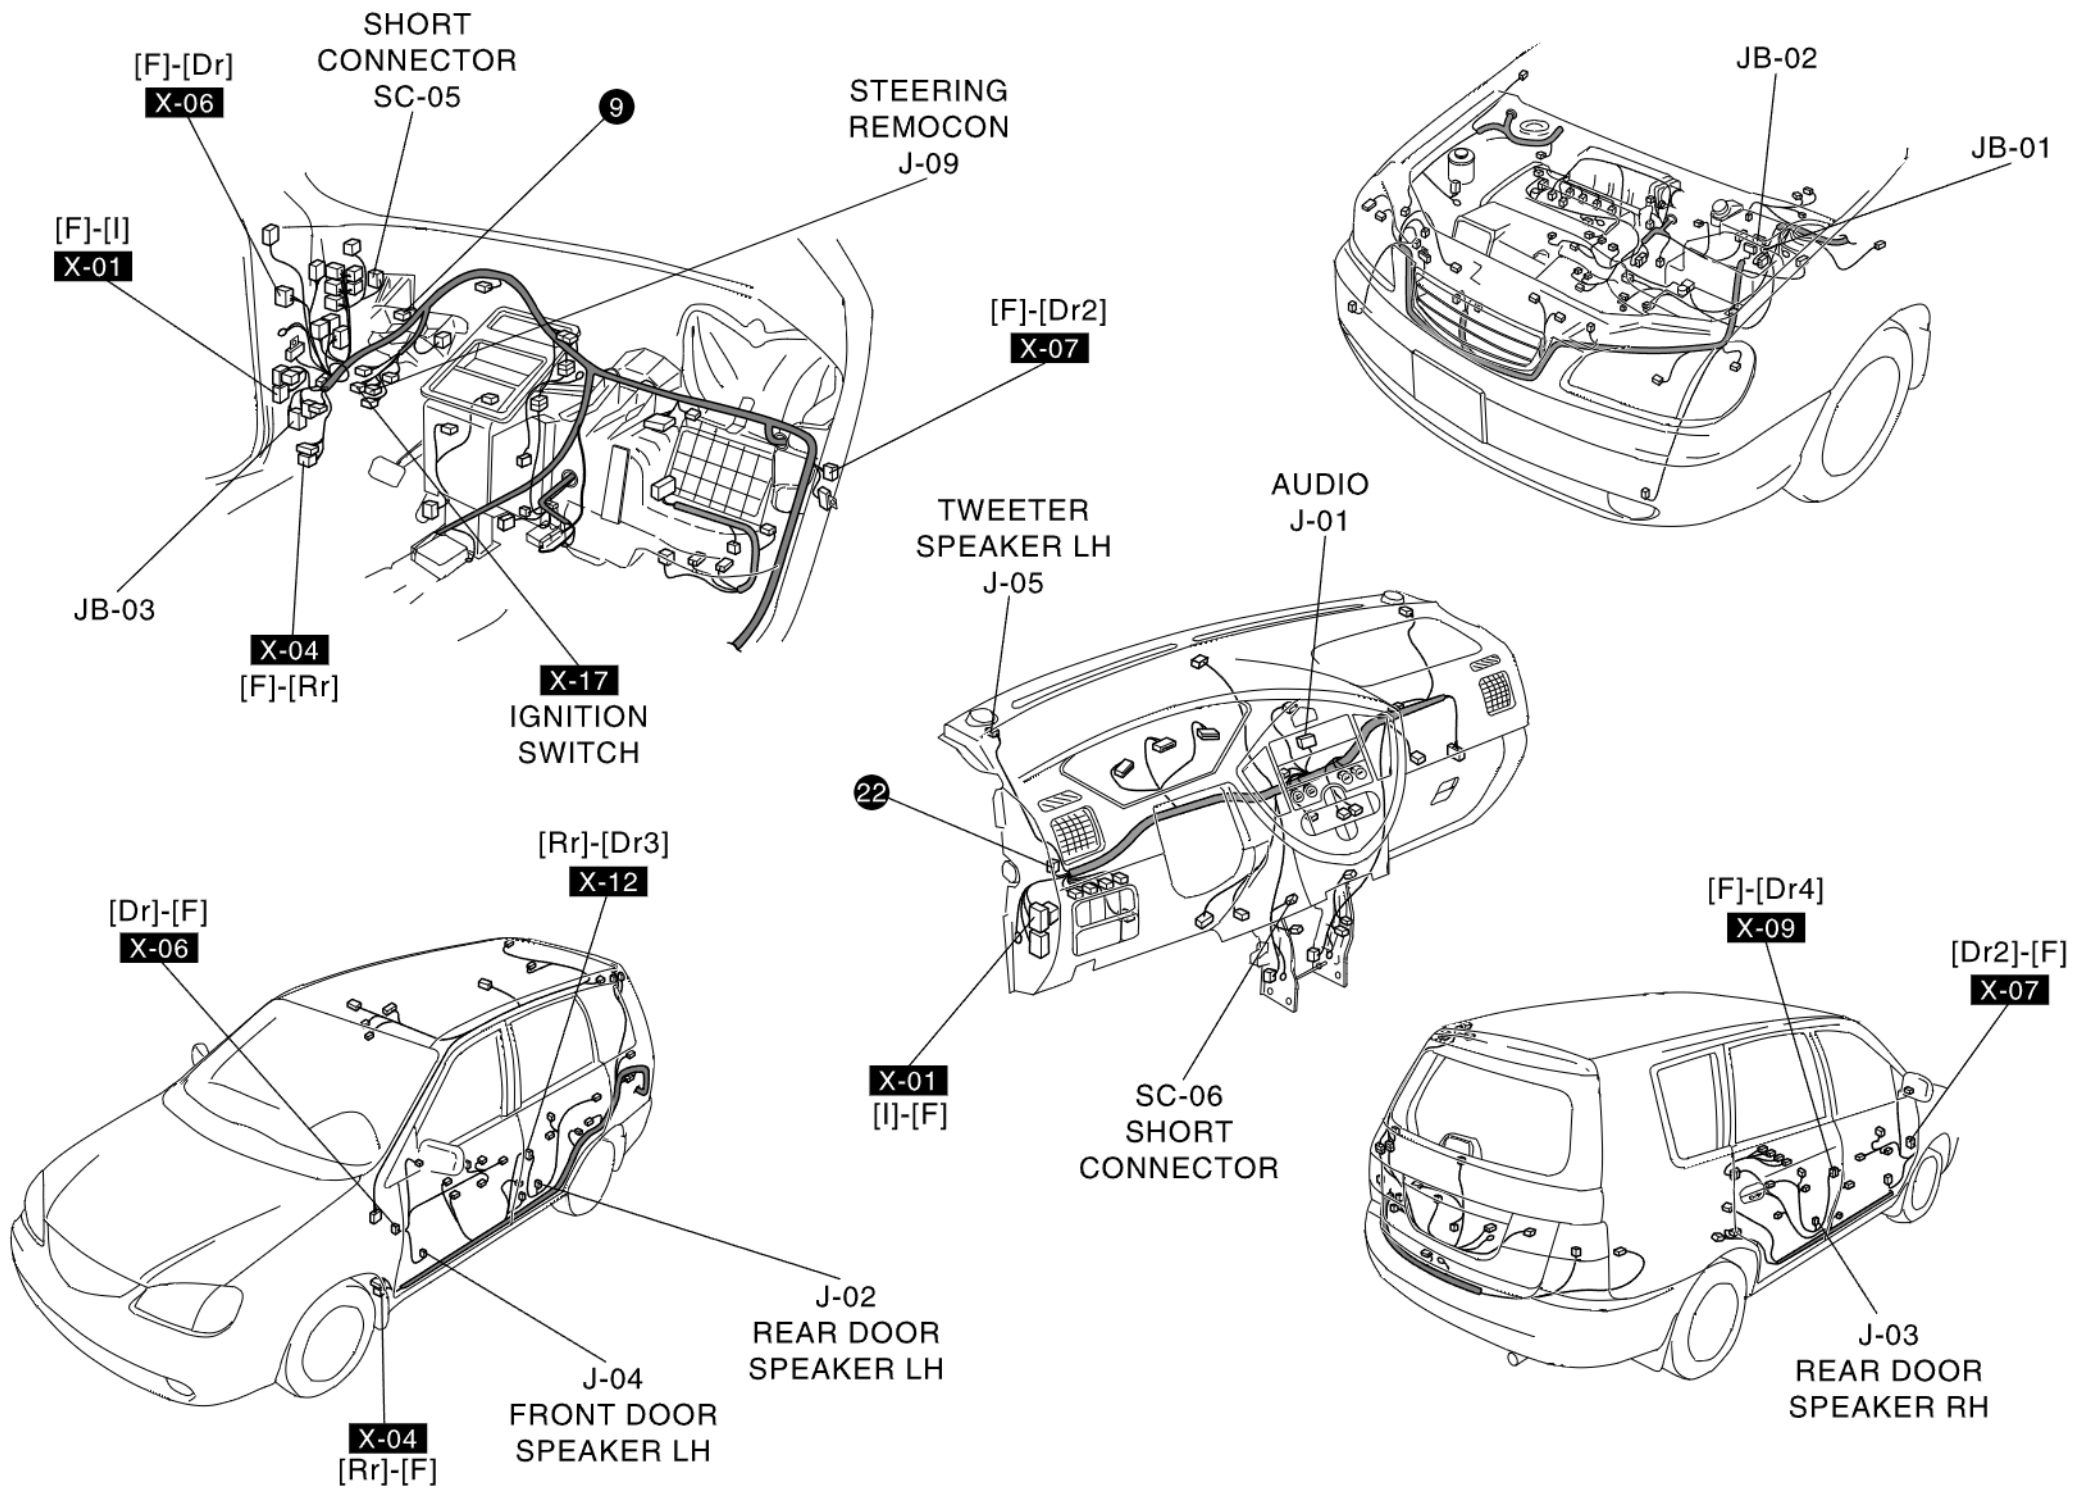

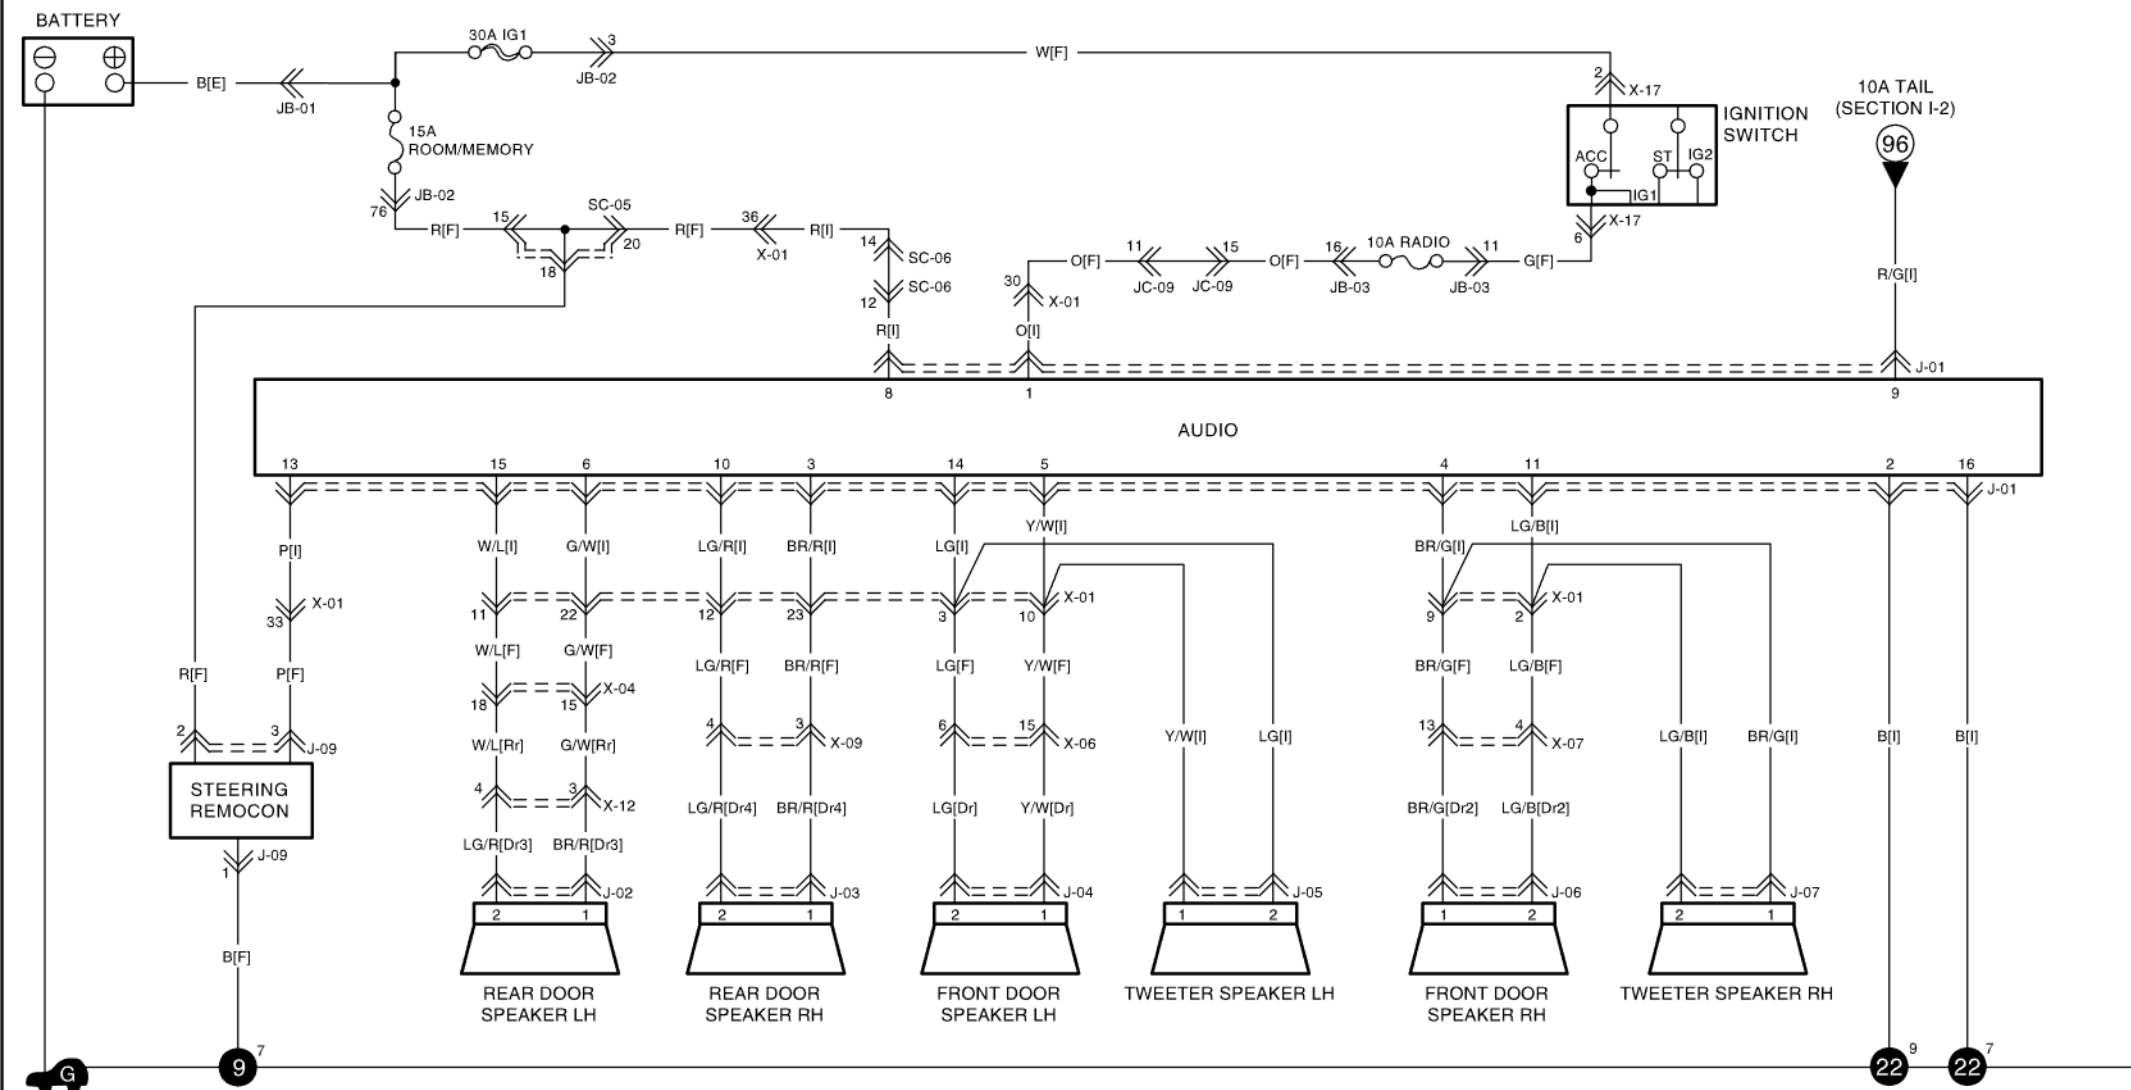

J-01 AUDIO [I]

 

J-02 REAR DOOR SPEAKER LH [Dr3]



 
J-03 REAR DOOR SPEAKER RH [Dr4]



J-04 FRONT DOOR SPEAKER LH [Dr]




J-05 TWEETER SPEAKER LH [I]




J-06 FRONT DOOR SPEAKER RH [Dr2]



 J-07 TWEETER SPEAKER RH [I]




J-09 STEERING REMOCON [F]

 


JUNCTION BLOCK

JB-02 JUNCTION BLOCK [F] B

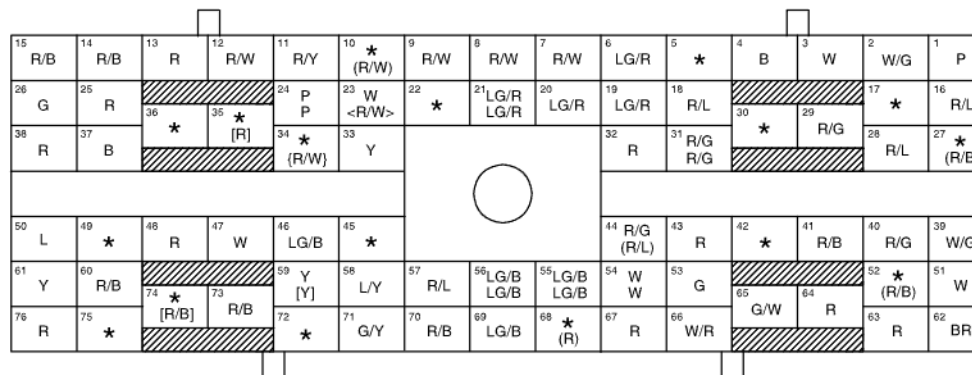


< > : A/T
[] : ABS
() : EUROPE
{ } : SEAT WARMER

< > : A/T
() : ABS
[] : EUROPE

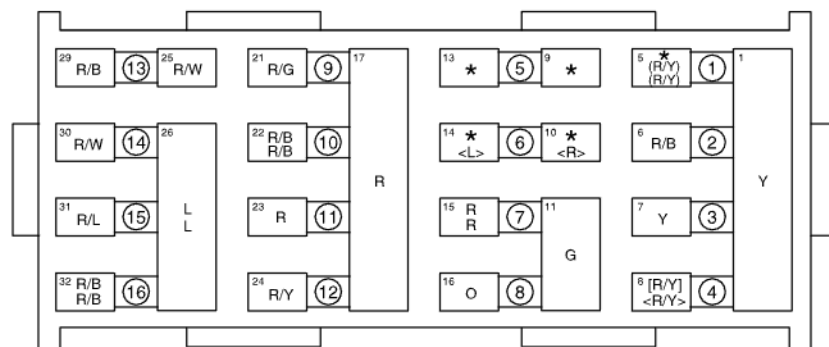



- | | |
|-----------------|---------------------|
| ① 10A ABS | ⑫ 15A FRT DEF |
| ② 15A A/BAG | ⑬ 10A MIRROR HEATER |
| ③ 10A METER | ⑭ 10A TURN LAMP |
| ④ 10A TCU | ⑮ 15A WIPER(FRT) |
| ⑤ * | ⑯ 15A WIPER(RR) |
| ⑥ 20A AUTO T/M | |
| ⑦ 15A CIGAR | |
| ⑧ 10A RADIO | |
| ⑨ 20A P/SOCKET | |
| ⑩ 10A ECU | |
| ⑪ 15A STOP LAMP | |

< > : A/T

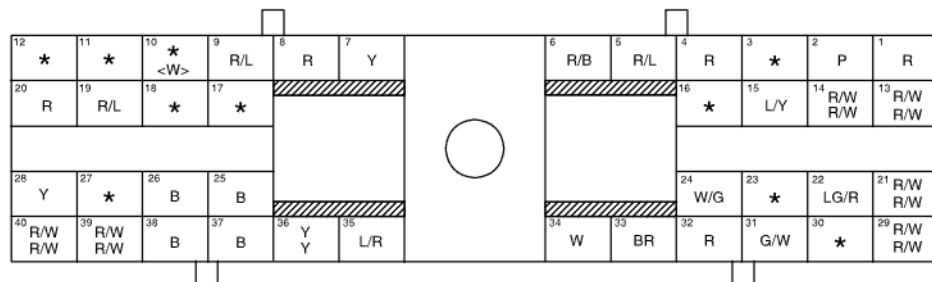

< > :FATC

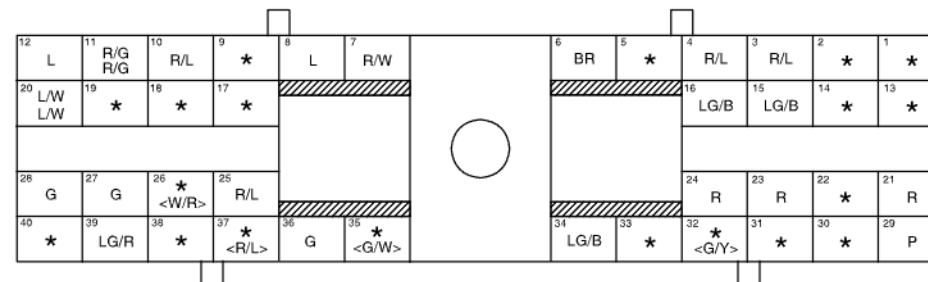


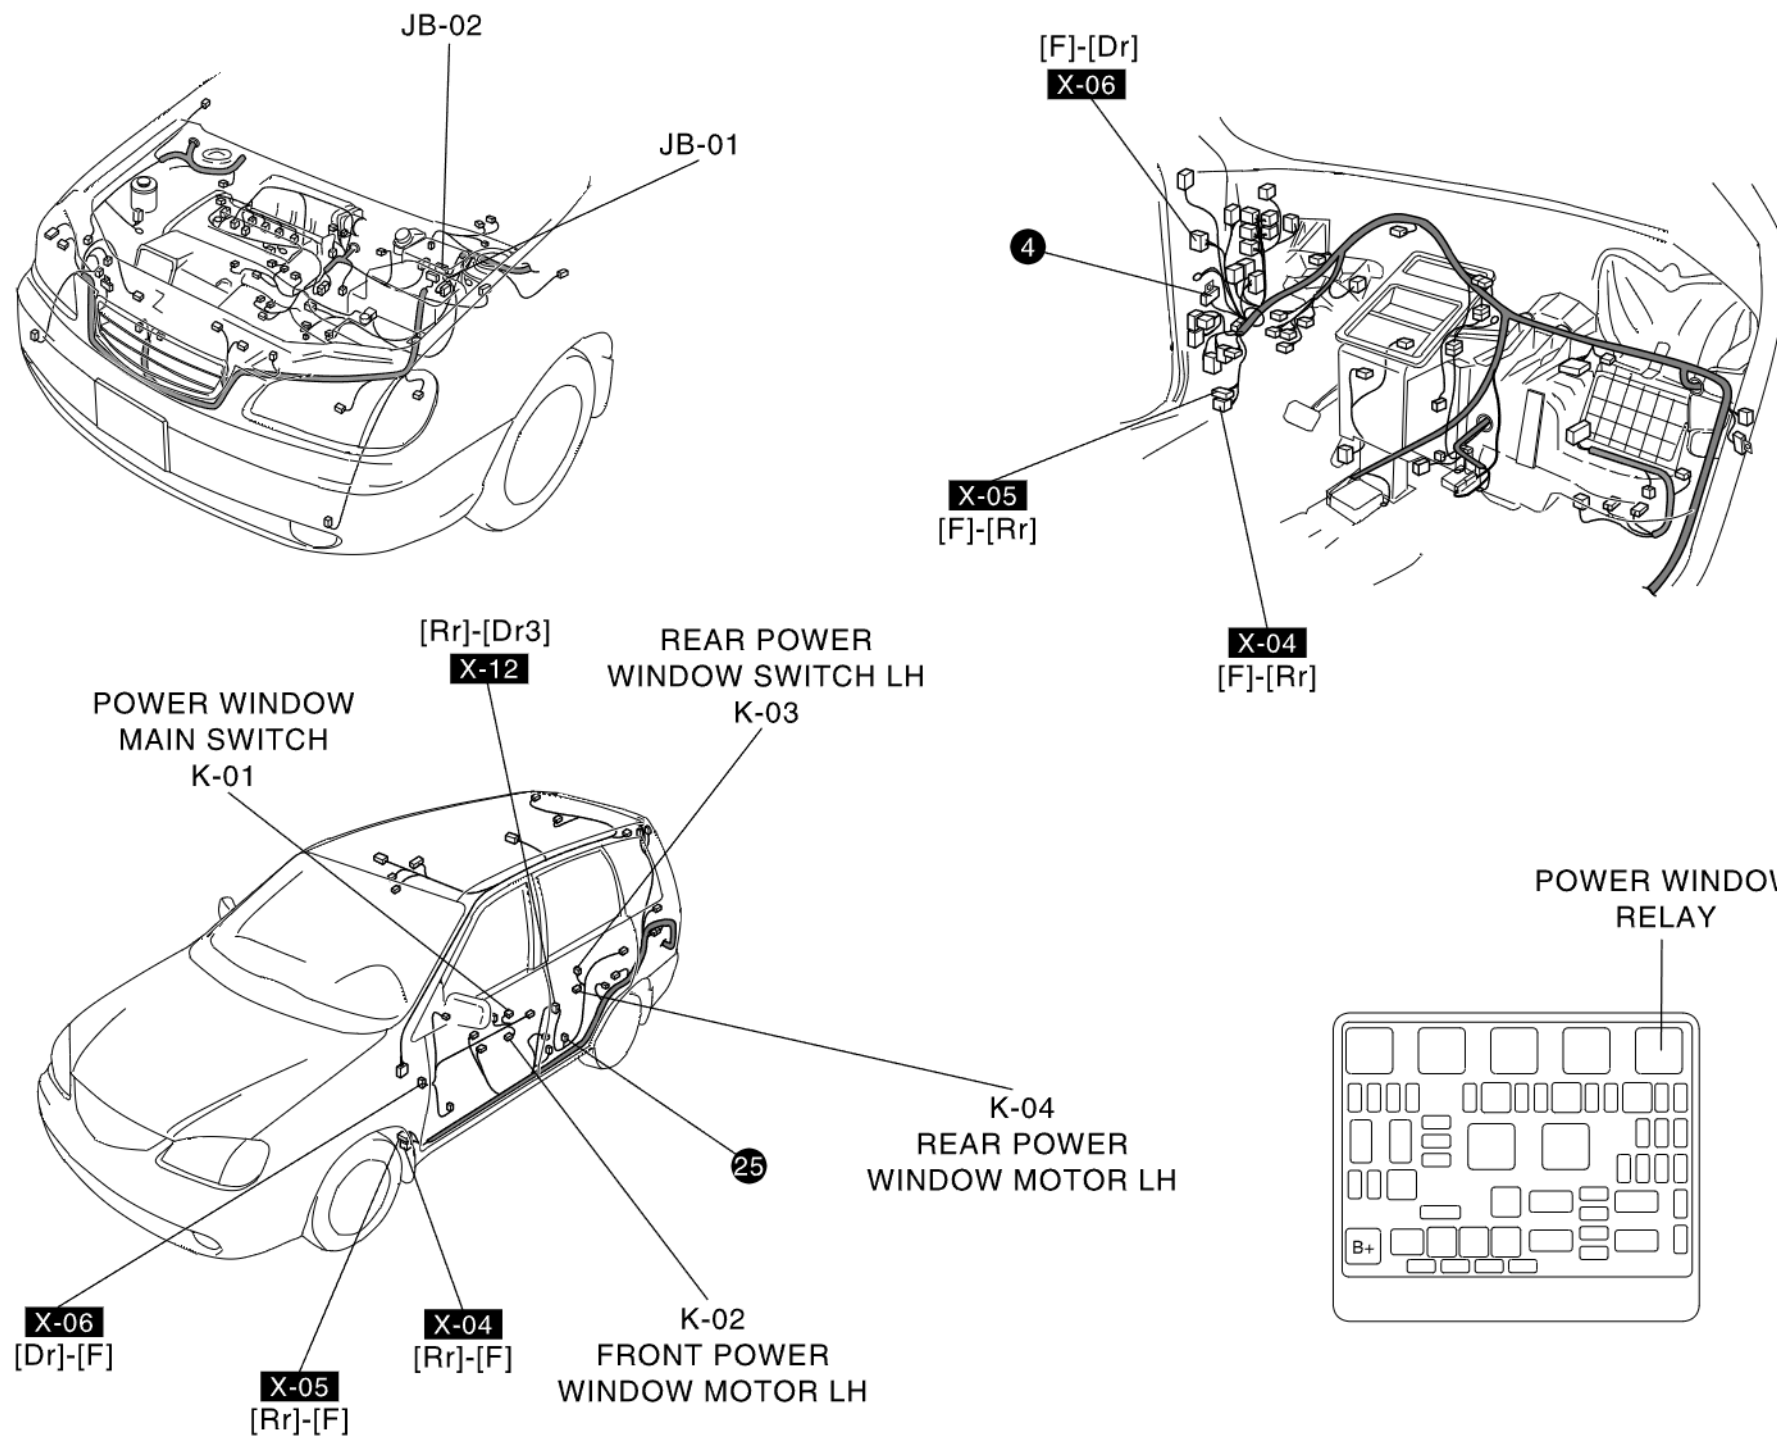





K-04 REAR POWER WINDOW MOTOR LH [Dr3] B



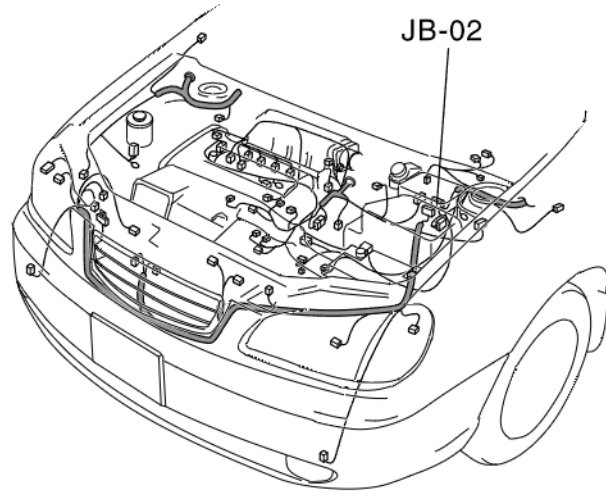


[F]-[Dr]
X-06

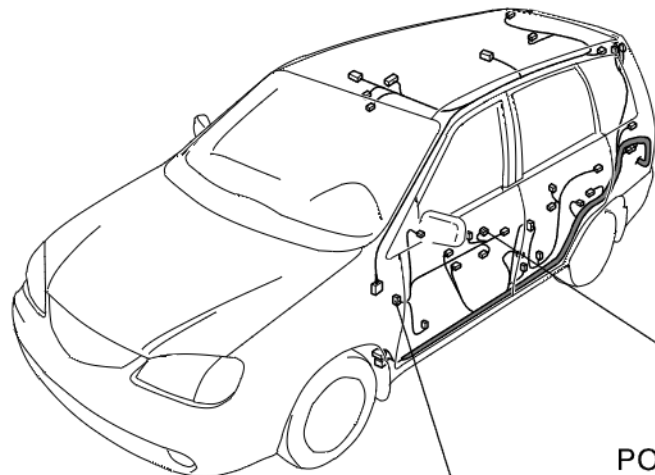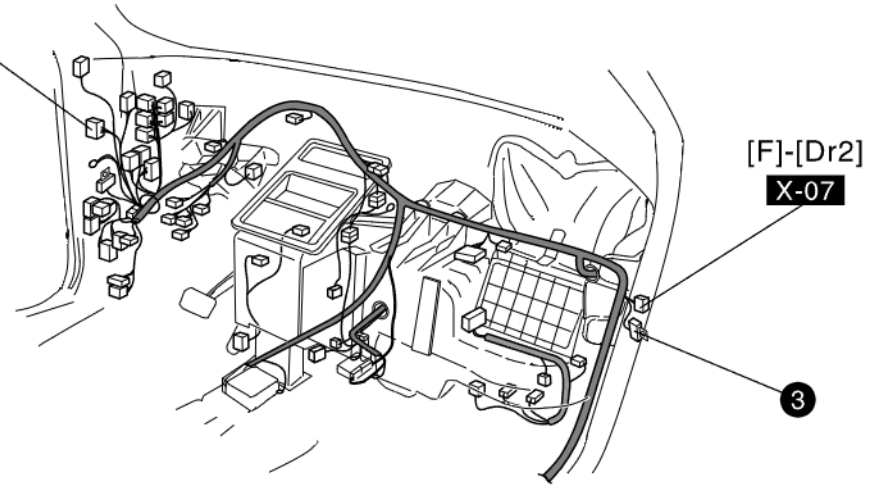

K-01
POWER WINDOW
MAIN SWITCH

REAR POWER
WINDOW SWITCH RH
K-07


FRONT POWER
WINDOW SWITCH RH
K-05

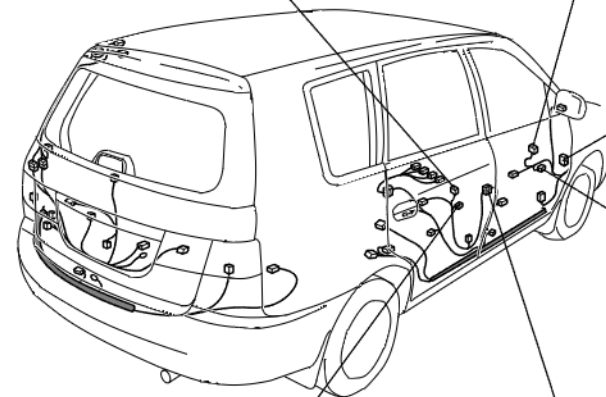

K-06
FRONT POWER
WINDOW MOTOR RH

K-08
REAR POWER
WINDOW MOTOR RH


X-09
[F]-[Dr4]

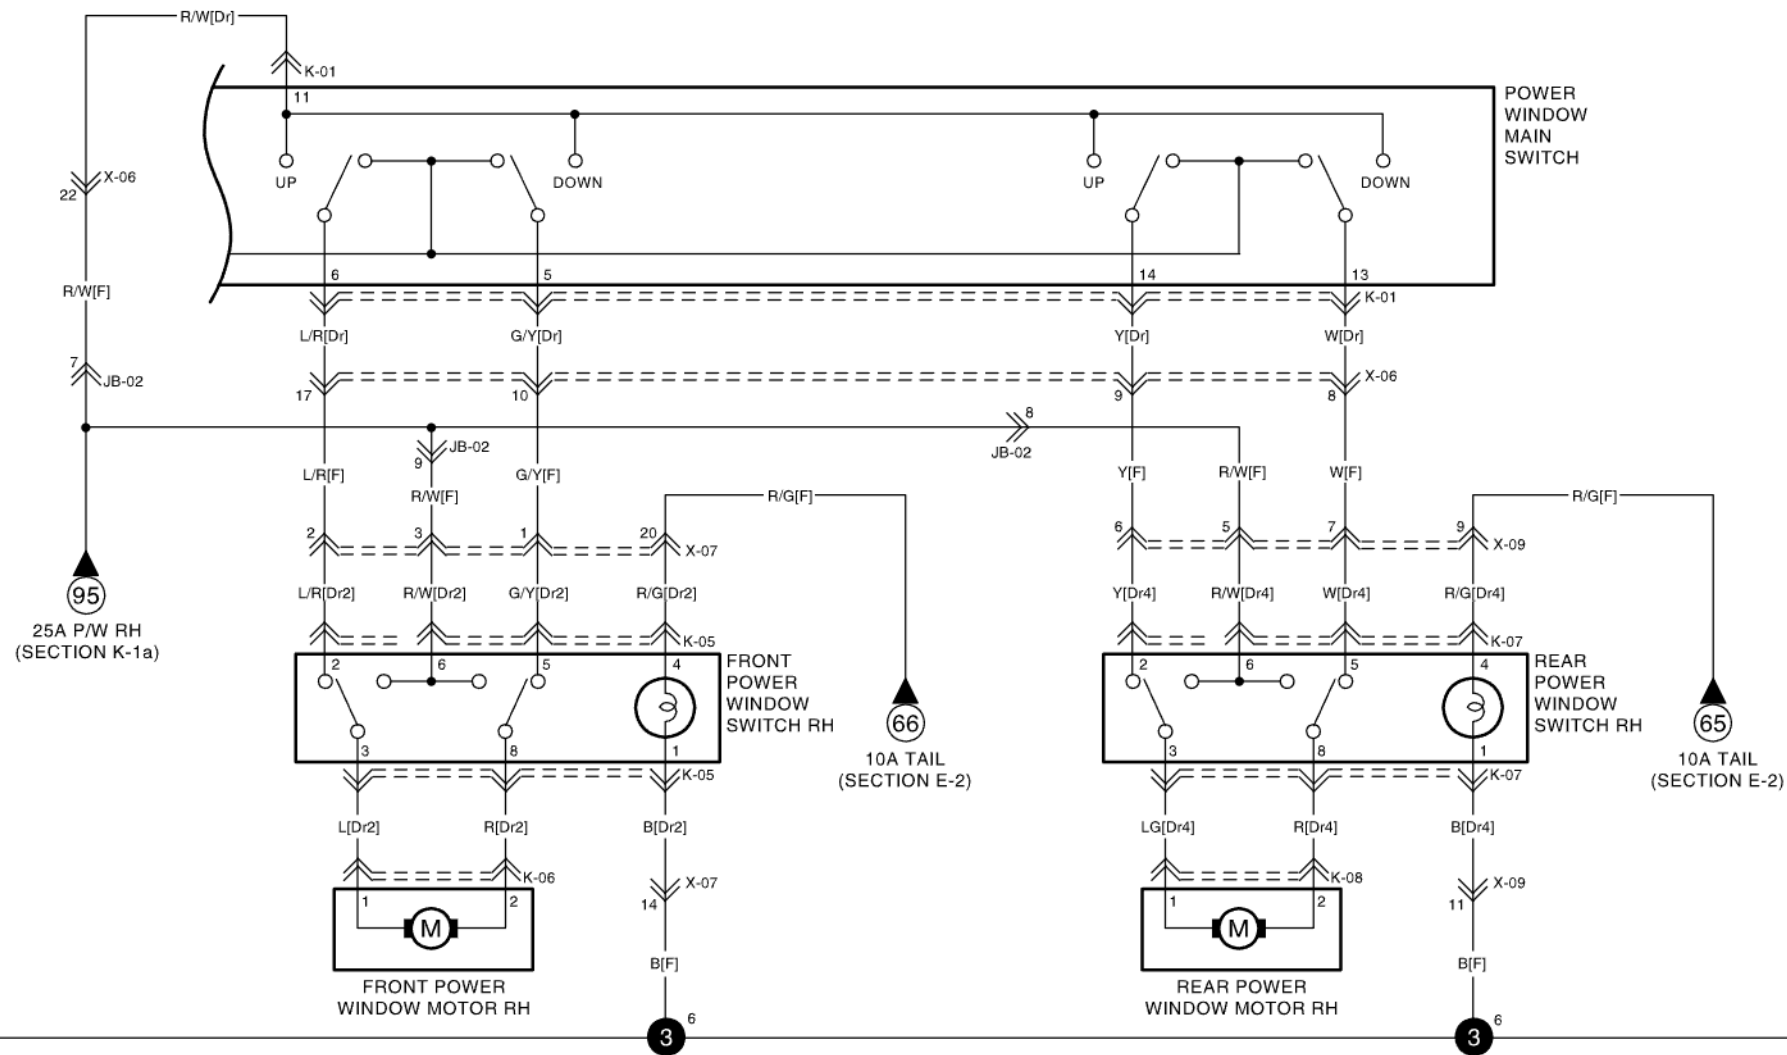


K-01 POWER WINDOW MAIN SWITCH [Dr]



 
K-05 FRONT POWER WINDOW SWITCH RH [Dr2]



 
K-06 FRONT POWER WINDOW MOTOR RH [Dr2] B





K-07 REAR POWER WINDOW SWITCH RH [Dr4]

 


K-08 REAR POWER WINDOW MOTOR RH [Dr4] B

 

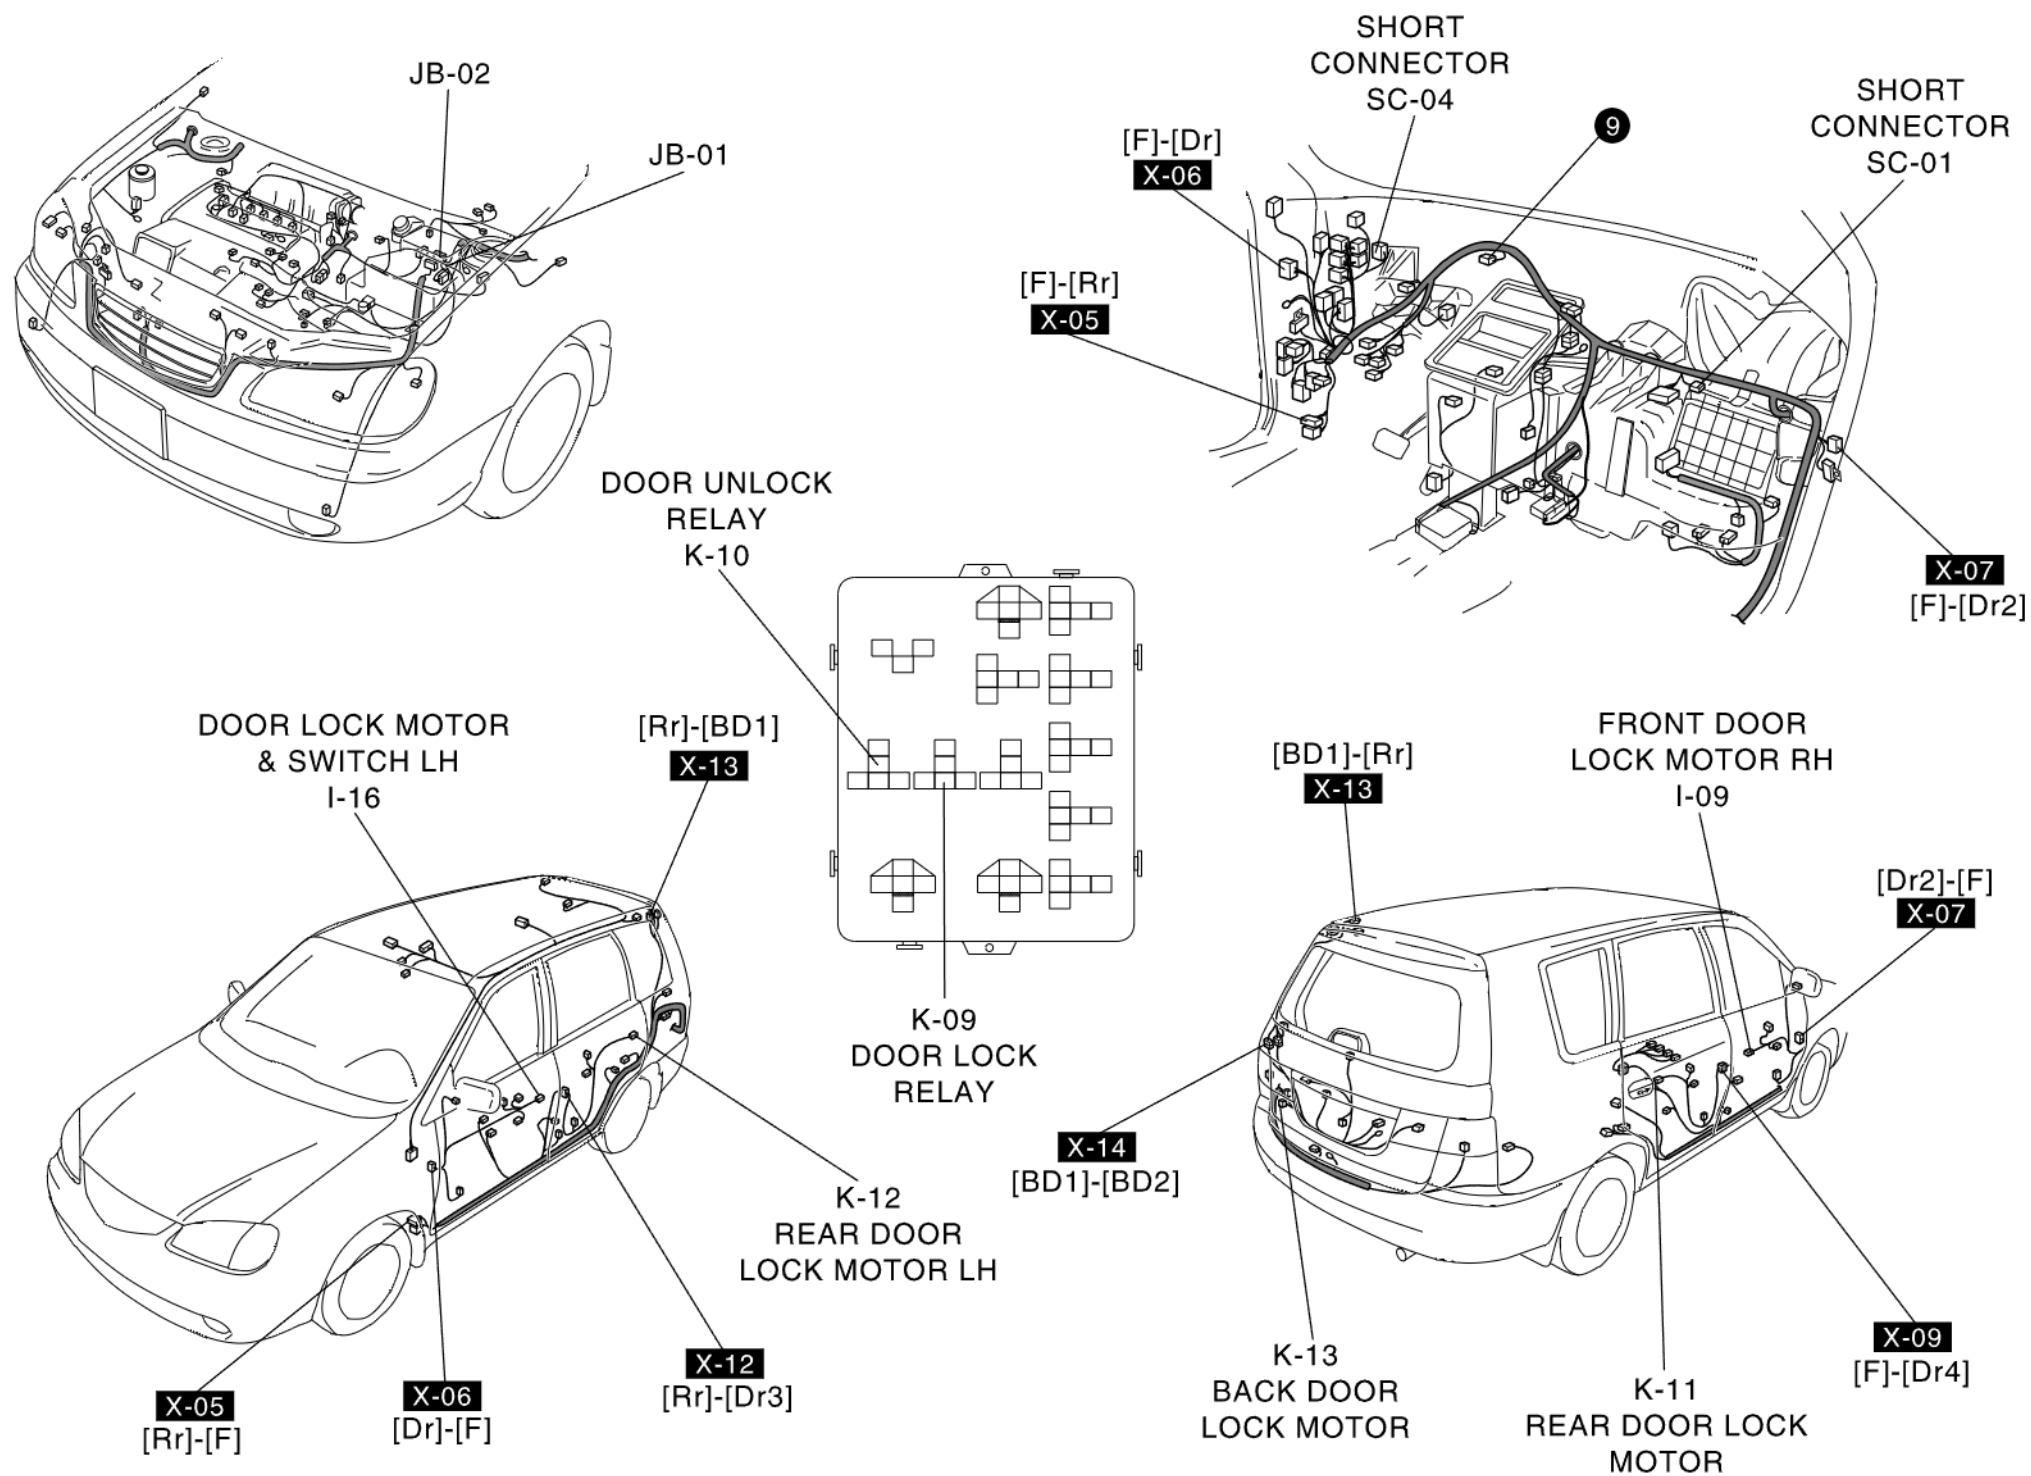


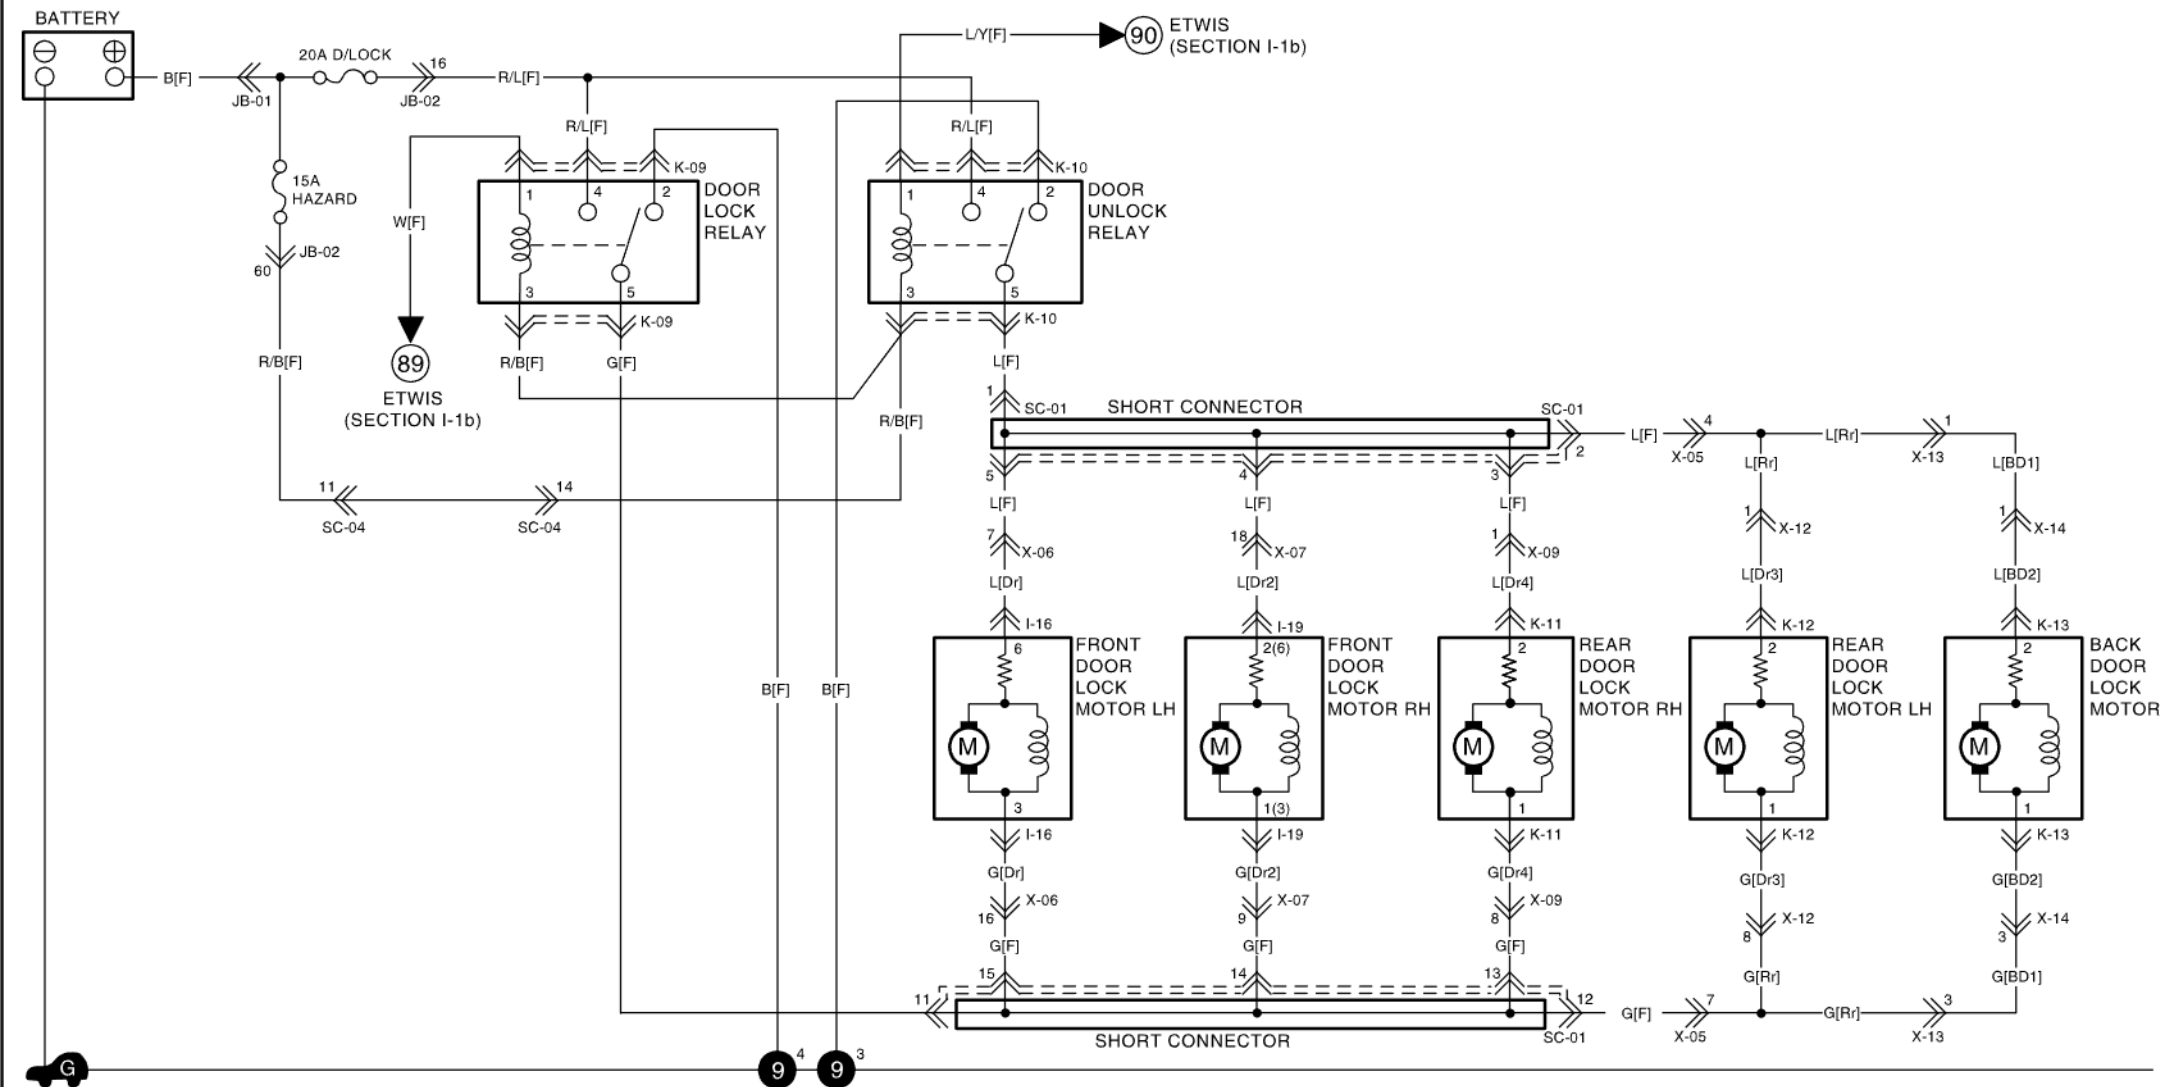


K-09 DOOR LOCK RELAY [F]

 


K-10 DOOR UNLOCK RELAY [F]

 


K-11 REAR DOOR LOCK MOTOR RH [Dr4] B

 


K-12 REAR DOOR LOCK MOTOR LH [Dr3] B

 



K-13 BACK DOOR LOCK MOTOR [BD2]



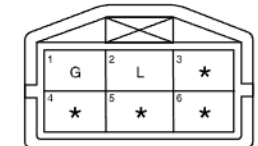


I-16 DOOR LOCK MOTOR & SWITCH LH [Dr] B

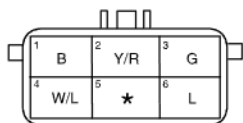

I-19 FRONT DOOR LOCK MOTOR RH [Dr2] B

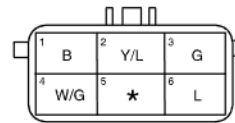 KEYLESS
ENTRY
RECEIVER

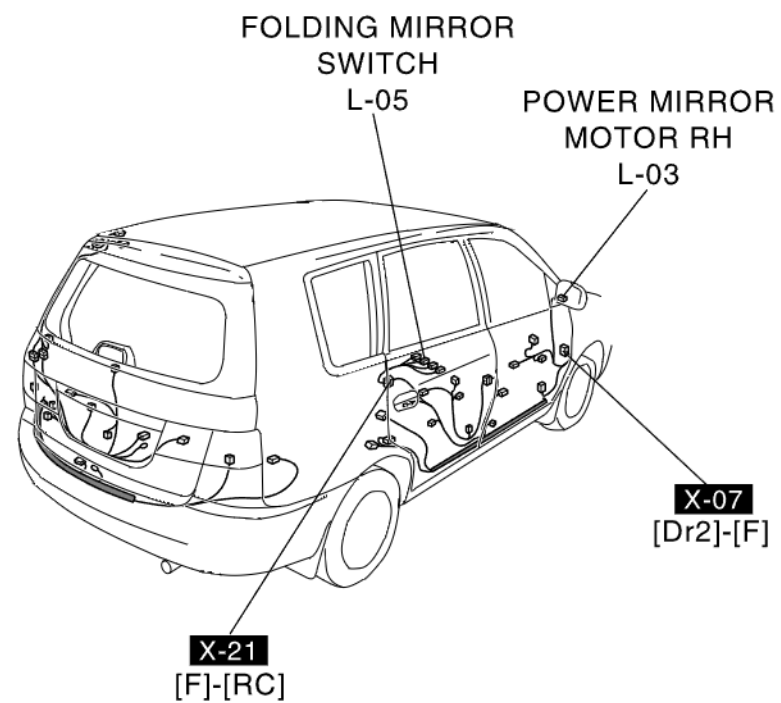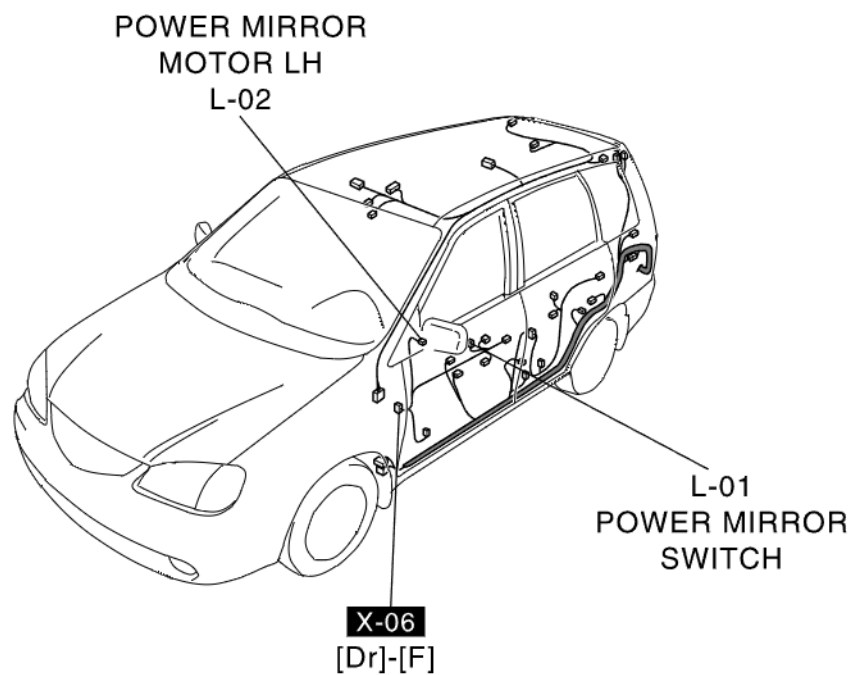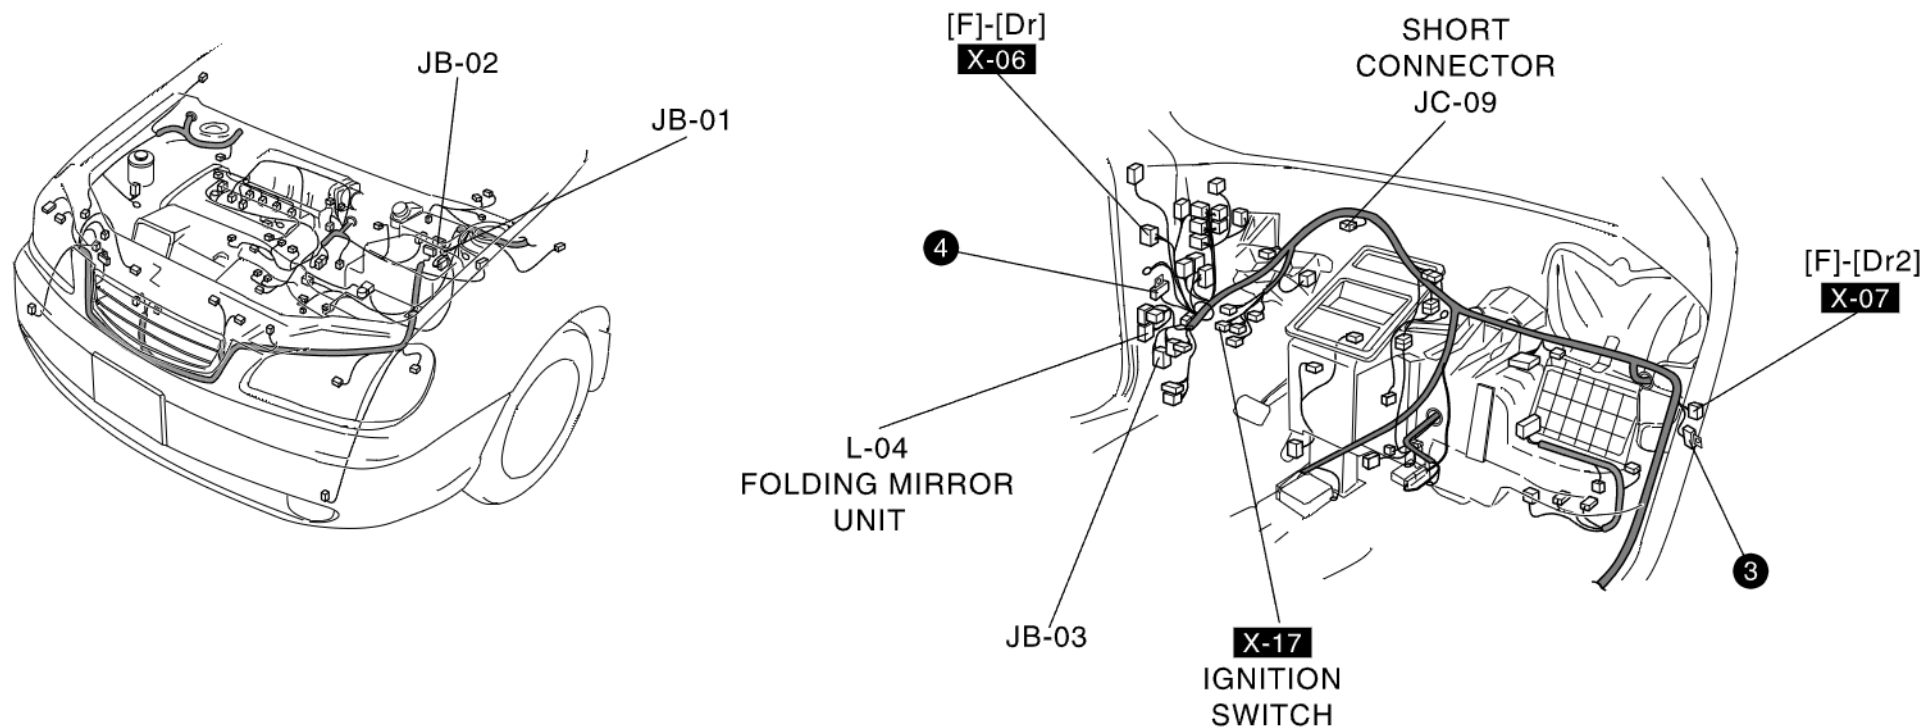




1	2			3
*	L/Y			Y/W
4	5	6	7	8
B	W	R/W	Y/G	O

1	2	3	4
Y/G	*	Y	R/B
5	6	7	8
R/W	W	R/O	B

1	2	3	4
Y/W	*	Y	R/B
5	6	7	8
L/Y	W	R/O	B

1 L	2 *			3 R/L
4 O	5 B	6 *	7 Y Y	8 R/O R/O


1 ★		2 B
3 B	4 ★	5 R/B
6 R/G		

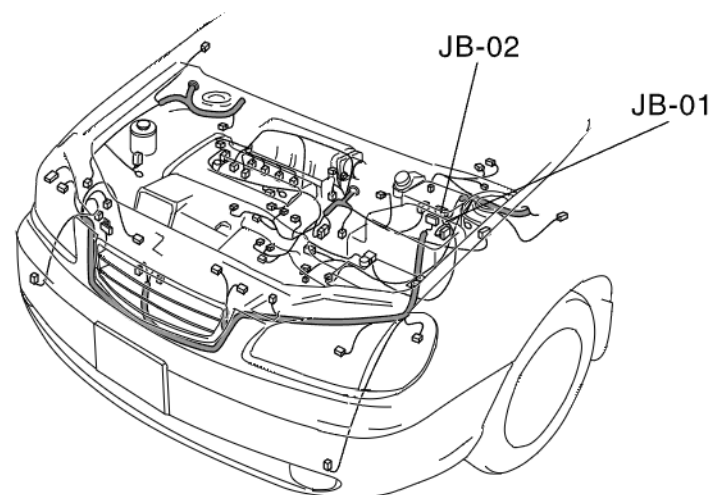

[F]-[Rm]
X-08


SHORT
CONNECTOR
SC-05


9

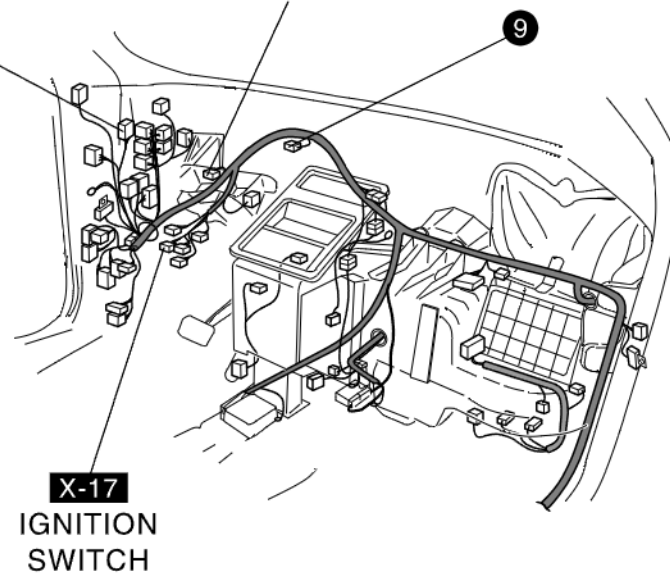


SUNROOF UNIT
M-02

OVERHEAD
CONSOLE
M-01

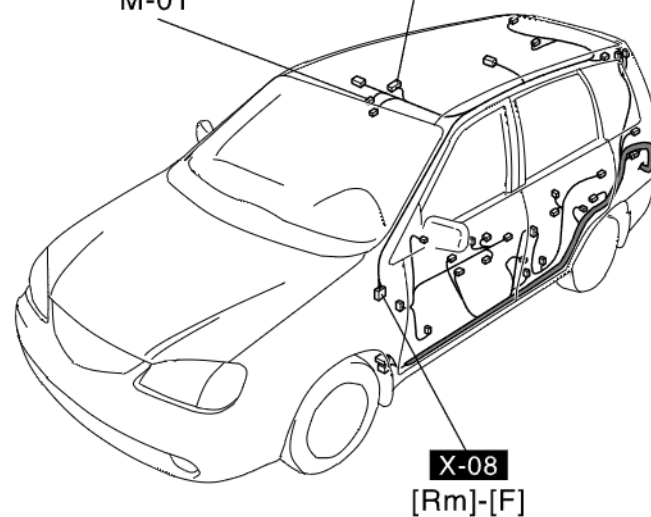


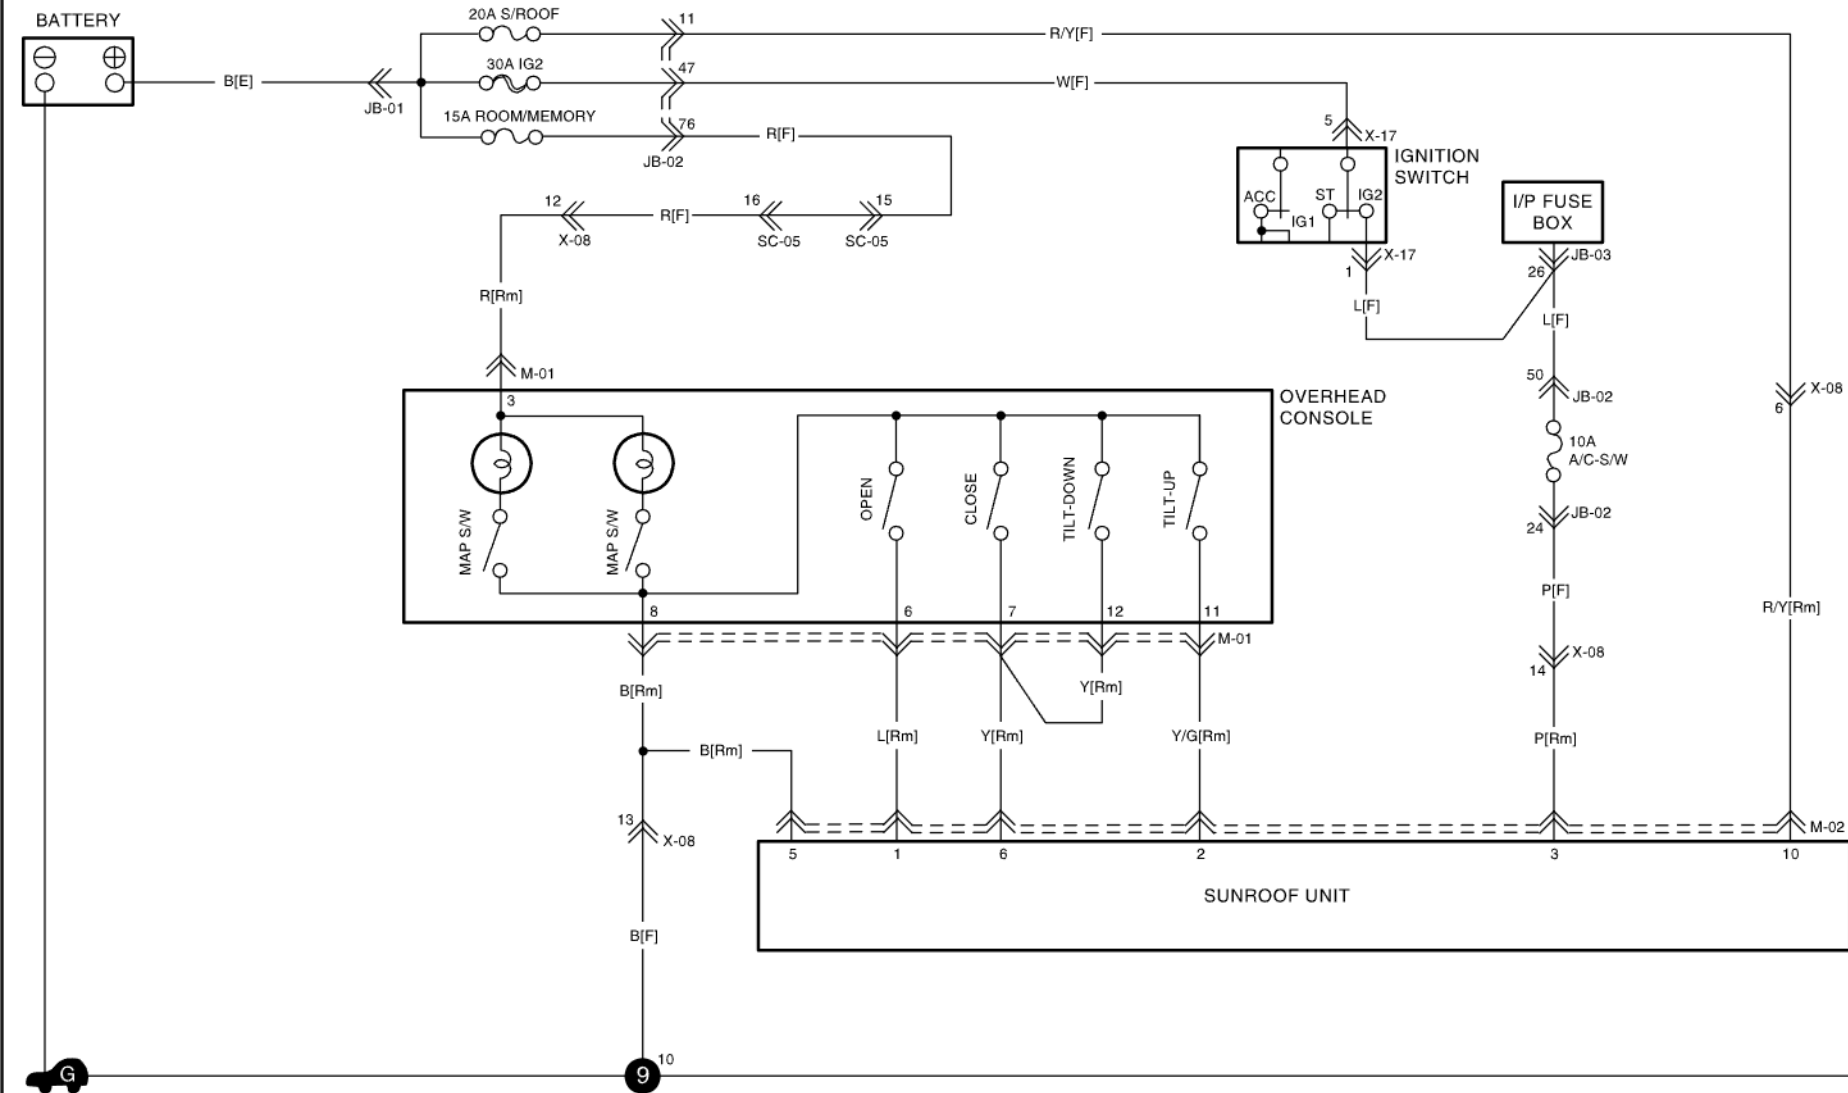


M-01 OVERHEAD CONSOLE [Rm]

 


M-02 SUNROOF UNIT [Rm]





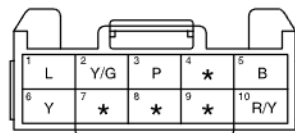


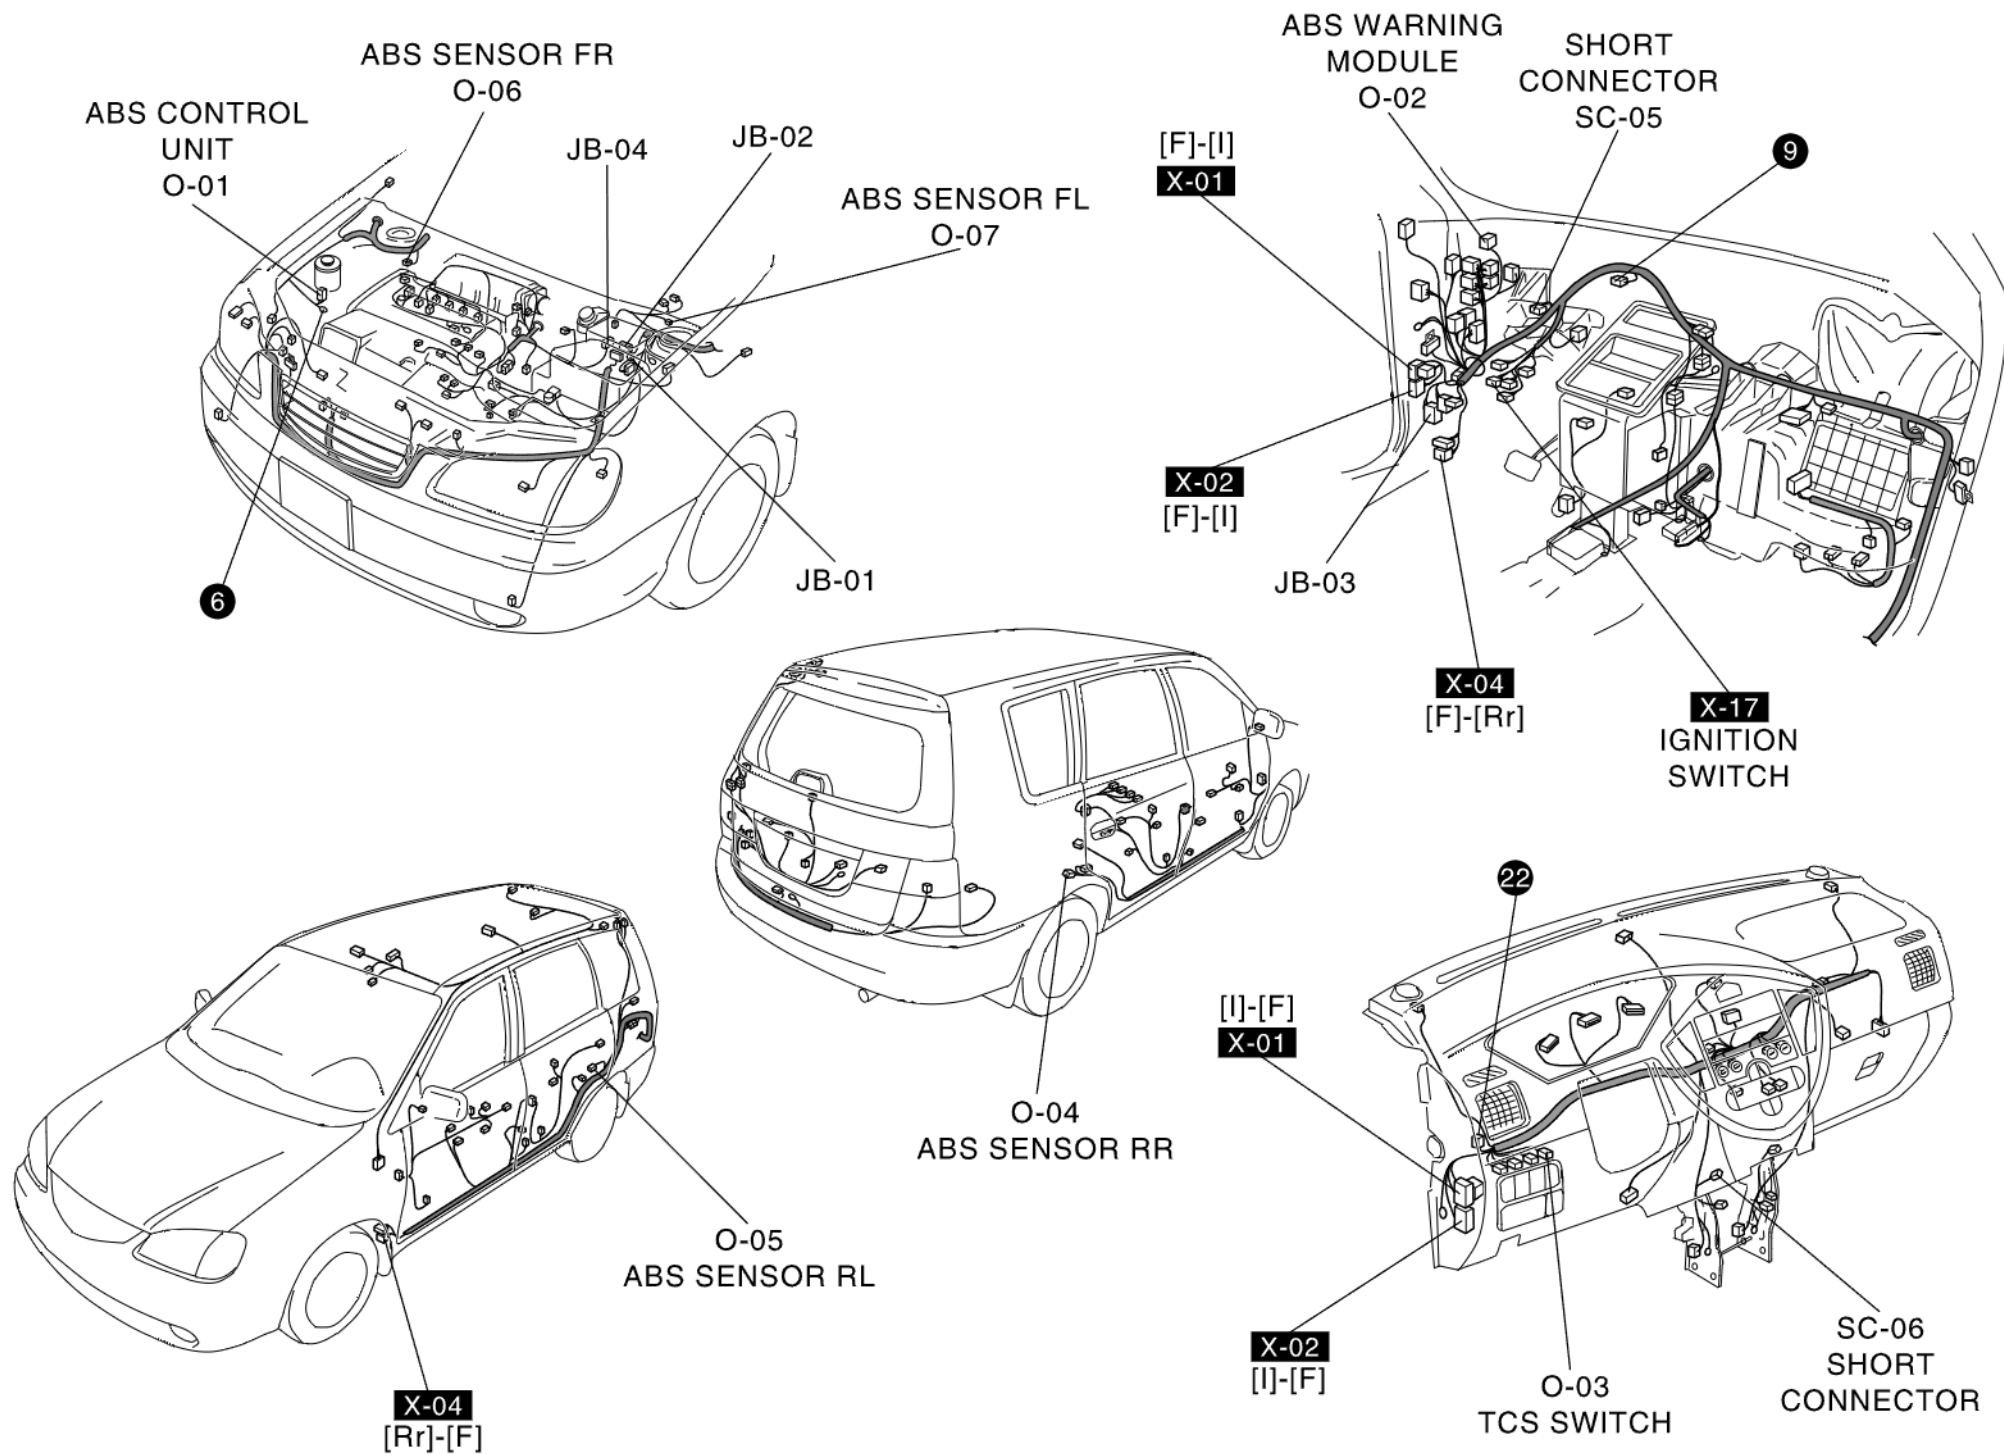





< > : EUROPE

 

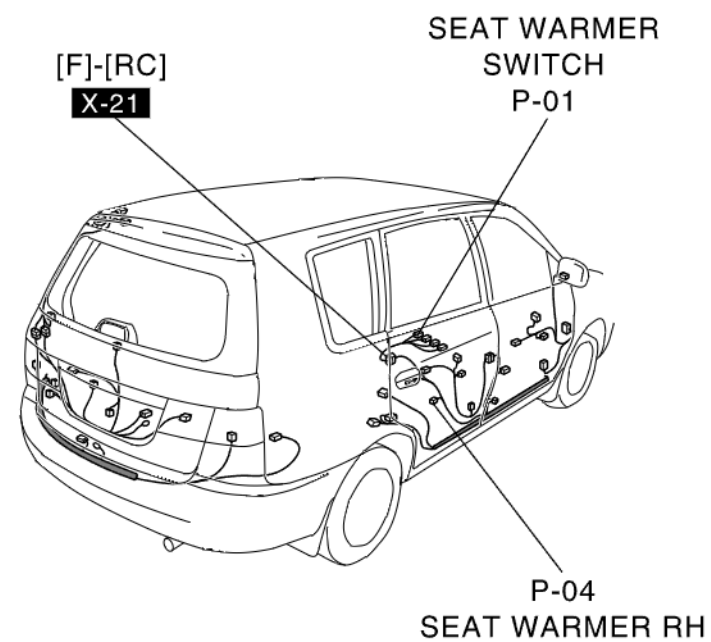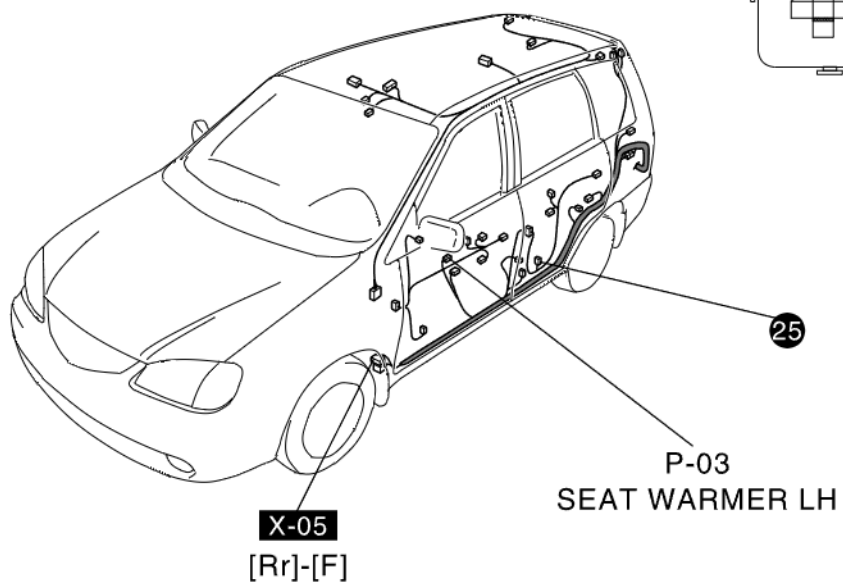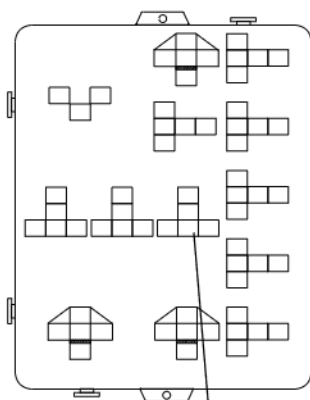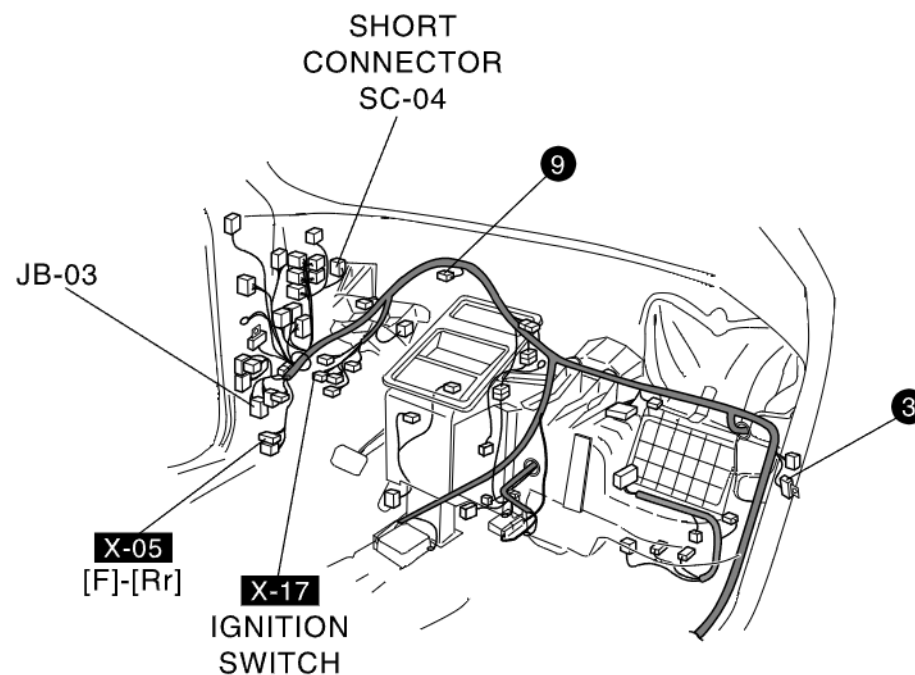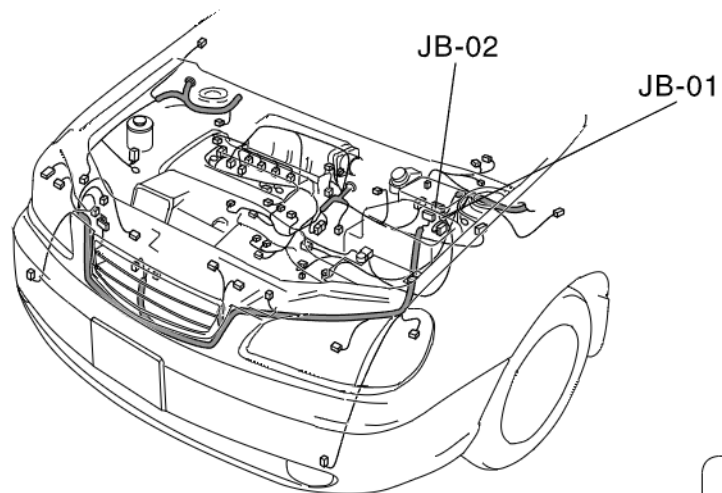


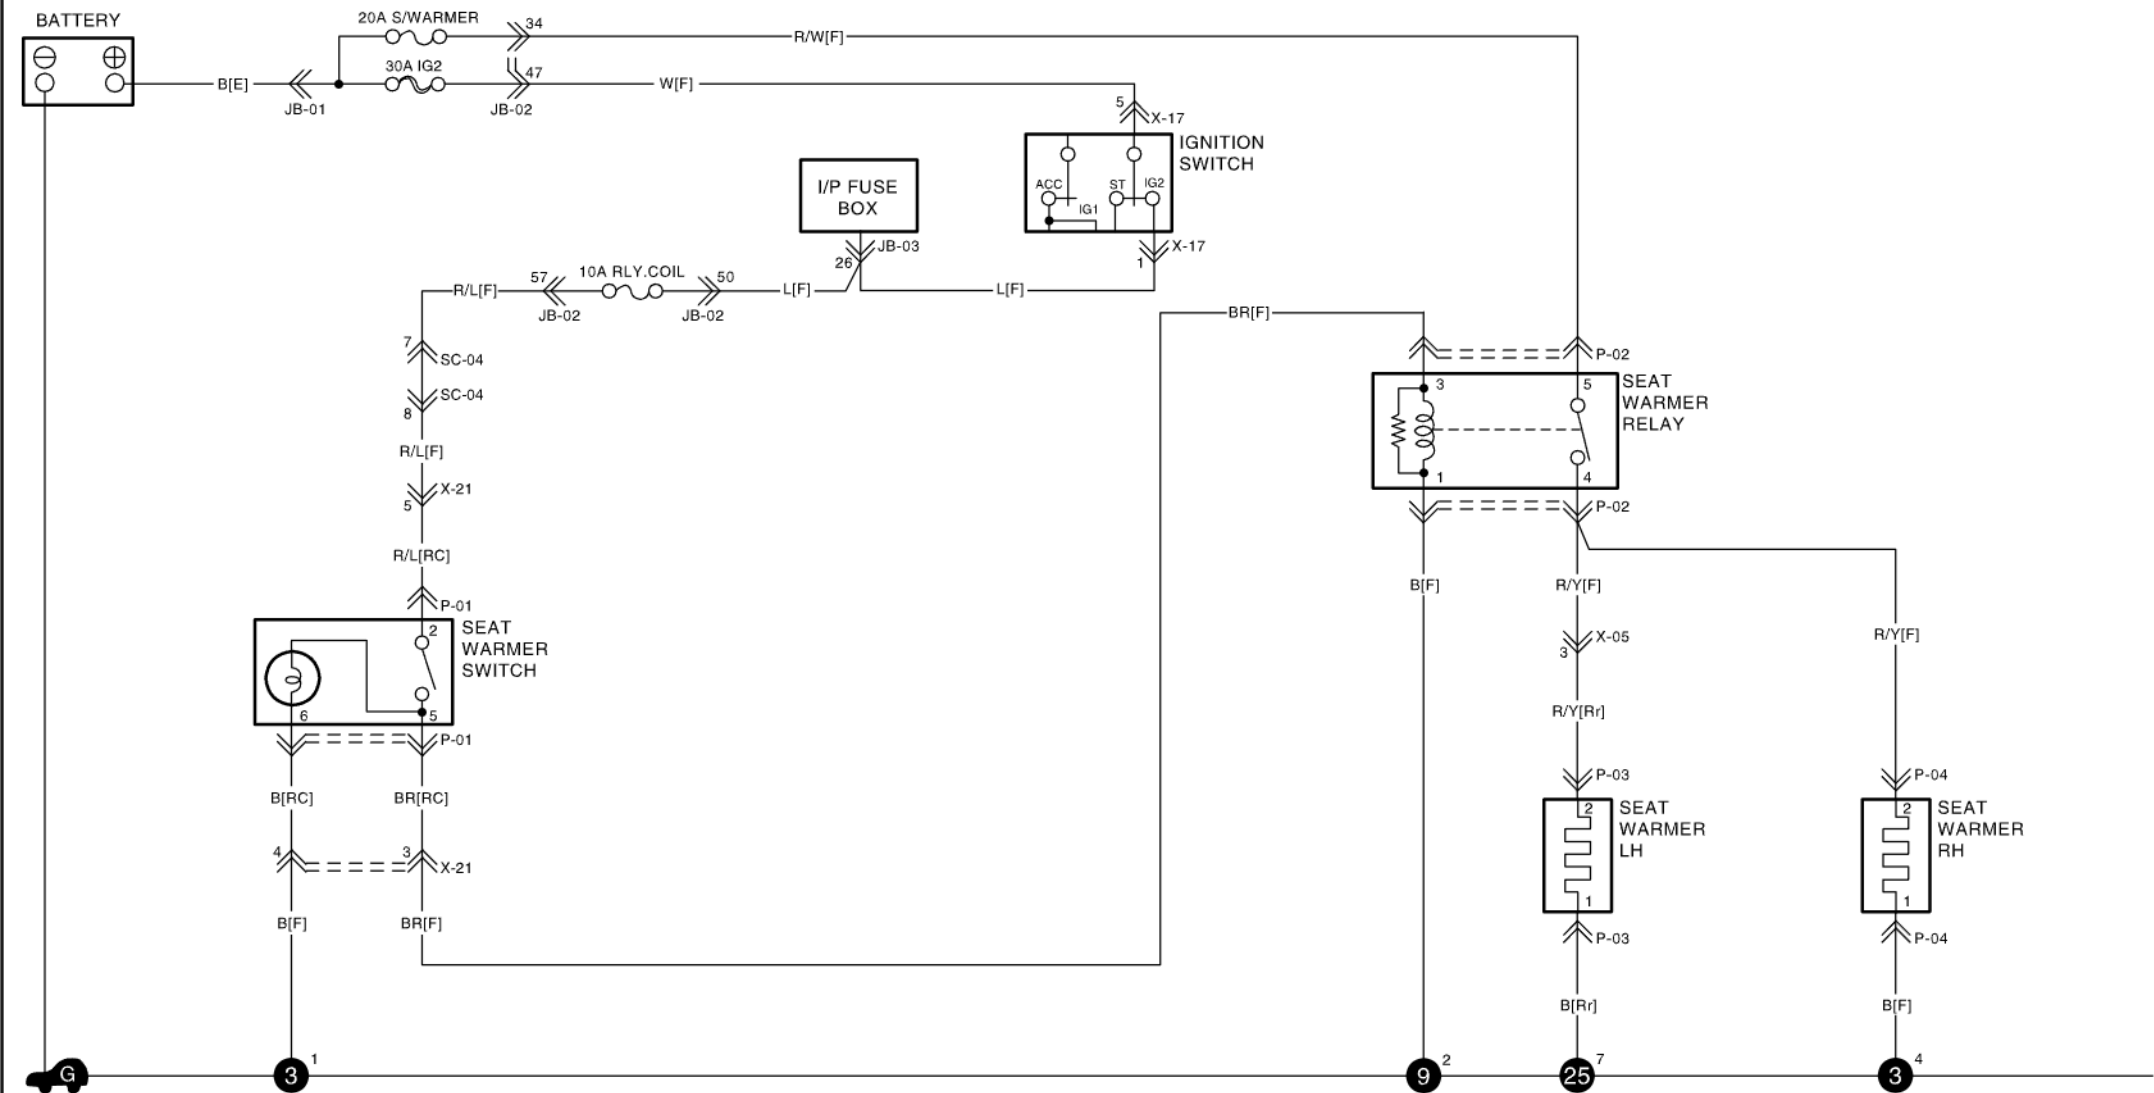


P-01 SEAT WARMER SWITCH [RC] Y

 


P-02 SEAT WARMER RELAY [F]

 



P-03 SEAT WARMER LH [Rr] B

 

P-04 SEAT WARMER RH [F] B

 

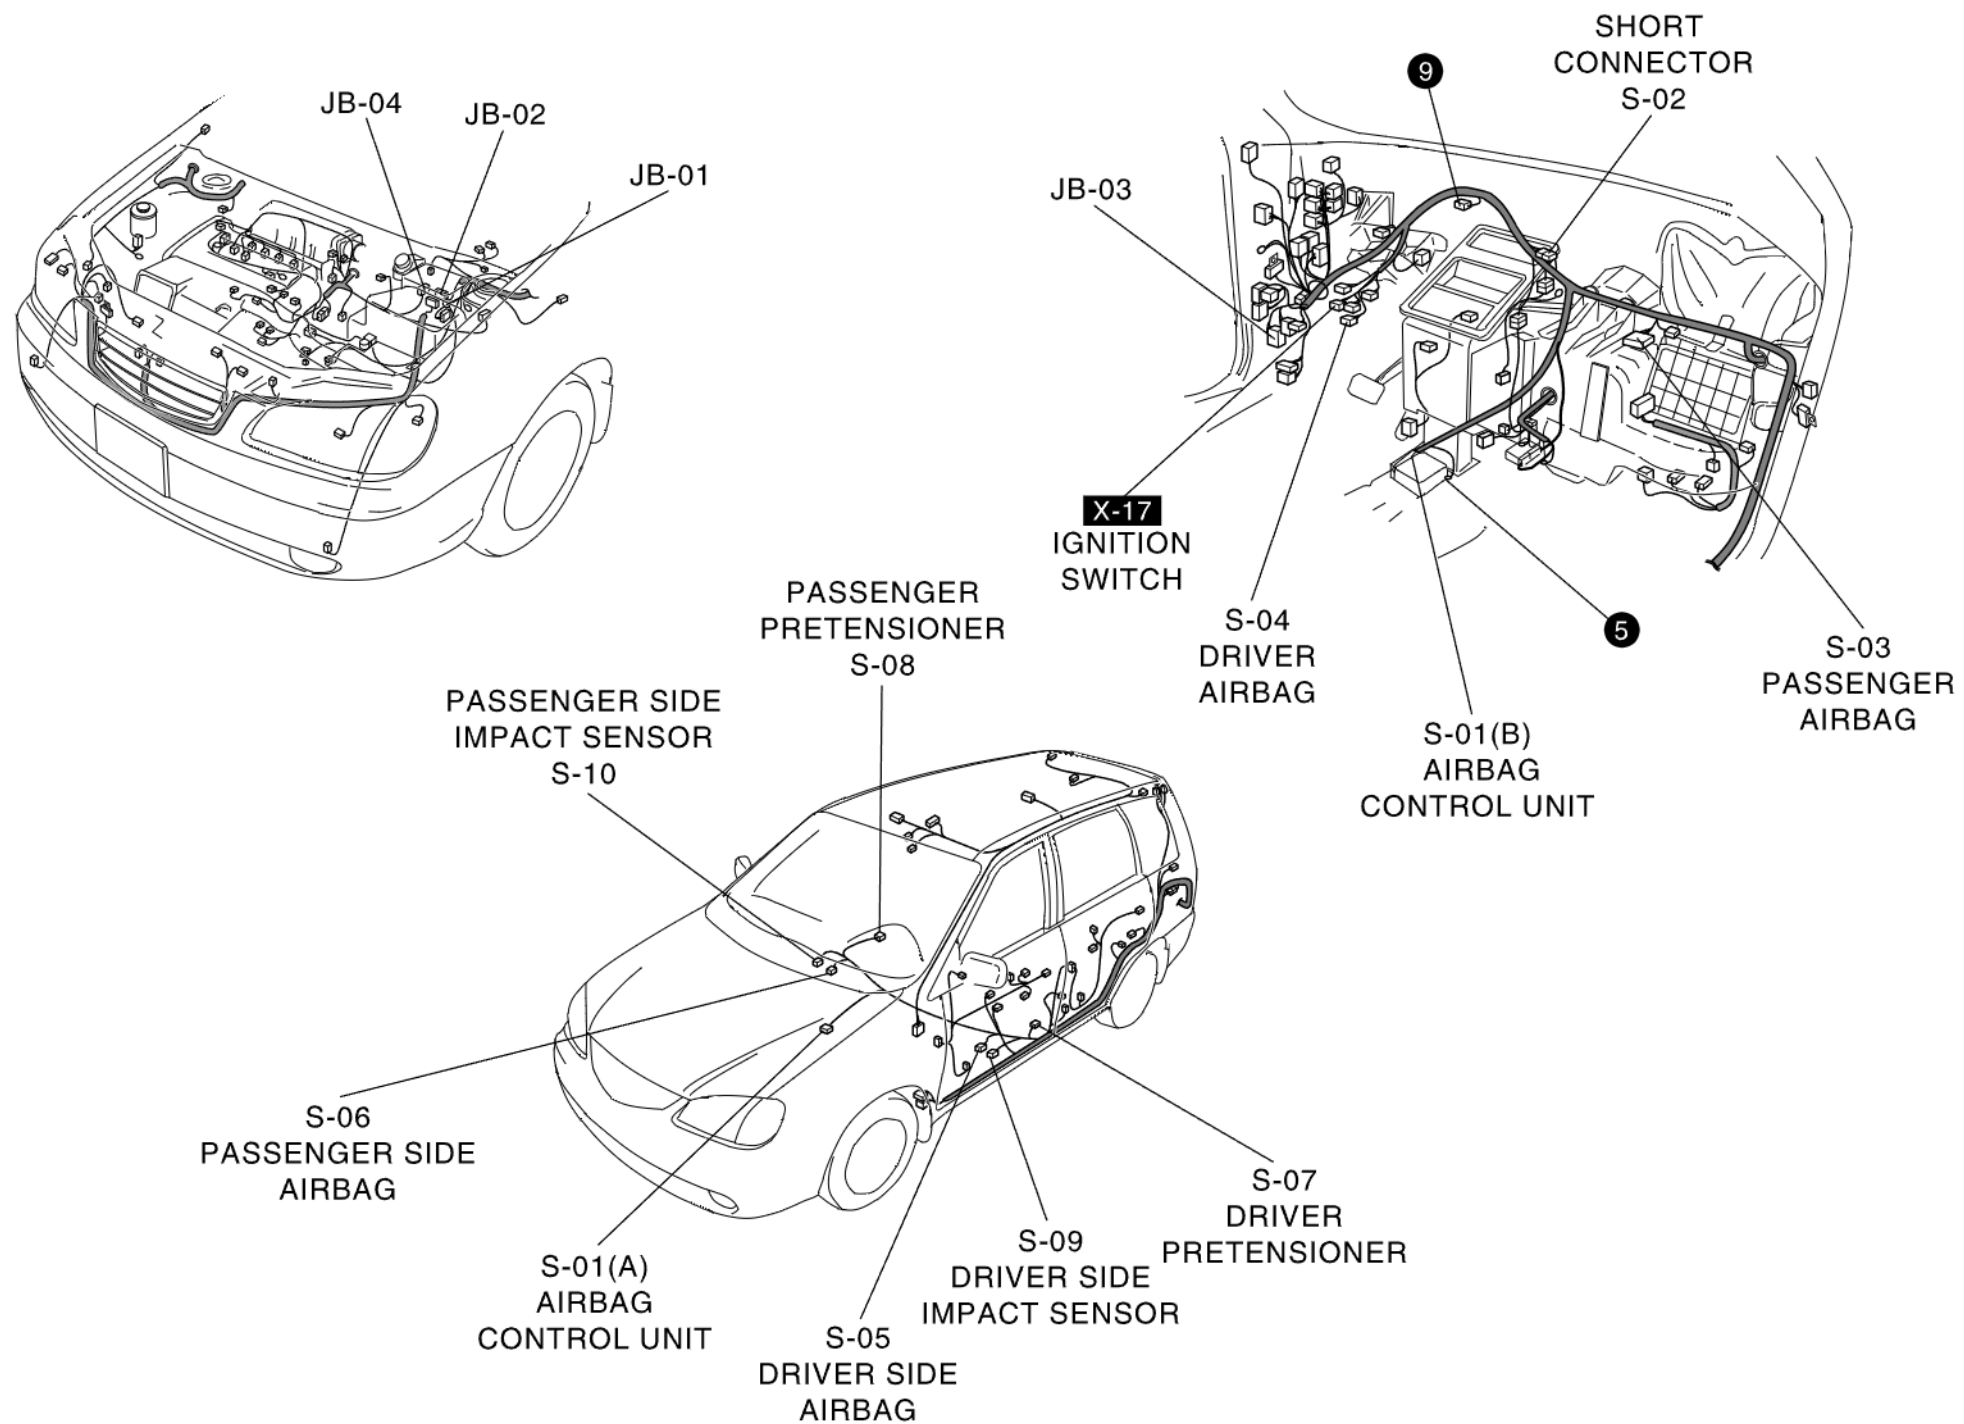

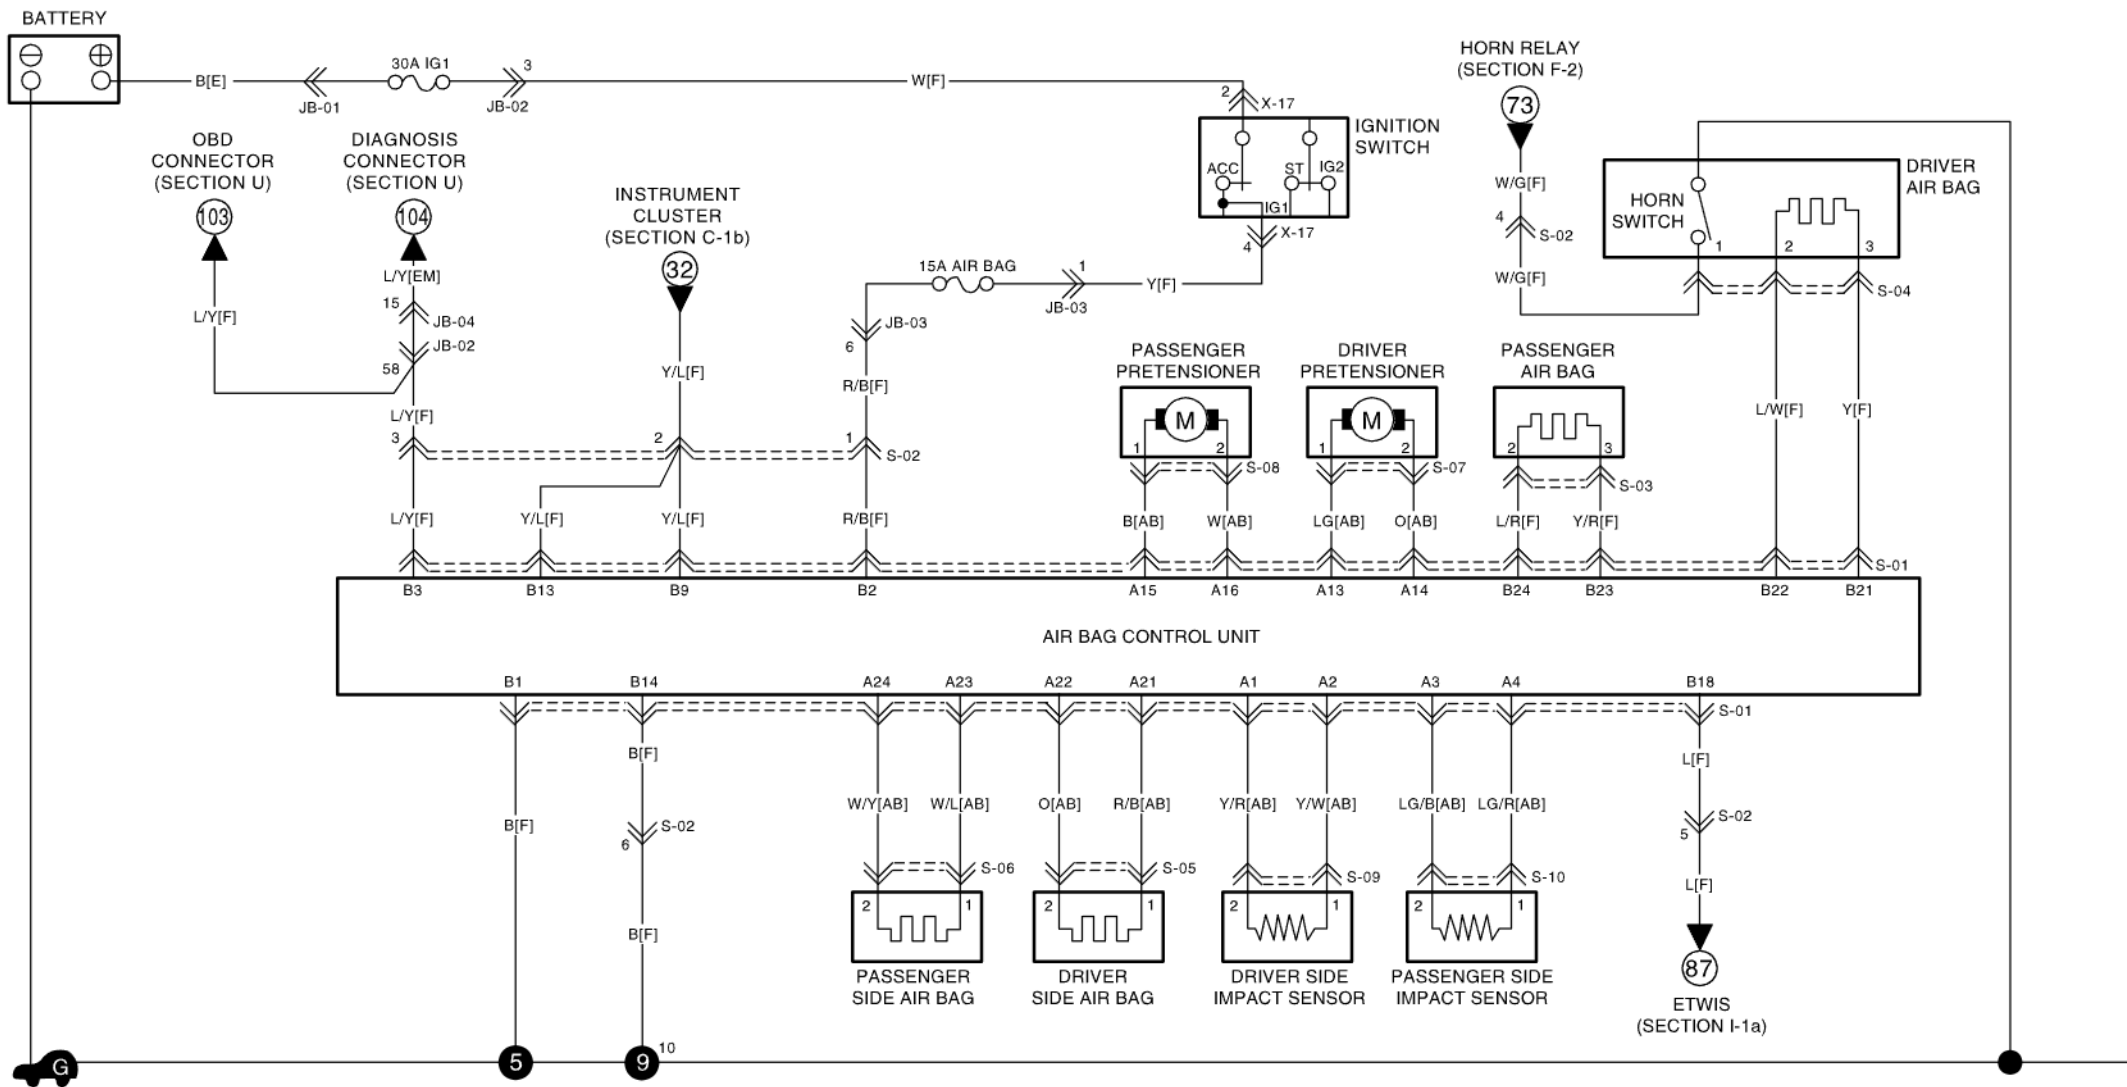

S-01 AIR BAG CONTROL UNIT [F]


1 Y/R	2 Y/W	3 LG/B	4 LG/R	5 *	6 *	7 *	8 *	9 *	10 *	11 *	12 *
13 LG	14 O	15 B	16 W	17 *	18 *	19 *	20 *	21 R/B	22 O	23 W/L	24 W/Y

1 B	2 R/B	3 L/Y	4 *	5 *	6 *	7 *	8 *	9 Y/L	10 *	11 *	12 *
13 Y/L	14 B	15 *	16 *	17 *	18 L	19 *	20 *	21 Y	22 L/W	23 Y/R	24 L/R


S-02 SHORT CONNECTOR [F]

1 R/B	2 Y/L	3 L/Y	4 W/G	5 L	6 B
6 B	5 L	4 W/G	3 L/Y	2 Y/L	1 R/B


S-03 PASSENGER AIR BAG [F] L

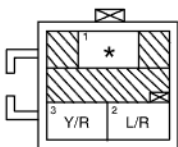


S-04 DRIVER AIR BAG [F] L

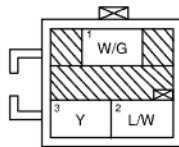


S-05 DRIVER SIDE AIR BAG [AB]

 


S-06 PASSENGER SIDE AIR BAG [AB]

 


S-07 DRIVER PRETENSIONER [AB]

 


S-08 PASSENGER PRETENSIONER [AB]

 

S-09 DRIVER SIDE IMPACT SENSOR [AB]

 

S-10 PASSENGER SIDE IMPACT SENSOR [AB]

 

SC-01 SHORT CONNECTOR [F] GY

< > : A/T
() : EUROPE

1	L	2	L	3	L	4	L	5	L	6	*	7	*	8	*	9	*	10	*
											(R/Y)		<R/Y>		<R/Y>		<R/Y>		
11	G	12	G	13	G	14	G	15	G	16	*	17	*	18	*	19	*	20	*

SC-02 SHORT CONNECTOR [I]

< > : A/T

1	R/G	2	R/G	3	R/G	4	*	5	R/G	6	R/G	7	*
							<R/G>						
8	*	9	R/G	10	R/G	11	R/G	12	R/G	13	R/G	14	R/G
	<R/G>												

SC-04 SHORT CONNECTOR [F] GY

< > : A/T
[] : ABS
() : EUROPE

1	L	2	*	3	*	4	L	5	*	6	*	7	R/L	8	*	9	R/L	10	*
			[L]		<L>						(R/L)				(R/L)				(R/L)
11	R/B	12	R/B	13	R/B	14	R/B	15	*	16	*	17	Y/G	18	Y/G	19	Y/G	20	*
											(Y/G)								[Y/G]

SC-05 SHORT CONNECTOR [F]

< > : A/T
() : M/T
[] : RAIN SENSOR

1	R/L	2	R/L	3	R/L	4	*	5	R/G	6	R/G	7	R/G	8	R/G	9	R/G	10	R/G
							[R/L]												
11	Y	12	Y	13	Y	14	Y	15	R	16	R	17	R	18	R	19	R	20	R
					(Y)		<Y>												


SC-06 SHORT CONNECTOR [I]


< > : A/T
() : FATC

1	Y	2	Y	3	Y	4	Y	5	Y	6	Y	7	*
													<Y>
8	G/W	9	G/W	10	G/W	11	R	12	R	13	R	14	R
	(G/W)		(G/W)		(G/W)								R


SC-08 SHORT CONNECTOR [Rr]

1	R/L	2	R/L	3	R/L	4	R/L
5	L	6	L	7	L	8	L

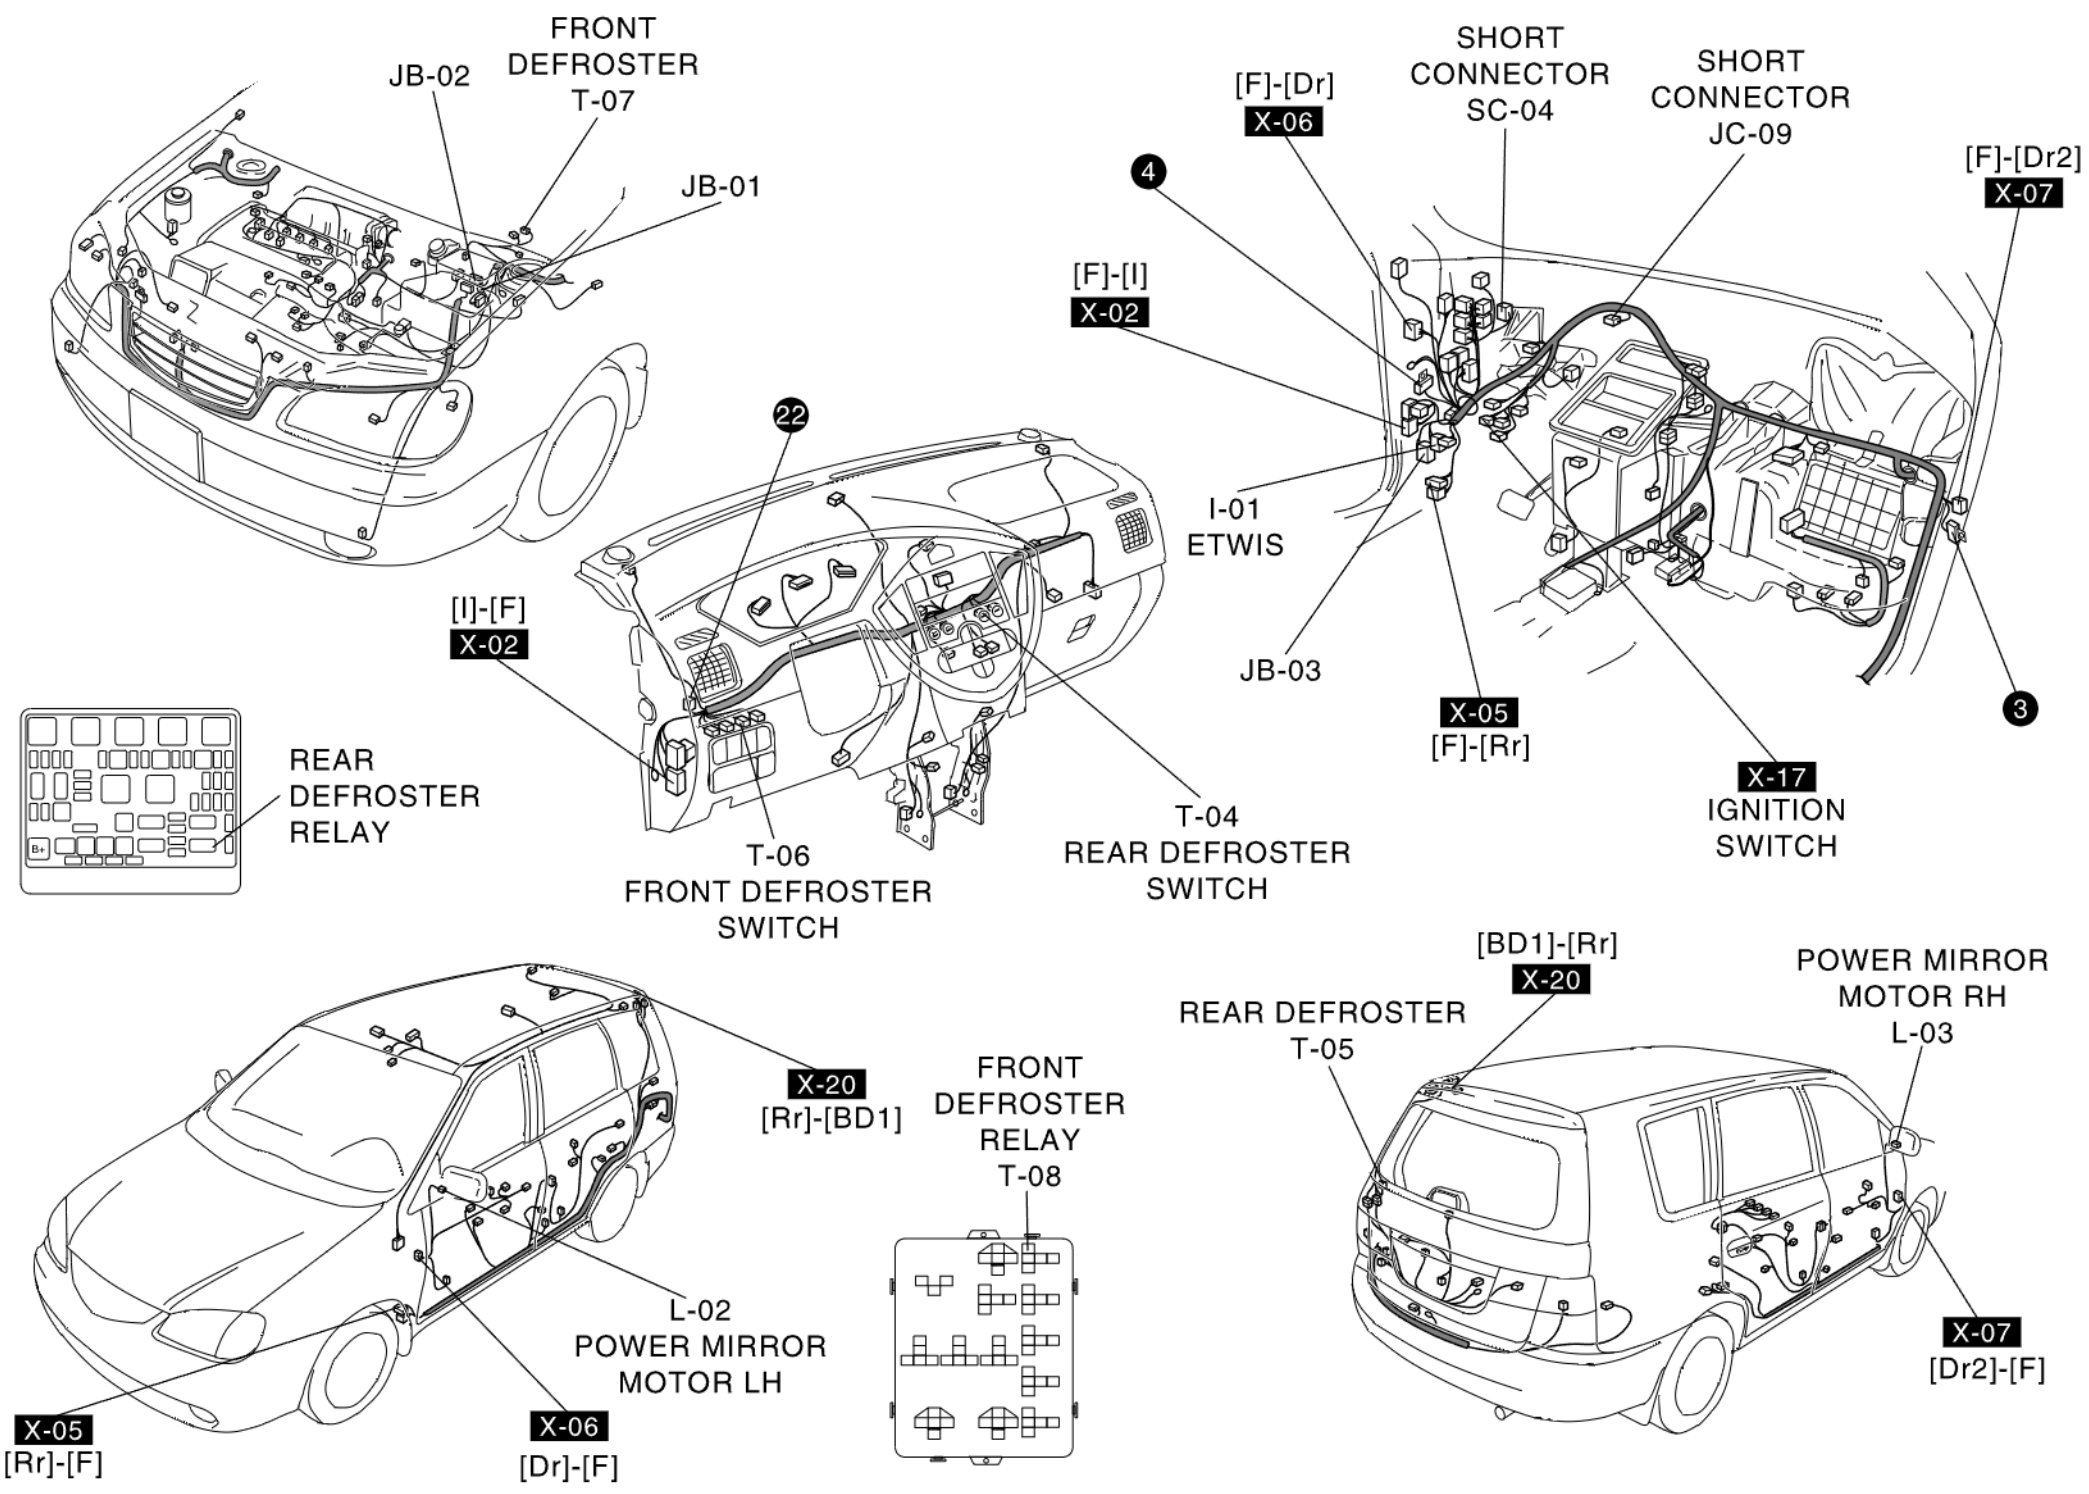

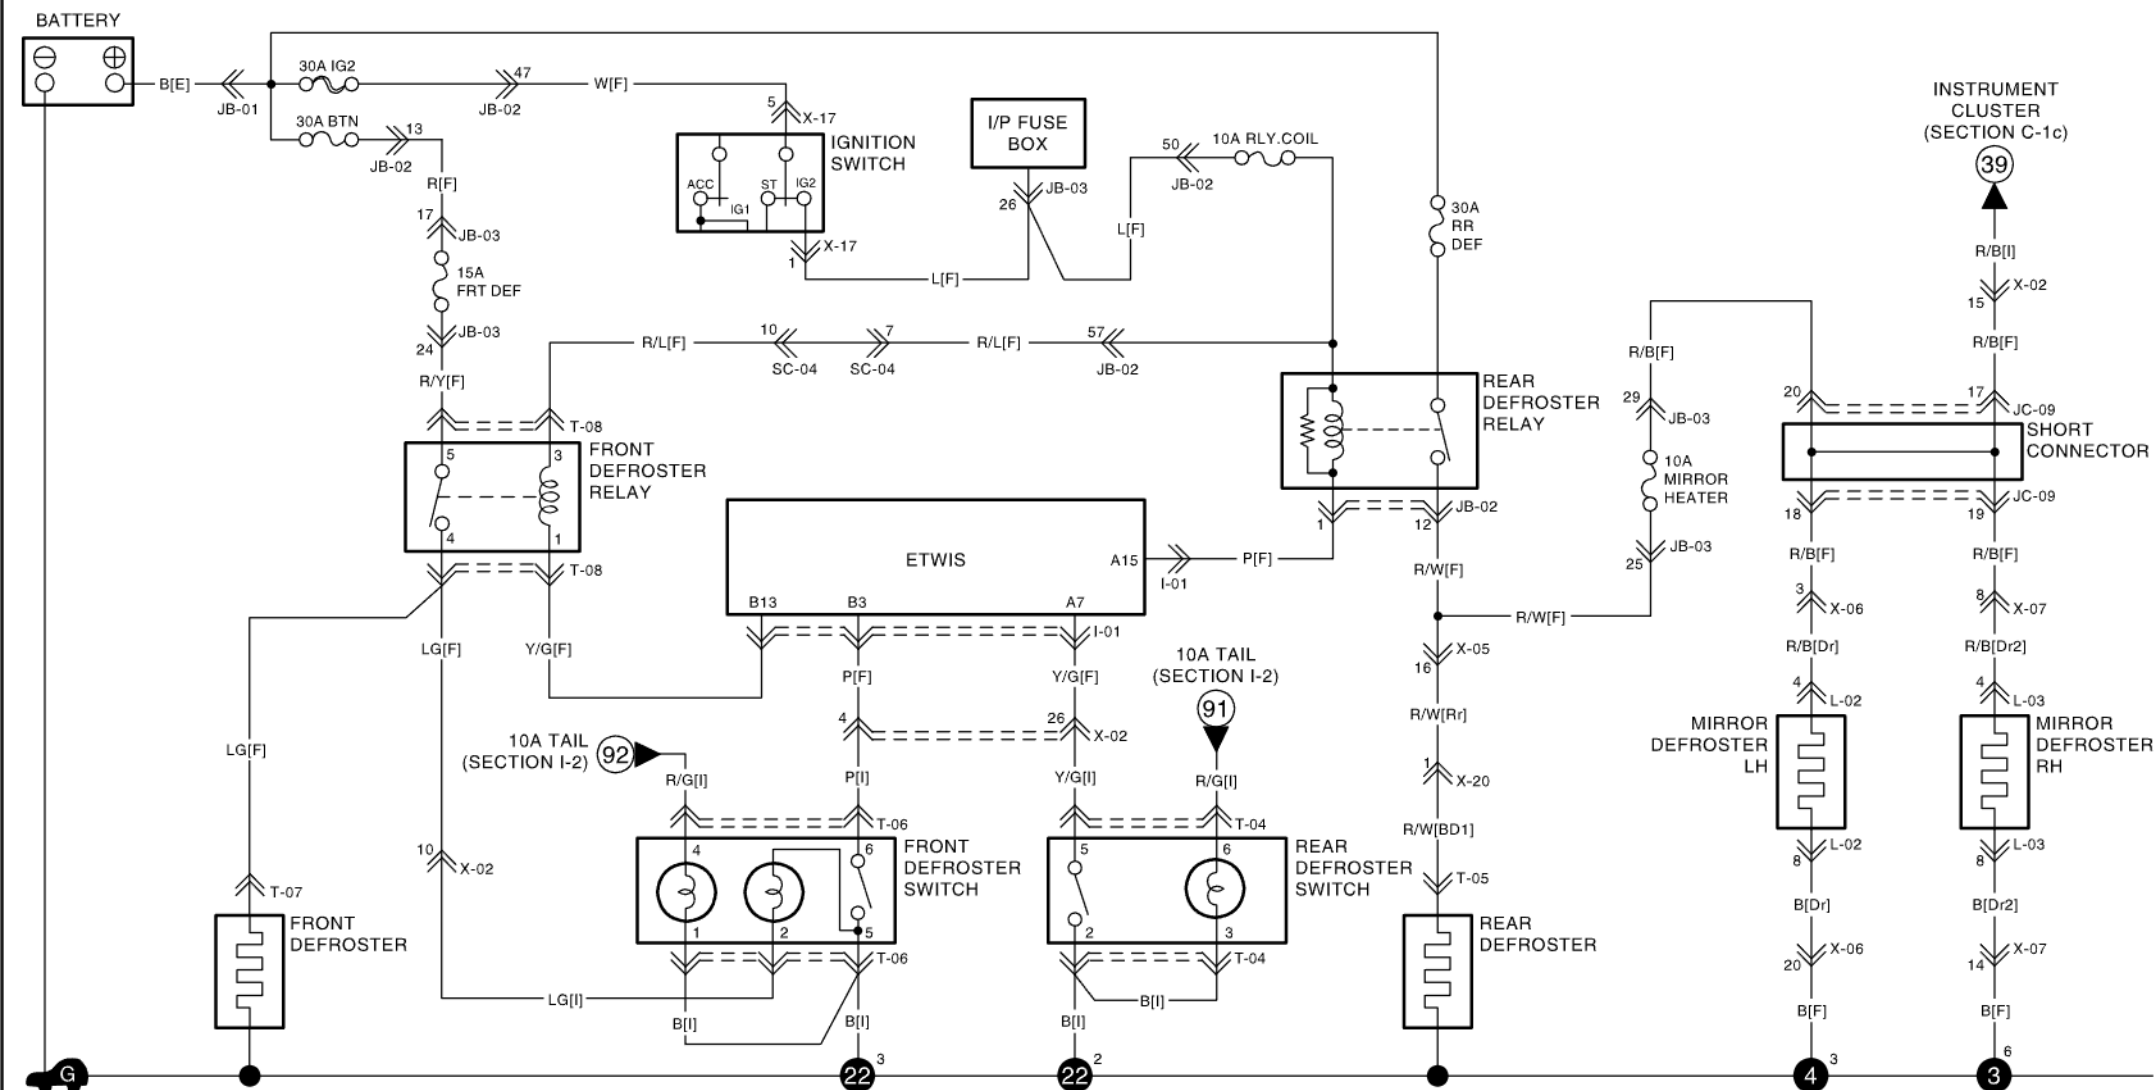


T-04 REAR DEFROSTER SWITCH [I]

 

T-05 REAR DEFROSTER [BD1]



 
T-06 FRONT DEFROSTER SWITCH [I] G





T-07 FRONT DEFROSTER [F]



 T-08 FRONT DEFROSTER RELAY [F]




I-01 ETWIS [F]

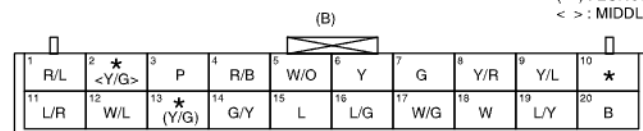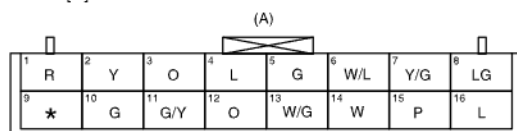



() : EUROPE
< > : MIDDLE EAST

 
L-02 POWER MIRROR MOTOR LH [Dr]



L-03 POWER MIRROR MOTOR RH [Dr2]


 


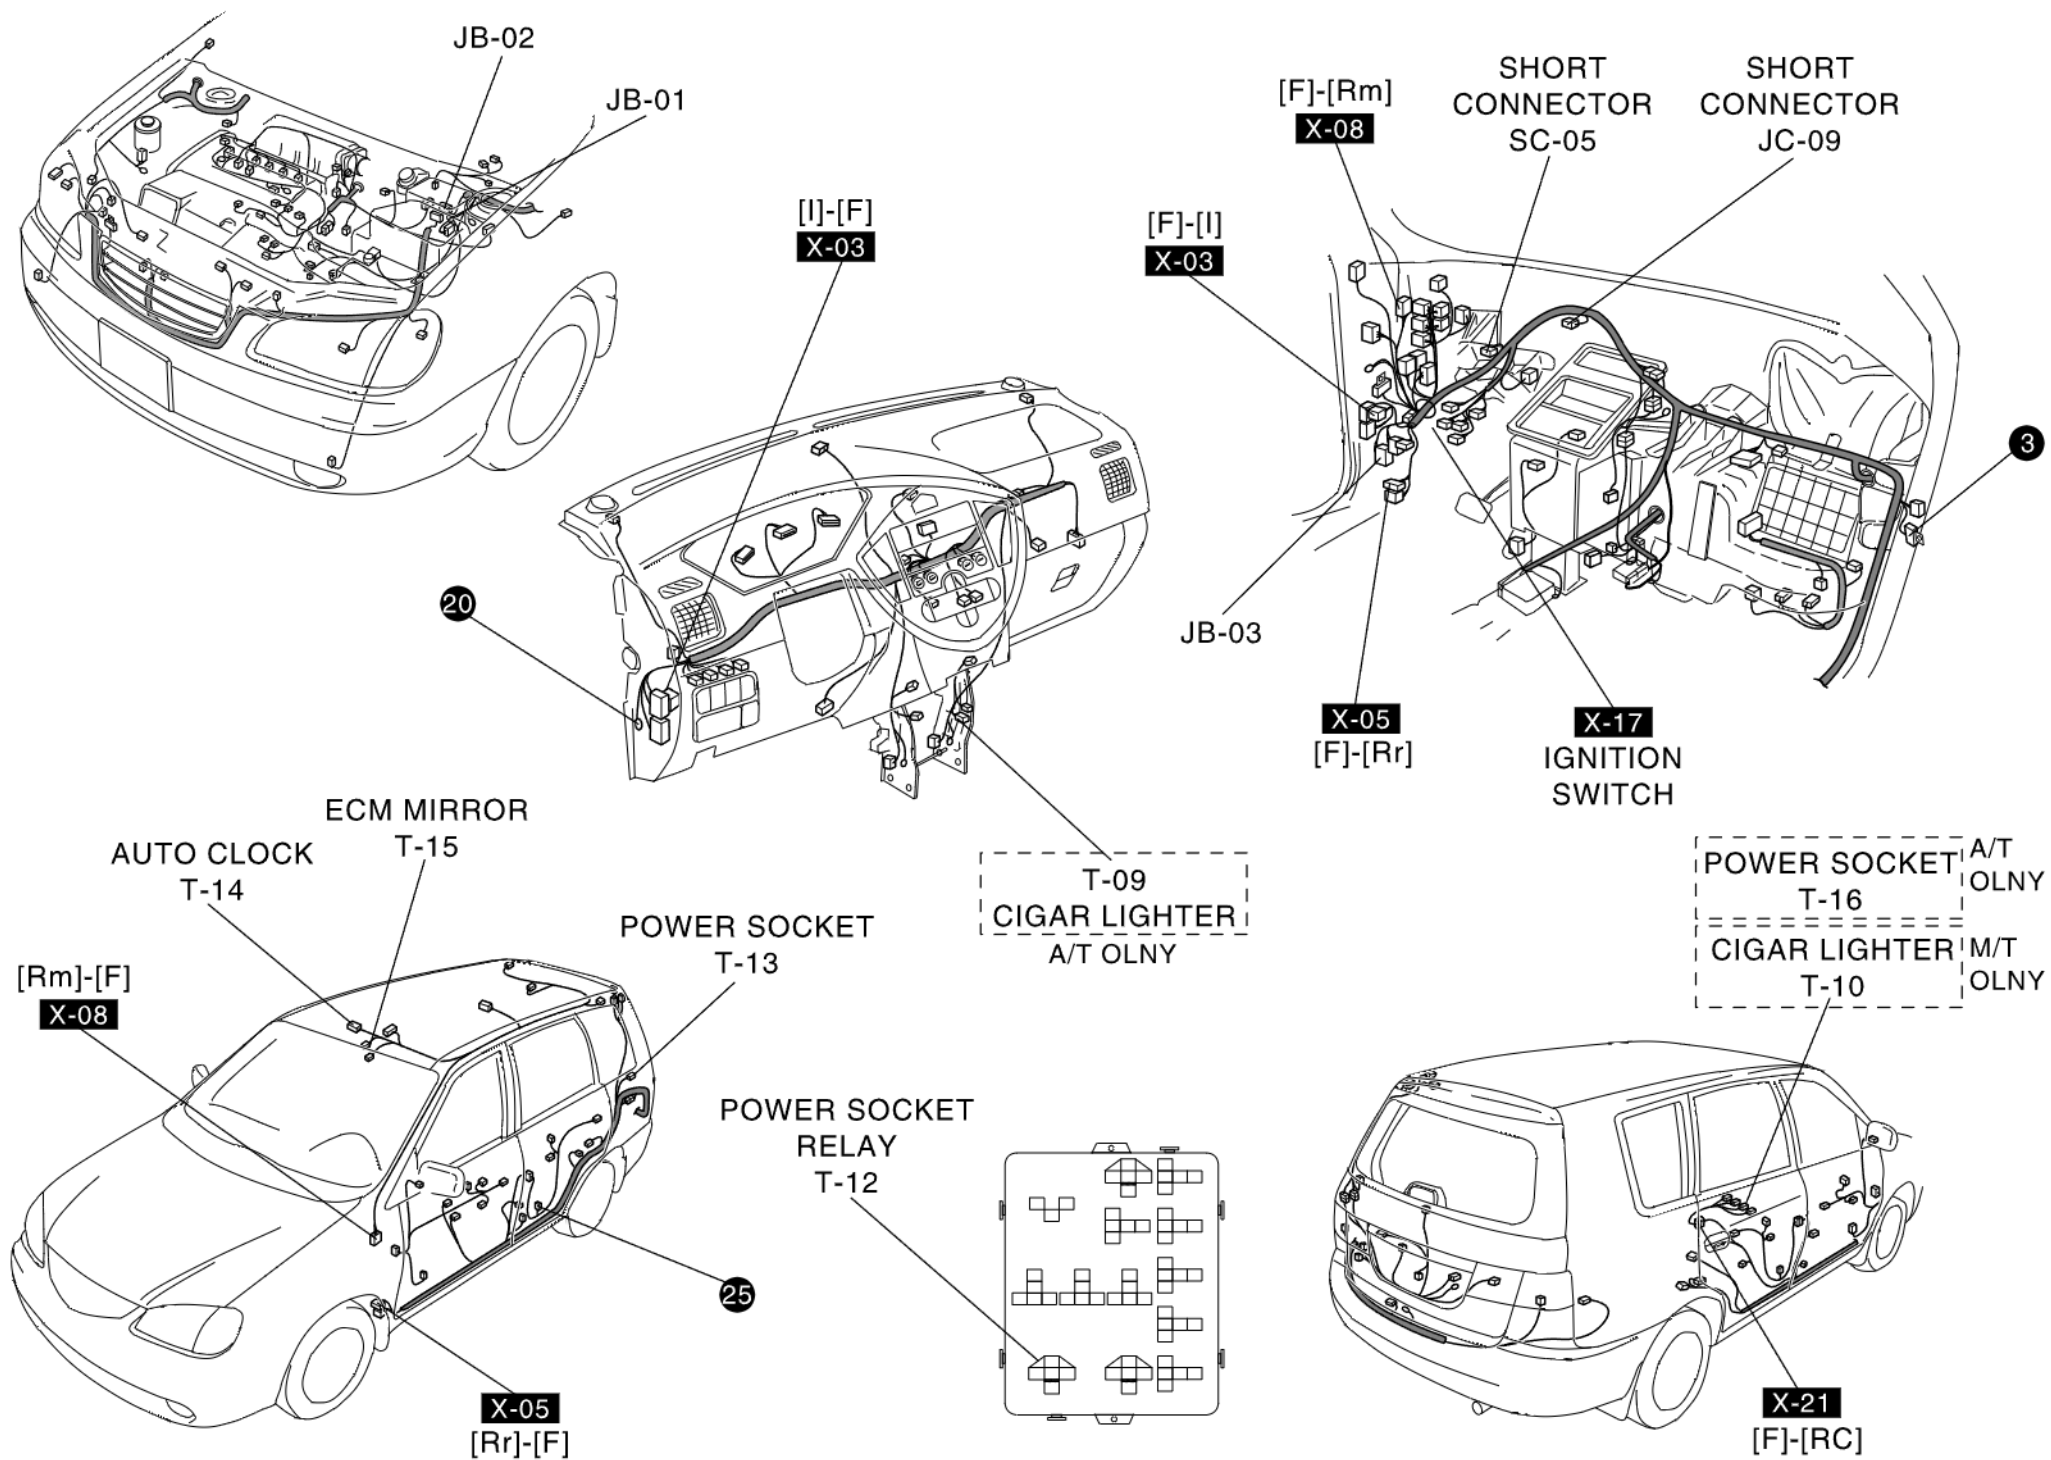

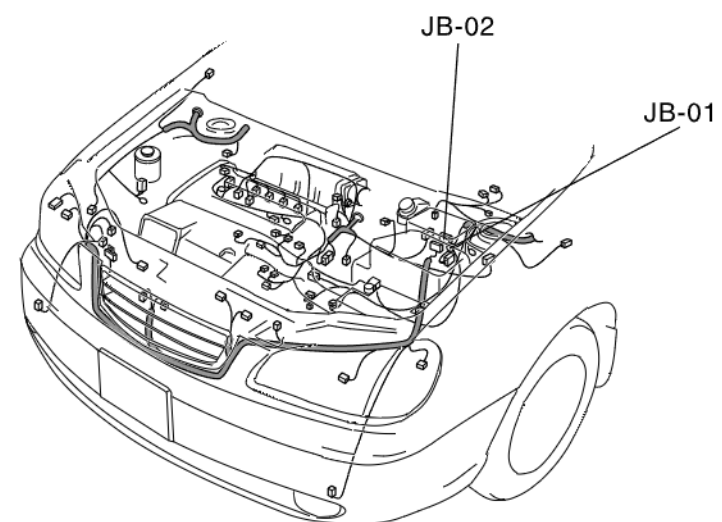

BACK WARNING
BUZZER
T-21

SHORT
CONNECTOR
SC-05

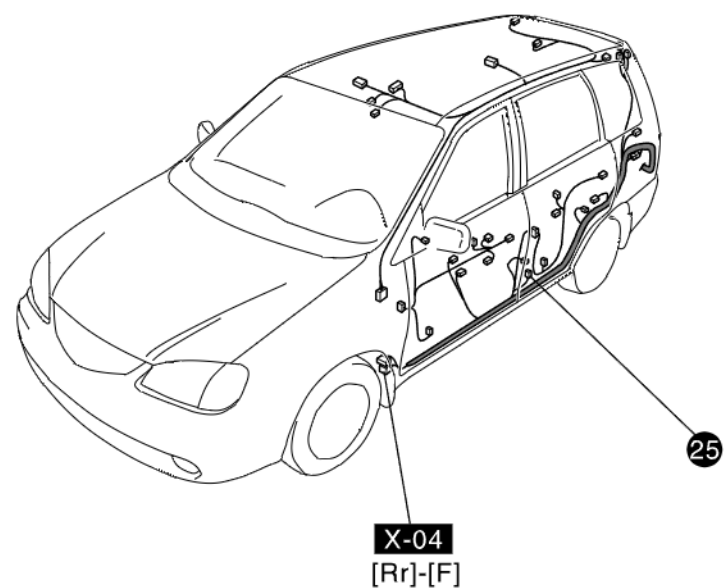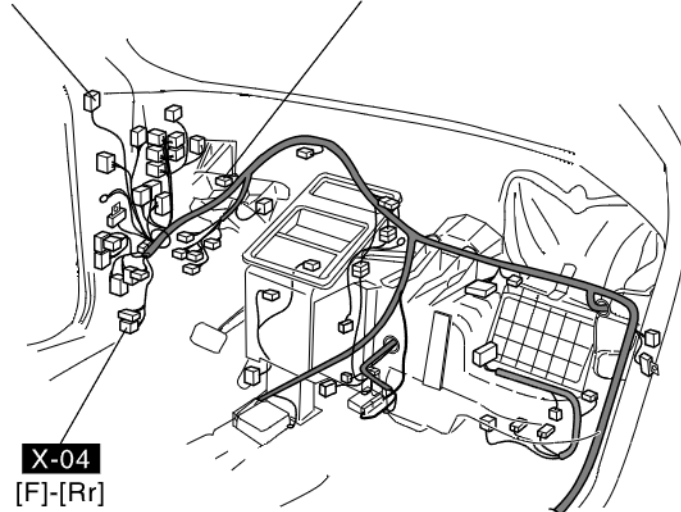


BACK WARNING
SENSOR(LH)
T-18


[Rr]-[RB]
X-29

T-19
BACK WARNING
SENSOR(CENTER)


T-20
BACK WARNING
SENSOR(RH)

T-17
BACK WARNING
UNIT

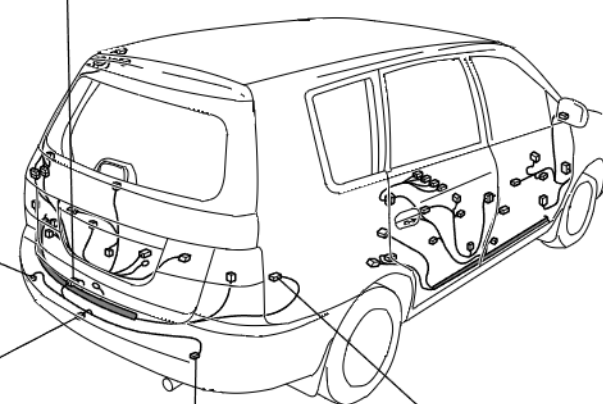


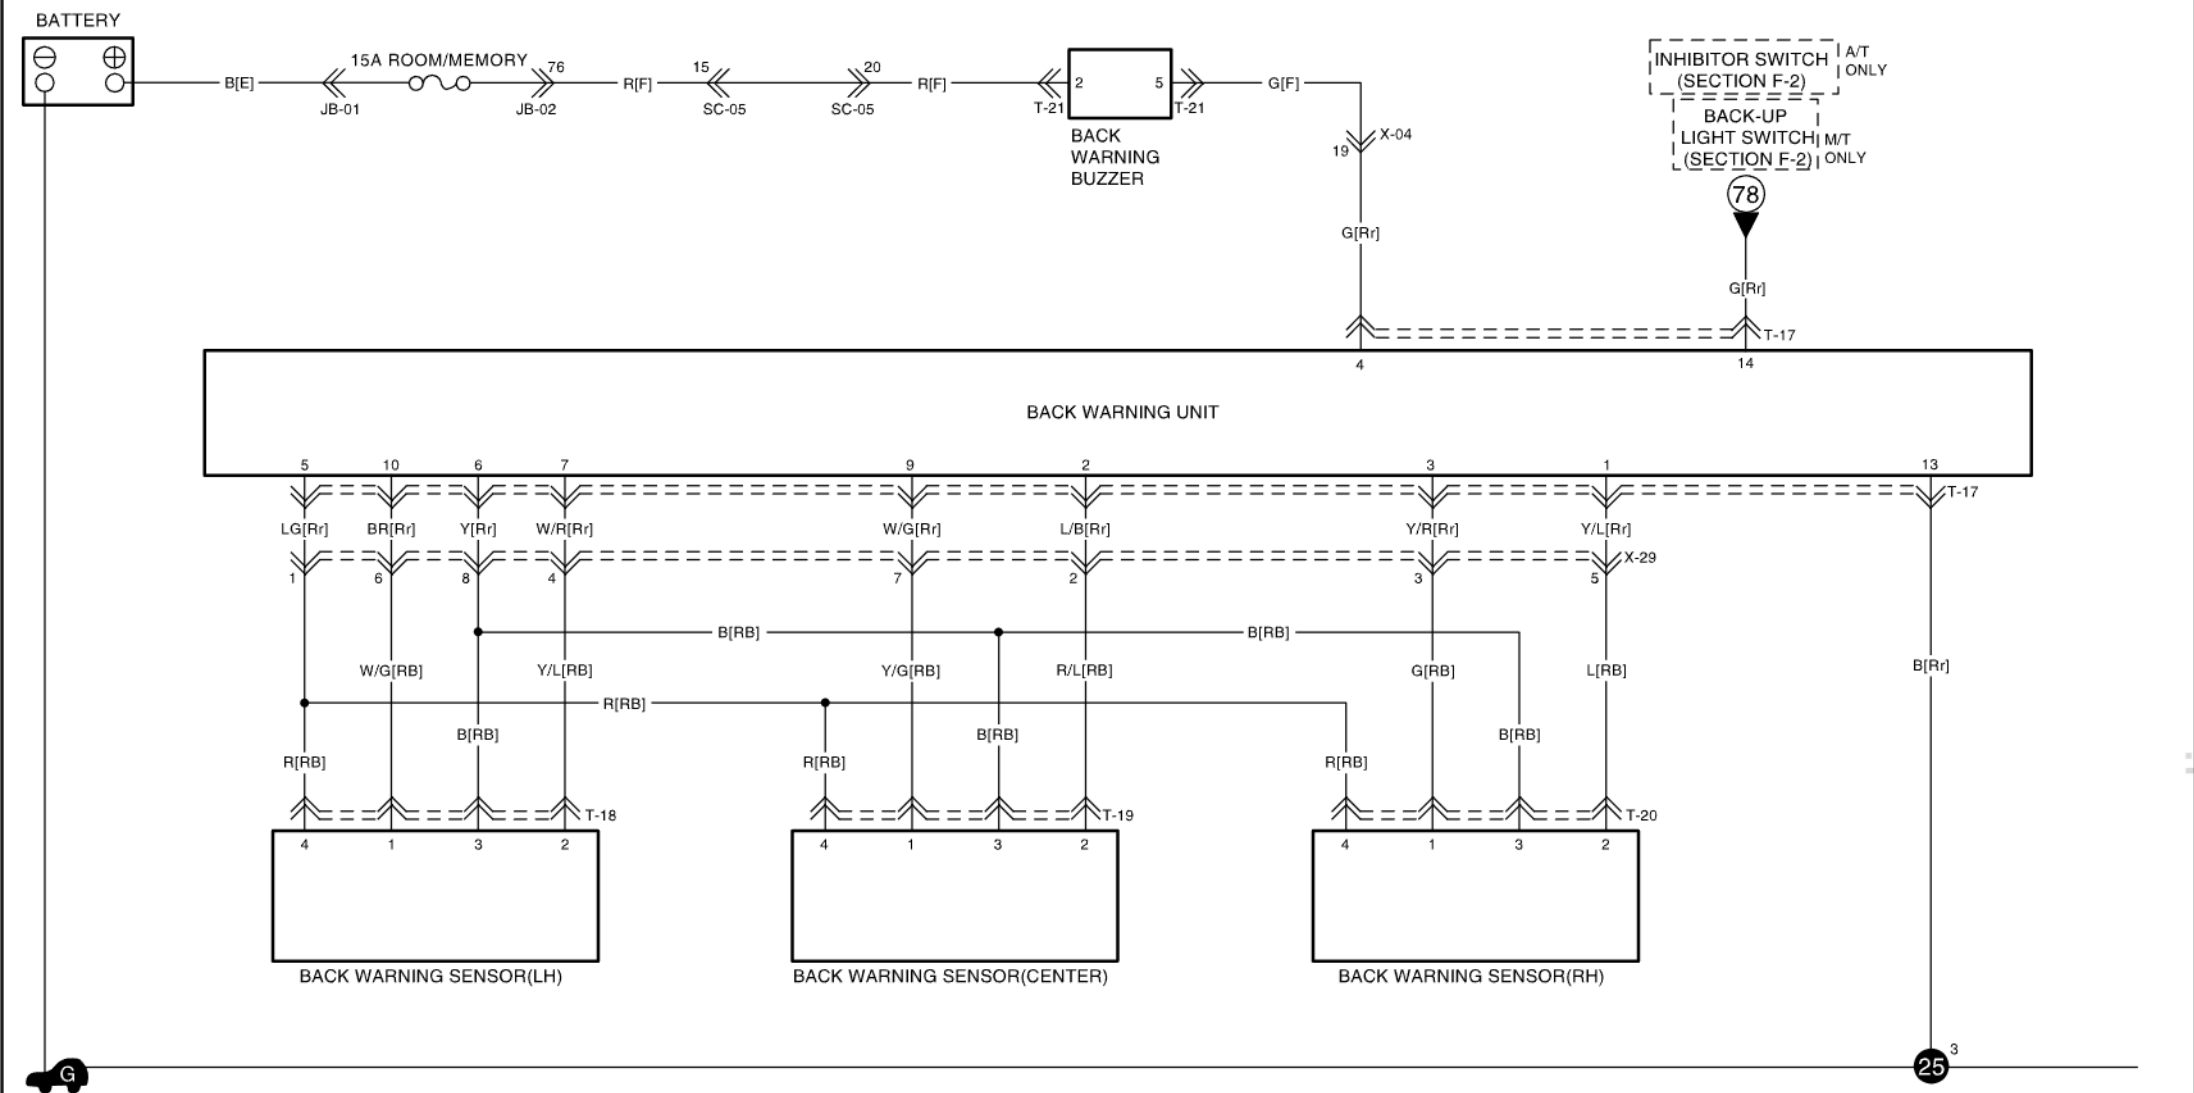


T-17 BACK WARNING UNIT [Rr]

 


T-18 BACK WARNING SENSOR(LH) [RB]

 


T-19 BACK WARNING SENSOR(CENTER) [RB]



 


T-20 BACK WARNING SENSOR(RH) [RB]

 


T-21 BACK WARNING BUZZER [F]

 


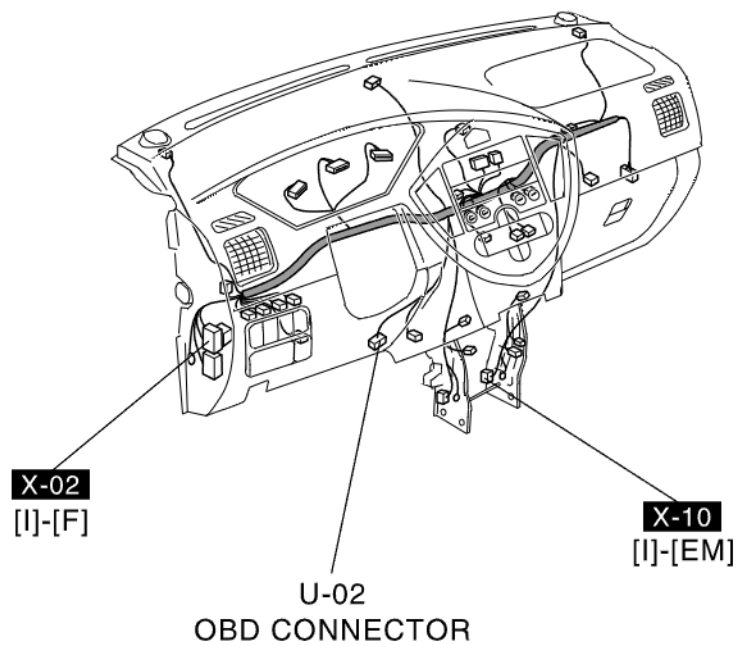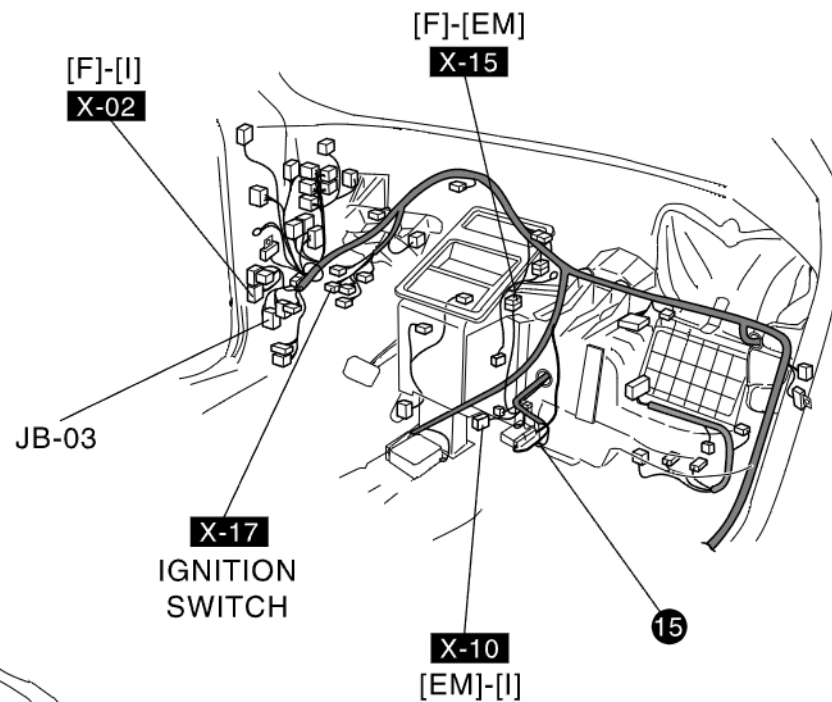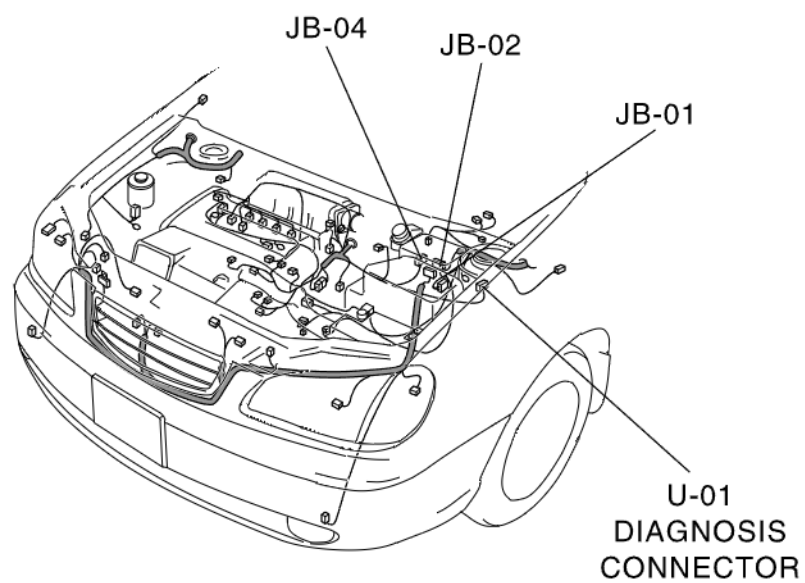

U DIAGNOSIS CONNECTOR, OBD CONNECTOR

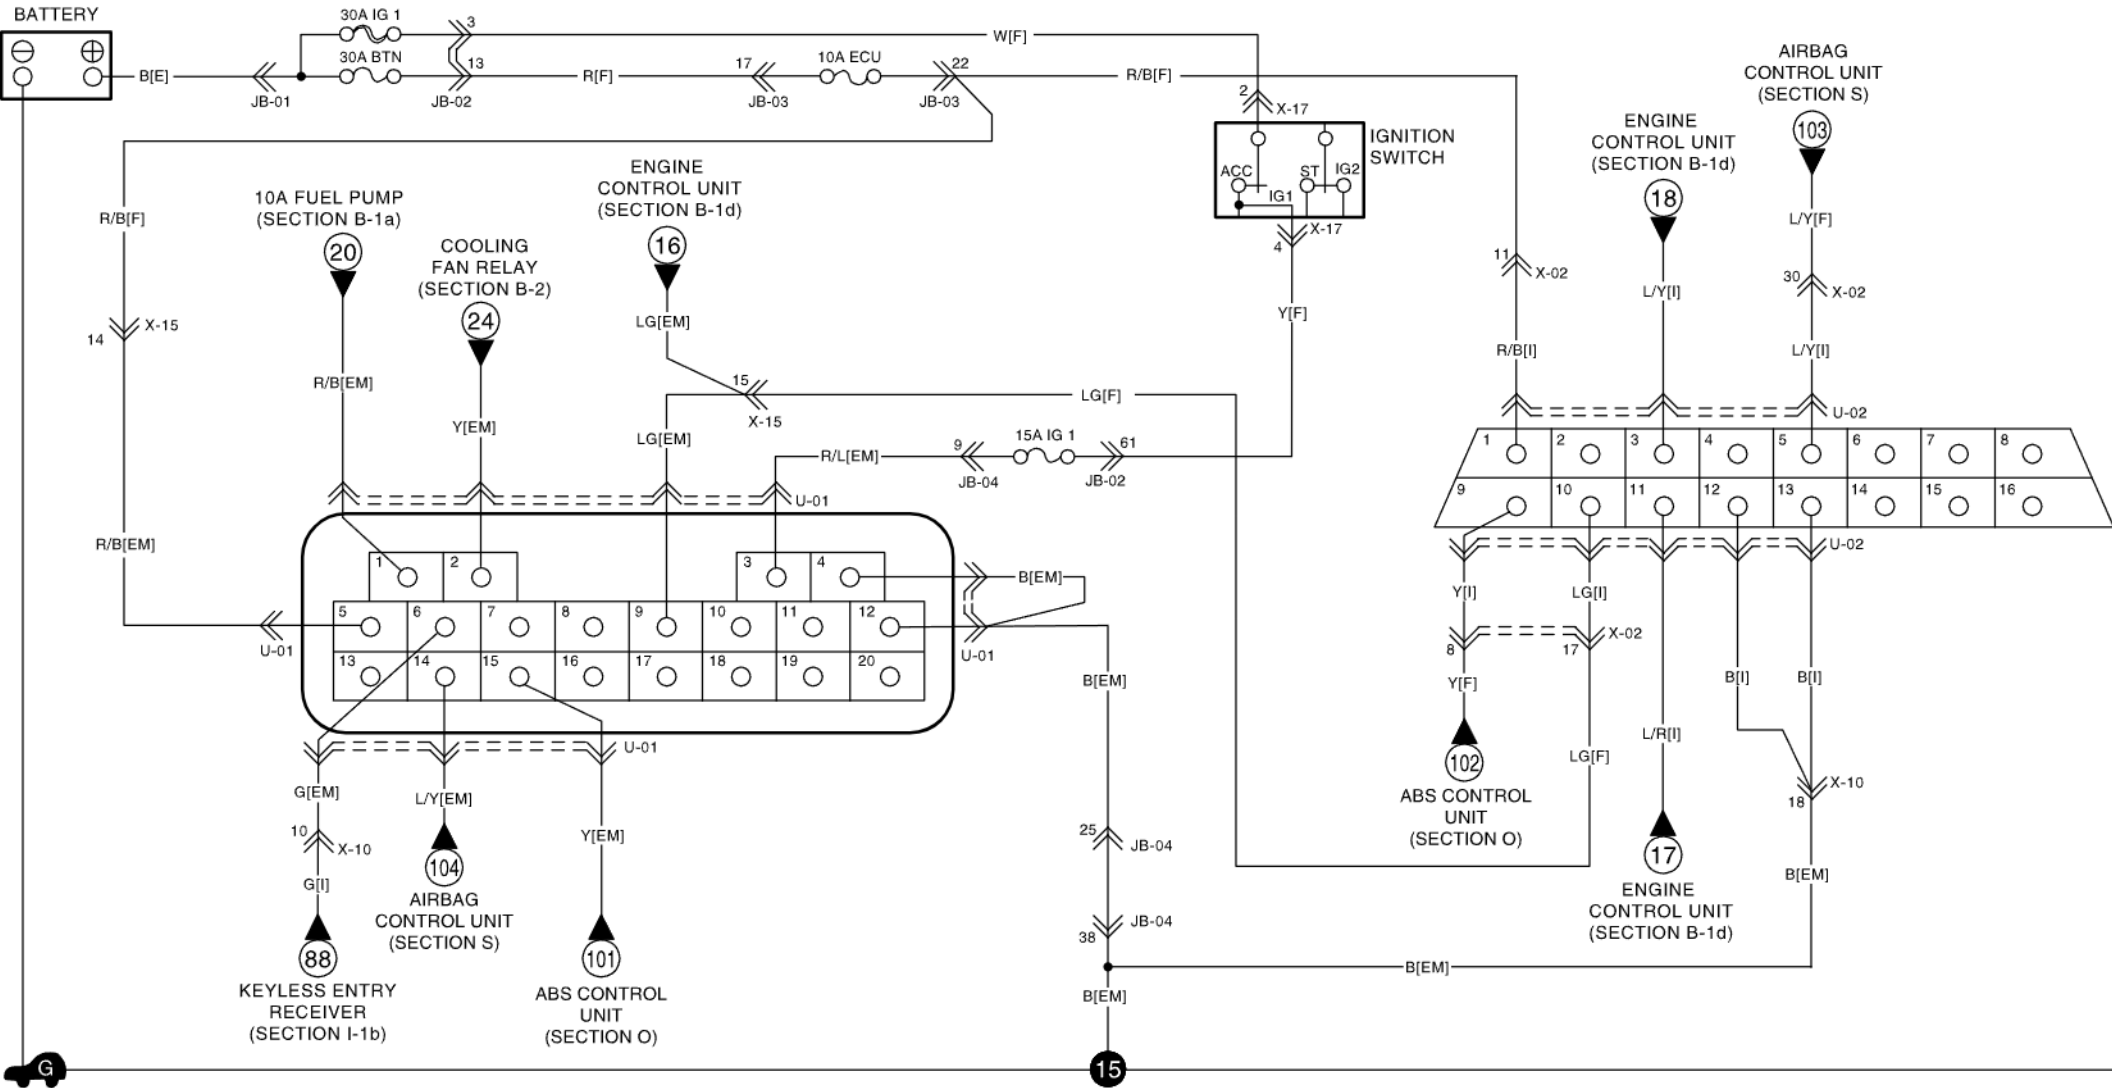


U-01 DIAGNOSIS CONNECTOR [EM]

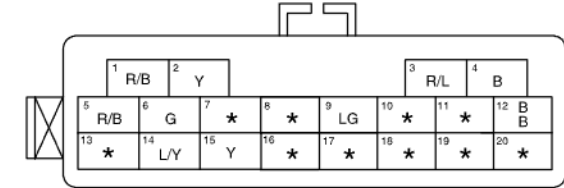



U-02 OBD CONNECTOR [I]



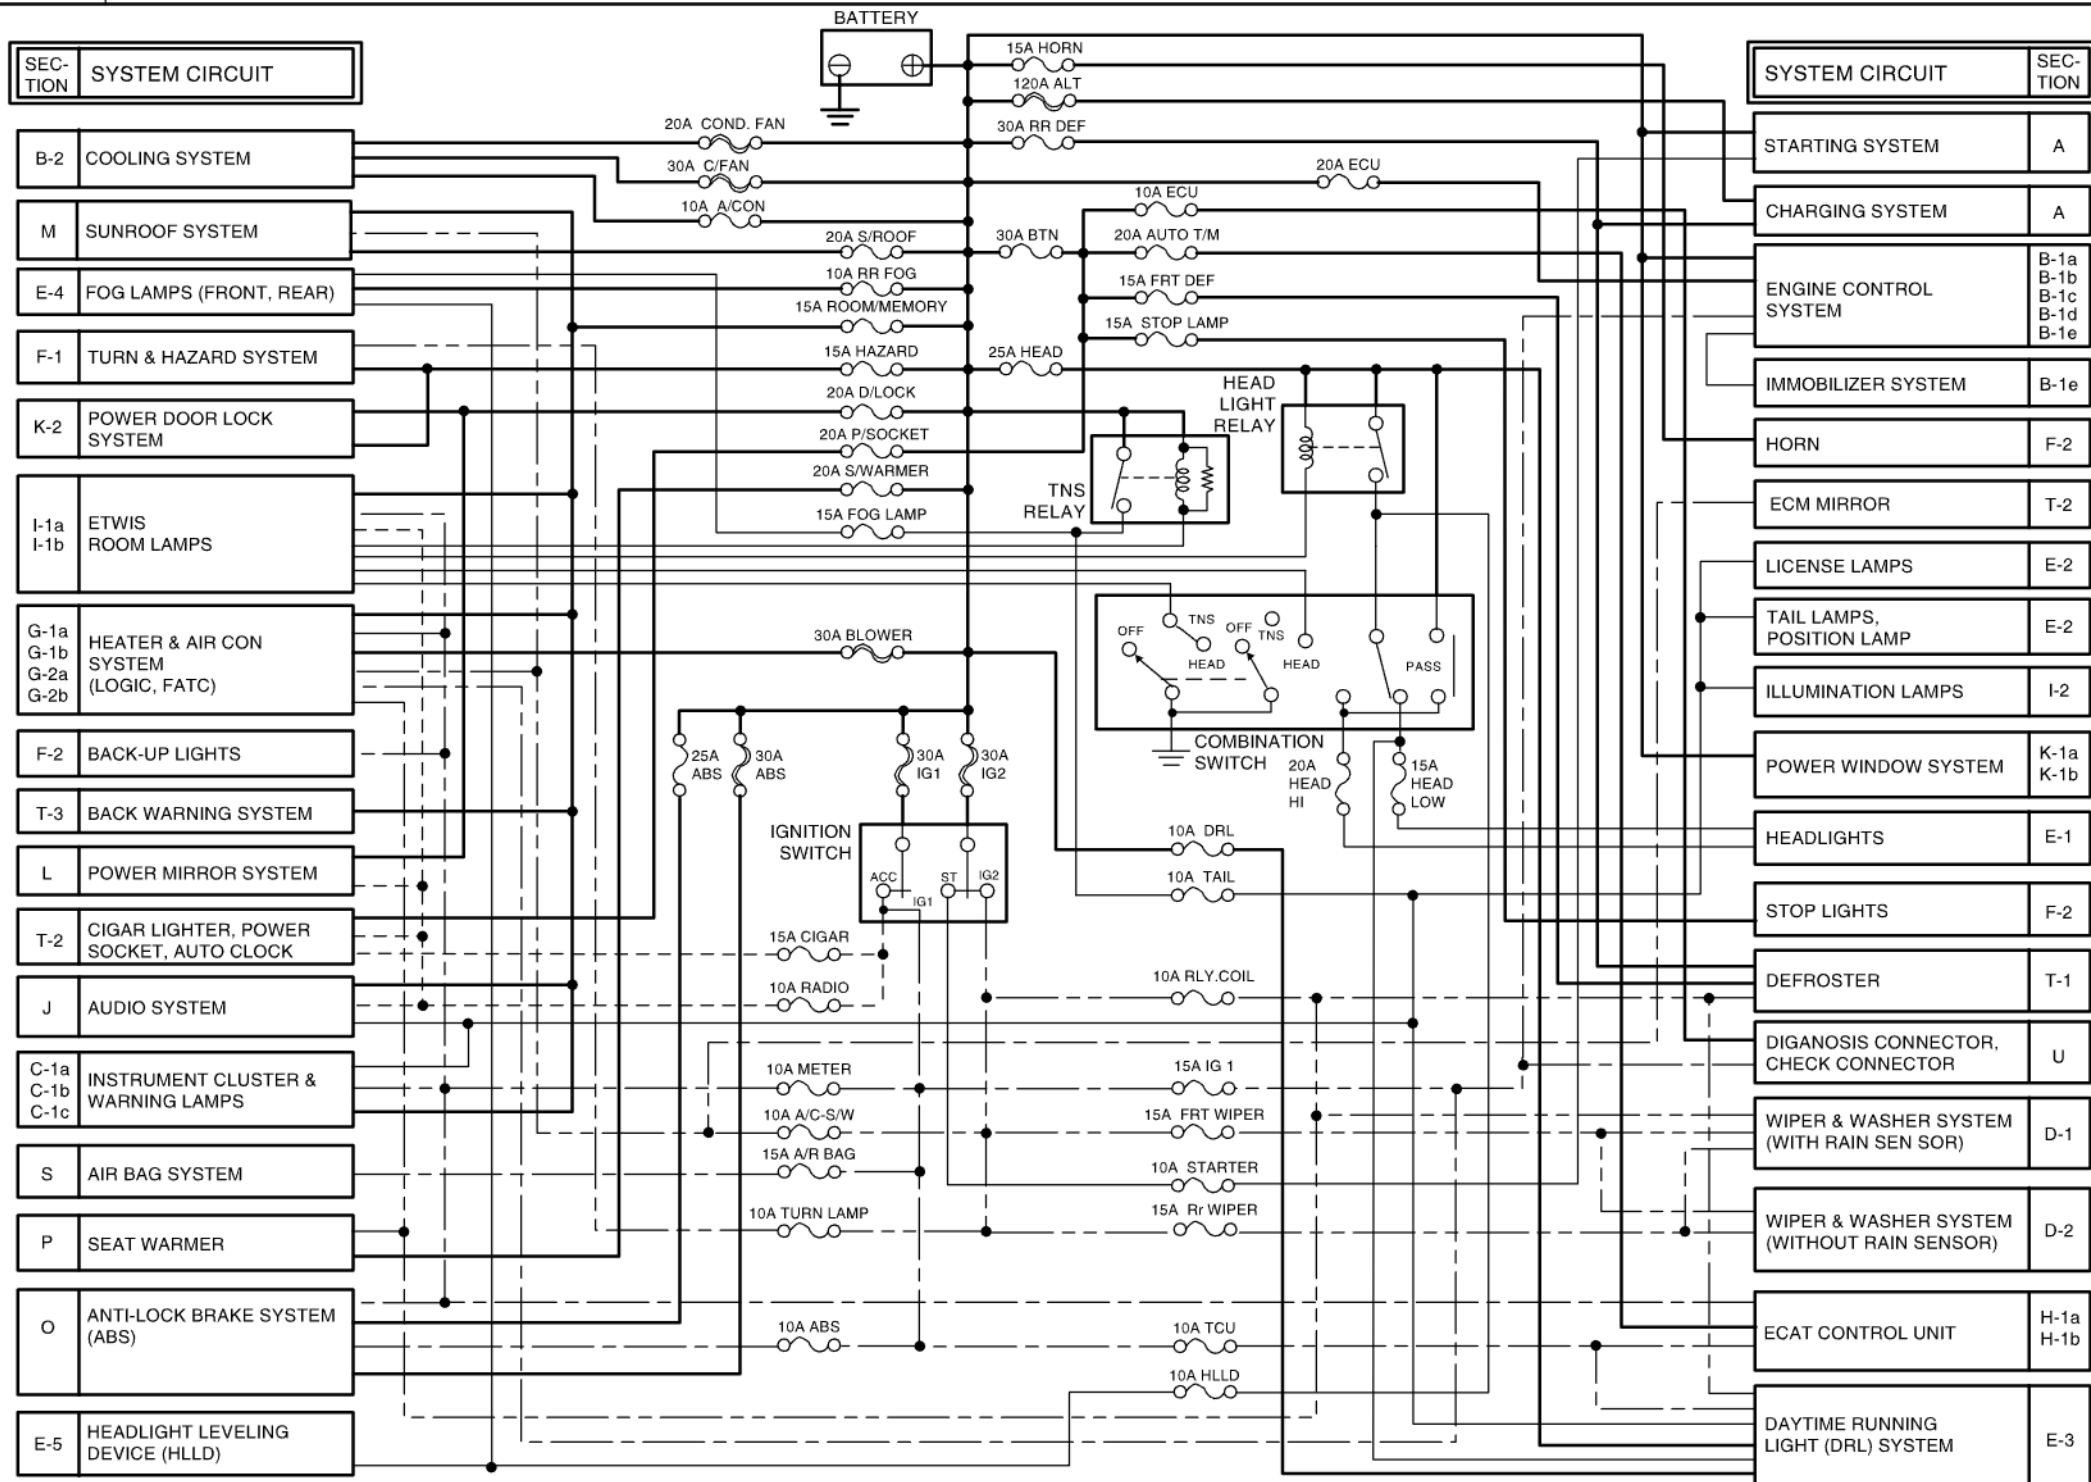



X-01 FRONT HARNESS [F] ~ INSTRUMENT PANEL HARNESS [I]

< > : AIRBAG
() : MIDDLE EAST
[] : FATC

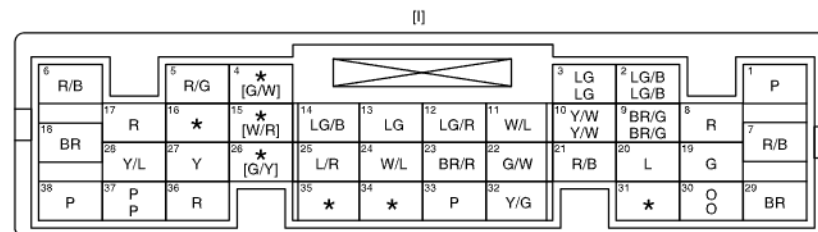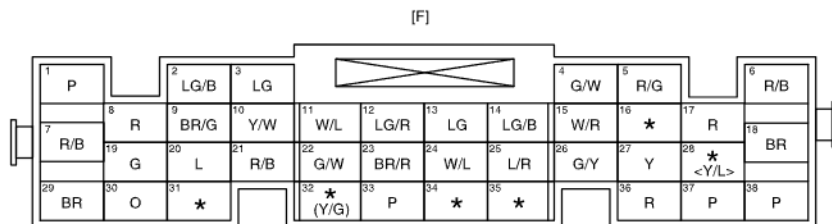

X-02 FRONT HARNESS [F] ~ INSTRUMENT PANEL HARNESS [I]

< > : A/T
() : ABS
[] : EUROPE



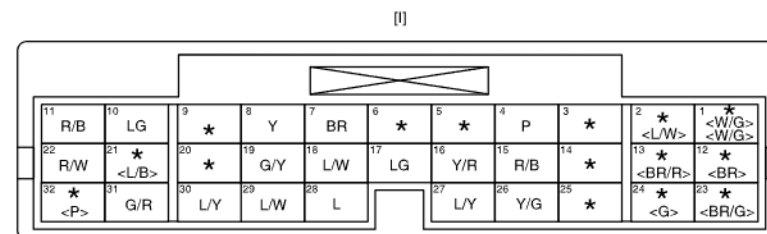
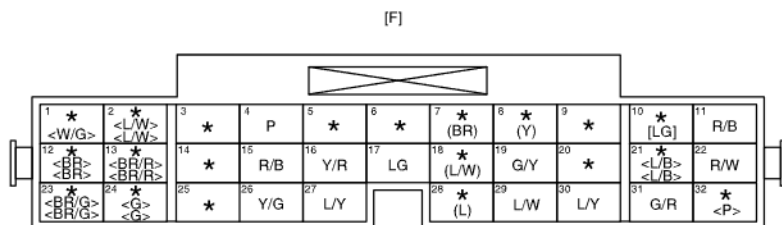


X-03 FRONT HARNESS [F] ~ INSTRUMENT PANEL HARNESS [I]



< > : A/T

X-04 FRONT HARNESS [F] ~ REAR HARNESS [Rr]



() : ABS

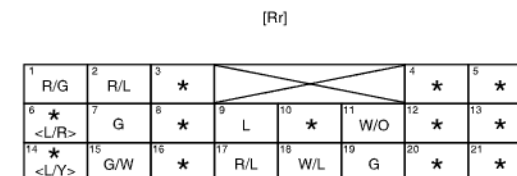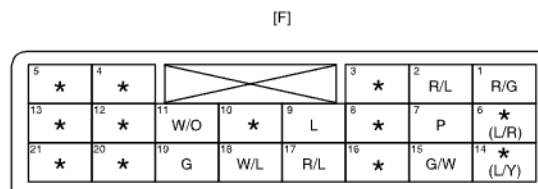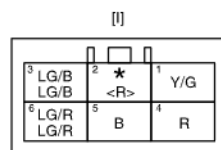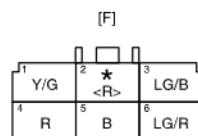

X-05 FRONT HARNESS [F] ~ REAR HARNESS [Rr]

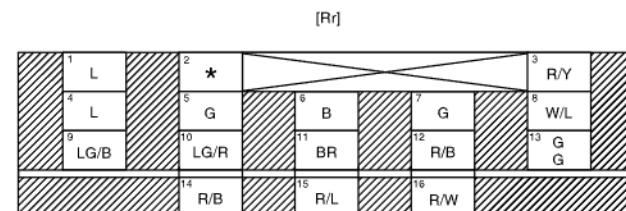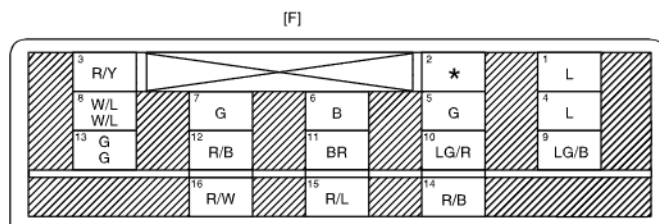


X-06 FRONT HARNESS [F] ~ DOOR LH HARNESS [Dr]

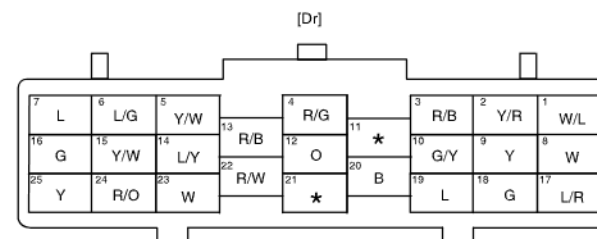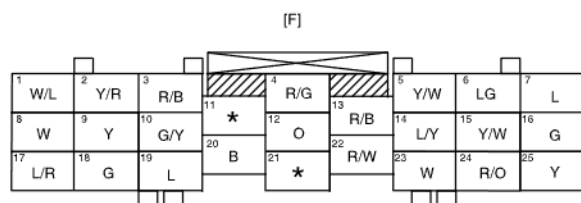


X-07 FRONT HARNESS [F] ~ DOOR RH HARNESS [Dr2]

[F]

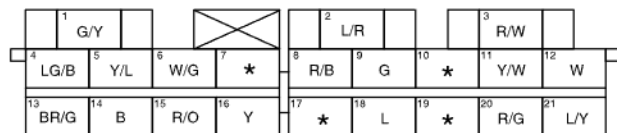


[Dr2]

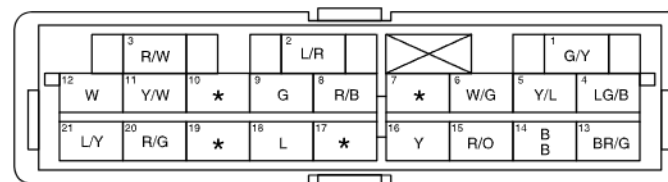


X-08 FRONT HARNESS [F] ~ ROOM HARNESS [Rm]

[F]

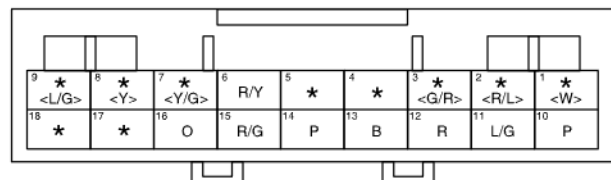


[Rm]

 


< > : RAIN SENSOR
[] : SUNROOF

X-09 FRONT HARNESS [F] ~ REAR DOOR LH HARNESS [Dr3]

[F]

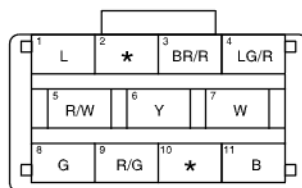


[Dr3]

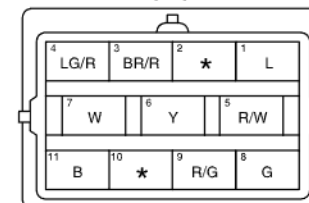


X-10 INSTRUMENT HARNESS [I] ~ EGI HARNESS [EM]

[I]

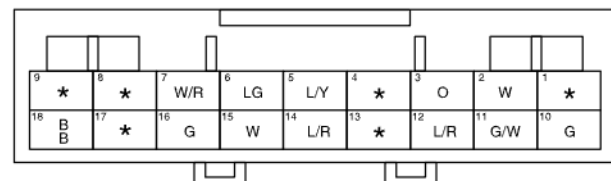


[EM]

 


X-12 REAR HARNESS [Rr] ~ REAR DOOR RH HARNESS [Dr4]


[Rr]

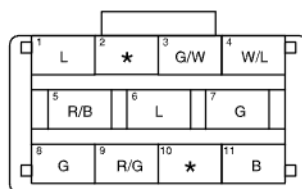

[Dr4]

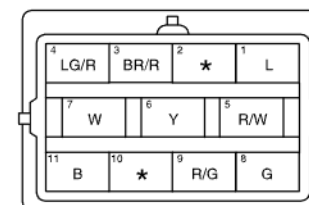

X-13 REAR HARNESS [Rr] ~ BACK DOOR HARNESS No.1 [BD1]

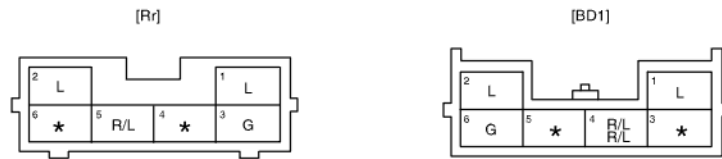


X-14 BACK DOOR HARNESS No.1 [BD1] ~ BACK DOOR HARNESS No.2 [BD2]



X-15 FRONT HARNESS [F] ~ EGI HARNESS [EM]


[] : EUROPE

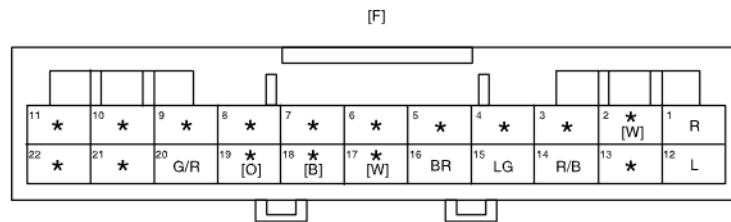


X-16 EGI HARNESS [EM] ~ ENGINE HARNESS [E]



X-17 IGNITION SWITCH [F]

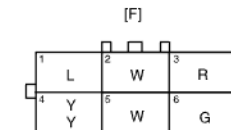

X-18 REAR HARNESS [Rr] ~ BACK DOOR HARNESS No.1 [BD1] B

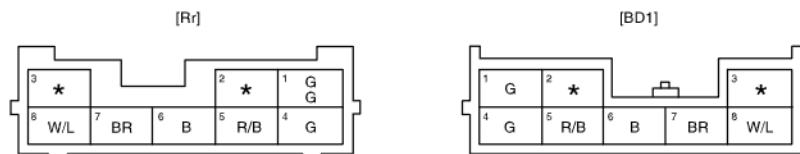

X-19 BACK DOOR HARNESS No.1 [BD1] ~ BACK DOOR HARNESS No.2 [BD2]



X-20 REAR HARNESS [Rr] ~ BACK DOOR HARNESS No.1 [BD1]



X-21 FRONT HARNESS [F] ~ REAR CONSOLE HARNESS [RC]

< > : A/T
() : M/T

X-4


COMMON CONNECTOR

X-22 INSTRUMENT PANEL HARNESS [I] ~ AIR CON HARNESS [AC]




X-23 INSTRUMENT PANEL HARNESS [I] ~ AIR CON HARNESS [AC]

() : LOGIC
< > : FATC

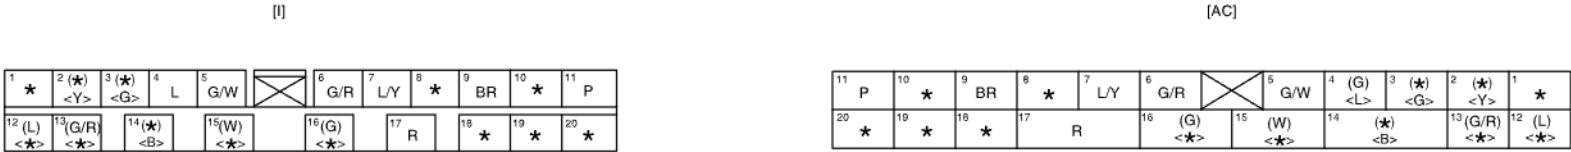



X-28 MAIN FUSE BOX [E]

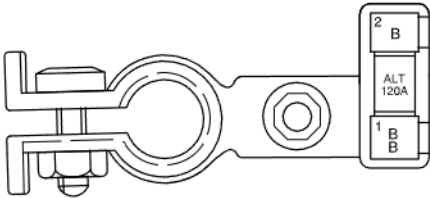

X-29 REAR HARNESS[Rr] ~ REAR BUMPER HARNESS[RB]




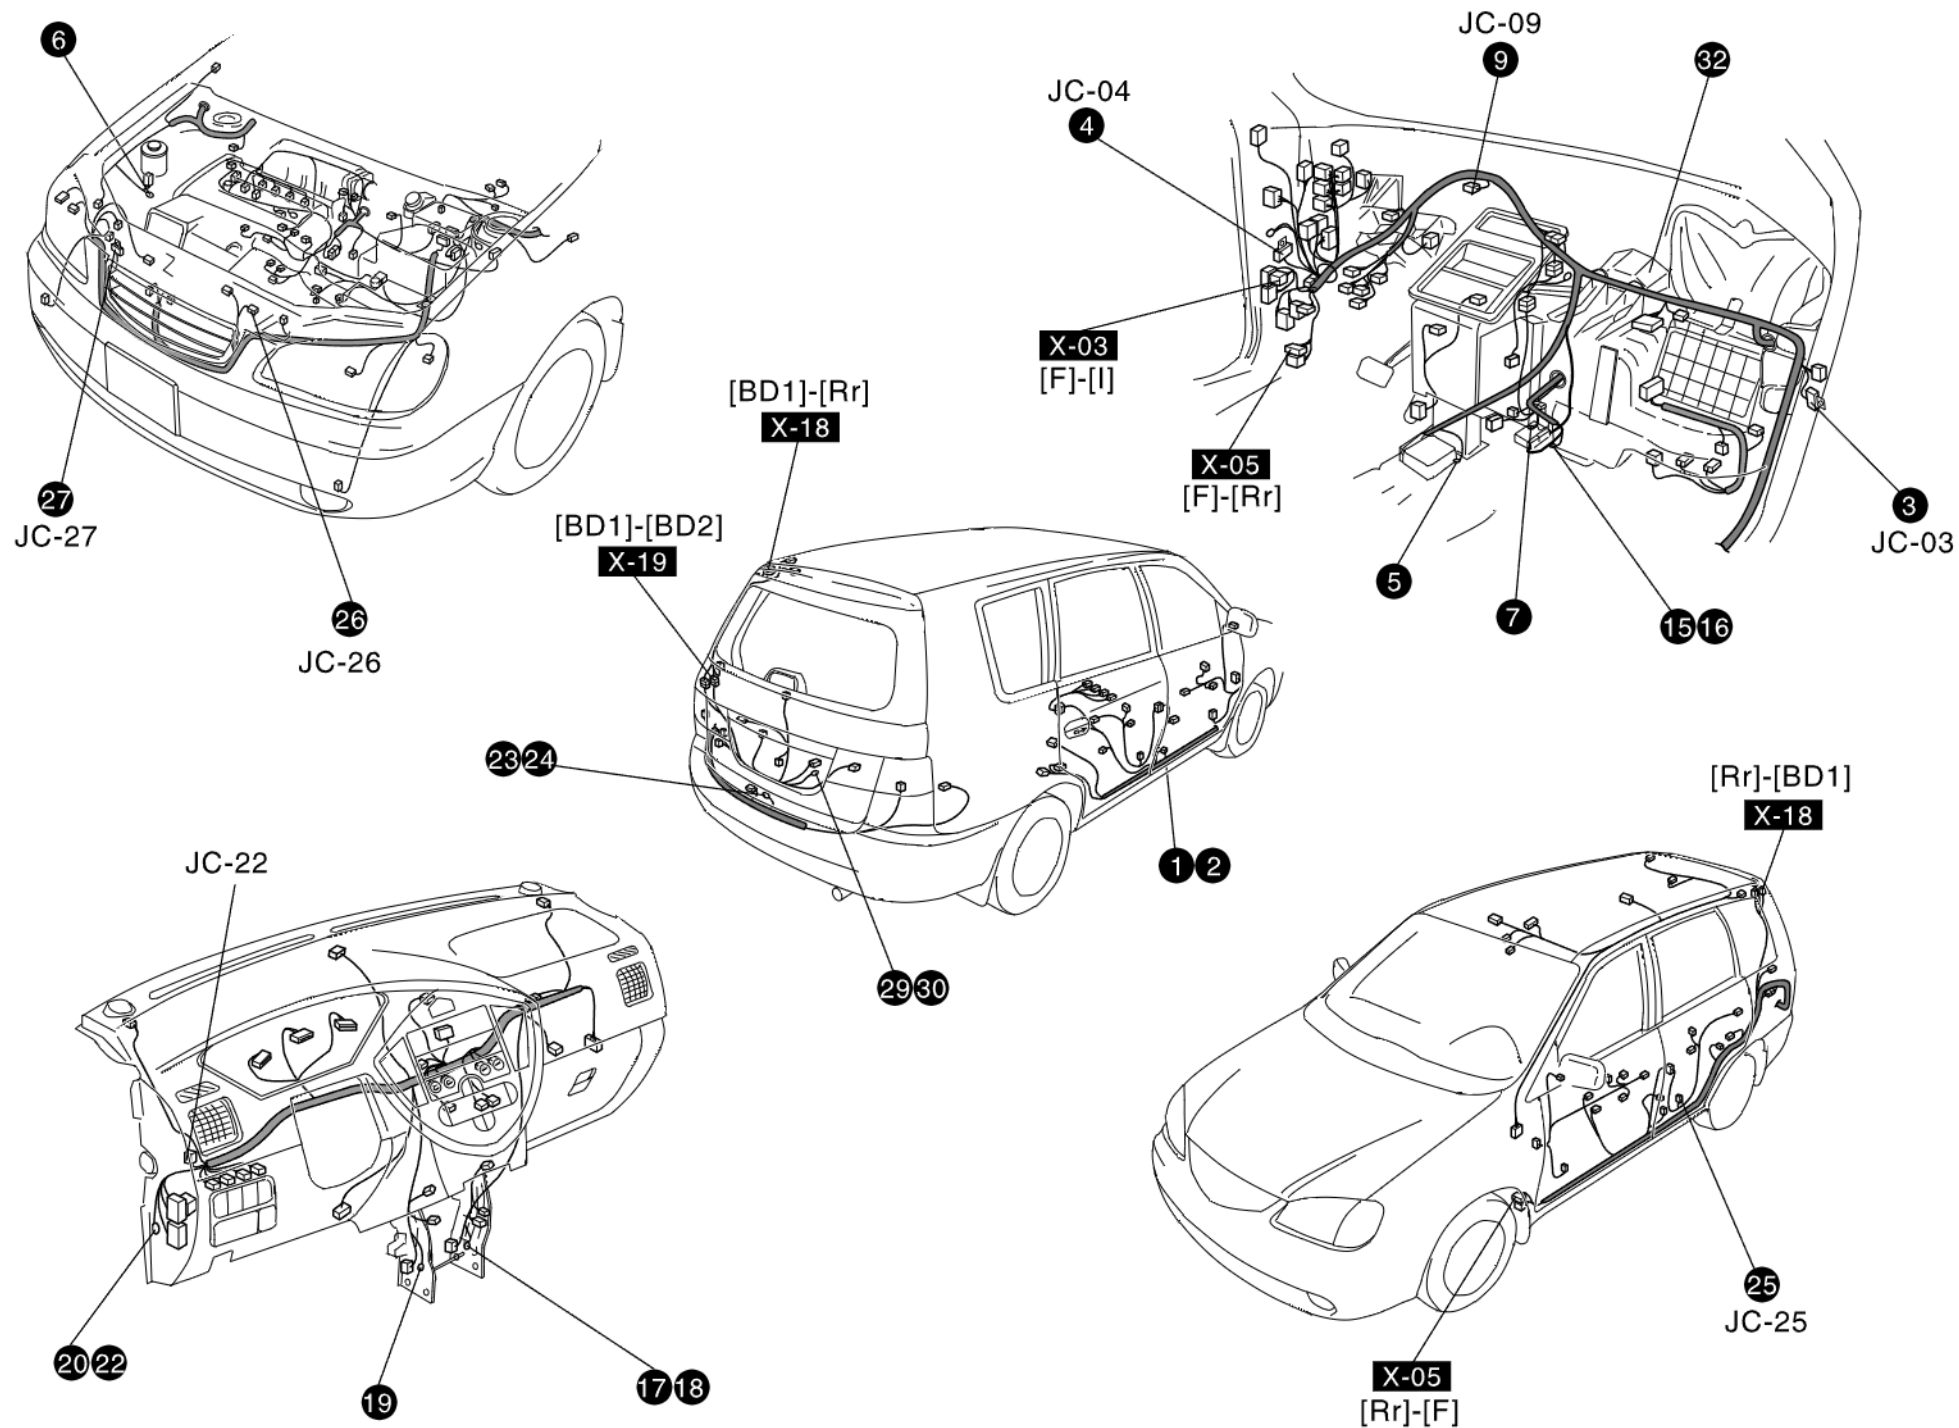

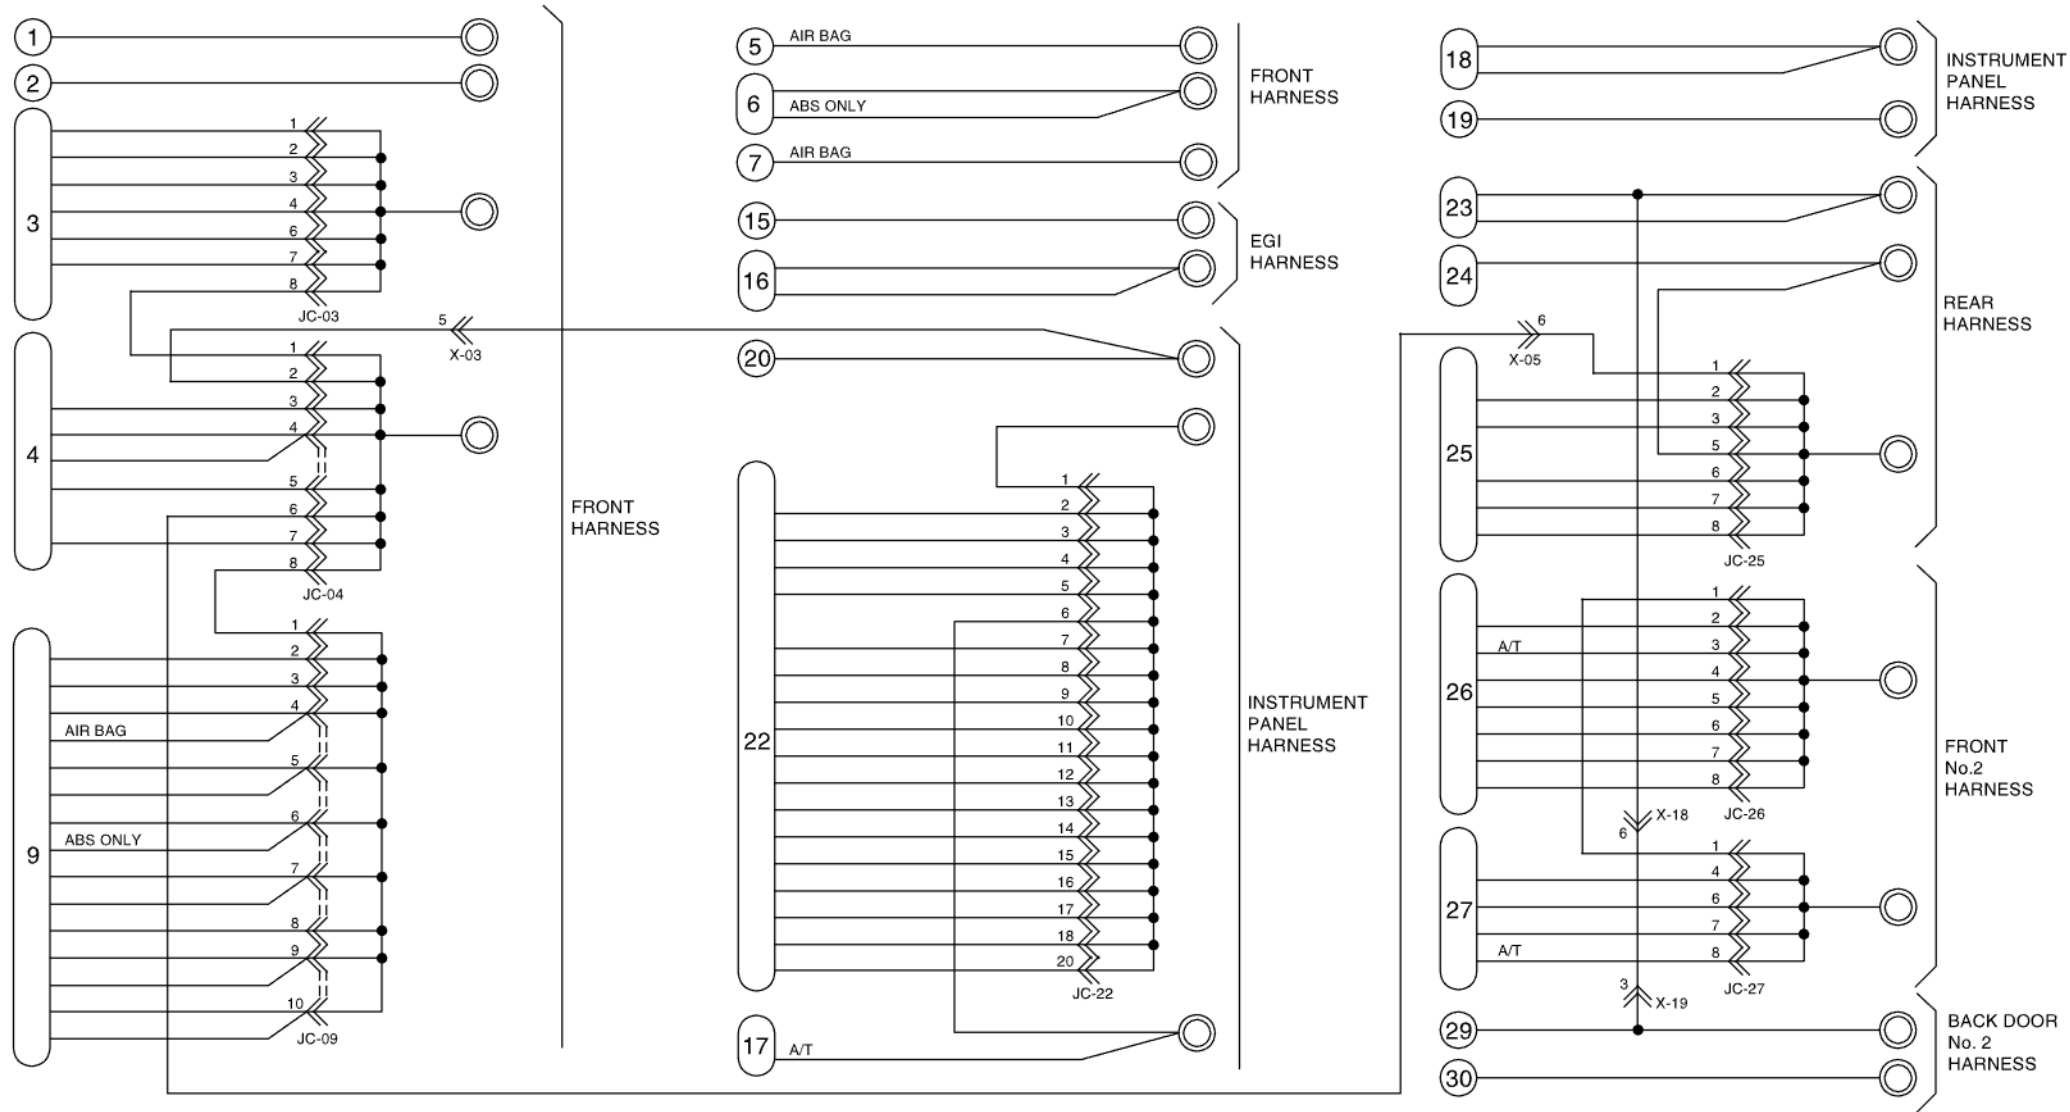


JC-03 SHORT CONNECTOR [F]

 (): SEAT WARMER




JC-04 SHORT CONNECTOR [F]

 


JC-09 SHORT CONNECTOR [F]
 
< >: ABS
(): DRL
[]: A/T




JC-22 SHORT CONNECTOR [I]

 
< >: A/T



JC-25 SHORT CONNECTOR [Rr]

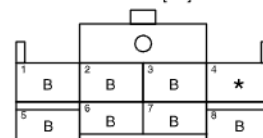

JC-26 SHORT CONNECTOR [F2]

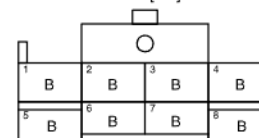

JC-27 SHORT CONNECTOR [F2]

