

2007-2008 ELECTRICAL**Power Distribution - TL****FUSE TO COMPONENTS INDEX****UNDER-HOOD FUSE/RELAY BOX****UNDER-HOOD FUSE/RELAY BOX REFERENCE**

Fuse Number	Amps	Wire Color	Component(s) or Circuit(s) Protected
1	15A	RED/YE L	Left headlight (igniter unit)
2	30 A	Internal connection	Relay control module
3	7.5 A	WHT/YEL	Left headlight (high/low switching solenoid)
4	10A	RED/BLK	A/T gear position indicator panel light, Audio unit light, Audio-HVAC display module light, Console box light, Dash lights brightness controller. Driver's and front passenger's door lock switch light, Driving position memory switch light, Footwell lights, Front parking/side marker lights, Front side marker lights, Glove box light, Hazard warning switch light, License plate lights, Moonroof switch light. Navigation unit (with navigation), Power mirror switch light, Rear side marker lights, Roof console, Seat heater switches light, Taillights, Trunk lid opener switch light, VSA OFF switch light.
5	7.5 A	WHT/GRN	Right headlight (high/low switching solenoid)
6	15A	RED/GRN	Right headlight (igniter unit)
7	7.5 A	Internal connection	Relay control module
8	15A	WHT/GRN	CKP sensor A/B (via PGM-FI main relay 1) (2 wires), CMP sensor (via PGM-FI main relay 1), Data link connector (DLC), Injectors (via PGM-FI main relay 1), No. 23 fuse (in the under-dash fuse/relay box), PCM (via PGM-FI main relay 1), PGM-FI main relay 1, PGM-FI main relay 2 (via PGM-FI main relay 1), Throttle actuator control module relay (via PGM-FI main relay 1)
9	30 A	BLU/YEL	A/C condenser fan motor (via A/C condenser fan relay)
10	10A	BLU/RED	Fog light relay, Fog lights (via fog light relay)
11	30 A	BLU/BLK	Radiator fan motor (via radiator fan relay)
12	7.5 A	BLU/RED	A/C compressor clutch (via A/C compressor clutch relay)
13	20 A	RED ⁽¹⁾	Brake lights, ECM/PCM, High mount brake light, Multiplex integrated control unit (MICU)
		Internal connection	Horn relay. Horns (via relay control module)
14	40 A	BLK/YEL	Rear window defogger (via rear window defogger relay)
15	40 A	YEL	No. 5 through No. 9 fuses in the under-dash fuse/relay box
		Internal connection	No. 7 fuse in the under-hood fuse/relay box
16	15A	WHT/BLK	Multiplex integrated control unit (MICU) (via hazard warning switch), Turn signal/hazard relay

17	30 A	WHT/RED	VSA modulator-control unit (MR+B)
18	40 A	WHT	VSA modulator-control unit (FSR+B)
19	40 A	GRN/WHT	No. 1 through No. 4 fuses in the under-dash fuse/relay box
20	40 A	BLU	No. 12 through No. 17 fuses in the under-dash fuse/relay box
21	40 A	WHT/BLU	Blower motor (via blower motor relay)
22	120 A	-	Battery, Power distribution
23	50A (IG)	WHT	Ignition switch (BAT)
	50A (P/W)	WHT/RED	Power window relay. No. 24 through No. 28 fuses in the under-dash fuse/relay box

(1) Via brake pedal position switch

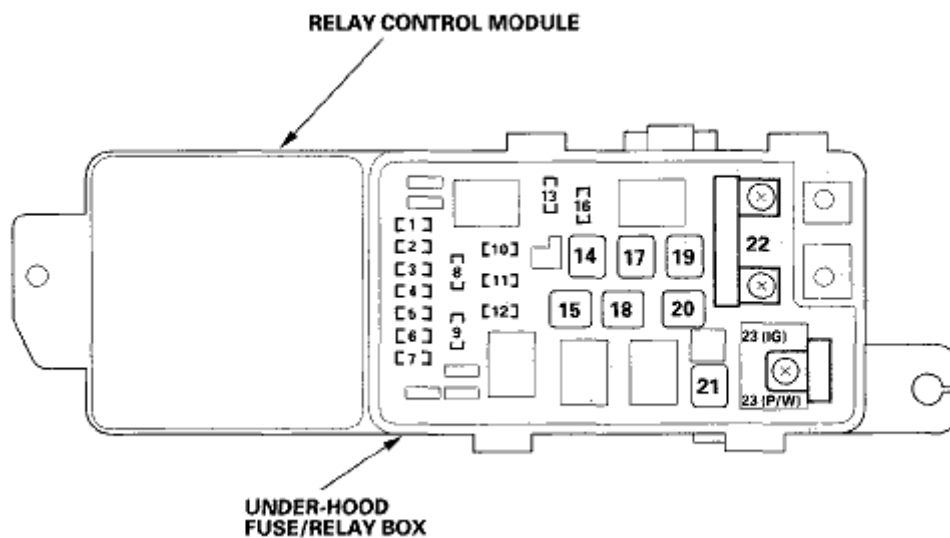


Fig. 1: Identifying Under-Hood Fuse/Relay Box
 Courtesy of AMERICAN HONDA MOTOR CO., INC.

UNDER-DASH FUSE/RELAY BOX

UNDER-DASH FUSE/RELAY BOX REFERENCE

Fuse Number	Amps	Wire Color	Component(s) or Circuit(s) Protected
1	15A	WHT/GRN	Throttle actuator control module (via throttle actuator control module relay)
2	15 A	Fuse/relay box socket	Ignition coil relay
		BLK/WHT	Ignition coils (via ignition coil relay)
3	15A	BLU/RED	Daytime running lights relay Daytime running lights (via daytime running light relay)
4	15A	WHT/BLK	A/F sensors (front and rear bank), Secondary HO2S (front and rear bank), EVAP canister vent shut value
5	20 A	WHT	Audio unit, Stereo amplifier
6	7.5 A	GRY/BLU	Courtesy lights, HandsfreeLink control unit, Ignition key light. Keyless receiver unit. Map lights. Power mirror control unit, Power seat control

			unit. Roof console, Trunk light, Vanity mirror lights
7	7.5 A	WHT/RED	AcuraLink control unit (XM receiver) ⁽²⁾ . Clock (without navigation), Combination switch control unit. Display panel control unit, Front passenger's power window switch/control unit, Gauge control module, Immobilizer control unit-receiver, Immo unit (except '07 USA models), Power mirror control unit, Power window master switch (door multiplex control unit), Security indicator, XM receiver ⁽¹⁾
		Fuse/relay box socket	Multiplex integrated control unit (MICU)
8	20 A	WHT	Trunk lid opener solenoid (via trunk lid opener switch and trunk lid opener main switch)
		Fuse/relay box socket	Multiplex integrated control unit (MICU)
9	15A	WHT/RED	Front accessory power socket (via accessory power socket relay), Console accessory power socket (via accessory power socket relay)
10	7.5 A	WHT	ODS unit, SRS unit
11	30 A	GRN	Windshield wiper motor
12	7.5 A	RED/WHT	TPMS control unit
13	20 A	RED/WHT	Front passenger's power seat recline motor (via front passenger's power seat adjustment switch)
14	20 A	WHT/BLU	Power seat control unit
15	20 A	RED/BLK	Seat heaters and seat heater switches indicator light (via seat heater relay and seat heater switches)
16	20 A	WHT/RED	Lumbar support motor (via lumbar support switch). Power seat control unit
17	20 A	WHT/GRN	Front passenger's power seat slide motor (via front passenger's power seat adjustment switch)
18	15A	BLK/YEL	Alternator, ECM/PCM (via brake pedal position switch), ELD unit. Engine mount control solenoid valve, EVAP canister purge valve, Reverse lockout solenoid (M/T), VSA modulator-control unit
19	15A	BLK/GRN	ECM/PCM, Immobilizer control unit-receiver, Immo unit (except '07 USA models)
		YEL/GRN	Fuel pump (via PGM-FI main relay 2)
20	15A	YEL/GRN	Automatic dimming inside mirror, Electrical compass unit (without navigation). Power seat control unit. Power mirror control unit. Windshield washer motor
21	7.5 A	YEL	AcuraLink control unit (XM receiver) ⁽²⁾ , Automatic lighting control unit. Back-up lights (via MICU or Back-up SW), Clock (without navigation), Combination switch control unit. Gauge control module, Keyless receiver unit. Multiplex integrated control unit (MICU), Relay control module, Seat belt tension reducers, TPMS control unit. Passenger's airbag cutoff indicator
22	10A	WHT/RED	SRS unit
23	7.5 A	YEL/WHT	Radiator fan relay (via diode)
		Fuse/relay box socket	A/F sensor relay
24	20 A	YEL/RED	Left rear power window motor (via left rear window switch)

25	20 A	YEL/BLU	Right rear power window motor (via right rear window switch)
26	30 A	GRN/BLK	Front passenger's power window motor (via front passenger's power window switch)
27	30 A	GRN/WHT	Driver's power window motor (via power window master switch), Door multiplex control unit
28	20 A	GRN	Moonroof control unit
29	7.5 A	ORN	ECM/PCM (VBSOL 2)
30	7.5 A	BLK/YEL	A/C compressor clutch relay, A/C condenser fan relay (via diode), Blower motor relay, Climate control unit, Fan control relay (via diode), Power mirror actuators and defoggers, Recirculation control motor, Rear window defogger relay, seat heater relay
31	-	-	Not used
32	7.5 A	YEL/RED	AcuraLink control unit (XM receiver) ⁽²⁾ , Audio unit, Display panel control unit, HandsFreeLink control unit, Navigation unit (with navigation), Shift lock solenoid (A/T)
		Fuse/relay box socket	Accessory power socket relay, Multiplex integrated control unit (MICU)
33	-	-	Not used

(1) Canada models, USA models without navigation

(2) USA models with navigation

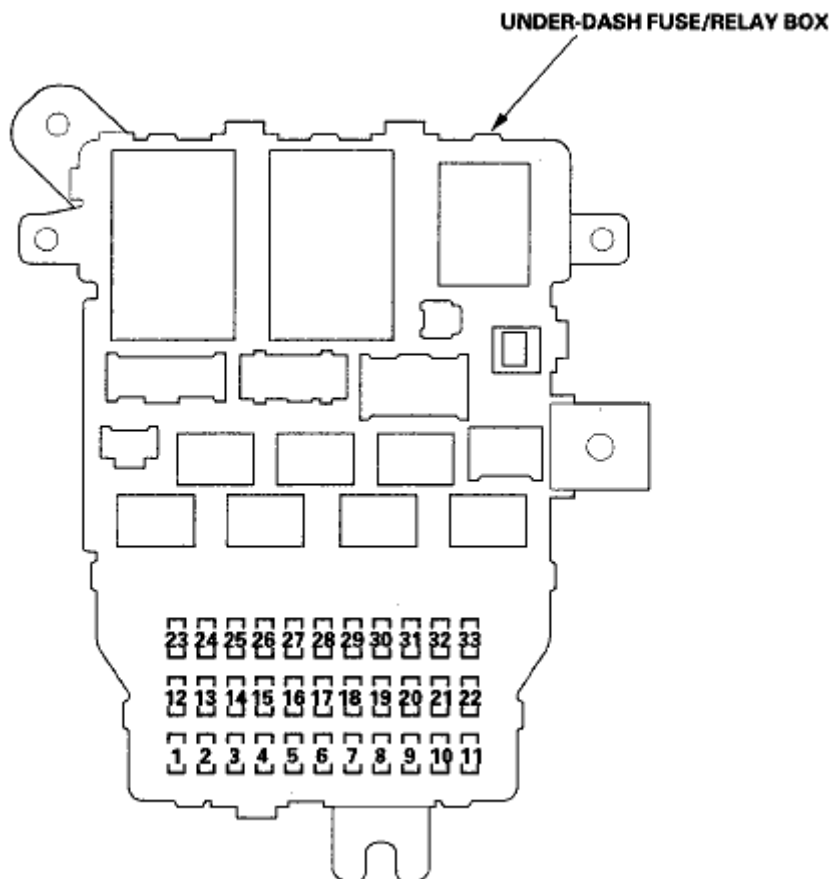


Fig. 2: Identifying Under-Dash Fuse/Relay Box

Courtesy of AMERICAN HONDA MOTOR CO., INC.

AUXILIARY UNDER-DASH FUSE HOLDER

AUXILIARY UNDER-DASH FUSE HOLDER REFERENCE

Fuse Number	Amps	Wire Color	Component(s) or Circuit(s) Protected
35 (A/T)	7.5 A	PNK	PCM
36	7.5 A	LT BLU	ECM/PCM

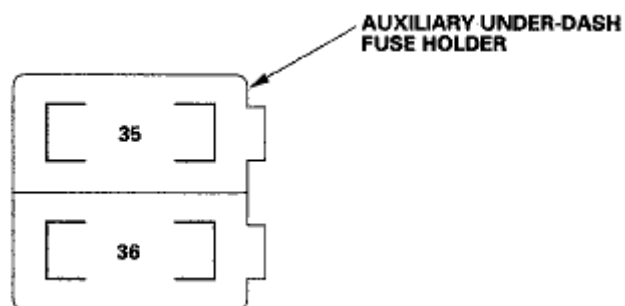


Fig. 3: Identifying Auxiliary Under-Dash Fuse Holder
Courtesy of AMERICAN HONDA MOTOR CO., INC.