

Automatic Transmission ('91-'94 Models)

Special Tools	14-2
Description	
General Operation	14-3
Clutches	14-6
Power Flow	14-9
Electronic Control	
System	14-15
Hydraulic Control	14-18
Hydraulic Flow	14-28
Lock-up System	14-39
ATF Cooler	14-45
Electrical System	
Component Locations	14-47
Troubleshooting Procedures	14-50
Symptom-to-Component	
Chart	14-52
Lock-up Control Solenoid Valve A/B	
Test	14-79
Replacement	14-79
Shift Control Solenoid Valve A/B	
Test	14-80
Replacement	14-80
Linear Solenoid	
Test	14-81
Replacement	14-81
Mainshaft/Countershaft Speed Sensors	
Replacement	14-83

Hydraulic System	
Symptom-to-Component	
Chart	14-84
Road Test	14-88
Stall Speed Test	14-90
Fluid Level	
Checking/Changing	14-91
Pressure Testing	14-92
Transmission	
Removal	14-96
Reassembly	14-147
Installation	14-153
Component Location Index	
Left Side Cover/	
Transmission	14-100
Transmission Housing ...	14-102
Torque Converter Housing/	
Valve Body	14-104
Left Side Cover Removal ...	14-106
Transmission Housing	
Removal	14-107
Valve Body	
Removal	14-108
Valve Body Repair	14-109
Valve Assembly	14-110
Valve Caps Description	14-112
ATF Pump Inspection	14-113
Main Valve Body	
Disassembly/Inspection	
Reassembly	14-114

Secondary Valve Body	
Disassembly/Inspection	
Reassembly	14-116
Servo Body/Throttle Valve Body	
Disassembly/Inspection	
Reassembly	14-118
Regulator Valve Body	
Disassembly/Inspection	
Reassembly	14-120
Lock-up Valve Body	
Disassembly/Inspection	
Reassembly	14-121
2nd Accumulator Body	
Disassembly/Inspection	
Reassembly	14-122
Mainshaft	
Disassembly/Inspection	
Reassembly	14-123
Countershaft	
Disassembly/Inspection	
Reassembly	14-124
Inspection/Installation ...	14-125
One-way Clutch/Parking Gear	
Disassembly/Inspection	
Reassembly	14-128
Secondary Shaft	
Disassembly/Inspection	
Reassembly	14-129
Inspection/Installation ...	14-130

Clutch	
Component Location	
Index	14-132
Disassembly	14-135
Reassembly	14-137
1st-hold Clutch Bearing	
Replacement	14-141
Torque Converter Housing Bearings	
Mainshaft Bearing/Oil Seal	
Replacement	14-142
Countershaft Bearing	
Replacement	14-143
Secondary Shaft Bearing	
Replacement	14-143
Transmission Housing Bearings	
Replacement	14-144
Reverse Idler Gear	
Installation	14-145
Manual Valve Detent Spring	
Replacement/Adjustment	14-146
Parking Brake Stopper	
Inspection/	
Adjustment	14-146
Torque Converter/	
Drive Plate	14-152
Shift Cable	
Adjustment	14-157
Removal/Installation	14-158
Shift Lever	14-159
Shift Indicator Panel	
Adjustment	14-160