

Cooling

Illustrated Index

⚠ WARNING System is under high pressure when the engine is hot. To avoid danger of releasing scalding engine coolant, remove the cap only when the engine is cool.

Total Cooling System Capacity: Including expansion tank
 2.1 ℓ (2.2 US qt, 1.8 Imp qt)
 5 M/T: 16.0 ℓ (17.0 US qt, 14.1 Imp qt)
 4 A/T: 16.5 ℓ (17.4 US qt, 14.5 Imp qt)

Radiator, Water Pipes and Hoses:

RADIATOR

Engine coolant refilling and bleeding, page 10-5
 Leak test, page 10-8
 Inspect soldered joints and seams for leaks.
 Blow out dirt from between core fins with compressed air.
 If insects, etc., are clogging radiator, wash them off with low-pressure water.

NOTE:

- Check all cooling system hoses for damage, leaks or deterioration and replace if necessary.
- Check all hose clamps and retighten if necessary.
- Use new O-rings when reassembling.



