

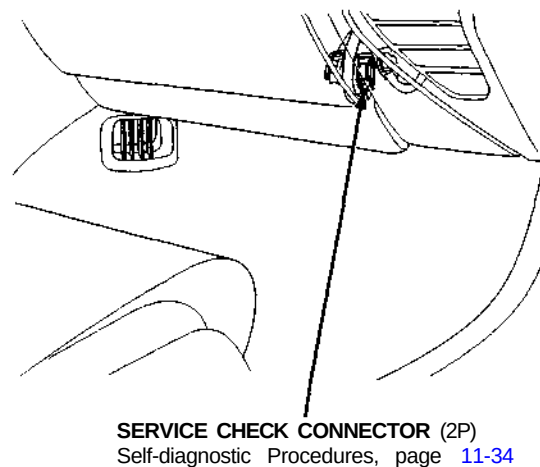


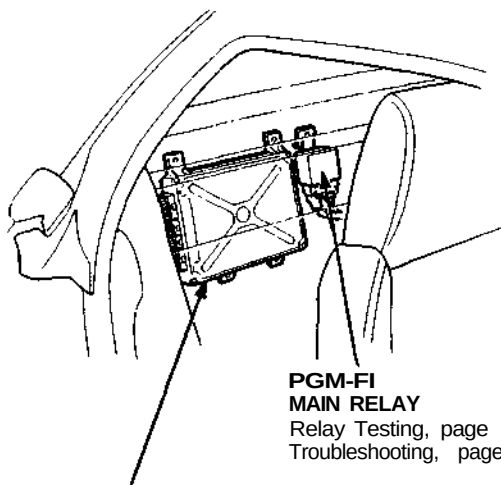

Component Locations



Index

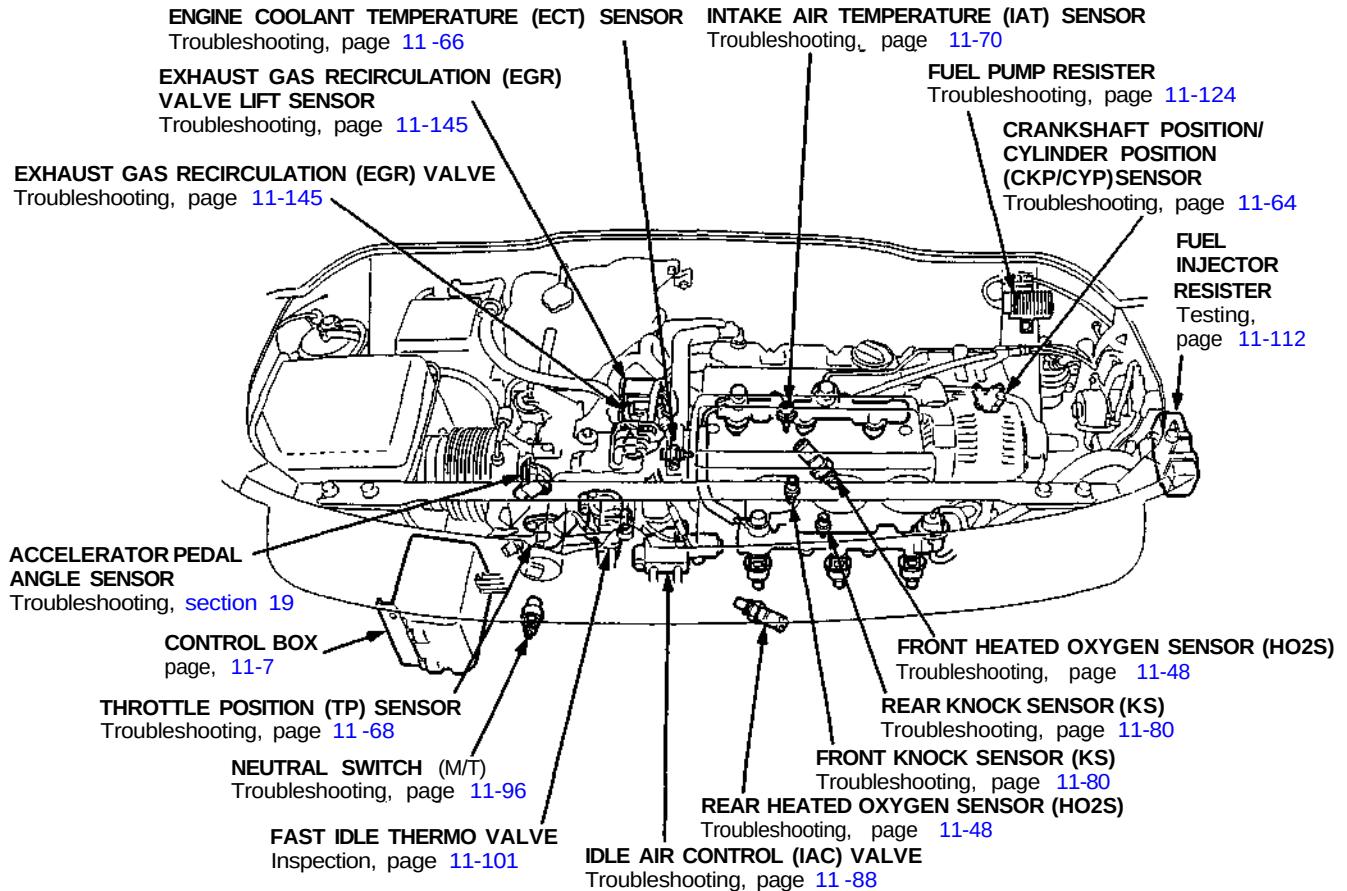

ENGINE CONTROL MODULE (ECM)
Self-diagnostic Procedures, page 11-34
Troubleshooting, page 11-42

Component Locations

Index

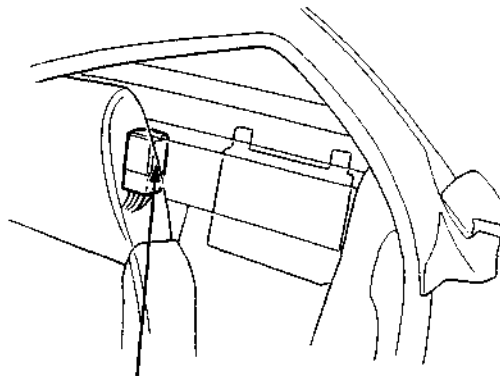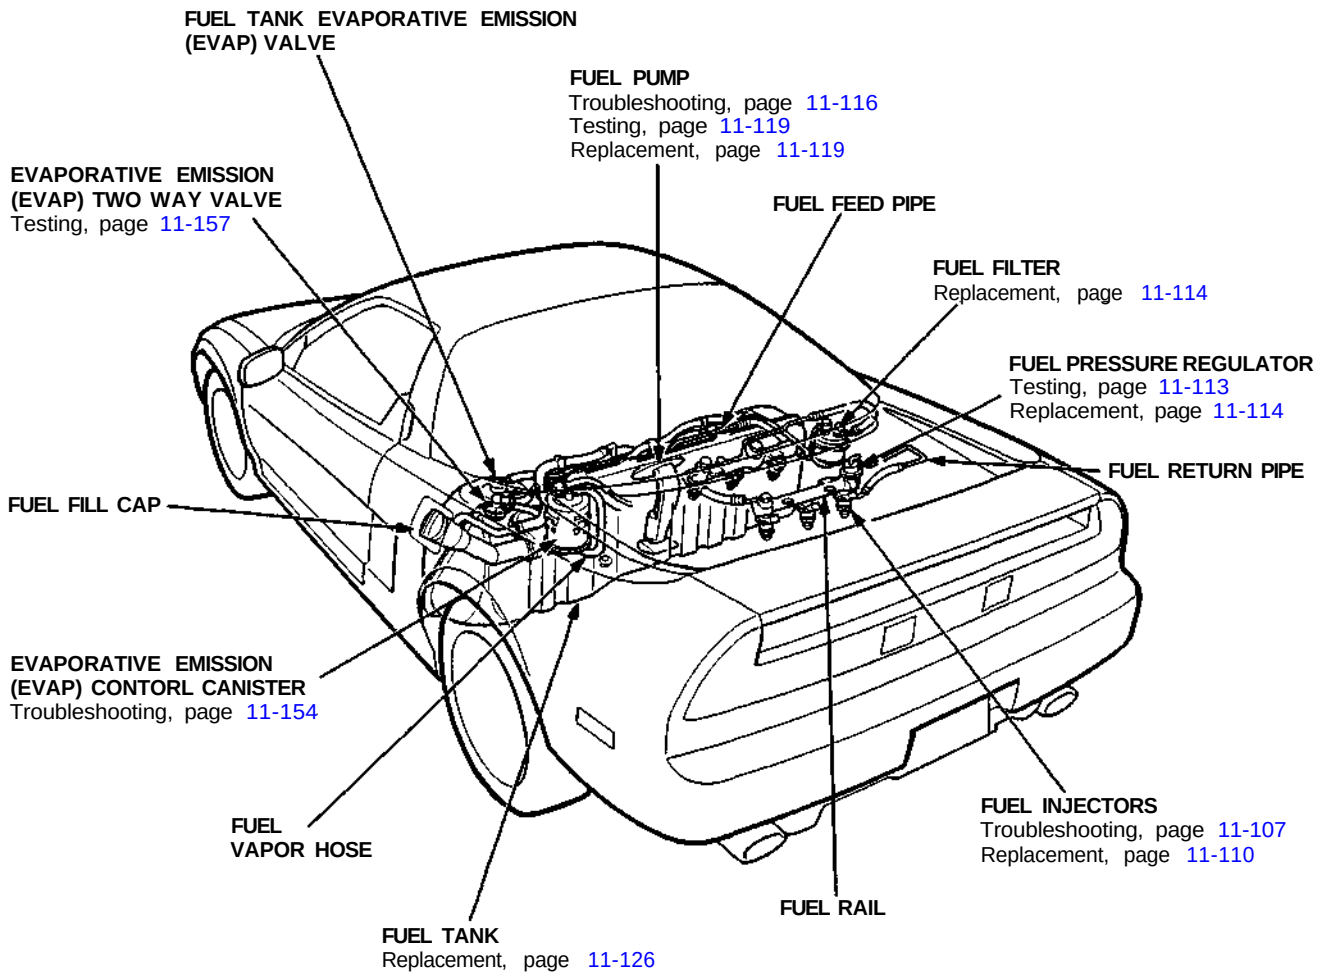

FUEL PUMP RELAY
Troubleshooting, page [11-116](#)

