

Idle Control System

Troubleshooting Flowchart — Automatic Transaxle (A/T) Gear Position Signal

This signals the ECM when the transmission is in Neutral or Park.



