


Illustrated Index

Torque Converter Housing/Valve Body

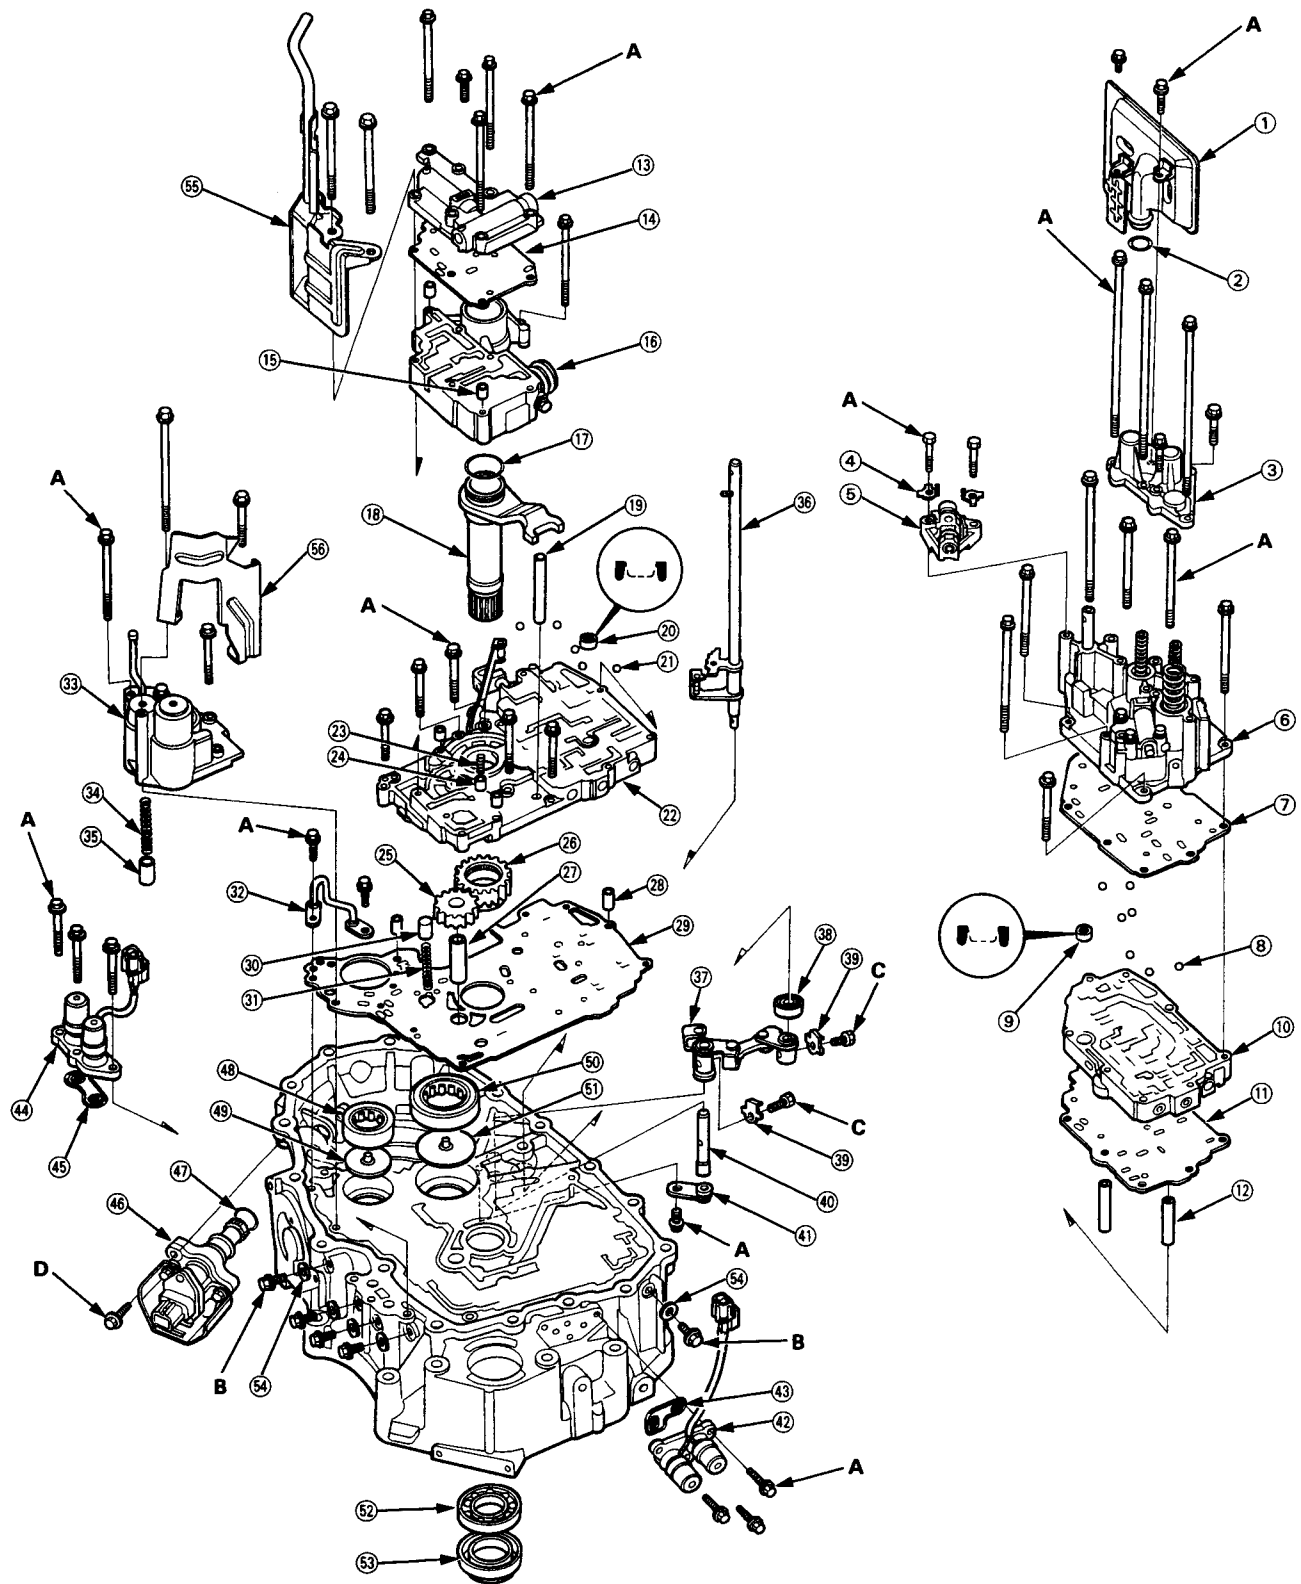

cardiagn.com



- | | |
|--|--|
| ① ATF STRAIER Clean or replace. | ②9 MAIN SEPARATOR PLATE |
| ② O-RING Replace. | ③0 TORQUE CONVERTER CHECK VALVE |
| ③ ACCUMULATOR COVER | ③1 TORQUE CONVERTER CHECK VALVE SPRING |
| ④ LOCK WASHER Replace. | ③2 ATF LUBRICATION PIPE |
| ⑤ SERVO DETENT BASE | ③3 2ND ACCUMULATOR BODY |
| ⑥ SERVO VALVE BODY | ③4 LSD RELIEF VALVE SPRING |
| ⑦ SERVO SEPARATOR PLATE | ③5 LSD RELIEF VALVE |
| ⑧ CHECK BALLS (7/32) #7 | ③6 CONTROL SHAFT |
| ⑨ SECONDARY VALVE BODY FILTER Replace. | ③7 CONTROL LEVER |
| ⑩ SECONDARY VALVE BODY | ③8 OIL SEAL Replace. |
| ⑪ SECONDARY SEPARATOR PLATE | ③9 LOCK WASHER Replace. |
| ⑫ DOWEL PIN | ④0 CHANGE SHAFT |
| ⑬ LOCK-UP VALVE BODY | ④1 CHANGE SHAFT CAP |
| ⑭ LOCK-UP SEPARATOR PLATE | ④2 SHIFT CONTROL SOLENOID VALVE ASSEMBLY |
| ⑮ DOWEL PIN | ④3 SHIFT CONTROL SOLENOID FILTER/GASKET Replace. |
| ⑯ REGULATOR VALVE BODY | ④4 LOCK-UP CONTROL SOLENOID VALVE ASSEMBLY |
| ⑰ O-RING Replace. | ④5 LOCK-UP CONTROL SOLENOID FILTER/GASKET Replace. |
| ⑱ STATOR SHAFT ASSEMBLY | ④6 VEHICLE SPEED SENSOR ASSEMBLY |
| ⑲ STOPPER PIN | ④7 O-RING Replace. |
| ⑳ MAIN VALVE BODY FILTER Replace. | ④8 SECONDARY SHAFT NEEDLE BEARING Replace. |
| ㉑ CHECK BALLS (7/32) #7 | ④9 OIL GUIDE PLATE Replace. |
| ㉒ MAIN VALVE BODY | ⑤0 COUNTERSHAFT NEEDLE BEARING Replace. |
| ㉓ ONE-WAY RELIEF VALVE SPRING | ⑤1 OIL GUIDE PLATE Replace. |
| ㉔ ONE-WAY RELIEF VALVE | ⑤2 MAINSHAFT BALL BEARING Replace. |
| ㉕ OIL PUMP DRIVEN GEAR | ⑤3 MAINSHAFT OIL SEAL Replace. |
| ㉖ OIL PUMP DRIVE GEAR | ⑤4 SEALING WASHER Replace. |
| ㉗ OIL PUMP DRIVEN GEAR SHAFT | ⑤5 4TH OIL GUIDE PLATE/PIPE |
| ㉘ DOWEL PIN | ⑤6 3RD OIL GUIDE PLATE |

TORQUE SPECIFICATION

No.	TORQUE VALUE	BOLT SIZE	REMARKS
A	12 N·m (1.2 kg-m, 9 lb-ft)	6 x 1.0 mm	OIL PRESSURE CHECK BOLT Special bolt
B	18 N·m (1.8 kg-m, 13 lb-ft)	8 x 1.25 mm	
C	14 N·m (1.4 kg-m, 10 lb-ft)	6 x 1.0 mm	
D	30 N·m (3.0 kg-m, 22 lb-ft)	8 x 1.25 mm	