



Illustrated Index

CAUTION:

- Before disassembling the gearbox, wash it off with solvent and a brush.
- Thoroughly clean all disassembled parts.
- Replace parts with damaged sliding surfaces.

☆ Corrosion resistant bolt/nut

