

Fuel Supply System

Main Relay (cont'd)

Troubleshooting Flowchart

- Engine will not start.
- Inspection of main relay.

Disconnect the main relay connectors.

Measure the voltage between YEL/BLU terminal ① and body ground.

Is there battery voltage?

NO

Replace ACG fuse.

YES

Turn the ignition switch ON.

Measure the voltage between BLK/YEL terminal ⑤ and body ground.

Is there battery voltage?

NO

Replace No. 2 fuse.

YES

Measure the voltage between BLK/YEL terminal ⑥ and body ground.

Is there battery voltage?

NO

Replace IG COIL fuse.

YES

Turn the ignition switch START position with the clutch pedal depressed.

Measure the voltage between BLK/WHT terminal ④ and body ground.

Is there battery voltage?

NO

Replace No. 7 fuse.

YES

(To page 11-105)



