



Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected		in the engine compartment fuse/relay box			in the under-hood fuse/relay box	Faulty indicator light (LED)	Horn circuit	Starting system	A/T: Shift position console switch M/T: Clutch interlock switch	Lighting system	Door key switch	Ignition key switch	Trunk key switch	Trunk latch switch	Hood switch	Engine cover switch	Door switch	Control unit input	Poor ground	
		Blown No. 18 (20A) fuse	Blown No. 5 (10A) fuse	Blown No. 45 (20A) fuse																
Symptom																				
Security alarm can't be set (and indicator light does not flash).		1	2	3	4						5							G401 G402 or G404	YEL/BLU, YEL, WHT/GRN, GRN or BLU/GRN	
Starting system is not operated.								1	2								3	G401 G402 or G404	BLK/WHT, BLK/GRN or BLK/YEL	
Security alarm can be set, but alarm not operated when the trunk, hood or either door is unlocked without the key.	Horn alarm			1	2												3		WHT/GRN, ORN/BLK, YEL/GRN ¹ or LT GRN/WHT	
	Headlight alarm									1							2		LT GRN/RED, BLU/RED ¹ or RED/YEL	
	Both alarms																1			
Alarm not cancelled when the door keylock is unlocked with the key.										1							2	G401 G402 or G404	GRN/YEL ¹ , GRN/YEL ² , BLU/RED ² or BLU/RED ³	
Alarm not cancelled when the key is inserted in the ignition switch.		1									2						3		YEL	
Alarm not cancelled when the trunk lid is opened with the key.												1	2				3	G501	BRN/WHT or WHT	
Alarm not operated when the hood is opened.														1			2	G301	YEL/GRN ²	
Alarm not operated when the engine cover is opened.															1		2	G401 G402	BLU	
Alarm not operated when the doors is opened.																1	2	G401 G402	GRN/BLU or GRN/RED	