

Seat Hardware, Trim, and Upholstery

Specifications

Fastener Tightening Specifications

Application	Specification	
	Metric	English
Front Seat Mounting Bolt	40 N•m	30 lb ft
Front Seat Armrest Mounting Bolt	45 N•m	33 lb ft
Front Seat Cushion Frame Bolt	22 N•m	16 lb ft
Front Seat Cushion Outer Trim Panel Fastener	8 N•m	71 lb in
Front Seat Inner Recliner Finish Cover Fastener	8 N•m	71 lb in
Front Seat Back Cushion Frame Bolt	22 N•m	16 lb ft
Rear Seat Back Outer Pivot Bolt	23 N•m	17 lb ft
Rear Seat Latch Bolt	45 N•m	33 lb ft
Rear Seat Back Cushion Bolt (AN1 Fixed Bench)	22 N•m	16 lb ft
Rear Seat Back Cushion Hinge Bolt	43 N•m	32 lb ft
Rear Seat Back Cushion Hinge Nut	43 N•m	32 lb ft

Diagnostic Information and Procedures

Manual Seat Adjuster Locks Between Lock Positions


Problem	Action
The adjusters are misaligned.	Align the adjusters.
The adjusters are new, not broken in.	Operate the seat to the fully forward and fully rearward positions several times in order to work the tightness out of the channels.
The adjusters are improperly lubricated.	Lubricate the adjuster channels.
The adjusters are bent or damaged.	Replace the adjusters.
The adjusters are binding or damaged.	Lubricate or replace the adjusters.
The seat components are loose, damaged, or broken.	Repair or replace the seat.
The seat mounting bolts are loose.	Tighten the mounting bolts to specifications. Refer to <i>Fastener Tightening Specifications</i> on page 14-3.

Seats - Adjuster Track Locks Ahead of Other Track

Condition	Action
Important: Replace all seat adjusters as an assembly Replace both sides at the same time.	
The adjusters are out of time.	Remove and reinstall the front bucket seat. Refer to <i>Driver or Passenger Seat Removal and Installation</i> on page 14-4.

Repair Instructions

Driver or Passenger Seat Removal and Installation

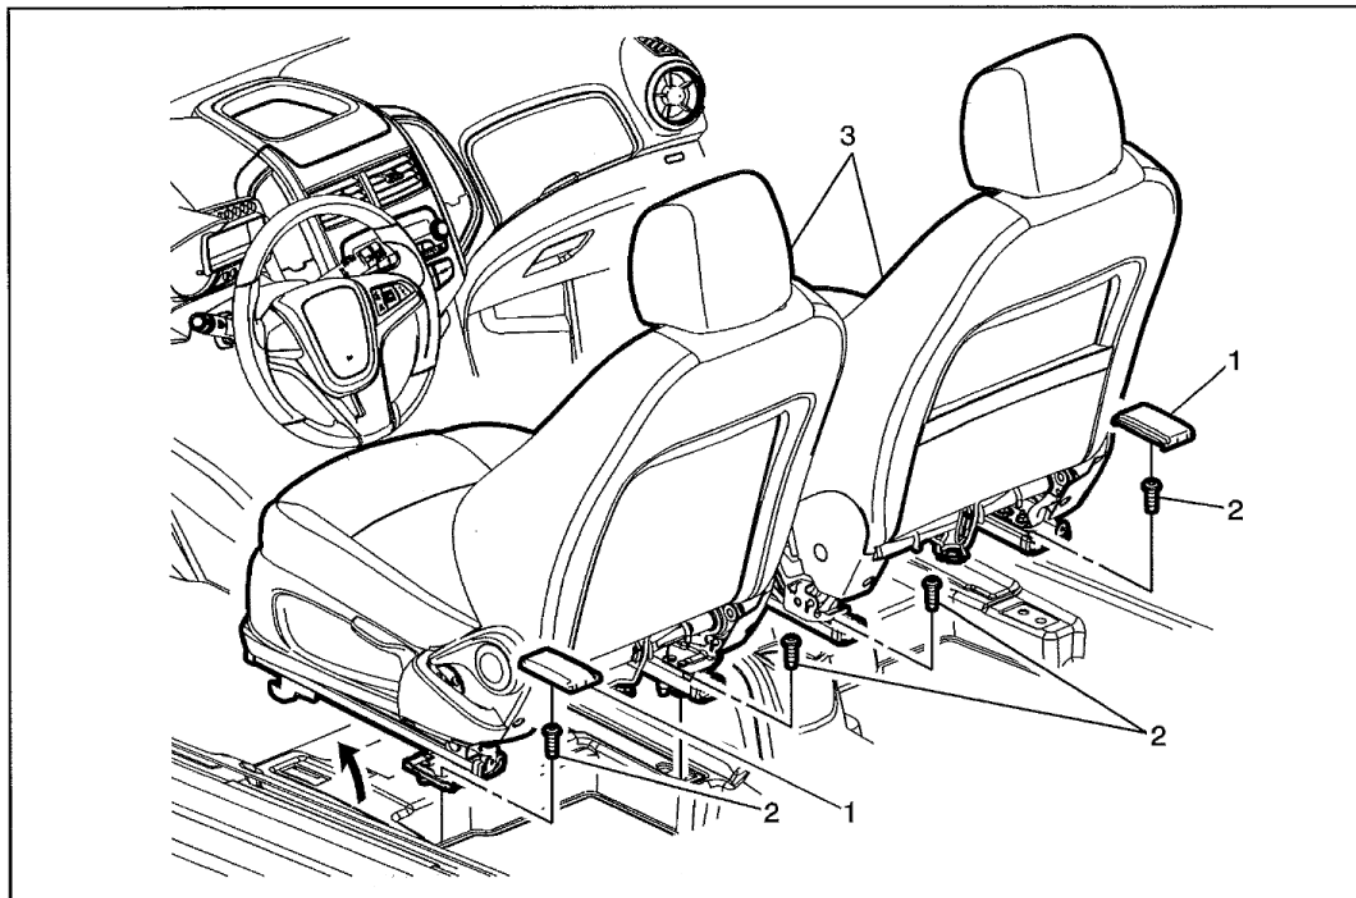


2495843

Driver or Passenger Seat Removal and Installation

Callout	Component Name
Warning: Refer to <i>SIR Warning</i> on page 0-7.	
Preliminary Procedures 1. Disable the SIR system. Refer to <i>SIR Disabling and Enabling</i> on page 13-112. 2. Disconnect the front seat belt lower fastener. Refer to <i>Driver or Passenger Seat Shoulder Belt Replacement (without A69)</i> on page 13-131 or <i>Driver or Passenger Seat Shoulder Belt Replacement (with A69)</i> on page 13-133. 3. Disable the front seat belt tensioner fastener by removing the cap, and cover, if equipped. Refer to <i>SIR Disabling and Enabling</i> on page 13-112.	
1	Front Seat Riser Finish Cover (Qty: 2) Procedure Remove the front seat riser cover. Refer to <i>Front Seat Riser Finish Cover Replacement</i> on page 14-5.
2	Front Seat Mounting Bolt (Qty: 4) Caution: Refer to <i>Fastener Caution</i> on page 0-8. Procedure Adjust the seat to the full forward position to gain access to the rear bolts. Tighten 40 N•m (30 lb ft)

Driver or Passenger Seat Removal and Installation (cont'd)

Callout	Component Name
3	Driver or Passenger Seat Assembly (Qty: 2) Procedure 1. Disconnect the electrical. 2. With the aid of an assistant remove the front seat, by tilting the seat forward and then lifting and pulling the seat rearwards to disengage the front hooks. 3. Transfer components as necessary.

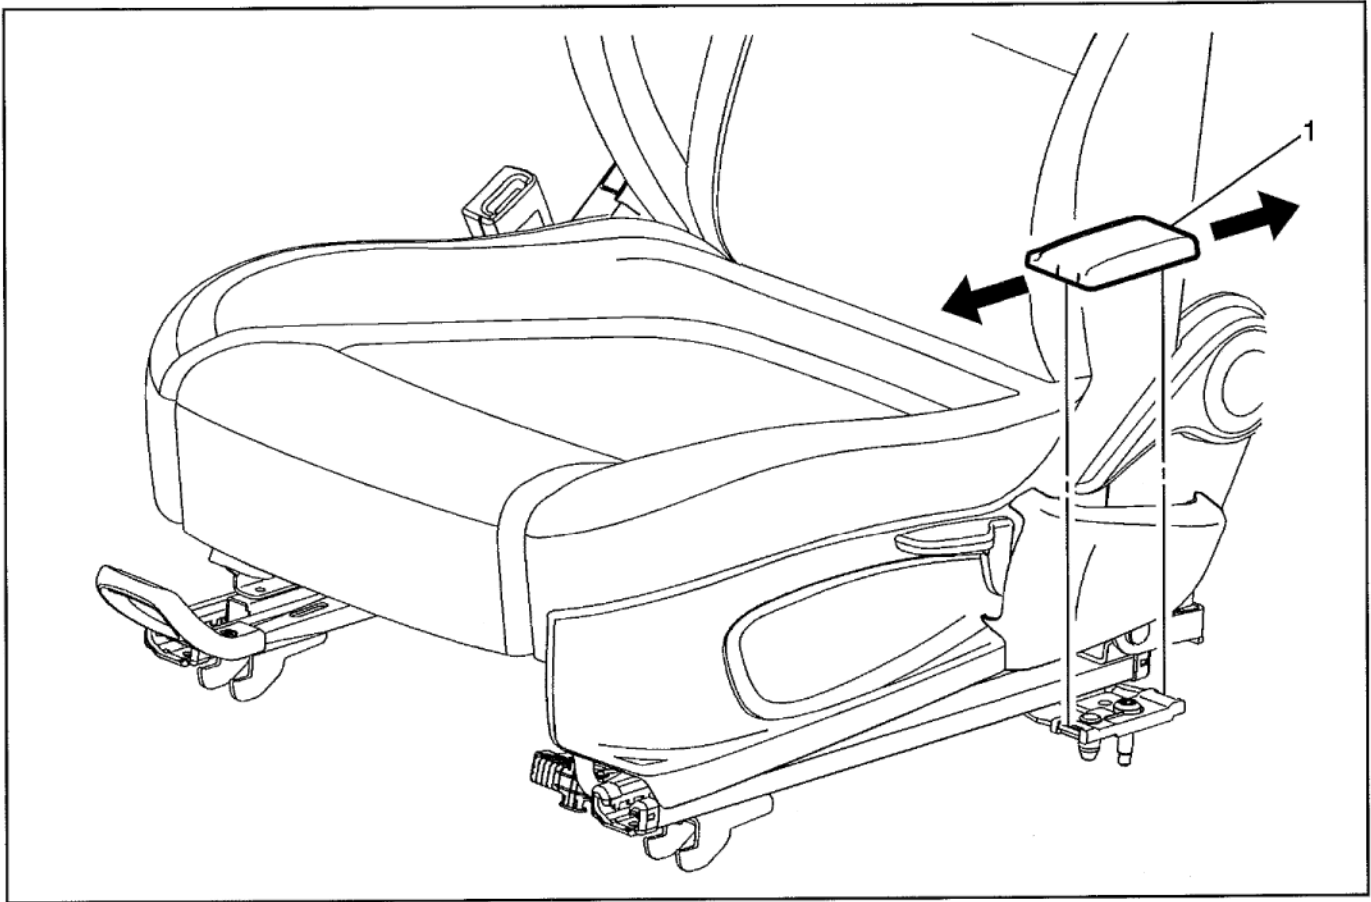
Front Seat Riser Finish Cover Replacement

2495850

Front Seat Riser Finish Cover Replacement

Callout	Component Name
1	Front Seat Riser Finish Cover Caution: Do not twist the cover during removal. Twisting the cover may cause the component to break. Procedure Remove the finish cover by firmly grasping the front or rear of the cover and pulling the cover outward then upward to disengage it from the track.

Driver or Passenger Seat Adjuster Handle Replacement (4 Way Uplevel)

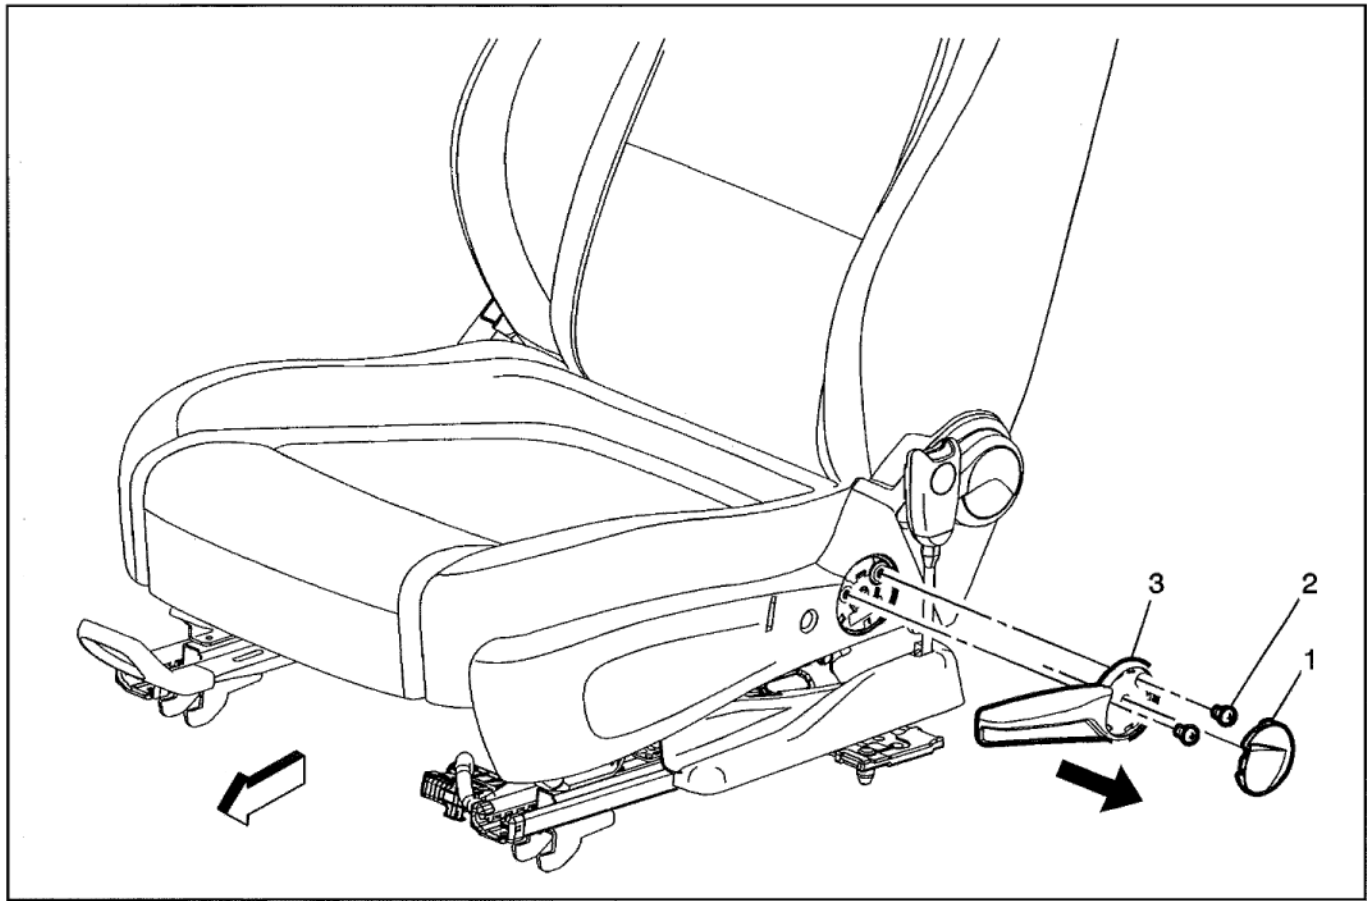


2507337

Driver or Passenger Seat Adjuster Handle Replacement (4 Way Uplevel)

Callout	Component Name
1	Front Seat Adjuster Handle Cover Procedure Use a flat-bladed tool to push inward on the three tabs to release the handle cover from the handle assembly.
2	Front Seat Adjuster Handle Fastener (Qty: 2) Caution: Refer to <i>Fastener Caution</i> on page 0-8.
3	Front Seat Adjuster Handle Procedure Use a flat-bladed tool to release the adjuster handle from the seat frame assembly.

Front Seat Armrest Replacement

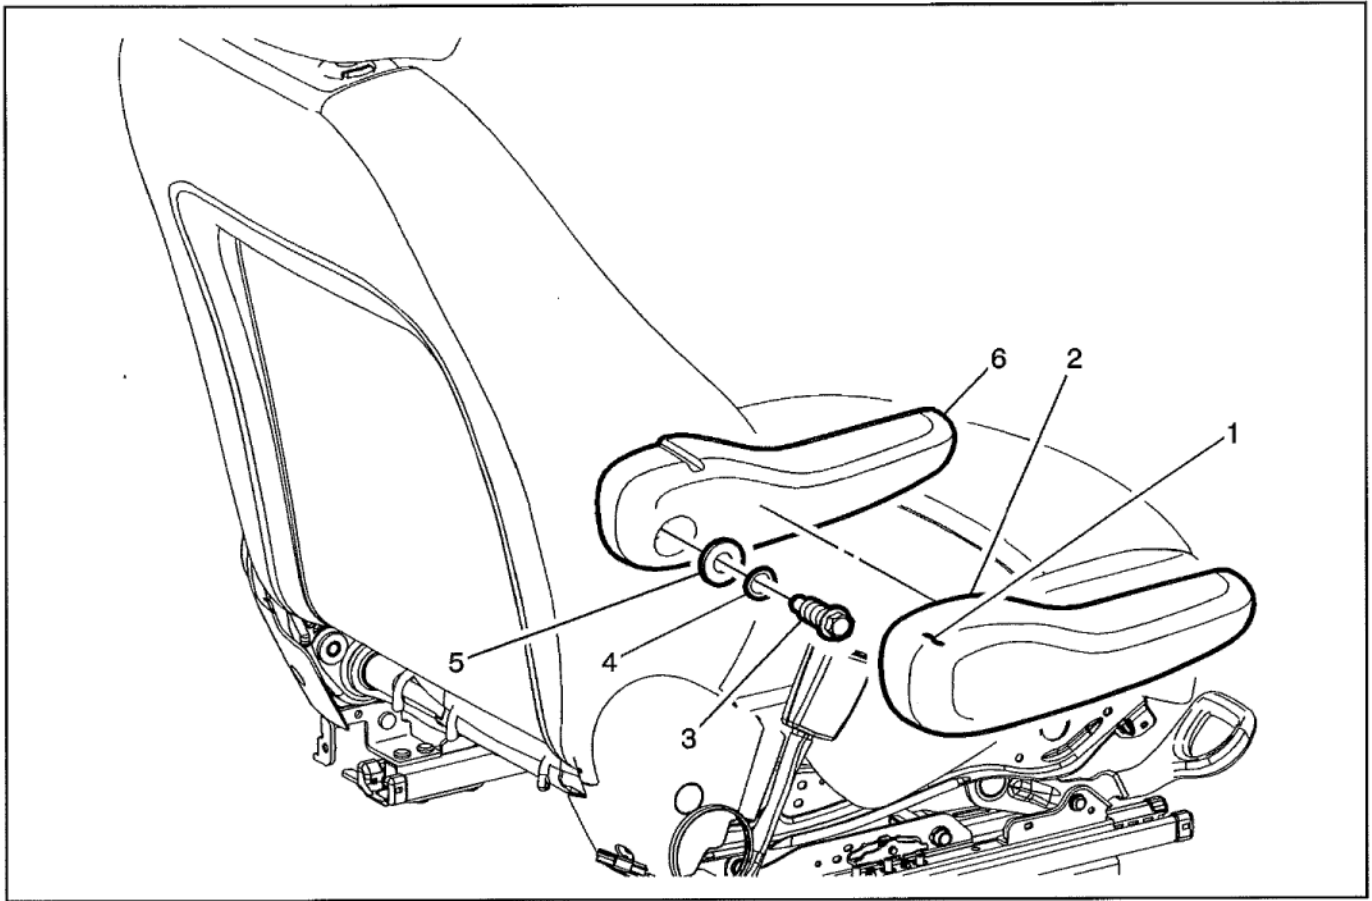


2495839

Front Seat Armrest Replacement

Callout	Component Name
1	Front Seat Armrest Cover Zipper Procedure Open the zipper to access the front seat armrest mounting bolt and to remove the armrest cover
2	Front Seat Armrest Cover Procedure Slide the armrest cover off the armrest assembly.
3	Front Seat Armrest Mounting Bolt Caution: Refer to <i>Fastener Caution</i> on page 0-8. Tighten 45 N•m (33 lb ft)
4	Front Seat Armrest Spring Washer
5	Front Seat Armrest Washer
6	Front Seat Armrest Assembly

Driver or Passenger Seat Head Restraint Replacement

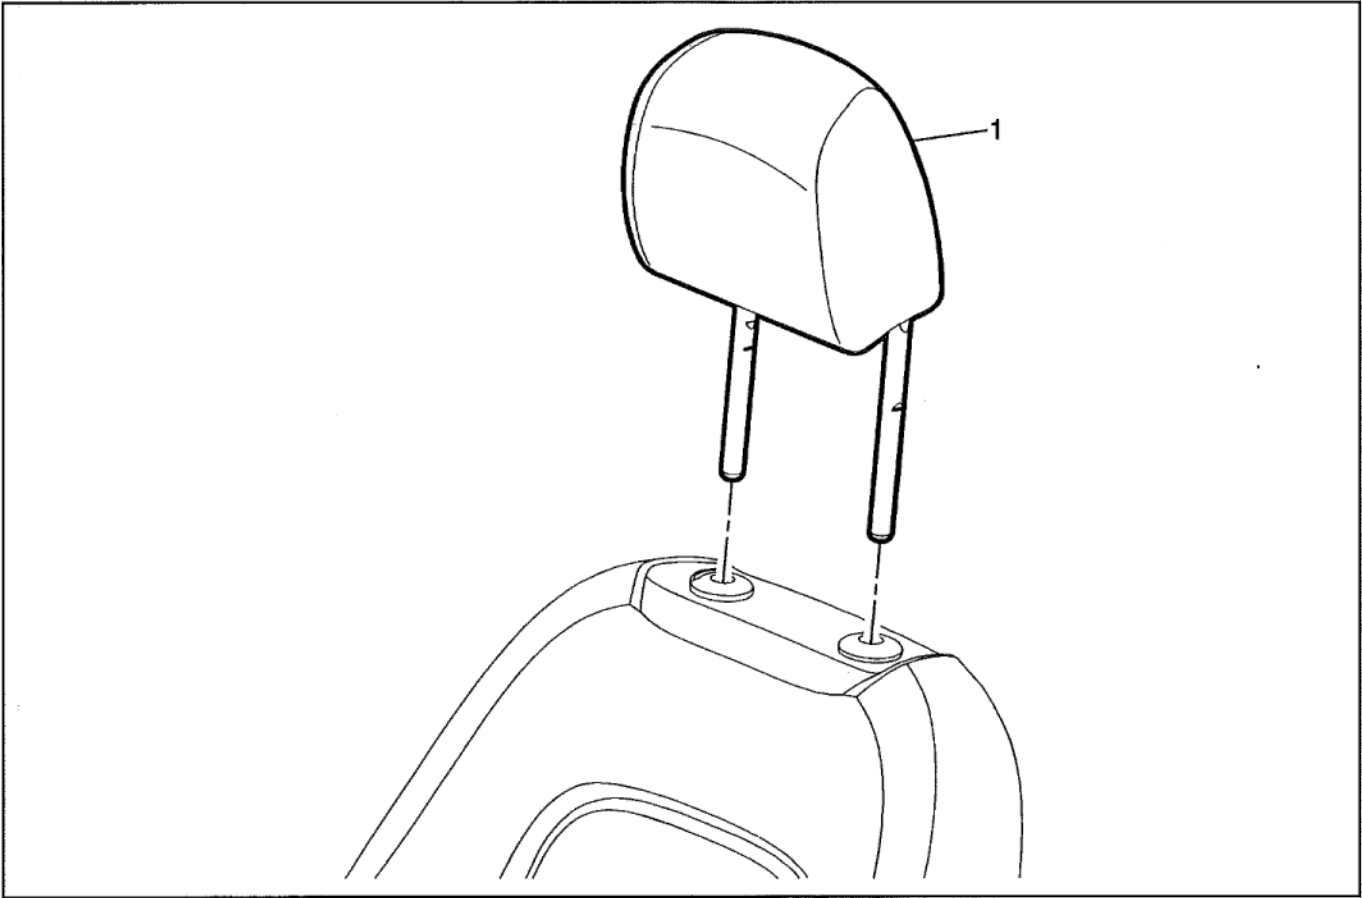


2495829

Driver or Passenger Seat Head Restraint Replacement

Callout	Component Name
1	Driver or Passenger Seat Head Restraint Procedure 1. Raise the headrest to the full upward position. 2. Depress the flush button on the head restraint guide. 3. Remove the head restraint by pulling up on the restraint.

Driver or Passenger Seat Head Restraint Guide Replacement

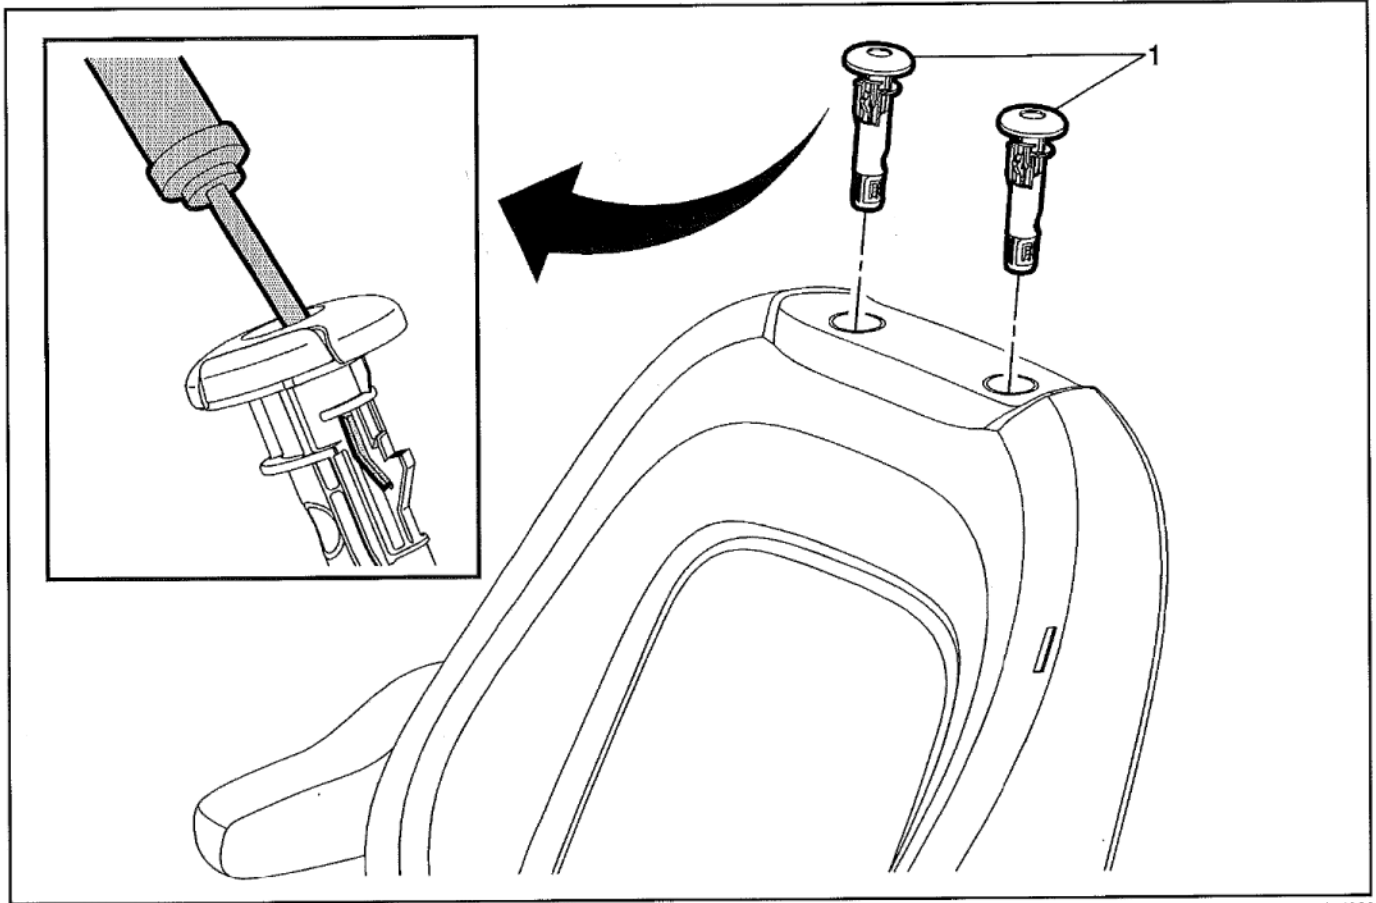


2495832

Driver or Passenger Seat Head Restraint Guide Replacement

Callout	Component Name
Preliminary Procedure	
Remove the seat head restraint. Refer to <i>Driver or Passenger Seat Head Restraint Replacement</i> on page 14-8.	
1	Driver or Passenger Seat Head Restraint Guide (Qty: 2) Procedure Using a suitable flat-bladed tool, slide the tool on the inside of the guide until it finds the slot. Then push the tool forward pulling the guide tab inward, while pulling upward to remove the guide from the seat back frame.

Front Seat Belt Anchor Plate Tensioner Cover Replacement (4 Way)

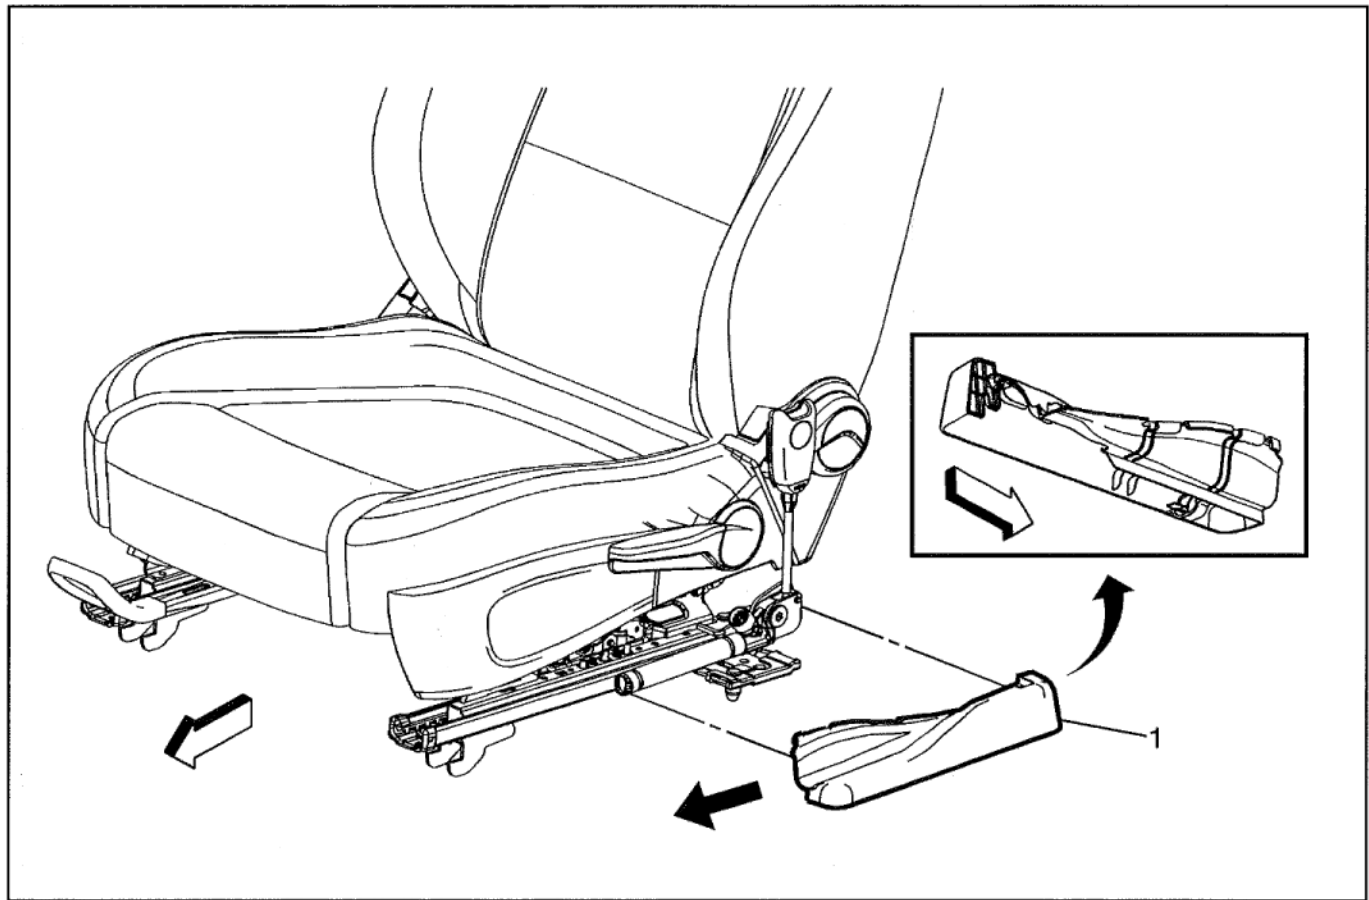


2508311

Front Seat Belt Anchor Plate Tensioner Cover Replacement (4 Way)

Callout	Component Name
1	Driver or Passenger Seat Belt Tensioner Cover Procedure Remove the tensioner cover by pushing downward on the rear and center of the cover. Then applying light pressure to the front of the cover, push the cover rearward to remove it from the seat frame.

Driver or Passenger Seat Cushion Frame Replacement

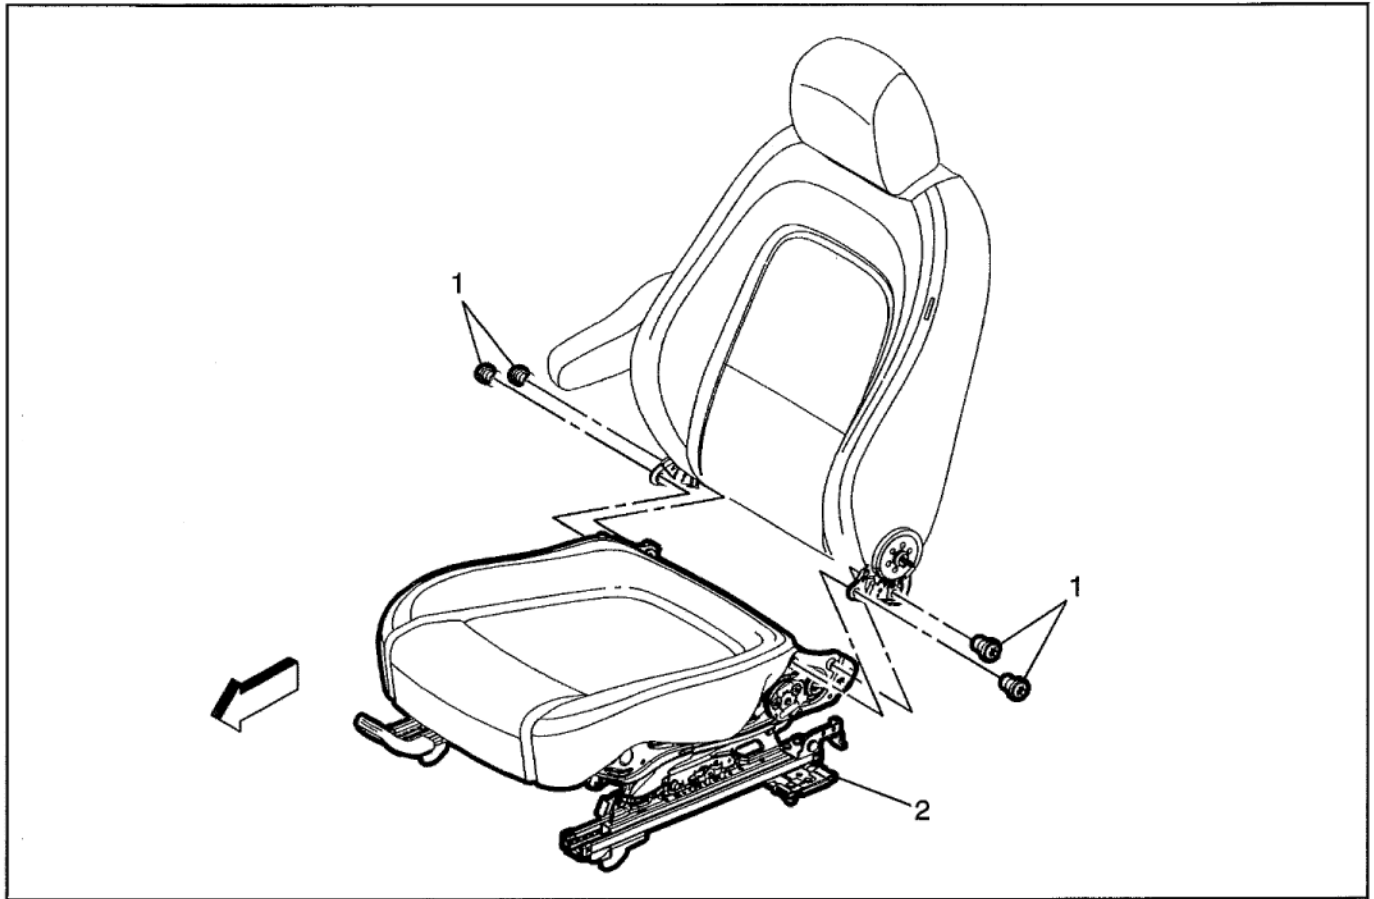


2505609

Driver or Passenger Seat Cushion Frame Replacement

Callout	Component Name
Preliminary Procedures 1. Remove the driver or passenger seat. Refer to <i>Driver or Passenger Seat Removal and Installation</i> on page 14-4 2. Remove the front seat cushion outer trim panel. Refer to <i>Front Seat Cushion Outer Trim Panel Replacement</i> on page 14-12 3. Remove the front seat cushion inner recliner. Refer to <i>Front Seat Cushion Inner Trim Panel Replacement</i> on page 14-13	
1	Front Seat Cushion Frame Bolt (Qty: 4) Caution: Refer to <i>Fastener Caution</i> on page 0-8. Tighten 22 N•m (16 lb ft)
2	Driver or Passenger Seat Cushion Frame Procedure 1. Disconnect electrical connectors as needed. 2. If replacing with a new front seat cushion frame, transfer components as necessary.

Front Seat Cushion Outer Trim Panel Replacement

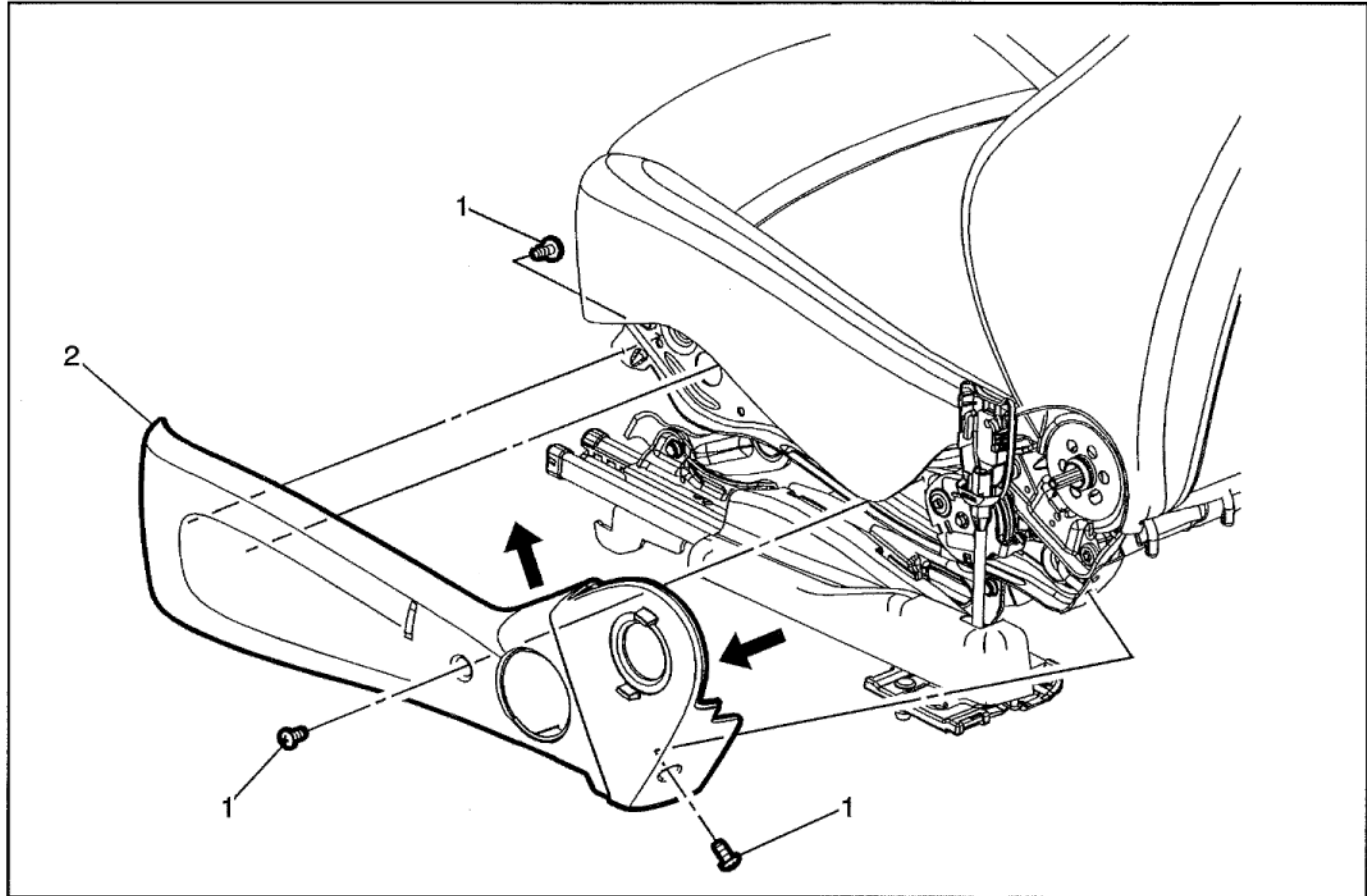


2507891

Front Seat Cushion Outer Trim Panel Replacement

Callout	Component Name
Preliminary Procedures 1. Remove the driver or passenger seat recliner handle. Refer to <i>Front Seat Back Recliner Handle Replacement</i> on page 14-17 2. Remove the front seat adjuster handle. Refer to <i>Driver or Passenger Seat Adjuster Handle Replacement (4 Way Uplevel)</i> on page 14-6	
1	Front Seat Cushion Outer Trim Panel Fasteners (Qty: 3) Caution: Refer to <i>Fastener Caution</i> on page 0-8.
2	Front Seat Cushion Outer Trim Panel Procedure 1. Make sure the seat is in the full up position. 2. Gently pull outboard on the front half of the finish cover to disengage the panel rib from the seat frame. 3. Firmly grasp the upper area of the finish cover that folds over the seat cushion frame, this area needs to be flexed outward while sliding the finish cover upward. 4. If replacing the cover, transfer components as necessary.

Front Seat Cushion Inner Trim Panel Replacement

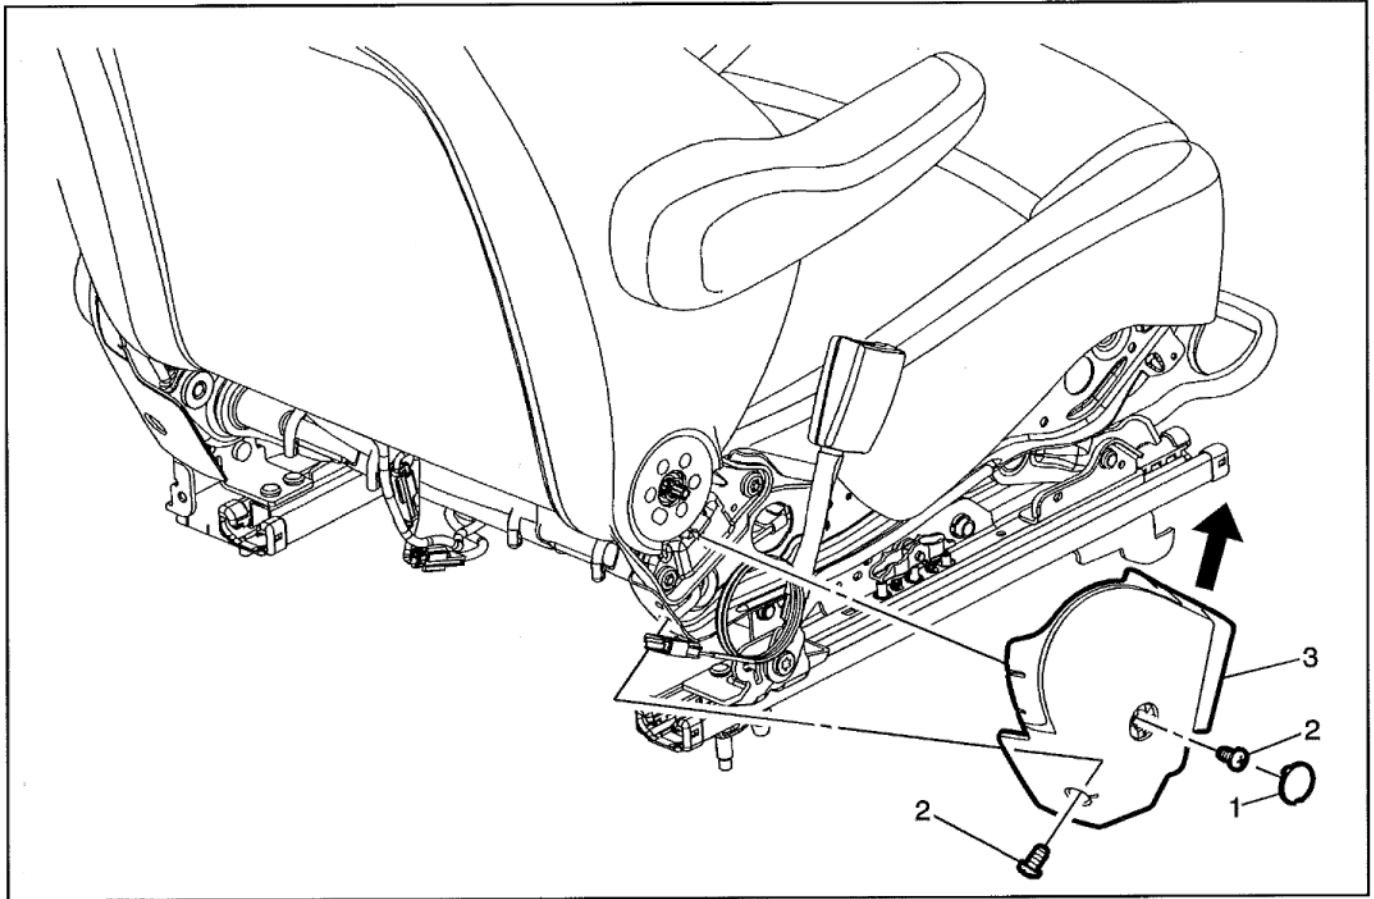


2495823

Front Seat Cushion Inner Trim Panel Replacement

Callout	Component Name
1	Driver or Passenger Seat Inner Recliner Finish Cover Cap Procedure Use a flat-bladed tool to release the cap from the recliner cover.
2	Driver or Passenger Seat Inner Recliner Finish Cover Fastener (Qty: 2) Caution: Refer to <i>Fastener Caution</i> on page 0-8. Tighten 8 N•m (71 lb in)
3	Driver or Passenger Seat Inner Recliner Finish Cover Procedure Firmly grasp the upper area of the finish cover that folds over the seat cushion frame, pull upward and then outboard to disengage the finish cover from the seat cushion frame.

Front Seat Cushion Cover and Pad Replacement

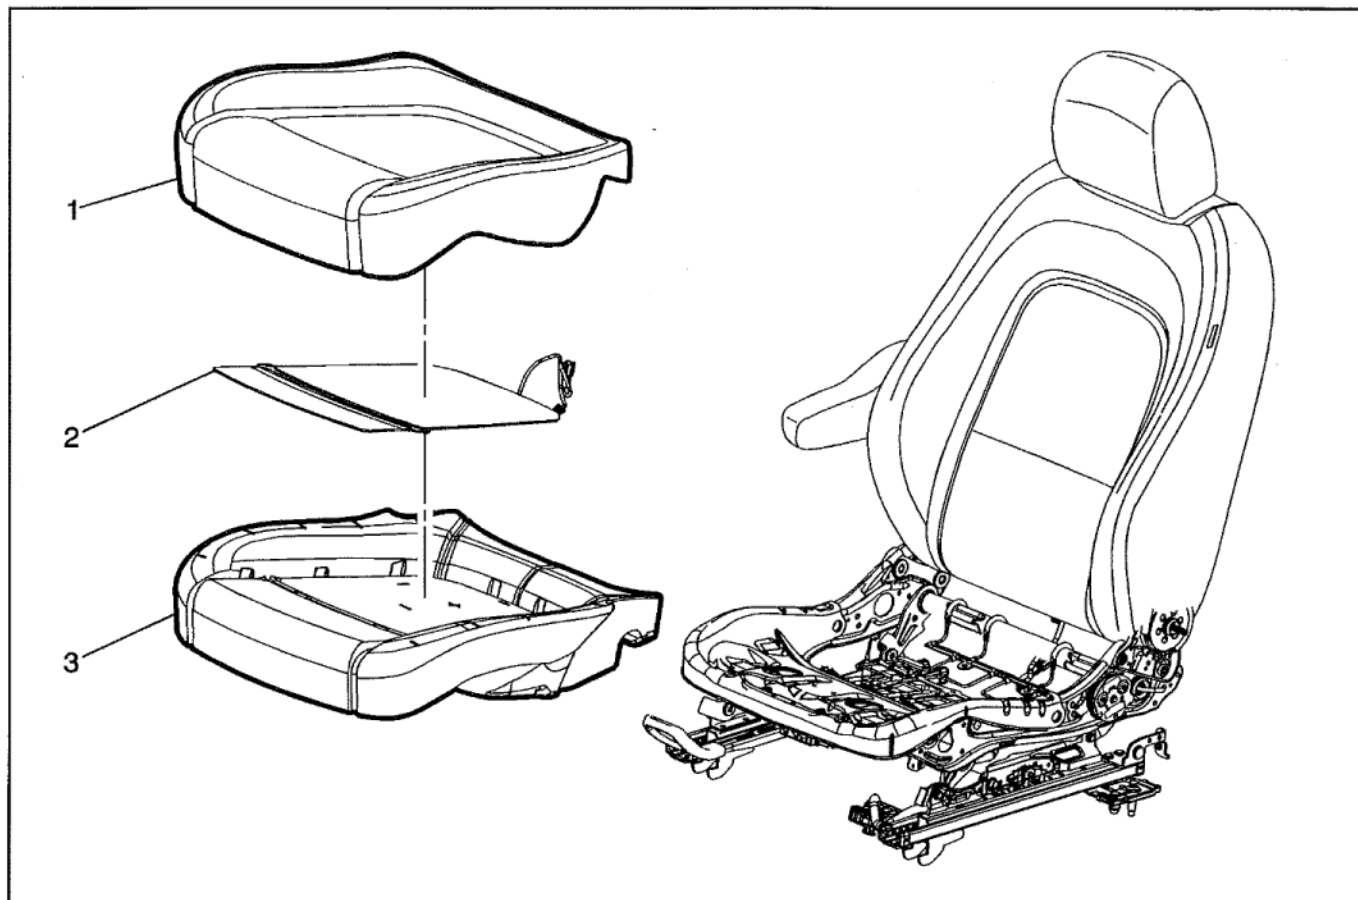


2506030

Front Seat Cushion Cover and Pad Replacement

Callout	Component Name
Warning: Refer to SIR Warning on page 0-7.	
Preliminary Procedures 1. Remove the driver or passenger seat. Refer to <i>Driver or Passenger Seat Removal and Installation</i> on page 14-4. 2. Remove the front seat cushion outer trim panel. Refer to <i>Front Seat Cushion Outer Trim Panel Replacement</i> on page 14-12. 3. Remove the front seat cushion inner trim panel. Refer to <i>Front Seat Cushion Inner Trim Panel Replacement</i> on page 14-13.	
1	Front Seat Cushion Cover Procedure 1. Disengage the J-channel and hog ring retainers from the seat cushion frame. 2. Disconnect the electrical connectors that attach to the seat cushion, if equipped. 3. Remove the seat cushion cover and pad from the seat cushion frame as an assembly. 4. Separate the seat cushion from the seat cushion pad by pulling the cover away from the pad.
2	Front Seat Cushion Heater Procedure Remove the driver or passenger seat cushion heater, if equipped. Refer to <i>Driver or Passenger Seat Cushion Heater Replacement</i> on page 14-48
3	Front Seat Cushion Pad Note: The seat belt presence sensor and heat mat, if equipped are integral parts of the seat cushion pad.

Driver or Passenger Seat Back Cover and Pad Replacement

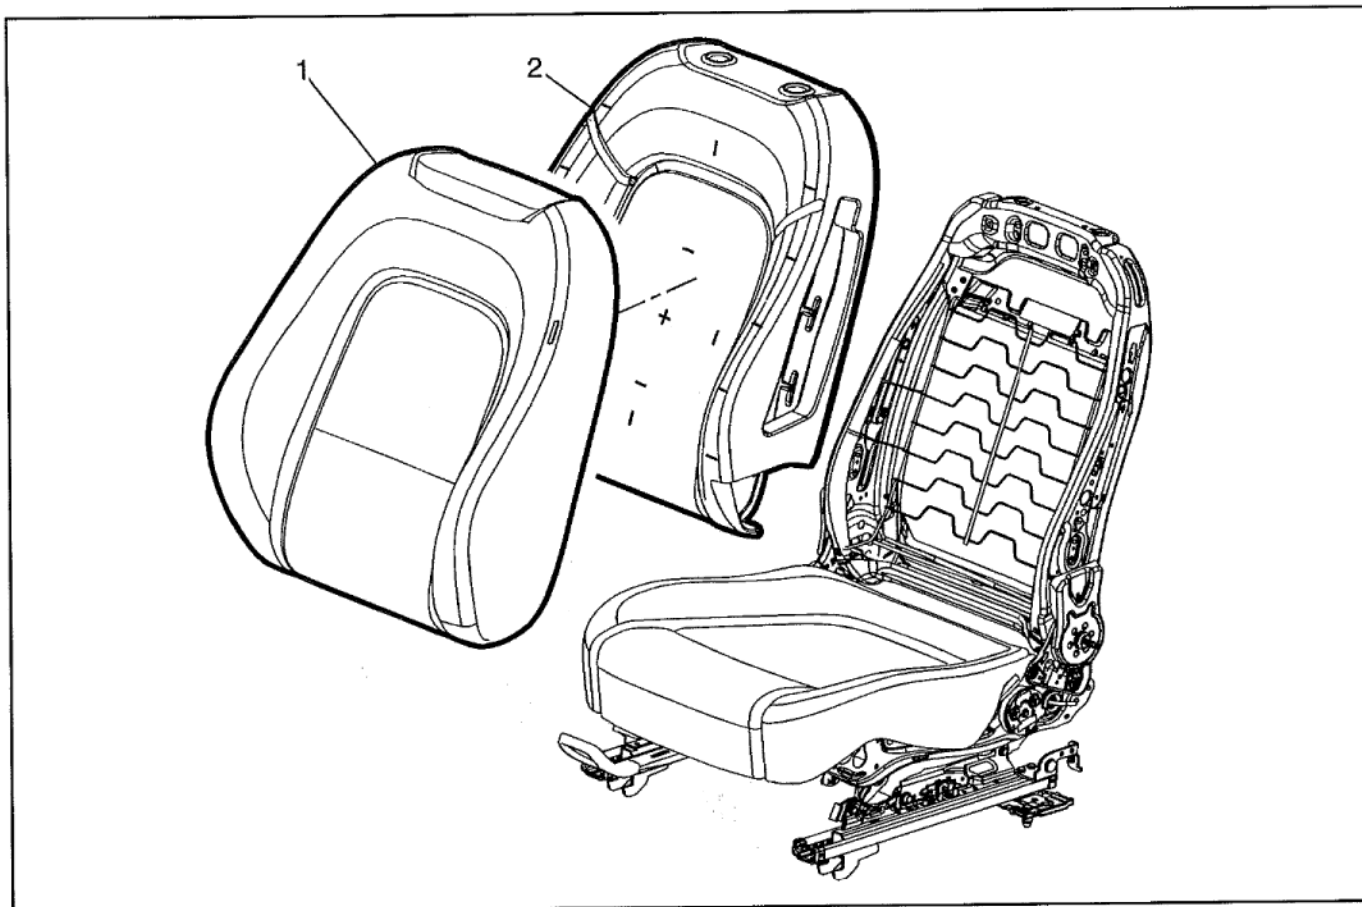


2507916

Driver or Passenger Seat Back Cover and Pad Replacement

Callout	Component Name
Warning: Refer to SIR Warning on page 0-7. Warning: Do not repair or replace the seat stitching or seams in the seat back trim cover with an internal mounted seat side airbag module. Replace the complete seat back trim cover from the OEM. Non-OEM seat stitching may cause improper airbag deployment which could result in personal injury. Preliminary Procedure 1. Remove the driver or passenger seat. Refer to <i>Driver or Passenger Seat Removal and Installation</i> on page 14-4. 2. Remove the front seat cushion outer trim panel. Refer to <i>Front Seat Cushion Outer Trim Panel Replacement</i> on page 14-12. 3. Remove the front seat cushion inner trim panel. Refer to <i>Front Seat Cushion Inner Trim Panel Replacement</i> on page 14-13. 4. Remove the front seat armrest. Refer to <i>Front Seat Armrest Replacement</i> on page 14-7. 5. Remove the driver or passenger seat head restraint guide. Refer to <i>Driver or Passenger Seat Head Restraint Guide Replacement</i> on page 14-9.	
1	Seat Back Cushion Cover Procedure 1. Disengage the j-channel retainers and tabs at the bottom of the seat back cover from the seat back cushion frame. 2. Disconnect the electrical connector that is attached to the seat back cushion, if equipped. 3. Remove the seat back cushion cover and pad from the seat cushion frame as an assembly.
2	Front Seat Back Cushion Pad Procedure Pull the cushion cover assembly off of the pad. Tip: Seat back cover can be damaged upon reinstalling cover to seat back pad. When reinstalling the seat cushion cover to the seat pad, start in upper outboard corner and install outboard side of the cover. Then start at the upper inboard corner and install inboard side of cover.

Driver or Passenger Seat Back Cushion Frame Replacement

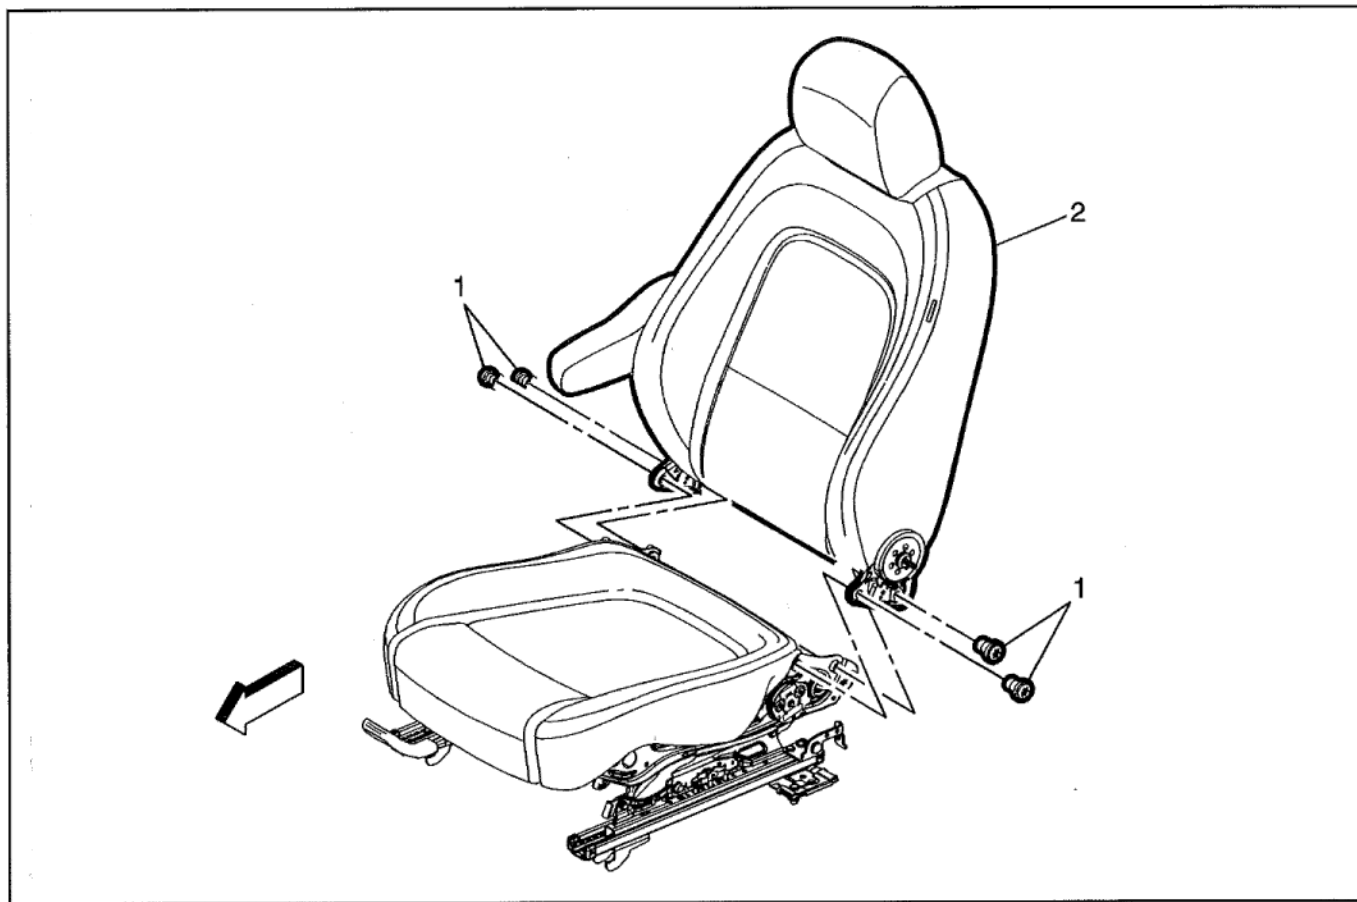


2504789

Driver or Passenger Seat Back Cushion Frame Replacement

Callout	Component Name
Preliminary Procedures 1. Remove the driver or passenger seat. Refer to <i>Driver or Passenger Seat Removal and Installation</i> on page 14-4 2. Remove the front seat cushion outer trim panel. Refer to <i>Front Seat Cushion Outer Trim Panel Replacement</i> on page 14-12 3. Remove the front seat cushion inner recliner. Refer to <i>Front Seat Cushion Inner Trim Panel Replacement</i> on page 14-13	
1	Front Seat Back Cushion Frame Bolt (Qty: 4) Caution: Refer to <i>Fastener Caution</i> on page 0-8. Tighten 22 N•m (16 lb ft)
2	Driver or Passenger Seat Back Cushion Frame Procedure 1. Disconnect electrical connectors as needed. 2. If replacing with a new front seat back cushion frame, transfer components as necessary.

Front Seat Back Recliner Handle Replacement

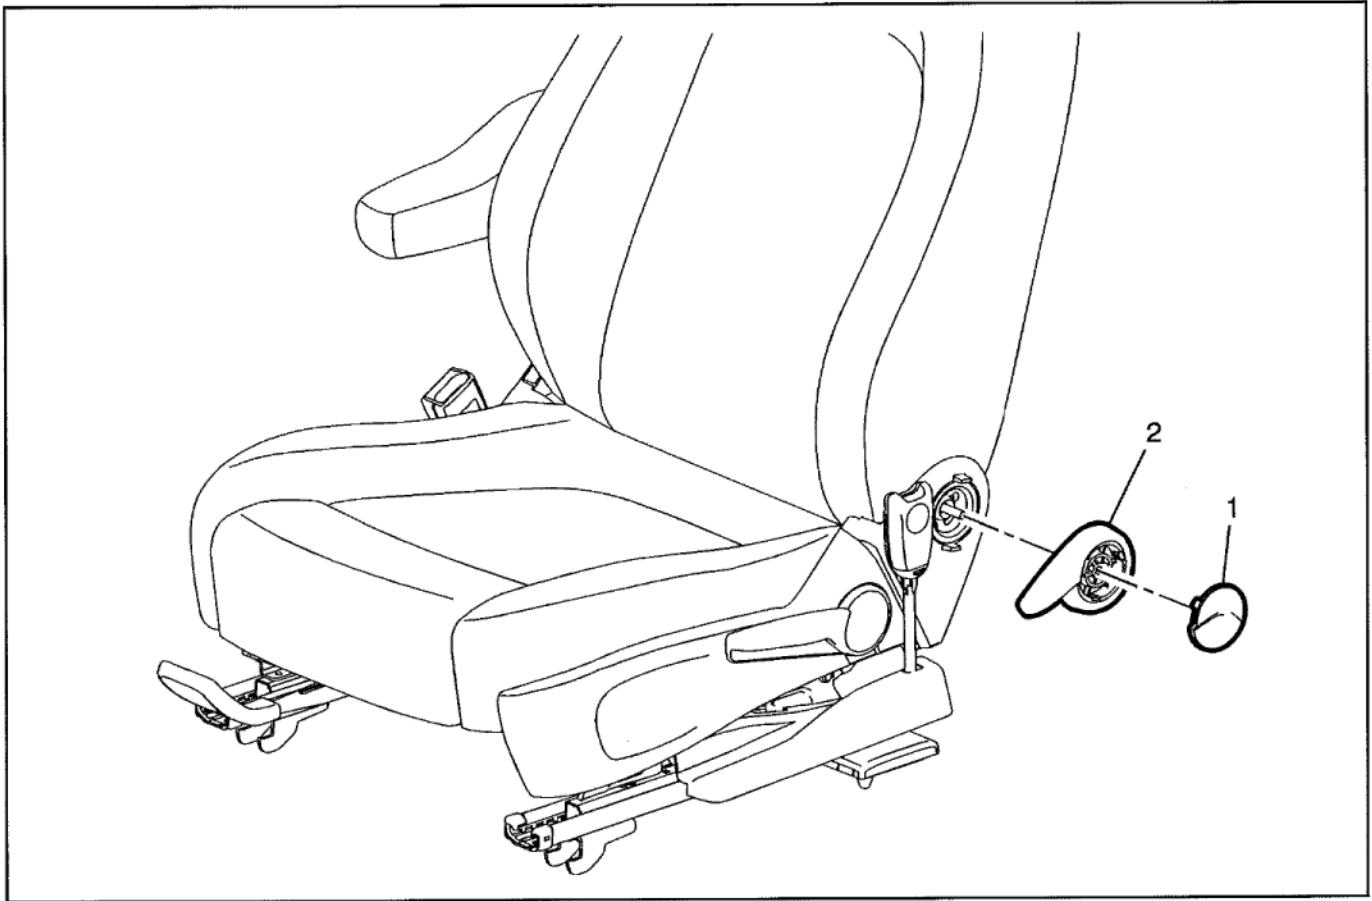


2673883

Front Seat Back Recliner Handle Replacement

Callout	Component Name
1	Front Seat Recliner Handle Cover Cap Procedure Use a flat-bladed tool to release the handle cover from the handle assembly.
2	Front Seat Recliner Handle Procedure Use a flat-bladed tool to release the handle from the seat.

Child Seat Back Cushion Cover Replacement

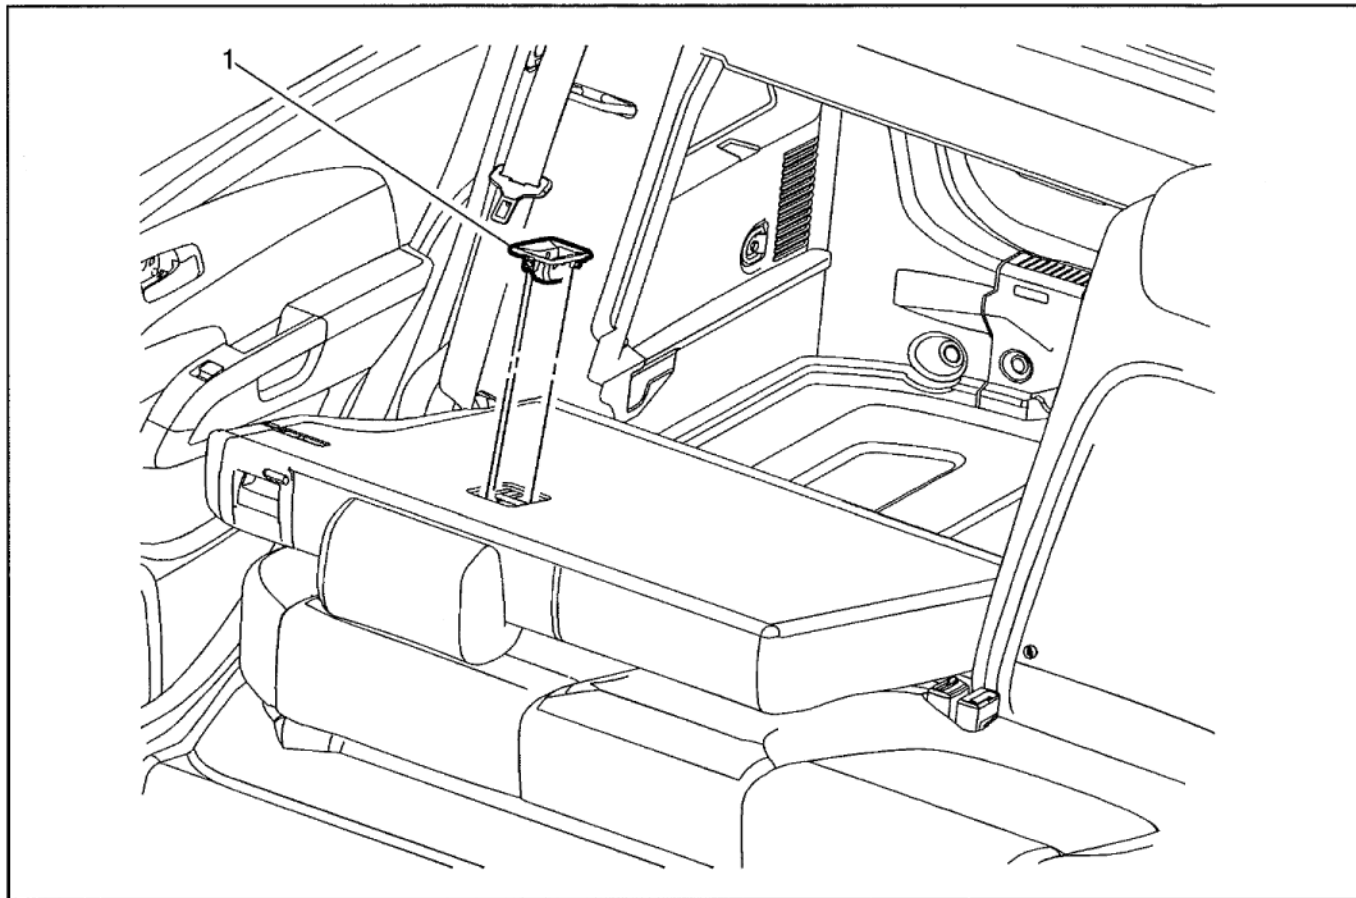


2510156

Child Seat Back Cushion Cover Replacement

Callout	Component Name
1	Child Seat Back Cushion Cover Procedure Remove the child seat bracket trim cover using a suitable flat-bladed tool.


Rear Seat Head Restraint Replacement

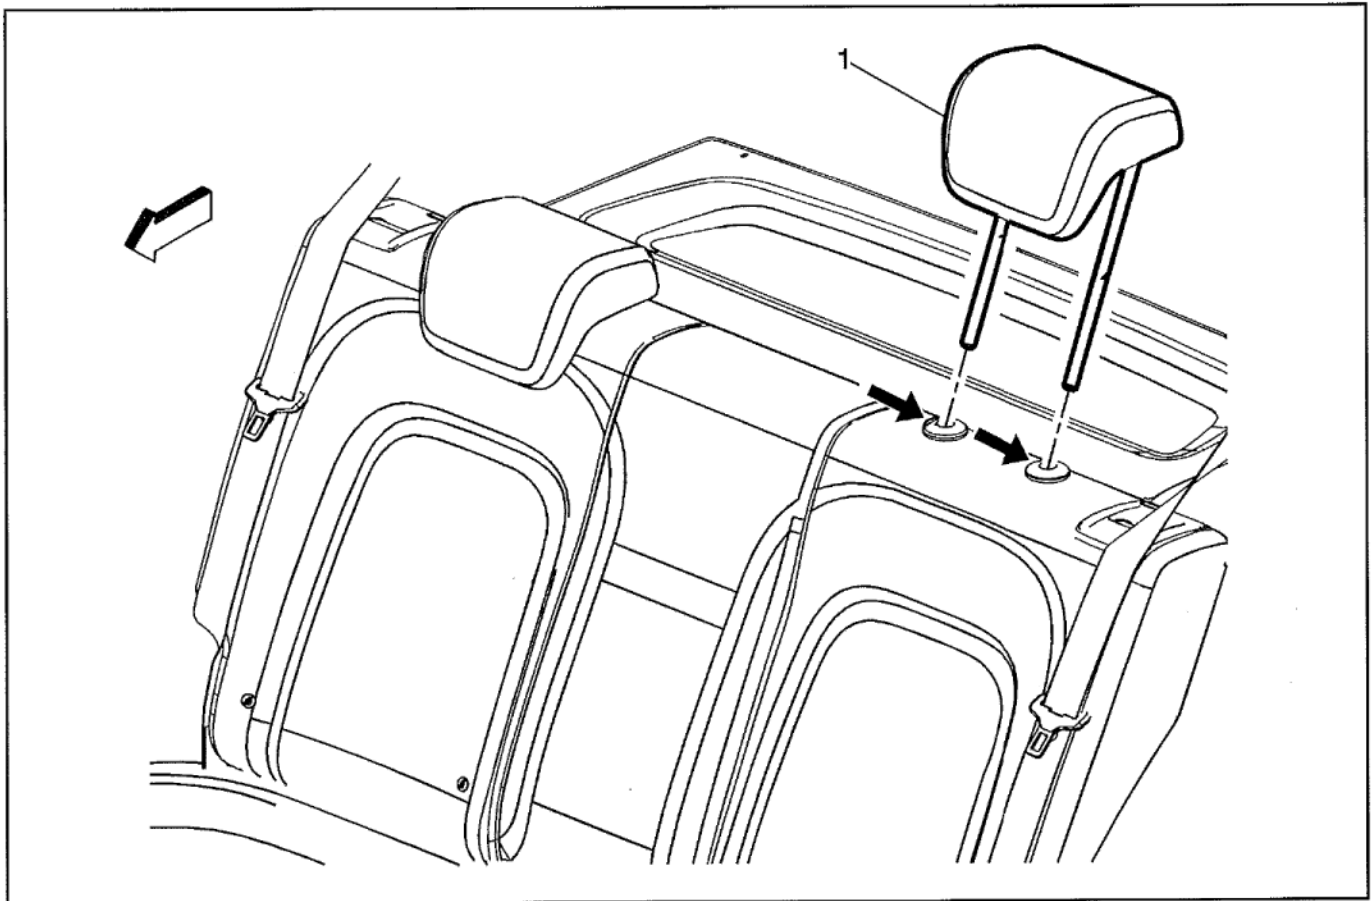

2509448

Rear Seat Head Restraint Replacement

Callout	Component Name
1	Rear Seat Head Restraint Preliminary Procedures 1. Depress the large button on the head restraint guide and raise the head restraint to the full up position. 2. Depress the small button on the opposite head restraint guide and pull upward to remove from the seat.

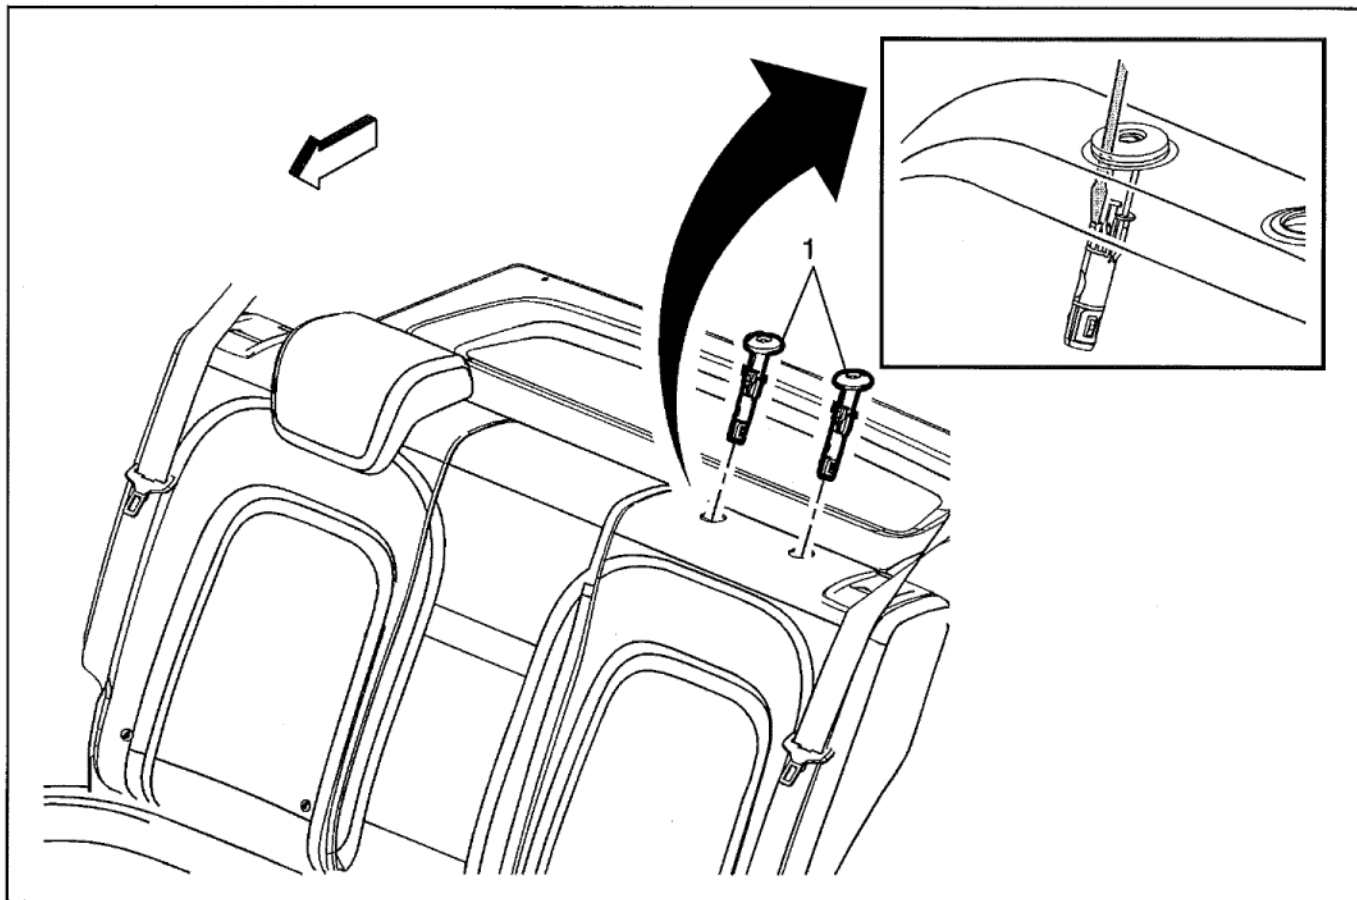
Rear Seat Head Restraint Guide Replacement

2509450

Rear Seat Head Restraint Guide Replacement

Callout	Component Name
Preliminary Procedure Remove the rear seat head restraint. Refer to <i>Rear Seat Head Restraint Replacement</i> on page 14-19	
1	Rear Seat Head Restraint Guide Procedure Using a suitable flat-bladed tool, slide the tool between the cushion and the guide until you find the slot on the outboard side of the guide. Push inward on the guide slot tab , while pulling upward to remove the guide from the seat back frame.

Rear Seat Back Bolster Replacement

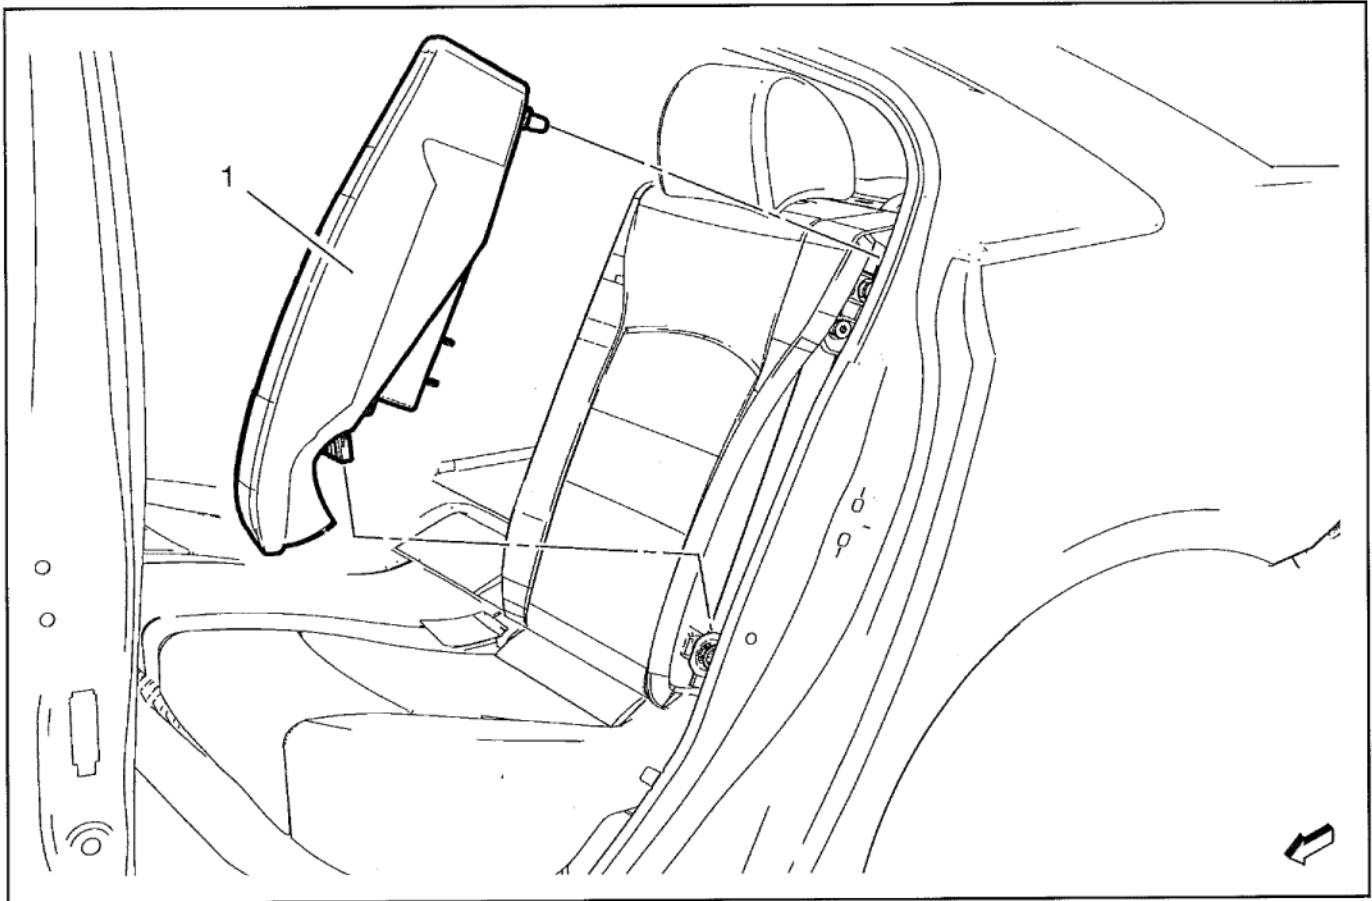


2373109

Rear Seat Back Bolster Replacement

Callout	Component Name
Preliminary Procedures Disable the SIR system. Refer to <i>SIR Disabling and Enabling</i> on page 13-112	
1	Rear Seat Back Cushion Bolster Warning: Refer to <i>SIR Warning</i> on page 0-7 Warning: Do not repair or replace the seat stitching or seams in the seat back trim cover with an internal mounted seat side airbag module. Replace the complete seat back trim cover from the OEM. Non-OEM seat stitching may cause improper airbag deployment which could result in personal injury. Procedure 1. Pull bolster very hard from top to disengage retainers. 2. Replace all damaged retainers and tap back holes in body sheet metal, if necessary. 3. Disconnect electrical connector. 4. Remove rear seat back cushion bolster. 5. Remove the rear seat side inflatable module, if equipped. Refer to <i>Rear Seat Outboard Seat Back Airbag Replacement</i> on page 13-127

Rear Seat Back Cushion Pivot Support Replacement

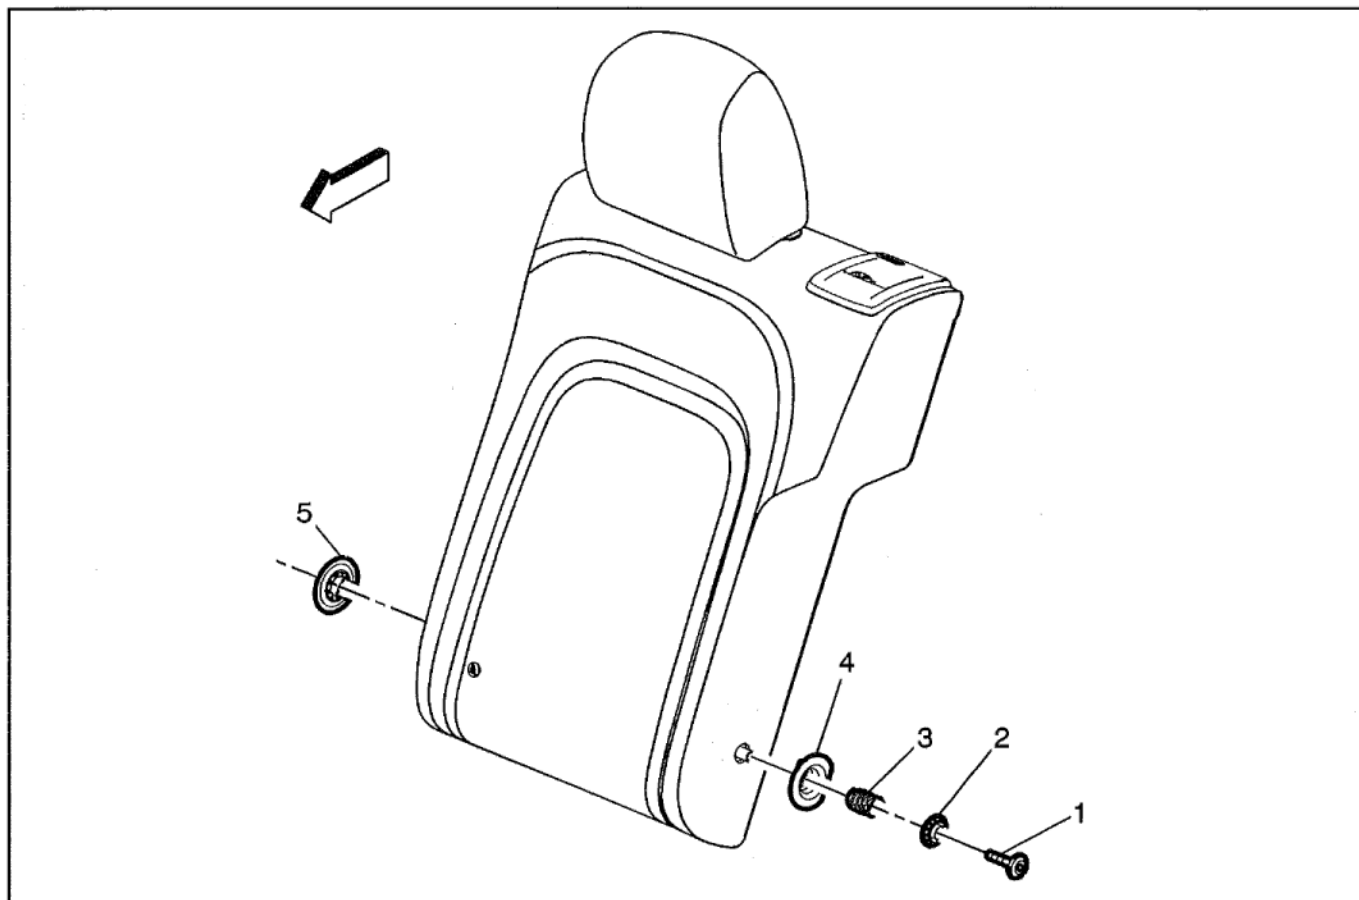


2509455

Rear Seat Back Cushion Pivot Support Replacement

Callout	Component Name
Preliminary Procedure Remove the rear seat back cushion. Refer to <i>Rear Seat Back Cushion Removal and Installation (40%)</i> on page 14-26 or <i>Rear Seat Back Cushion Removal and Installation (60%)</i> on page 14-27	
1	Rear Seat Back Outer Pivot Bolt (Qty: 2) Caution: Refer to <i>Fastener Caution</i> on page 0-8. Tighten 23 N•m (17 lb ft)
2	Rear Seat Back Cushion Outer Pivot Bushing
3	Rear Seat Back Cushion Outer Pivot Bolt Spring
4	Rear Seat Back Cushion Pivot Support Housing
5	Rear Seat Back Center Finish Cover


Rear Seat Cushion Cover and Pad Replacement

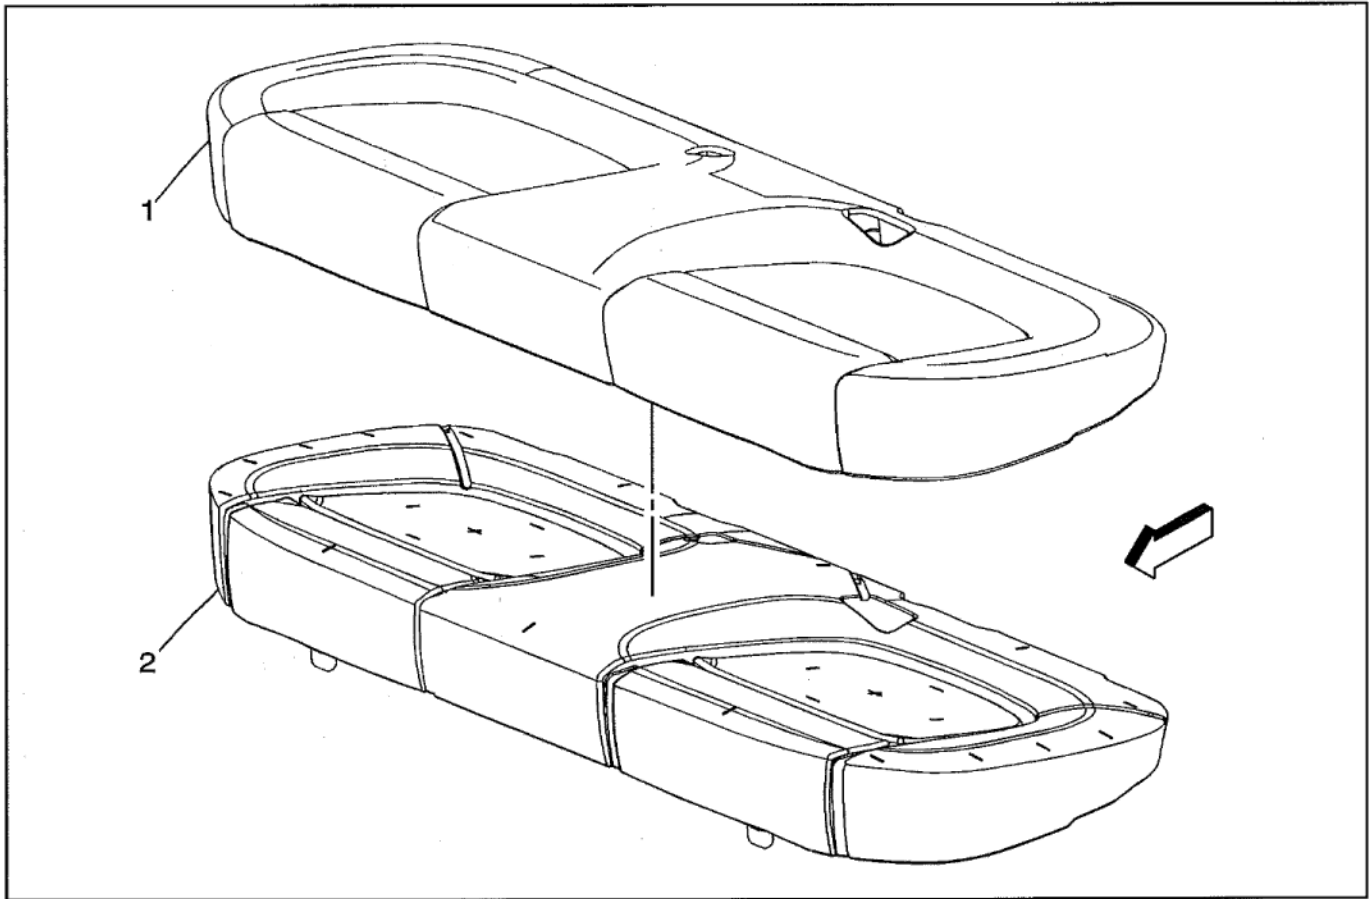

2509452

Rear Seat Cushion Cover and Pad Replacement

Callout	Component Name
Preliminary Procedure Remove the rear seat cushion. Refer to <i>Rear Seat Cushion Removal and Installation</i> on page 14-24	
1	Rear Seat Cushion Cover Procedure 1. Remove the hog rings that secure the rear seat cushion cover to the pad. 2. Pull the cover away from the pad to disengage any retainers. Note: When installing the rear seat cushion cover, pull the cover tightly in all corners to ensure that no creasing occurs.
2	Rear Seat Cushion Pad

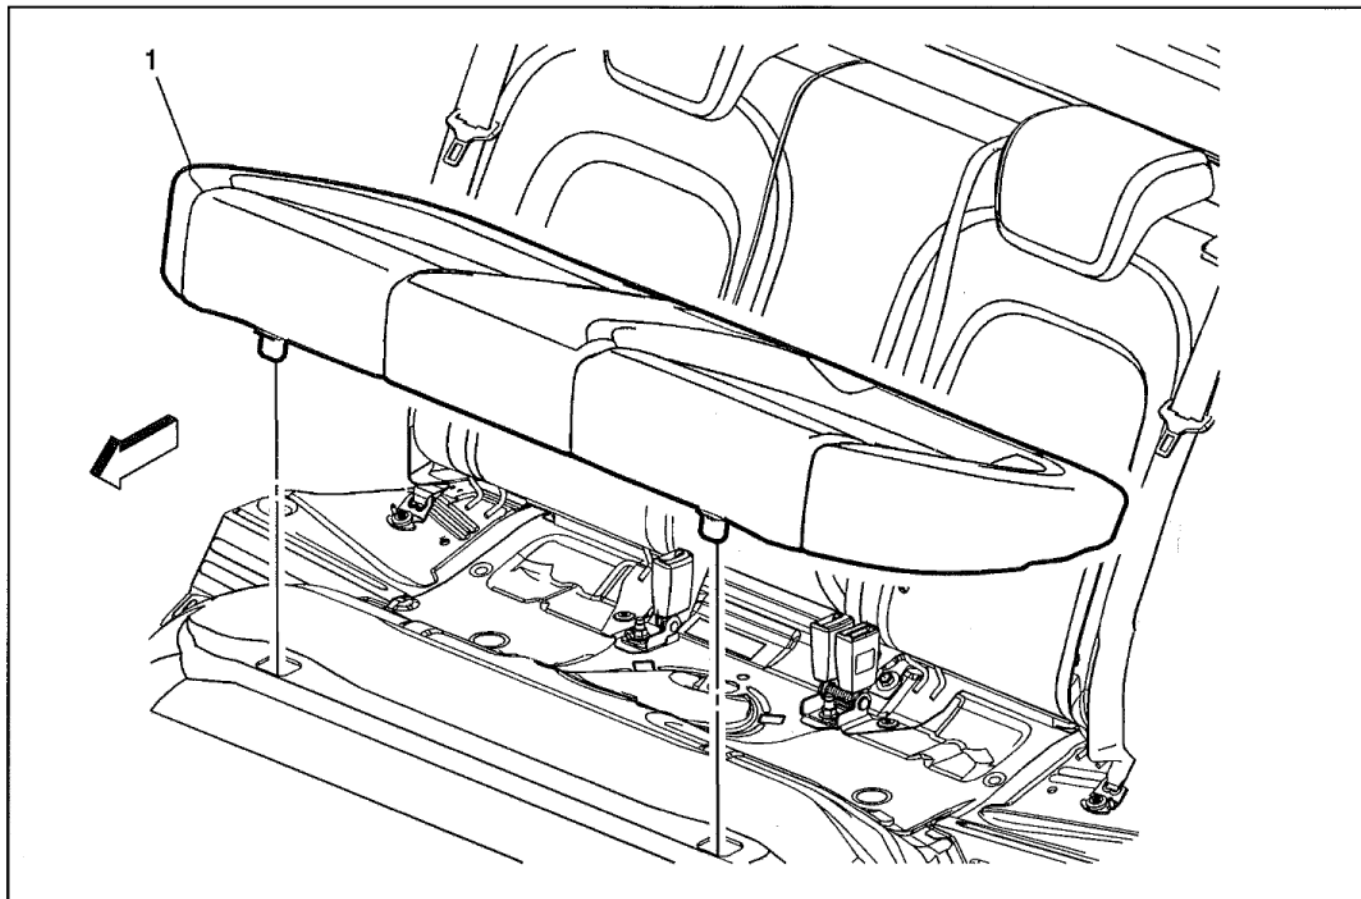
Rear Seat Cushion Removal and Installation

2509447

Rear Seat Cushion Removal and Installation

Callout	Component Name
1	Rear Seat Cushion Replacement Procedure 1. Release the rear seat center seat belts. 2. Lift up on the front of the seat cushion at the latch locations to disengage the cushion retainers from the floor. 3. Push down on the rear of the seat cushion to unhook the cushion from the floor wires.

Rear Seat Latch Replacement

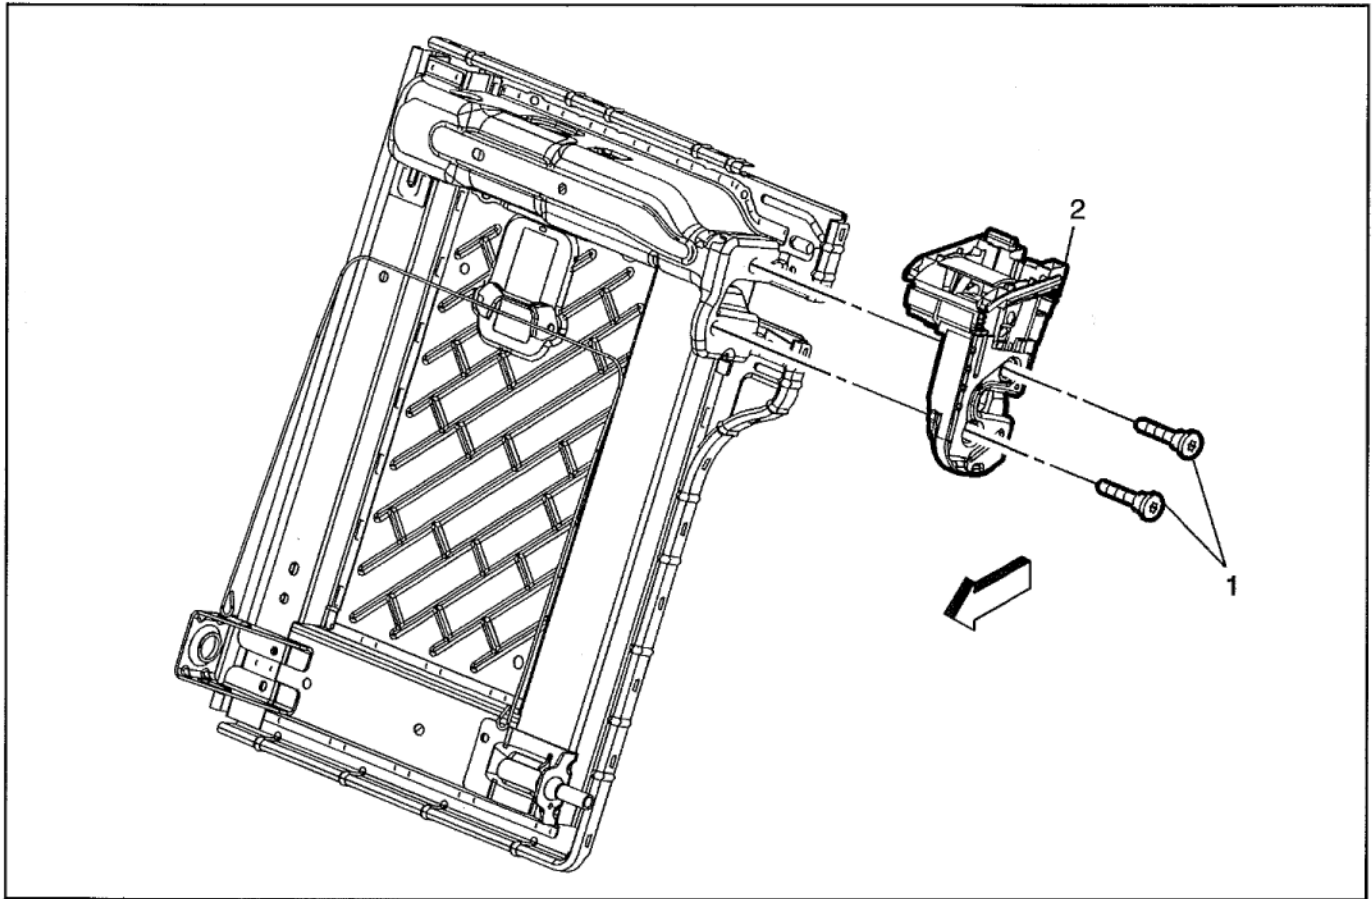


2509457

Rear Seat Latch Replacement

Callout	Component Name
Preliminary Procedures 1. Remove the rear seat back cushion. Refer to <i>Rear Seat Back Cushion Removal and Installation (40%)</i> on page 14-26 or <i>Rear Seat Back Cushion Removal and Installation (60%)</i> on page 14-27. 2. Remove the rear seat back cushion cover and pad. Refer to <i>Rear Seat Back Cushion Cover and Pad Replacement (AMA 40% w/Split Back)</i> on page 14-30 or <i>Rear Seat Back Cushion Cover and Pad Replacement (AMA 60% w/Split Back)</i> on page 14-31.	
1	Rear Seat Latch Fasteners (Qty: 2) Caution: Refer to <i>Fastener Caution</i> on page 0-8. Tighten 45 N•m (33 lb ft)
2	Rear Seat Latch

Rear Seat Back Cushion Removal and Installation (40%)

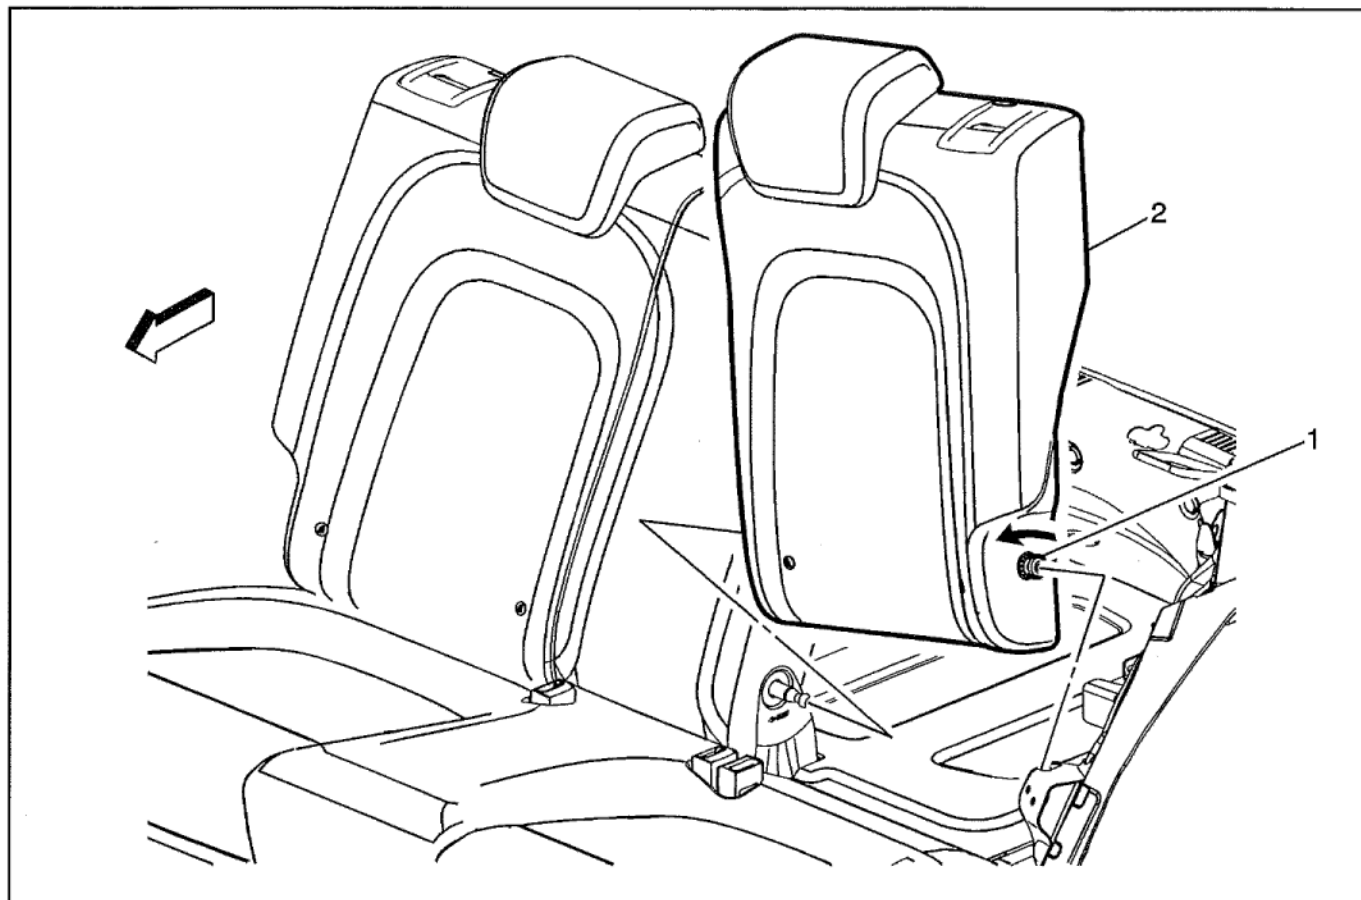


2509454

Rear Seat Back Cushion Removal and Installation (40%)

Callout	Component Name
Preliminary Procedure	
1. Remove the rear seat cushion. Refer to <i>Rear Seat Cushion Removal and Installation</i> on page 14-24.	
2. Remove the rear seat back cushion bolster. Refer to <i>Rear Seat Back Bolster Replacement</i> on page 14-21	
1	Rear Seat Back Cushion Pivot Support Procedure 1. Pull the rear seat back cushion latch release located on the top of the rear seat back cushion, and fold the rear seat back cushion forward. 2. Push in on the rear seat back cushion pivot support, and release from bracket.
2	Rear Seat Back Cushion Procedure 1. Pull up on the outer side of the rear seat back cushion and remove the rear seat back cushion from the bracket and hinge. 2. Transfer components as necessary.


Rear Seat Back Cushion Removal and Installation (60%)

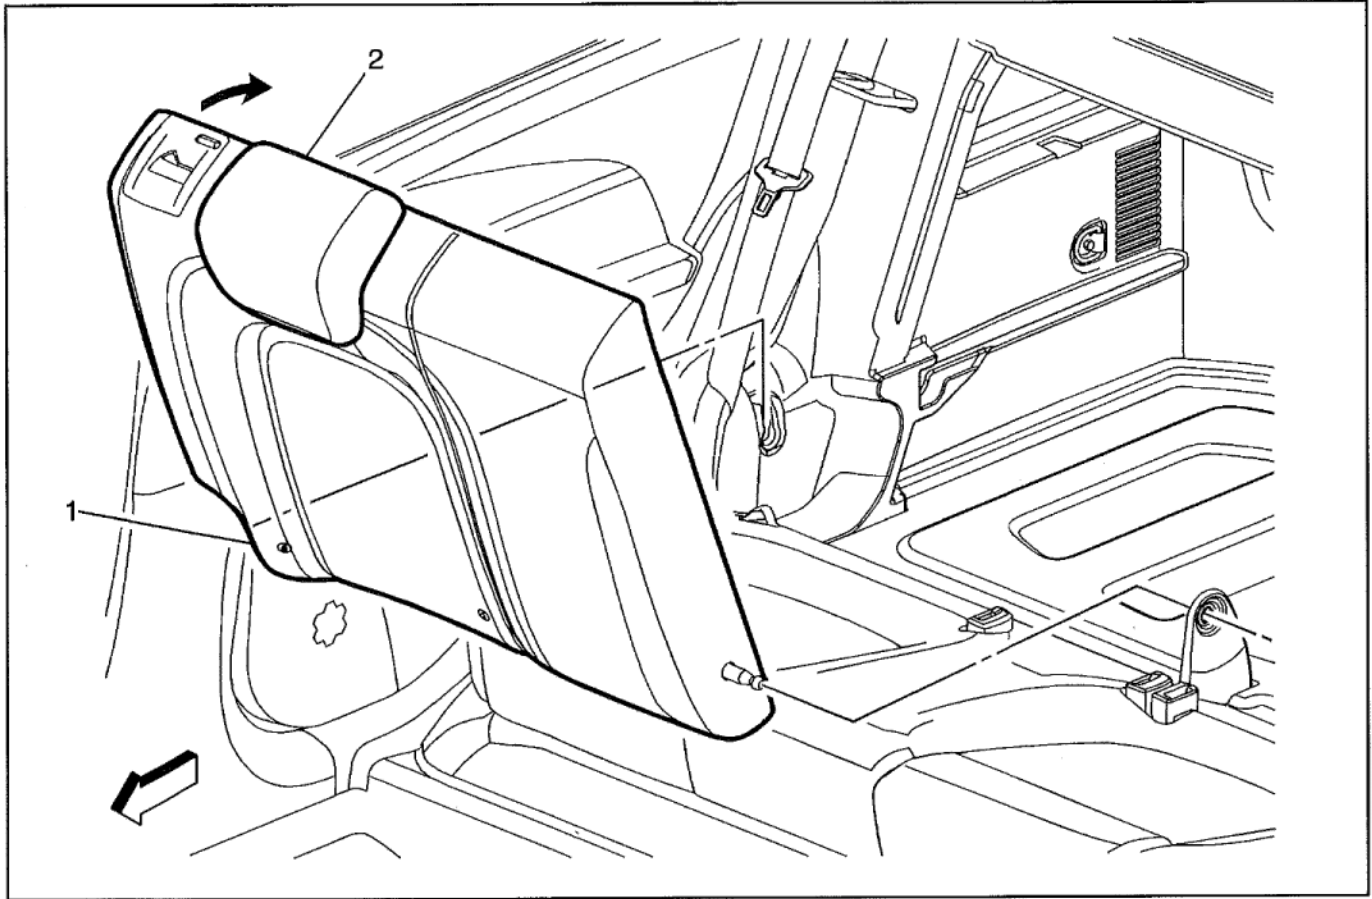

2510225

Rear Seat Back Cushion Removal and Installation (60%)

Callout	Component Name
Preliminary Procedure 1. Remove the rear seat cushion. Refer to <i>Rear Seat Cushion Removal and Installation</i> on page 14-24. 2. Remove the rear seat center retractor side belt lower fastener. Refer to <i>Rear Seat Center Shoulder Belt Replacement (Hatchback)</i> on page 13-62 or <i>Rear Seat Center Shoulder Belt Replacement (Sedan)</i> on page 13-61. 3. Remove the rear seat back cushion bolster. Refer to <i>Rear Seat Back Bolster Replacement</i> on page 14-21	
1	Rear Seat Back Cushion Pivot Support Procedure 1. Remove the rear seat back cushion 40% side. 2. Remove the rear outboard shoulder belts from the shoulder belt bezel and position it out of the way. 3. Pull the rear seat back cushion latch release located on the top of the rear seat back cushion, and fold the rear seat back cushion forward. 4. Push in on the rear seat back cushion pivot support, and release from bracket.
2	Rear Seat Back Cushion Procedure 1. Pull up on the outer side of the rear seat back cushion and remove the rear seat back cushion from the bracket and hinge. 2. Transfer components as necessary.

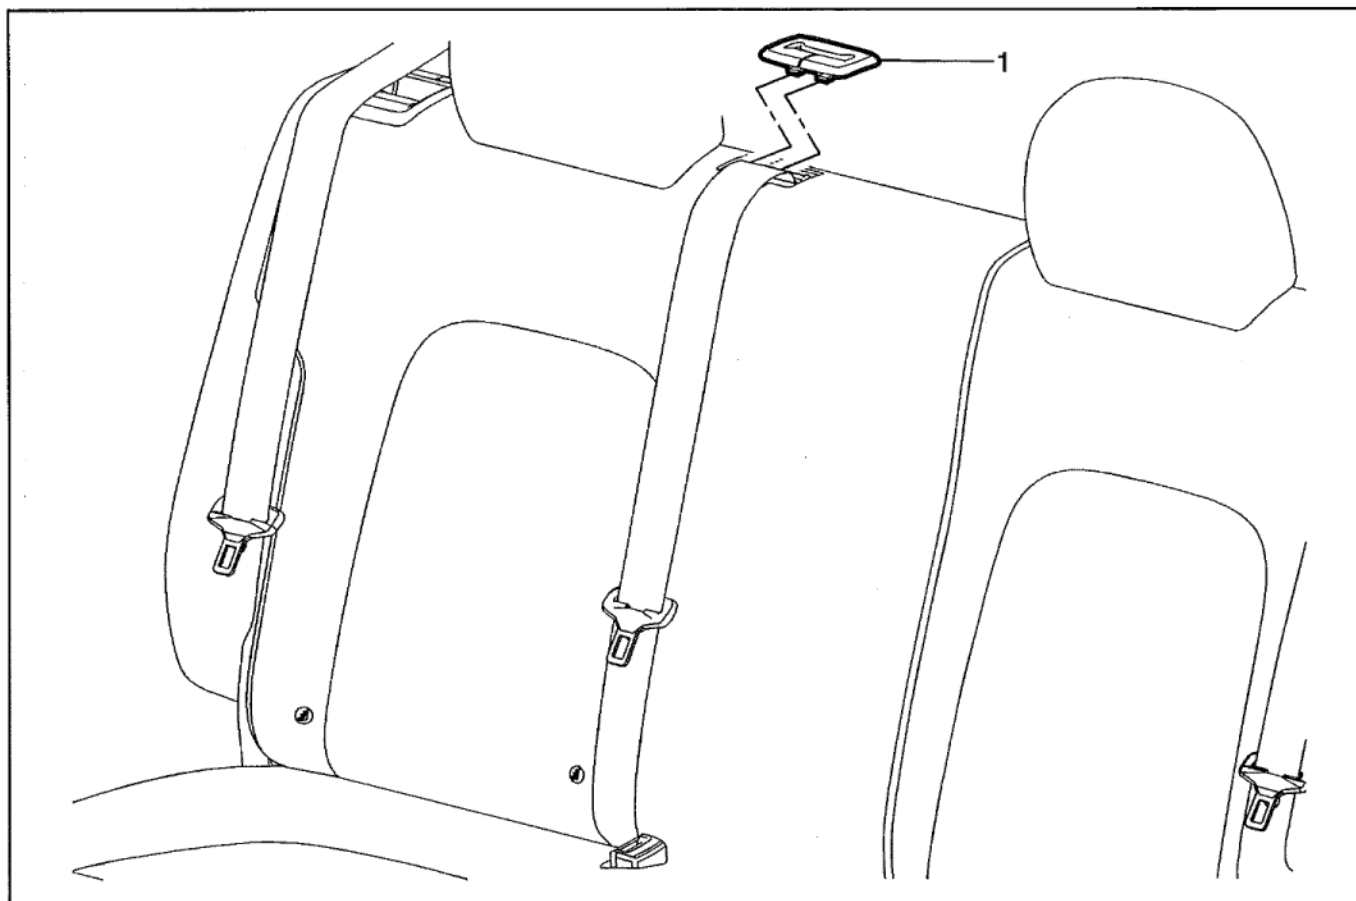
Rear Seat Shoulder Belt Guide Opening Bezel Replacement

2673885

Rear Seat Shoulder Belt Guide Opening Bezel Replacement

Callout	Component Name
1	Rear Seat Shoulder Belt Opening Bezel Procedure Push inward and upward from the front of the bezel to release from the seat back. Note: The rear seat shoulder belt opening bezel is part of the rear seat center belt assembly and is replaced as an assembly.

Rear Seat Back Cushion Panel Replacement

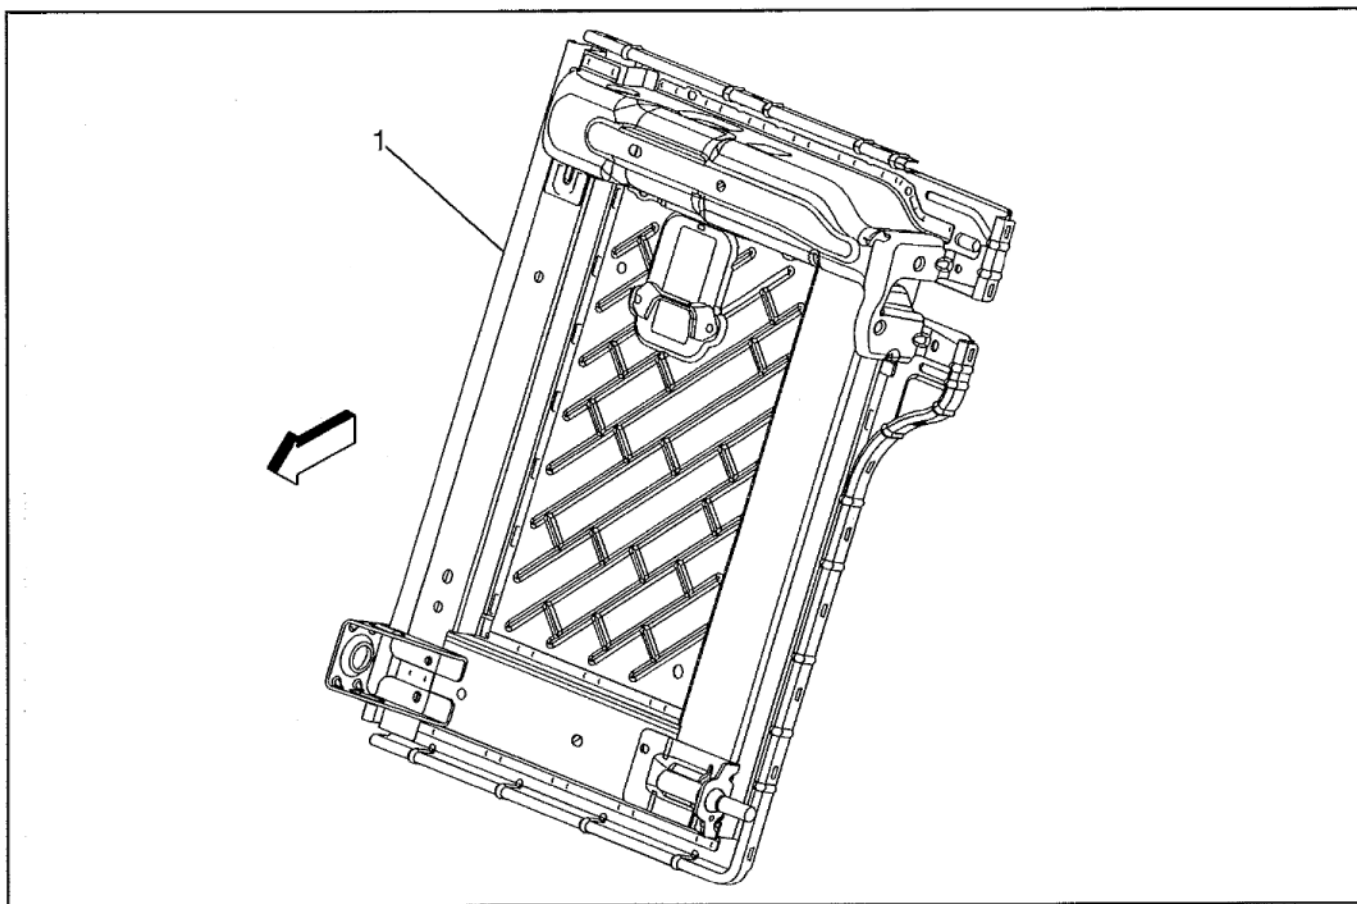


2510276

Rear Seat Back Cushion Panel Replacement

Callout	Component Name
Preliminary Procedure 1. Remove the rear seat back cushion. Refer to <i>Rear Seat Back Cushion Removal and Installation (40%)</i> on page 14-26 or <i>Rear Seat Back Cushion Removal and Installation (60%)</i> on page 14-27 2. Remove the rear seat head restraint guide. Refer to <i>Rear Seat Head Restraint Guide Replacement</i> on page 14-20 3. Remove the rear seat back cushion latch release knob bezel. Refer to <i>Rear Seat Back Cushion Latch Release Knob Bezel Replacement</i> on page 14-33 4. Remove the child seat back cushion cover. Refer to <i>Child Seat Back Cushion Cover Replacement</i> on page 14-18 5. Remove the rear seat back cushion pivot support. Refer to <i>Rear Seat Back Cushion Pivot Support Replacement</i> on page 14-22 6. Remove the rear seat latch. Refer to <i>Rear Seat Latch Replacement</i> on page 14-25	
1	Rear Seat Back Cushion Panel Procedure 1. Remove the seat back carpet. 2. If replacing the seat back panel, transfer components as necessary.

Rear Seat Back Cushion Cover and Pad Replacement (AMA 40% w/Split Back)

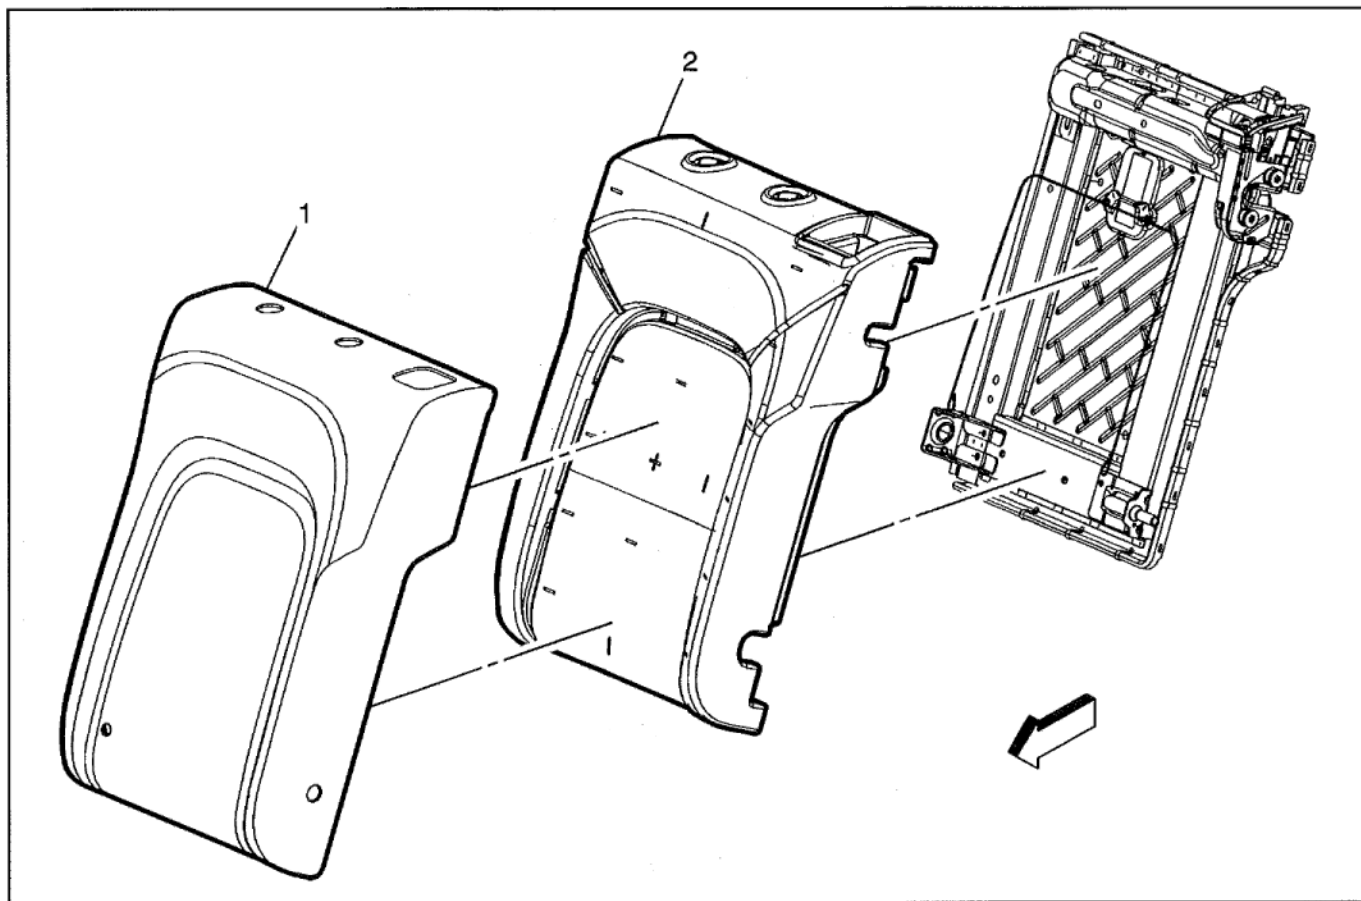


2509456

Rear Seat Back Cushion Cover and Pad Replacement (AMA 40% w/Split Back)

Callout	Component Name
Preliminary Procedures 1. Remove the rear seat back cushion. Refer to <i>Rear Seat Back Cushion Removal and Installation (40%)</i> on page 14-26 or <i>Rear Seat Back Cushion Removal and Installation (60%)</i> on page 14-27. 2. Remove the rear seat head restraint guide. Refer to <i>Rear Seat Head Restraint Guide Replacement</i> on page 14-20. 3. Remove the rear seat back cushion latch release handle bezel. Refer to <i>Rear Seat Back Cushion Latch Release Knob Bezel Replacement</i> on page 14-33 4. Remove the child seat back cushion cover. Refer to <i>Child Seat Back Cushion Cover Replacement</i> on page 14-18 5. Remove the rear seat back cushion pivot support. Refer to <i>Rear Seat Back Cushion Pivot Support Replacement</i> on page 14-22.	
1	Rear Seat Back Cushion Cover Procedure 1. Remove the seat back carpet. 2. Disengage the J-channel retainers from the seat back cushion frame. 3. Remove the hog rings from the under side of the rear seat back cushion cover. 4. Pull the cover away from the pad to disengage the hook and loop retainers. 5. If replacing the seat back panel, transfer components as necessary. Note: When installing the rear seat back cushion cover, pull the cover tightly in all corners to ensure that no creasing occurs.
2	Rear Seat Back Cushion Pad

Rear Seat Back Cushion Cover and Pad Replacement (AMA 60% w/Split Back)

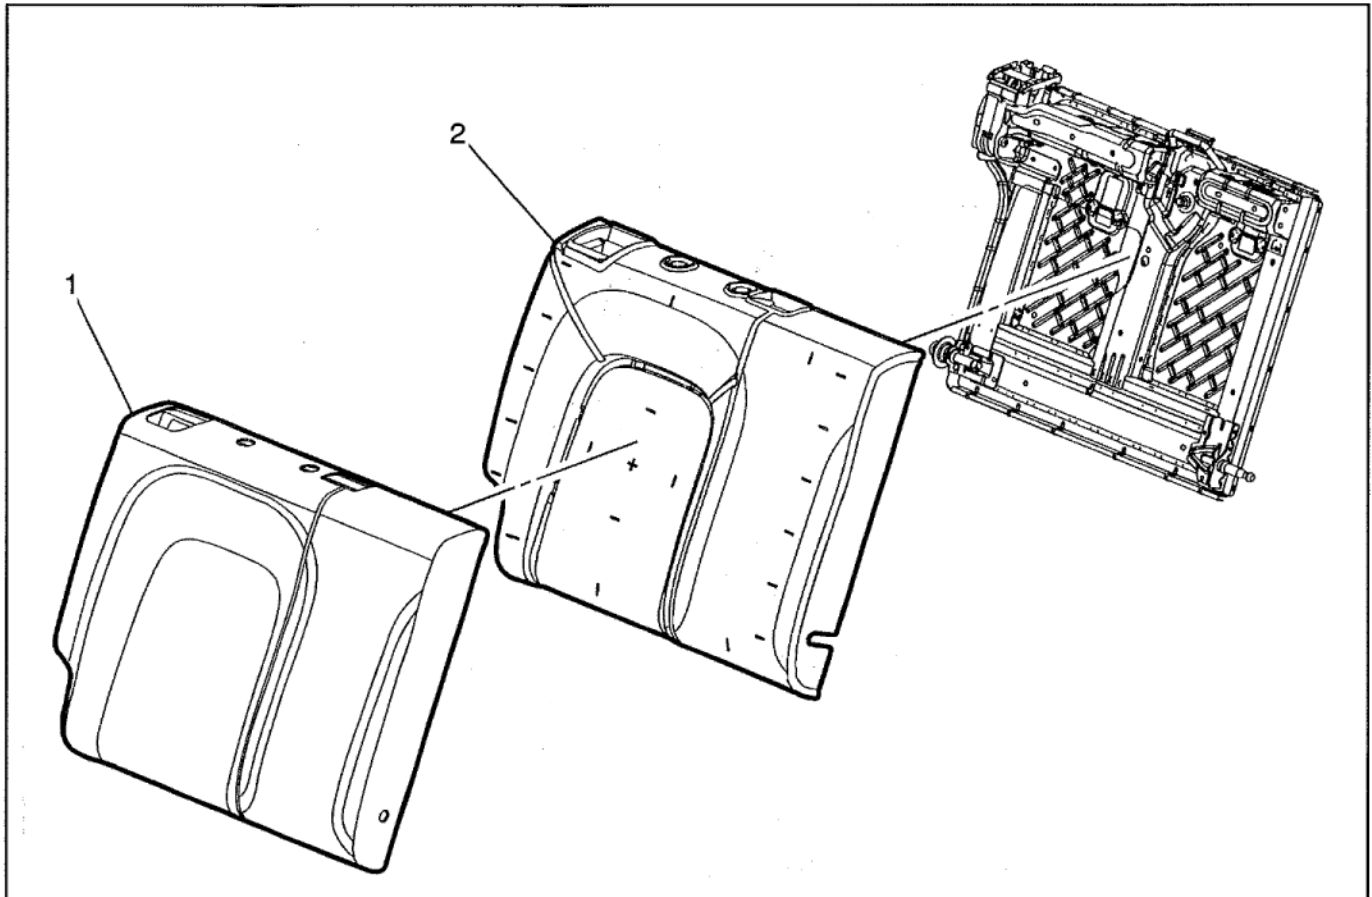


2511275

Rear Seat Back Cushion Cover and Pad Replacement (AMA 60% w/Split Back)

Callout	Component Name
Preliminary Procedure 1. Remove the rear seat back cushion. Refer to <i>Rear Seat Back Cushion Removal and Installation (40%)</i> on page 14-26 or <i>Rear Seat Back Cushion Removal and Installation (60%)</i> on page 14-27 2. Remove the rear seat head restraint guide. Refer to <i>Rear Seat Head Restraint Guide Replacement</i> on page 14-20 3. Remove the rear seat back cushion latch release knob bezel. Refer to <i>Rear Seat Back Cushion Latch Release Knob Bezel Replacement</i> on page 14-33 4. Remove the child seat back cushion cover. Refer to <i>Child Seat Back Cushion Cover Replacement</i> on page 14-18 5. Remove the rear seat back cushion pivot support. Refer to <i>Rear Seat Back Cushion Pivot Support Replacement</i> on page 14-22 6. Remove the rear seat shoulder belt guide opening bezel, if equipped. Refer to <i>Rear Seat Shoulder Belt Guide Opening Bezel Replacement</i> on page 14-28	
1	Rear Seat Back Cushion Cover Procedure 1. Remove the seat back carpet. 2. Remove the rear seat center head restraint, if equipped. 3. Disengage the J-channel retainers from the seat back cushion frame. 4. Remove the hog rings from the under side of the rear seat back cushion cover. 5. Pull the cover away from the pad to disengage the hook and loop retainers. 6. If replacing the seat back panel, transfer components as necessary. Note: When installing the rear seat back cushion cover, pull the cover tightly in all corners to ensure that no creasing occurs.
2	Rear Seat Back Cushion Pad

Rear Seat Back Cushion Hinge Replacement

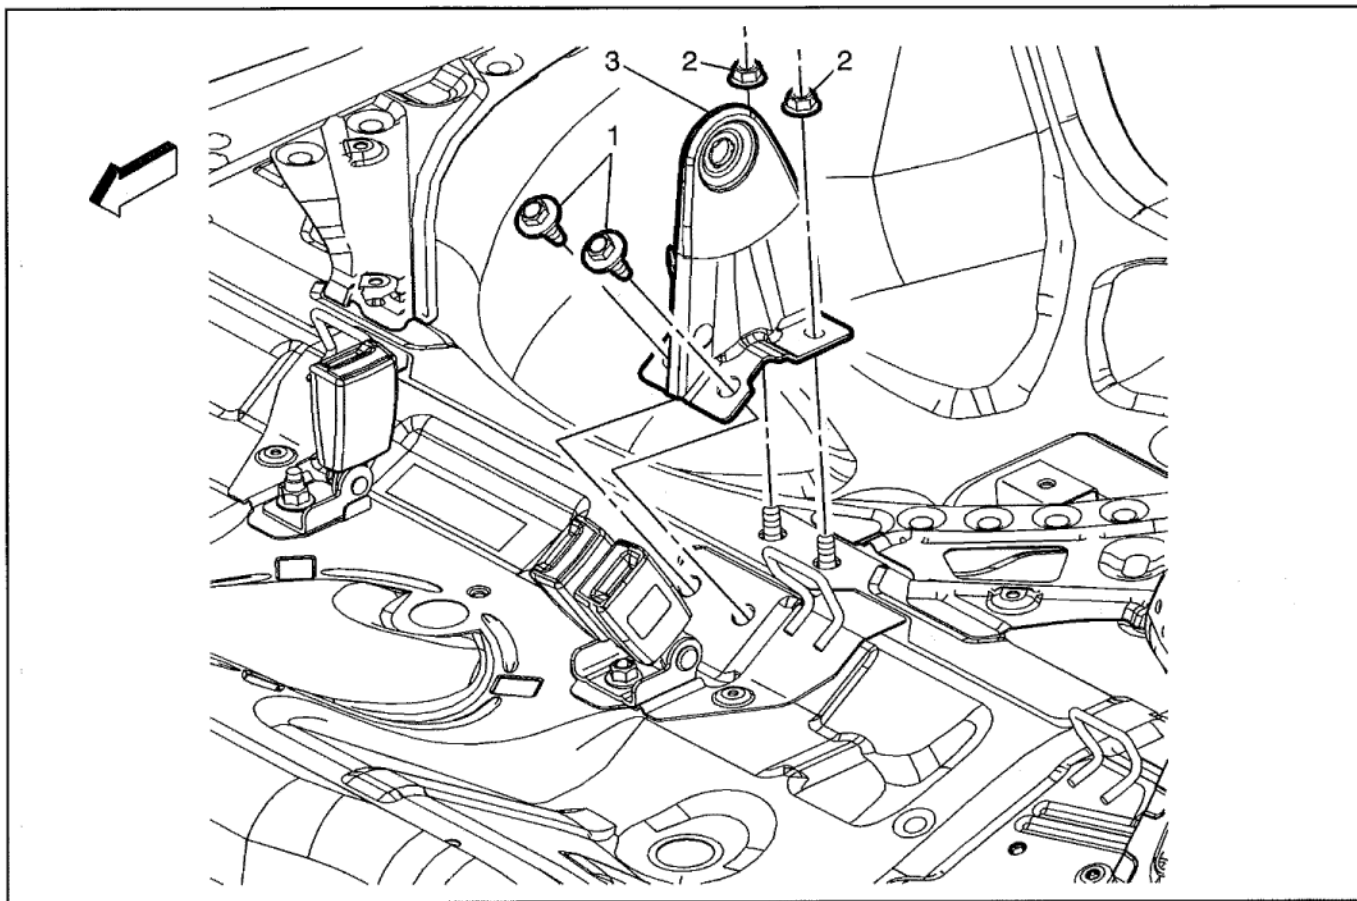


2509460

Rear Seat Back Cushion Hinge Replacement

Callout	Component Name
Preliminary Procedure 1. Remove the rear seat cushion. Refer to <i>Rear Seat Cushion Removal and Installation</i> on page 14-24 2. Remove the rear seat back cushion. Refer to <i>Rear Seat Back Cushion Removal and Installation (40%)</i> on page 14-26 or <i>Rear Seat Back Cushion Removal and Installation (60%)</i> on page 14-27 3. Remove the rear compartment floor panel carpet. Refer to <i>Rear Compartment Floor Panel Carpet Replacement (Hatchback)</i> on page 2-23 or <i>Rear Compartment Floor Panel Carpet Replacement (Sedan)</i> on page 2-22	
1	Rear Seat Back Cushion Hinge Bolt (Qty: 2) Caution: Refer to <i>Fastener Caution</i> on page 0-8. Tighten 43 N•m (32 lb ft)
2	Rear Seat Back Cushion Hinge Nut (Qty: 2) Tighten 43 N•m (32 lb ft)
3	Rear Seat Back Cushion Hinge

Rear Seat Back Cushion Latch Release Knob Bezel Replacement

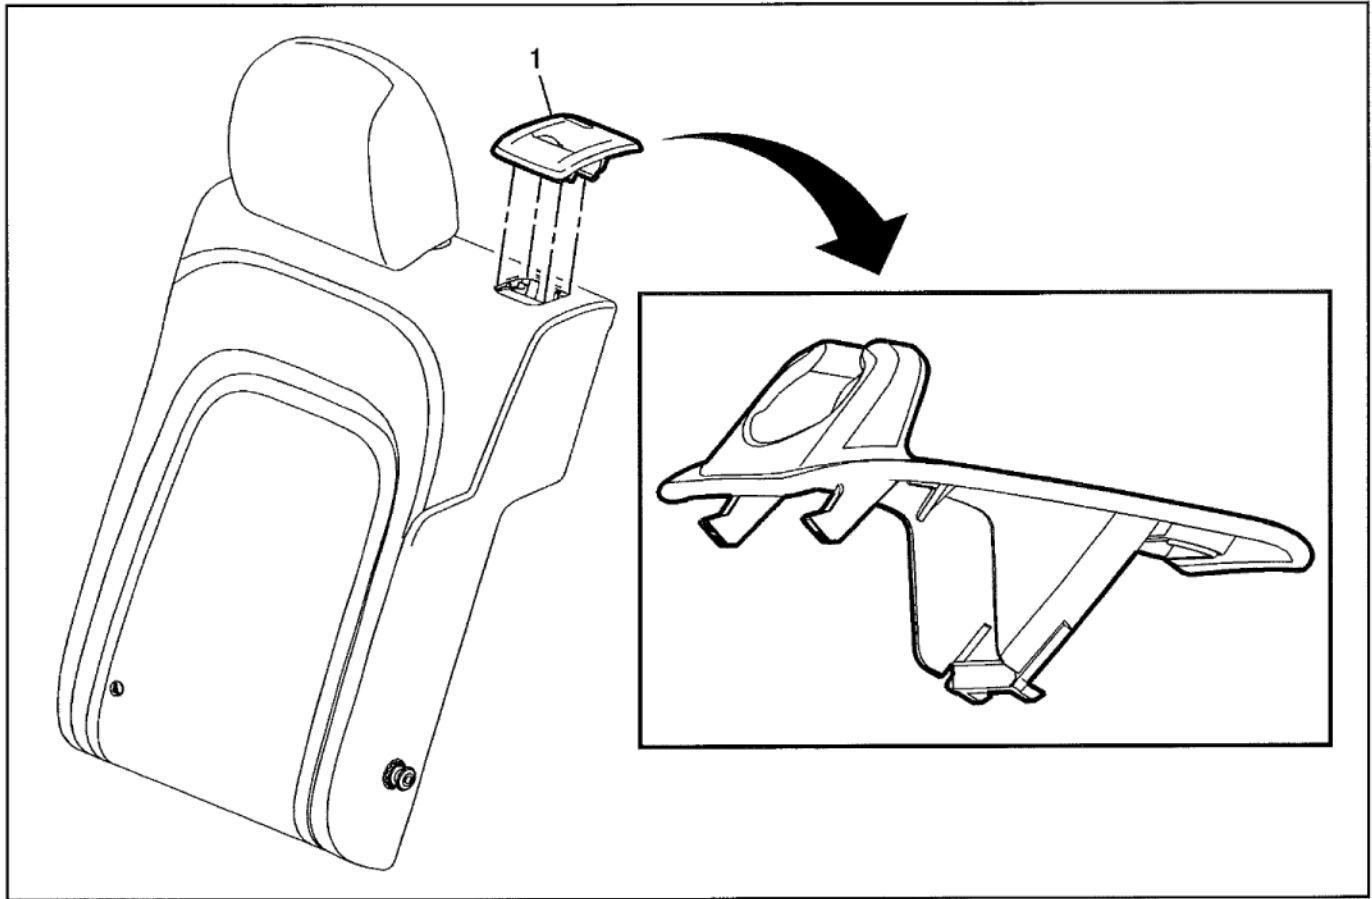

2510155

Rear Seat Back Cushion Latch Release Knob Bezel Replacement

Callout	Component Name
1	Rear Seat Back Cushion Latch Release Handle Bezel Procedure Use a flat-bladed tool to tilt the rear of the handle upward, then lifting and pulling the bezel rearward to disengage the front hooks.