


Dash panel insert

From July 2018




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Control unit in dash panel insert, Data bus diagnostic interface, Fuse holder C

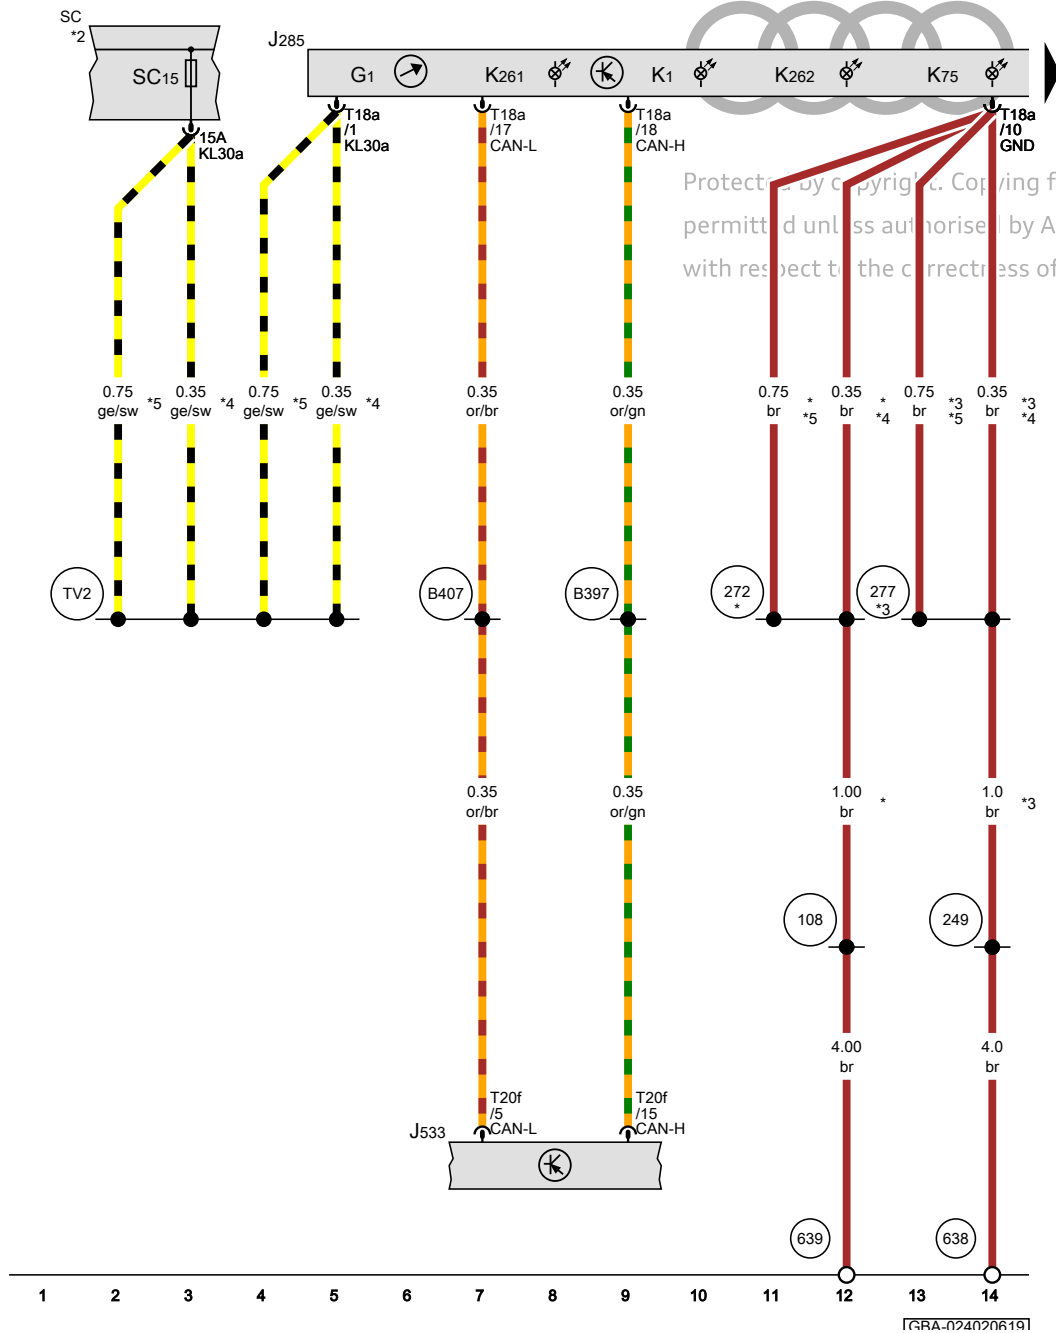

- G1 Fuel gauge
- J285 Control unit in dash panel insert
- J533 Data bus diagnostic interface
- K1 Main beam warning lamp
- K75 Airbag warning lamp
- K261 Warning lamp for left turn signal
- K262 Warning lamp for right turn signal
- SC Fuse holder C
- SC15 Fuse 15 on fuse holder C
- T18a 18-pin connector, black
- T20f 20-pin connector, red
- 108 Earth connection 2, in front left wiring harness
- 249 Earth connection 2, in interior wiring harness
- 272 Earth connection 4, in front wiring harness
- 277 Earth connection 3, in interior wiring harness
- 638 Earth point, on right A-pillar
- 639 Earth point, left A-pillar
- B397 Connection 1 (convenience CAN bus, high), in main wiring harness
- B407 Connection 2 (convenience CAN bus, low), in main wiring harness
- TV2 Terminal 30 wiring junction
- * For left-hand drive models
- *2 see applicable current flow diagram for fuses in interior
- *3 For right-hand drive models
- *4 Up to July 2019
- *5 From July 2019

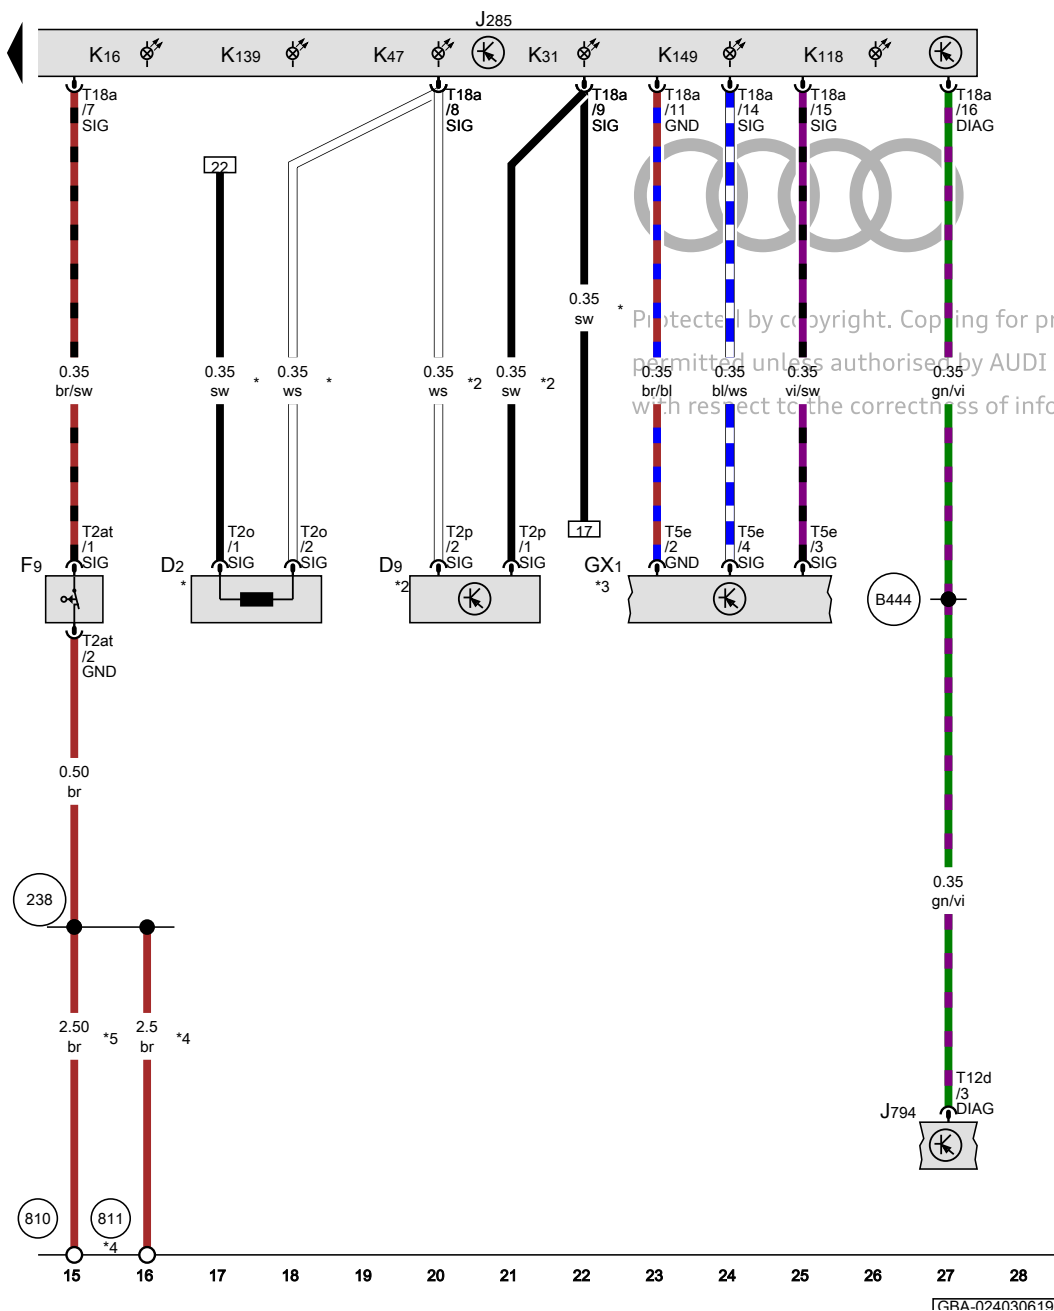

Immobiliser reader coil, Electronic ignition lock, Handbrake warning switch, Fuel delivery unit, Control unit in dash panel insert, Control unit 1 for information electronics

- D2 Immobiliser reader coil
- D9 Electronic ignition lock
- F9 Handbrake warning switch
- GX1 Fuel delivery unit
- J285 Control unit in dash panel insert
- J794 Control unit 1 for information electronics
- K16 Reserve fuel warning lamp
- K31 Cruise control system warning lamp
- K47 ABS warning lamp
- K118 Brake system warning lamp
- K139 Handbrake warning lamp
- K149 Engine electronics warning lamp
- T2at 2-pin connector, black
- T2o 2-pin connector, green
- T2p 2-pin connector, green
- T5e 5-pin connector, black
- T12d 12-pin connector, grey
- T18a 18-pin connector, black

- 238 Earth connection 1, in interior wiring harness
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- B444 Connection 1 (diagnosis), in main wiring harness

- * For models with entry and start authorisation
- *2 For models with no entry and start authorisation
- *3 see applicable current flow diagram for fuel system
- *4 For right-hand drive models
- *5 For left-hand drive models