

# Consoles

## Center Console Removal/Installation

### Special Tools Required

KTC trim tool set SOJATP2014 \*

\* Available through the Acura Tool and Equipment Program; 888-424-6857

SRS components are located in this area. Review the SRS component locations (see page 24-12) and the precautions and procedures (see page 24-14) before doing repairs or service.


### NOTE:

- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.
- Take care not to scratch the front seat, dashboard, and related parts.
- Put on a pair of clean cotton gloves so as not to put any fingerprints on sueded surfaces of the panels during removal/installation.

1. Detach the clips by pulling the center console panel (A) up. Disconnect the seat heater switch connectors, or seat ventilation switch connectors (B), and accessory socket connector (C).

### Fastener Locations

▷ : Clip, 4

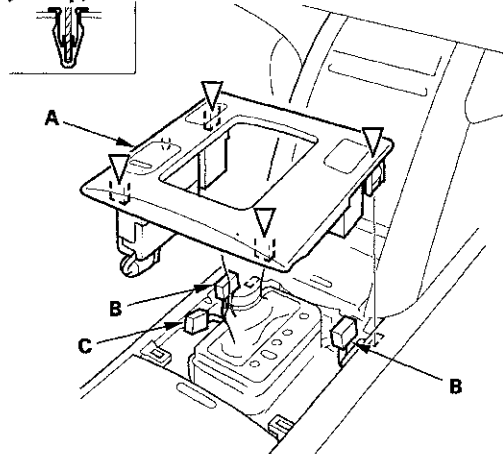


2. Remove the center console trim (A).

- 1 Open the console armrest.
- 2 Open the beverage holder lid (B), pull the front portion of the trim up by hand to detach the clips and the hooks (C), then remove it.

### Fastener Locations


▷ : Clip, 2

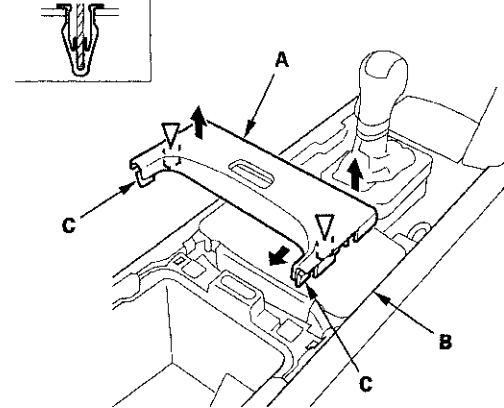

3. Pull the beverage holder (A) up by hand to detach the clips (B, C), then remove it.

### Fastener Locations

B ▷ : Clip, 2 C ▷ : Clip, 2

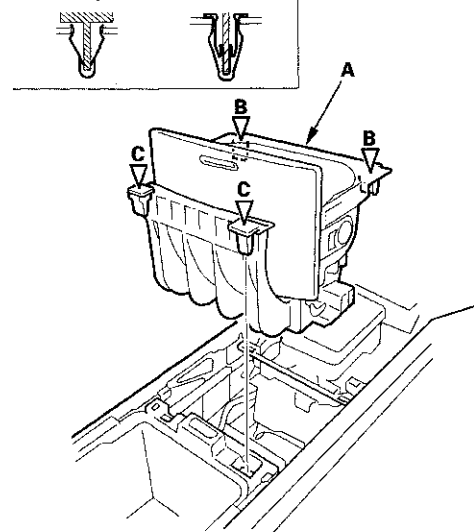




#### 4. Remove the accessory trim (A).

- 1 Remove the console box mat (B).
- 2 Remove the screws and release the hooks (C), then remove the trim.
- 3 Disconnect the rear accessory power socket connector (D), auxiliary jack connector (E), ambient light connector (F), and the USB jack connector (G).

##### Fastener Locations


► : Screw, 4

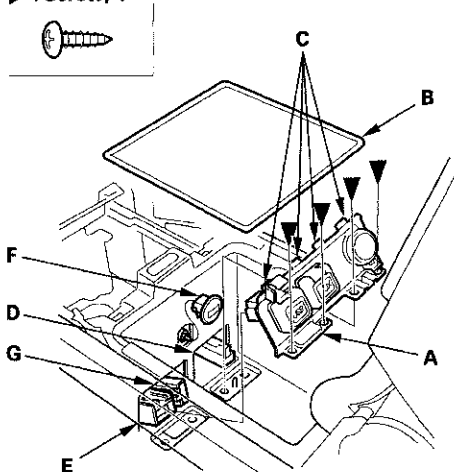

5. Detach the clips by pulling the driver's front console cover (A) and the passenger's front console cover (B) out, and pull them backward to release their pins (C) from the heater unit, then remove them.

##### Fastener Locations

▷ : Clip, 14

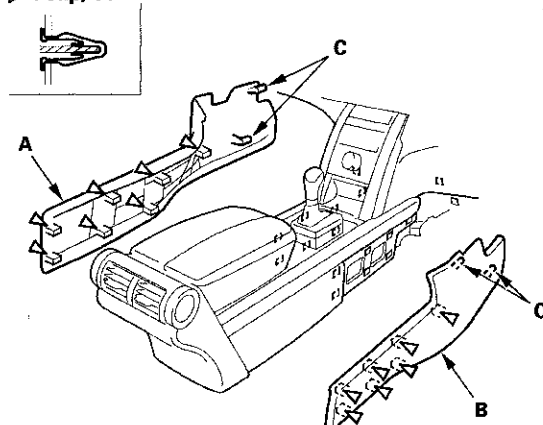



#### 6. Remove the center console (A).

- 1 Disconnect the subharness connector (B), and detach it from the vent duct.
- 2 Remove the bolts (C, D).
- 3 Pull out the console backward, then remove it.

NOTE: Take care not to deform the rear vent duct (E) while removing and storing the console.

##### Fastener Locations

 C ► : Bolt, 4 D ► : Bolt, 4

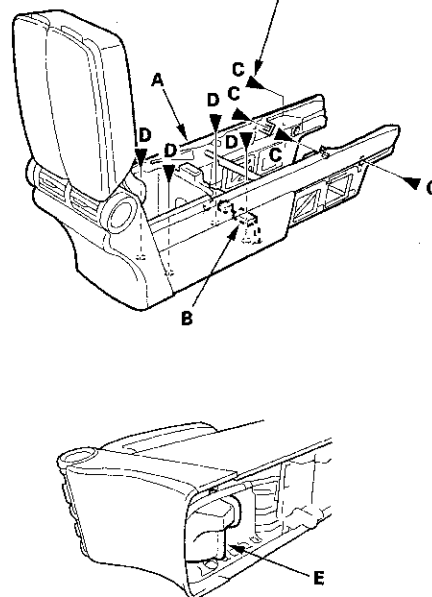

7. Install the console in the reverse order of removal, and note these items:

- If the clips are damaged or stress-whitened, replace them with new ones.
- Make sure the connectors are plugged in properly.
- When installing the console mounting bolts, first install the front bolts in the bottom of the center console trim.
- After installing the front console covers, make sure the front pins of the covers are installed securely by moving the front edge of the panels to the outside.

# Consoles

## Center Console Armrest Removal/Installation

### Special Tools Required

KTC trim tool set SOJATP2014 \*

\* Available through the Acura Tool and Equipment Program; 888-424-6857


### NOTE:

- Take care not to scratch the console.
- Use the appropriate tool from the KTC trim tool set to avoid damage when removing components.

1. Remove the center console (see page 20-92).
2. Detach the clips, then remove the console trim (A). Disconnect the LF antenna connector (B) and the rear seat heater switch connectors (C) (if equipped).

### Fastener Locations


▷ : Clip, 4

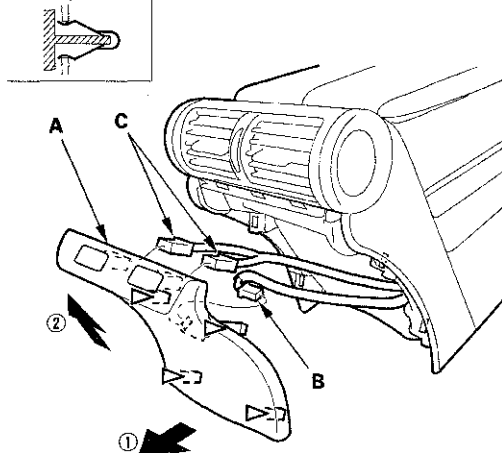

3. Remove the screws (A) and detach the clips (B) and hooks (C), then remove the left console side trim (D) and the right console side trim (E).

### Fastener Locations


A ▷ : Screw, 4 B ▷ : Clip, 4

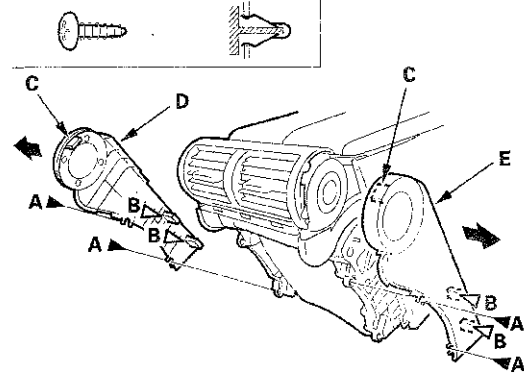

4. Remove the screws, and release the tabs (A), then remove the console outlet trim (B).

### Fastener Locations

▷ : Screw, 2


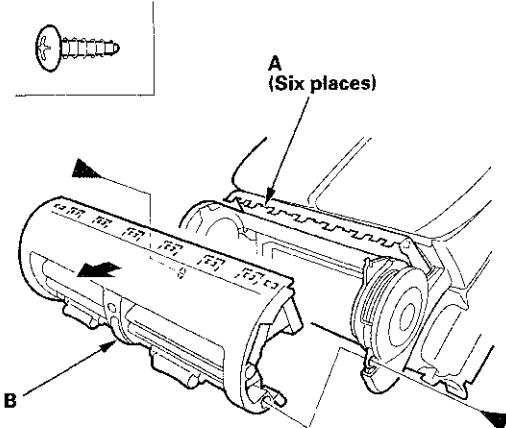




5. Remove the screws, hinge bushings (A), and the hinge stoppers (B) from both sides, then remove the console armrest (C).

#### Fastener Locations

 ► : Screw, 2

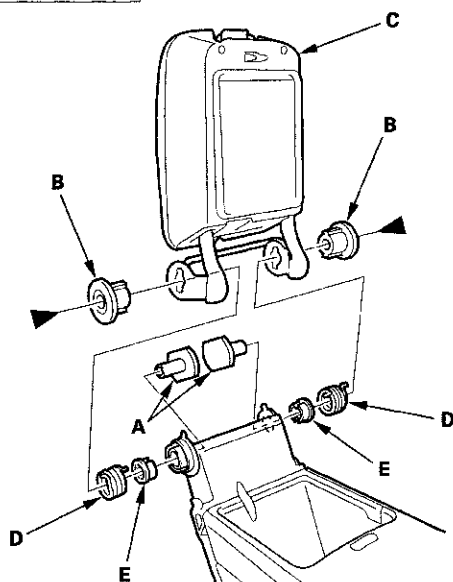

6. Remove the hinge springs (D) and the bushings (E) from both sides.
7. Install the armrest in the reverse order of removal, and note these items:
  - If the clips are damaged or stress-whitened, replace them with new ones.
  - Make sure the connector is plugged properly.
  - Push the clips into place securely.

## Center Console Armrest Disassembly/Reassembly

NOTE: Take care not to scratch the armrest.

1. Remove the console armrest (see page 20-94).
2. Disassemble the console armrest.


 
- 1 Remove the armrest tray cover (A) by detaching the clips (B, C).
- 2 Remove the screws (D), then remove the armrest lids (E).
- 3 Remove the screws (F, G), then remove the armrest tray (H) from the armrest bracket (I).

#### Fastener Locations

B ► : Clip, 4    C ► : Clip, 2    D ► : Screw, 8



F ► : Screw, 2    G ► : Screw, 5

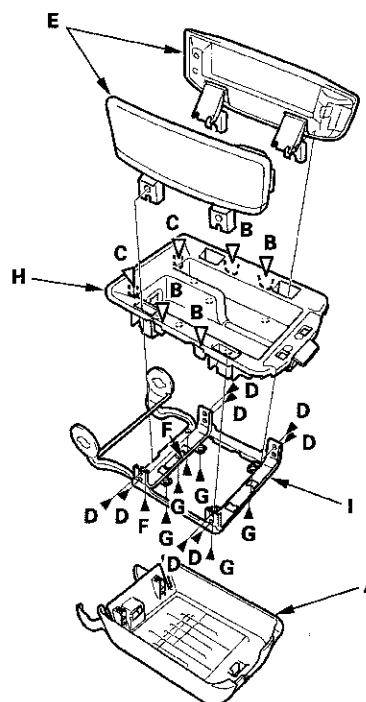

(cont'd)

# Consoles


 
## Center Console Armrest Disassembly/Reassembly (cont'd)

### 3. Disassemble the armrest lid.

- 1 Pry out the lock cover (A).
- 2 Remove the screws (B), then remove the armrest lid lock (C).
- 3 Release the seals (D), and remove the screws (E), then remove the armrest lid cover (F).
- 4 Remove the screws (G), then remove the armrest hinges (H) and the armrest lid (I) from the armrest lid bracket (J).

#### Fastener Locations

B, G ► : Screw, 6    E ► : Screw, 3

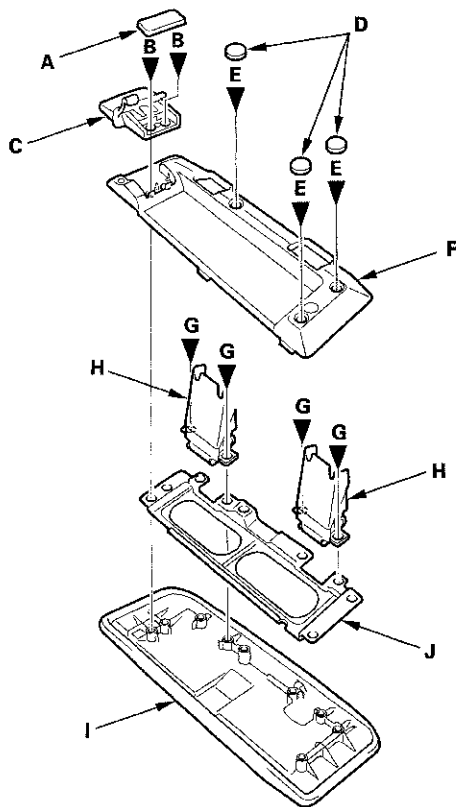

- ### 4. Reassemble the armrest in the reverse order of disassembly.