

2007-08 ACCESSORIES AND EQUIPMENT

Clock - TL

CIRCUIT DIAGRAM

WITHOUT NAVIGATION

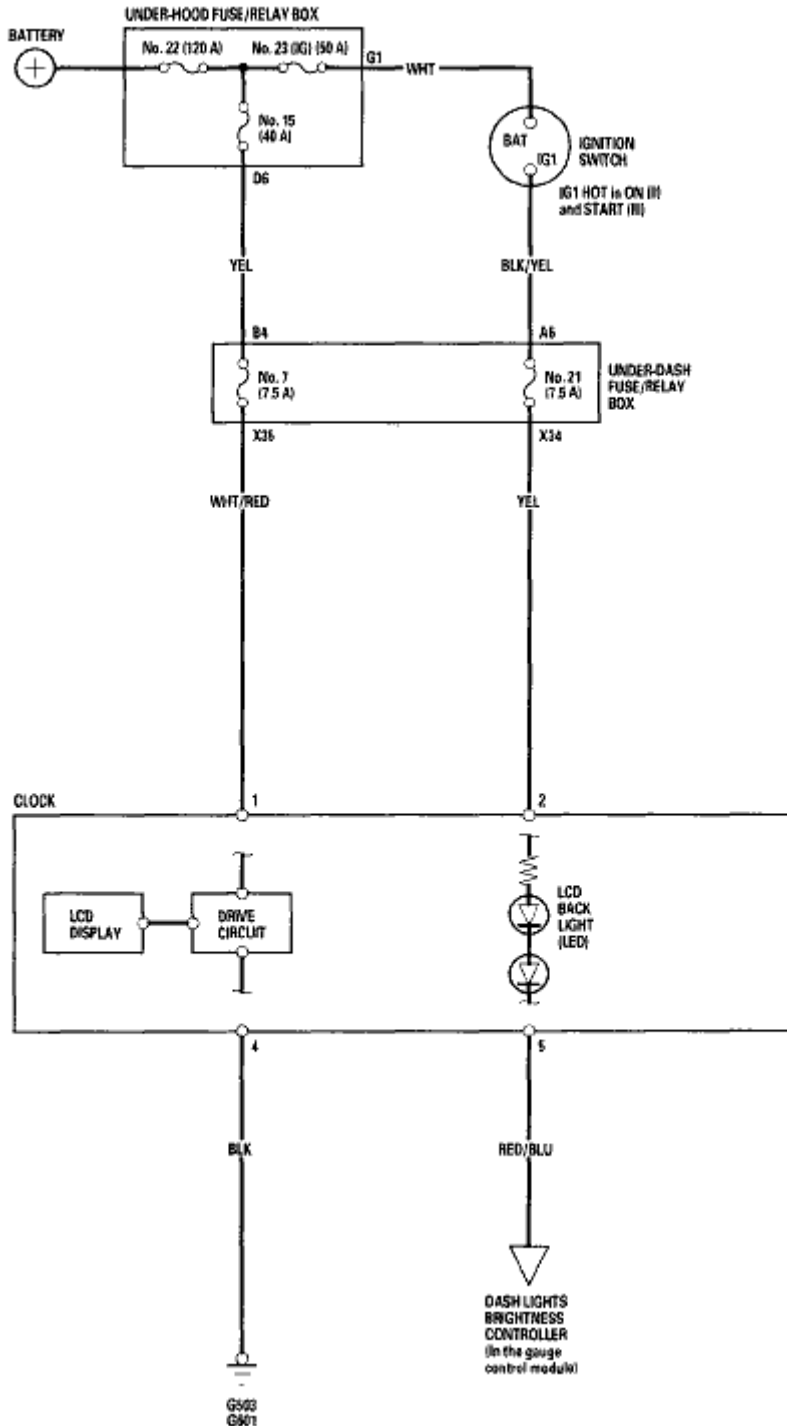


Fig. 1: Clock - Circuit Diagram (Without Navigation)

REPLACEMENT

WITHOUT NAVIGATION

NOTE: Vehicles with navigation; refer to audio-HVAC subdisplay unit removal/installation (see AUDIO UNIT REMOVAL/INSTALLATION).

1. Remove the dashboard center vent (see DRIVER'S DASHBOARD UNDERCOVER REMOVAL/INSTALLATION).
2. Disconnect the 5P connector (A) from the clock.

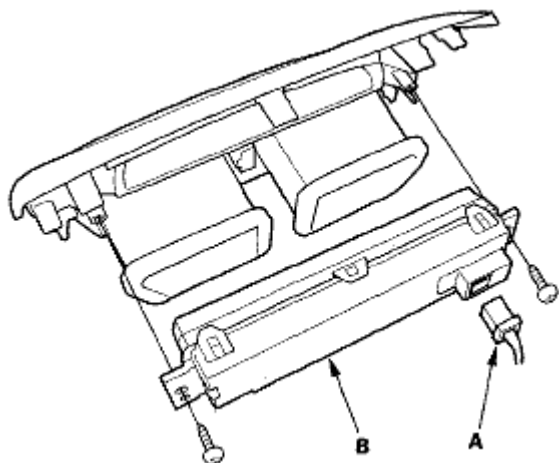


Fig. 2: Identifying 5P Connector From Clock

3. Remove the two mounting screws, and remove the clock (B).

Terminals

TESTING CONDITION CHART

Cavity	Wire	Connect to
1	WHT/RED	Constant power
2	YEL	IG1 (Main clock power supply)
3	-	Not used
4	BLK	Ground (G503, G601)
5	RED/BLU	Lights-on signal (-)

4. Install in the reverse order of removal.