

2017 BRAKES

Antilock Brake System - Impala

SPECIFICATIONS

FASTENER SPECIFICATIONS

Reusable Threaded Fastener Tightening Specifications

NOTE:

All fasteners listed in this table can be reused after removal.

Application	Specification
	Metric (English)
Brake Pipe Fitting - Hydraulic Control Unit Outlet	18 N.m (13 lb ft)
Brake Pipe Fitting - Master Cylinder Primary and Secondary Brake Pipe	25 N.m (18 lb ft)
Electronic Brake and Traction Control Module Assembly Bracket Bolt	10 N.m (89 lb in)
Electronic Brake and Traction Control Module Assembly Bracket Nut	22 N.m (16 lb ft)
Electronic Brake Control Module Bolt	5 N.m (44 lb in)
Wheel Speed Sensor Bolt	9 N.m (80 lb in)
Vehicle Yaw Sensor Nut	7 N.m (62 lb in)

SCHEMATIC WIRING DIAGRAMS

ANTILOCK BRAKE SYSTEM WIRING SCHEMATICS

Power, Ground, Serial Data, Traction Control and References

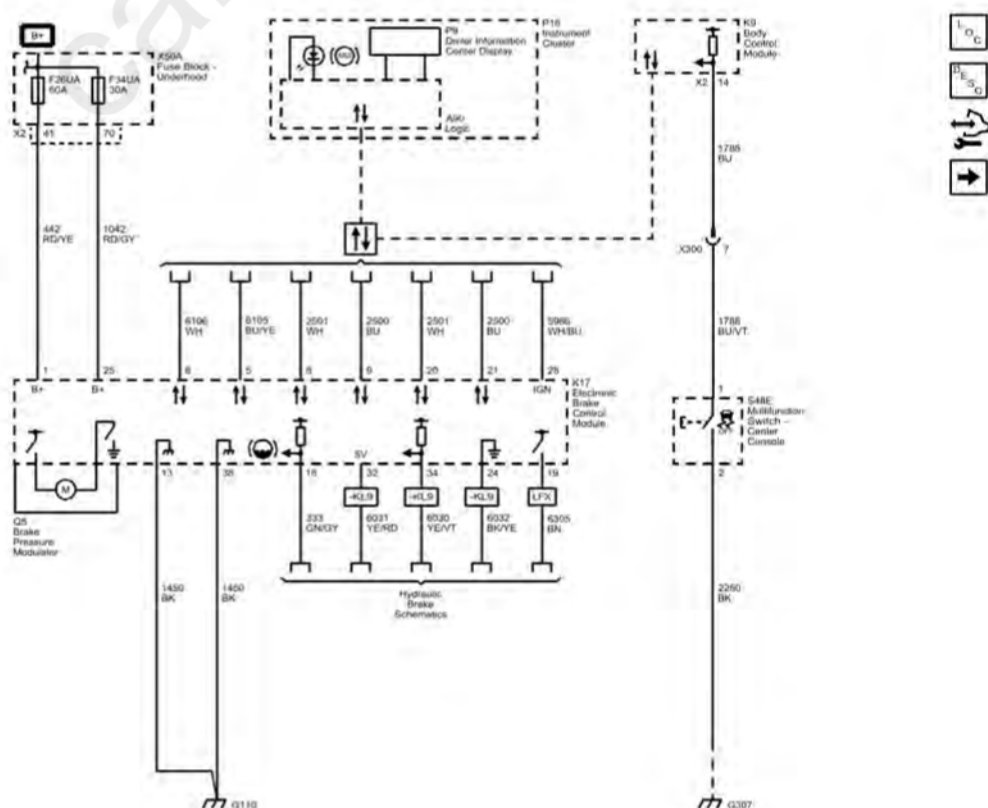


Fig. 1: Power, Ground, Serial Data, Traction Control and References
 Courtesy of GENERAL MOTORS COMPANY

Wheel Speed Sensors


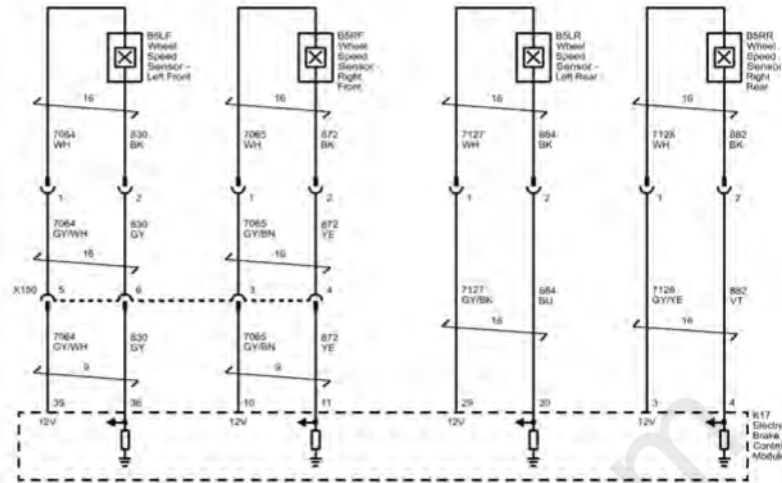


Fig. 2: Wheel Speed Sensors
 Courtesy of GENERAL MOTORS COMPANY

Stability Controls

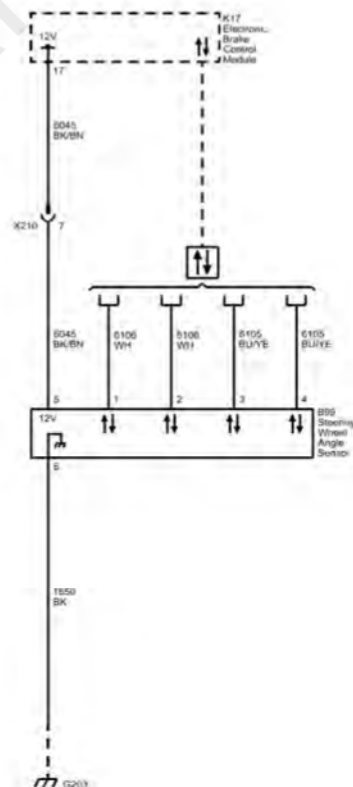

DIAGNOSTIC INFORMATION AND PROCEDURES

DTC B2745: TRACTION CONTROL SWITCH

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC B2745 02

Traction Control Switch Circuit Short to Ground

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Signal	B2745 02, U0422 71	1	1	-
Ground	-	1	-	-
1. Traction control switch malfunction				

Circuit/System Description

The body control module monitors the signal circuit from the traction control switch. When the traction control switch is pressed once, the body control module will request the electronic brake control module via serial data to disable the traction control. The electronic brake control module will request the instrument cluster via serial data to turn the traction control off indicator ON to notify the driver of the deactivation.

When the traction control switch is pressed and held for 5 s, the body control module will request the electronic brake control module to disable the traction control and the electronic stability control. The electronic brake control module will request the instrument cluster via serial data to turn the traction control off and stability control off indicator ON to notify the driver of the deactivation.

Conditions for Running the DTC

Ignition ON.

Conditions for Setting the DTC

The body control module detects a short to ground on the signal circuit.

Action Taken When the DTC Sets

The body control module ignores the traction control switch signal input.

Conditions for Clearing the DTC

- The DTC clears when the diagnostic runs and passes.
- The history DTC will clear after 40 consecutive fault-free ignition cycles have occurred.

Reference Information

Schematic Reference

[Antilock Brake System Schematics](#)

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

ABS Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

1. Ignition ON.
2. Verify the scan tool Body Control Module Traction Control Switch parameter changes between Active and Inactive when pressing and releasing the traction control switch.
 - **If the parameter does not change**
Refer to Circuit/System Testing.
 - **If the parameter changes**
3. All OK.

Circuit/System Testing

1. Ignition OFF and all vehicle systems OFF, disconnect the harness connector at the S48E Multifunction Switch - Center Console. It may take up to 2 min for all vehicle systems to power down.
2. Test for less than 5 Ω between the ground circuit terminal 2 and ground.
 - **If 5 Ω or greater**
 1. Ignition OFF.
 2. Test for less than 2 Ω in the ground circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , repair the open/high resistance in the ground connection.
 - **If less than 5 Ω**
3. Ignition ON.
4. Verify the scan tool Body Control Module Traction Control Switch parameter is Inactive.
 - **If not Inactive**
 1. Ignition OFF, disconnect the X2 harness connector at the K9 Body Control Module.
 2. Test for infinite resistance between the signal circuit terminal 14 and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance, replace the K9 Body Control Module.
 - **If Inactive**
5. Install a 3 A fused jumper wire between the signal circuit terminal 1 and the ground circuit terminal 2.
6. Verify the scan tool Traction Control Switch parameter is Active.
 - **If not Active**
 1. Ignition OFF, disconnect the X2 harness connector at the K9 Body Control Module, ignition ON.

2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V
3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the K9 Body Control Module.
- **If Active**
7. Test or replace the S48E Multifunction Switch - Center Console.

Component Testing

1. Ignition OFF, disconnect the harness connector at the S48E Multifunction Switch - Center Console.
2. Test for infinite resistance between the signal terminal 1 and the ground terminal 2 with the switch in the open position.
 - **If less than infinite resistance**

Replace the S48E Multifunction Switch - Center Console.
 - **If infinite resistance**
3. Test for less than 2 Ω between the signal terminal 1 and the ground terminal 2 with the switch in the closed position.
 - **If 2 Ω or greater**

Replace the S48E Multifunction Switch - Center Console.
 - **If less than 2 Ω**
4. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Vehicle Stability Control System Switch Replacement](#)
- [Control Module References](#) for body control module replacement, programming and setup

DTC C0035, C0040, C0045, OR C0050: WHEEL SPEED SENSOR

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC C0035 04

Left Front Wheel Speed Sensor Circuit Open

DTC C0035 05

Left Front Wheel Speed Sensor Circuit High Voltage/Open

DTC C0035 08

Left Front Wheel Speed Sensor Circuit Performance - Signal Invalid

DTC C0035 18

Left Front Wheel Speed Sensor Circuit Low Signal Amplitude

DTC C0035 0F

Left Front Wheel Speed Sensor Circuit Signal Erratic

DTC C0040 04

Right Front Wheel Speed Sensor Circuit Open

DTC C0040 05

Right Front Wheel Speed Sensor Circuit High Voltage/Open

DTC C0040 08

Right Front Wheel Speed Sensor Circuit Performance - Signal Invalid

DTC C0040 18

Right Front Wheel Speed Sensor Circuit Low Signal Amplitude

DTC C0040 0F

Right Front Wheel Speed Sensor Circuit Signal Erratic

DTC C0045 04

Left Rear Wheel Speed Sensor Circuit Open

DTC C0045 05

Left Rear Wheel Speed Sensor Circuit High Voltage/Open

DTC C0045 08

Left Rear Wheel Speed Sensor Circuit Performance - Signal Invalid

DTC C0045 18

Left Rear Wheel Speed Sensor Circuit Low Signal Amplitude

DTC C0045 0F

Left Rear Wheel Speed Sensor Circuit Signal Erratic

DTC C0050 04

Right Rear Wheel Speed Sensor Circuit Open

DTC C0050 05

Right Rear Wheel Speed Sensor Circuit High Voltage/Open

DTC C0050 08

Right Rear Wheel Speed Sensor Circuit Performance - Signal Invalid

DTC C0050 18

Right Rear Wheel Speed Sensor Circuit Low Signal Amplitude

DTC C0050 0F

Right Rear Wheel Speed Sensor Circuit Signal Erratic

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Left Front Wheel Speed Sensor Ignition Supply Voltage	C0035 05	C0035 04	C0035 05	C0035 08, C0035 18, C0035 0F
Left Front Wheel Speed Sensor Signal	-	C0035 04	C0035 05	C0035 08, C0035 18, C0035 0F
Left Rear Wheel Speed Sensor Ignition Supply Voltage	C0045 05	C0045 04	C0045 05	C0045 08, C0045 18, C0045 0F
Left Rear Wheel Speed Sensor Signal	-	C0045 04	C0045 05	C0045 08, C0045 18, C0045 0F
Right Front Wheel Speed Sensor Ignition Supply Voltage	C0040 05	C0040 04	C0040 05	C0040 08, C0040 18, C0040 0F
Right Front Wheel Speed Sensor Signal	-	C0040 04	C0040 05	C0040 08, C0040 18, C0040 0F
Right Rear Wheel Speed Sensor Ignition Supply Voltage	C0050 05	C0050 04	C0050 05	C0050 08, C0050 18, C0050 0F
Right Rear Wheel Speed Sensor Signal	-	C0050 04	C0050 05	C0050 08, C0050 18, C0050 0F

Component	Condition	DTC Symptom Bytes
Wheel Speed Sensor	- Physical damage - Debris on the wheel speed sensor or the encoder ring - Loose or improperly mounted sensor - Air gap between the wheel speed sensor and the encoder ring too large - Water intrusion in the wiring harness	08, 18 or 0F

Circuit/System Description

The wheel speeds are detected by active wheel speed sensors and encoder rings. The encoder ring consists of permanent magnets. Each wheel speed sensor receives ignition voltage from the electronic brake control module and provides an alternating current square wave signal to the electronic brake control module. As the wheel spins, the electronic brake control module uses the frequency of the square wave signal to calculate the wheel speed.

Conditions for Running the DTC

C0035 04, C0040 04, C0045 04, and C0050 04

Ignition ON

C0035 05, C0040 05, C0045 05, and C0050 05

- Ignition ON
- Vehicle speed is greater than 16 km/h (10 MPH).

C0035 08, C0040 08, C0045 08, and C0050 08

- No electrical faults are detected.
- Vehicle speed is greater than 16 km/h (10 MPH).

C0035 18, C0040 18, C0045 18, and C0050 18

- Ignition ON
- Vehicle speed is greater than 12.9 km/h (8 MPH).

C0035 0F, C0040 0F, C0045 0F, and C0050 0F

- Ignition ON
- Vehicle speed is greater than 12.9 km/h (8 MPH).

Conditions for Setting the DTC

C0035 04, C0040 04, C0045 04, or C0050 04

- A open or high resistance is detected on the wheel speed sensor ignition circuit.
- A open or high resistance is detected on the wheel speed sensor signal circuit.

C0035 05, C0040 05, C0045 05, or C0050 05

- A short to ground or a short to voltage is detected on the wheel speed sensor ignition circuit.
- A short to voltage is detected on the wheel speed sensor signal circuit.

C0035 08, C0040 08, C0045 08, or C0050 08

High resistance is detected in the wiring harness.

C0035 18, C0040 18, C0045 18, or C0050 18

- The tone ring may be demagnetized.
- Incorrectly mounted wheel speed sensor.
- An erratic wheel speed sensor signal is detected.
- Air gap between the wheel speed sensor and the tone ring is too large.

C0035 0F, C0040 0F, C0045 0F, or C0050 0F

- Incorrectly mounted wheel speed sensor.
- Debris on the wheel speed sensor or the tone ring.
- Missing tooth or teeth on the wheel speed sensor tone ring.
- Electrical magnetic interference with the wheel speed sensor harness.

Action Taken When the DTC Sets

- The ABS indicator turns ON.
- The traction/stability control indicator turns ON.
- The Service Stabilitrak message is displayed on the driver information center.
- The electronic brake control module disables the ABS, the traction control, and the electronic stability control for the duration of the ignition cycle.

Conditions for Clearing the DTC

- The DTC clears when the diagnostic runs and passes.
- The history DTC will clear after 40 consecutive fault-free ignition cycles have occurred.

Diagnostic Aids

- Do not use a magnet to clean the encoder ring.
- Inspect the encoder ring for rust or corrosion.
- If more than one wheel speed DTC is set, diagnose each wheel speed sensor individually.
- If any of the symptom byte codes 08, 18, or 0F are set, refer to the Diagnostic Fault Information table for possible mechanical faults or conditions.

- If the customer comments that the ABS indicator is ON only during moist environmental conditions (rain, snow, vehicle wash, etc.), inspect the wheel speed sensor wiring for signs of water intrusion.

Reference Information

Schematic Reference

Antilock Brake System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

ABS Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

1. Test drive the vehicle at speeds greater than 16 km/h (10 MPH).
2. Verify all scan tool Wheel Speed Sensor parameters are within 4 km/h (2.5 MPH) of each other.
 - **If any parameter is not within 4 km/h (2.5 MPH) of each other**
Refer to Circuit/System Testing.
 - **If each parameter is within 4 km/h (2.5 MPH) of each other**
3. Verify DTC C0035, C0040, C0045, or C0050 is not set.
 - **If any of the DTCs are set**
Diagnose each wheel speed sensor individually, refer to Circuit/System Testing.
 - **If none of the DTCs are set**
4. All OK.

Circuit/System Testing

1. Ignition OFF and all vehicle systems OFF, disconnect the harness connectors at the appropriate B5 Wheel Speed Sensor and the harness connector at the K17 Electronic Brake Control Module, ignition ON.
2. Test for less than 1 V between the appropriate K17 Electronic Brake Control Module harness connector terminals listed below and ground:
 - B5LF Wheel Speed Sensor - Left Front - terminal 35 and terminal 36
 - B5LR Wheel Speed Sensor - Left Rear - terminal 29 and terminal 30
 - B5RF Wheel Speed Sensor - Right Front - terminal 10 and terminal 11
 - B5RR Wheel Speed Sensor - Right Rear - terminal 3 and terminal 4
 - **If 1 V or greater**
Repair the short to voltage on the circuit.
 - **If less than 1 V**

3. Ignition OFF.

4. Test for infinite resistance between the K17 Electronic Brake Control Module harness connector terminals listed below and ground:

- B5LF Wheel Speed Sensor - Left Front - terminal 35 and terminal 36
- B5LR Wheel Speed Sensor - Left Rear - terminal 29 and terminal 30
- B5RF Wheel Speed Sensor - Right Front - terminal 10 and terminal 11
- B5RR Wheel Speed Sensor - Right Rear - terminal 3 and terminal 4
- **If less than infinite resistance**

Repair the short to ground on the circuit.

- **If infinite resistance**

5. Test for less than 2 Ω between the B5 Wheel Speed Sensor harness connector terminal 1 and the K17 Electronic Brake Control Module harness connector terminal listed below:

- B5LF Wheel Speed Sensor - Left Front - terminal 35
- B5LR Wheel Speed Sensor - Left Rear - terminal 29
- B5RF Wheel Speed Sensor - Right Front - terminal 10
- B5RR Wheel Speed Sensor - Right Rear - terminal 3
- **If 2 Ω or greater**

Repair the open/high resistance in the circuit.

- **If less than 2 Ω**

6. Test for less than 2 Ω between the B5 Wheel Speed Sensor harness connector terminal 2 and the K17 Electronic Brake Control Module harness connector terminal listed below:

- B5LF Wheel Speed Sensor - Left Front - terminal 36
- B5LR Wheel Speed Sensor - Left Rear - terminal 30
- B5RF Wheel Speed Sensor - Right Front - terminal 11
- B5RR Wheel Speed Sensor - Right Rear - terminal 4
- **If 2 Ω or greater**

Repair the open/high resistance in the circuit.

- **If less than 2 Ω**

7. Replace the B5 Wheel Speed Sensor.

8. Verify the DTC does not set while operating the vehicle within the Conditions for Running the DTC.

- **If the DTC sets**

Replace the K17 Electronic Brake Control Module.

- **If the DTC does not set**

9. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Front Wheel Speed Sensor Replacement](#)
- [Rear Wheel Speed Sensor Replacement](#)
- [Control Module References](#) for electronic brake control module replacement, programming and setup

DTC C0110: PUMP MOTOR

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.

- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC C0110 04

Pump Motor Circuit Open

DTC C0110 06

Pump Motor Circuit Low Voltage/Open

DTC C0110 61

Pump Motor Stuck

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
B+ Terminal 1	C0110 06	C0110 06	-	-
Ground Terminal 13	-	C0110 04	-	-
Ground Terminal 38	-	U0121	-	-

Component	Condition	DTCs
Pump Motor	• Wear • Damage • Lock	C0110 61

Circuit/System Description

The pump motor is an integral part of the brake pressure modulator, while the pump motor relay is integral to the electronic brake control module. The pump motor relay is not engaged during normal system operation. When ABS operation is required the electronic brake control module activates the pump motor relay and battery voltage is provided to the pump motor.

Conditions for Running the DTC

C0110 04 or C0110 06

Ignition ON.

C0110 61

- The vehicle speed is greater than 20 km/h (13 MPH), and brake is not applied.
- The test is initiated once per ignition cycle, when the vehicle speed is greater than 15 km/h (9 MPH), and a fault was set on the last ignition cycle.

Conditions for Setting the DTC

C0110 04 or C0110 06

- A short to ground or an open/high resistance is detected on the pump motor B+ circuit.
- The electronic brake control module detects a low voltage in the pump motor supply circuit when the feedback voltage is less than 4.5 V for greater than 150 ms, and the pump motor is not activated.

C0110 61

The pump motor continues to rotate briefly after deactivation creating a feedback voltage. The electronic brake control module sets the DTC if the measured feedback voltage indicates a binding or stalled pump motor.

Action Taken When the DTC Sets

- The ABS indicator turns ON.
- The traction/stability control indicator turns ON.
- The red BRAKE warning indicator may turn ON.
- The Service Stabilitrak message is displayed on the driver information center.
- The Service Brake Assist message is displayed on the driver information center.
- The electronic brake control module disables the ABS, the traction control and the electronic stability control for the duration of the ignition cycle.

Conditions for Clearing the DTC

- The condition for setting the DTC is no longer present.
- The history DTC will clear after 40 consecutive fault-free ignition cycles have occurred.

Reference Information

Schematic Reference

Antilock Brake System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

ABS Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

1. Ignition ON
2. Verify the ABS pump motor turns ON and OFF when commanding the ABS Pump Motor ON and OFF with a scan tool.
 - **If the pump motor does not turn ON and OFF**

Refer to Circuit/System Testing.
 - **If the pump motor turns ON and OFF**
3. All OK.

Circuit/System Testing

1. Ignition OFF and all vehicle systems OFF, disconnect the harness connector at the K17 Electronic Brake Control Module. It may take up to 2 min for all vehicle systems to power down.
2. Test for less than 1 Ω between the ground circuit terminals listed below and ground:

- Terminal 13

- Terminal 38

- **If 1 Ω or greater**

1. Ignition OFF

2. Test for less than 2 Ω in the ground circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , repair the open/high resistance in the ground connection.

- **If less than 1 Ω**

3. Ignition ON.

4. Verify a test lamp illuminates between the B+ circuit terminal 1 and ground.

- **If the test lamp does not illuminate and the circuit fuse is good**

1. Ignition OFF.

2. Test for less than 2 Ω in the B+ circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , verify the fuse is not open and there is voltage at the fuse.

- **If the test lamp does not illuminate and the circuit fuse is open**

1. Ignition OFF.

2. Test for infinite resistance between the B+ circuit and ground.

- If less than infinite resistance, repair the short to ground on the circuit.
- If infinite resistance, replace the K17 Electronic Brake Control Module with Brake Pressure Modulator.

- **If the test lamp illuminates**

5. Replace the K17 Electronic Brake Control Module with Brake Pressure Modulator.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the repair.

- **Electronic Brake and Traction Control Module with Brake Pressure Modulator Valve Replacement**
- **Control Module References** for electronic brake control module replacement, programming and setup

DTC C0131: TRACTION CONTROL SYSTEM PRESSURE

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptors

DTC C0131 02

Traction Control System Pressure Circuit Short to Ground

DTC C0131 05

Traction Control System Pressure Circuit High Voltage/Open

DTC C0131 0F

Traction Control System Pressure Circuit Erratic

DTC C0131 5A

Circuit/System Description

The electronic brake control module monitors the brake pressure sensor which is integral to the brake pressure modulator. The body control module monitors the brake pedal position sensor signal when the brake pedal is applied and sends a serial data message to the electronic brake control module indicating the brake pedal position. The electronic brake control module compares the brake pressure to the actual brake pedal position and uses this information for vehicle stability control.

Conditions for Running the DTC

- The engine is running.
- The brake pedal has been applied and released.

Conditions for Setting the DTC**C0131 02**

The electronic brake control module detects the ABS brake pressure circuit is shorted to ground.

C0131 05

The electronic brake control module detects the ABS brake pressure circuit is shorted to battery or open.

C0131 0F

The electronic brake control module detects the ABS brake pressure signal is erratic.

C0131 5A

- The brake pressure sensor offset is out of the specified range.
- The electronic brake control module detected an invalid or erratic brake pressure.
- The brake pressure is not plausible with the vehicle acceleration or deceleration.

Action Taken When the DTC Sets

- The traction/stability control indicator turns ON.
- The electronic brake control module disables the traction/stability for the duration of the ignition cycle.

Conditions for Clearing the DTC

- The DTC clears when the diagnostic runs and passes.
- The history DTC will clear after 40 consecutive fault-free ignition cycles have occurred.

Reference Information

Schematic Reference

Antilock Brake System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

ABS Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**

- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

1. Ignition ON.
2. Apply and release brake pedal. Verify the brake stop lamps operate properly.
 - **If the brake stop lamps do not operate properly**
Refer to [Symptoms - Lighting](#).
 - **If the brake stop lamps operate properly**
3. Verify that DTC C0131 is not set.
 - **If the DTC is set**
 1. Perform the [Brake Pressure Modulator Valve Pressure Sensor Calibration](#).
 2. Verify the DTC does not set.
 - If the DTC sets, replace the K17 Electronic Brake Control Module with the Brake Pressure Modulator.
 - If the DTC does not set
 3. All OK.
 - **If the DTC is not set**
4. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Electronic Brake and Traction Control Module with Brake Pressure Modulator Valve Replacement](#)
- [Control Module References](#) for electronic brake control module replacement, programming and setup

DTC C0161: ANTILOCK BRAKING SYSTEM BRAKE SWITCH

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC C0161 5A

Antilock Braking System Brake Switch Circuit Not Plausible

DTC C0161 71

Antilock Braking System Brake Switch Circuit Invalid Data

Circuit/System Description

When the brake pedal is applied, the body control module sends a serial data message to the electronic brake control module in reference to the brake pedal positions. The electronic brake control module compares the correlation between the brake pedal position and the amount of brake pressure it senses from

the brake pressure sensor, which is internal to the brake pressure modulator. It uses this information to control the vehicle during an electronic stability control event.

Conditions for Running the DTC

- Ignition ON.
- DTC C0131 is not present.

Conditions for Setting the DTC

- The electronic brake control module detects the brake pedal is not applied and the brake pressure is greater than 1500 kPa (218 psi) for 2 s.
- The electronic brake control module detects the vehicle speed is greater than 16 km/h (10 MPH), the brake pedal is applied for 122 s, and the brake pressure is less than 620 kPa (90 psi).

Action Taken When the DTC Sets

- A message and/or indicator may be displayed.
- The electronic brake control module disables the ABS, the traction control and the electronic stability control for the duration of the ignition cycle.

Conditions for Clearing the DTC

- A current DTC clears when the diagnostic runs and passes.
- The history DTC will clear after 40 consecutive fault-free ignition cycles have occurred.

Diagnostic Aids

- Diagnose all other stop lamp DTCs or symptoms prior to performing this diagnostic procedure.
- DTC C0161 may set if the brake pedal is applied while accelerating, such as two footed driving.

Reference Information

Schematic Reference

Antilock Brake System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

ABS Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

1. Ignition ON.
2. Verify that DTC C0277 or C0890 is not set.
 - **If either DTC is set**

Refer to [DTC C0277 or C0890](#) .

- **If the DTC is not set**
3. Verify the B22 Brake Pedal Position Sensor or the brake pedal are not binding causing residual brake pressure to be detected.
 - **If a condition is found**

Repair or replace the appropriate component.
 - **If a condition is not found**
 4. Verify the scan tool Electronic Brake Control Module Brake Pedal Position Sensor parameter changes between Inactive and Active while applying and releasing the brake pedal.
 - **If the parameter does not change**

Refer to [Symptoms - Lighting](#) .
 - **If the parameter changes**
 5. All OK, refer to Diagnostic Aids.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

DTC C0186, C0187, C018A, C018B, C0196, C019A, C019B, C027E, C027F, C0287, OR C0297: ACCELERATION SENSOR/YAW RATE SIGNAL

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC C0186

Lateral Acceleration Sensor Signal (Inflatable Restraint Sensing and Diagnostic Module)

DTC C0187

Lateral Acceleration Sensor Circuit (Electronic Brake Control Module)

DTC C0196

Yaw Rate Signal (Inflatable Restraint Sensing and Diagnostic Module and/or Electronic Brake Control Module)

DTC C0287

Longitudinal Acceleration Sensor Signal (Inflatable Restraint Sensing and Diagnostic Module and/or Electronic Brake Control Module)

For symptom byte information refer to [Symptom Byte List](#) .

Circuit/System Description

The yaw rate, lateral acceleration and longitudinal acceleration sensors are combined into one multi-axis acceleration sensor, internal to the inflatable restraint sensing and diagnostic module. The multi-axis acceleration sensor communicates with the electronic brake control module via serial data. The electronic brake control module activates the stability control function depending on the multi-axis acceleration sensor input. The inflatable restraint sensing and diagnostic module uses the multi-axis acceleration sensor to determine if the vehicle is in a roll over or near collision incident.

Conditions for Running the DTC

Ignition ON

Conditions for Setting the DTC

C0186 00 or C0187 5A

- The lateral acceleration signal offset is out of the specified range.
- An internal fault in multi-axis acceleration sensor will set this DTC.
- Improperly mounted or loose inflatable restraint sensing and diagnostic module may set this DTC.
- The lateral acceleration signal is not plausible with the yaw rate, the steering wheel angle signal and the vehicle speed.

C0196 00 or C0196 5A

- The yaw rate signal is out of the specified range.
- An internal fault in multi-axis acceleration sensor may set DTC C0196 5A.
- Improperly mounted or loose inflatable restraint sensing and diagnostic module may set this DTC.
- The yaw rate signal is not plausible with the lateral acceleration signal, the steering wheel angle sensor signal and the vehicle speed.

C0287 5A or C0287 00

- An Internal fault in multi-axis acceleration sensor will set this DTC.
- The longitudinal acceleration signal is not plausible with the vehicle acceleration.

Action Taken When the DTC Sets

- The Air Bag Indicator turns ON.
- The traction/stability control indicator turns ON.
- The electric brake control module disables the stability control and the Hill Start Assist for the duration of the ignition cycle.

Conditions for Clearing the DTC

- A current DTC clears when the diagnostic runs and passes.
- The history DTC will clear after 40 consecutive fault-free ignition cycles have occurred.

Reference Information

Schematic Reference

Antilock Brake System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

ABS Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

1. Verify DTC B101D is not set current or history in the K36 Inflatable Restraint Sensing and Diagnostic Module.
 - **If DTC B101D is set current or history in the K36 Inflatable Restraint and Sensing Diagnostic Module**

Replace the K36 Inflatable Restraint Sensing and Diagnostic Module.
 - **If DTC B101D is not set current or history in the K36 Inflatable Restraint and Sensing Diagnostic Module**
2. Verify DTC C0186, C0196, or C0287 is not set in the K36 Inflatable Restraint Sensing and Diagnostic Module.
 - **If any of the DTCs are set**

Perform the [Vehicle Yaw Sensor Learn](#).
 - **If none of the DTCs are set**
3. Verify DTC C0187, C0196, or C0287 is not set in the K17 Electronic Brake Control Module.
 - **If any of the DTCs are set**
 1. Replace the K36 Inflatable Restraint Sensing and Diagnostic Module.
 2. Verify the DTC does not set while operating the vehicle within the Conditions for Running the DTC.
 - If the DTC sets, replace the K17 Electronic Brake Control Module.
 - If the DTC does not set
 3. All OK.
 - **If none of the DTCs are set**
4. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for Electronic Brake Control Module or Inflatable Restraint Sensing and Diagnostic Module replacement, programming and setup

DTC C0242: POWERTRAIN CONTROL MODULE INDICATED TRACTION CONTROL

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC C0242

Powertrain Control Module Indicated Traction Control

For symptom byte information refer to [Symptom Byte List](#) .

Circuit/System Description

The electronic brake control module and the engine control module simultaneously control the traction control. The electronic brake control module sends a serial data message to the engine control module requesting torque reduction. When certain engine control module DTCs are set, the engine control module will not be able to perform the torque reduction for traction control. A serial data message is sent to the electronic brake control module indicating that traction control is not allowed.

Conditions for Running the DTC

Engine running

Conditions for Setting the DTC

The engine control module detects a fault that prevents it from performing a traction control function and sends a serial data message to the electronic brake control module indicating that torque reduction is not allowed.

Action Taken When the DTC Sets

The electronic brake control module sends a serial data message to illuminate the appropriate warning/indicator message.

Conditions for Clearing the DTC

- The condition for the DTC is no longer present.
- The electronic brake control module clears the history DTC when a current DTC is not detected in 100 consecutive drive cycles.

Diagnostic Aids

- Inspect for proper transmission operation.
- Inspect the exhaust system for a possible restriction.
- Inspect for lack of engine power, hesitation, stumble or rough idle.
- Some intermittent communication concerns may be caused by fretting corrosion on the serial data circuit terminals. Inspect all connectors at the control module that set the communication DTC, the control module that the communication DTC was set against, and any inline harness connectors between the two control modules. Do not replace a control module based only on fretting corrosion.

Reference Information

Schematic Reference

Antilock Brake System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

ABS Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

1. Ignition ON.
2. Verify that no other DTCs are set except for C0242.

- **If any other DTCs are set**

Refer to the [Diagnostic Trouble Code \(DTC\) List - Vehicle](#) .

- **If no other DTCs are set**

3. Replace the K20 Engine Control Module.

4. Verify that DTC C0242 does not set while operating the vehicle within the Conditions for Running the DTC.

- **If DTC sets**

Replace the K17 Electronic Brake Control Module.

- **If DTC does not set**

5. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for electronic brake control module or engine control module replacement, programming and setup

DTC C0245: WHEEL SPEED SENSOR FREQUENCY MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC C0245 00

Wheel Speed Sensor Frequency Malfunction

Circuit/System Description

The wheel speeds are detected by active wheel speed sensors. Each wheel speed sensor receives ignition voltage from the electronic brake control module and provides an alternating current square wave signal to the electronic brake control module. As the wheel spins, the electronic brake control module uses the frequency of the square wave signal to calculate the wheel speed.

Conditions for Running the DTC

- Brake is not applied.
- Vehicle is not cornering.
- Vehicle speed is greater than 14 km/h (9 MPH).
- DTC C0035, C0040, C0045, or C0050 is not present.

Conditions for Setting the DTC

Wheel speed differences between one wheel and the others is greater than 20 percent.

Action Taken When the DTC Sets

- A message may be displayed.
- The ABS indicator turns ON.
- The red Brake warning indicator turns ON.
- The traction/stability control indicator turns ON.
- The electronic brake control module disables the ABS, the traction control, the electronic stability control and the hill start assist for the duration of the ignition cycle.

Conditions for Clearing the DTC

- A current DTC clears when the diagnostic runs and passes.
- The history DTC will clear after 40 consecutive fault-free ignition cycles have occurred.

Reference Information

Schematic Reference

Antilock Brake System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

ABS Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

1. Verify that all tires have the proper air pressure.
 - **If not the proper air pressure**

Adjust all tire air pressures to the stated cold air pressure as identified on the tire placard or specification.
 - **If the proper air pressure**
2. Verify that all tires are of uniform size and matching brand.
 - **If not of uniform size or matching brand**
 1. Replace the mis-sized or non-matching brand tire.
 2. Verify the DTC does not set while operating the vehicle within the Conditions for Running the DTC.
 - If the DTC is set, replace the K17 Electronic Brake Control Module.
 - If the DTC does not set.
 - 3. All OK.
3. All OK.
 - **If all tires are of uniform size and matching brand**

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for electronic brake control module replacement, programming and setup

DTC C0252: VEHICLE STABILITY CONTROL MODULE SENSORS CORRELATION MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

Vehicle Stability Control Module Sensors Correlation Malfunction

Circuit/System Description

The Yaw Rate, Lateral Acceleration and Longitudinal Acceleration Sensors are combined into one Multi-axis Acceleration Sensor. The Multi-axis Acceleration Sensor is located internal to the Airbag Sensing and Diagnostic Module. The Electronic Brake Control Module controls the stability control by monitoring the inputs of the Multi-axis Acceleration Sensor and the Steering Wheel Angle Sensor. The readings are compared to an internal calibrated value so it knows if the vehicle is having an instability condition to activate the stability control.

Conditions for Running the DTC

The vehicle is operated at a speed greater than 13 km/h (8 MPH).

Conditions for Setting the DTC

When the vehicle is driven in a straight line the Multi-axis Acceleration Sensor, the Steering Wheel Angle Sensor, and the vehicle speed correlation is not recognized after a distance of 2.5 km (1.5 mi).

Action Taken When the DTC Sets

- The Traction/stability Control indicator turns ON.
- The Electronic Brake Control Module disables the traction control, the stability control and the Hill Start Assist for the duration of the ignition cycle.

Conditions for Clearing the DTC

- A current DTC clears when the diagnostic runs and passes.
- The history DTC will clear after 40 consecutive fault-free ignition cycles have occurred.

Diagnostic Aids

The following conditions can cause this concern:

- An improperly mounted or loose Multi-axis Acceleration Sensor (located internally in the Airbag Sensing and Diagnostic Module).
- The car should not pull in either direction causing the Steering Wheel to be off center while driving in a straight line on a level surface.

Reference Information

Schematic Reference

Antilock Brake System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

ABS Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Circuit/System Verification

1. Ignition ON.
2. Verify that DTC C0187, C0196, C0287, or C0710 is not set.
 - **If any of the DTCs are set**

Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#) .
 - **If none of the DTCs are set**
3. Perform the [Vehicle Yaw Sensor Learn](#), and [Steering Wheel Angle Sensor Centering](#).
4. Ignition ON.
5. Verify DTC C0252 does not set while operating the vehicle within the Conditions for Running the DTC.
 - **If the DTC is set**
 1. Replace the B99 Steering Wheel Angle Sensor.
 2. Ignition ON
 3. Verify DTC C0252 does not set while operating the vehicle within the Conditions for Running the DTC.
 - If the DTC is set
 4. Replace the K36 Inflatable Restraint Sensing and Diagnostic Module
 5. Ignition ON.
 6. Verify the DTC does not set while operating the vehicle within the Conditions for Running the DTC.
 - If the DTC sets, replace the K17 Electronic Brake Control Module.
 - **If the DTC is not set**
6. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for Electronic Brake Control Module replacement, Inflatable Restraint Sensing and Diagnostic Module, programming and setup.

DTC C0274, C0275, OR C0280: VALVE HIGH TEMPERATURE/STABILITY SYSTEM ACTIVE TOO LONG

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC C0274 54

Isolation Valve High Temperature

DTC C0275 54

Dump Valve High Temperature

DTC C0280 54

Stability System Active Too Long

Circuit/System Description

The solenoid valves are integral parts of the brake pressure modulator. The brake pressure modulator contains an isolation solenoid valve and a dump solenoid valve for each wheel. A traction/stability control supply solenoid valve and an isolation solenoid valve for each brake circuit. The solenoid valves are not engaged during normal system operation. When the ABS, the traction control or the stability control operation is required the electronic brake control module turns the required solenoid ON.

Conditions for Running the DTC

Ignition ON

Conditions for Setting the DTC

The calculated solenoid valve temperature is greater than the threshold.

Action Taken When the DTC Sets

C0274 54 or C0275 54

- The ABS indicator turns ON.
- The traction/stability control indicator turns ON.
- The electronic brake control module disables the ABS, the traction control, the stability control and the hill start assist for the duration of the ignition cycle.

C0280 54

- The traction/stability control indicator turns ON.
- The electronic brake control module disables the stability control for the duration of the ignition cycle.

Conditions for Clearing the DTC

The condition for setting the DTC is no longer present.

Diagnostic Aids

DTCs may set due to extended operation of the ABS, the traction control or the stability control.

Reference Information

Schematic Reference

Antilock Brake System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

ABS Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

NOTE:

Since most occurrences of this DTC are caused by excessive ABS or traction control usage, review with the customer the conditions under which the DTC set.

1. Ignition ON.
2. Verify that DTC C0186, C0187, C0196, C0287, or C0710 is not set.
 - **If any of the DTCs are set**

Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#) .
 - **If none of the DTCs are set**
3. Ignition OFF, allow the hydraulic brake pressure modulator to cool down to ambient temperature.
4. Ignition ON.
5. Verify that DTC C0274 54, C0275 54, or C0280 54 are not set while driving the vehicle within normal braking conditions.
 - **If any of the DTCs are set**

Replace the K17 Electronic Brake Control Module with Brake Pressure Modulator.
 - **If none of the DTCs are set**
6. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Electronic Brake and Traction Control Module with Brake Pressure Modulator Valve Replacement](#)
- [Control Module References](#) for electronic brake control module replacement, programming and setup

DTC C0460 OR C0710: STEERING POSITION SENSOR**Diagnostic Instructions**

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors**DTC C0460 71**

Steering Position Sensor Invalid Data

DTC C0710 00

Steering Position Signal Malfunction

DTC C0710 4B

Steering Position Signal Calibration Not Learned

DTC C0710 71

Steering Position Signal Invalid Data

DTC C0710 5A

Steering Position Signal Not Plausible

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
12 V Reference	U0126	U0126	-	-
Serial Data (+)	U0073, U0077, U0126	U0073, U0077, U0126	U0073, U0077, U0151, U0126	C0710 71, C0710 5A
Serial Data (-)	U0073, U0077, U0151, U0126	U0073, U0077, U0126	U0073, U0077, U0151, U0126	C0710 71, C0710 5A
Ground	-	U0126	-	-

Circuit/System Description

The steering wheel angle sensor receives a 12 V reference voltage from the electronic brake control module. The electronic brake control module receives serial data inputs from the steering wheel angle sensor identifying the position and direction of the steering wheel rotation. The module utilizes this signal to calculate the driver intended driving direction.

Conditions for Running the DTC

Ignition ON.

Conditions for Setting the DTC

C0460 71, or C0710 71

The control module received an invalid steering angle sensor signal.

C0710 00

The steering angle sensor signal is invalid.

C0710 4B

The steering angle sensor is not calibrated.

C0710 5A

- No steering angle sensor signal
- The steering angle sensor offset is out of the specified range.
- The steering angle sensor signal is not plausible with the yaw rate sensor signal.

Action Taken When the DTC Sets

- The traction/stability control indicator turns ON.
- The Service Stabilitrak message is displayed on the driver information center.
- The Service Power Steering Drive With Care message is displayed on the driver information center.
- The electronic brake control module disables the traction control, the stability control and the hill start assist for the duration of the ignition cycle.

Conditions for Clearing the DTC

- A current DTC clears when the diagnostic runs and passes.
- The history DTC will clear after 40 consecutive fault-free ignition cycles have occurred.

Diagnostic Aids

- Improperly mounted or loose steering wheel angle sensor.
- The car should not pull in either direction causing the steering wheel to be off center while driving in a straight line on a level surface.

- Confirm that all tires are of the proper size and that all are matching brands. Check and adjust all tires to the stated cold air pressure as identified on the tire placard. If a miss sized or non-matching brand tire is present, inform the customer that in order for the vehicle stability enhanced system to function normally, tires need to be a uniform size and rolling diameter.

Reference Information

Schematic Reference

Antilock Brake System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

ABS Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

1. Ignition ON.
2. Verify the scan tool Steering Column Position parameter corresponds to the actual steering position as the steering wheel is turned through its entire range of motion.
 - **If the parameter does not correspond with the steering wheel position or the reading is erratic**
Refer to Circuit/System Testing.
 - **If the parameter reading corresponds with the steering wheel position**
3. All OK.

Circuit/System Testing

1. Ignition ON.
2. Verify that DTC U0073, U0074, U0077, U0151 or U0126 is not set.
 - **If DTC U0073, U0074, U0077, U0151 or U0126 is set**
Refer to **Diagnostic Trouble Code (DTC) List - Vehicle**.
 - **If DTC U0073, U0074, U0077, U0151 or U0126 is not set**
3. Verify that DTC C0710 4B or C0710 5A is not set.
 - **If DTC C0710 4B or C0710 5A is set**
Refer to **Steering Wheel Angle Sensor Centering**.
 - **If DTC C0710 4B or C0710 5A is not set**
4. Verify the B99 Steering Wheel Angle Sensor is installed correctly.
 - **If loose or incorrect installation**

Correct the installation or replace the component.

- **If correct installation**

5. Ignition OFF and all vehicle systems OFF, disconnect the harness connector at the B99 Steering Wheel Angle Sensor. It may take up to 2 min for all vehicle systems to power down.

6. Test for less than 10 Ω between the ground circuit terminal 6 and ground.

- **If 10 Ω or greater**

1. Ignition OFF.

2. Test for less than 2 Ω in the ground circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , repair the open/high resistance in the ground connection.

- **If less than 10 Ω**

7. Ignition ON.

8. Verify a test lamp illuminates between the 12 V reference circuit terminal 5 and ground.

- **If the test lamp does not illuminate**

1. Ignition OFF, disconnect the harness connector at the K17 Electronic Brake Control Module.

2. Test for infinite resistance between 12 V reference circuit and ground.

- If less than infinite resistance, repair the short to ground on the circuit.
- If infinite resistance

3. Test for less than 2 Ω in the 12 V reference circuit end to end.

- If 2 Ω or greater, repair the open/high resistance in the circuit.
- If less than 2 Ω , replace the K17 Electronic Brake Control Module.

- **If the test lamp illuminates**

9. Replace the B99 Steering Wheel Angle Sensor.

10. Ignition ON.

11. Verify that DTC C0710 is not set.

- **If DTC C0710 is set**

Replace the K17 Electronic Brake Control Module.

- **If DTC C0710 is not set**

12. Verify that DTC C0460 71 is not set.

- **If DTC C0460 71 is set**

Replace the module that set the DTC.

- **If DTC C0460 71 is not set**

13. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Steering Angle Sensor Replacement](#)
- [Control Module References](#) for control module replacement, programming and setup

DTC C0552: IMPROPER SHUTDOWN

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provide an overview of each diagnostic category.

DTC Descriptors

DTC C0552 00

Improper Shutdown

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
B+ Terminal 1	C0110 06	C0110 06	-	C0552 00
B+ Terminal 25	U0121 00	U0121 00	-	C0552 00
Ground Terminal 13	-	C0110 04	-	-
Ground Terminal 38	-	U0121 00	-	-

Circuit/System Description

The electronic brake control module monitors the number of Ignition On and Ignition Off cycles. When it detects that a Ignition Off cycle was incomplete or non-existent this fault will set. This means the fault reports a problem that occurred at the end of the previous ignition cycle. If this occurs during an electronic brake control module service operation, any calibrations or offsets learned during that service operation may not be properly stored in memory.

Conditions for Running the DTC

- Ignition ON.
- The ignition voltage is greater than 10 V.
- The electronic brake control module is initializing.

Conditions for Setting the DTC

- A ignition Off cycle was interrupted before completion.
- This DTC can set if battery voltage drops below 8 V with ignition ON.
- The power was removed from the electronic brake control module with the ignition in the ON position while the vehicle is moving and the brake was applied.

Action Taken When the DTC Sets

- A message and/or a warning indicator may be displayed.
- The electronic brake control module disables the ABS, the traction control and the electronic stability control for the duration of the ignition cycle.

Conditions for Clearing the DTC

- The condition for the DTC is no longer present.
- The electronic brake control module clears the history DTC when a current DTC is not detected in 40 consecutive drive cycles.

Reference Information

Schematic Reference

Antilock Brake System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

ABS Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Testing

1. Ignition OFF and all vehicle systems OFF, disconnect the harness connector at the K17 Electronic Brake Control Module. It may take up to 2 min for all vehicle systems to power down.
2. Test for less than 10 Ω between the ground circuit terminals listed below and ground:
 - Terminal 13
 - Terminal 38
 - **If 10 Ω or greater**
 1. Ignition OFF
 2. Test for less than 2 Ω in the ground circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , repair the open/high resistance in the ground connection.
 - **If less than 10 Ω**
3. Ignition ON.
4. Verify a test lamp illuminates between the B+ circuit terminals listed below and ground.
 - Terminal 1
 - Terminal 25
 - **If the test lamp does not illuminate and the circuit fuse is good**
 1. Ignition OFF, remove the test lamp.
 2. Test for less than 2 Ω in the B+ circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , verify the fuse is not open and there is voltage at the fuse.
 - **If the test lamp does not illuminate and the circuit fuse is open**
 1. Ignition OFF, remove the test lamp.
 2. Test for infinite resistance between the B+ circuit and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance, replace the K17 Electronic Brake Control Module.
 - **If the test lamp illuminates**
5. Replace the K17 Electronic Brake Control Module.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for electronic brake control module replacement, programming and setup

DTC C0558: CALIBRATION DATA CONFIGURATION NOT PROGRAMMED

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC C0558 46

Calibration Data Configuration Not Programmed

Circuit/System Description

The electronic brake control module receives serial data messages from other modules. The electronic brake control module must be configured with the vehicle identification number (VIN), configuration data and vehicle options. If not properly configured after installation, the electronic brake control module may set this DTC.

The internal fault detection is handled inside the control module. No external circuits are involved.

Conditions for Running the DTC

Ignition ON.

Conditions for Setting the DTC

The electronic brake control module is not programmed.

Action Taken When the DTC Sets

- The traction/stability control indicator turns ON.
- The electronic brake control module disables the traction control, the stability control and the hill start assist for the duration of the ignition cycle.

Conditions for Clearing the DTC

A current DTC clears when the diagnostic runs and passes.

Diagnostic Aids

A newly replaced electronic brake control module may set this DTC on its initial ignition ON cycle.

Reference Information

Schematic Reference

Antilock Brake System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

ABS Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

1. Ignition ON.
2. Verify that DTC C0558 46 is not set.

- If DTC C0558 46 is set

1. Program the K17 Electronic Brake Control Module.

2. Verify the DTC does not set.

- If the DTC sets, replace the K17 Electronic Brake Control Module.
- If the DTC does not set

3. All OK.

- If DTC C0558 46 is not set

3. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for electronic brake control module replacement, programming and setup

DTC C124F, C1250, OR C1251: LATERAL ACCELERATION SENSOR

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptors

DTC C124F

Lateral Acceleration Sensor Circuit Low Voltage

DTC C1250

Lateral Acceleration Sensor Circuit High Voltage

DTC C1251

Lateral Acceleration Sensor Performance

For symptom byte information refer to [Symptom Byte List](#).

Circuit/System Description

The yaw rate, lateral acceleration and longitudinal acceleration sensors are combined into one multi-axis acceleration sensor. The multi-axis acceleration sensor communicates with the electronic brake control module and trans control module via serial data. The electronic brake control module activates the stability control function depending on the multi-axis acceleration sensor input. The inflatable restraint sensing and diagnostic module uses the multi-axis acceleration sensor to determine if the vehicle is in a roll over or near collision incident. The transmission control module sets these DTCs.

Conditions for Running the DTC

Vehicle speed is greater than 16 km/h (10 MPH).

Conditions for Setting the DTC

The transmission control module detects a fault that prevents it from performing a hill hold start assist function (if equipped).

Action Taken When the DTC Sets

- The air bag indicator turns ON.
- The traction/stability control indicator turns ON.

- The electronic brake control module disables the stability control and the hill hold start assist for the duration of the ignition cycle.

Conditions for Clearing the DTC

- The DTC clears when the diagnostic runs and passes.
- The history DTC will clear after 40 consecutive fault-free ignition cycles have occurred.

Reference Information

Schematic Reference

Antilock Brake System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

ABS Description and Operation

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)
- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

1. Ignition ON.
2. Verify that no other DTCs are set.
 - **If any other DTCs are set**
Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#) .
 - **If no other DTCs are set**
3. Replace the K71 Transmission Control Module.
4. Verify that the DTC does not set while operating the vehicle within the Conditions for Running the DTC.
 - **If the DTC sets**
Replace the K17 Electronic Brake Control Module.
 - **If the DTC does not set**
5. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for electronic brake control module or transmission control module replacement, programming and setup

DTC P0856: TRACTION CONTROL TORQUE REQUEST SIGNAL MESSAGE COUNTER INCORRECT

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptor

DTC P0856

Traction Control Torque Request Signal Message Counter Incorrect

Circuit/System Description

When traction control is active, the electronic brake control module sends a serial data message to the engine control module requesting torque reduction. When certain electronic brake control module DTCs are set, the engine control module will not be able to perform the torque reduction for traction control. A serial data message is sent to the electronic brake control module indicating that traction control is not allowed.

Conditions for Running the DTC

Engine running.

Conditions for Setting the DTC

The engine control module detects a fault that prevents it from performing a traction control function and sends a serial data message to the electronic brake control module indicating that torque reduction is not allowed.

Action Taken When the DTC Sets

- The traction/stability control indicator turns ON.
- The electronic brake control module disables the traction control and stability control for the duration of the ignition cycle.

Conditions for Clearing the DTC

- A current DTC clears when the diagnostic runs and passes.
- The electronic brake control module will turn OFF the indicator in the next ignition cycle.

Reference Information

Schematic Reference

Antilock Brake System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

ABS Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Circuit/System Testing

1. Verify that no other DTCs are set except for P0856.

- **If any other DTCs are set**

Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#) .

- **If only DTC P0856 is set**

2. Replace the K20 Engine Control Module.

3. Verify the DTC does not set while operating the vehicle within the Conditions for Running the DTC.

- **If DTC sets**

Replace the K17 Electronic Brake Control Module.

- **If DTC does not set**

4. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for electronic brake control module and engine control module replacement, programming and setup

DTC P15F8: AUTOMATIC BRAKING ENGINE TORQUE REQUEST SIGNAL MESSAGE COUNTER INCORRECT

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC P15F8

Automatic Braking Engine Torque Request Signal Message Counter Incorrect

Circuit/System Description

The electronic brake control module and the engine control module simultaneously control the vehicle performance. During a automatic brake event the electronic brake control module sends a serial data message to the engine control module requesting torque reduction. If the engine control module receives corrupt data from the electronic brake control module, DTC P15F8 will set in the engine control module. The engine control module then sends a serial data message to the electronic brake control module that torque reduction is not allowed.

Conditions for Running the DTC

- The ignition is ON.
- Ignition voltage is greater than 8 V.

Conditions for Setting the DTC

The engine control module detects a corrupted data message from the electronic brake control module.

Action Taken When the DTC Sets

- The ABS remains functional.
- DTC P15F8 is a Type B DTC.

- The traction Off indicator turns ON.
- The traction/stability control indicator turns ON.
- The Service Stabilitrak message may be displayed on the driver information center.

Conditions for Clearing the DTC

DTC P15F8 is a Type B DTC.

Diagnostic Aids

Inspect the serial data circuits and connections at the engine control module and the electronic brake control module. They should be free from sources of electromagnetic interference and the connections should be clean and tight.

Reference Information

Schematic Reference

Antilock Brake System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

ABS Description and Operation

Electrical Information Reference

- Circuit Testing
- Connector Repairs
- Testing for Intermittent Conditions and Poor Connections
- Wiring Repairs

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Testing

1. Verify that no other DTCs are set except for DTC P15F8.
 - **If any other DTCs are set**
Refer to Diagnostic Trouble Code (DTC) List - Vehicle .
 - **If only DTC P15F8 is set**
2. Replace the K17 Electronic Brake Control Module.
3. Verify the DTC does not set while operating the vehicle within the Conditions for Running the DTC.
 - **If DTC sets**
Replace the K20 Engine Control Module.
 - **If DTC does not set**
4. All OK.

Repair Instructions

Perform the Diagnostic Repair Verification after completing the repair.

Control Module References for electronic brake control module and engine control module replacement, programming and setup

NOTE: The following steps must be completed before using the symptom tables.

1. Perform the [Diagnostic System Check - Vehicle](#) before using the symptom tables in order to verify that all of the following are true:
 - There are no DTCs set.
 - The control modules can communicate via the serial data link.
2. Review the system description and operation in order to familiarize yourself with the system functions. Refer to [ABS Description and Operation](#).

Visual/Physical Inspection

- Inspect for aftermarket devices which could affect the operation of the ABS. Refer to [Checking Aftermarket Accessories](#).
- Inspect the easily accessible or visible system components, for obvious damage or conditions, which could cause the symptom.

Intermittent

Faulty electrical connections or wiring may be the cause of intermittent conditions. Refer to [Testing for Intermittent Conditions and Poor Connections](#).

Symptom List

Refer to a symptom diagnostic procedure from the following list in order to diagnose the symptom:

- [ABS Indicator Malfunction](#)
- [Traction Control/Stability Control Indicator Malfunction](#)

ABS INDICATOR MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

Circuit/System Description

The instrument cluster turns the ABS indicator ON for 5 s after the ignition is turned ON, or when the electronic brake control module detects a fault it sends a serial data message to the instrument cluster commanding the indicator ON.

Reference Information

Schematic Reference

[Antilock Brake System Schematics](#)

Connector End View Reference

[COMPONENT CONNECTOR END VIEWS - INDEX](#)

Description and Operation

[ABS Description and Operation](#)

Electrical Information Reference

- [Circuit Testing](#)
- [Connector Repairs](#)

- [Testing for Intermittent Conditions and Poor Connections](#)
- [Wiring Repairs](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

1. Ignition ON.
2. Verify that no DTCs are set.
 - **If any DTCs are set**
Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#).
 - **If no DTCs are set**
3. Verify the Instrument Cluster ABS indicator turns ON and OFF when commanding the All Indicators ON and OFF with a scan tool.
 - **If ABS indicator does not turn ON and OFF**
Replace the P16 Instrument Cluster.
 - **If the ABS indicator turns ON and OFF**
4. Verify the ABS indicator turns OFF 5 s after the ignition is turned ON.
 - **If the ABS indicator does not turn OFF**
Replace the K17 Electronic Brake Control Module.
 - **If the ABS indicator turns OFF**
5. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

[Control Module References](#) for electronic brake control module or instrument cluster replacement, programming and setup

TRACTION CONTROL/STABILITY CONTROL INDICATOR MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

Diagnostic Fault Information

Circuit	Short to Ground	Open/High Resistance	Short to Voltage	Signal Performance
Signal	B2745 02, U0422 71	1	1	-
Ground	-	1	-	-
1. Traction control switch malfunction				

Circuit/System Description

The instrument cluster illuminates the traction/stability control indicator, the traction control off indicator and the stability control off indicator for 5 s after the ignition is turned ON. When the electronic brake control module detects a fault it sends a serial data message to the instrument cluster commanding the traction/stability control indicator ON.

The body control module monitors the signal circuit from the traction control switch. When the traction control switch is pressed once, the body control module sends a serial data message to the electronic brake control module to disable the traction control system and turn the traction control off indicator ON to notify the driver of the deactivation. When the traction control switch is pressed and held for 5 s, the body control module will request the electronic brake control module to disable the traction control and the electronic stability control. The electronic brake control module will request the instrument cluster to turn the traction control off and stability control off indicator ON to notify the driver of the deactivation.

Reference Information

Schematic Reference

Antilock Brake System Schematics

Connector End View Reference

COMPONENT CONNECTOR END VIEWS - INDEX

Description and Operation

ABS Description and Operation

Electrical Information Reference

- **Circuit Testing**
- **Connector Repairs**
- **Testing for Intermittent Conditions and Poor Connections**
- **Wiring Repairs**

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

1. Ignition ON.
2. Verify the Instrument Cluster indicators listed below turn On and Off when commanding the All Indicators On and Off with a scan tool.
 - Traction control off indicator
 - Stability control off indicator
 - Traction/stability control indicator
 - **If any indicator does not turn On and Off**

Replace the P16 Instrument Cluster.

- **If all indicators turn On and Off**
3. Verify the scan tool Body Control Module Traction Control Switch parameter changes between Active and Inactive when pressing and releasing the traction control switch.
 - **If the parameter does not change**
Refer to Circuit/System Testing.
 - **If the parameter changes**
 4. All OK.

Circuit/System Testing

NOTE: **Circuit/System Verification must be performed before Circuit/System Testing.**

1. Ignition OFF, disconnect the harness connector at the S48E Multifunction Switch - Center Console.
It may take up to 2 min for all vehicle systems to power down.
2. Test for less than 5 Ω between the ground circuit terminal 2 and ground.
 - **If 5 Ω or greater**
 1. Ignition OFF.
 2. Test for less than 2 Ω in the ground circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , repair the open/high resistance in the ground connection.
 - **If less than 5 Ω**
3. Ignition ON.
4. Verify the scan tool Body Control Module Traction Control Switch parameter is Inactive.
 - **If not Inactive**
 1. Ignition OFF, disconnect the X2 harness connector at the K9 Body Control Module.
 2. Test for infinite resistance between the signal circuit terminal 14 and ground.
 - If less than infinite resistance, repair the short to ground on the circuit.
 - If infinite resistance, replace the K9 Body Control Module.
 - **If Inactive**
5. Install a 3 A fused jumper wire between the signal circuit terminal 1 and the ground circuit terminal 2.
6. Verify the scan tool Traction Control Switch parameter is Active.
 - **If not Active**
 1. Ignition OFF, disconnect the X2 harness connector at the K9 Body Control Module, ignition ON.
 2. Test for less than 1 V between the signal circuit and ground.
 - If 1 V or greater, repair the short to voltage on the circuit.
 - If less than 1 V.
 3. Test for less than 2 Ω in the signal circuit end to end.
 - If 2 Ω or greater, repair the open/high resistance in the circuit.
 - If less than 2 Ω , replace the K9 Body Control Module.
 - **If Active**
7. Test or replace the S48E Multifunction Switch - Center Console.

Component Testing

1. Ignition OFF, disconnect the harness connector at the S48E Multifunction Switch - Center Console.
2. Test for infinite resistance between the signal terminal 1 and the ground terminal 2 with the switch in the open position.
 - **If less than infinite resistance**

Replace the S48E Multifunction Switch - Center Console.
 - **If infinite resistance**
3. Test for less than 2 Ω between the signal terminal 1 and the ground terminal 2 with the switch in the closed position.
 - **If 2 Ω or greater**

Replace the S48E Multifunction Switch - Center Console.
 - **If less than 2 Ω**
4. All OK.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the repair.

- [Vehicle Stability Control System Switch Replacement](#)
- [Control Module References](#) for body control module or instrument cluster replacement, programming and setup

REPAIR INSTRUCTIONS

CONNECTOR RECONNECTION - WHEEL SPEED SENSOR

Special Tools

EL-35616 Terminal Test Probe Kit

For equivalent regional tools, refer to [Special Tools](#) .

When the condition is not currently present, but is indicated in DTC history, the cause may be intermittent. An intermittent may also be the cause when there is a customer complaint, but the symptom cannot be duplicated. Refer to the Symptom Table of the system that is suspect of causing the condition before trying to locate an intermittent condition.

Most intermittent conditions are caused by faulty electrical connections or wiring. Inspect for the following items:

- Loose, corroded, or painted terminal stud/fastener
- Wiring broken inside the insulation
- Poor connection between the male and female terminal at a connector
- A terminal not seated all the way into the connector body
- Poor terminal to wire connection - Some conditions which fall under this description are poor crimps, poor solder joints, crimping over the wire insulation rather than the wire itself, and corrosion in the wire to terminal contact area, etc.
- Pierced or damaged insulation can allow moisture to enter the wiring causing corrosion. The conductor can corrode inside the insulation, with little visible evidence. Look for swollen and stiff sections of wire in the suspect circuits.
- Wiring which has been pinched, cut, or its insulation rubbed through may cause an intermittent open or short as the bare area touches other wiring or parts of the vehicle.
- Wiring that comes in contact with hot or exhaust components
- Refer to [Inducing Intermittent Fault Conditions](#) in order to duplicate the conditions required, in order to verify the customer concern.
- Refer to [Testing for Electrical Intermittents](#) for test procedures to detect intermittent open, high resistance, short to ground, and short to voltage conditions.
- Refer to [Scan Tool Snapshot Procedure](#) for advanced intermittent diagnosis and Vehicle Data Recorder operation.

Testing for Terminal Fretting

Some intermittent conditions can be caused by wire terminal fretting corrosion. Fretting corrosion is a build-up of insulating, oxidized wear debris that can form when there is a small motion between electrical contacts. The oxidized wear debris can pile up enough at the electrical contact spots that the electrical resistance across the connection increases. Movement between the contacting surfaces as small as 10 to 100 microns can cause fretting. To put this in perspective, a sheet of paper is about 100 microns thick, so fretting motion is small and hard to see. Vibration and thermal expansion/contraction are the main sources that create fretting motion. Since vehicles vibrate and can experience large temperature swings, they are a good source for fretting motion. Tin, copper, nickel, and iron surfaces are all susceptible to fretting corrosion. Fretting corrosion can be difficult to see but it looks like small, dark smudges on the terminals contact surface.

To correct a fretting condition disconnect the suspect connector and add dielectric grease / lubricant (Nyogel 760G or equivalent, meeting GM specification 9986087) to both sides of the connector terminals. Then reconnect the connector and wipe away any excess lubricant. This will correct the additional terminal contact resistance due to the terminal fretting corrosion.

Testing for Proper Terminal Contact

It is important to test terminal contact at the component and any inline connectors before replacing a suspect component. Mating terminals must be inspected to ensure good terminal contact. A poor connection between the male and female terminal at a connector may be the result of contamination or deformation.

Contamination may be caused by the connector halves being improperly connected. A missing or damaged connector seal, damage to the connector itself, or exposing the terminals to moisture and dirt can also cause contamination. Contamination, usually in the underhood or underbody connectors, leads to terminal corrosion, causing an open circuit or intermittently open circuit.

Deformation is caused by probing the mating side of a connector terminal without the proper adapter. Always use the **EL-35616** kit when probing connectors. Other causes of terminal deformation are improperly joining the connector halves, or repeatedly separating and joining the connector halves. Deformation, usually to the female terminal contact tang, can result in poor terminal contact causing an open or intermittently open circuit.

Testing for Proper Terminal Contact in Bussed Electrical Centers

It is very important to use the correct test adapter when testing for proper terminal contact of fuses and relays in a bussed electrical center. Use the **EL-35616** kit to test for proper terminal contact. Failure to use the **EL-35616** kit can result in improper diagnosis of the bussed electrical center.

Follow the procedure below in order to test terminal contact:

1. Separate the connector halves.
2. Visually inspect the connector halves for contamination. Contamination may result in a white or green build-up within the connector body or between terminals. This causes high terminal resistance, intermittent contact, or an open circuit. An underhood or underbody connector that shows signs of contamination should be replaced in its entirety: terminals, seals, and connector body.
3. Using an equivalent male terminal/terminated lead, verify that the retention force is significantly different between a known good terminal and the suspect terminal. Replace the female terminal in question.

Flat Wire Connectors

There are no serviceable parts for flat wire connectors on the harness side or the component side.

Follow the procedure below in order to test terminal contact:

1. Remove the component in question.
2. Visually inspect each side of the connector for signs of contamination. Avoid touching either side of the connector as oil from your skin may be a source of contamination as well.
3. Visually inspect the terminal bearing surfaces of the flat wire circuits for splits, cracks, or other imperfections that could cause poor terminal contact. Visually inspect the component side connector to ensure that all of the terminals are uniform and free of damage or deformation.
4. Insert the appropriate adapter into the flat wire harness connector in order to test the circuit in question.

Control Module/Component Voltage and Grounds

Poor voltage or ground connections can cause widely varying symptoms.

- Test all control module voltage supply circuits. Many vehicles have multiple circuits supplying voltage to a control module. Other components in the system may have separate voltage supply circuits that may also need to be tested. Inspect connections at the module/component connectors, fuses, and any intermediate connections between the voltage source and the module/component. A test lamp or a DMM may indicate that voltage is present, but neither tests the ability of the circuit to carry sufficient current. Operate the component to test the ability of the circuit to carry sufficient current. Refer to [Circuit Testing](#) , and [Power Distribution Schematics](#) .

- Test all control module ground and system ground circuits. The control module may have multiple ground circuits. Other components in the system may have separate grounds that may also need to be tested. Inspect grounds for clean and tight connections at the grounding point (screw or stud). Inspect the connections at the component and in splice packs, where applicable. Operate the component to test the ability of the circuit to carry sufficient current. Refer to [Circuit Testing](#) , and [Ground Distribution Schematics](#) .

Temperature Sensitivity

- An intermittent condition may occur when a component/connection reaches normal operating temperature. The condition may occur only when the component/connection is cold, or only when the component/connection is hot.
- Freeze Frame, Failure Records, Snapshot, or Vehicle Data Recorder data may help with this type of intermittent condition, where applicable.
- If the intermittent is related to heat, review the data for a relationship with the following:
 - High ambient temperatures
 - Underhood/engine generated heat
 - Circuit generated heat due to a poor connection, or high electrical load
 - Higher than normal load conditions, towing, etc.
- If the intermittent is related to cold, review the data for the following:
 - Low ambient temperatures - In extremely low temperatures, ice may form in a connection or component. Inspect for water intrusion.
 - The condition only occurs on a cold start.
 - The condition goes away when the vehicle warms up.
- Information from the customer may help to determine if the trouble follows a pattern that is temperature related.
- If temperature is suspected of causing an intermittent fault condition, attempt to duplicate the condition. Refer to [Inducing Intermittent Fault Conditions](#) in order to duplicate the conditions required.

Electromagnetic Interference and Electrical Noise

Some electrical components/circuits are sensitive to electromagnetic interference or other types of electrical noise. Inspect for the following conditions:

- A mis-routed harness that is too close to high voltage/high current devices such as secondary ignition components, motors, generator etc. - These components may induce electrical noise on a circuit that could interfere with normal circuit operation.
- Electrical system interference caused by a malfunctioning relay, or a control module driven solenoid or switch - These conditions can cause a sharp electrical surge. Normally, the condition will occur when the malfunctioning component is operating.
- Installation of non-factory or aftermarket add on accessories such as lights, 2-way radios, amplifiers, electric motors, remote starters, alarm systems, cell phones, etc. - These accessories may create interference in other circuits while operating and the interference would disappear when the accessory is not operating. Refer to [Checking Aftermarket Accessories](#) .
- Test for an open diode across the A/C compressor clutch and for other open diodes. Some relays may contain a clamping diode.
- The generator may be allowing AC noise into the electrical system.

Incorrect Control Module

- There are only a few situations where reprogramming a control module is appropriate:
 - A new service control module is installed.
 - A control module from another vehicle is installed.
 - Revised software/calibration files have been released for this vehicle.

NOTE: **DO NOT re-program the control module with the SAME software/calibration files that are already present in the control**

module. This is not an effective repair for any type of concern.

- Verify that the control module contains the correct software/calibration. If incorrect programming is found, reprogram the control module with the most current software/calibration. Refer to [Control Module References](#) for replacement, setup, and programming.

ANTILOCK BRAKE SYSTEM AUTOMATED BLEED

WARNING: Refer to [Brake Fluid Irritant Warning](#) .

CAUTION: Refer to [Brake Fluid Effects on Paint and Electrical Components Caution](#) .

NOTE: Before performing the ABS Automated Bleed Procedure, first perform a pressure bleed of the base brake system. Refer to [Hydraulic Brake System Bleeding \(Manual\)](#) [Hydraulic Brake System Bleeding \(Pressure\)](#) . The automated bleed procedure is recommended when one of the following conditions exist:

- Base brake system bleeding does not achieve the desired pedal height or feel
- Extreme loss of brake fluid has occurred
- Air ingestion is suspected in the secondary circuits of the brake modulator assembly

The ABS Automated Bleed Procedure uses a scan tool to cycle the system solenoid valves and run the pump in order to purge any air from the secondary circuits. These circuits are normally closed off, and are only opened during system initialization at vehicle start up and during ABS operation. The automated bleed procedure opens these secondary circuits and allows any air trapped in these circuits to flow out toward the brake corners.

Performing the Automated Bleed Procedure

CAUTION: The Auto Bleed Procedure may be terminated at any time during the process by pressing the EXIT button. No further Scan Tool prompts pertaining to the Auto Bleed procedure will be given. After exiting the bleed procedure, relieve bleed pressure and disconnect bleed equipment per manufacturers instructions. Failure to properly relieve pressure may result in spilled brake fluid causing damage to components and painted surfaces.

1. Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#) .
2. Remove all four tire and wheel assemblies. Refer to [Tire and Wheel Removal and Installation](#) .
3. Inspect the brake system for leaks and visual damage. Repair or replace components as needed.
4. Lower the vehicle.
5. Inspect the battery state of charge. Refer to [Battery Inspection/Test](#) .
6. Install a scan tool.
7. Turn the ignition ON, with the engine OFF.
8. With the scan tool, establish communications with the ABS system. Select Control Functions. Select Automated Bleed from the Control Functions menu.
9. Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#) .
10. Following the directions given on the scan tool, pressure bleed the base brake system. Refer to [Hydraulic Brake System Bleeding \(Manual\)](#) [Hydraulic Brake System Bleeding \(Pressure\)](#) .
11. Follow the scan tool directions until the desired brake pedal height is achieved.
12. If the bleed procedure is aborted, a malfunction exists. Perform the following steps before resuming the bleed procedure:
 - If a DTC is detected, refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#) , and diagnose the appropriate DTC.

- If the brake pedal feels spongy, perform the conventional brake bleed procedure again. Refer to [Hydraulic Brake System Bleeding \(Manual\)](#) [Hydraulic Brake System Bleeding \(Pressure\)](#) .

13. When the desired pedal height is achieved, press the brake pedal to inspect for firmness.
14. Lower the vehicle.
15. Remove the scan tool.
16. Install the tire and wheel assemblies. Refer to [Tire and Wheel Removal and Installation](#) .
17. Inspect the brake fluid level. Refer to [Master Cylinder Reservoir Filling](#) .
18. Road test the vehicle while inspecting that the pedal remains high and firm.

STEERING ANGLE SENSOR REPLACEMENT

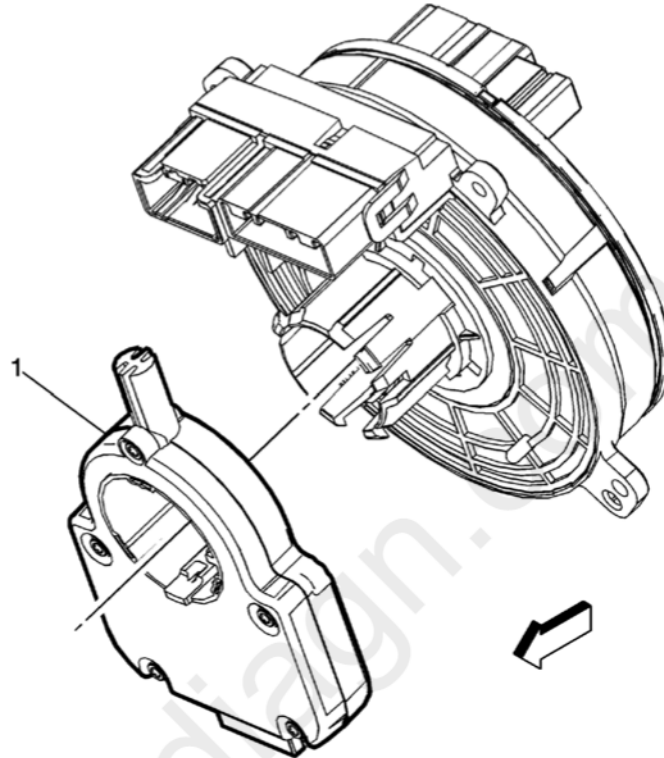


Fig. 4: View Of Steering Angle Sensor
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Steering Wheel Airbag Coil Replacement	
1	Steering Angle Sensor Procedure 1. Press in the retaining tabs on the steering wheel airbag coil and remove the steering angle sensor. 2. Center the steering angle sensor. Steering Wheel Angle Sensor Centering

STEERING WHEEL ANGLE SENSOR CENTERING

WARNING: An inaccurate or not centered steering angle sensor could limit the operation of the electric power steering and may result in personal injury.

NOTE: The GDS2 calibration software must be updated to the latest diagnostic package for the scan tool Reset and Learn functions to work correctly.

The external, column mounted, steering angle sensor does not require a centering often. Centering of the external steering angle sensor might be required after certain service procedures are performed. Some of these procedures are as follows:

- Wheel alignment
- Steering gear replacement
- Steering column replacement
- Steering angle sensor replacement
- Collision or other physical damage
- Electronic brake control module (EBCM) replacement

The external steering angle sensor centering procedure can be completed with a scan tool using the following steps:

1. Using the steering wheel, align the front wheels forward.
2. Apply the parking brake, or set the transmission in the Park.
3. Install the scan tool to the data link connector.
4. Ignition ON, engine OFF

NOTE: If installing a new steering angle sensor, the Reset function is not required. Proceed to step 7. Reset function only needs to be performed when using a vehicles existing steering angle sensor.

5. Select Steering Wheel Angle Sensor Reset in the Steering Wheel Angle Sensor Module Configuration/Reset Functions list.
6. Follow the scan tool directions to complete the reset procedure.
7. Select Steering Wheel Angle Sensor Learn in the Steering Wheel Angle Sensor Module Configuration/Reset Functions list.
8. Follow the scan tool directions to complete the learn procedure.
9. Select Steering Wheel Angle Sensor Learn in the Electronic Brake Control Module Configuration/Reset Functions list (if equipped).
10. Follow the scan tool directions to complete the learn procedure.
11. If the vehicle is equipped with RPO NJ1 electronic power steering, perform the Software Endstop Learning procedure. Refer to [Power Steering Control Module Calibration \(NJ1\)](#) .
12. Clear any DTCs that may be set.

ELECTRONIC BRAKE CONTROL MODULE REPLACEMENT

Removal Procedure

WARNING: Refer to [Brake Fluid Irritant Warning](#) .

CAUTION: Refer to [Brake Fluid Effects on Paint and Electrical Components Caution](#) .

1. Remove the electronic brake and traction control module (EBTCM) assembly. Refer to [Electronic Brake and Traction Control Module with Brake Pressure Modulator Valve Replacement](#).

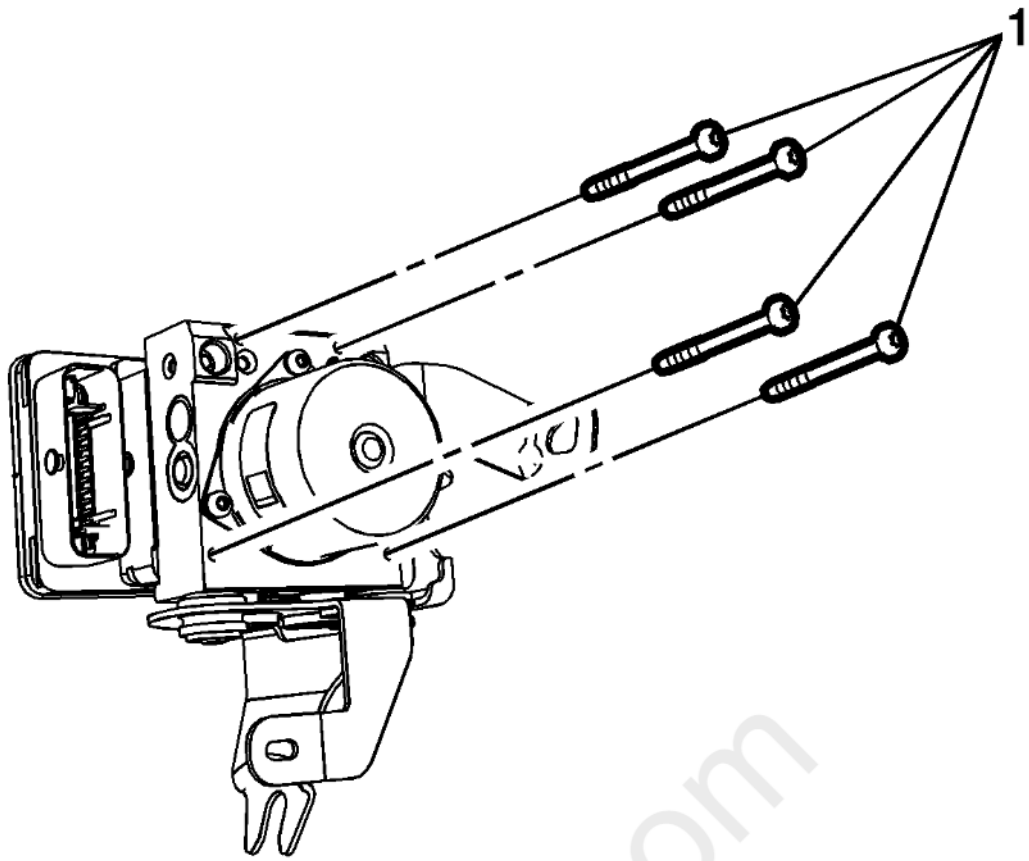


Fig. 5: EBCM Bolts

Courtesy of GENERAL MOTORS COMPANY

2. Remove the electronic brake control module (EBCM) bolts (1).

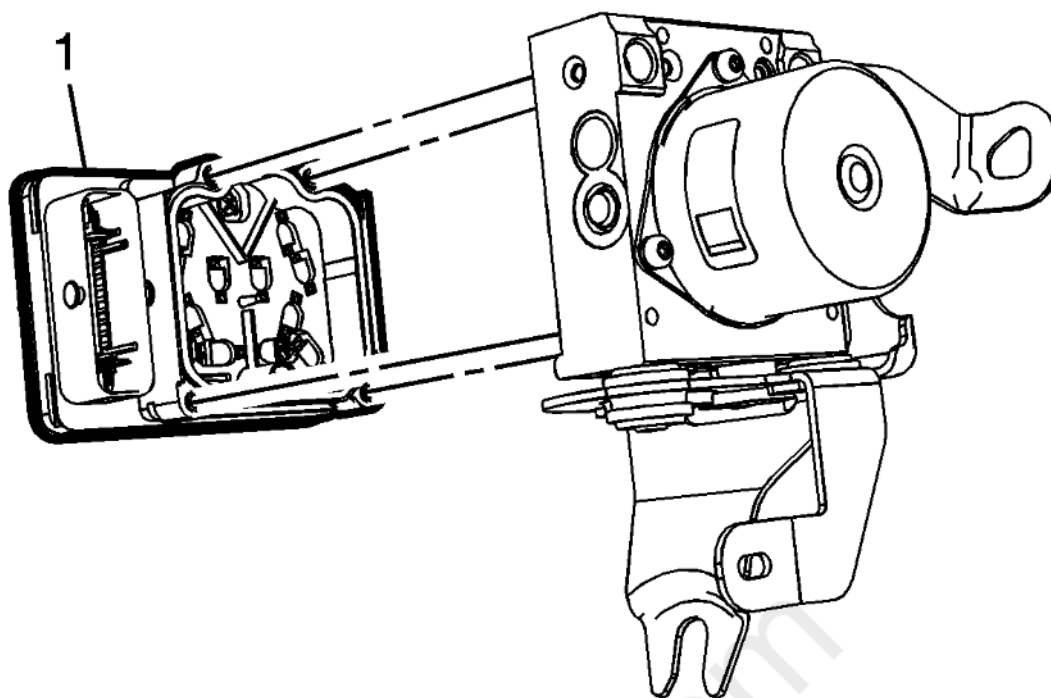


Fig. 6: EBCM

Courtesy of GENERAL MOTORS COMPANY

NOTE: Do not pry the components apart.

3. Carefully separate the EBCM (1) from the hydraulic control unit (HCU).
4. Clean the sealing surfaces of the EBCM and the HCU with denatured alcohol and allow to dry.

Installation Procedure

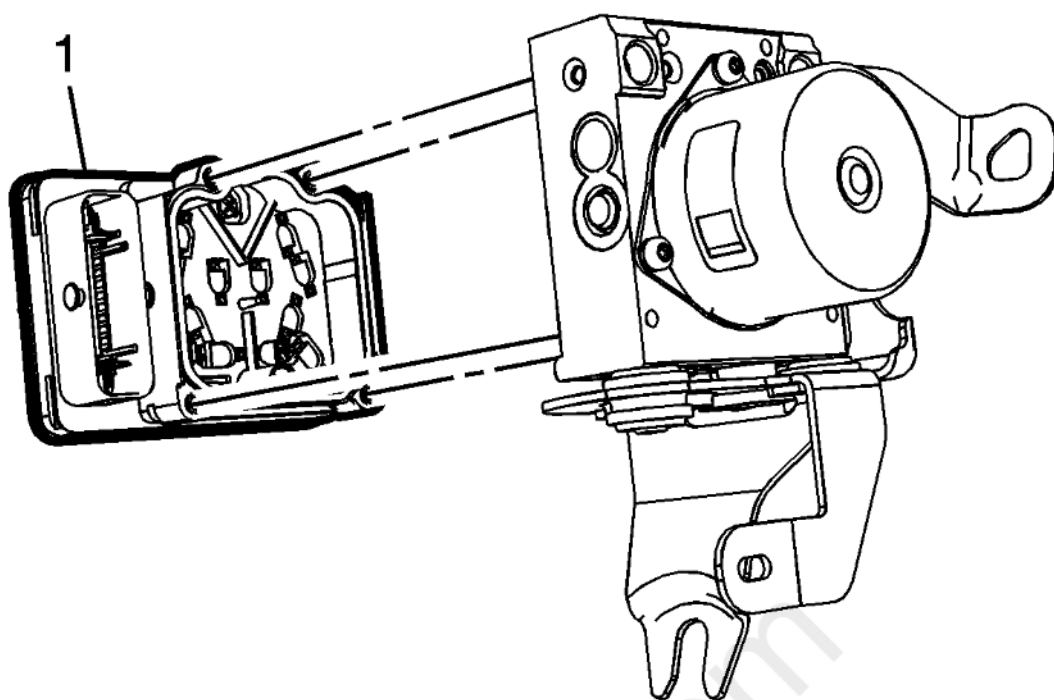


Fig. 7: EBCM

Courtesy of GENERAL MOTORS COMPANY

1. Install the EBCM (1) to the HCU.

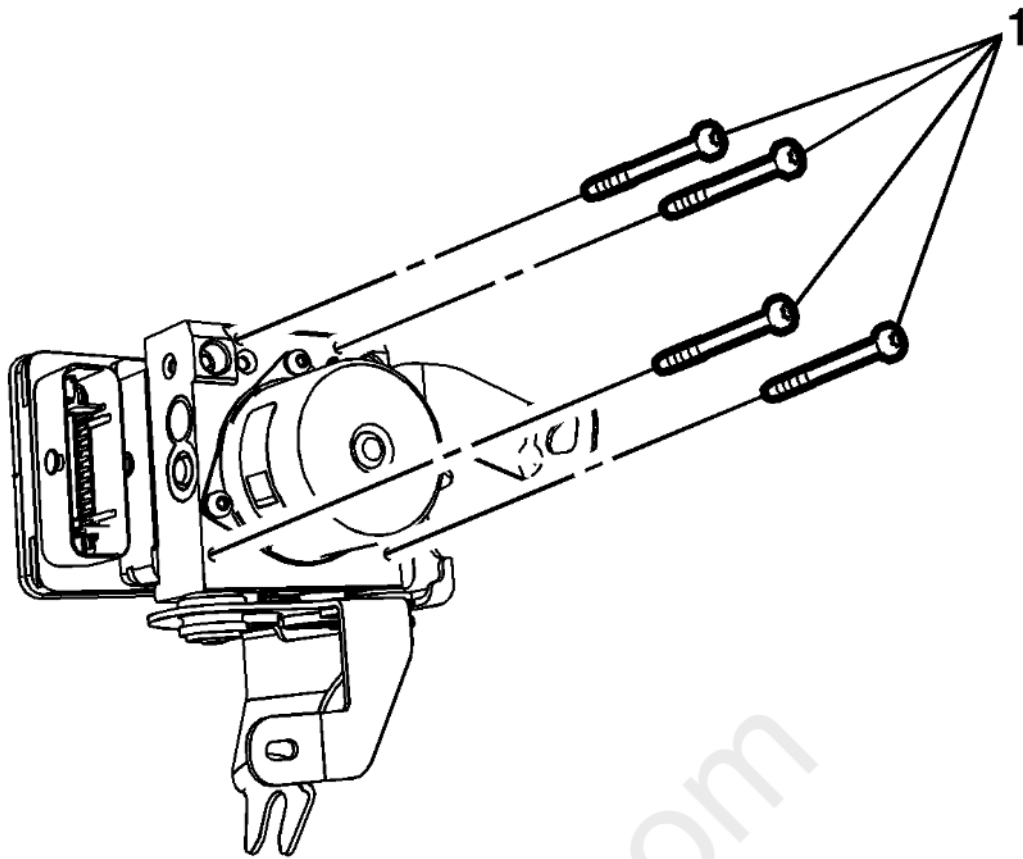


Fig. 8: EBCM Bolts

Courtesy of GENERAL MOTORS COMPANY

CAUTION: Refer to [Fastener Caution](#) .

2. Install the EBCM bolts (1) and tighten to 5 N.m (44 lb in).
3. Install the EBTCM assembly. Refer to [Electronic Brake and Traction Control Module with Brake Pressure Modulator Valve Replacement](#).
4. Program the EBCM. Refer to [Control Module References](#) .

ELECTRONIC BRAKE AND TRACTION CONTROL MODULE WITH BRAKE PRESSURE MODULATOR VALVE REPLACEMENT

Removal Procedure

WARNING: Refer to [Brake Fluid Irritant Warning](#) .

CAUTION: Refer to [Brake Fluid Effects on Paint and Electrical Components Caution](#) .

CAUTION: To prevent equipment damage, never connect or disconnect the wiring harness connection from the EBCM with the ignition switch in the ON position.

1. Turn the ignition OFF.
2. Remove the battery tray. Refer to [Battery Tray Replacement](#) .
3. Without draining the coolant and without disconnecting the hoses, remove and position aside the radiator surge tank. Refer to [Radiator Surge Tank Replacement \(LFX\)](#) [Radiator Surge Tank Replacement \(LCV\)](#) .
4. Disconnect the brake fluid level sensor electrical connector.

5. Thoroughly clean the electronic brake control module (EBCM) to hydraulic control unit (HCU) area of any accumulated dirt and debris.
6. Disconnect the EBCM electrical connector.

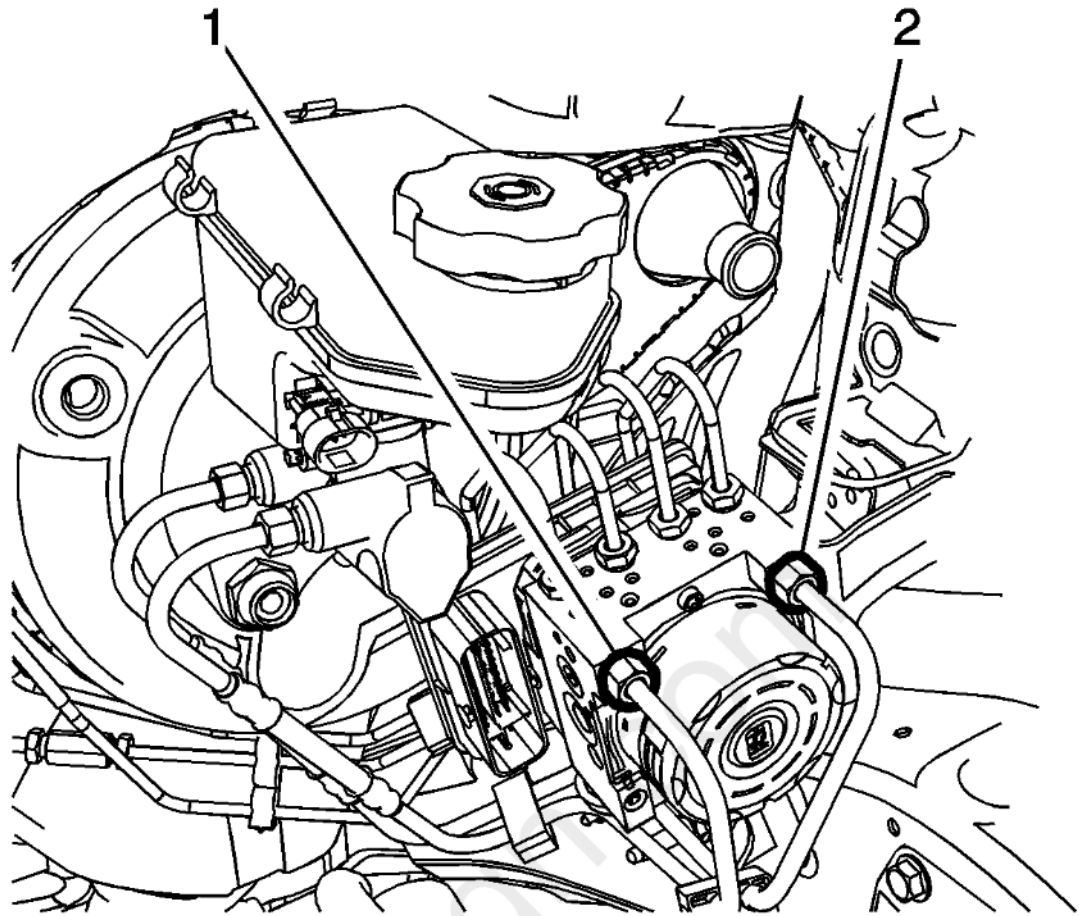


Fig. 9: Master Cylinder Brake Pipe Fittings
Courtesy of GENERAL MOTORS COMPANY

7. Disconnect the master cylinder secondary brake pipe fitting (1).
8. Cap the brake pipe fitting and plug the HCU inlet port to prevent brake fluid loss and contamination.
9. Disconnect the master cylinder primary brake pipe fitting (2).
10. Cap the brake pipe fitting and plug the HCU inlet port to prevent brake fluid loss and contamination.

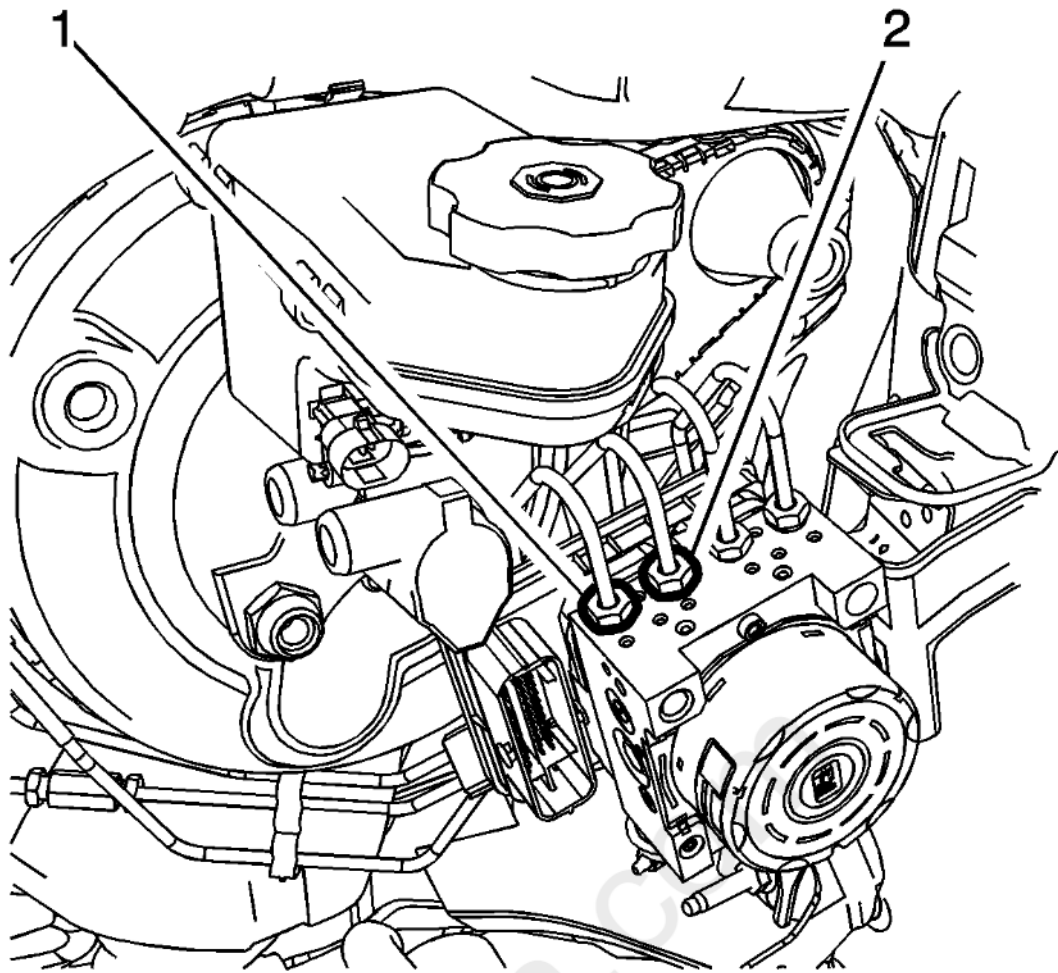


Fig. 10: Right Rear & Left Front Brake Pipe Fittings

Courtesy of GENERAL MOTORS COMPANY

11. Disconnect the right rear brake pipe fitting (1).
12. Cap the brake pipe fitting and plug the HCU outlet port to prevent brake fluid loss and contamination.
13. Disconnect the left front brake pipe fitting (2).
14. Cap the brake pipe fitting and plug the HCU outlet port to prevent brake fluid loss and contamination.

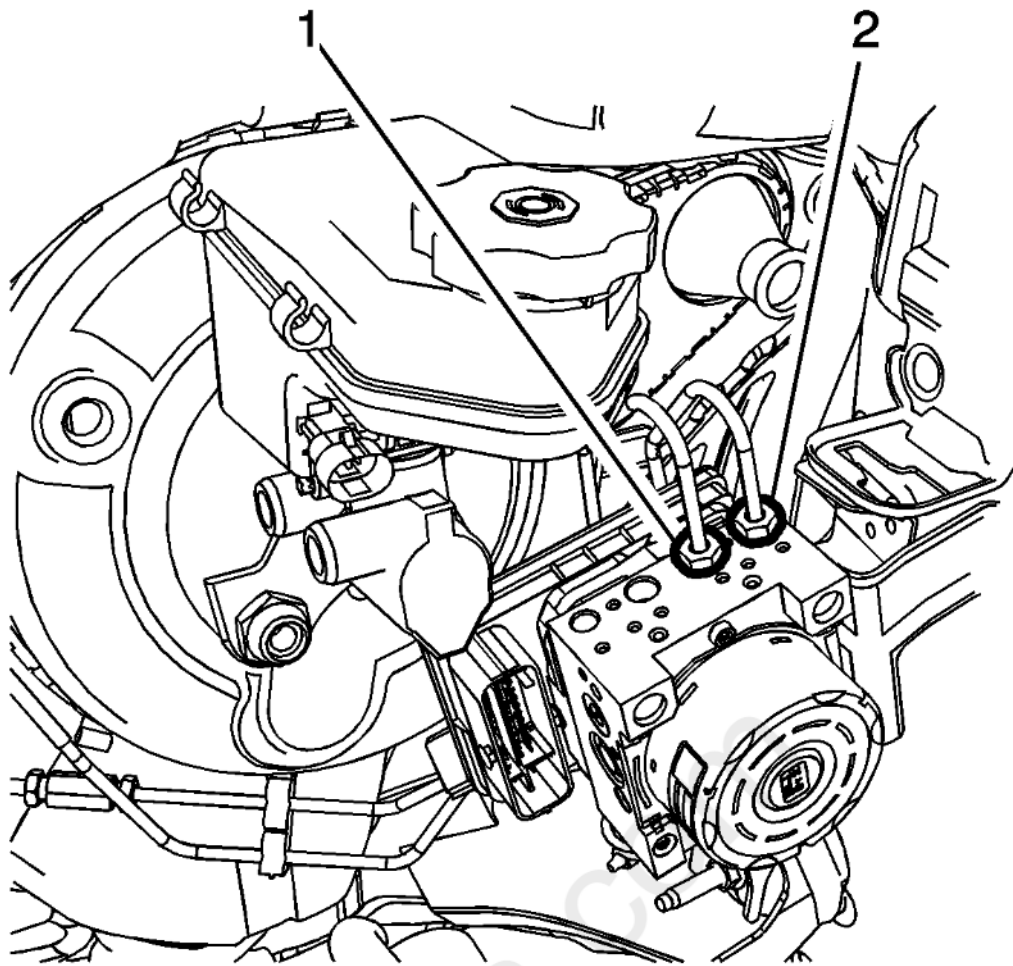


Fig. 11: Right Front & Left Rear Brake Pipe Fittings

Courtesy of GENERAL MOTORS COMPANY

15. Disconnect the right front brake pipe fitting (1).
16. Cap the brake pipe fitting and plug the HCU outlet port to prevent brake fluid loss and contamination.
17. Disconnect the left rear brake pipe fitting (2).
18. Cap the brake pipe fitting and plug the HCU outlet port to prevent brake fluid loss and contamination.

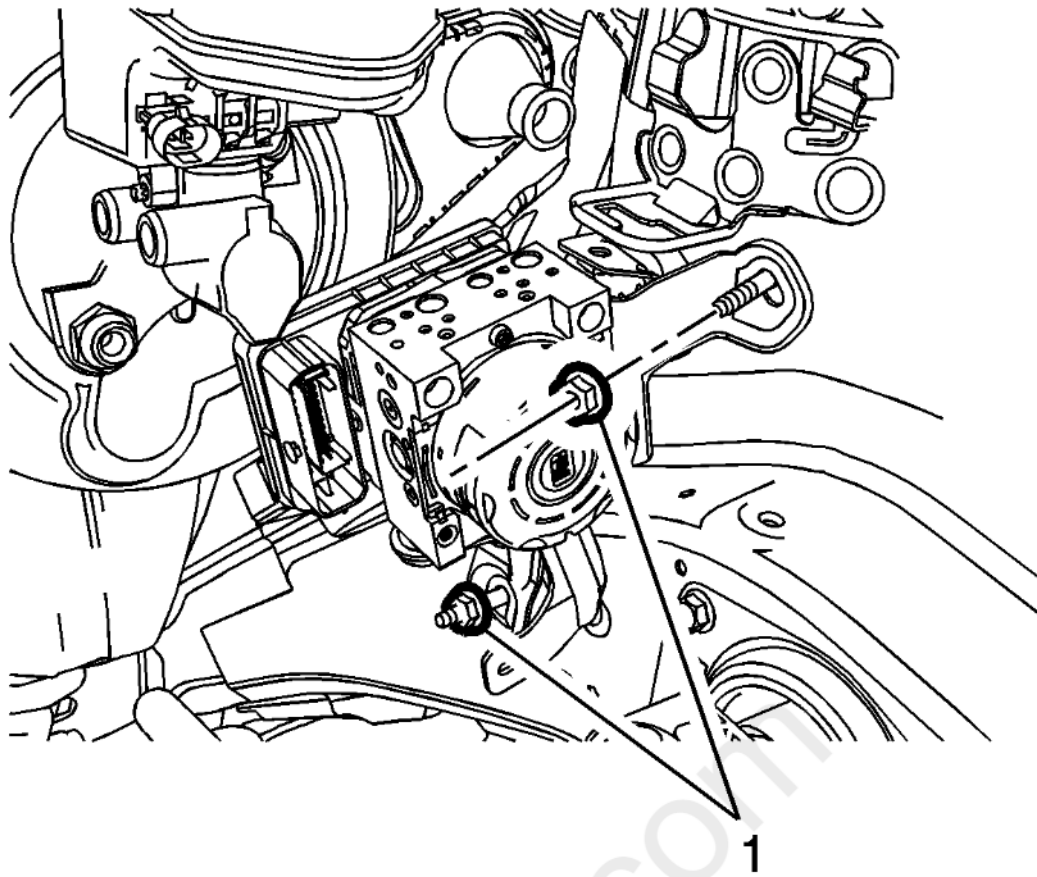


Fig. 12: BPMV Assembly Bracket Nuts

Courtesy of GENERAL MOTORS COMPANY

19. Remove the electronic brake and traction control module (EBTCM) assembly bracket nuts (1).
20. Remove the EBTCM assembly.

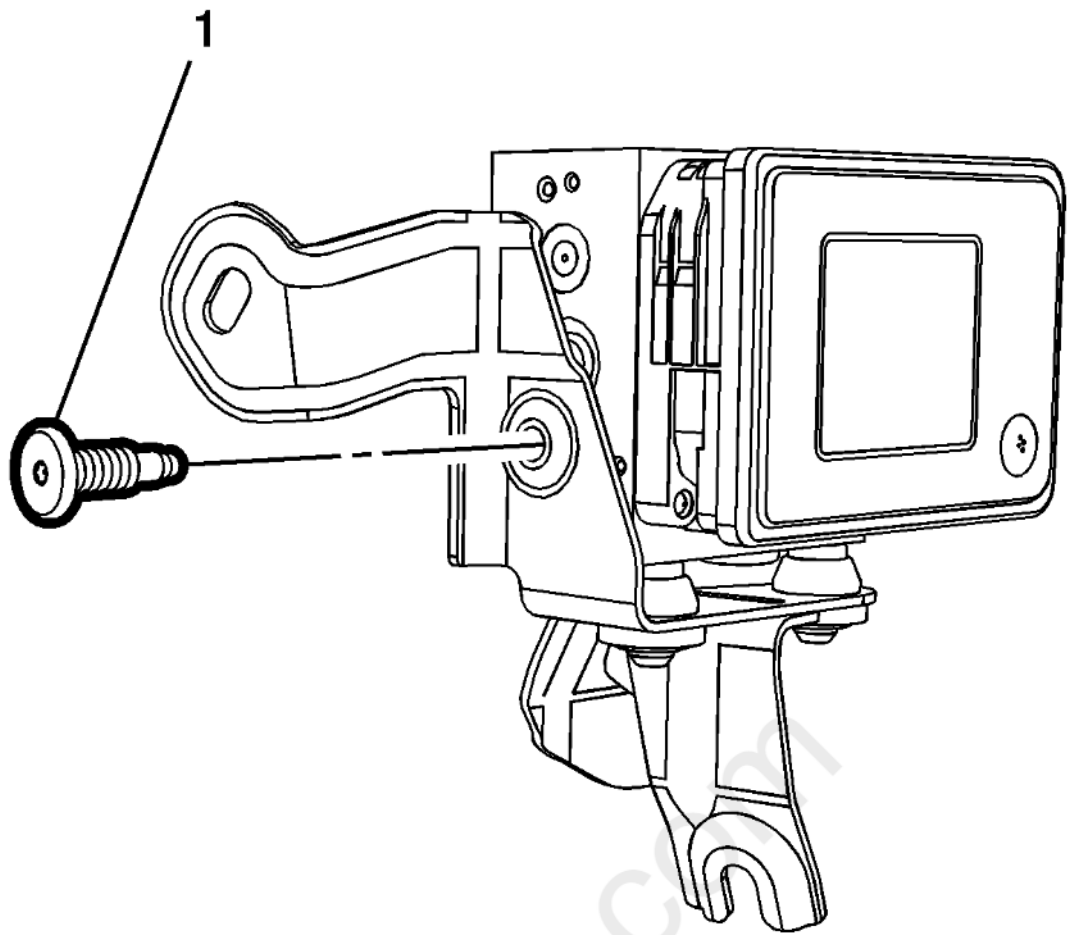


Fig. 13: BPMV Assembly Bracket Bolts
Courtesy of GENERAL MOTORS COMPANY

21. Remove the EBTCM assembly bracket bolt (1).
22. Carefully separate the EBTCM assembly from the bracket.

Installation Procedure

1. Install the EBTCM assembly to the bracket.

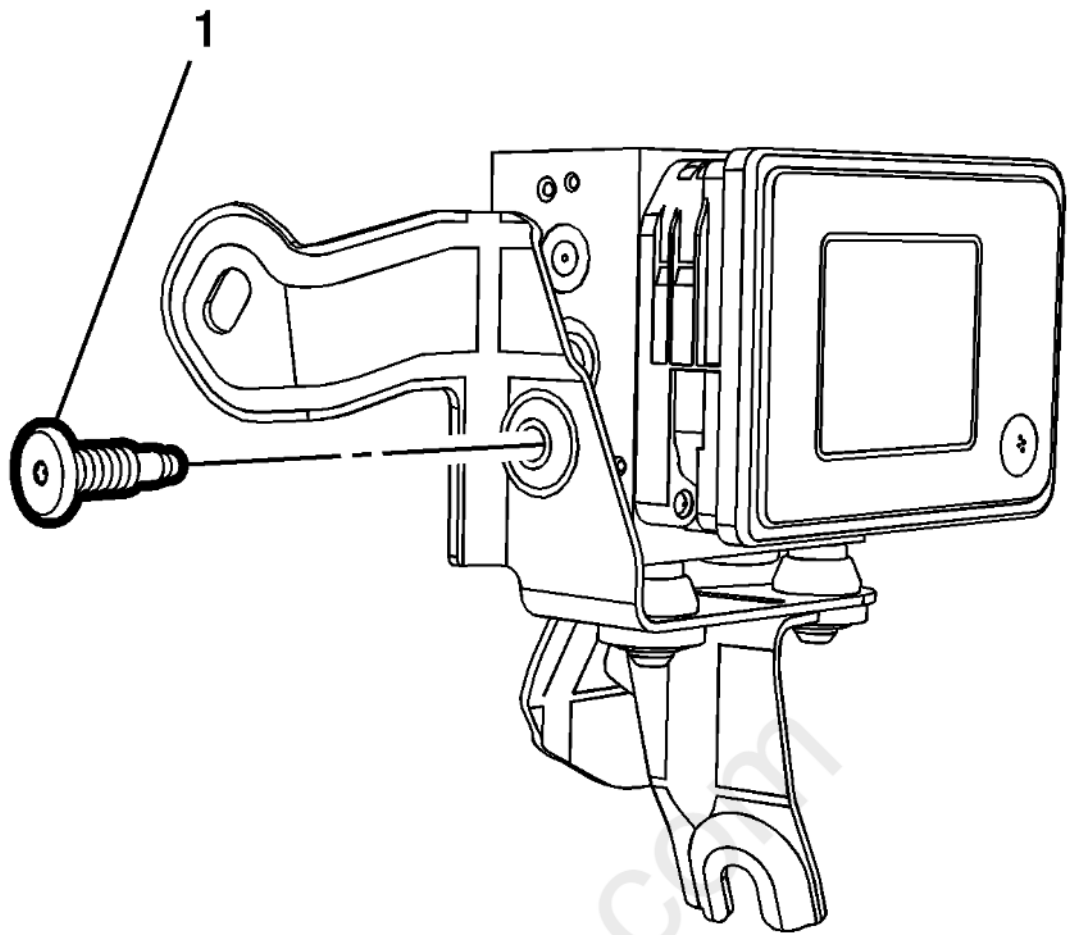


Fig. 14: BPMV Assembly Bracket Bolts
Courtesy of GENERAL MOTORS COMPANY

CAUTION: Refer to **Fastener Caution** .

2. Install the EBTCM assembly bracket bolt (1) and tighten to 10 N.m (89 lb in).
3. Install the EBTCM assembly.

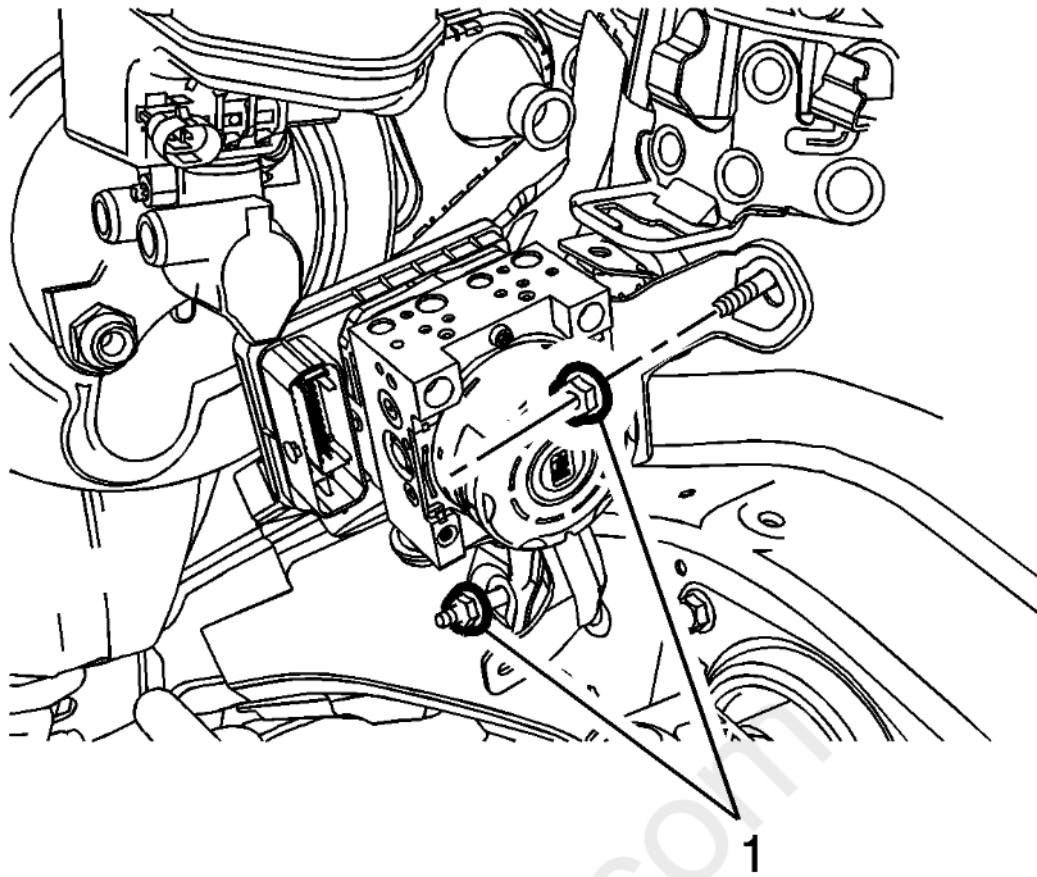


Fig. 15: BPMV Assembly Bracket Nuts

Courtesy of GENERAL MOTORS COMPANY

4. Install the EBTCM assembly bracket nuts (1) and tighten to 22 N.m (16 lb ft).

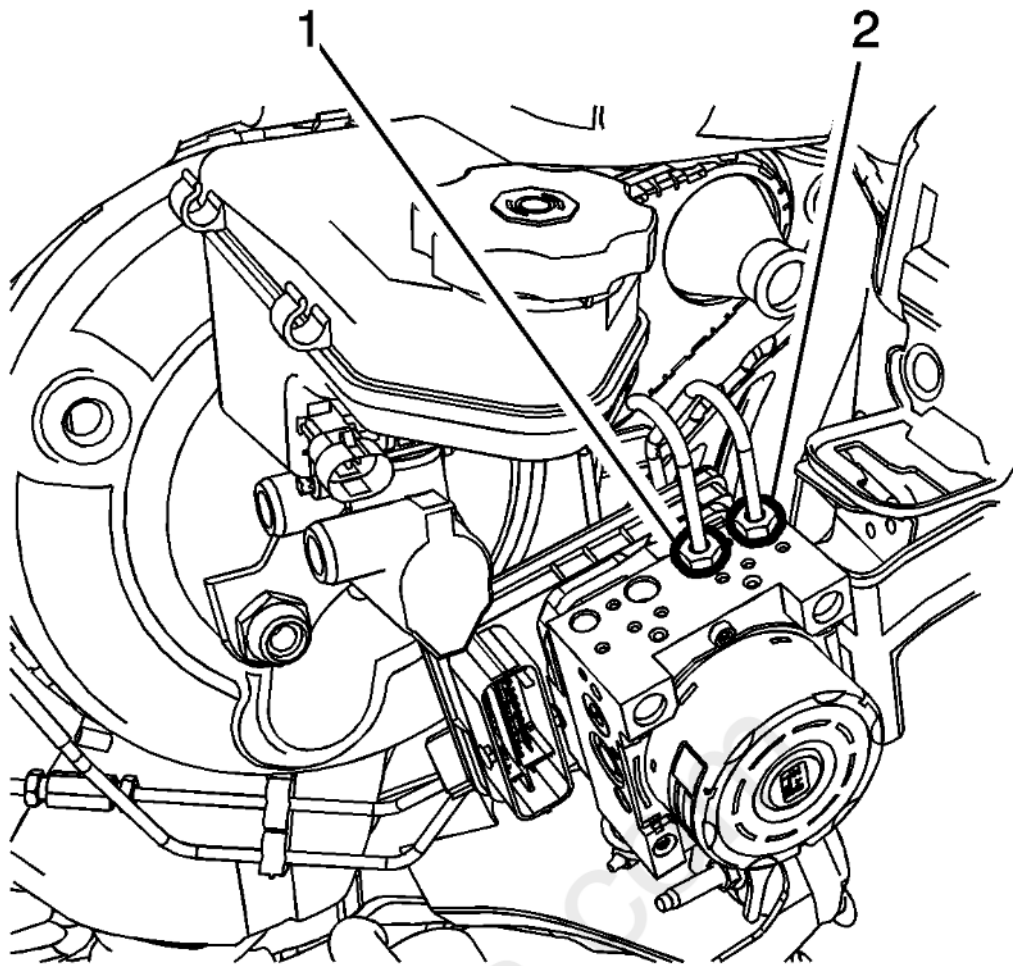


Fig. 16: Right Front & Left Rear Brake Pipe Fittings

Courtesy of GENERAL MOTORS COMPANY

5. Install the right front brake pipe fitting (1) and tighten to 18 N.m (13 lb ft).
6. Install the left rear brake pipe fitting (2) and tighten to 18 N.m (13 lb ft).

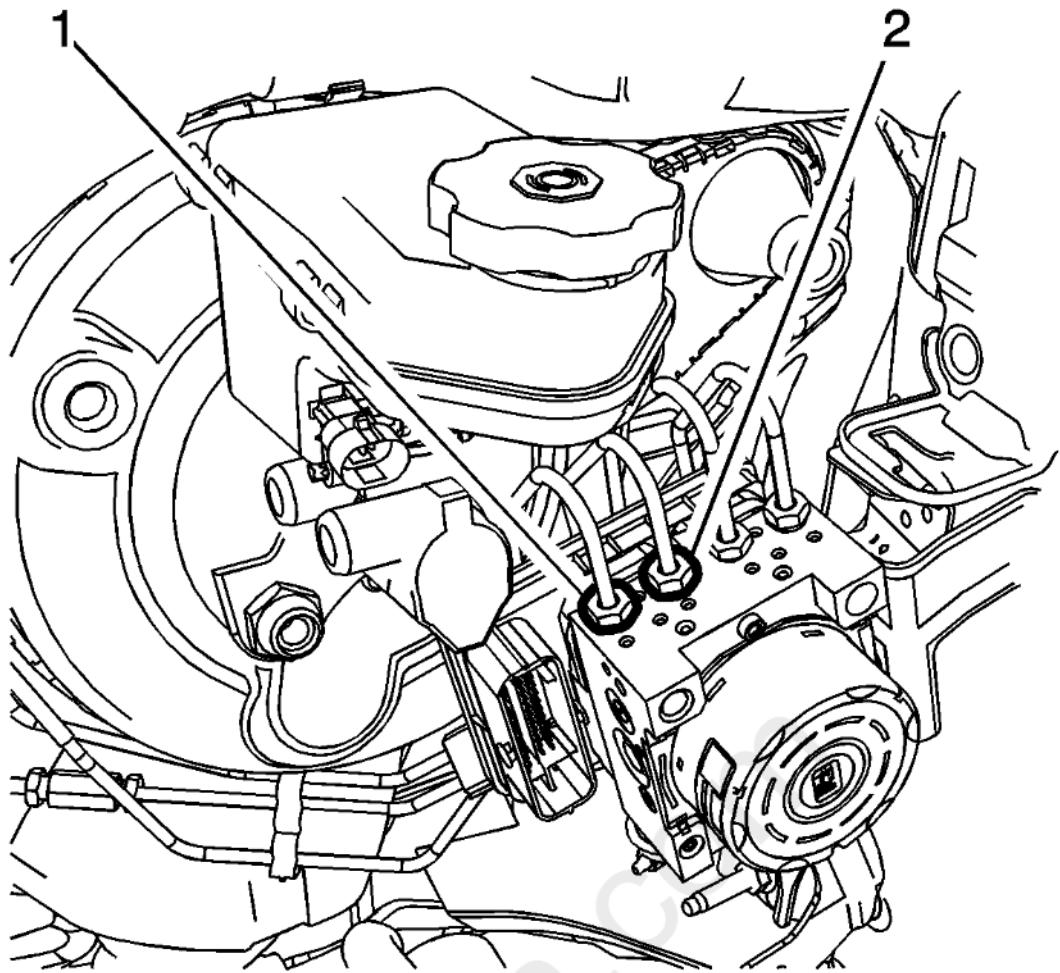


Fig. 17: Right Rear & Left Front Brake Pipe Fittings

Courtesy of GENERAL MOTORS COMPANY

7. Install the right rear brake pipe fitting (1) and tighten to 18 N.m (13 lb ft).
8. Install the left front brake pipe fitting (2) and tighten to 18 N.m (13 lb ft).

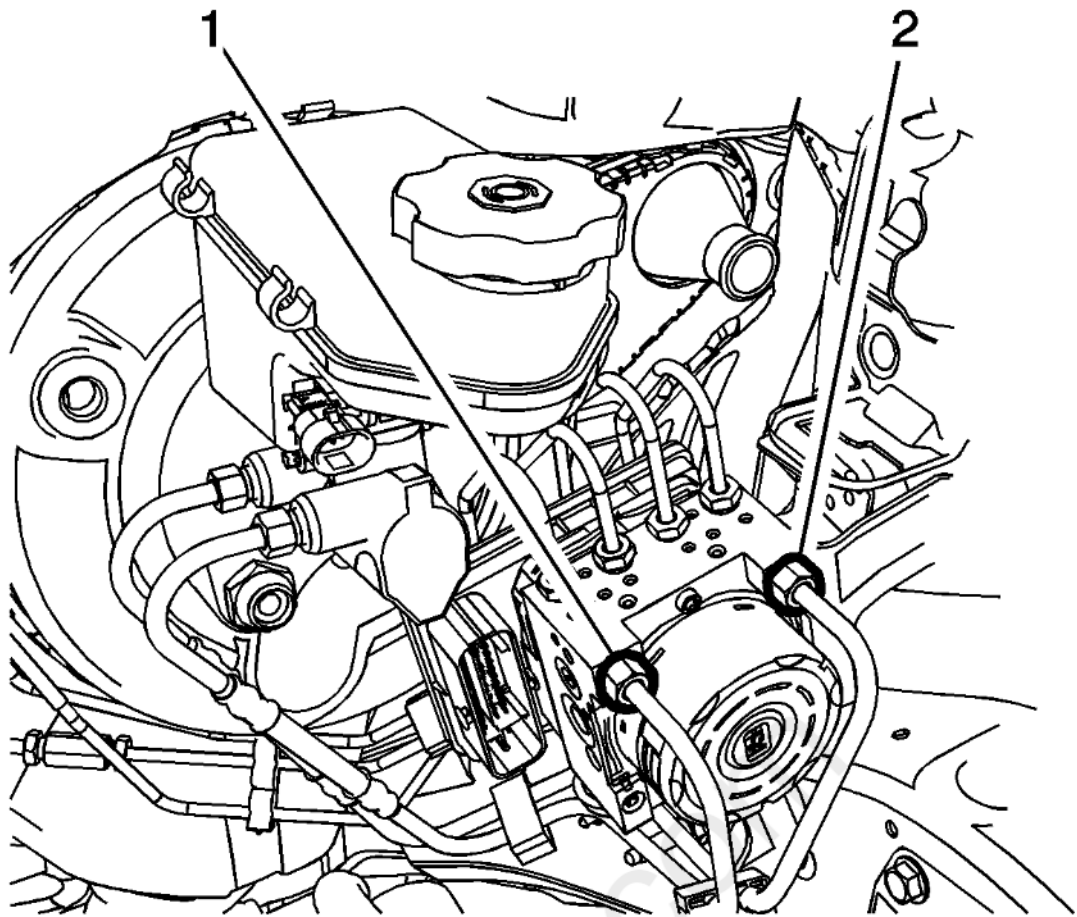


Fig. 18: Master Cylinder Brake Pipe Fittings
Courtesy of GENERAL MOTORS COMPANY

9. Install the master cylinder secondary brake pipe fitting (1) and tighten to 25 N.m (18 lb ft).
10. Install the master cylinder primary brake pipe fitting (2) and tighten to 25 N.m (18 lb ft).
11. Connect the EBCM electrical connector.
12. Connect the brake fluid level sensor electrical connector.
13. Install the radiator surge tank. Refer to [Radiator Surge Tank Replacement \(LFX\) Radiator Surge Tank Replacement \(LCV\)](#).
14. Install the battery tray. Refer to [Battery Tray Replacement](#).
15. Program the EBCM. Refer to [Control Module References](#).
16. Bleed the antilock brake system. Refer to [Antilock Brake System Automated Bleed](#).
17. Perform the [Diagnostic System Check - Vehicle](#).
18. Calibrate the brake pedal position sensor. Refer to [Brake Pedal Position Sensor Calibration](#).
19. Center the steering angle sensor. Refer to [Steering Wheel Angle Sensor Centering](#).

BRAKE PRESSURE MODULATOR VALVE ADAPTIVE PRESSURE CALIBRATION

The adaptive pressure control learn is not required the learn will automatically perform a maintenance run every 200 - 300 ignition cycles at vehicle speeds between (40 - 50 mph). If a customer is concerned about an intermittent humming or buzzing noise perform this adaptive pressure control learn to determine if this is what the customer heard.

The adaptive pressure control learn can be completed with a scan tool using the following steps:

1. Place the vehicle on a flat level surface.
2. Maintain the system voltage by connecting a battery charger.
3. Apply the parking brake, or set the transmission in the Park.

4. Release the brake pedal.
5. Install the scan tool to the data link connector.
6. Engine running
7. Turn Off or disable systems that may put a load on the vehicles battery such as; interior lights, exterior lights (including daytime running lights), HVAC, radio, etc.
8. Select Adaptive Pressure Control Learn in the Electronic Brake Control Module Configuration/Reset Functions list.
9. Follow the scan tool directions to complete the calibration learn procedure.
10. Clear any DTCs that may be set.

BRAKE PRESSURE MODULATOR VALVE PRESSURE SENSOR CALIBRATION

The brake pressure sensor does not require calibration often. Calibration of the brake pressure sensor might be required after certain service procedures are performed. Some of these procedures are as follows:

- Electronic brake control module (EBCM) replacement.
- Brake pressure modulator valve assembly replacement

The Brake Pressure Sensor Calibration procedure can be completed with a scan tool using the following steps:

1. Apply the parking brake, or set the transmission in the P position.
2. Release the brake pedal.
3. Install the scan tool to the data link connector.
4. Ignition ON, engine OFF
5. Select Brake Pressure Sensor Calibration in the EBCM Configuration/Reset Functions list.
6. Follow the scan tool directions to complete the calibration procedure.
7. Clear any DTCs that may be set.

BRAKE PRESSURE MODULATOR VALVE BRACKET REPLACEMENT

Removal Procedure

WARNING: Refer to [Brake Fluid Irritant Warning](#) .

CAUTION: Refer to [Brake Fluid Effects on Paint and Electrical Components Caution](#) .

CAUTION: To prevent equipment damage, never connect or disconnect the wiring harness connection from the EBCM with the ignition switch in the ON position.

1. Remove the electronic brake and traction control module (EBTCM) assembly. Refer to [Electronic Brake and Traction Control Module with Brake Pressure Modulator Valve Replacement](#).

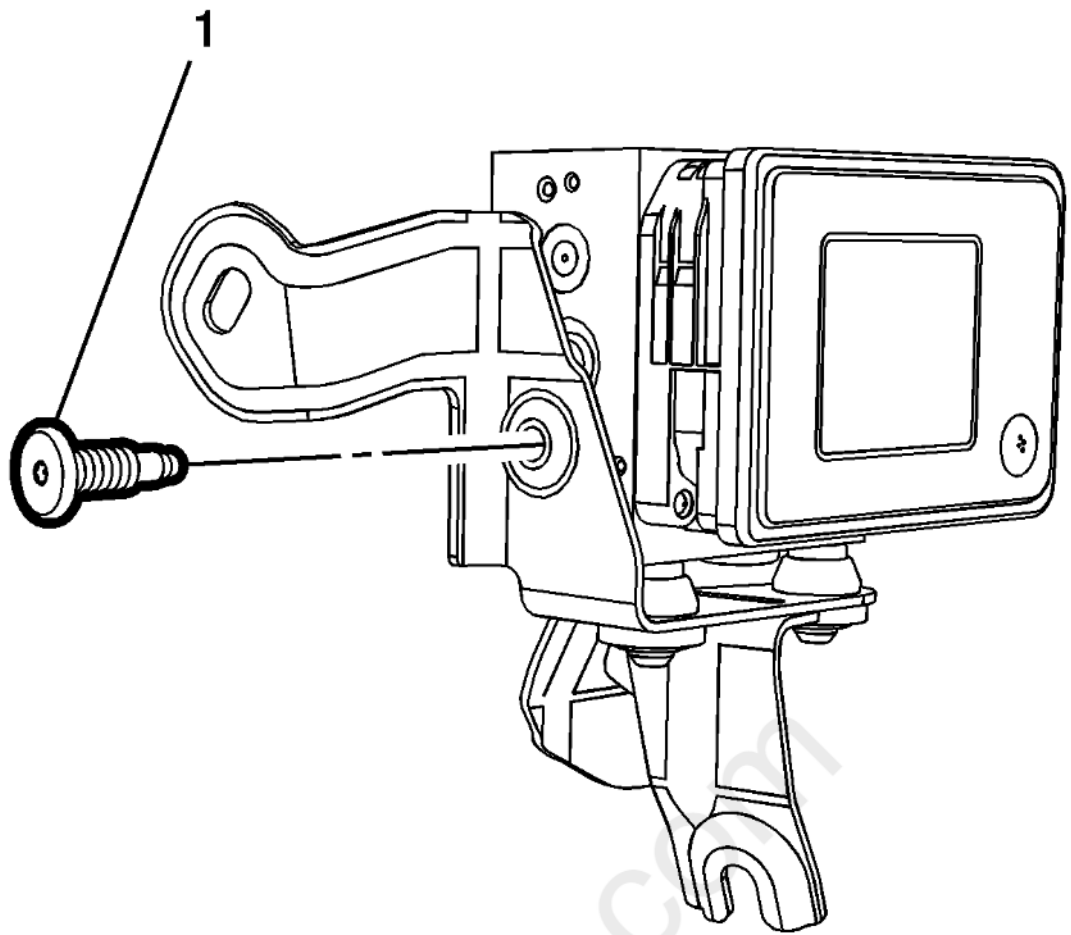


Fig. 19: BPMV Assembly Bracket Bolts
Courtesy of GENERAL MOTORS COMPANY

2. Remove the EBTCM assembly bracket bolt (1).
3. Carefully separate the EBTCM assembly from the bracket.

Installation Procedure

1. Install the EBTCM assembly to the bracket.

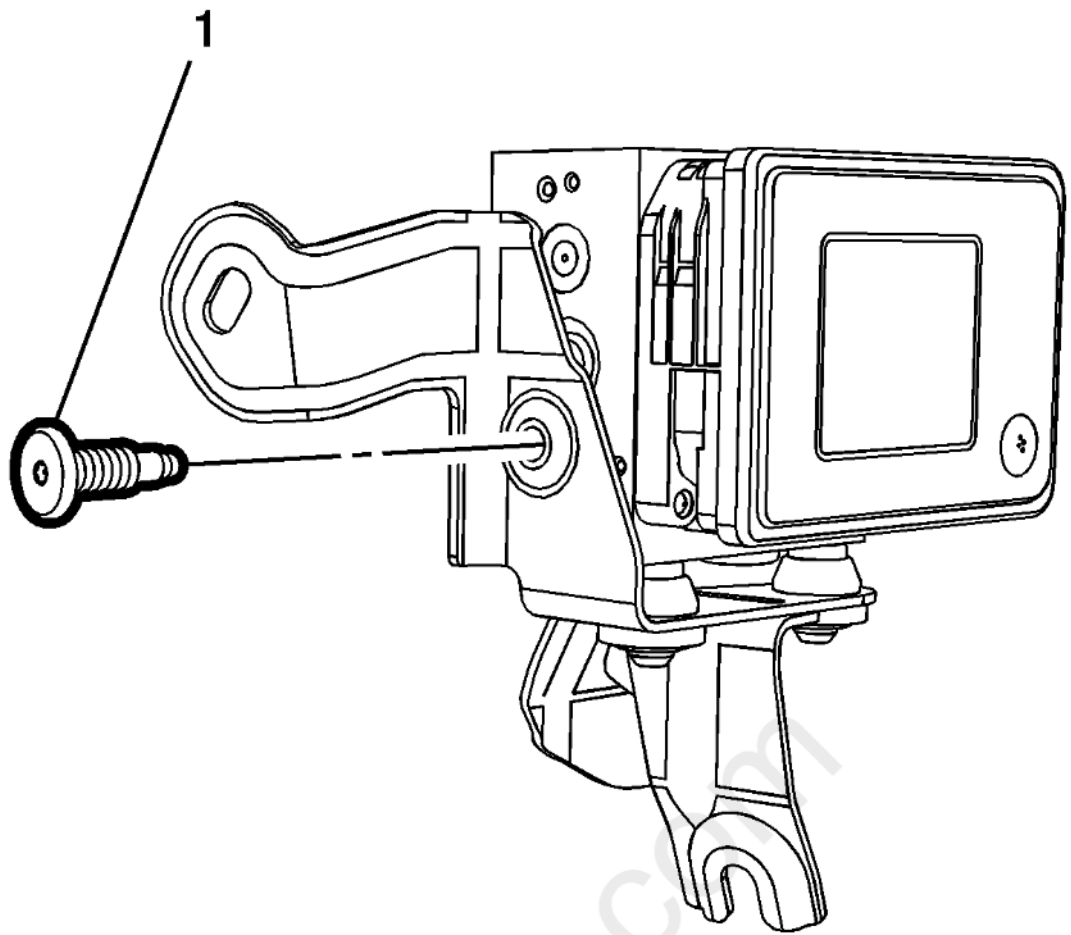


Fig. 20: BPMV Assembly Bracket Bolts
Courtesy of GENERAL MOTORS COMPANY

CAUTION: Refer to [Fastener Caution](#) .

2. Install the EBTCM assembly bracket bolt (1) and tighten to 10 N.m (89 lb in).
3. Install the EBTCM assembly. Refer to [Electronic Brake and Traction Control Module with Brake Pressure Modulator Valve Replacement](#).

FRONT WHEEL SPEED SENSOR REPLACEMENT

Removal Procedure

WARNING: Refer to [Brake Dust Warning](#) .

1. Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#) .
2. Remove the tire and wheel assembly. Refer to [Tire and Wheel Removal and Installation](#) .
3. Remove the front compartment splash shield. Refer to [Front Compartment Splash Shield Replacement](#) .
4. Clean the wheel speed sensor mounting area on the steering knuckle of any accumulated dirt and debris.

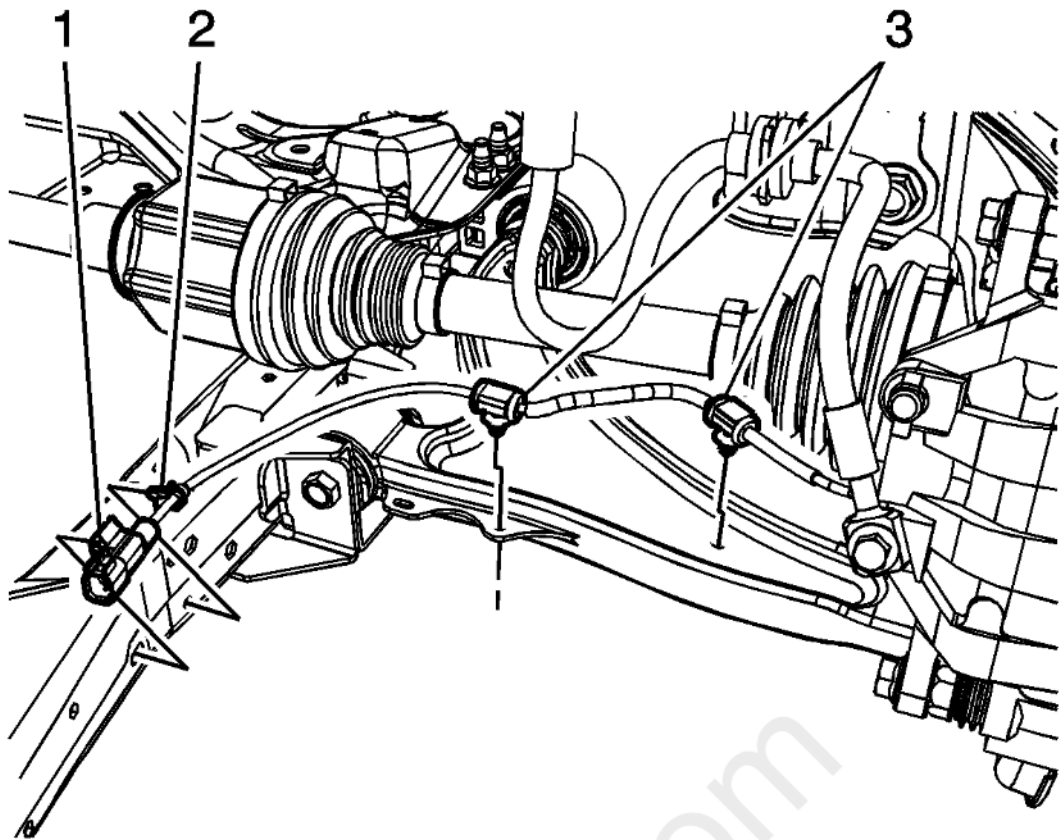


Fig. 21: Wheel Speed Sensor Electrical Connector & Harness Clips

Courtesy of GENERAL MOTORS COMPANY

5. Disconnect the wheel speed sensor electrical connector (1) and release the connector from the frame.
6. Release the harness clip (2) from the frame.
7. Release the harness clips (3) from the lower control arm.

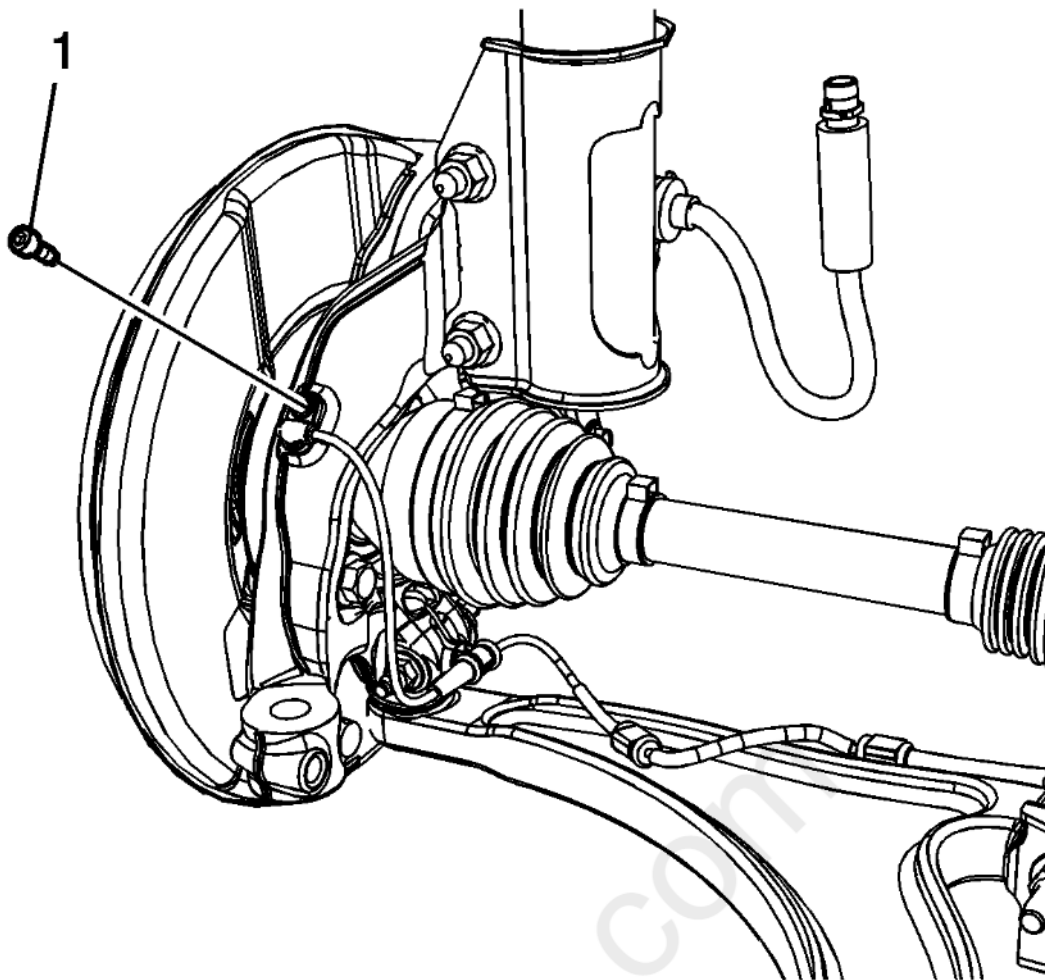


Fig. 22: Wheel Speed Sensor Bolt

Courtesy of GENERAL MOTORS COMPANY

8. Remove any accumulated dirt and debris from the surrounding the wheel speed sensor.
9. Remove the wheel speed sensor bolt (1).

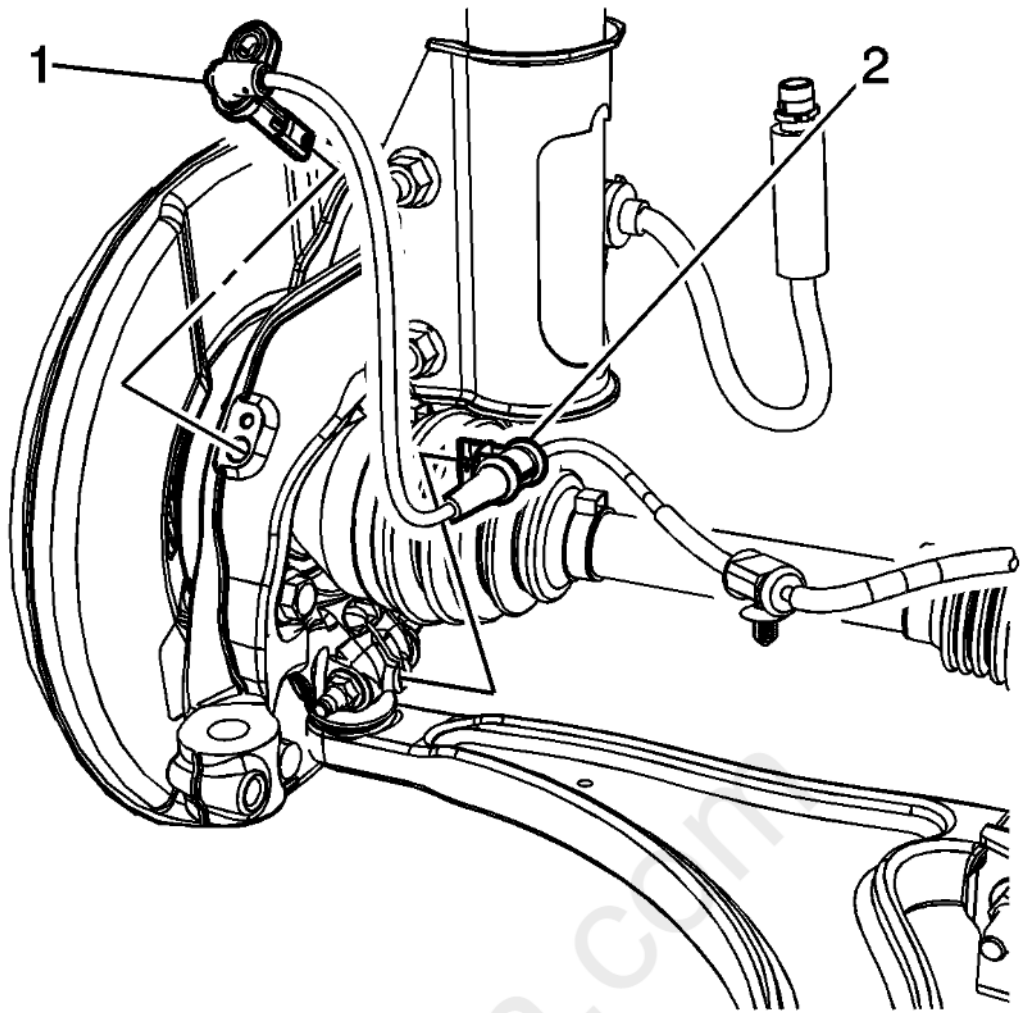


Fig. 23: Wheel Speed Sensor And Harness Clip

Courtesy of GENERAL MOTORS COMPANY

10. Remove the wheel speed sensor (1) from the steering knuckle.
11. Release the harness clip (2) from the steering knuckle and remove the wheel speed sensor.

Installation Procedure

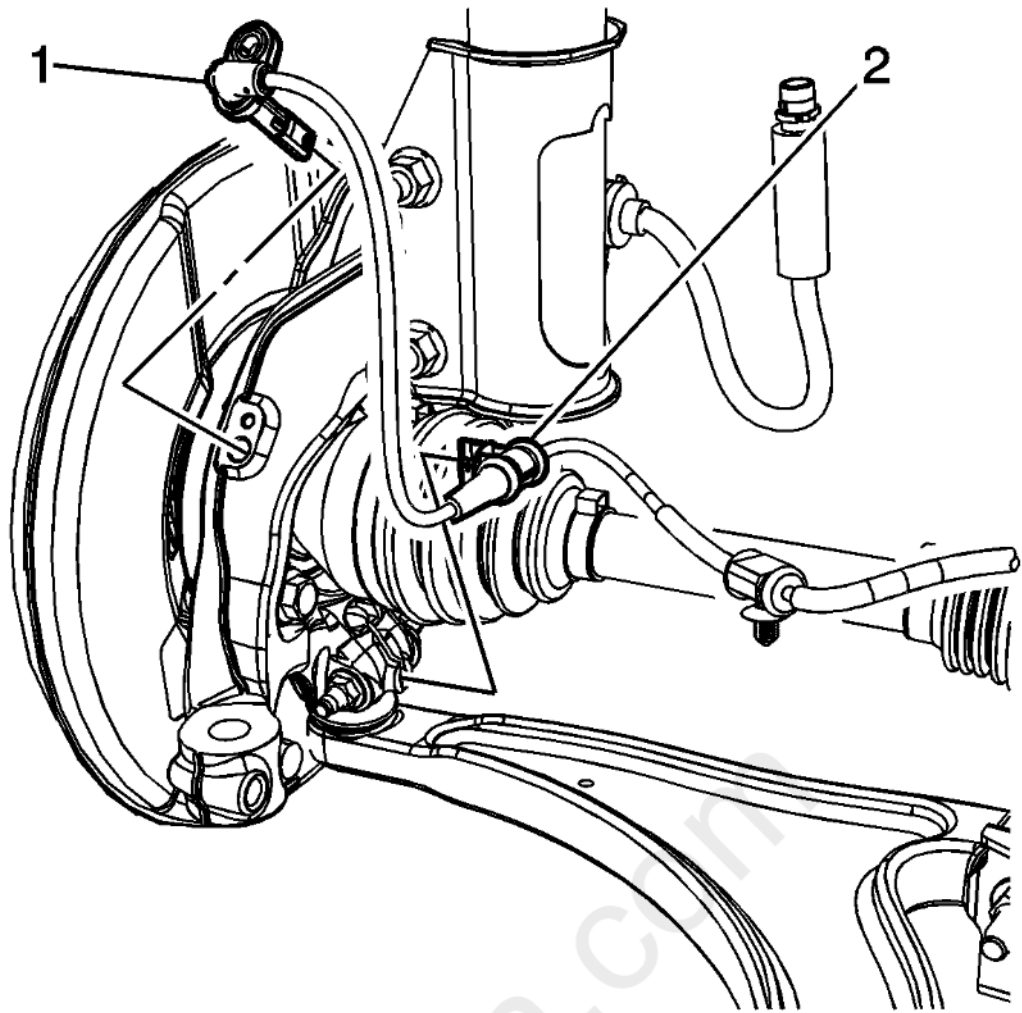


Fig. 24: Wheel Speed Sensor And Harness Clip

Courtesy of GENERAL MOTORS COMPANY

1. Install the wheel speed sensor (1) to the steering knuckle.
2. Install the harness clip (2) to the steering knuckle.

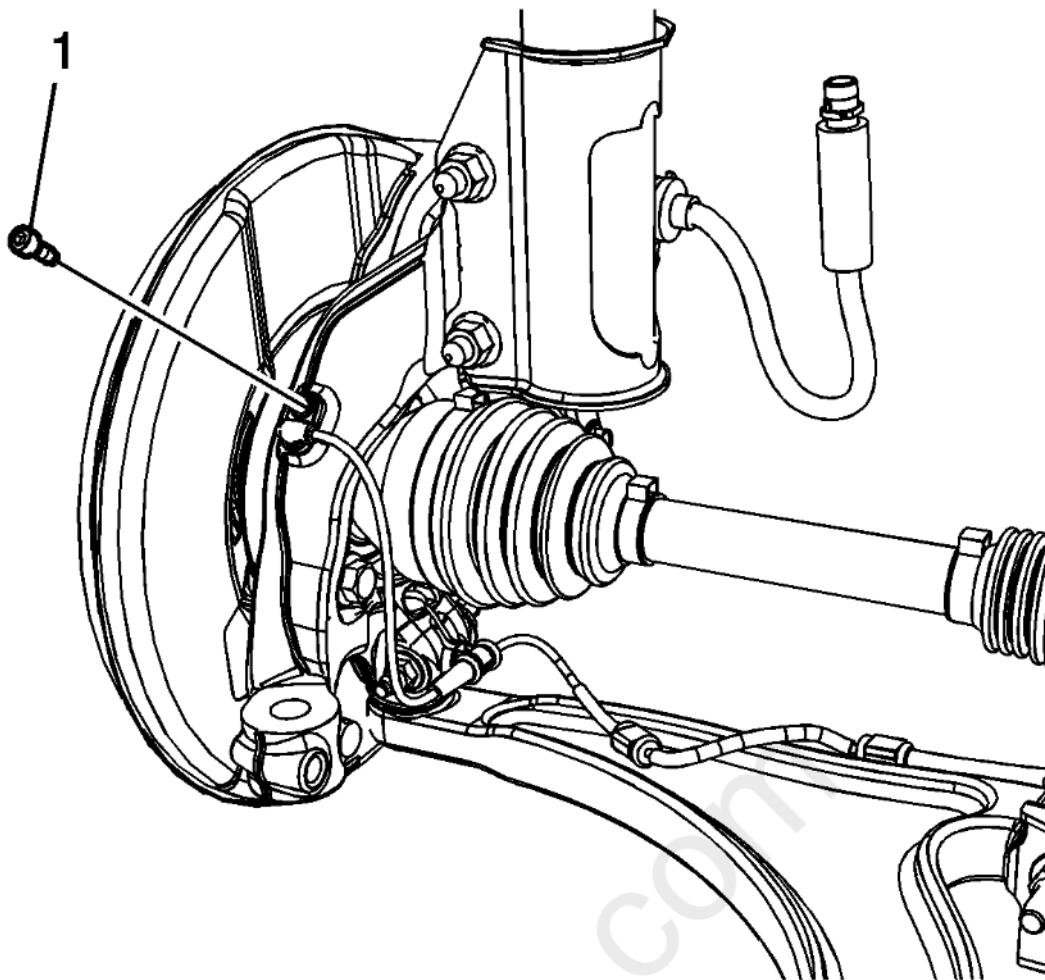


Fig. 25: Wheel Speed Sensor Bolt

Courtesy of GENERAL MOTORS COMPANY

CAUTION: Refer to **Fastener Caution** .

3. Install the wheel speed sensor bolt (1) and tighten to 9 N.m (80 lb in).

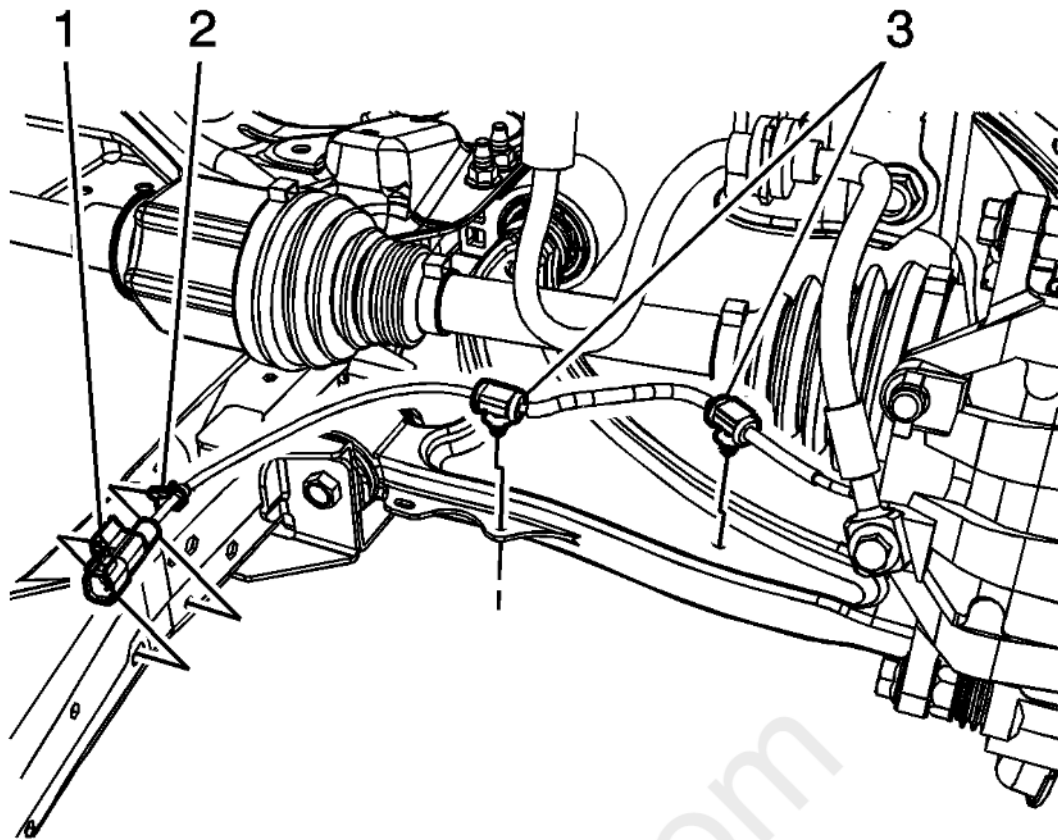


Fig. 26: Wheel Speed Sensor Electrical Connector & Harness Clips

Courtesy of GENERAL MOTORS COMPANY

4. Connect the wheel speed sensor electrical connector (1) and secure the connector to the frame.
5. Install the harness clip (2) to the frame.
6. Install the harness clips (3) to the lower control arm.
7. Install the front compartment splash shield. Refer to [Front Compartment Splash Shield Replacement](#).
8. Install the tire and wheel assembly. Refer to [Tire and Wheel Removal and Installation](#).
9. Perform the [Diagnostic System Check - Vehicle](#).

REAR WHEEL SPEED SENSOR REPLACEMENT

Removal Procedure

WARNING: Refer to [Brake Dust Warning](#).

1. Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#).
2. Remove the rear tire and wheel assembly. Refer to [Tire and Wheel Removal and Installation](#).
3. Remove the rear wheelhouse panel liner. Refer to [Rear Wheelhouse Liner Replacement](#).
4. Clean the wheel speed sensor mounting area on the suspension knuckle of any accumulated dirt and debris.

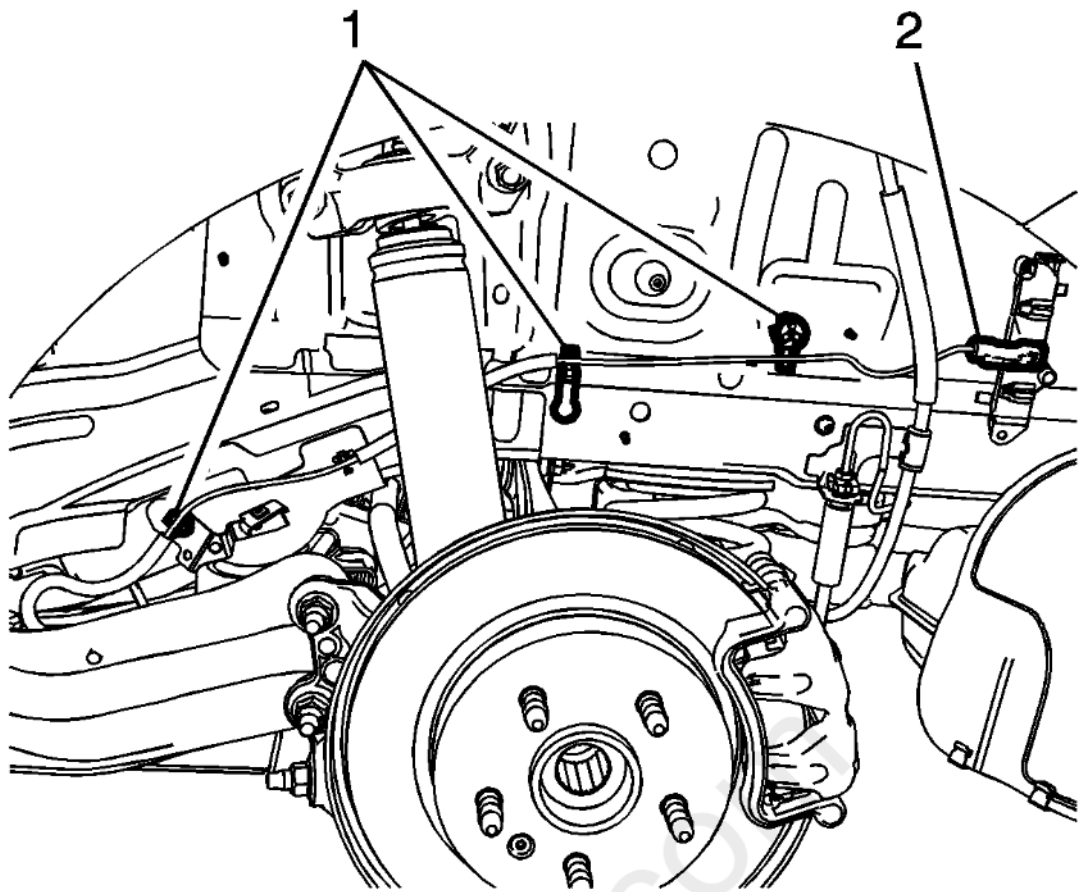


Fig. 27: Wheel Speed Sensor Harness Clips

Courtesy of GENERAL MOTORS COMPANY

5. Release the wheel speed sensor harness clips (1) from the wheelhouse panel.
6. Disconnect the wheel speed sensor harness electrical connector (2) and release the connector retainer from the bracket on the wheelhouse panel.

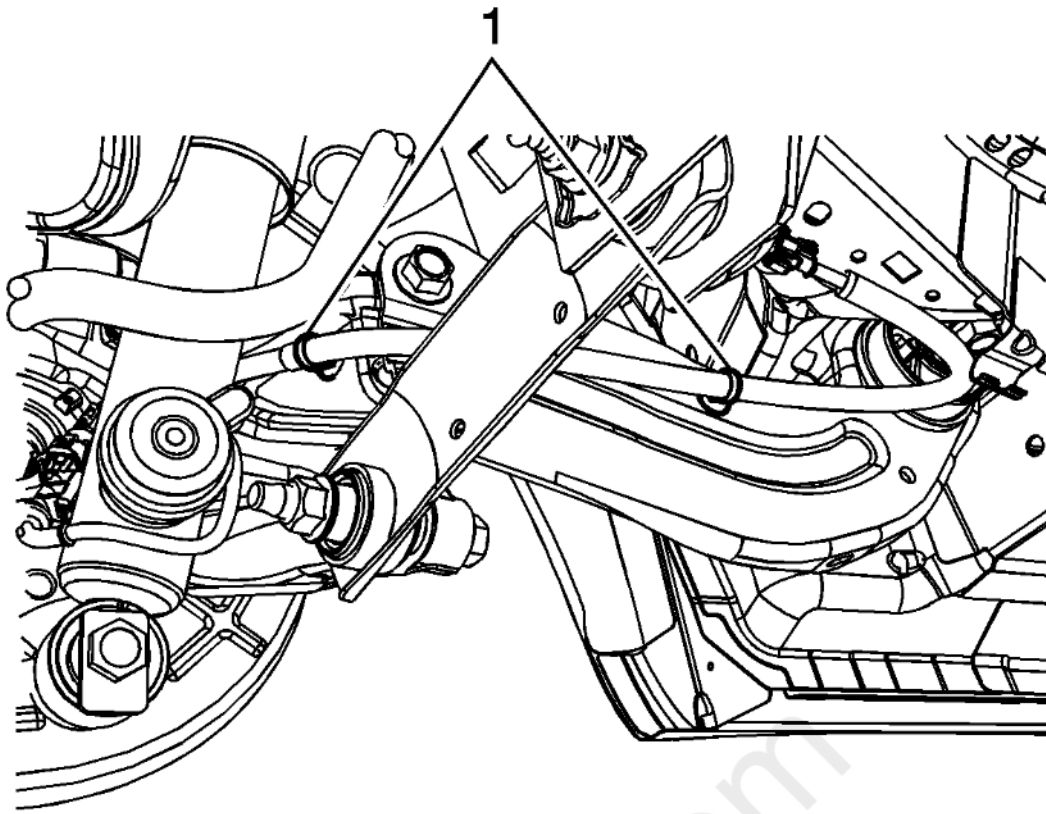


Fig. 28: Wheel Speed Sensor Harness Clips And Rear Suspension Bracket
Courtesy of GENERAL MOTORS COMPANY

7. Release the wheel speed sensor harness clips (1) from the rear suspension bracket.

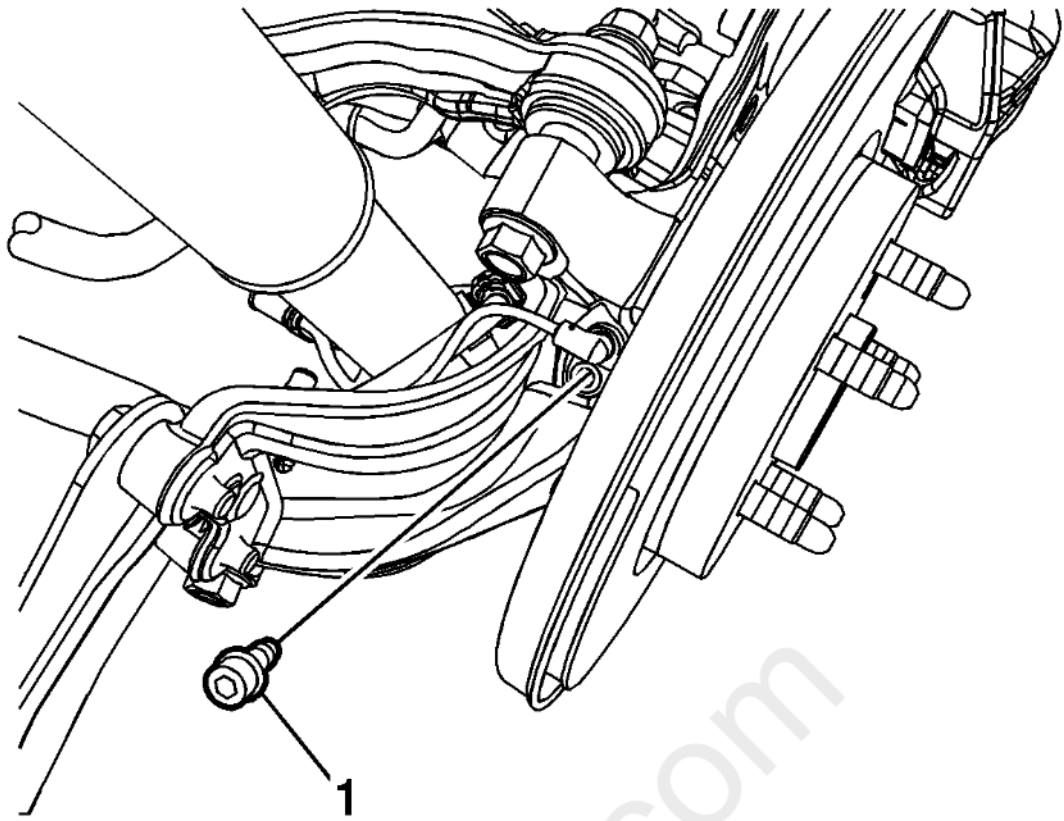


Fig. 29: Wheel Speed Sensor Bolt

Courtesy of GENERAL MOTORS COMPANY

8. Remove the wheel speed sensor bolt (1).
9. Remove the wheel speed sensor from the rear suspension knuckle.

Installation Procedure

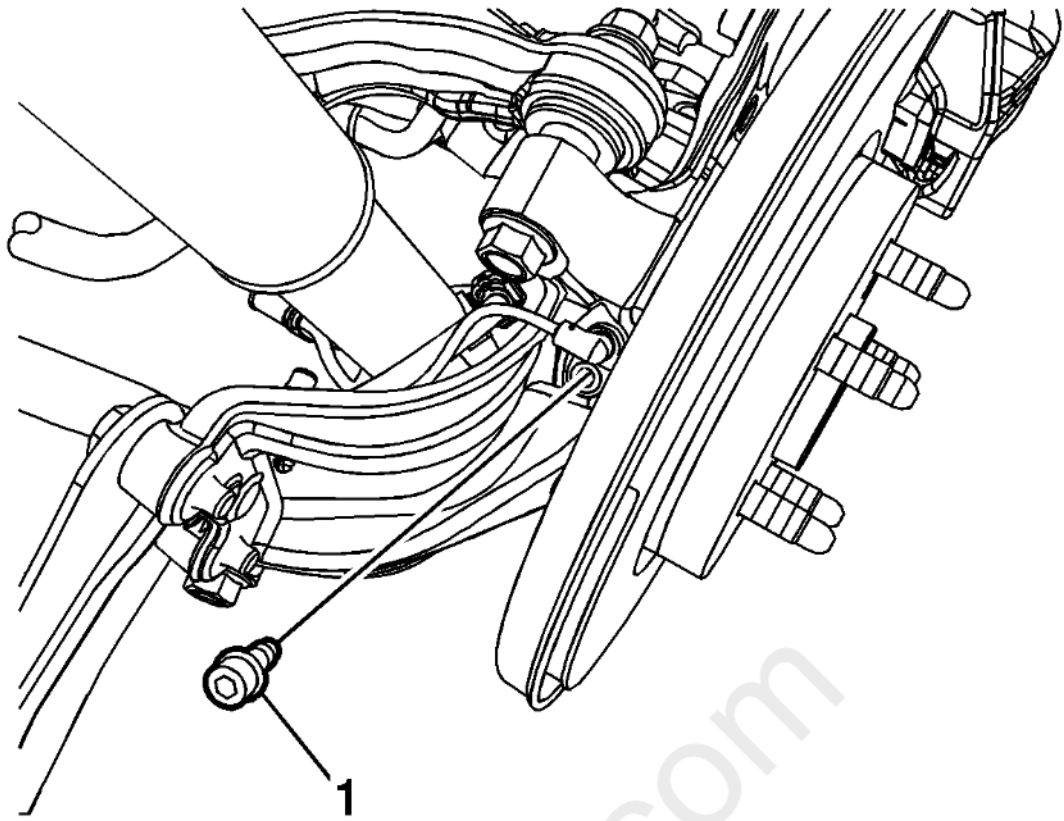


Fig. 30: Wheel Speed Sensor Bolt

Courtesy of GENERAL MOTORS COMPANY

1. Install the wheel speed sensor to the rear suspension knuckle.

CAUTION: Refer to **Fastener Caution** .

2. Install the wheel speed sensor bolt (1) and tighten to 9 N.m (80 lb in).

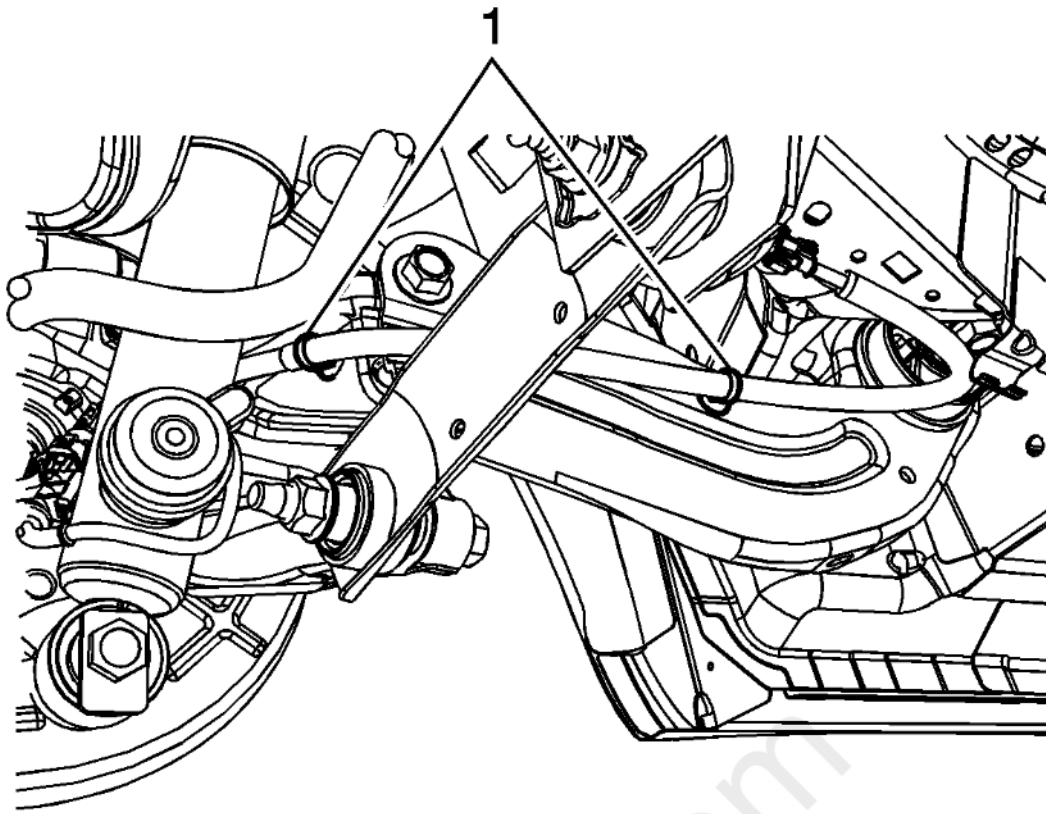


Fig. 31: Wheel Speed Sensor Harness Clips And Rear Suspension Bracket
Courtesy of GENERAL MOTORS COMPANY

3. Install the wheel speed sensor harness clips (1) to the rear suspension bracket.

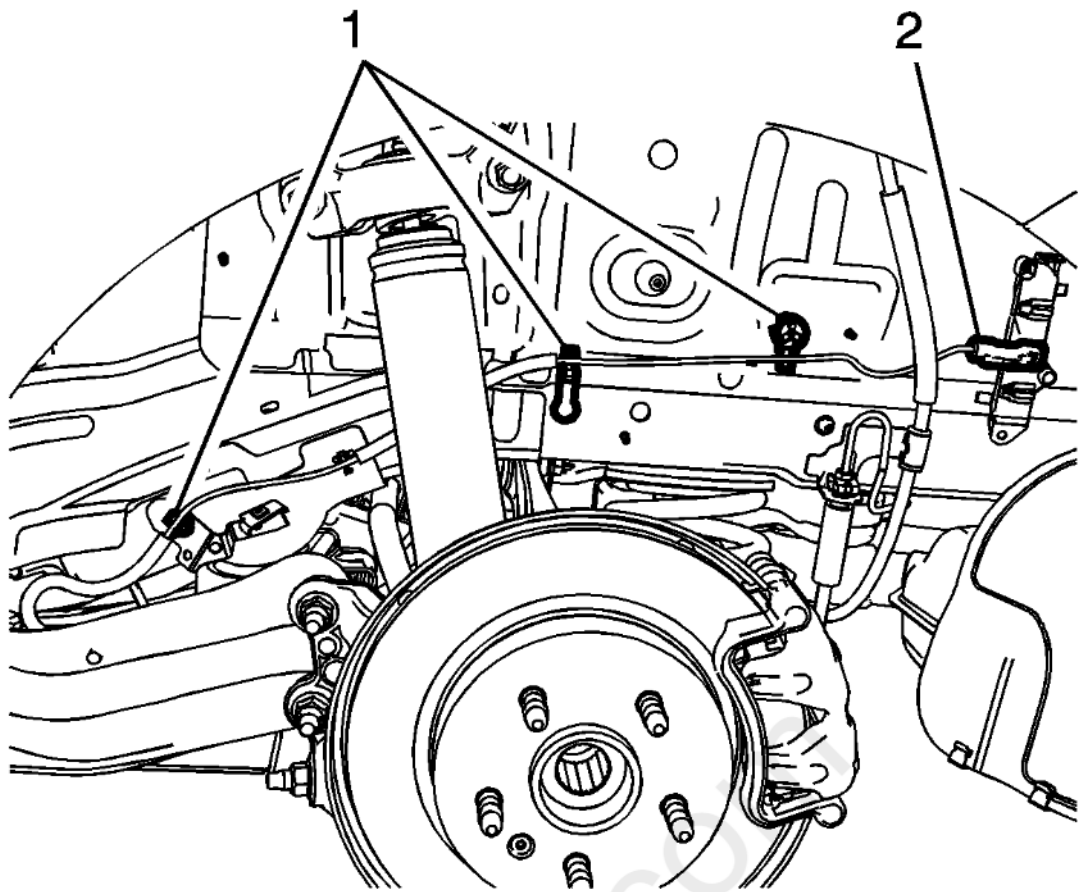


Fig. 32: Wheel Speed Sensor Harness Clips

Courtesy of GENERAL MOTORS COMPANY

4. Install the wheel speed sensor harness clips (1) to the wheelhouse panel.
5. Connect the wheel speed sensor harness electrical connector (2) and install the connector retainer to the bracket on the wheelhouse panel.
6. Install the rear wheelhouse panel liner. Refer to [**Rear Wheelhouse Liner Replacement**](#) .
7. Install the rear tire and wheel assembly. Refer to [**Tire and Wheel Removal and Installation**](#) .
8. Perform the [**Diagnostic System Check - Vehicle**](#) .

VEHICLE STABILITY CONTROL SYSTEM SWITCH REPLACEMENT

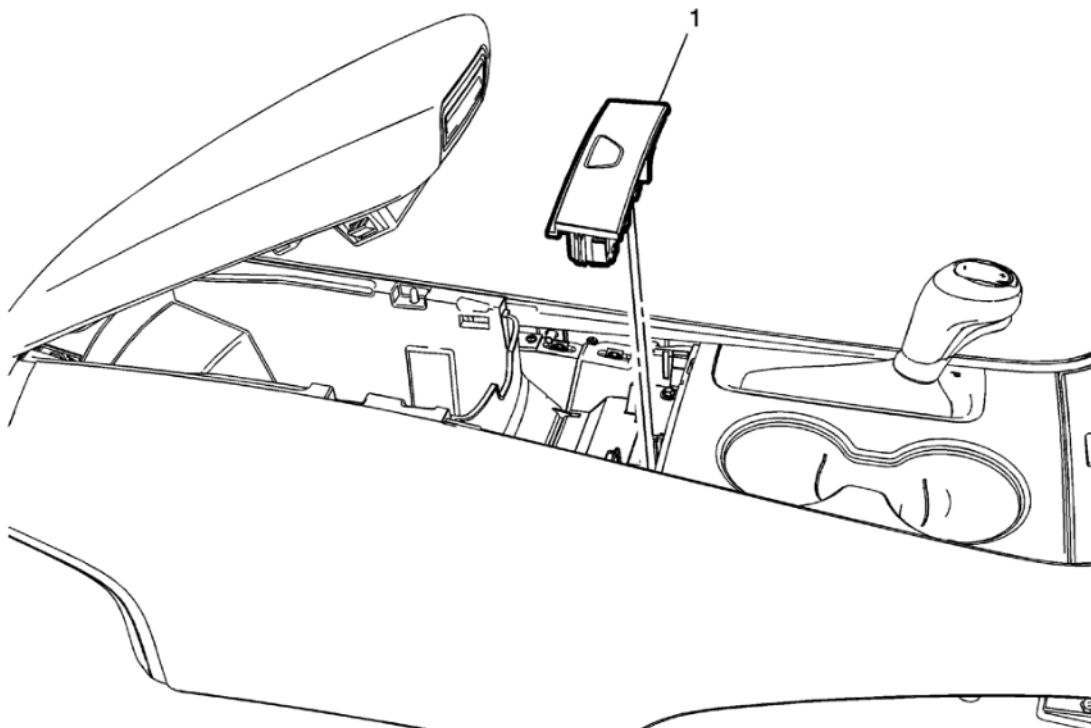


Fig. 33: Vehicle Stability Control System Switch
Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
Preliminary Procedure Remove the front floor console insert. Refer to Front Floor Console Insert Replacement .	
1	Vehicle Stability Control System Switch Procedure 1. Using the appropriate tool depress the tabs on the switch and gently remove. 2. Disconnect the electrical connector.

VEHICLE YAW SENSOR LEARN

The yaw rate sensor does not require calibration often. Calibrating the yaw rate sensor might be required after certain service procedures are performed. Some of these procedures are as follows:

- Yaw Rate Sensor replacement
- Electronic Brake Control Module replacement
- Inflatable Restraint Sensing and Diagnostic Module replacement

The yaw rate sensor learn procedure can be completed with a scan tool using the following steps:

1. Place vehicle on a level surface
2. Apply the parking brake, or set the transmission in the Park position.
3. Install the scan tool to the data link connector.
4. Ignition ON, engine OFF.
5. Select Yaw Rate Sensor Learn in the Electronic Brake Control Module Configuration/Reset Functions list.
6. Follow the scan tool directions to complete the calibration procedure.
7. Clear any DTCs that may be set.

DESCRIPTION AND OPERATION

ABS DESCRIPTION AND OPERATION

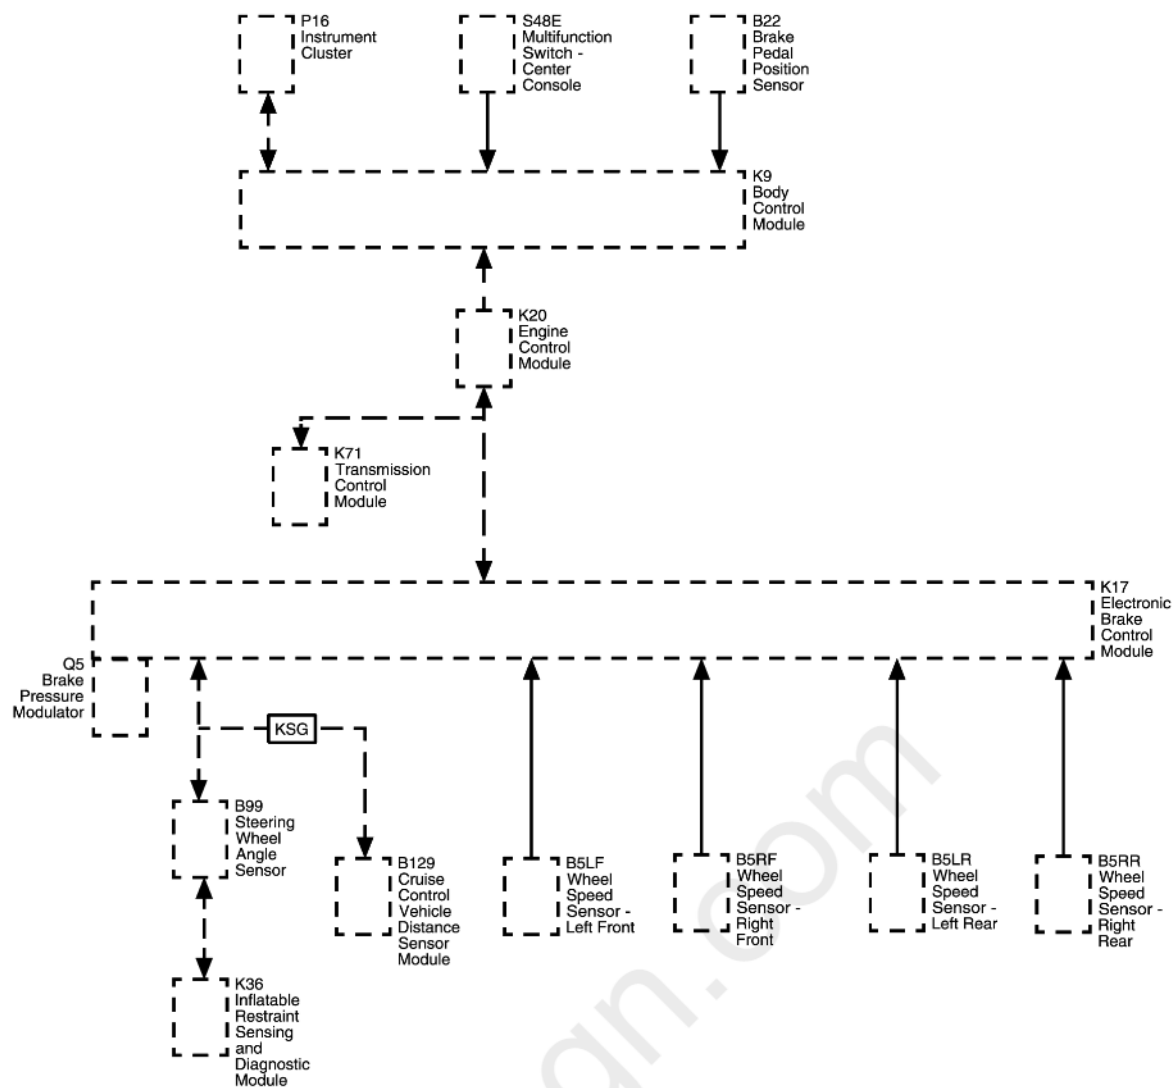


Fig. 34: TRW EBC460 Block Diagram

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
KSG	CRUISE CONTROL: AUTOMATIC, ADAPTIVE, WITH STOP/GO
P16	P16 Instrument Cluster
S48E	S48E Multifunction Switch - Center Console
B22	B22 Brake Pedal Position Sensor
K9	K9 Body Control Module
K20	K20 Engine Control Module
K71	K71 Transmission Control Module
K17	K17 Electronic Brake Control Module
Q5	Q5 Brake Pressure Modulator
B5RR	B5RR Wheel Speed Sensor - Right Rear
B5LR	B5LR Wheel Speed Sensor - Left Rear
B5RF	B5RF Wheel Speed Sensor - Right Front
B5LF	B5LF Wheel Speed Sensor - Left Front
B129	B129 Cruise Control Vehicle Distance Sensor Module
B99	B99 Steering Wheel Angle Sensor
K36	K36 Inflatable Restraint Sensing and Diagnostic Module

This vehicle is equipped with a TRW EBC460 brake system. The electronic brake control module and the brake pressure modulator are serviced separately. The brake pressure modulator uses a four circuit configuration to control hydraulic pressure to each wheel independently.

Depending on options, the following vehicle performance enhancement systems are provided.

- ABS
- Traction control
- Stability control
- Dynamic rear proportioning
- Hill hold start assist
- Cornering brake control
- Hydraulic Brake Assist
- Optimized Hydraulic Braking System
- Intelligent brake assist
- Trailer stability assist

The following components listed below are involved in the operation of the brake system:

- Electronic brake control module - The electronic brake control module controls the system functions and detects failures. It supplies voltage to the solenoid valves and pump motor.
- Brake pressure modulator - The brake pressure modulator contains the following components:
 - Brake pressure sensor
 - Hydraulic pump with pump motor
 - Four isolation valves
 - Four dump valves
 - Two traction/stability control supply valves
 - Two traction/stability control isolation valves
 - High pressure accumulator
 - Low pressure accumulator
- Body control module monitors the brake pedal position sensor signal when the brake pedal is applied and sends a high speed serial data message to the electronic brake control module indicating the brake pedal position.
- Brake pressure sensor is used to sense the action of the driver application of the brake pedal. The sensor provides an analog voltage signal that will increase as the brake pedal is applied. The electronic brake control module monitors the brake pressure sensor which is integral to the brake pressure modulator.
- Instrument cluster - The instrument cluster displays the vehicle speed based on the information from the engine control module. The engine control module sends the vehicle speed information via a high speed serial data to the body control module. The body control module then sends the vehicle speed information via a low speed serial data to the instrument cluster in order to display the vehicle speed, either in kilometers or miles, based on the vehicle requirements.
- Multi-axis acceleration sensor - The yaw rate, lateral acceleration and longitudinal acceleration sensors are combined into one multi-axis acceleration sensor, internal to the inflatable restraint sensing and diagnostic module. The electronic brake control module receives serial data message inputs from the yaw rate, lateral acceleration and longitudinal acceleration sensor and activates stability control and hill hold start assist function depending on multi-axis acceleration sensor input.
- Multifunction switch - The traction control switch is a multifunction momentary switch. The body control module monitors the signal circuit from the traction control switch and sends a high speed serial data message to the electronic brake control module indicating the switch position. The traction control and stability control are manually disabled or enabled by pressing the traction control switch.
- Steering wheel angle sensor - The electronic brake control module receives serial data message inputs from the steering angle sensor. The steering wheel angle sensor signal is used to calculate the intended driving direction.
- Transmission control module - The electronic brake control module receives high speed serial data message inputs from the transmission control module indicating the gear position of the transmission for hill start assist or hill hold functions.

- Active wheel speed sensors - The electronic brake control module supplies a ignition voltage to each wheel speed sensor. As the wheel spins, the wheel speed sensor produces an alternating current square wave signal. The electronic brake control module uses the frequency of the square wave signal to calculate the wheel speed. The electronic brake control module sends the wheel speed information via high speed serial data to the engine control module.

Power-Up-Self Test

The electronic brake control module is able to detect many malfunctions whenever the ignition is ON. However, certain failures cannot be detected unless active diagnostic tests are performed on the components. Shorted solenoid coil or motor windings, for example, cannot be detected until the components are commanded ON by the electronic brake control module. Therefore, a power-up self-test is performed to verify correct operation of system components. The electronic brake control module performs the first phase of the power-up self-test when the ignition is first turned ON. This phase consists of internal self-testing of the electronic brake control module along with electrical checks of system sensors and circuits.

Initialization Sequence

The initialization sequence cycles each solenoid valve and the pump motor, as well as the necessary relays, for approximately forty milliseconds to check component operation. One of the checks performed is the adaptive pressure calibration that occurs when the engine is running and the brake pedal is not applied. The adaptive pressure calibration will cycle each of the six isolation valves to verify valve operation. The initialization sequence may be heard and felt while it is taking place, and is considered part of normal system operation. The active test is initiated by the electronic brake control module at the start of the ignition cycle and the speed of the fastest wheel exceeds 16 km/h (10 MPH). If a fault condition is detected the electronic brake control module sets a DTC.

ABS

When wheel slip is detected during a brake application, an ABS event occurs. During ABS braking, hydraulic pressure in the individual wheel circuits is controlled to prevent any wheel from slipping. A separate hydraulic line and specific solenoid valves are provided for each wheel. The ABS can decrease, hold, or increase hydraulic pressure to each wheel. The ABS does not, however, increase hydraulic pressure above the amount which is transmitted by the master cylinder during braking.

During ABS braking, a series of rapid pulsations is felt in the brake pedal. These pulsations are caused by the rapid changes in position of the individual solenoid valves as the electronic brake control module responds to wheel speed sensor inputs and attempts to prevent wheel slip. These pedal pulsations are present only during ABS braking and stop when normal braking is resumed or when the vehicle comes to a stop. A ticking or popping noise may also be heard as the solenoid valves cycle rapidly. During ABS braking on dry pavement, intermittent chirping noises may be heard as the tires approach slipping. These noises and pedal pulsations are considered normal during ABS operation.

Vehicles equipped with ABS may be stopped by applying normal force to the brake pedal. Brake pedal operation during normal braking is no different than that of previous non-ABS systems. Maintaining a constant force on the brake pedal provides the shortest stopping distance while maintaining vehicle stability. The typical ABS activation sequence is as follows.

Pressure Hold

The electronic brake control module closes the isolation valve and keeps the dump valve closed in order to isolate the slipping wheel when wheel slip occurs. This holds the pressure steady on the brake so that the hydraulic pressure does not increase or decrease.

Pressure Decrease

If a pressure hold does not correct the wheel slip condition, a pressure decrease occurs. The electronic brake control module decreases the pressure to individual wheels during deceleration when wheel slip occurs. The isolation valve is closed and the dump valve is opened. The excess fluid is stored in the accumulator until the pump can return the fluid to the master cylinder or fluid reservoir.

Pressure Increase

After the wheel slip is corrected, a pressure increase occurs. The electronic brake control module increases the pressure to individual wheels during deceleration in order to reduce the speed of the wheel. The isolation valve is opened and the dump valve is closed. The increased pressure is delivered from the master cylinder.

Traction Control

When drive wheel slip is noted, the electronic brake control module will enter traction control mode.

First, the electronic brake control module requests the engine control module to reduce the amount of torque to the drive wheels via a serial data message. The engine control module reduces torque to the drive wheels and reports the amount of delivered torque.

If the engine torque reduction does not reduce drive wheel slip, the electronic brake control module will actively apply the brakes on the slipping drive wheel. During traction control braking, hydraulic pressure in each drive wheel circuit is controlled to prevent the drive wheels from slipping. The electronic brake control module commands the pump motor and appropriate solenoid valves ON and OFF to apply brake pressure to the slipping wheel.

Stability Control

Stability control provides added stability during aggressive maneuvers. Yaw rate is the rate of rotation about the vehicle's vertical axis. The stability control is activated when the electronic brake control module determines that the desired yaw rate does not match the actual yaw rate as measured by the yaw rate sensor.

The desired yaw rate is calculated by the electronic brake control module using the following inputs:

- Steering wheel position
- Vehicle speed
- Lateral acceleration

The difference between the desired yaw rate and the actual yaw rate is the yaw rate error, which is a measurement of oversteer or understeer. When a yaw rate error is detected, the electronic brake control module attempts to correct the vehicle's yaw motion by applying brake pressure to one or more of the wheels. The amount of applied brake pressure varies, depending on the correction required. The engine torque may be reduced also, if it is necessary to slow the vehicle while maintaining stability.

Stability control activations generally occur in turns during aggressive driving. When braking during stability control activation, the brake pedal may pulsate.

Dynamic Rear Proportioning

The dynamic rear proportioning is a control system that replaces the mechanical proportioning valve. Under certain driving conditions the electronic brake control module will reduce the rear wheel brake pressure by commanding the appropriate solenoid valves ON and OFF.

Hill Hold Start Assist

The hill hold start assist allows the driver to launch the vehicle without a roll back while moving the foot from the brake pedal to the accelerator pedal. The electronic brake control module calculates the brake pressure, which is needed to hold the vehicle on an incline and locks that pressure for a certain time by commanding the appropriate solenoid valves ON and OFF when the brake pedal is released. Hill hold start assist is activated when the electronic brake control module determines that the driver wishes to move the vehicle up-hill, either backwards or forwards.

The following inputs are used for hill hold start assist feature:

- Accelerator pedal position
- Brake switch
- Brake pressure
- Clutch switch, if equipped
- Engine torque

- Longitudinal acceleration
- Reverse gear information
- Vehicle speed

Cornering Brake Control

Cornering brake control is a slip control function that is intended to improve the vehicle's lateral/yaw stability during combined braking and cornering situations.

The electronic brake control module will reduce the brake pressure to the inside wheels by commanding the appropriate solenoid valves ON and OFF.

Hydraulic Brake Assist

The hydraulic brake assist function is designed to support the driver in emergency braking situations.

The electronic brake control module receives inputs from the brake pressure sensor. When the electronic brake control module senses an emergency braking situation, the electronic brake control module will actively increase the brake pressure to a specific maximum.

Intelligent Brake Assist

The intelligent brake assist function is designed to provide limited braking to help prevent front and rear low speed collisions.

The electronic brake control module receives inputs from the brake pedal position sensor, wheel speed sensors, short range radar and ultrasonic sensors to detect a collision. When the electronic brake control module senses a possible collision, it will actively increase the hydraulic brake pressure to apply the brakes.

Optimized Hydraulic Braking System

With some engines the electronic brake control module monitors the vacuum in the brake booster with a vacuum sensor and controls a brake booster vacuum pump depending on vacuum sensor input. It also has a hydraulic brake boost feature which supplements the brake system to maintain consistent brake performance under conditions of low brake booster vacuum. Low brake booster vacuum conditions can include initial start up after the vehicle has been parked for several hours, very frequent brake stops, or high altitude driving. The hydraulic brake boost system activates only during a brake apply under low vacuum conditions. In this case the electronic brake control module will actively increase and control the hydraulic brake pressure by turning the pump motor ON and the appropriate solenoid valves ON and OFF. When hydraulic brake boost is active, a series of rapid pulsations is felt in the brake pedal.

Trailer Stability Assist

The trailer stability assist will detect any vehicle yaw instability, caused by an attached trailer. When instability is detected, the electronic brake control module attempts to correct the vehicle's yaw motion by applying brake pressure to one or more of the wheels. The engine torque may be reduced also, if it is necessary to slow down the vehicle.

Driver Information Indicators

ABS Indicator

The instrument cluster turns the ABS indicator ON when the following occurs:

- The instrument cluster performs the bulb check.
- The electronic brake control module detects a malfunction which disables the ABS and sends a serial data message to the instrument cluster requesting illumination.

Brake Warning Indicator

The instrument cluster turns the brake warning indicator ON when the following occurs:

- The instrument cluster performs the bulb check.

- The electronic brake control module detects a faulty pump motor, solenoid valves, an internal hardware failure or a too high or too low battery voltage and sends a serial data message to the instrument cluster requesting illumination.
- The body control module detects that the parking brake is engaged. The instrument cluster receives a serial data message from the body control module requesting illumination.

Traction Control Off Indicator

The instrument cluster turns the traction control off indicator ON when the following occurs:

- The instrument cluster performs the bulb check.
- The driver manually disables the traction control by pressing the traction control switch. The electronic brake control module sends a serial data message to the instrument cluster requesting illumination.

Stability Control Off Indicator

The instrument cluster turns the stability control off indicator ON when the following occurs:

- The instrument cluster performs the bulb check.
- The driver manually disables the stability control by pressing and holding the traction control switch for five seconds. The electronic brake control module sends a serial data message to the instrument cluster requesting illumination.

Traction/Stability Control Indicator


The instrument cluster turns the traction/stability control indicator ON when the following occurs:

- The instrument cluster performs the bulb check.
- The electronic brake control module detects a fault or malfunction in the traction control/stability control system and sends a serial data message to the instrument cluster requesting illumination.

SPECIAL TOOLS AND EQUIPMENT

SPECIAL TOOLS

Illustration	Tool Number/ Description

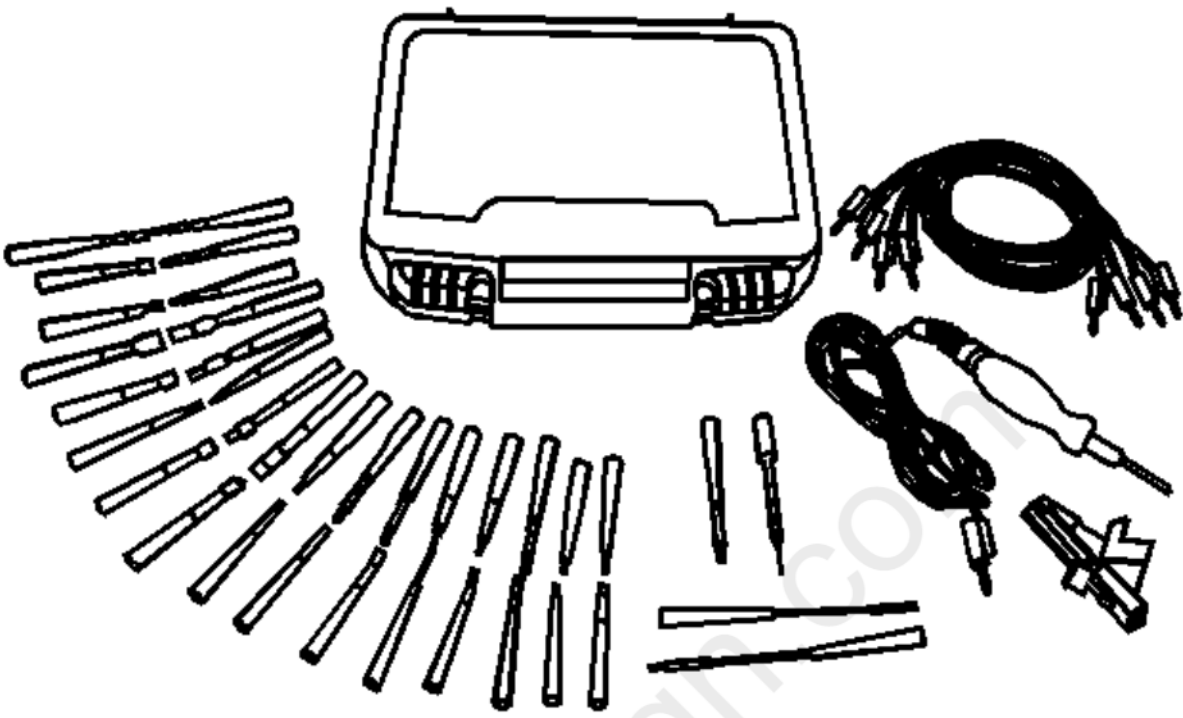Illustration	Tool Number/ Description
	EL 35616-F J 35616 Terminal Test Kit