

2017 SUSPENSION

Tire Pressure Monitoring - CT6

SPECIFICATIONS

FASTENER SPECIFICATIONS

Single Use Threaded Fastener/Component Tightening Specifications

NOTE: <i>All fasteners/components listed in this table MUST BE DISCARDED and replaced with NEW after removal.</i>	
Application	Specification
	Metric (English)
TORX™ Screw	4 N.m (35 lb in)

DIAGNOSTIC INFORMATION AND PROCEDURES

DTC C0569: SYSTEM CONFIGURATION MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC C0569 00

System Configuration Malfunction

Circuit/System Description

If the tire type and pressure information is not entered during the body control module (BCM) setup, the tire pressure monitor system indicator icon on the instrument cluster will flash for 1 min and then remain illuminated after the ignition is cycled ON and the instrument cluster bulb check is complete. If equipped, the driver information center will also display a service tire monitor type message. Under these circumstances, DTC C0569 will be set and the tire type and pressure information will need to be entered for the system to function correctly.

Conditions for Running the DTC

Ignition On/Vehicle in Service Mode.

Conditions for Setting the DTC

The tire type and pressure information is not entered into the BCM during programming and setup.

Action Taken When the DTC Sets

- The tire pressure monitor system indicator icon on the instrument cluster flashes for 1 min and then remains illuminated after the ignition switch is cycled ON and the instrument cluster bulb check is complete.
- If equipped, the driver information center displays a service tire monitor type message.

Conditions for Clearing the DTC

A current DTC will clear when the BCM has undergone the tire type and pressure selection setup procedure and one ignition cycle has occurred.

Diagnostic Aids

A newly replaced BCM will set DTC C0569 after programming on its initial ignition ON cycle if the module setup information has not been entered.

Reference Information

Description and Operation

Tire Pressure Monitor Description and Operation

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

1. Ignition On/Vehicle in Service Mode.
2. Enter the tire type and pressure information into the K9 Body Control Module with a scan tool. Refer to **Vehicle Certification, Tire Placard, Anti-Theft and Service Parts ID Label**.
3. Ignition OFF, then Ignition On/Vehicle in Service Mode.
4. Verify DTC C0569 is not set.
 - **If the DTC is set**
Replace the K9 Body Control Module.
 - **If the DTC is not set.**
5. All OK.

Repair Instructions

Perform the **Diagnostic Repair Verification** after completing the repair.

Control Module References for control module replacement, programming and setup.

DTC C0750, C0755, C0760 OR C0765: LEFT/RIGHT FRONT/REAR TIRE PRESSURE SENSOR

Diagnostic Instructions

- Perform the **Diagnostic System Check - Vehicle** prior to using this diagnostic procedure.
- Review **Strategy Based Diagnosis** for an overview of the diagnostic approach.
- **Diagnostic Procedure Instructions** provides an overview of each diagnostic category.

DTC Descriptors

DTC C0750 03

Left Front Tire Pressure Sensor Low Voltage

DTC C0750 29

Left Front Tire Pressure Sensor Too Few Pulses

DTC C0750 39

Left Front Tire Pressure Sensor Internal Malfunction

DTC C0755 03

Right Front Tire Pressure Sensor Low Voltage

DTC C0755 29

Right Front Tire Pressure Sensor Too Few Pulses

DTC C0755 39

Right Front Tire Pressure Sensor Internal Malfunction

DTC C0760 03

Left Rear Tire Pressure Sensor Low Voltage

DTC C0760 29

Left Rear Tire Pressure Sensor Too Few Pulses

DTC C0760 39

Left Rear Tire Pressure Sensor Internal Malfunction

DTC C0765 03

Right Rear Tire Pressure Sensor Low Voltage

DTC C0765 29

Right Rear Tire Pressure Sensor Too Few Pulses

DTC C0765 39

Right Rear Tire Pressure Sensor Internal Malfunction

Circuit/System Description

The tire pressure monitor system has a radio frequency (RF) transmitting pressure sensor in each wheel/tire assembly. As vehicle speed increases, centrifugal force puts the sensor into Drive mode. The sensors send the tire pressure data to the remote control door lock receiver (RCDLR) which in turn translates the received sensor data into sensor presence, sensor mode and tire pressure before passing it onto the body control module (BCM). Once vehicle speed is greater than 40 km/h (25 MPH), the BCM waits for the first sensor to go into Drive mode, then checks if all sensors have gone into Drive mode. If one or more sensors does not go into these modes or does not transmit at all, the BCM will set DTC C0750, C0755, C0760 or C0765 respectively.

Conditions for Running the DTC

Vehicle speed is greater than 40 km/h (25 MPH).

Conditions for Setting the DTC

- A sensor does not transmit or transmits invalid data to the BCM.
- A sensor low battery condition.

Action Taken When the DTC Sets

- The tire pressure monitor system indicator icon on the instrument cluster flashes for 1 min and then remains illuminated after the ignition switch is cycled ON and the instrument cluster bulb check is complete.
- If equipped, the driver information center displays a service tire monitor type message.

Conditions for Clearing the DTC

A current DTC will clear when the malfunction is no longer present and one ignition cycle occurs.

Diagnostic Aids

- Some aftermarket wheel valve stem holes are located further from the wheel rim than original equipment wheels. When using the tire pressure monitor special tool to activate a sensor, ensure the tool is placed along the tire sidewall and no further than 15 cm (6 in) from the sensor and the antenna is aiming upward.
- Aftermarket wheel valve system locations can cause a sensor to not function correctly.
- A sensor may have been damaged due to a previous wheel/tire service or flat tire event.
- The use of other than GM approved tire sealants can obstruct the sensor pressure sensing port and cause inaccurate tire pressure readings. If this condition is verified, remove the sealer from the tire and replace the sensor. Refer to [Tire Pressure Indicator Sensor Replacement](#).
- Occasionally sensor transmissions are not received by the BCM due to vehicle level radio frequency interference from items such as but not limited to aftermarket ignition systems, DVD players, CB radios or metallic type window tinting.
- The sensor activation procedure may have to be repeated up to 3 times before determining a sensor is malfunctioning. In the event a particular sensor information is displayed on the special tool upon activation but the horn does not chirp, it may be necessary to rotate the wheel valve stem to a different position due to the RF signal being blocked by another component.
- Occasionally sensors can become mislocated due to previous tire rotations where the sensor learn procedure was not performed. Always learn the sensors to ensure the DTC set is for that actual physical corner of the vehicle. Refer to [Tire Pressure Indicator Sensor Learn](#).
- A sensor low battery condition will set a sensor DTC but will not illuminate the low tire pressure indicator or display a message on the driver information center, if equipped. The sensor battery condition can be verified in the scan tool BCM data list. If a sensor low battery condition is indicated on the scan tool, the sensor will need to be replaced. Refer to [Tire Pressure Indicator Sensor Replacement](#).
- The Hit Rate of the sensor will help confirm the success rate at which the sensor transmission is being received. A low Hit Rate will signal that there may be interference.

Reference Information

Description and Operation

[Tire Pressure Monitor Description and Operation](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

1. Verify there are no communication DTCs set along with DTC C0750, C0755, C0760 and C0765.
 - **If a communication DTC is set**
Refer to [Diagnostic Trouble Code \(DTC\) List - Vehicle](#).
 - **If a communication DTC is not set**
2. Verify the scan tool Tire Pressure Sensor Rolling Count parameter of all 4 tire pressure sensors is above 50%.
 - **If the Tire Pressure Sensor Rolling Count parameter is below 50% on one or more tires**
 1. Move the appropriate tire to a different location on the vehicle and verify the Tire Pressure Sensor Rolling Count has increased. Refer to [Tire and Wheel Removal and Installation](#).

NOTE: When moving the tire pressure sensor to a different location on the vehicle, keep the tire pressure sensor with the original tire it is installed in.

- If Tire Pressure Sensor Rolling Count parameter does not increase after moving tire to different location, replace the appropriate B2 Tire Pressure Sensor and perform the [Tire Pressure Indicator Sensor Learn](#).

- If Tire Pressure Sensor Rolling Count parameter does increase after moving tire to different location, check for any aftermarket devices that could be causing interference to the tire pressure sensor signal.
 - **If the Tire Pressure Sensor Rolling Count parameter is above 50% on one or more tires**
3. Verify if all 4 tire monitor pressure sensor DTCs are not set.
 - If 2 or more tire monitor pressure sensor DTCs are set, test the keyless entry antenna for proper operation or if antenna is properly seated. Refer to [Keyless Entry System Malfunction \(Active\)](#) and [Keyless Entry System Malfunction \(Passive\)](#).
 4. Perform the [Tire Pressure Indicator Sensor Learn](#).
 5. Verify the scan tool Tire Pressure Sensor Mode parameters change to Drive while driving the vehicle above 40 km/h (25 mph) for greater than 2 min.
 - **If a Tire Pressure Sensor Mode parameter does not change to Drive**
 1. Replace the appropriate B2 Tire Pressure Sensor.
 2. Perform the [Tire Pressure Indicator Sensor Learn](#).
 - **If the Tire Pressure Sensor Mode parameter changes to Drive**
 6. All OK.

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Tire Pressure Indicator Sensor Replacement](#)
- [Tire Pressure Indicator Sensor Learn](#)

DTC C0774: TIRE PRESSURE MONITORING SYSTEM

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

DTC Descriptor

DTC C0774 00

Tire Pressure Monitoring System

Circuit Description

The electronic brake control module (EBCM) receives a serial data message from the tire pressure monitor (TPM) system when low tire pressure is detected. The EBCM will adjust the responses of vehicle stability enhancement system (VSES) to have optimal vehicle control when active.

Conditions for Running the DTC

- Engine is running.
- Battery voltage is between 9 - 16 V.
- Vehicle speed is greater than 3.6 km/h (2.2 mph).
- DTC runs continuously once the above conditions are met.

Conditions for Setting the DTC

- The tire pressure in any of the tires is below 104 kPa (15.1 psi).
- The compact spare tire is present on the rear axle.

Actions Taken When the DTC Sets

- The ESC will become permanently active.

- No warning indicators and/or messages will be displayed.

Conditions for Clearing the DTC

- The condition for the DTC is no longer present.
- All tires have correct pressures.

Reference Information

Description and Operation

Tire Pressure Monitor Description and Operation

Scan Tool Reference

Control Module References for scan tool information.

Circuit/System Verification

1. Verify there are no TPM DTCs DTC C0750, C0755, C0760 and C0765 set along with DTC C0774.
 - **If DTC is set**
Refer to DTC C0750, C0755, C0760 or C0765.
 - **If DTC is not set**
Verify tire pressure. Refer to Symptoms - Tire Pressure Monitoring.

DTC C0775: TIRE PRESSURE MONITORING SYSTEM SENSORS MALFUNCTION

Diagnostic Instructions

- Perform the Diagnostic System Check - Vehicle prior to using this diagnostic procedure.
- Review Strategy Based Diagnosis for an overview of the diagnostic approach.
- Diagnostic Procedure Instructions provides an overview of each diagnostic category.

DTC Descriptor

DTC C0775 00

Tire Pressure Monitoring System Sensors Malfunction

Circuit/System Description

If the body control module (BCM) has been reprogrammed or replaced and the tire pressure sensor learn procedure has not been performed, the tire pressure monitor system indicator icon on the instrument cluster will flash for 1 min and then remain illuminated after the power switch is cycled ON and the instrument cluster bulb check is complete. If equipped, the driver information center will also display a service tire monitor type message. Under these circumstances, DTC C0775 will be set in the BCM and the tire pressure sensor learn procedure will need to be performed for the system to function correctly.

Conditions for Running the DTC

Vehicle ON or Vehicle in Service Mode.

Conditions for Setting the DTC

The body control module (BCM) has not learned tire pressure sensor ID and location information from the tire pressure sensors.

Action Taken When the DTC Sets

- The tire pressure monitor system indicator icon on the instrument cluster will flash for 1 min and then remain illuminated after the power switch is cycled ON and the instrument cluster bulb check

is complete.

- If equipped, the driver information center displays a service tire monitor type warning message.

Conditions for Clearing the DTC

A current DTC will clear when the BCM has received tire pressure sensor ID and location after tire pressure sensor indicator learn procedure has been performed.

Reference Information

Description and Operation

Tire Pressure Monitor Description and Operation

Scan Tool Reference

Control Module References for scan tool information

Circuit/System Verification

1. Perform the Tire Pressure Indicator Sensor Learn.
2. Verify DTC C0775 is not set.
 - **If the DTC is set**
 1. Test the keyless entry antenna for proper operation. Refer to Keyless Entry System Malfunction (Active) and/or Keyless Entry System Malfunction (Passive).
 2. Clear DTC.
 3. Verify DTC does not set.
 - If the DTC sets, replace the K9 Body Control Module.
 - If the DTC does not set.
 - **If the DTC is not set**
3. All OK.

Repair Instructions

Perform the Diagnostic Repair Verification after completing the repair.

Control Module References for control module replacement, programming and setup.

SYMPTOMS - TIRE PRESSURE MONITORING

1. Perform the Diagnostic System Check - Vehicle, before using the Symptom Tables in order to verify that all of the following are true:
 - The control modules can communicate via the serial data link.
 - If one of the current or previous sensor learn is not successful.
 - If there are dashes displayed in the driver information center. Refer to Tire Pressure Rolling Count Procedure
2. Review the system operation in order to familiarize yourself with the system functions. Refer to Tire Pressure Monitor Description and Operation.

Visual/Physical Inspection

- Inspect if tires are inflated per placard values.
- Inspect for aftermarket devices which could affect the operation of the Tire Pressure Monitoring (TPM) System. Refer to Checking Aftermarket Accessories.
- Inspect the easily accessible or visible system components for obvious damage or conditions which could cause the symptom.

Intermittent

Faulty electrical connections or wiring may be the cause of intermittent conditions. Refer to [Testing for Intermittent Conditions and Poor Connections](#) .

Symptom List

Refer to [Low Tire Pressure Indicator Malfunction](#) in order to diagnose the symptom.

LOW TIRE PRESSURE INDICATOR MALFUNCTION

Diagnostic Instructions

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- Review [Strategy Based Diagnosis](#) for an overview of the diagnostic approach.
- [Diagnostic Procedure Instructions](#) provides an overview of each diagnostic category.

Circuit/System Description

The tire pressure monitor system has a radio frequency transmitting pressure sensor in each wheel/tire assembly. As vehicle speed increases, centrifugal force puts the sensor into Drive mode. The sensors send the tire pressure data to the remote control door lock receiver (RCDLR), using radio frequency (RF) transmissions. The RCDLR then decodes the RF data and passes it to the body control module (BCM). In turn, the BCM translates the data contained in the tire pressure sensor radio frequency transmissions into sensor presence, sensor mode and tire pressure. Once vehicle speed is greater than 40 km/h (25 MPH), the BCM waits for the sensors to go into Drive mode.

Each sensor has its own unique identification (ID) code, which it transmits as part of each RF message, that must be learned into the BCM memory. Once all 4 IDs have been learned and vehicle speed is greater than 40 km/h (25 mph), the BCM continuously compares IDs and pressure data in the received transmissions to the learned IDs and vehicle placard pressures to determine if all 4 sensors are present and if one or more tires are low. If the BCM detects a low tire pressure condition or a malfunction in the system, it will send a serial data message to the instrument cluster requesting the appropriate tire pressure monitor indicator illumination and also to display the appropriate data message on the driver information center, if equipped.

Diagnostic Aids

- If unsure about the condition, cycle the ignition and observe the tire pressure monitor indicator icon. If the tire pressure monitor indicator icon is continuously illuminated after the instrument cluster bulb check is completed, a low tire pressure condition is present. Check the tires for damage or leaks and inflate to the tire placard specifications. Refer to [Vehicle Certification, Tire Placard, Anti-Theft and Service Parts ID Label](#) . If the tire pressure monitor indicator icon flashes for 1 min after the instrument cluster bulb check is completed and then remains illuminated, a tire pressure monitor system DTC is set. Perform the [Diagnostic System Check - Vehicle](#) to proceed with the proper diagnosis.
- Temperature can greatly effect tire pressures. Low tire pressure on a cold morning may cause the tire pressure monitor indicator icon to turn ON. The air pressure in the tire increases as the ambient temperature rises or as the tire warms up while the vehicle is driven. The pressure may increase enough to exceed the predetermined low pressure threshold which will turn OFF the tire pressure monitor indicator icon.
- Some aftermarket wheel valve stem holes are located further from the wheel rim than original equipment wheels. When using the tire pressure monitor special tool to activate a sensor, ensure the tool antenna is no further than 15 cm (6 in) from the sensor and is aiming upward.
- Aftermarket wheel value stem locations can cause a sensor to not function correctly.
- A sensor may have been damaged due to a previous wheel/tire service or flat tire event. This is a courtesy item as it is not covered by warranty.
- The use of other than GM approved tire sealants can obstruct the sensor pressure sensing port and cause inaccurate tire pressure readings. If this condition is verified, remove the sealer from the tire and replace the sensor. Refer to [Tire Pressure Indicator Sensor Replacement](#).
- The sensor activation procedure may have to be repeated up to 3 times before determining a sensor is malfunctioning. In the event a particular sensor's information is displayed on the special

tool upon activation but the horn does not chirp, it may be necessary to rotate the wheel valve stem to a different position due to the RF signal is being blocked by another component.

- Occasionally sensor transmissions are not received by the BCM due to vehicle level RF interference from items such as but not limited to aftermarket ignition systems, DVD players, CB radios or metallic type window tinting.
- The Hit Rate of the sensor will help confirm the success rate at which the sensor transmission is being received. A low Hit Rate will signal that there may be interference. Refer to [Tire Pressure Rolling Count Procedure](#).

Reference Information

Description and Operation

[Tire Pressure Monitor Description and Operation](#)

Scan Tool Reference

[Control Module References](#) for scan tool information

Circuit/System Verification

NOTE:

Low tire pressure in one or more tires is indicated by a continuously illuminated tire pressure monitor indicator icon after the instrument cluster bulb check is completed. If equipped with a driver information center, a check tire pressure type message will also be displayed.

When a tire pressure monitor DTC is set, the tire pressure monitor indicator icon will flash for 1 min after the instrument cluster bulb check is completed and then remains illuminated. If equipped with a driver information center, a service tire monitor type message will also be displayed.

1. Adjust all tire pressures to the correct pressure. Refer to [Vehicle Certification, Tire Placard, Anti-Theft and Service Parts ID Label](#).
2. Drive the vehicle over 40 km/h (25 mph) for greater than 2 min.
3. Verify the low tire pressure indicator is OFF.
 - **If the low tire pressure indicator is ON**
 1. Perform the [Tire Pressure Indicator Sensor Learn](#).
 2. Record all 4 Tire Pressure Parameters values from the scan tool.
 3. Check and record the tire pressures with a known accurate hand held tire pressure gauge.
 4. Verify that the scan tool Tire Pressure parameters do not differ more than 27.6 kPa (4 psi) from the actual tire pressure readings.
 - If the scan tool Tire Pressure parameters differ more than 27.6 kPa (4 psi), replace the appropriate B2 Tire Pressure Sensor then perform the [Tire Pressure Indicator Sensor Learn](#).
 - If the scan tool Tire Pressure parameters do not differ more than 27.6 kPa (4 psi)
5. Verify the BCM Tire Type and Pressure selections are setup correctly with a scan tool. Refer to the [Vehicle Certification, Tire Placard, Anti-Theft and Service Parts ID Label](#).
 - If the BCM Tire Type and Pressure selections are incorrect, input the proper placard values for the vehicle with the scan tool then drive the vehicle over 40 km/h (25 mph) for greater than 2 min.
 - If the BCM Tire Type and Pressure selections are correct
6. Ignition On/Vehicle in Service Mode.
7. Verify the low tire pressure monitor indicator icon turns ON and OFF when commanding All Indicators ON and OFF with a scan tool.
 - If the low tire pressure monitor icon does not turn ON and OFF, replace the P16 Instrument Cluster.
 - If the low tire pressure monitor icon turns ON and OFF

8. All OK

- If the tire pressure indicator is OFF

4. All OK

Repair Instructions

Perform the [Diagnostic Repair Verification](#) after completing the repair.

- [Tire Pressure Indicator Sensor Replacement](#)
- [Tire Pressure Indicator Sensor Learn](#)
- [Control Module References](#) for control module replacement, programming and setup.

TIRE PRESSURE ROLLING COUNT PROCEDURE

Introduction

The Tire Pressure Rolling Count parameter for each sensor can be used to help confirm if the sensor transmissions are being received. As the vehicle is being driven, the Tire Pressure Rolling Count increments with every received TPM sensor transmission. If a suspected Sensor is not incrementing, incrementing very slowly compared to others or not at all, that could be a result of interference from aftermarket devices. The sensor transmission success rate (the rate at which each sensors transmission is being received by the RCDLR) can be verified in the scan tool.

NOTE: Scan tool procedure will be used if Tire Pressure Sensor exhibits "no Signal or poor intermittent signal reception" Before proceeding, check for the following:

- Perform the [Diagnostic System Check - Vehicle](#) prior to using this diagnostic procedure.
- A sensor does not transmit or transmits invalid data to the RCDLR.
- A sensor might exhibit low battery condition.
- If equipped, the driver information center displays " dashes" for the suspected sensor.
- Aftermarket wheel valve system locations can cause a sensor to not function correctly.
- A sensor may have been damaged due to a previous wheel/tire service or flat tire event.
- The use of other than GM approved tire sealants can obstruct the sensor pressure sensing port and cause inaccurate tire pressure readings. If this condition is verified, remove the sealer from the tire and replace the sensor. Refer to [Tire Pressure Indicator Sensor Replacement](#)
- Occasionally sensor transmissions are not received by the RCDLR due to vehicle level radio frequency interference from items such as but not limited to aftermarket ignition systems, DVD players, CB radios or metallic type window tinting

How to determine if Sensor Signal is poor or has no signal

Use Scan Tool and follow on screen instructions:

1. Select Module Diagnosis
2. Select Body Control Module
3. Select Configuration/Reset Functions
4. Select Tire Pressure Sensor Signal Reset
5. The Tire Pressure Sensor Rolling Count parameters will be displayed

If the Tire Pressure Sensor Rolling Count parameter is below 50% on one or more tires

NOTE: When moving the tire pressure sensor to a different location on the vehicle, keep the tire pressure sensor with the original tire it is installed in.

- Move the appropriate tire to a different location on the vehicle and verify the Tire Pressure Sensor Rolling Count has increased. Refer to [Tire and Wheel Removal and Installation](#) .

- If Tire Pressure Sensor Rolling Count parameter does not increase after moving tire to different location, replace the appropriate B2 Tire Pressure Sensor and perform the [Tire Pressure Indicator Sensor Learn](#).
- If Tire Pressure Sensor Rolling Count parameter does increase after moving tire to different location, check for any aftermarket devices that could be causing interference to the tire pressure sensor signal. Unplug the device and re-run test.

If the Tire Pressure Sensor Rolling Count parameter is above 50% on one or more tires (Follow normal TPM troubleshooting in Service information)

- Verify if all 4 tire monitor pressure sensor DTCs are not set.
- If 2 or more tire monitor pressure sensor DTCs are set, test the keyless entry antenna for proper operation or if antenna is properly seated. Refer to [Keyless Entry System Malfunction \(Active\)](#) and/or [Keyless Entry System Malfunction \(Passive\)](#).
- Perform the [Tire Pressure Indicator Sensor Learn](#).
- Verify the scan tool Tire Pressure Sensor Mode parameters change to Drive while driving the vehicle above 40 km/h (25 mph) for greater than 2 min.
- If a Tire Pressure Sensor Mode parameter does not change to Drive.
- Replace the appropriate B2 Tire Pressure Sensor.
- Perform the [Tire Pressure Indicator Sensor Learn](#).
- If the Tire Pressure Sensor Mode parameter changes to Drive.
- All OK.

REPAIR INSTRUCTIONS

TIRE PRESSURE INDICATOR SENSOR REPLACEMENT

Removal Procedure

1. Raise the vehicle on a suitable support. Refer to [Lifting and Jacking the Vehicle](#)
2. Remove the tire and wheel assembly from the vehicle. Refer to [Tire and Wheel Removal and Installation](#)
3. Dismount the tire from the rim.
4. Remove the TORX screw (1) from the tire pressure sensor (2) and pull it straight off the tire pressure valve stem (3). DISCARD the TORX screw and valve stem.

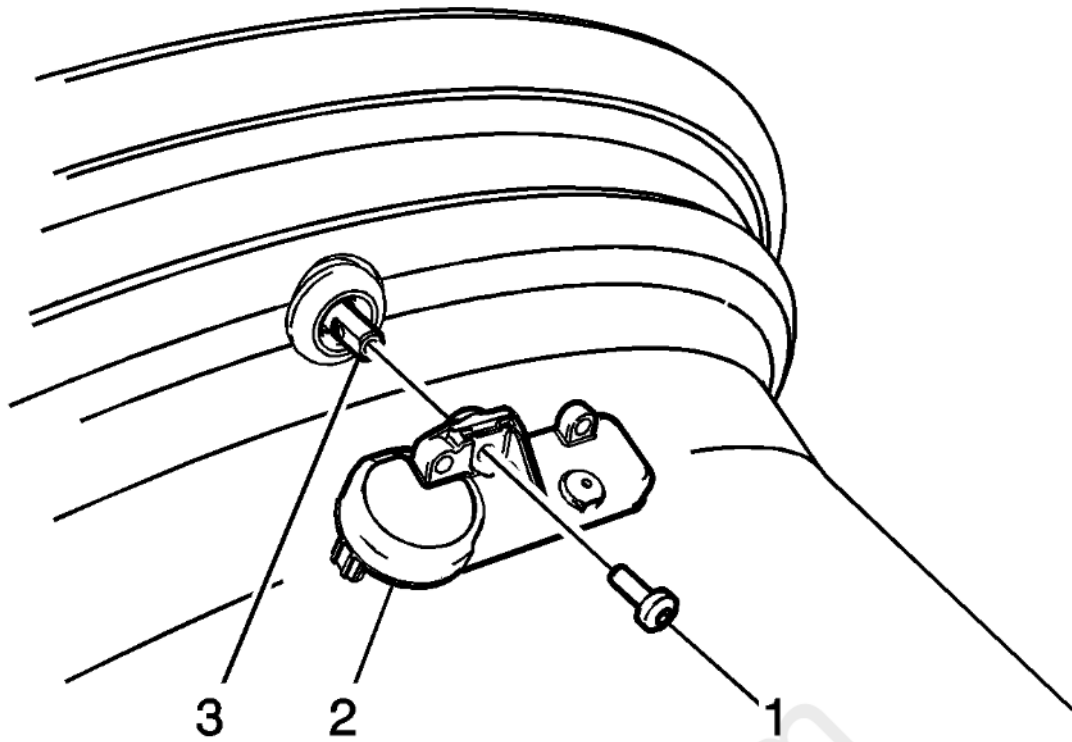


Fig. 1: View Of Tire Pressure Indicator Sensor
Courtesy of GENERAL MOTORS COMPANY

CAUTION: Do not scratch or damage the clear coating on aluminum wheels with the tire changing equipment. Scratching the clear coating could cause the aluminum wheel to corrode and the clear coating to peel from the wheel.

NOTE: When servicing the tire pressure sensor always use a new tire pressure monitor (TPM) and a new TORX screw during installation.

5. Remove the tire pressure valve stem by pulling it through the rim.

Installation Procedure

1. Assemble the tire pressure sensor (2) to the valve stem and install the NEW TORX screw (3).
Tighten 4 N.m (35 lb in)

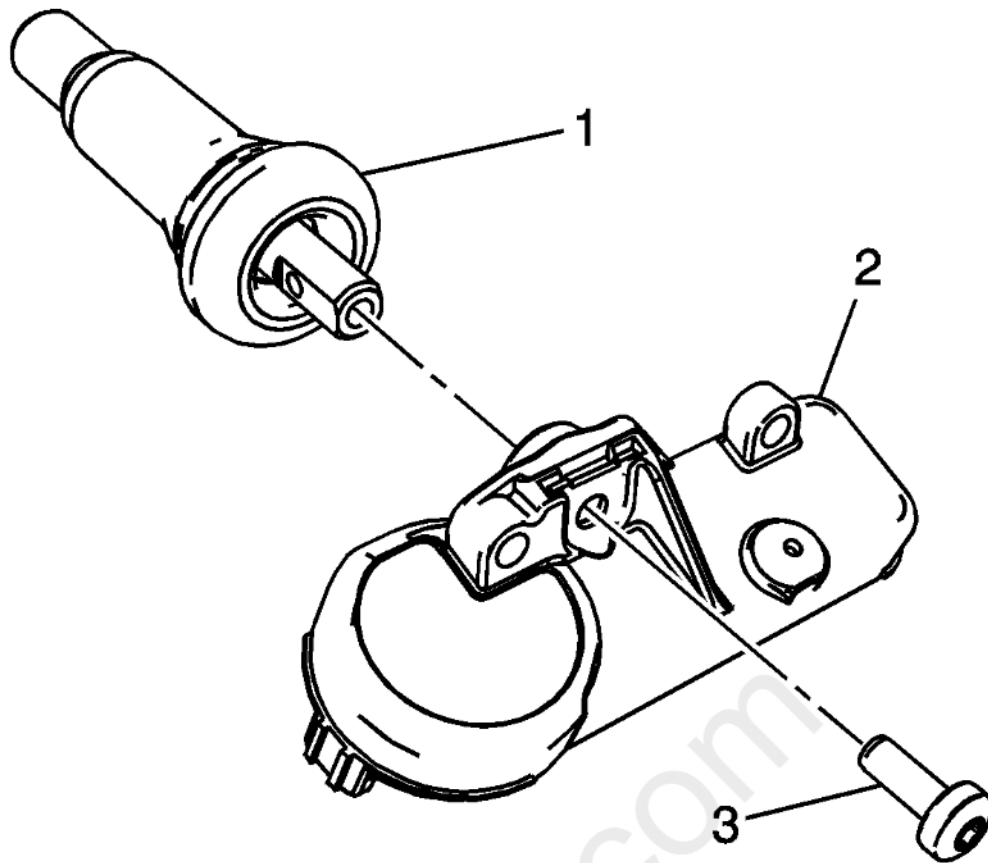


Fig. 2: View Of Tire Pressure Indicator Sensor
Courtesy of GENERAL MOTORS COMPANY

CAUTION: Refer to [Fastener Caution](#)

NOTE: Tire Pressure Monitor (TPM) valves and TORX screws are one-time use only.

NOTE: Ensure the flat of the valve, lines up with the flats of the snap in the enclosure.

2. Apply tire soap to the rubber portion of the valve stem (1).

CAUTION: When mounting the tires, use an approved tire mounting lubricant. **DO NOT** use silicon or corrosive base compounds to lubricate the tire bead and the wheel rim. A silicon base compound can cause the tire to slip on the rim. A corrosive type compound can cause tire or rim deterioration.

3. Using a tire valve stem mounting tool, pull the valve stem through in a direction parallel to the valve hole on the rim.

NOTE: Snap Fit TPM sensors are still shipped in the OFF mode. However, the TPM no longer needs to be spun to remove it from the OFF mode. The sensor will exit its OFF state when the tire is inflated. The technician can then program the vehicle as normal.

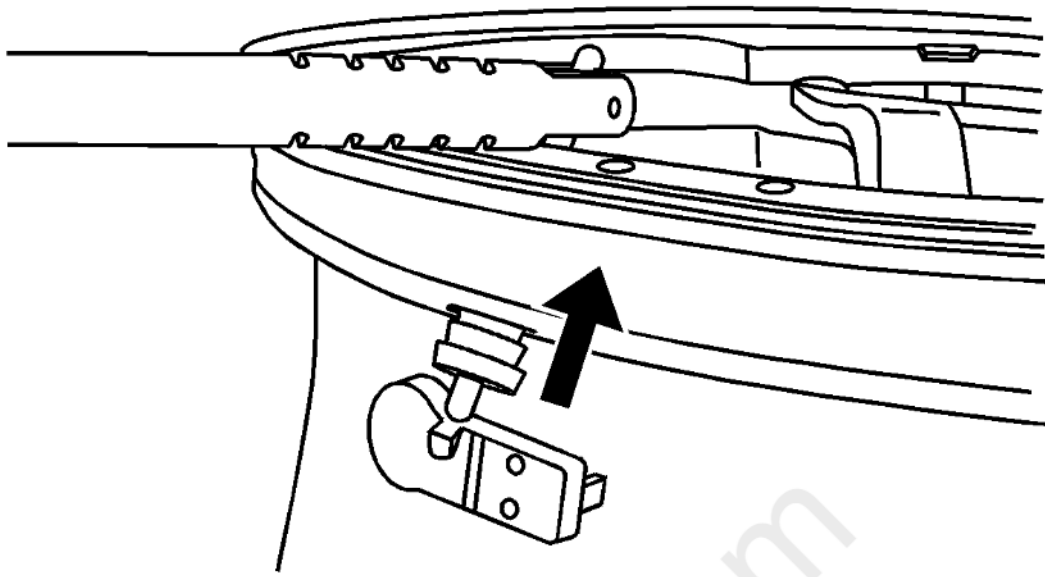


Fig. 3: View Of Tire Valve Stem Mounting Tool
Courtesy of GENERAL MOTORS COMPANY

4. Mount the tire to the rim.
5. Install the tire and wheel assembly on the vehicle. Refer to [Tire and Wheel Removal and Installation](#)
6. Lower the vehicle.
7. Program the tire pressure sensors. Refer to [Tire Pressure Indicator Sensor Learn](#)

TIRE PRESSURE INDICATOR SENSOR LEARN

Special Tools

- **EL-46079** Tire Pressure Monitor Diagnostic Tool
- **EL-50448** Tire Pressure Monitor Sensor Activation Tool

For equivalent regional tools, refer to [Special Tools](#).

Learn Mode Description

The tire pressure monitor system uses the instrument cluster, body control module (BCM), 4 radio frequency transmitting pressure sensors, remote control door lock receiver (RCDLR) and the serial data circuit to perform the tire pressure monitor learn mode functions. The sensor learn procedure must be performed after every tire rotation, BCM replacement or sensor replacement. Once the Learn mode has been enabled, each of the sensors unique identification codes can be learned into the BCM memory. When a sensor ID has been learned, the BCM sounds a horn chirp indicating the sensor has transmitted its ID and the BCM has received and learned it. The BCM must learn the sensor IDs in the proper sequence to determine correct sensor location. The first learned ID is assigned to the left front location, the second to right front, the third to right rear and the fourth to left rear. The turn signals will individually illuminate indicating which location is to be learned in the proper sequence.

Sensor Functions Using EL-46079, EL-50448 or Equivalent

Each sensor has an internal low frequency coil. When the tire pressure monitor special tool is used in activate mode, it produces a low frequency transmission that activates the sensor. The sensor responds to a low frequency activation by transmitting in Learn Mode-Remotely Triggered. When the BCM receives a learn mode transmission while in Learn mode, it will assign that sensors ID to the location on the vehicle relative to the order in which it was learned.

Learn Mode Cancellation

The Learn mode will cancel if the ignition is cycled to OFF or if more than 2 minutes has elapsed for any sensor or 5 min overall has elapsed to match all four sensors. If the relearn mode is cancelled before the first sensor is learned, the original sensor IDs will be maintained. If the relearn mode is canceled after the first sensor is learned, the following will occur:

- All stored sensor IDs will be invalidated in the BCM memory.
- If equipped, the driver information center will display dashes instead of tire pressures.
- DTC C0775 will be set.

These conditions will now require the Learn procedure to be repeated for the system to function properly.

Tire Pressure Monitor Learn Procedure

NOTE: In the event a particular sensor is activated and the horn does not chirp, it may be necessary to rotate the wheel so that the valve stem is in a different position due to the sensor signal is being blocked by another component. Make sure the TPM tool battery is sufficient to complete TPM learn process. Do not place the TPM tool directly on the valve stem. The TPM tool should be placed against the tire sidewall near the valve stem. The TPM sensor learn activation procedure may have to be repeated up to 3 times before determining a sensor is malfunctioning.

1. Apply park brake (manual transmission only).
2. Ignition On/Vehicle in Service Mode, using a scan tool or driver information center buttons (refer to owners manual), initiate the Tire Pressure Sensors Learn mode. A double horn chirp will sound indicating the Learn mode has been enabled. The left front turn signal will also be illuminated.
3. Starting with the left front tire, active the sensor by holding the antenna of the tire pressure monitor special tool aimed upward against the tire sidewall close to the wheel rim at the valve stem location. Press and release the activate button. Ensure that the transmit indicator on the special tool indicates that the sensor activation signal is being transmitted. Wait for a horn chirp. If the horn does not chirp, repeat the sensor activation sequence with the tool. Once the horn chirp has sounded, the sensor information is learned and the turn signal in the next location to be learned will illuminate.
4. After the horn chirp has sounded and the right front turn signal is illuminated, repeat step 3 for the remaining 3 sensors in the following order:
 1. Right front
 2. Right rear
 3. Left rear
5. When the left rear sensor has been learned and a double horn chirp has sounded, the learn process is complete and the BCM exits the Learn mode.

DESCRIPTION AND OPERATION

TIRE PRESSURE MONITOR DESCRIPTION AND OPERATION

Tire Pressure Monitoring System Block Diagram

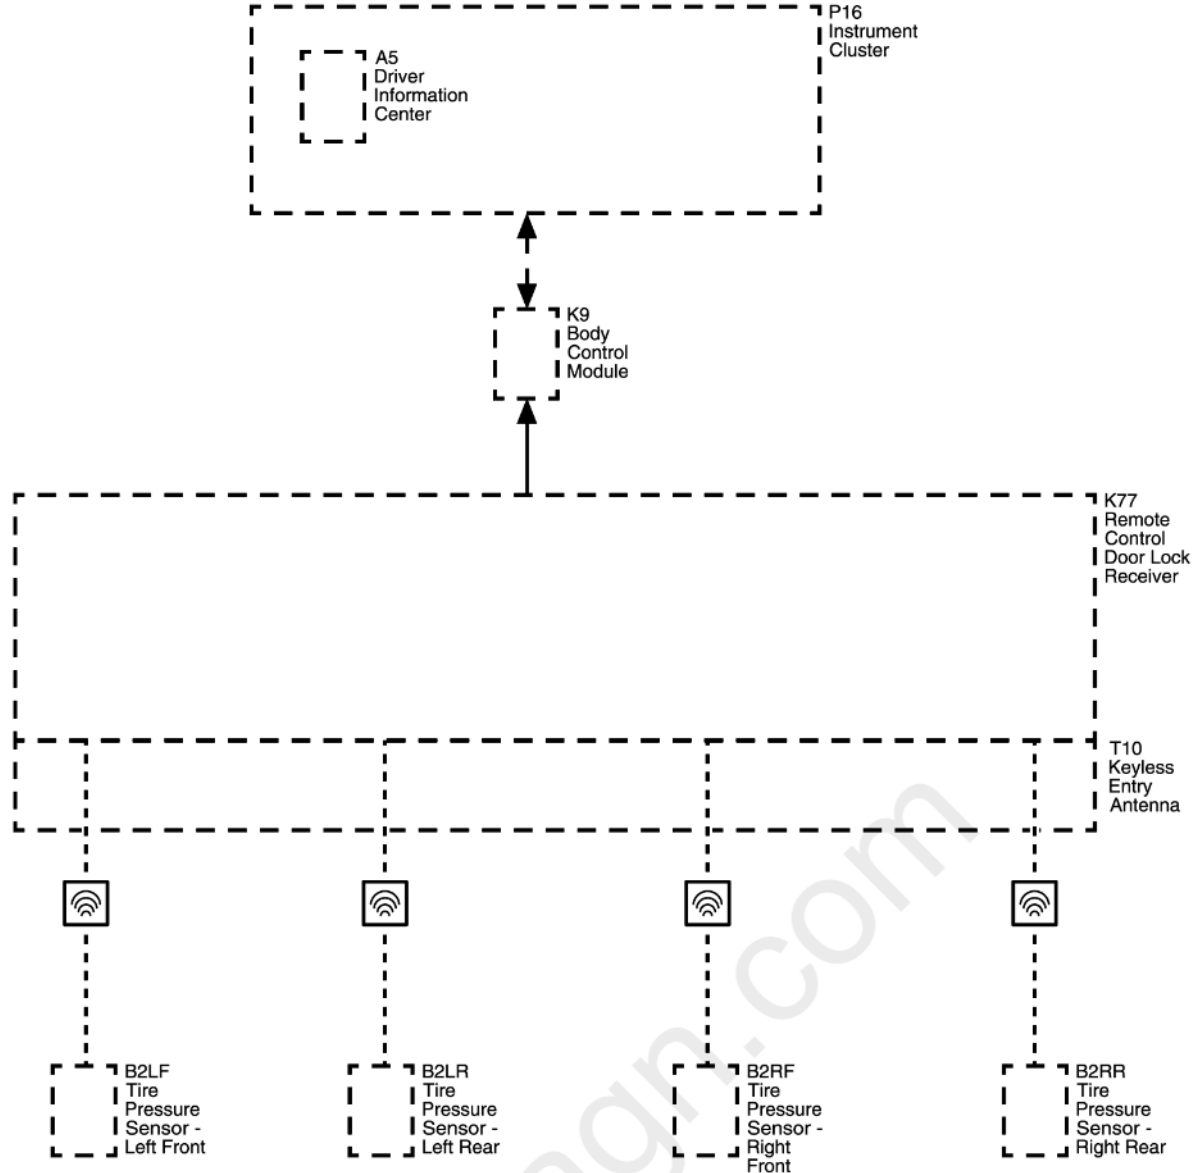


Fig. 4: Tire Pressure Monitoring System Block Diagram

Courtesy of GENERAL MOTORS COMPANY

Callout	Component Name
WL	Wireless
WL	Wireless
WL	Wireless
WL	Wireless
P16	P16 Instrument Cluster
P9	P9 Driver Information Center Display
K9	K9 Body Control Module
K77	K77 Remote Control Door Lock Receiver
T10	T10 Keyless Entry Antenna
B2LF	B2LF Tire Pressure Sensor - Left Front
B2LR	B2LR Tire Pressure Sensor - Left Rear
B2RF	B2RF Tire Pressure Sensor - Right Front
B2RR	B2RR Tire Pressure Sensor - Right Rear

Special Tools

- **EL-46079/J-46079** Tire Pressure Monitor Diagnostic Tool
- **EL-50448** Tire Pressure Monitor Sensor Activation Tool

For equivalent regional tools, refer to [Special Tools](#).

The tire pressure monitor system warns the driver when a significant loss of tire pressure occurs in any of the 4 tires and allows the driver to display the individual tire pressures and their locations on the driver information center.

The system uses the body control module (BCM), driver information center, instrument cluster, remote control door lock receiver (RCDLR) and a radio frequency (RF) transmitting pressure sensor in each wheel/tire assembly and the serial data circuit to perform the system functions. Each sensor has an internal power supply with an approximate 10 year service life.

When the vehicle is stationary, the sensor's internal accelerometer is inactive, which puts the sensors into a Stationary state. In this state the sensors sample tire pressure once every 30 seconds and do not transmit at all if the tire pressure does not change. As vehicle speed increases, centrifugal force activates the sensors internal accelerometer causing the sensors to go into Wake and then Drive mode. In Drive mode, the sensors sample tire pressure once every 30 seconds and transmit in Drive mode once every 60 seconds. The RCDLR receives and translates the data contained in each sensors RF transmission into sensor presence, sensor mode and tire pressure and passes it to the BCM. In turn, the BCM sends the tire pressure and tire location data to the driver information center via the serial data circuit where they are displayed.

The sensors continuously compare their last pressure sample to their current pressure sample and will transmit in Learn Mode-Pressure Triggered if a 8.3 kPa (1.2 psi) change in tire pressure has been detected in either a Stationary or Drive state. When the tire pressure monitor system detects a significant loss of tire pressure, the tire pressure monitor indicator icon is illuminated on the instrument cluster and if equipped, a tire pressure low, add air to tire type message is displayed on the driver information center. Both the indicator icon and driver information center message can be cleared by adjusting the tire pressures to the recommended pressures and driving the vehicle above 40 km/h (25 mph) for at least 2 minutes.

If power is disconnected from the BCM or if the vehicle battery is disconnected, each tire pressure monitor sensor ID is retained but all of the tire pressure information is lost. Under these circumstances the BCM cannot assume that the tire pressures were maintained over an unknown period of time. If equipped, the driver information center will display all dashes and the scan tool will indicate a default tire pressure value of 1020 kPa (148 psi) for each tire. Driving the vehicle above 40 km/h (25 mph) for at least 2 minutes will activate the sensors causing the driver information center to display the current tire pressures. The **EL-46079/J-46079** tire pressure monitor diagnostic tool, **EL-50448** tire pressure monitor sensor activation tool or equivalent may also be used to activate the sensors as well.

The BCM has the ability to detect malfunctions within the tire pressure monitor system. In the event a DTC is set, the tire pressure monitor indicator icon on the instrument cluster, if equipped will flash for 1 minute and then remain illuminated after the ignition is turned ON and the instrument cluster bulb check has been completed. Any malfunction detected will cause the driver information center to display a service tire monitor system type message. For more information on other functions of the BCM, refer to [Keyless Entry System Description and Operation \(Without ATH\)](#) and/or [Keyless Entry System Description and Operation \(With ATH\)](#) .

SPECIAL TOOLS AND EQUIPMENT

SPECIAL TOOLS

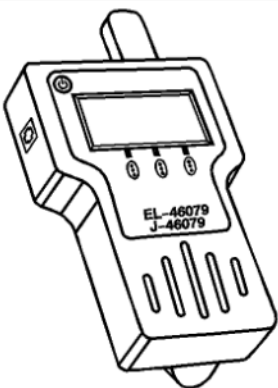
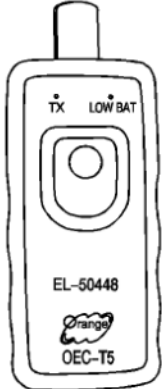
Illustration	Tool Number/Description
	EL 46079 Tire Pressure Monitor Diagnostic Tool

Illustration	Tool Number/Description
	EL 50448 Tire Pressure Monitor Sensor Activation Tool

cardiagn.com