


Fuel system , (1A7)

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

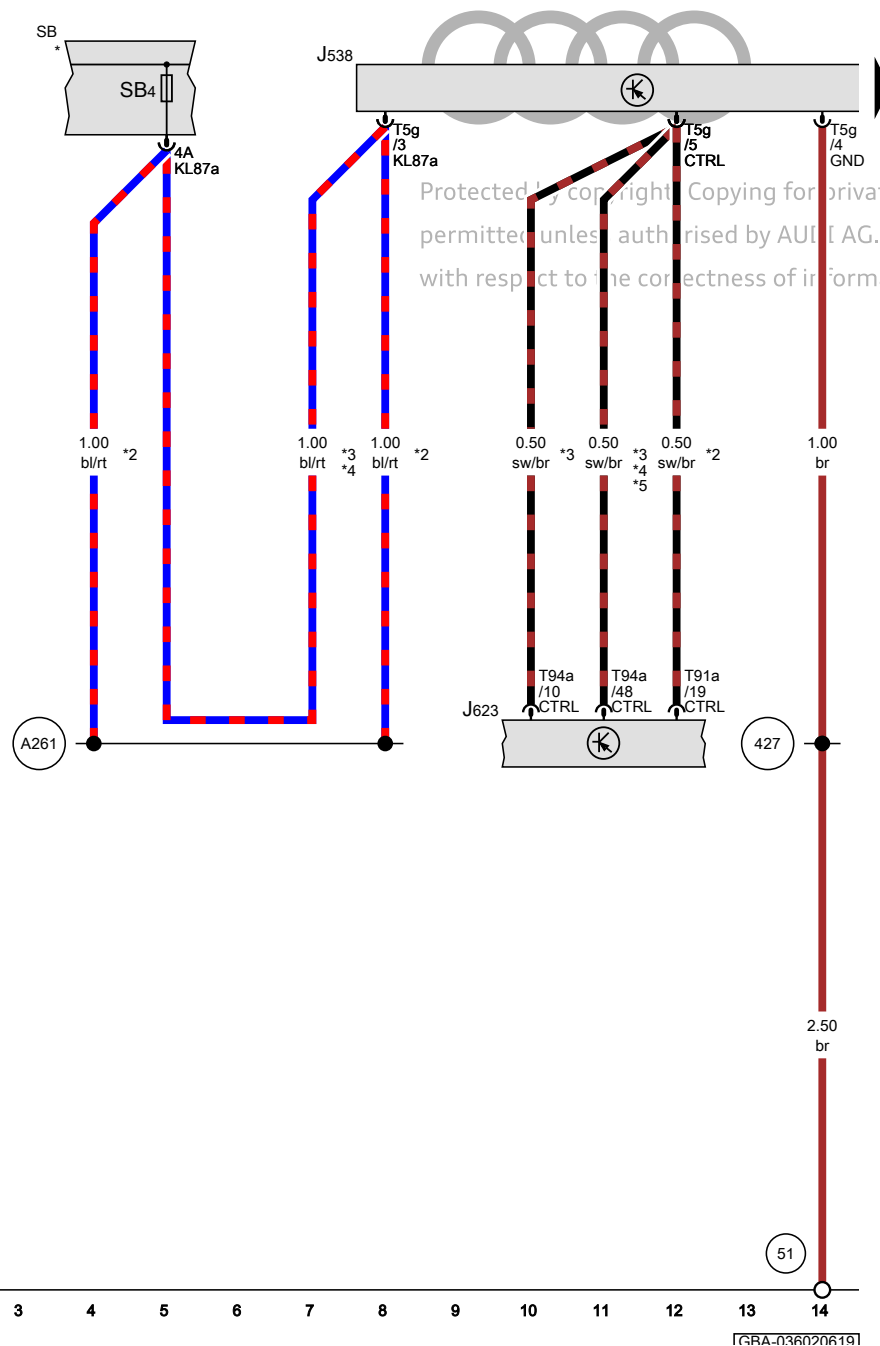


Fuel pump control unit, Engine/motor control unit, Fuse holder B

- J538 Fuel pump control unit
- J623 Engine/motor control unit
- SB Fuse holder B
- SB4 Fuse 4 on fuse holder B
- T5g 5-pin connector, black
- T91a 91-pin connector, black
- T94a 94-pin connector, black

- 51 Earth point, on right in luggage compartment
- 427 Earth connection 3, in right rear end wiring harness
- A261 Connection 5, in dash panel wiring harness

- * see applicable current flow diagram for fuses in interior
- *2 For models with 2.0l petrol engine
- *3 For models with 1.0l petrol engine
- *4 For models with 1.5l petrol engine
- *5 For emission standard Euro 6 AG/H/I

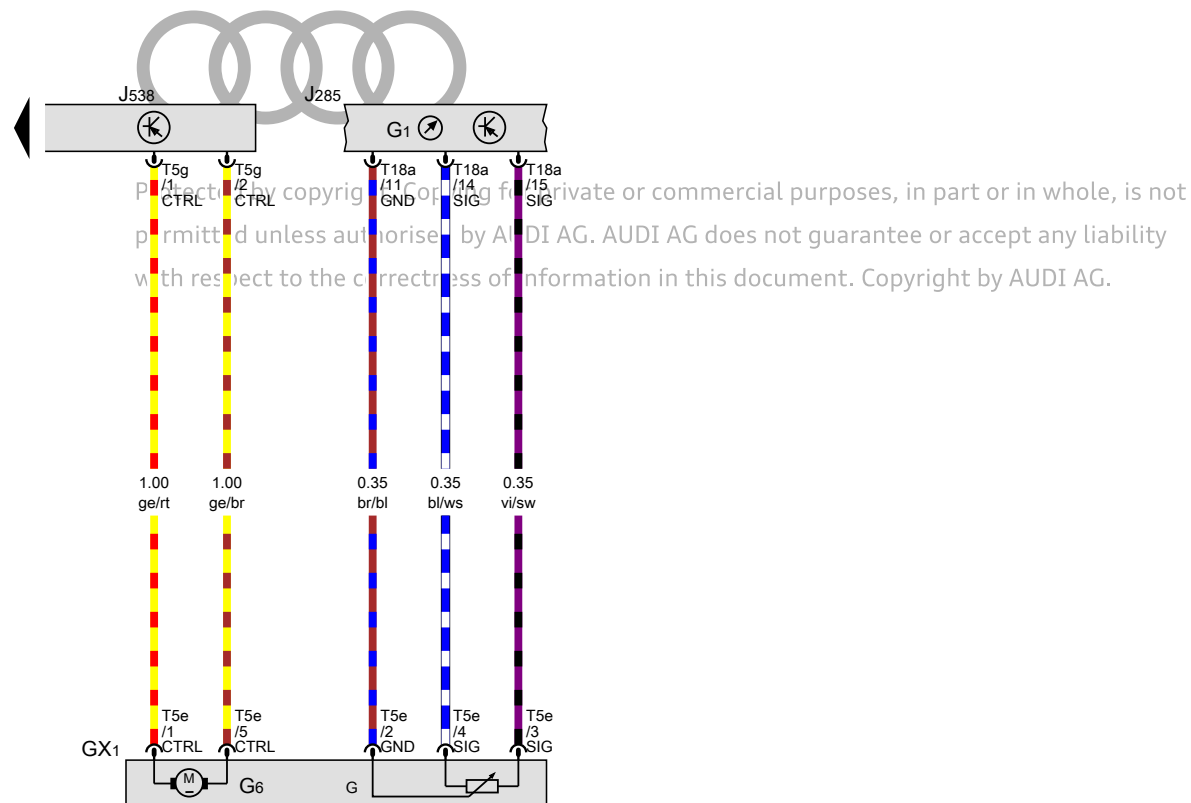

Fuel delivery unit, Control unit in dash panel insert, Fuel pump control unit

- G Fuel gauge sender
- GX1 Fuel delivery unit
- G1 Fuel gauge
- G6 Fuel system pressurisation pump
- J285 Control unit in dash panel insert
- J538 Fuel pump control unit
- T5e 5-pin connector, black
- T5g 5-pin connector, black
- T18a 18-pin connector, black

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink