



ACCENDISIGARI / PRESA DI CORRENTE

191 - Giulietta

cardiagn.com

CIGAR LIGHTER/POWER SOCKET - DESCRIPTION

A standard type power socket is located in the tunnel console next to the handbrake lever and can be used for the cigar lighter or for connecting instruments or equipment that operate on 12 V.

The luggage compartment contains a second power socket similar to the first on the left hand side.

The cigar lighter heater coil can be placed in the console's front socket; simply press the knob to operate it: after a few seconds it will come out automatically, ready for use.

The ring around the first socket is lit when the side lights are on.

See E2535 CONTROL LIGHTS

The sockets are equipped with a thermal protection device: this protection cuts off the power supply if devices that absorb a lot of energy are connected.

The circuit for the power sockets is protected by a dedicated fuse and controlled by the ignition-operated relay switch (INT/A) located in the engine compartment junction unit.


CIGAR LIGHTER/ POWER SOCKET - FUNCTIONAL DESCRIPTION

The power socket/cigar lighter P050 is supplied by the line protected by fuse F85 of fuse box B001; this power supply is controlled by relay switch T31 of engine compartment junction unit B001: it is an ignition-operated excluded start-up power supply (INT/A) protected by fuse F31 of M001.

The rear power socket P052 is supplied by the line protected by fuse F86 of fuse box B001; this power supply is controlled by relay switch T31 of engine compartment junction unit B001: it is an ignition-operated start-up excluded power supply (INT/A) protected by fuse F31 of M001.


cardiagn.com

CIGAR LIGHTER/POWER SOCKET - WIRING DIAGRAM

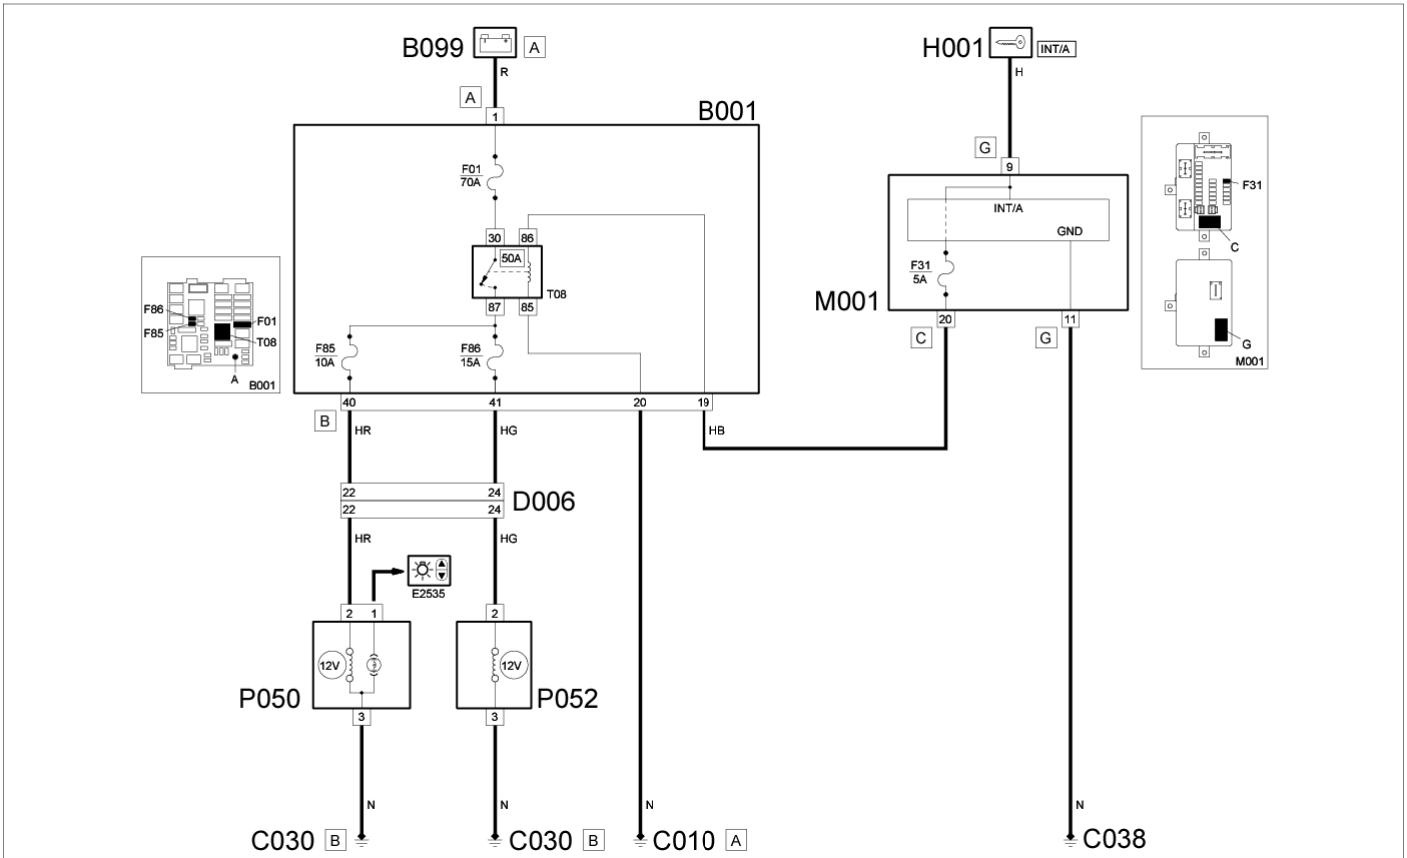

Component Code	Description	Reference to the operation
B001	JUNCTION UNIT	Op. 5505A28 CONTAINER FOR ADDITIONAL JUNCTION UNIT IN ENGINE COMPARTMENT - R.R.
B099	MAXI FUSE BOX ON BATTERY	Op. 5530B40 SUPPLY BOX ON BATTERY (LINK BATTERY AND FUSE BOX) - R R
C010	LEFT FRONT EARTH	-
C030	LEFT REAR EARTH	-
C038	EARTH ON CENTRE TUNNEL	-
D006	FRONT/REAR COUPLING	-
H001	IGNITION SWITCH	-
5520A18	IGNITION SWITCH CONTACT CARRIER LOCK BARREL - R.R.	See M001 BODY COMPUTER
5505A35	MAIN BODY COMPUTER/JUNCTION UNIT - R.R.	See P050 CIGAR LIGHTER/CURRENT SOCKET
7065C72	FRONT CIGAR LIGHTER SOCKET - R.R.	See P052 REAR CURRENT SOCKET
7065C86	CURRENT SOCKET IN LUGGAGE COMPARTMENT - R.R.	

CIGAR LIGHTER/ POWER SOCKET - COMPONENT LOCATION

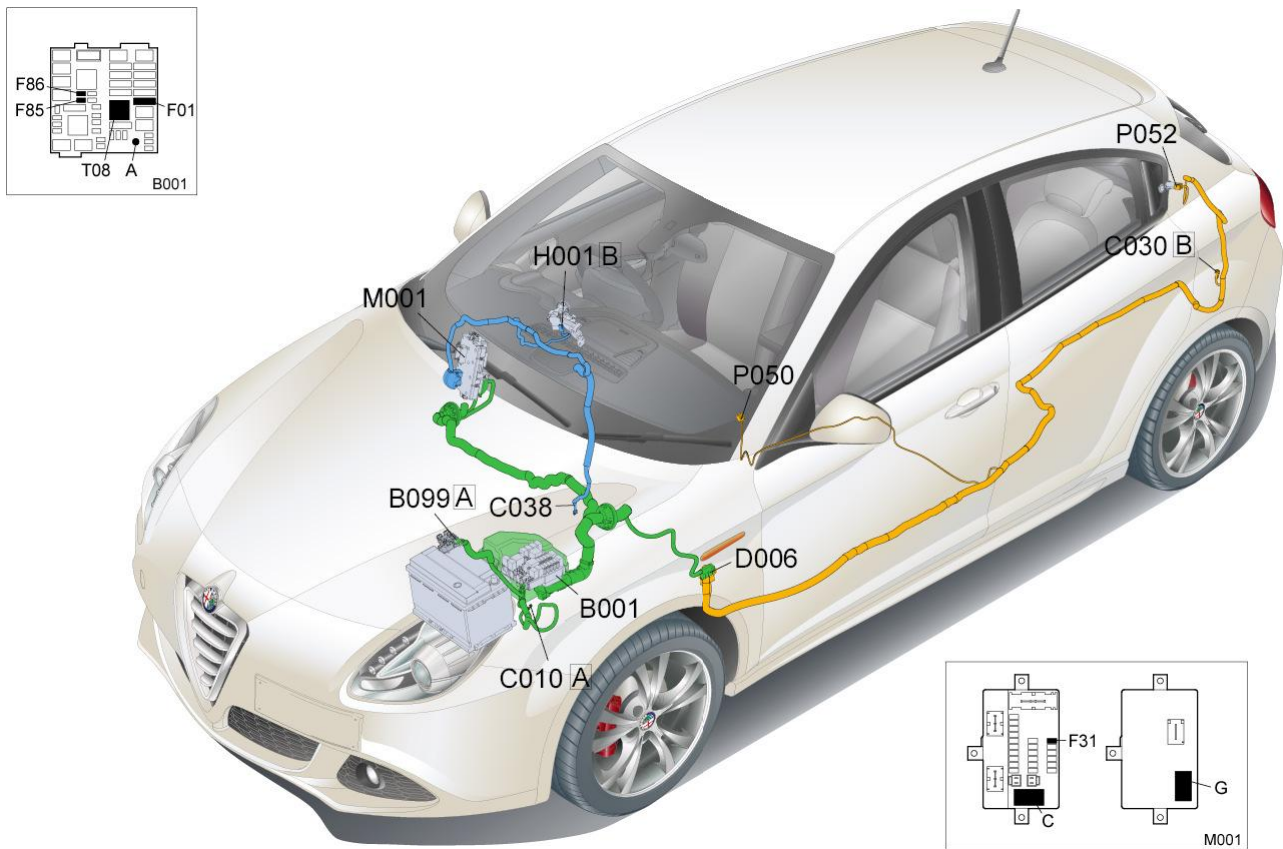

Component Code	Description	Reference to the operation
B001	JUNCTION UNIT	Op. 5505A28 CONTAINER FOR ADDITIONAL JUNCTION UNIT IN ENGINE COMPARTMENT - R.R.
B099	MAXI FUSE BOX ON BATTERY	Op. 5530B40 SUPPLY BOX ON BATTERY (LINK BATTERY AND FUSE BOX) - R R
C010	LEFT FRONT EARTH	-
C030	LEFT REAR EARTH	-
C038	EARTH ON CENTRE TUNNEL	-
D006	FRONT/REAR COUPLING	-
H001	IGNITION SWITCH	-
5520A18	IGNITION SWITCH CONTACT CARRIER LOCK BARREL - R.R.	See M001 BODY COMPUTER
5505A35	MAIN BODY COMPUTER/JUNCTION UNIT - R.R.	See P050 CIGAR LIGHTER/CURRENT SOCKET
7065C72	FRONT CIGAR LIGHTER SOCKET - R.R.	See P052 REAR CURRENT SOCKET
7065C86	CURRENT SOCKET IN LUGGAGE COMPARTMENT - R.R.	