



2013 Audi A6 | S6

Quick Reference Guide

Vorsprung durch Technik **Audi** 

This Quick Reference Guide provides you with a brief overview of selected procedures and functions in your vehicle. It does not replace the Owner's Manual with its important explanations and warnings.

Cockpit

- 1 Rear lid
- 2 Power windows

⚠ WARNING

Be careful when closing the windows and luggage compartment. Check to see that no one is in the way, or serious personal injury could result.


- 3 Adjusting the exterior mirrors
- 4 Hood release
- 5 Data link Connector for On Board Diagnostics (OBD II)
- 6 Door handle
- 7 Central locking switch
- 8 Memory seat buttons


- 9  All-weather lights
 Night vision assistant
 Rear fog lights
- 10 Light switch
- 11 Instrument illumination
- 12 Head-up Display
- 13 Steering wheel adjustment

⚠ WARNING

The column should only be adjusted when the vehicle is at a complete standstill.

- 14 Cruise control or Adaptive cruise control

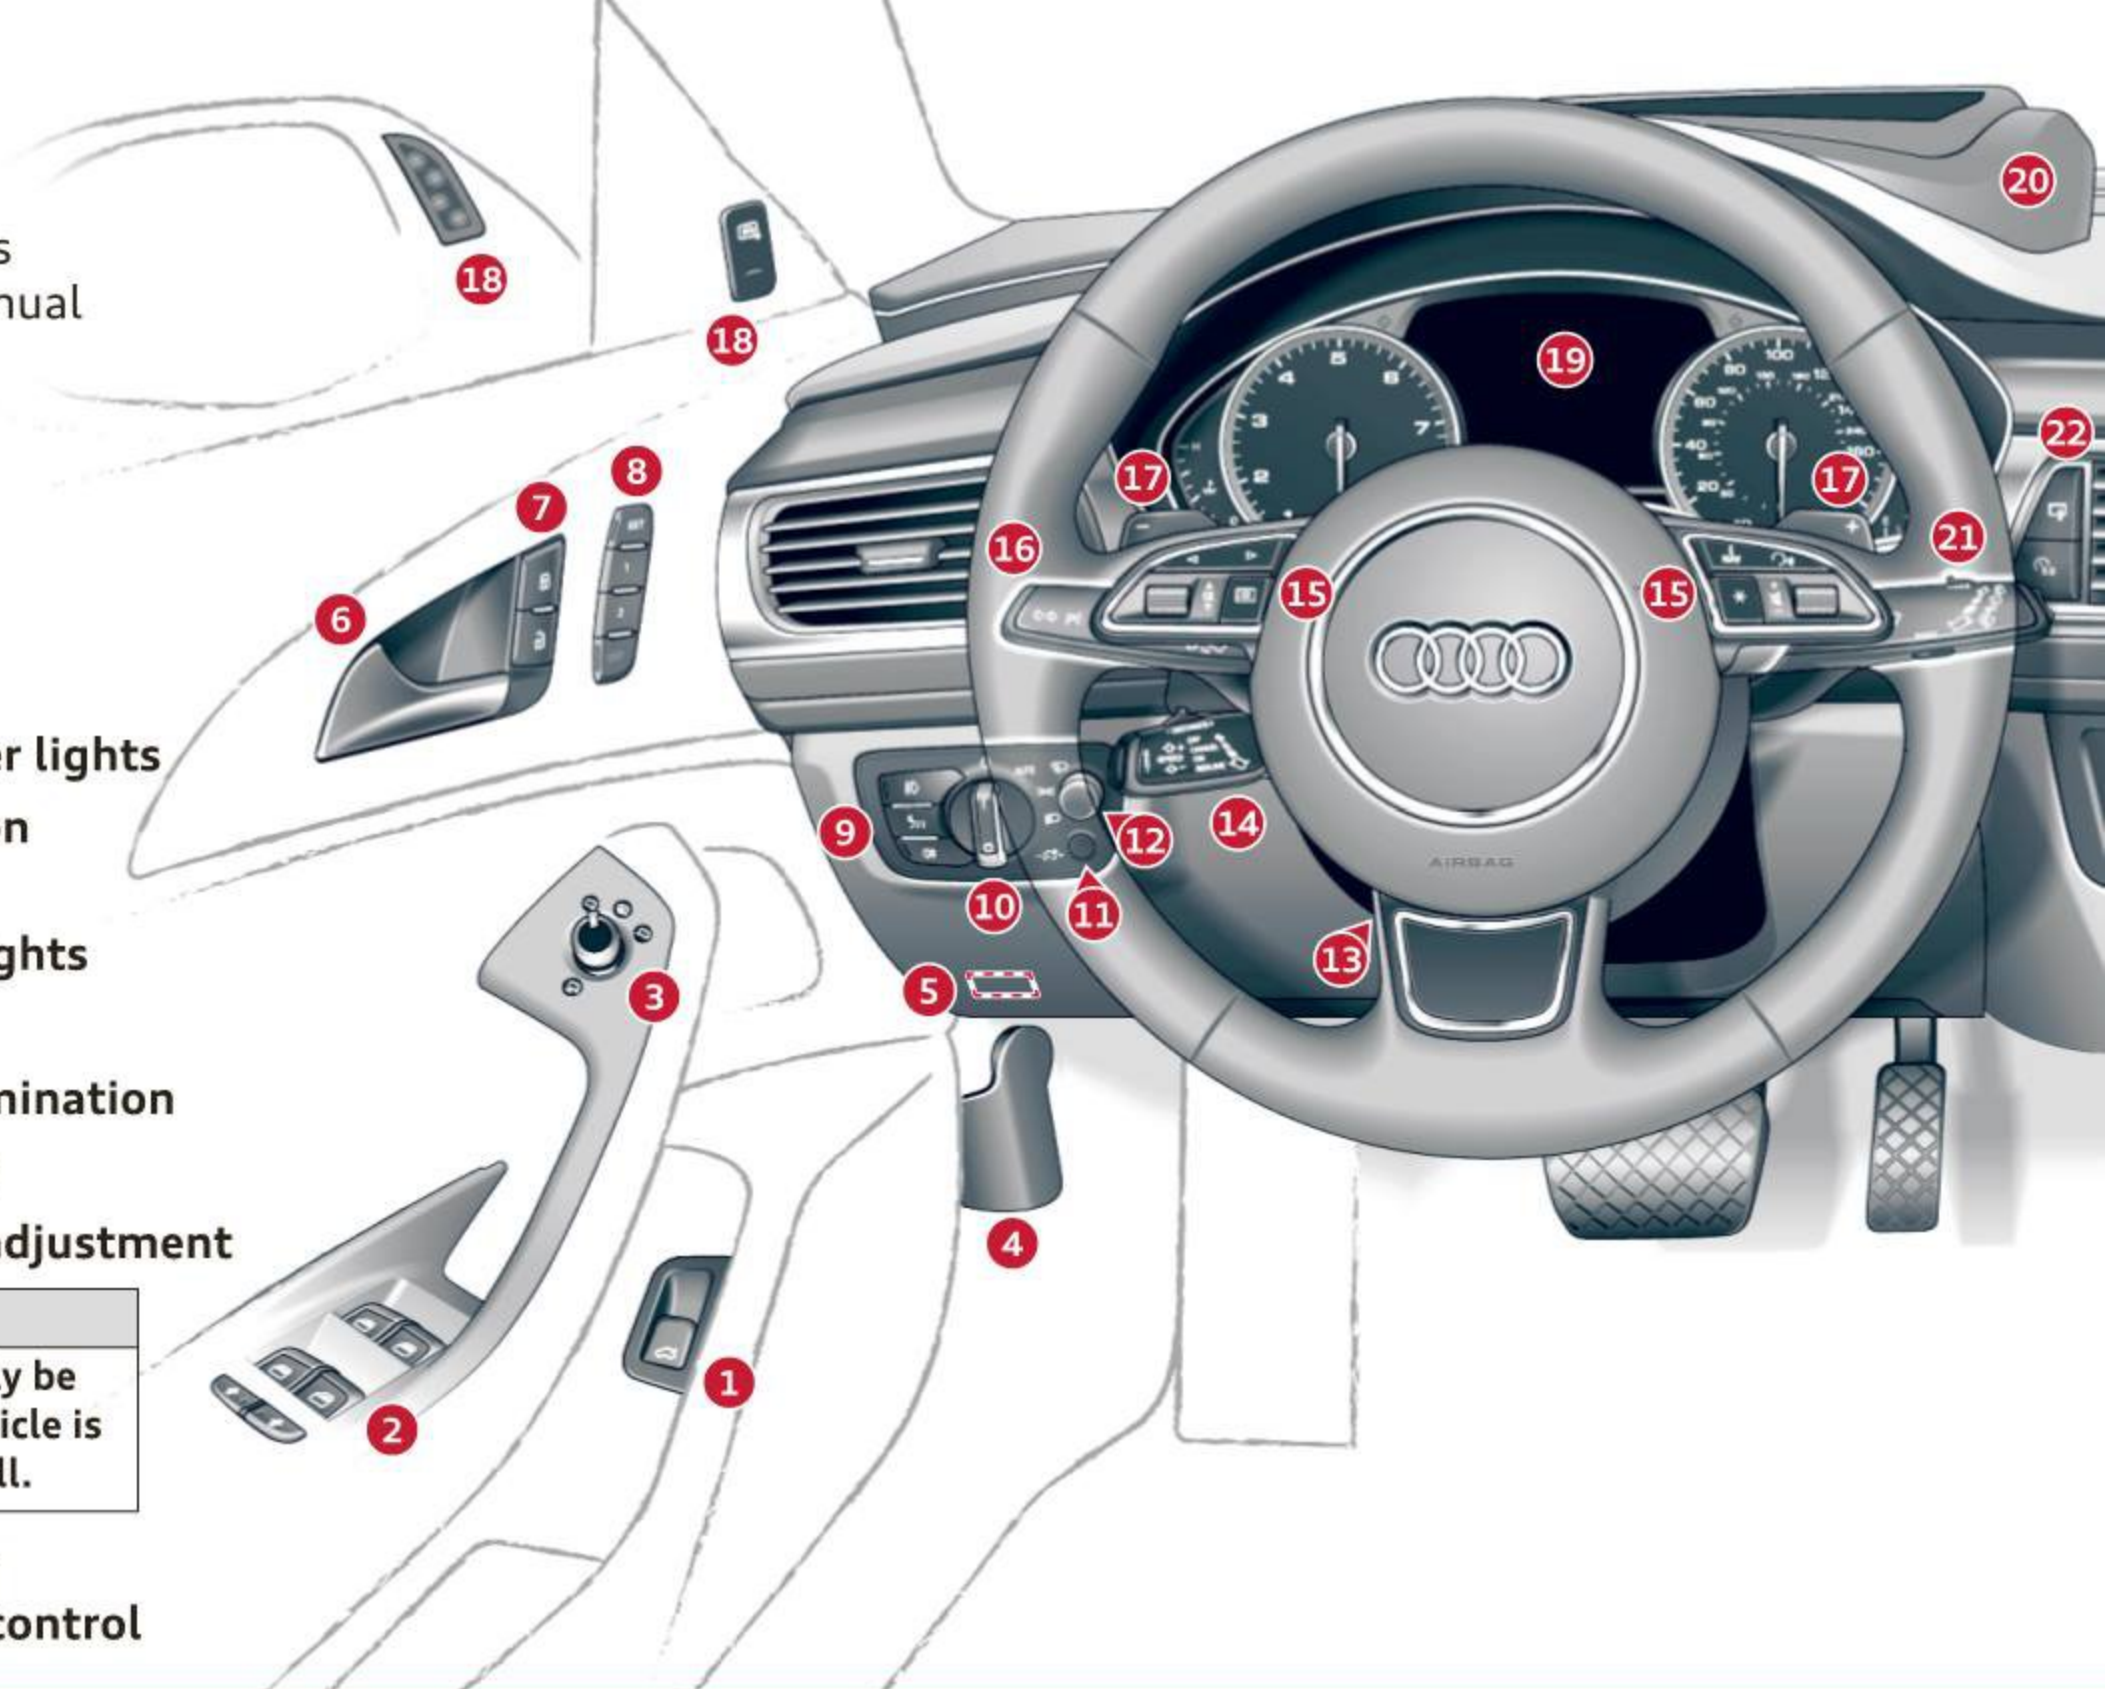

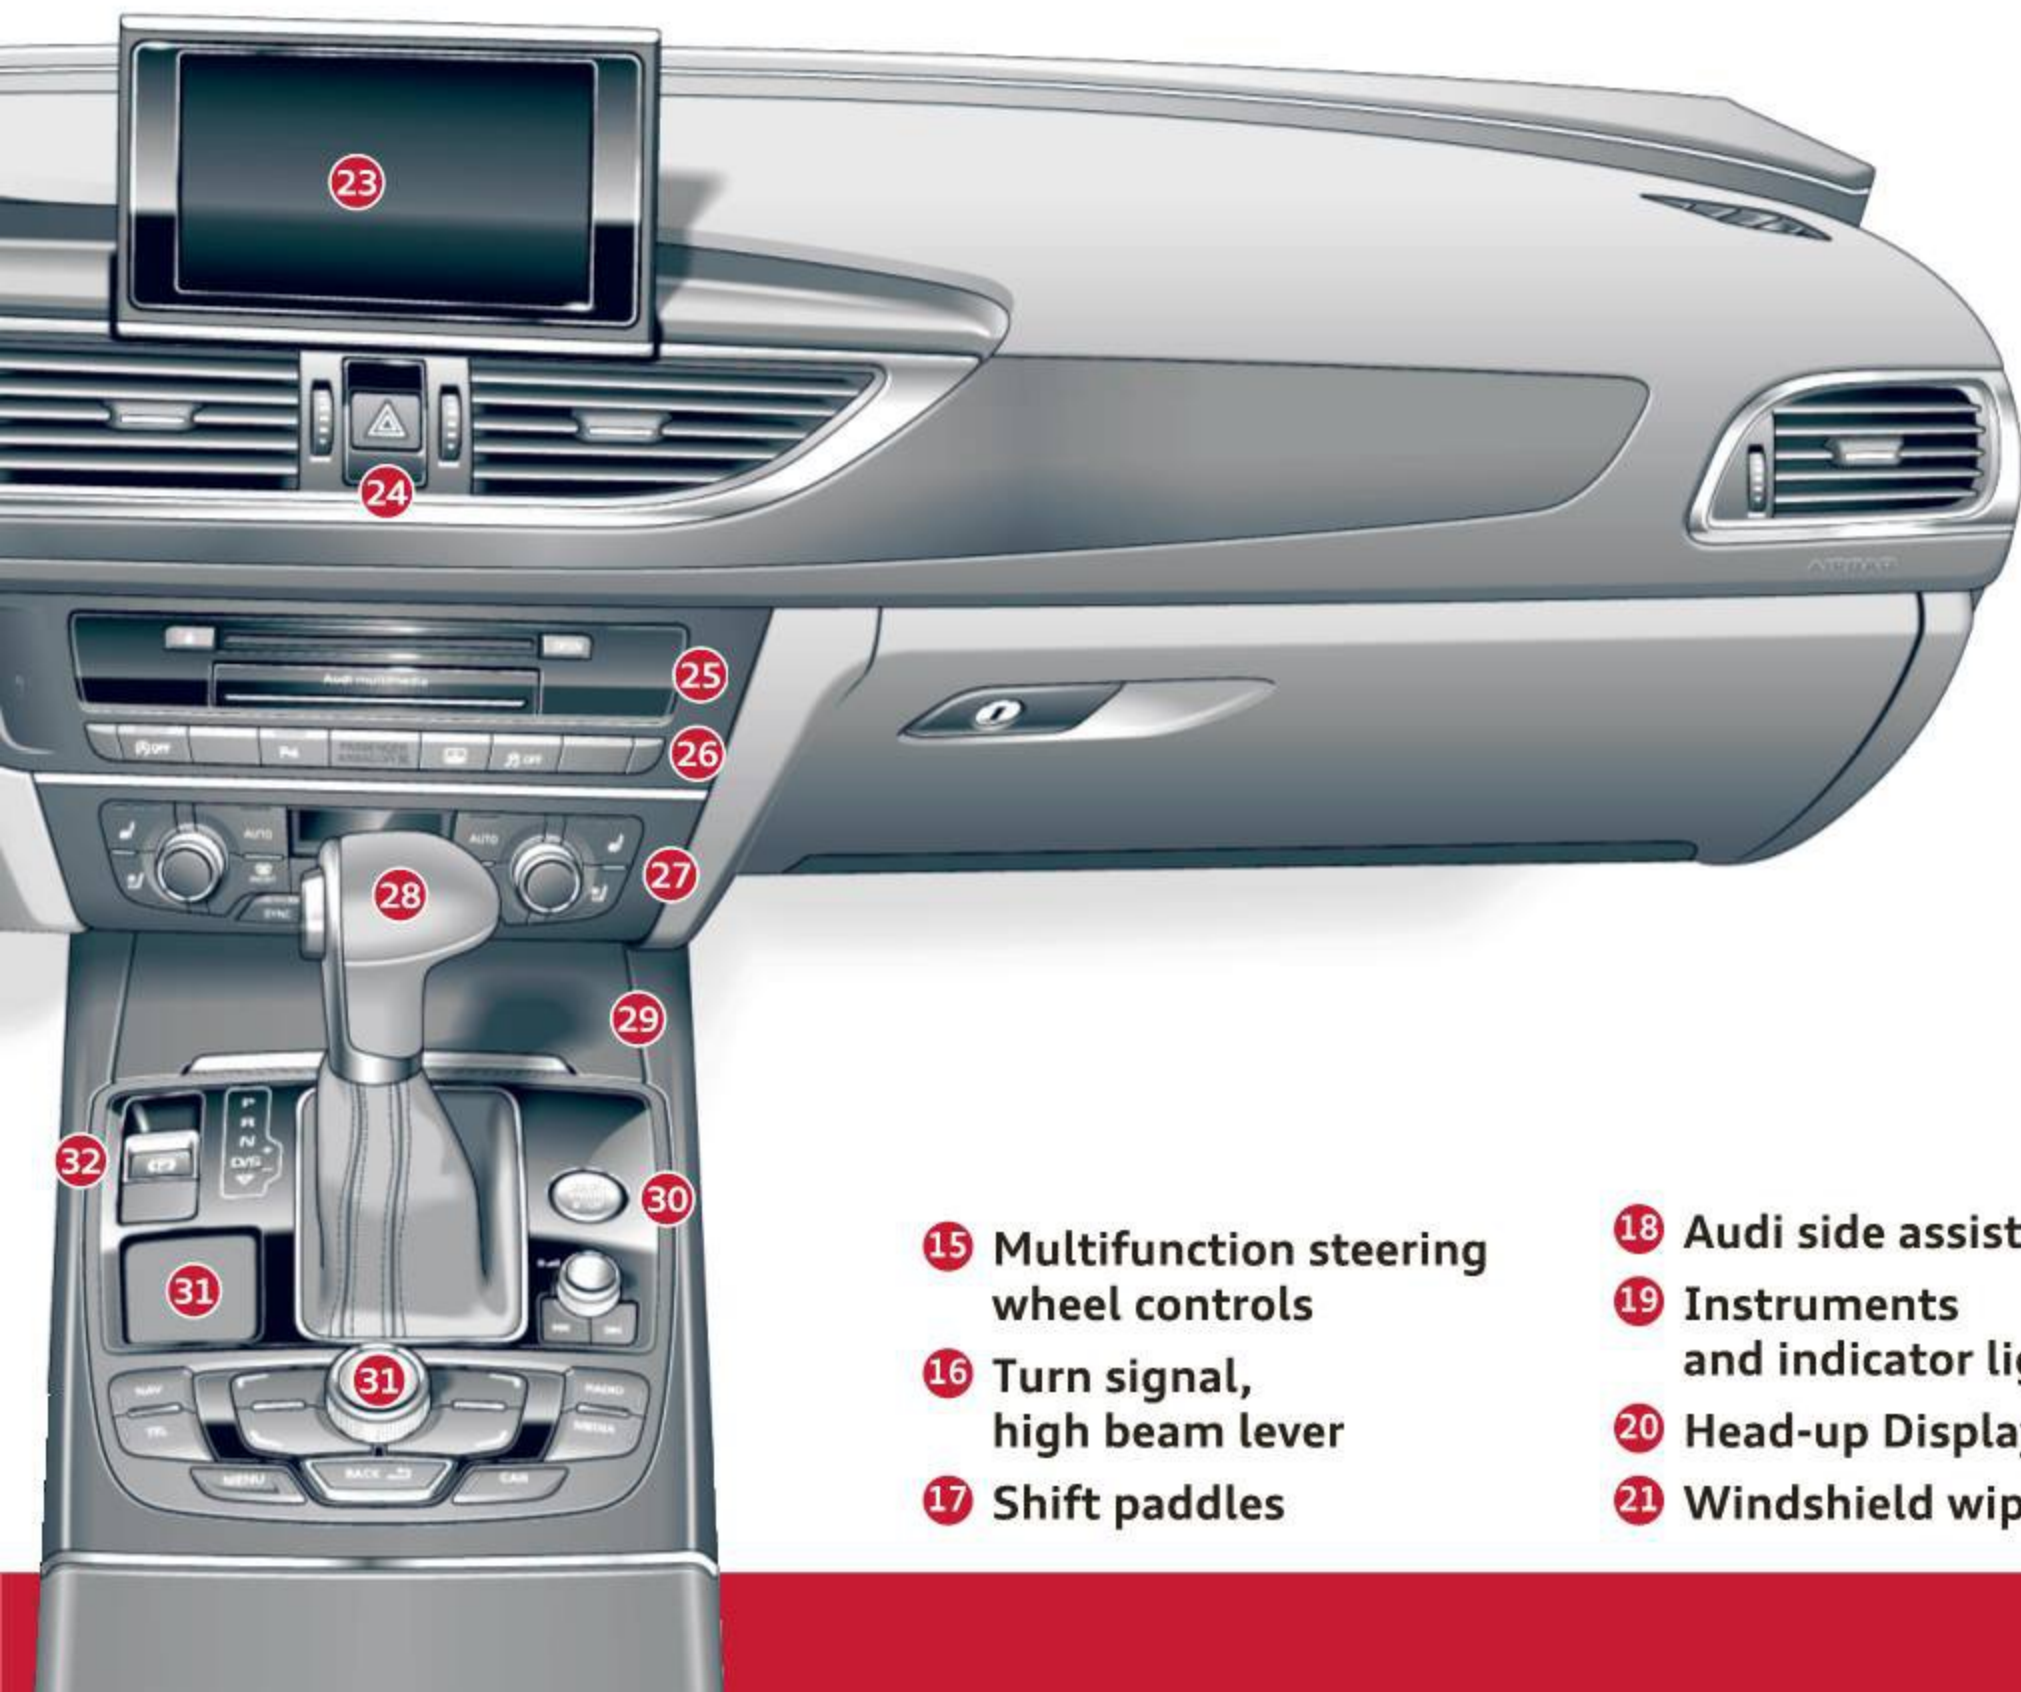


- 15 Multifunction steering wheel controls
- 16 Turn signal, high beam lever
- 17 Shift paddles

- 18 Audi side assist
- 19 Instruments and indicator lights
- 20 Head-up Display
- 21 Windshield wiper controls

- 22  Folding the MMI display in or out
-  Resetting the trip odometer
- 23 MMI display
- 24  Emergency flashers
- 25 MMI drives
- 26  Start-Stop-System
-  Parking system
-  PASSENGER AIR BAG OFF indicator light
-  Rear window sun shade
-  Electronic Stabilization Control (ESC)
- 27 Climate control
- 28 Selector lever
- 29 Storage compartment or ashtray with cigarette lighter
- 30 START ENGINE STOP button
- 31 MMI control console
- 32 Electromechanical parking brake

MMI Functions

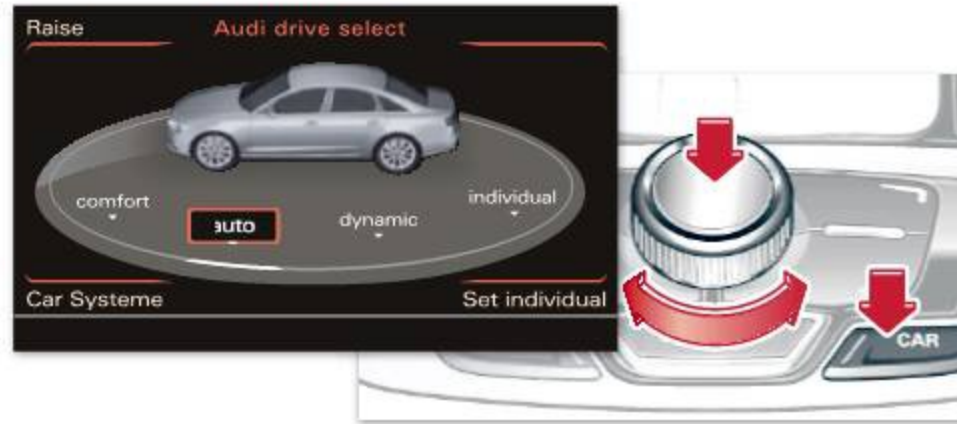

Driver assistance systems

Use the **CAR** button to adjust or operate many driver assistance systems in your Audi.

For detailed information on this, please see your vehicle Owner's Manual.

Pairing Cell Phone to Bluetooth™ System

Depending on your cell phone you can pair your phone using **Secure Simple Pairing** or **standard pairing**.

Simple Secure Pairing (SSP)

- Vehicle must be stationary with ignition on. Bluetooth system will be visible for 5 minutes.
- Press the **TEL** function button on the MMI.
- Select the "Search for new cell phone" menu item and confirm.
- Select your Bluetooth cell phone in the display and confirm.
- Select the "Handsfree" menu item and confirm your selection.
- Select "Yes" to confirm the 6 digit PIN matching the cell phone display.
- Select PAIR on the phone to complete pairing.

Standard pairing

- Follow steps 1-5 from above.
- Select "Yes" to confirm the 4-digit PIN.
- Enter the same 4-digit PIN into your cell phone.
- Select PAIR on the phone to complete pairing.

Various phones required that a confirmation be accepted for automatic future connections between the phone and MMI system as well as acknowledging the synchronization of the address book between the phone and MMI.

Advanced key

Opening and closing the vehicle

With advanced key, you can lock and unlock your vehicle without using the remote control key. You only need to carry the remote control key with you.

Unlocking the vehicle:

Take hold of one of the door handles.

Locking the vehicle:

Place the selector lever in the P position.

Touch the sensor **1** on one of the door handles.



⚠ WARNING

When you leave the vehicle, always take the ignition key with you. This will prevent passengers (children, for example) from accidentally being locked in the vehicle should they accidentally press the power locking switch in the front doors.

⚠ WARNING

When you lock your vehicle from the outside, do not leave anyone - especially children - inside the vehicle. Remember, when you lock the vehicle from the outside the windows cannot be opened from the inside.

⚠ WARNING

Always ensure that no one is within range of the rear lid when it is moving, in particular close to the hinges - fingers or hands can be pinched.

Starting the engine

Use the START ENGINE STOP button to switch the ignition on and start the engine. The master key must be inside the vehicle.

Switching the ignition on/off:


Do not press the brake pedal and press the START ENGINE STOP button.

Starting the engine:

Press the brake pedal, move the selector lever to P or N and press the START ENGINE STOP button.

Stopping the engine:

Stop the vehicle. Move the selector lever into P or N and press the START ENGINE STOP button.

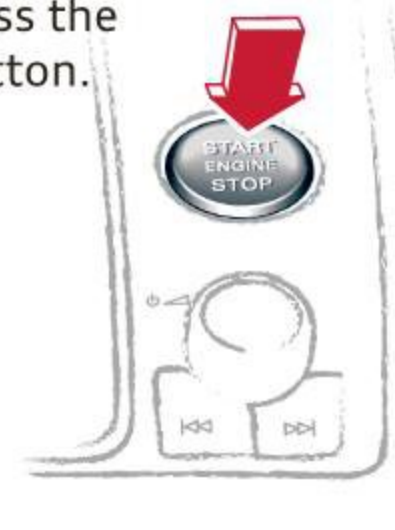

Adjusting the seats

- 1 Lumbar support or Multifunction button
- 2 Switching the massage function on or off
- 3 Seat height and fore-and-aft adjustment:
 - Front of the seat cushion up/down
 - Back of the seat cushion up/down
 - Seat up/down
 - Seat forward/back
- 4 Seatback adjustment:
 - Backrest forward/back



Adjusting the headrests

To move the head restraint down or back, press the side button 5. Adjust the head restraint so the upper edge is as even as possible with the top of your head.


⚠ WARNING

Thoroughly review your Owner's Manual for warnings and other important information about proper restraint use and what you can do to reduce the risk of injury in accidents. Failure to properly use restraint systems can cause serious personal injury.

Multifunction button

You can adjust the massage function, lumbar support, side bolsters and upper thigh support using the multifunction button 1.

- Turn the outer ring A on the multifunction button. The possible seat adjustments are shown in the MMI display C.
- Turn the outer ring A to select the desired seat adjustment C.
- The arrows displayed D indicate the possible adjustments. Press the multifunction button to select the desired item B that is indicated by the arrow.

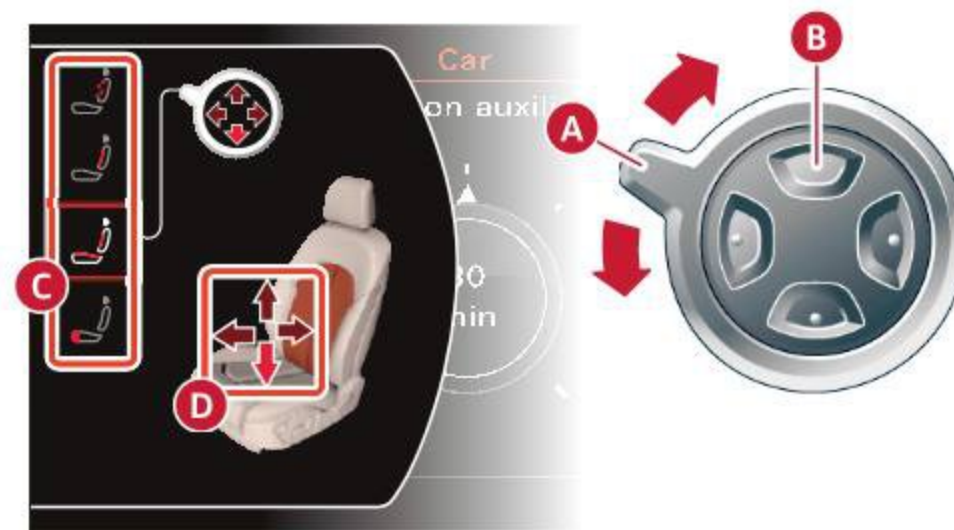

⚠ WARNING

Never install rear facing child seats or infant carriers on the passenger seat. A child will be seriously injured or killed when the passenger airbag inflates.

⚠ WARNING

Always fasten safety belts before driving off. Always make sure passengers are properly restrained. Children 12 years old and younger must ride in the rear seat and be properly restrained as indicated in the Owner's Manual. The airbag is supplemental and does not replace safety belt use.

⚠ WARNING

Front seat passengers must never ride in a moving vehicle with the seatback reclined. The risk of personal injury increases with increasing rearward angle of the seatback. Safety belts only offer protection when the seatback is upright and belts are properly positioned on the body. Adjust your seats only when the vehicle is at a complete standstill.

⚠ WARNING

The airbag system cannot protect you properly if you are seated too close to any of the airbag locations. When adjusting their seat positions, it is important that both the driver and front passenger keep their upper bodies at a minimum safe distance of 10 inches (25 cm) between the chest and the steering wheel/instrument panel.

Start-Stop-System

Engine stop



1 Brake the vehicle until it comes to a complete stop ...



2 Continue pressing the brake pedal until the engine automatically stops ...



3 the (A) indicator light turns on.

If you do not want to use the system, you can press the (A) OFF button to switch it off.

Engine start




1 Before you continue driving, remove your foot from the brake pedal and the engine will start automatically ...



2 the indicator light turns off.

Automatic transmission

Selector lever positions

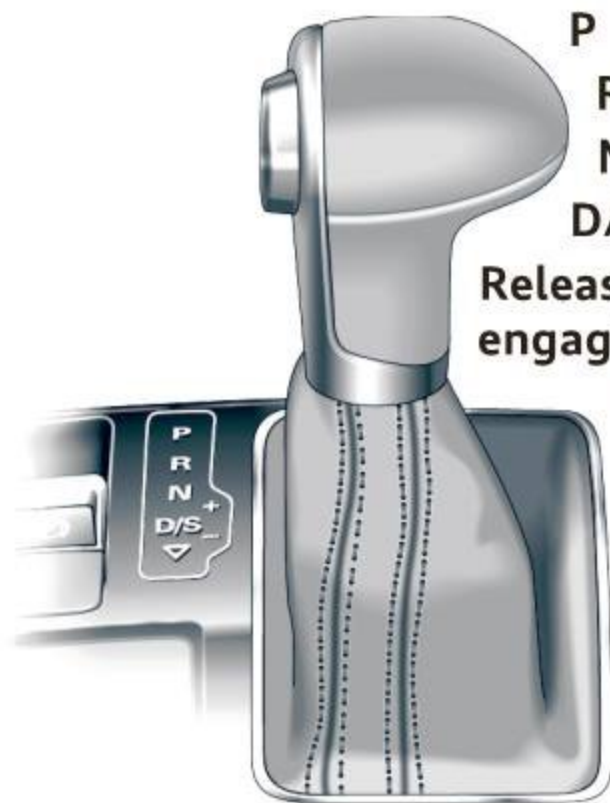

- P** Park
- R** Reverse
- N** Neutral (Idle)
- D/S** Drive/Sport

Releasing the selector lever lock and engaging a gear: Switch the ignition on, press the brake pedal and press the lock button on the selector lever. Place the selector lever in the D/S position to drive forward. When switching from D to S or from S to D, you must move the selector lever back.

tiptronic: To shift manually, move the selector lever to the

right out of the D/S position. The driver information system displays the gears.

Shifting up/down:

Press the selector lever forward/back.



WARNING

Night vision assistant has limits and cannot always detect pedestrians. Always pay close attention to traffic and the area around your vehicle even when night vision assistant is switched on.

Night vision assistant

The night vision assistant shows the area in front of the vehicle in the instrument cluster display when it is dark outside the outside temperature is under 77 °F (25 °C). The system highlights pedestrians that it detects in yellow. Detected pedestrians are marked in red if they are within a critical distance.

Switching on/off: Switch the ignition and the headlights on. Press the  button located near the light switch.

All-weather lights

Reduces the glare from your own headlights when visibility is poor, for example on wet roads. To activate, the light switch must be turned to the AUTO position.

Switching on/off: Press .





Fuel filler door

Opening: Unlocking the vehicle and press the left side of the fuel filler door.

Closing: Press the fuel filler door in until it latches.



Fuel cap

Tighten fuel cap clockwise as far as it will go. The Malfunction Indicator Light will illuminate, if your fuel cap is not properly sealed. The label on the inside of the fuel filler door indicates the correct fuel type.




Head-up Display

The Head-up Display projects warnings, information from assistance systems and/or navigation information on the windshield.

Switching on/off: Press .

Adjusting the projection height: Turn the  knob.

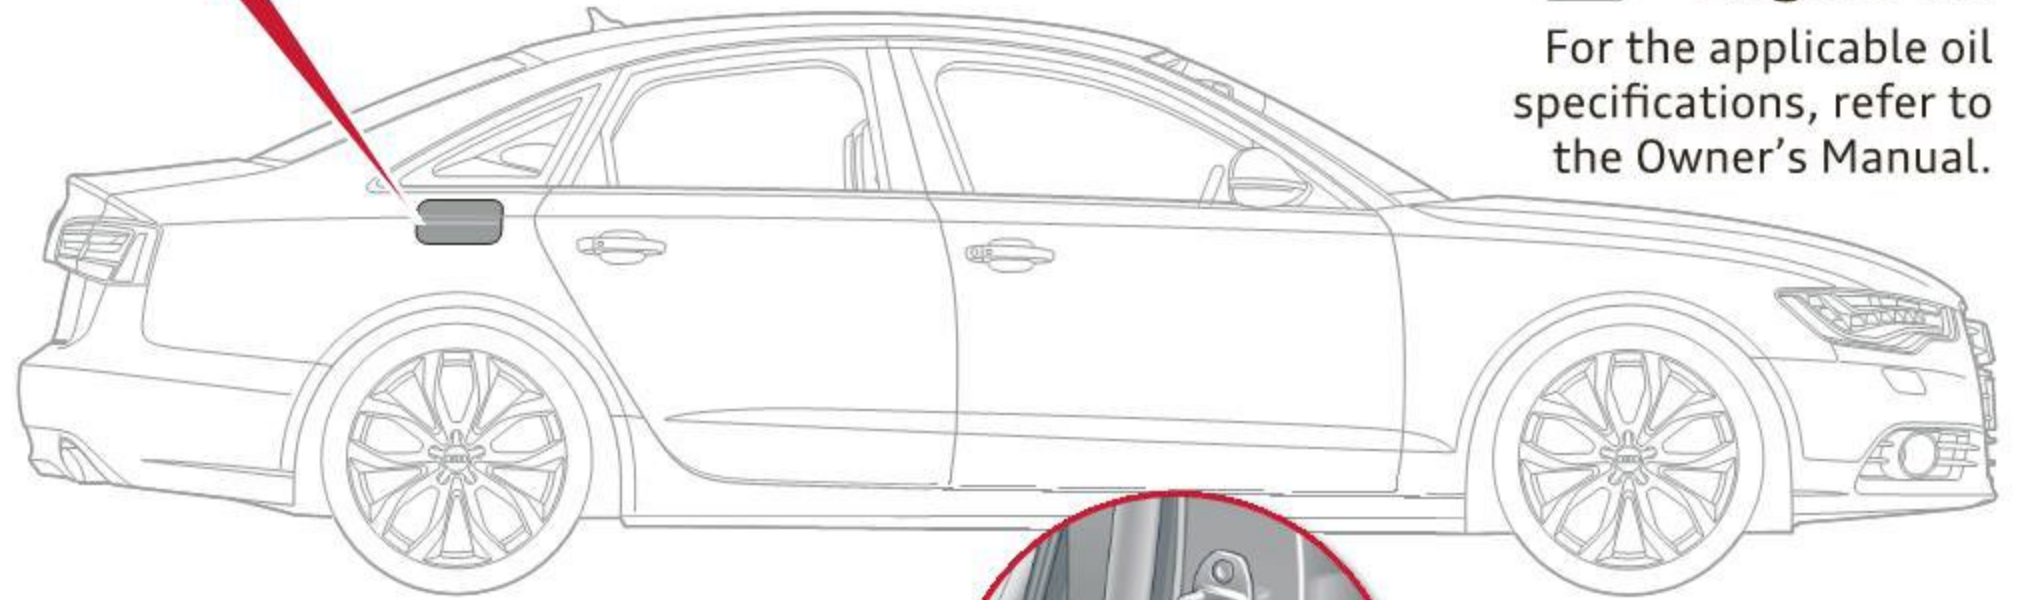

Tire pressure monitoring system

The TPMS must be reset via MMI if the tire pressure is adjusted or wheels are changed.



Tire pressures

The label with the correct tire pressures is located on the driver's door pillar.



Engine oil

For the applicable oil specifications, refer to the Owner's Manual.

Multi Media Interface

MMI components

1 Driver information system

2 Multifunction steering wheel

Press the **rocker switch**  to the left or right to select the menu tabs in the driver information display.

Press the  **button** to call up the submenu in an activated tab.

Roll the **left thumbwheel** to select a menu item.

Press the thumbwheel to confirm the selection.

Roll the **right thumbwheel** to adjust the volume.

Press the thumbwheel to mute the MMI.

Press the  **button** to access a stored function.

Press the  **button** to repeat the last navigation announcement.

Press the  **button** briefly to activate the voice recognition system.

After the <Beep>, you can say the desired commands.

To deactivate, press and hold the  **button** until you hear the message <Cancel>.

3 Button for opening/closing the MMI display


4 MMI display

5 MMI drives

WARNING

Distraction causes accidents:

- Never enter data while driving!
- Obey traffic laws & road signs!
- Refer to the Owner's Manual!

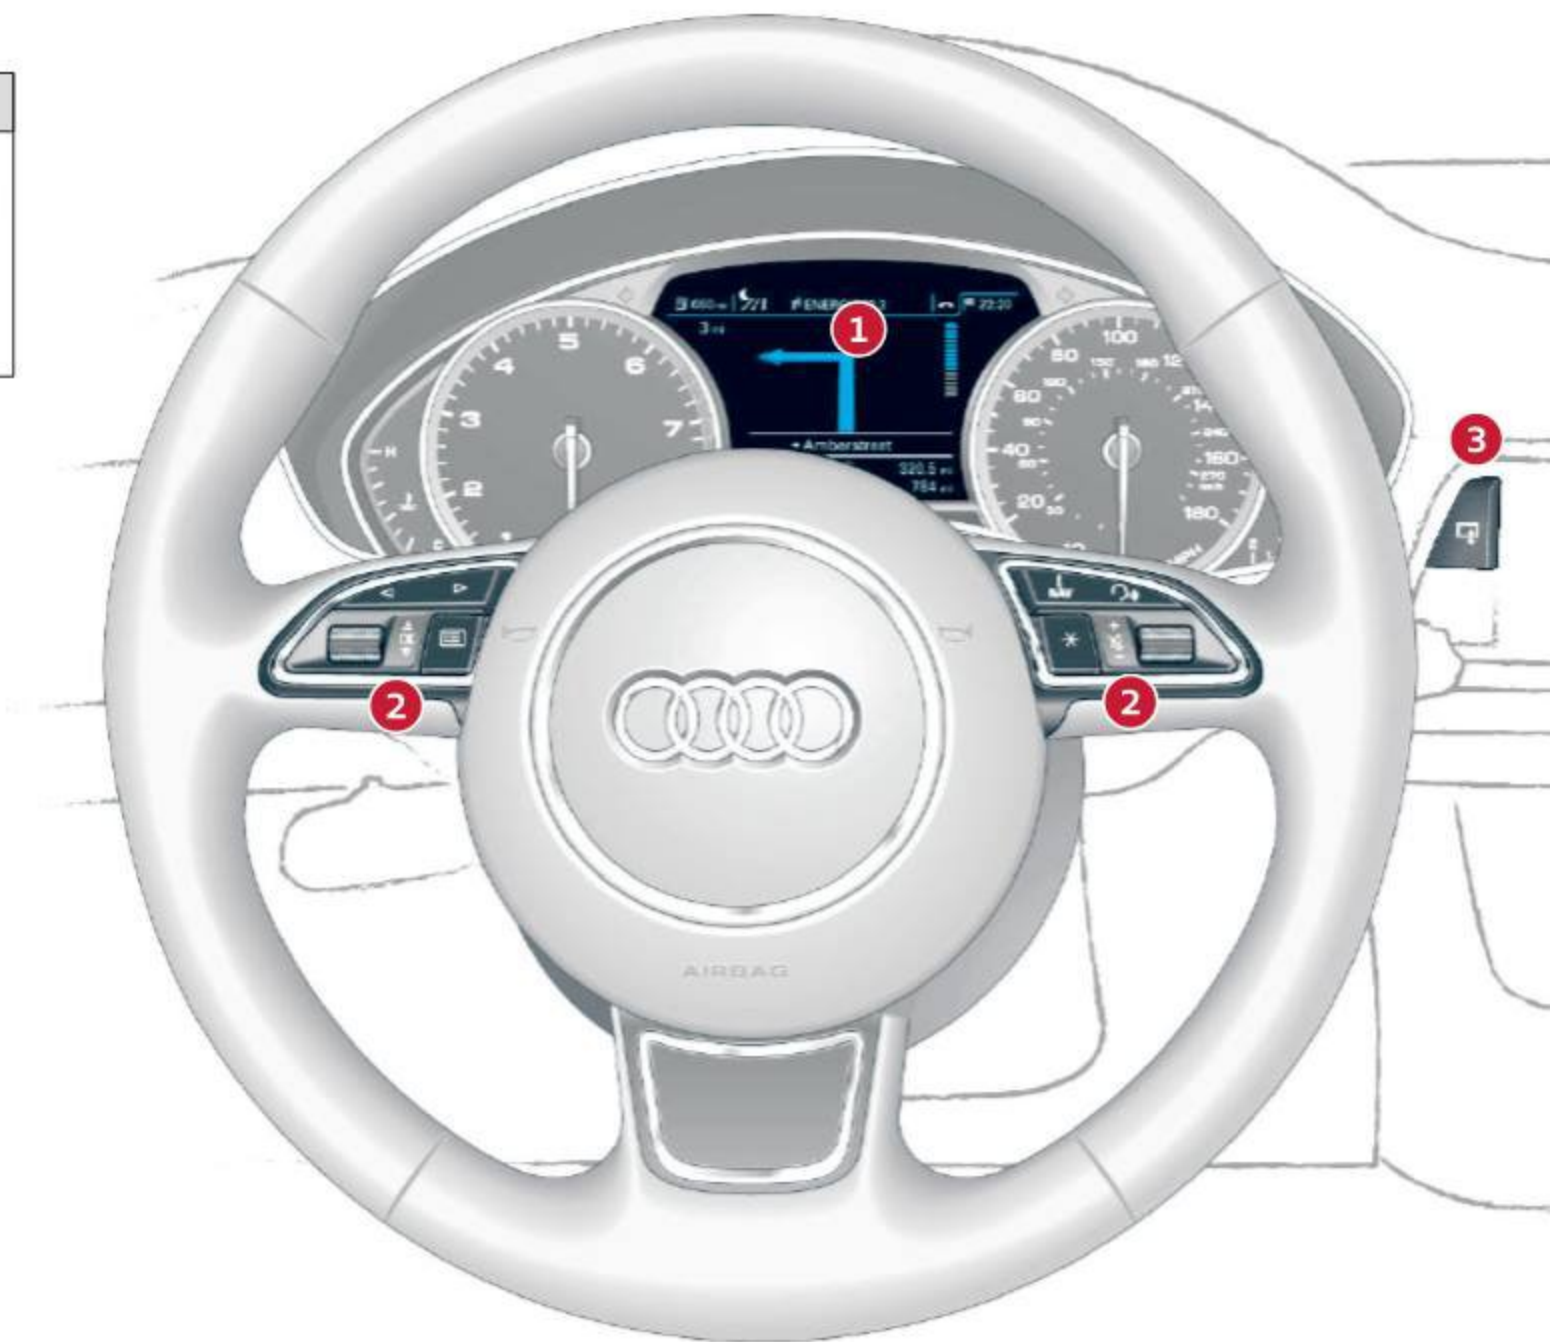



- 6 On/Off button**
Switching on/off: Press briefly/press and hold.
Adjusting the volume: Turn.
Mute: Press briefly.

- 7 Arrow buttons**
Press briefly: Previous/next radio station, select track.
Press and hold: Fast forward/rewind.


- 8 MMI touch control panel**
 You can enter individual letters, numbers and symbols or control selected MMI functions with your finger.

- 9 Function buttons**
 Call up main functions such as **RADIO**.

- 10 Control buttons**
 Activate the functions currently shown in the corners of the MMI display.


- 11 Control knob**
To select a menu item: Turn the knob.
To confirm your selection: Press the knob.

- 12 Button **BACK****
 Cancel the selection/go back to the function above.

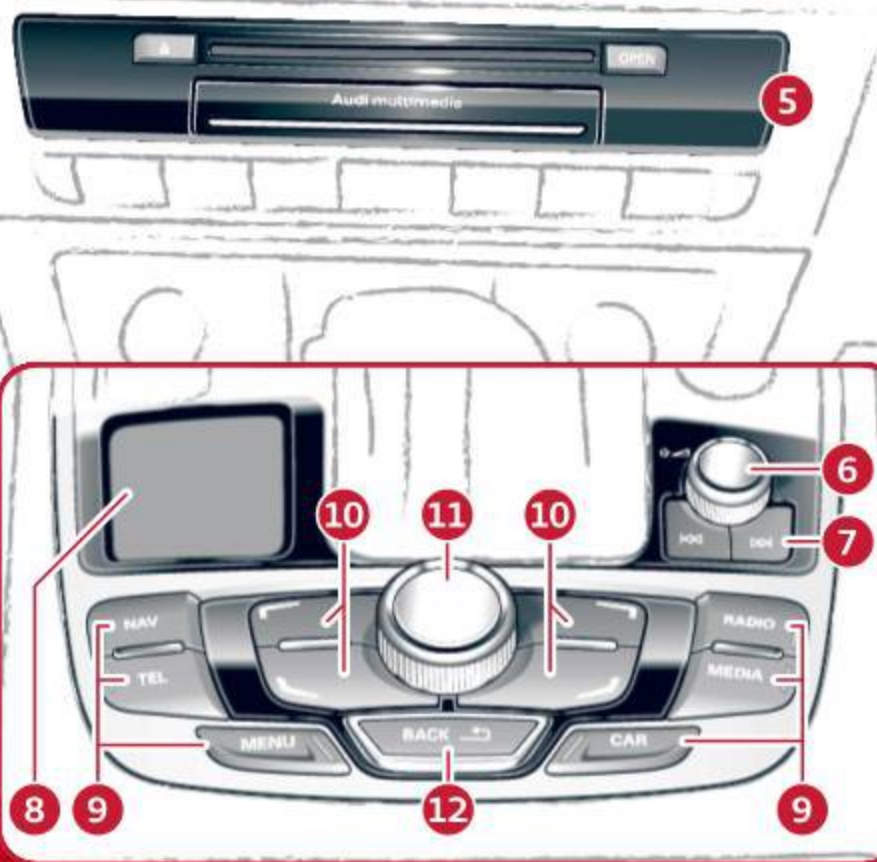

MMI operation

The MMI is operated the same way in all functions.

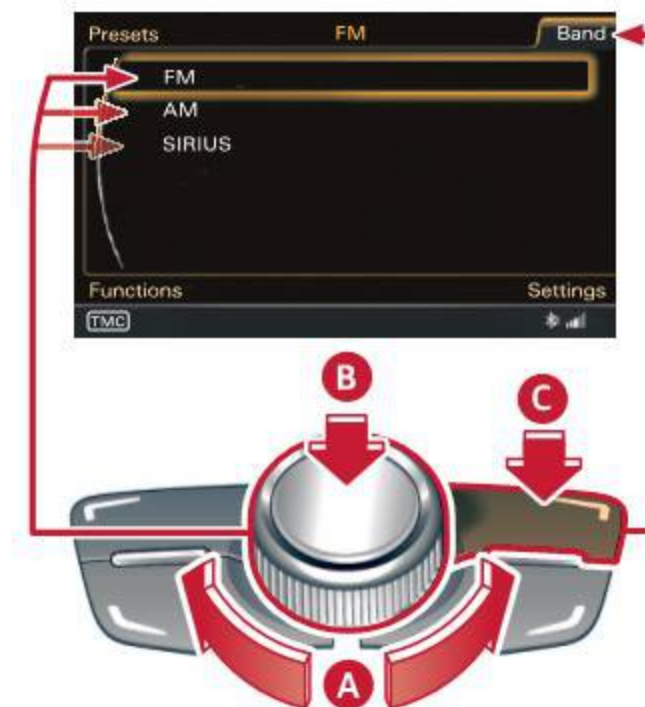


- A Selecting:** Turn the knob.
B Confirming: Press the knob.
C Calling up menus in the display corners: Press the appropriate button.

MMI touch

Entering numbers, letters and symbols

"Write" each character one at a time on the MMI touch control panel using your finger. When the system recognizes a character, it shows it in the MMI display **A** and reads it aloud.

To select a different character **B**, turn the control knob. The selected symbol appears in the input field **C**. Drag your finger from left to right over the control panel to enter a blank space. Move your finger from right to left over the control panel to erase a symbol. Touch the control panel briefly to end the input.

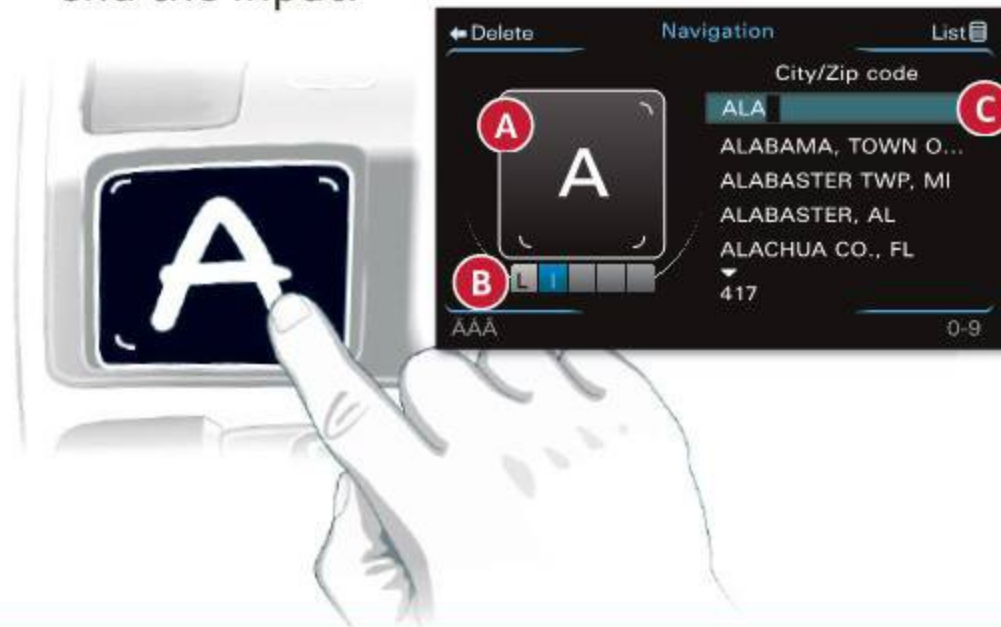


Saving the selected radio station

Press and hold the desired number on the control panel until you hear a signal.


Selecting stored radio stations

Tap the number on the control panel.

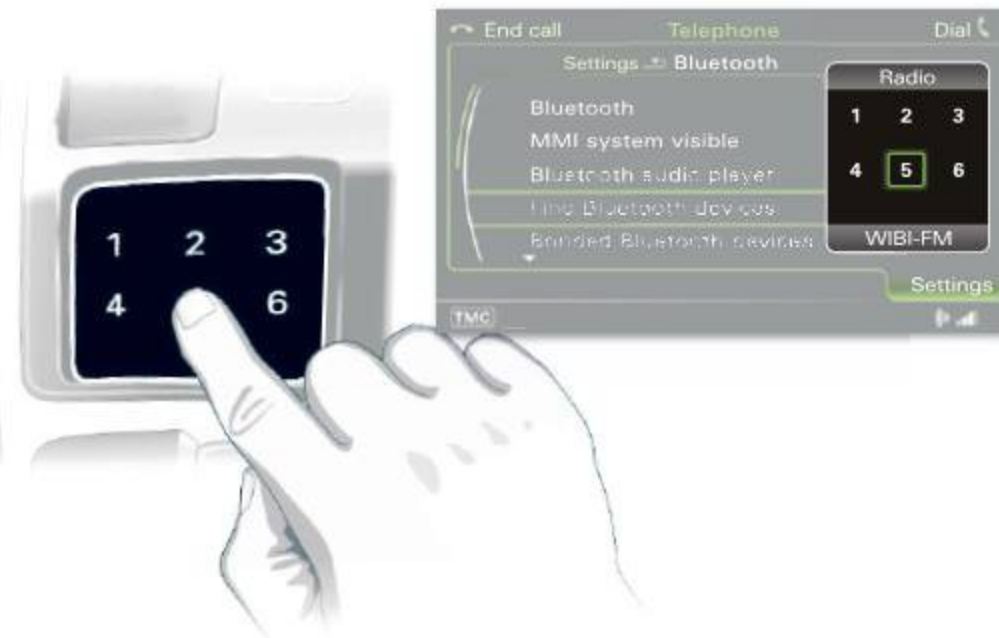


Moving the map with crosshairs

Press the control button to display the crosshairs. Then move your finger across the control panel in the desired direction.

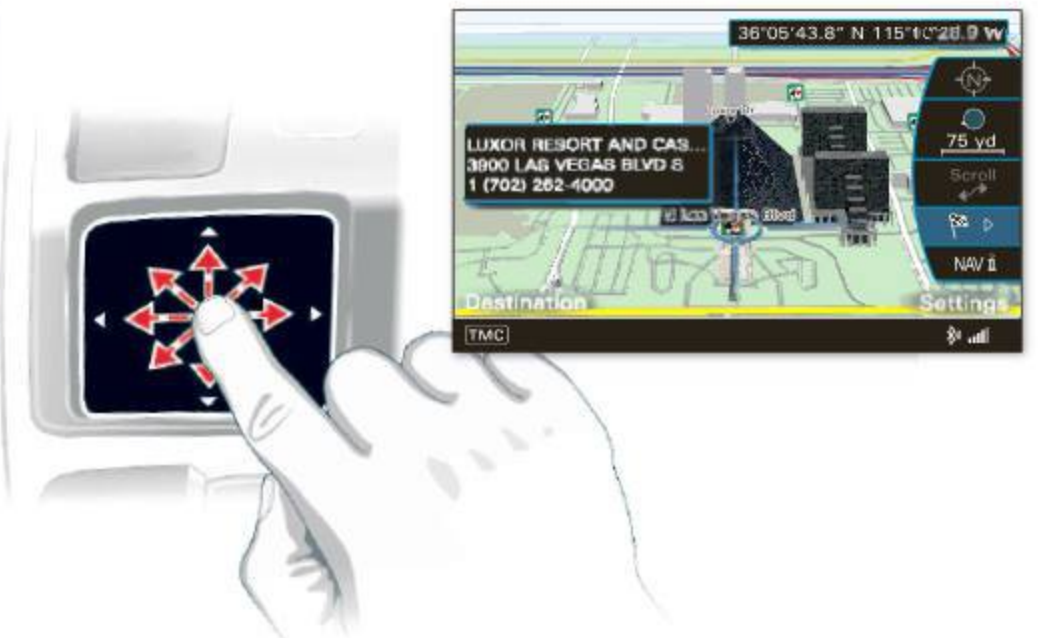

Placing a Phone call

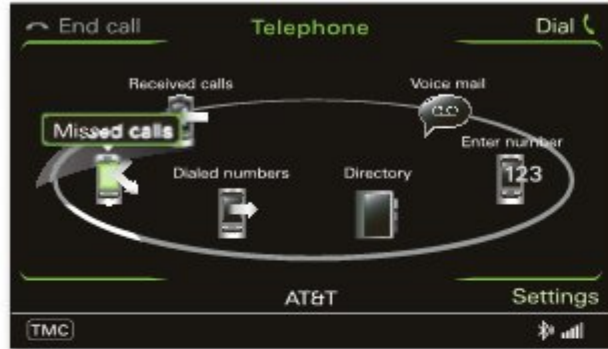

Dialing a phone number from a call list:

- Press the **TEL** function button.
- Turn the control knob to select "Dialed numbers", "Missed calls" or "Received calls" and press to confirm. The phone numbers from the selected list appear in the MMI display.
- Turn the control knob to select the desired number and press to confirm or press the "Dial" control button.



Accessing directory contacts:

- Press the **TEL** function button.
- Turn the control knob to select "Directory" and press to confirm.
- Turn the control knob to select the desired contact and press to confirm.
- Turn the control knob to select the desired number and press to confirm or press the "Call" control button.

Setting the clock




Select in the MMI: **MENU** function button > **Time** control button > **Time source** > **manual** or **GPS**.

Manual: All menu items displayed are set manually.

GPS: Time and date are set by GPS depending on the manually selected Time zone. Therefore, when traveling into another time zone you must manually update the time zone in order for the time clock to update to the correct time.

Voice recognition system

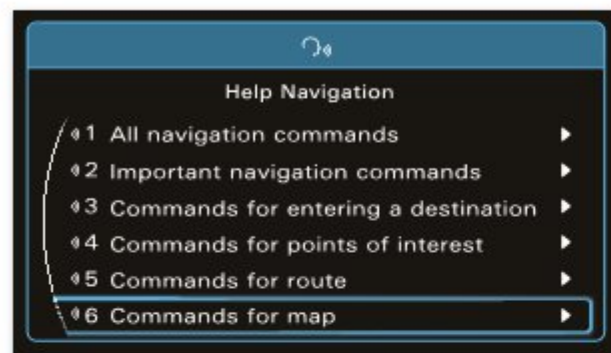

You can operate many MMI functions comfortably using voice commands.

Requirement: Switch the ignition and MMI on, do not use the A/C system, do not have any phone calls in progress, deactivate the parking system.

Switching the system on: Press the  button on the multifunction steering wheel briefly. Say your command (refer to the examples) after the <Beep>. The system gives visual and audio confirmation of your input.

Switching the system off: Press and hold the  button or say <Cancel>.

Improve recognition function: Select the  function button > **Setup MMI** control button > **Voice recognition** > **Individual Speech Training**.

Sample commands

Accessing a directory contact: Say <Call (XY)>, for example, <Call "Max Mustermann">.

Displaying call lists: Say <Telephone> and then <Received calls>, <Dialed numbers> or <Missed calls>.

Direct "One shot" destination entry: Say <Enter destination> and then say the House Number, Street, City and State when prompted by the system. Then say <Start route guidance>.

 



Point of interest search: Say <Navigation>, <Enter point of interest> and then the desired search area, such as <In immediate vicinity>, <In vicinity of destination> or <Along the route>. Say the name or line number for the desired entry.

Direct point of interest selection: Say <Navigation> and then <Next gas station>, <Next parking lot>, <Next hotel>, <Next restaurant>, <Next airport>, <Next train station>, <Next hospital>, for example.

Accessing voice command help: Say <Help>, <Help Telephone>, <Help Navigation>, <Help Media>, etc.



For additional information on indicator lights, refer to your vehicle Owner's Manual.

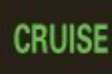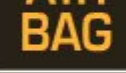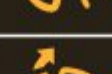 BRAKE	Brake malfunction (USA)		Steering column lock	 (ABS)	Anti-lock brake system (CAN)		Generator		Adaptive light		Turn signals
	Brake malfunction (CAN)		Engine start system		Worn brake pads		Tank system		Light-/rain sensor	 CRUISE	Cruise control (USA)
 PARK	Parking brake (USA)	 (Km/h)	Speed warning system		Parking brake		Windshield washer fluid level		Transmission		Cruise control (CAN)
	Parking brake (CAN)		Adaptive cruise control		Tire pressure monitoring system		Windshield wipers		Transmission		Adaptive cruise control
	Engine cooling system		Pedestrian warning	 TPMS	Tire pressure monitoring system		Remote control key		Electronic steering column lock		Adaptive cruise control
	Engine oil pressure	 AIR BAG	Safety systems (USA)	 EPC	Electronic power control		Remote control key		Engine start system		Adaptive cruise control
	Engine oil level		Safety systems (CAN)		Malfunction indicator Lamp		Battery in remote control key		Electromechanical steering		High beam
	Generator		Electronic Stabilization Control (ESC)		Engine speed limitation		Defective light bulb	© 2012 AUDI AG Audi is constantly improving their products. Modifications in form, equipment, and technology are possible. No legal commitment is implied by the information, illustrations, and descriptions in this Quick Reference Guide. Reprinting, reproduction or translation, in whole or in part, is not permitted without written permission from Audi of America, Inc. Reprinting, reproduction or translation, in whole or in part, is not permitted without written permission from Audi of America, Inc. Subject to modification without notice. Concept and design: Pfriemer GmbH.			
	Safety belt		Electronic Stabilization Control (ESC)		Engine oil level		Rear fog lights				
	Electromechanical steering	 ABS	Anti-lock brake system (USA)		Engine oil sensor		Headlight range control				

Audi A6 | S6
Kurzanleitung
Nordamerika
Englisch 05.2012
131.562.4G0.21



1315624G021

www.audi.com