

Floor Coverings and Headlinings

Specifications

Adhesives, Fluids, Lubricants, and Sealers

Application	Type of Material	GM Part Number
GM Vehicle Care Odor Eliminator	Fluids	Refer to Electronic Parts Catalog.

Repair Instructions

Eliminating Unwanted Odors in Vehicles

GM Vehicle Care Odor Eliminator, Refer to *Adhesives, Fluids, Lubricants, and Sealers* on page 2-18, may control or eliminate odors in the interior and luggage compartment areas of GM vehicles. This non-toxic, biodegradable, odorless product has been shown to greatly reduce or remove the following types of odor:

- Objectionable smells of mold and mildew resulting from vehicle water leaks
- Customer created odors, such as smoke

You may safely use GM Vehicle Care Odor Eliminator on fabrics, vinyl, leather, carpet, and sound deadening materials. You may also induce this product into HVAC modules and instrument panel ducts for the control of non-bacterial related odors.

Note: This product leaves no residual scent and should not be used as an air freshener.

This product may result in the permanent elimination of an odor and may be preferable to customers whose allergies make them sensitive to perfumes. This product may effectively remove odors when directly contacting the odor source. In cases such as water leaks, use this product with diagnostic procedures to first eliminate the primary cause of the odor. Then use further applications on the residual odor to permanently correct the vehicle condition.

How to Use this Product

- Spray GM Vehicle Care Odor Eliminator directly or as an additive with carpet shampoo in steam cleaners.
- Do not use on any interior surface that plain water would deteriorate, because this product will have the same effect. Also avoid letting this product

come into contact with vinegar or any acidic substance. Acid-based products will hamper the effectiveness of GM Vehicle Care Odor Eliminator.

- Complete eight page treatment sheets are enclosed within each case of GM Vehicle Care Odor Eliminator. These treatment instructions range from simple vehicle odor elimination to full step by step procedures for odor removal from water leaks.
- Instructions and cautions are printed on the bottle, but additional help is available. If you encounter a persistent or recurring odor, you may call to obtain additional information and usage suggestions.

Floor Carpet Drying


If the carpet or the pad or insulator is wet, use the following criteria for drying or for replacing the components:

- For a 1-piece carpet assembly bonded to a cotton or a fiber padding, replace the entire assembly.
- For a 2-piece carpet assembly with a cotton or a fiber padding, replace the padding only. While the carpet is out of the vehicle, dry the carpet using the method described below.
- For a 1-piece carpet assembly bonded to a foam padding or attached to a synthetic padding, dry the carpet using the method described below.
- For a 2-piece carpet assembly with a synthetic padding, dry the assembly using the method described below.

Drying Method

1. If you observe puddles of liquid on the carpet face, use a wet vacuum to remove the excess moisture.
2. Blot the face of the carpet with a towel in order to absorb as much moisture as possible.
3. Point a fan at the affected area and air dry the carpet.

Floor Panel Carpet Replacement

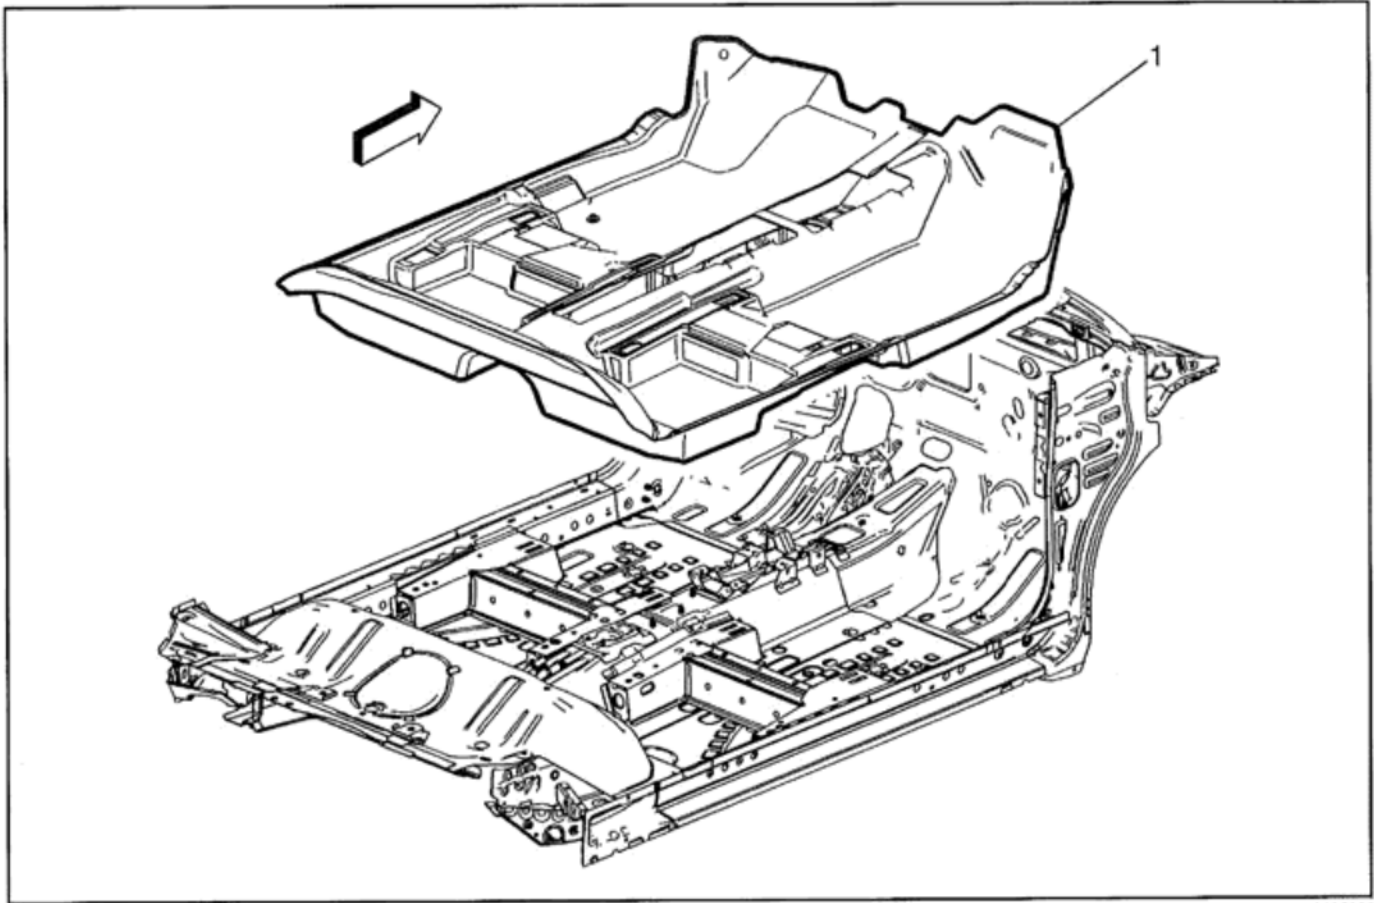


2495939

Floor Panel Carpet Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove front seats. Refer to <i>Driver or Passenger Seat Removal and Installation</i> on page 14-4.	
2. Remove rear seat cushion. Refer to <i>Rear Seat Cushion Removal and Installation</i> on page 14-24.	
3. Remove the front floor console. Refer to <i>Front Floor Console Replacement</i> on page 2-61.	
4. Remove the front side door opening floor carpet retainer. Refer to <i>Front Side Door Opening Floor Carpet Retainer Replacement</i> on page 2-20.	
5. Remove the rear side door opening floor carpet retainer. Refer to <i>Rear Side Door Opening Floor Carpet Retainer Replacement</i> on page 2-21.	
6. Remove the center pillar lower trim panels. Refer to <i>Center Pillar Lower Trim Panel Replacement</i> on page 2-76.	
1	Front Floor Panel Carpet Assembly

Front Side Door Opening Floor Carpet Retainer Replacement

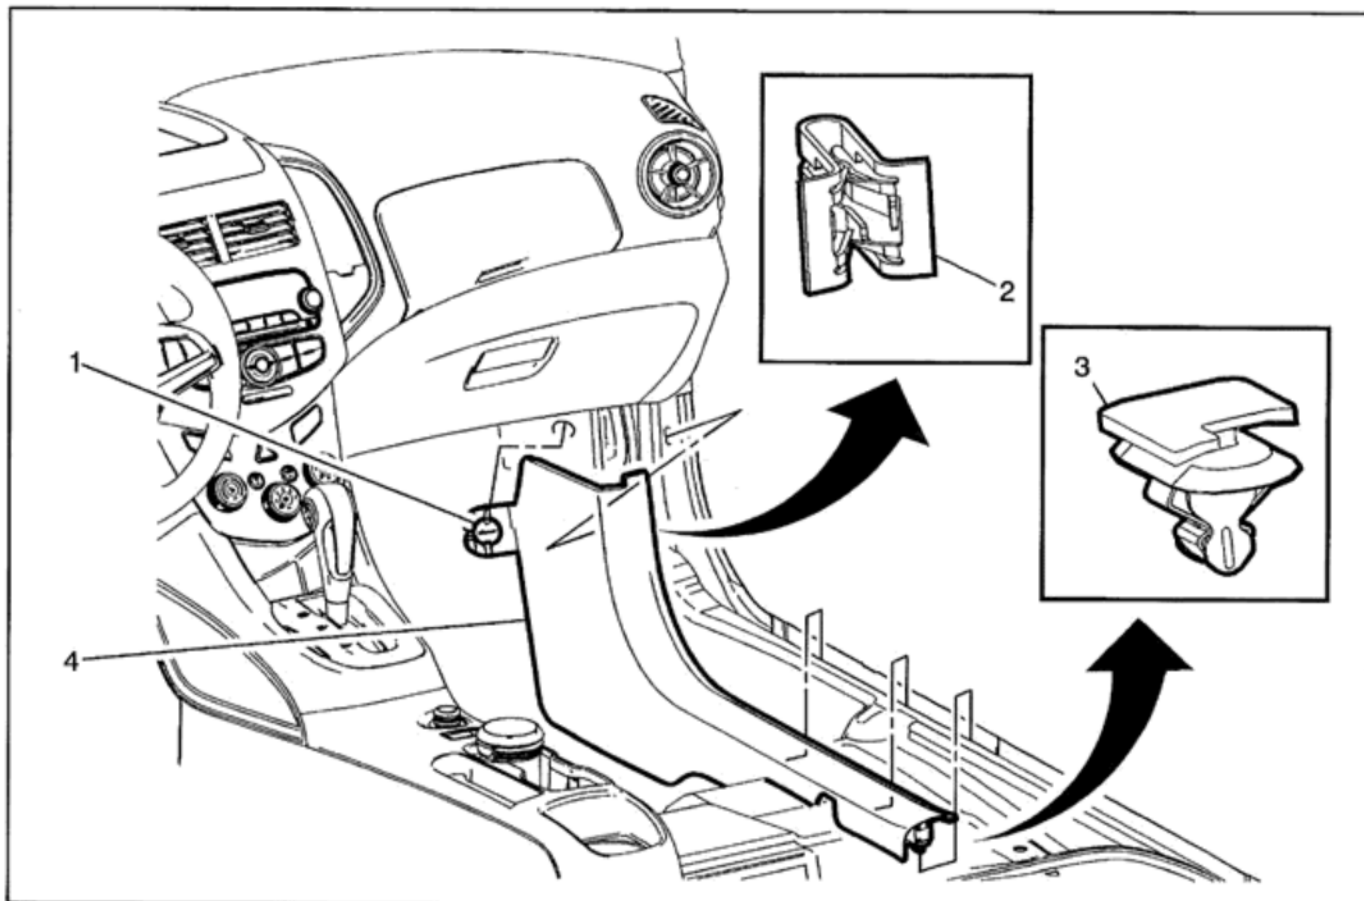


2496582

Front Side Door Opening Floor Carpet Retainer Replacement

Callout	Component Name
1	Front Side Door Opening Floor Carpet Retainer Retainer
2	Front Side Door Opening Floor Carpet Retainer Clip
3	Front Side Door Opening Floor Carpet Retainer Clip (Qty: 3)
4	Front Side Door Opening Floor Carpet Retainer Assembly

Rear Side Door Opening Floor Carpet Retainer Replacement

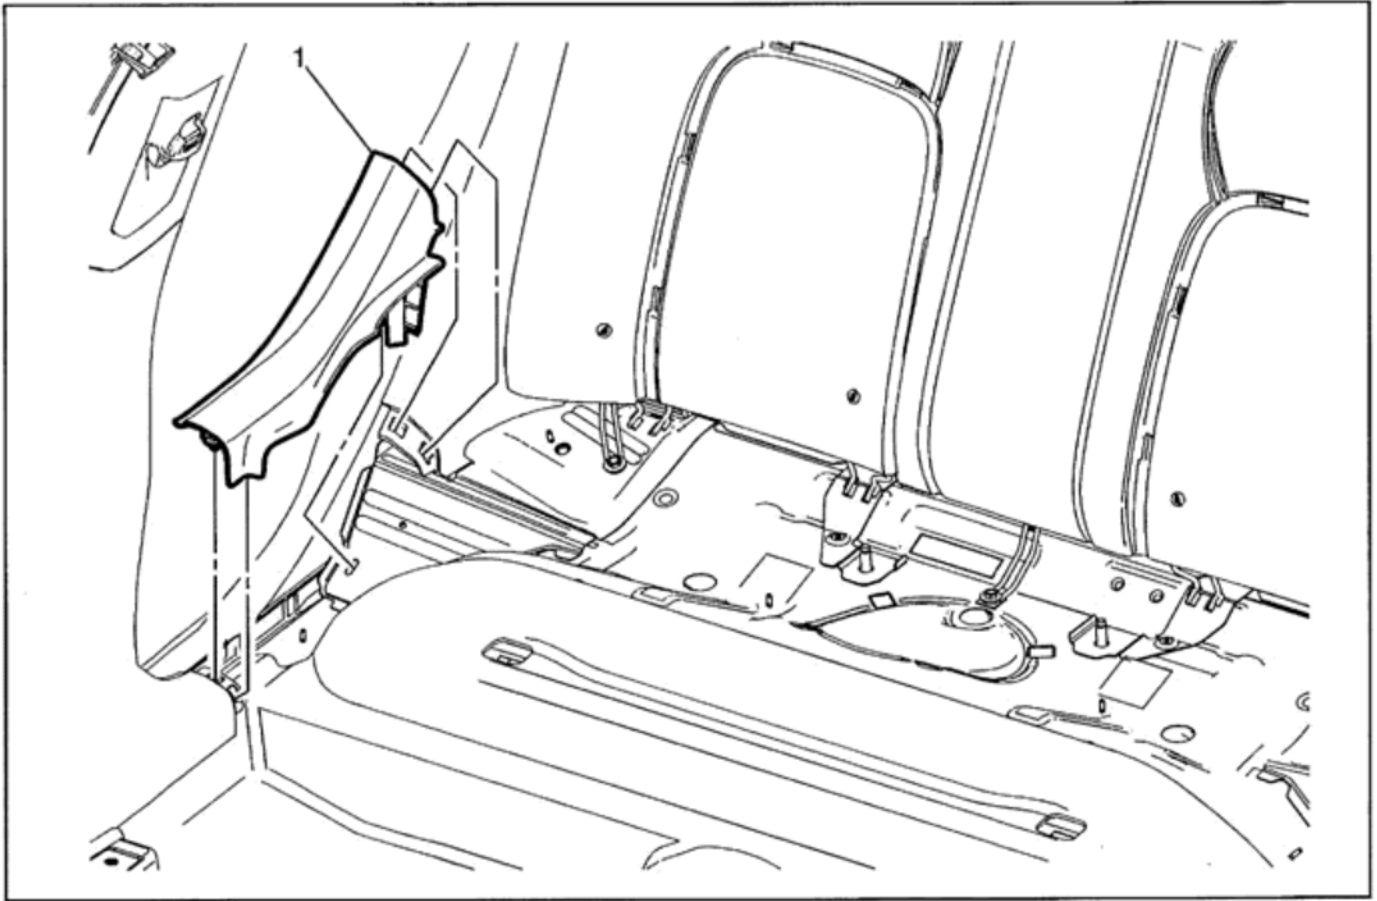


2496883

Rear Side Door Opening Floor Carpet Retainer Replacement

Callout	Component Name
Preliminary Procedure	
Remove the rear seat cushion. Refer to <i>Rear Seat Cushion Removal and Installation</i> on page 14-24.	
1	Rear Side Door Opening Floor Carpet Retainer Assembly

Rear Compartment Floor Panel Carpet Replacement (Sedan)

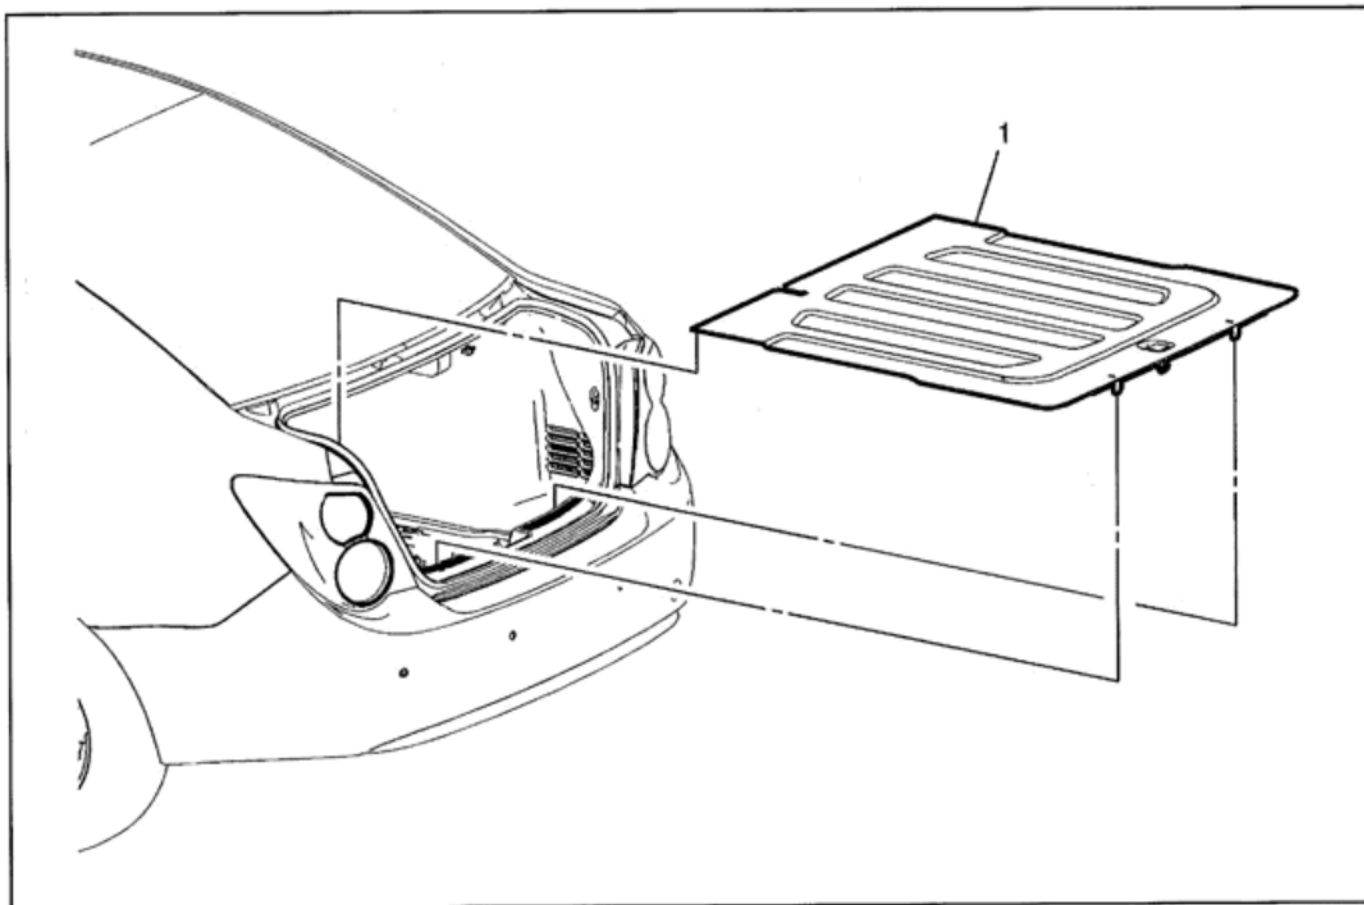


2497588

Rear Compartment Floor Panel Carpet Replacement (Sedan)

Callout	Component Name
1	Rear Compartment Floor Panel Carpet Assembly

Rear Compartment Floor Panel Carpet Replacement (Hatchback)

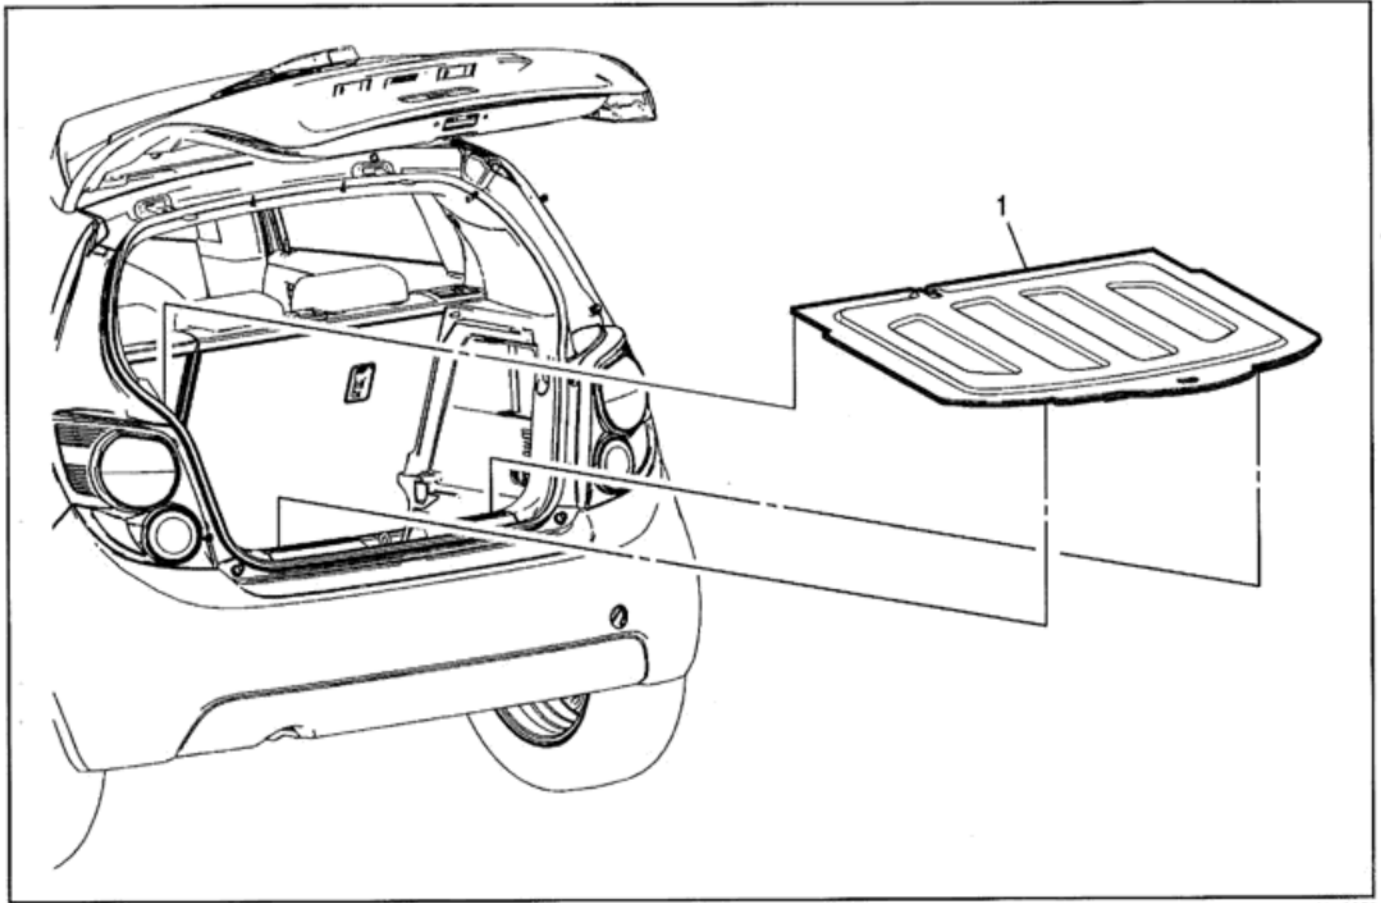


2512259

Rear Compartment Floor Panel Carpet Replacement (Hatchback)

Callout	Component Name
1	Rear Compartment Floor Panel Carpet Assembly

Headlining Trim Panel Replacement (Hatchback with Sunroof)

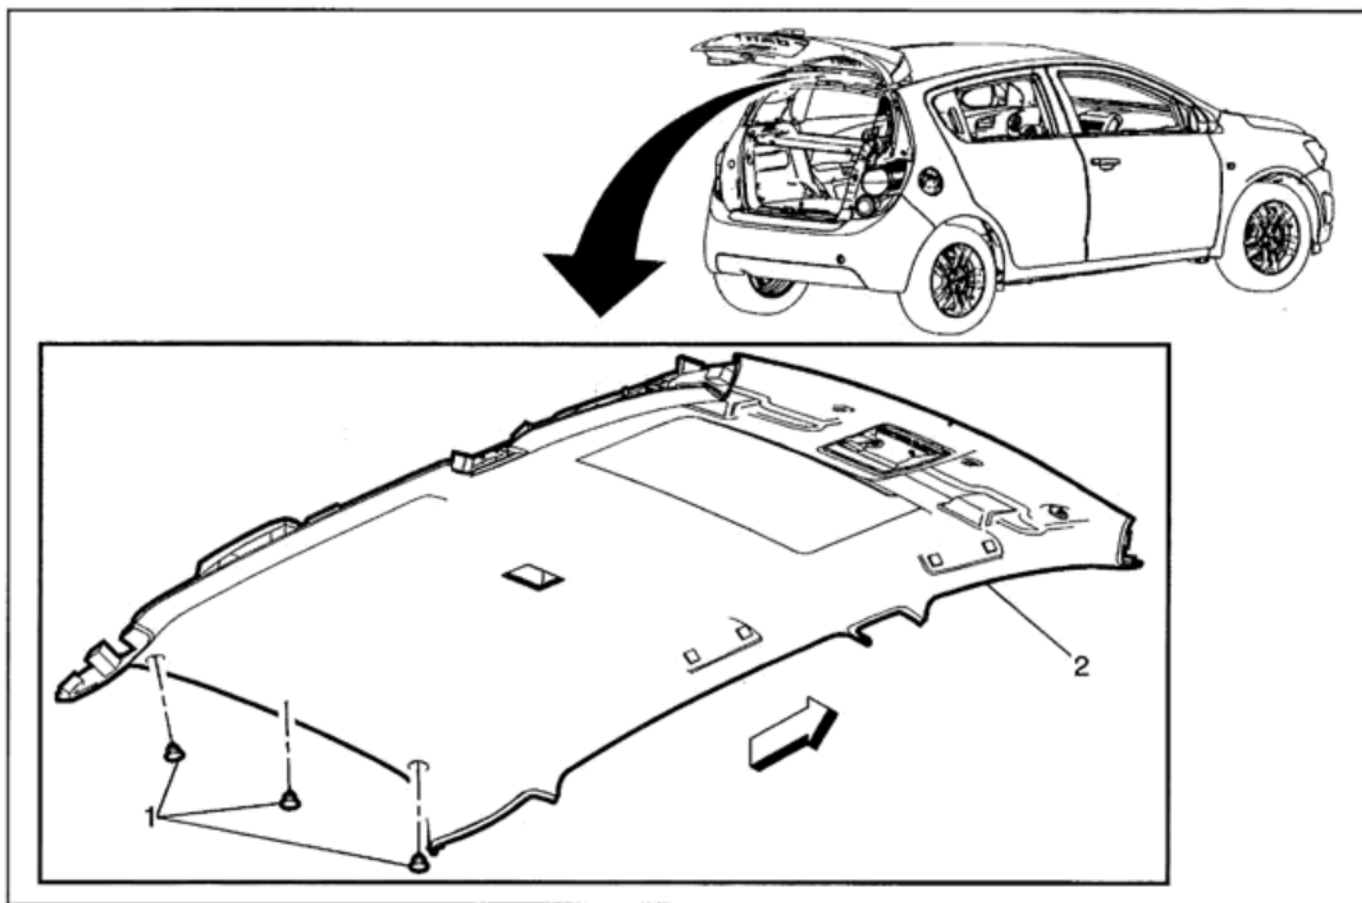

2675362


Headlining Trim Panel Replacement (Hatchback with Sunroof)

Callout	Component Name
Warning: Do not attempt to repair or alter the head impact energy-absorbing material glued to the headliner or to the garnish trims. If the material is damaged, replace the headliner and/or the garnish trim. Failure to do so could result in personal injury. Caution: If a vehicle is equipped with a head curtain inflator module ensure that the inflator module and tether are undamaged. If tether or curtain airbag are damaged in any way, they must be replaced. Caution: Use care when working around the head curtain inflator module. Sharp tools may puncture the curtain airbag. If the head curtain inflator module is damaged in any way, it must be replaced. Preliminary Procedures 1. Disable the SIR system. Refer to <i>SIR Disabling and Enabling</i> on page 13-112. 2. Remove the sunshade. Refer to <i>Sunshade Replacement</i> on page 2-71. 3. Remove the sunshade support. Refer to <i>Sunshade Support Replacement</i> on page 2-72. 4. Remove the roof rail front assist handle. Refer to <i>Roof Rail Front Assist Handle Replacement</i> on page 2-69. 5. Remove the roof rail rear assist handle. Refer to <i>Roof Rail Rear Assist Handle Replacement</i> on page 2-70. 6. Remove the dome lamp bezel. Refer to <i>Dome Lamp Bezel Replacement</i> on page 4-190. 7. Remove the windshield header courtesy lamp. Refer to <i>Windshield Header Courtesy Lamp Replacement</i> on page 4-191. 8. Remove the windshield side garnish molding. Refer to <i>Windshield Side Garnish Molding Replacement</i> on page 2-73. 9. Remove the body lock pillar upper trim panel. Refer to <i>Body Lock Pillar Upper Trim Panel Replacement (Hatchback)</i> on page 2-77 or <i>Body Lock Pillar Upper Trim Panel Replacement (Sedan)</i> on page 2-78. 10. Remove the center pillar upper trim panel. Refer to <i>Center Pillar Upper Trim Panel Replacement</i> on page 2-75. 11. Move the front seat fully forward and recline.	
1	Headliner Trim Panel Retainer (Qty: 3)
2	Headliner Trim Panel Assembly
	Procedure Disconnect the electrical connectors.

Headlining Trim Panel Replacement (Hatchback with Sunroof) (cont'd)

Callout	Component Name
	Note: When installing a new headliner, tape any unused connector to the headliner with a high adhesive tape.

Headlining Trim Panel Replacement (Hatchback without Sunroof)

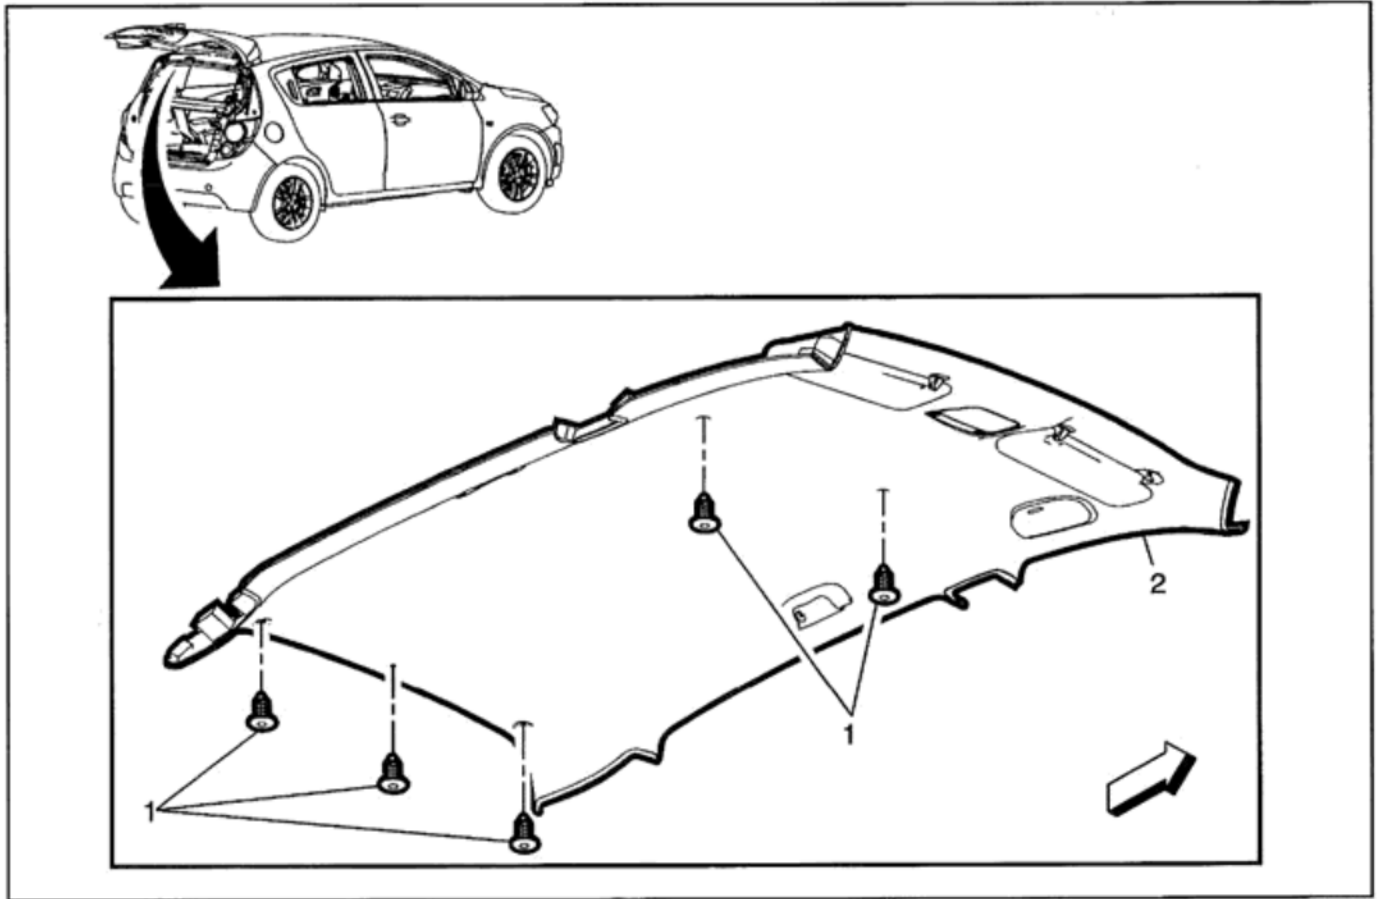

2510665


Headlining Trim Panel Replacement (Hatchback without Sunroof)

Callout	Component Name
Warning: Do not attempt to repair or alter the head impact energy-absorbing material glued to the headliner or to the garnish trims. If the material is damaged, replace the headliner and/or the garnish trim. Failure to do so could result in personal injury. Caution: If a vehicle is equipped with a head curtain inflator module ensure that the inflator module and tether are undamaged. If tether or curtain airbag are damaged in any way, they must be replaced. Caution: Use care when working around the head curtain inflator module. Sharp tools may puncture the curtain airbag. If the head curtain inflator module is damaged in any way, it must be replaced. Preliminary Procedures 1. Disable the SIR system. Refer to <i>SIR Disabling and Enabling</i> on page 13-112. 2. Remove the sunshade. Refer to <i>Sunshade Replacement</i> on page 2-71. 3. Remove the sunshade support. Refer to <i>Sunshade Support Replacement</i> on page 2-72. 4. Remove the roof rail front assist handle. Refer to <i>Roof Rail Front Assist Handle Replacement</i> on page 2-69. 5. Remove the roof rail rear assist handle. Refer to <i>Roof Rail Rear Assist Handle Replacement</i> on page 2-70. 6. Remove the dome lamp bezel. Refer to <i>Dome Lamp Bezel Replacement</i> on page 4-190. 7. Remove the windshield header courtesy lamp. Refer to <i>Windshield Header Courtesy Lamp Replacement</i> on page 4-191. 8. Remove the windshield side garnish molding. Refer to <i>Windshield Side Garnish Molding Replacement</i> on page 2-73. 9. Remove the body lock pillar upper trim panel. Refer to <i>Body Lock Pillar Upper Trim Panel Replacement (Hatchback)</i> on page 2-77 or <i>Body Lock Pillar Upper Trim Panel Replacement (Sedan)</i> on page 2-78.	

Headlining Trim Panel Replacement (Hatchback without Sunroof) (cont'd)

Callout	Component Name
10. Remove the center pillar upper trim panel. Refer to <i>Center Pillar Upper Trim Panel Replacement</i> on page 2-75.	
11. Move the front seat fully forward and recline.	
1	Headliner Trim Panel Retainer (Qty: 5)
2	Headliner Trim Panel Assembly Procedure Disconnect the electrical connectors. Note: When installing a new headliner, tape any unused connector to the headliner with a high adhesive tape.

Headlining Trim Panel Replacement (Sedan with Sunroof)

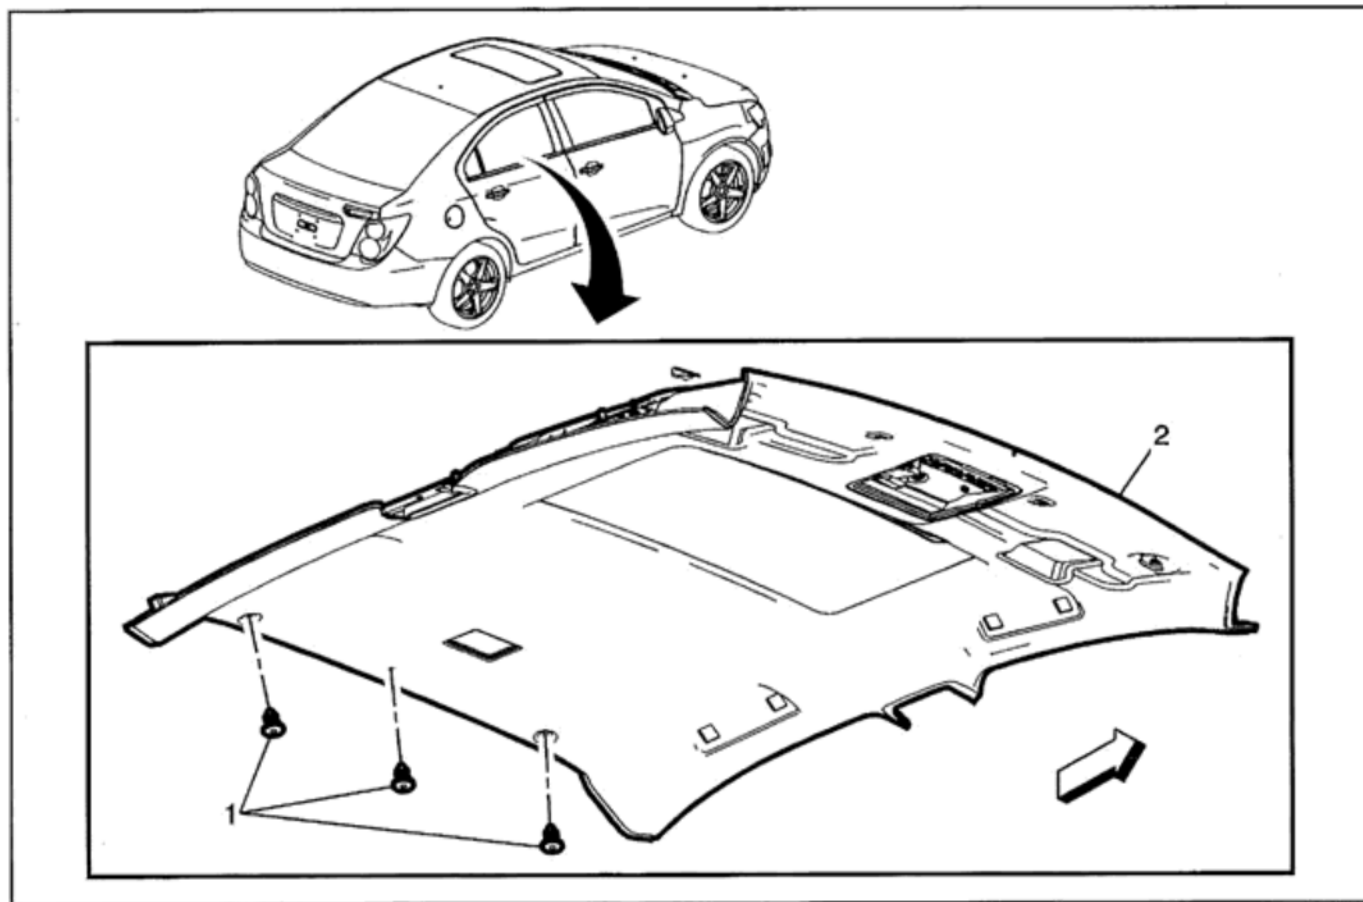

2677367


Headlining Trim Panel Replacement (Sedan with Sunroof)

Callout	Component Name
Warning: Do not attempt to repair or alter the head impact energy-absorbing material glued to the headliner or to the garnish trims. If the material is damaged, replace the headliner and/or the garnish trim. Failure to do so could result in personal injury. Caution: If a vehicle is equipped with a head curtain inflator module ensure that the inflator module and tether are undamaged. If tether or curtain airbag are damaged in any way, they must be replaced. Caution: Use care when working around the head curtain inflator module. Sharp tools may puncture the curtain airbag. If the head curtain inflator module is damaged in any way, it must be replaced. Preliminary Procedures 1. Disable the SIR system. Refer to <i>SIR Disabling and Enabling</i> on page 13-112. 2. Remove the sunshade. Refer to <i>Sunshade Replacement</i> on page 2-71. 3. Remove the sunshade support. Refer to <i>Sunshade Support Replacement</i> on page 2-72. 4. Remove the roof rail front assist handle. Refer to <i>Roof Rail Front Assist Handle Replacement</i> on page 2-69.	

Headlining Trim Panel Replacement (Sedan with Sunroof) (cont'd)

Callout	Component Name
5.	Remove the roof rail rear assist handle. Refer to <i>Roof Rail Rear Assist Handle Replacement</i> on page 2-70.
6.	Remove the dome lamp bezel. Refer to <i>Dome Lamp Bezel Replacement</i> on page 4-190.
7.	Remove the windshield header courtesy lamp. Refer to <i>Windshield Header Courtesy Lamp Replacement</i> on page 4-191.
8.	Remove the windshield side garnish molding. Refer to <i>Windshield Side Garnish Molding Replacement</i> on page 2-73.
9.	Remove the body lock pillar upper trim panel. Refer to <i>Body Lock Pillar Upper Trim Panel Replacement (Hatchback)</i> on page 2-77 or <i>Body Lock Pillar Upper Trim Panel Replacement (Sedan)</i> on page 2-78.
10.	Remove the center pillar upper trim panel. Refer to <i>Center Pillar Upper Trim Panel Replacement</i> on page 2-75.
11.	Move the front seat fully forward and recline.
1	Headliner Trim Panel Retainer (Qty: 3)
2	Headliner Trim Panel Assembly Procedure Disconnect the electrical connectors. Note: When installing a new headliner, tape any unused connector to the headliner with a high adhesive tape.

Headlining Trim Panel Replacement (Sedan without Sunroof)

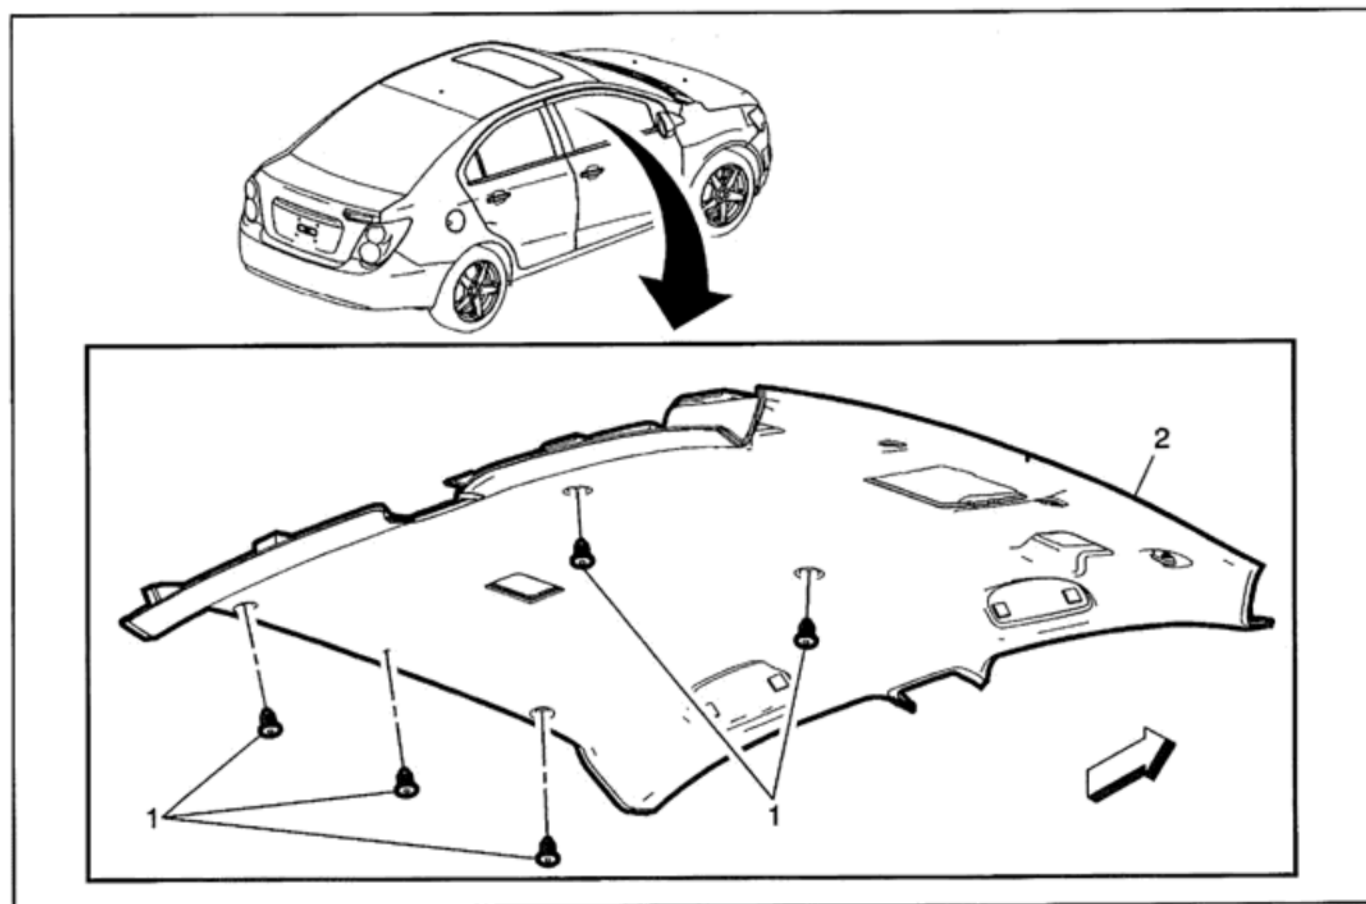

2677368

Headlining Trim Panel Replacement (Sedan without Sunroof)

Callout	Component Name
Warning: Do not attempt to repair or alter the head impact energy-absorbing material glued to the headliner or to the garnish trims. If the material is damaged, replace the headliner and/or the garnish trim. Failure to do so could result in personal injury.	
Caution: If a vehicle is equipped with a head curtain inflator module ensure that the inflator module and tether are undamaged. If tether or curtain airbag are damaged in any way, they must be replaced.	
Caution: Use care when working around the head curtain inflator module. Sharp tools may puncture the curtain airbag. If the head curtain inflator module is damaged in any way, it must be replaced.	

Headlining Trim Panel Replacement (Sedan without Sunroof) (cont'd)

Callout	Component Name
Preliminary Procedures 1. Disable the SIR system. Refer to <i>SIR Disabling and Enabling</i> on page 13-112. 2. Remove the sunshade. Refer to <i>Sunshade Replacement</i> on page 2-71. 3. Remove the sunshade support. Refer to <i>Sunshade Support Replacement</i> on page 2-72. 4. Remove the roof rail front assist handle. Refer to <i>Roof Rail Front Assist Handle Replacement</i> on page 2-69. 5. Remove the roof rail rear assist handle. Refer to <i>Roof Rail Rear Assist Handle Replacement</i> on page 2-70. 6. Remove the dome lamp bezel. Refer to <i>Dome Lamp Bezel Replacement</i> on page 4-190. 7. Remove the windshield header courtesy lamp. Refer to <i>Windshield Header Courtesy Lamp Replacement</i> on page 4-191. 8. Remove the windshield side garnish molding. Refer to <i>Windshield Side Garnish Molding Replacement</i> on page 2-73. 9. Remove the body lock pillar upper trim panel. Refer to <i>Body Lock Pillar Upper Trim Panel Replacement (Hatchback)</i> on page 2-77 or <i>Body Lock Pillar Upper Trim Panel Replacement (Sedan)</i> on page 2-78. 10. Remove the center pillar upper trim panel. Refer to <i>Center Pillar Upper Trim Panel Replacement</i> on page 2-75. 11. Move the front seat fully forward and recline.	
1	Headliner Trim Panel Retainer (Qty: 5)
2	Headliner Trim Panel Assembly Procedure Disconnect the electrical connectors. Note: When installing a new headliner, tape any unused connector to the headliner with a high adhesive tape.