

1 Fitting locations: rear part of vehicle

- ◆ ⇒ ["1.1 Rear lid", page 2](#)
- ◆ ⇒ ["1.2 Rear bumper", page 4](#)
- ◆ ⇒ ["1.3 Rear side, view from left", page 5](#)
- ◆ ⇒ ["1.4 Rear side, view from right", page 6](#)


Component	Chapter	Comment
Battery -A-	⇒ "1.3 Rear side, view from left", page 5	For models with battery in luggage compartment
Battery -A-	⇒ -Fitting locations: in front part of vehicle	For models with battery in engine compartment
Rear lid handle release button -E234-	⇒ "1.1 Rear lid", page 2	
Rear left parking aid sender -G203-	⇒ "1.2 Rear bumper", page 4	
Rear centre left parking aid sender -G204-	⇒ "1.2 Rear bumper", page 4	
Rear centre right parking aid sender -G205-	⇒ "1.2 Rear bumper", page 4	
Rear right parking aid sender -G206-	⇒ "1.2 Rear bumper", page 4	
Rear left park assist steering sender -G716-	⇒ "1.2 Rear bumper", page 4	
Rear right park assist steering sender -G717-	⇒ "1.2 Rear bumper", page 4	
Electronically controlled damping control unit -J250-	⇒ "1.4 Rear side, view from right", page 6	
Battery monitor control unit -J367-	⇒ "1.3 Rear side, view from left", page 5	For models with battery in luggage compartment
Battery monitor control unit -J367-	⇒ -Fitting locations: in front part of vehicle	For models with battery in engine compartment
Reversing camera system control unit -J772-	⇒ "1.1 Rear lid", page 2	
Blind Spot Monitor control unit -J1086-	⇒ "1.2 Rear bumper", page 4	
Blind Spot Monitor control unit 2 -J1087-	⇒ "1.2 Rear bumper", page 4	
High-level brake light bulb -M25-	⇒ "1.1 Rear lid", page 2	
Left tail light -MX3-	⇒ "1.4 Rear side, view from right", page 6	
Right tail light -MX4-	⇒ "1.3 Rear side, view from left", page 5	
Left tail light 2 -MX5-	⇒ "1.1 Rear lid", page 2	
Right tail light 2 -MX6-	⇒ "1.1 Rear lid", page 2	
Aerial amplifier -R24-	⇒ "1.1 Rear lid", page 2	
Aerial amplifier 2 for TV -R83-	⇒ "1.1 Rear lid", page 2	
Aerial amplifier for mobile telephone -R86-	⇒ "1.3 Rear side, view from left", page 5	
Aerial amplifier 2 -R111-	⇒ "1.1 Rear lid", page 2	
Rear bumper aerial for entry and start system -R136-	⇒ "1.2 Rear bumper", page 4	

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Component	Chapter	Comment
Frequency modulation (FM) frequency filter in positive wire -R179-	⇒ "1.3 Rear side, view from left", page 5	
Subwoofer -R211-	⇒ "1.3 Rear side, view from left", page 5	For models with battery in luggage compartment
Subwoofer -R211-	⇒ "1.4 Rear side, view from right", page 6	For models with battery in engine compartment
LTE aerial 1 -R297-	⇒ "1.2 Rear bumper", page 4	
LTE aerial 2 -R306-	⇒ "1.2 Rear bumper", page 4	Up to July 2019
LTE aerial 2 -R306-	⇒ "1.2 Rear bumper", page 4	from July 2019, for models without emergency call system
LTE aerial 2 -R306-	⇒ "-Fitting locations: in middle part of vehicle"	from July 2019, for models with emergency call system
Emergency call module aerial 2 -R322-	⇒ "1.2 Rear bumper", page 4	from July 2019, for models with emergency call system
LTE aerial 3 -R330-	⇒ "1.1 Rear lid", page 2	
Rear window wiper motor -V12-	⇒ "1.1 Rear lid", page 2	
Tank filler flap locking motor -V155-	⇒ "1.4 Rear side, view from right", page 6	
Rear lid lock unit -VX25-	⇒ "1.1 Rear lid", page 2	
Luggage compartment light -W3-	⇒ "1.3 Rear side, view from left", page 5	
Left number plate light -X4-	⇒ "1.1 Rear lid", page 2	
Right number plate light -X5-	⇒ "1.1 Rear lid", page 2	
Heated rear window -Z1-	⇒ "1.1 Rear lid", page 2	Earth lead connector
Heated rear window -Z1-	⇒ "1.1 Rear lid", page 2	Supply cable connector

1.1 Rear lid

- 1 - Aerial amplifier 2 -R111-
- 2 - High-level brake light bulb -M25-
- 3 - Aerial amplifier -R24-
- 4 - LTE aerial 3 -R330-
- 5 - Heated rear window -Z1-
☐ Earth lead connector
- 6 - Right tail light 2 -MX6-
- 7 - Right number plate light -X5-
- 8 - Reversing camera system control unit -J772-
- 9 - Rear lid lock unit -VX25-
- 10 - Rear lid handle release button -E234-
- 11 - Rear window wiper motor -V12-
- 12 - Left number plate light -X4-
- 13 - Aerial amplifier 2 for TV -R83-
- 14 - Left tail light 2 -MX5-
- 15 - Heated rear window -Z1-
☐ Supply cable connector

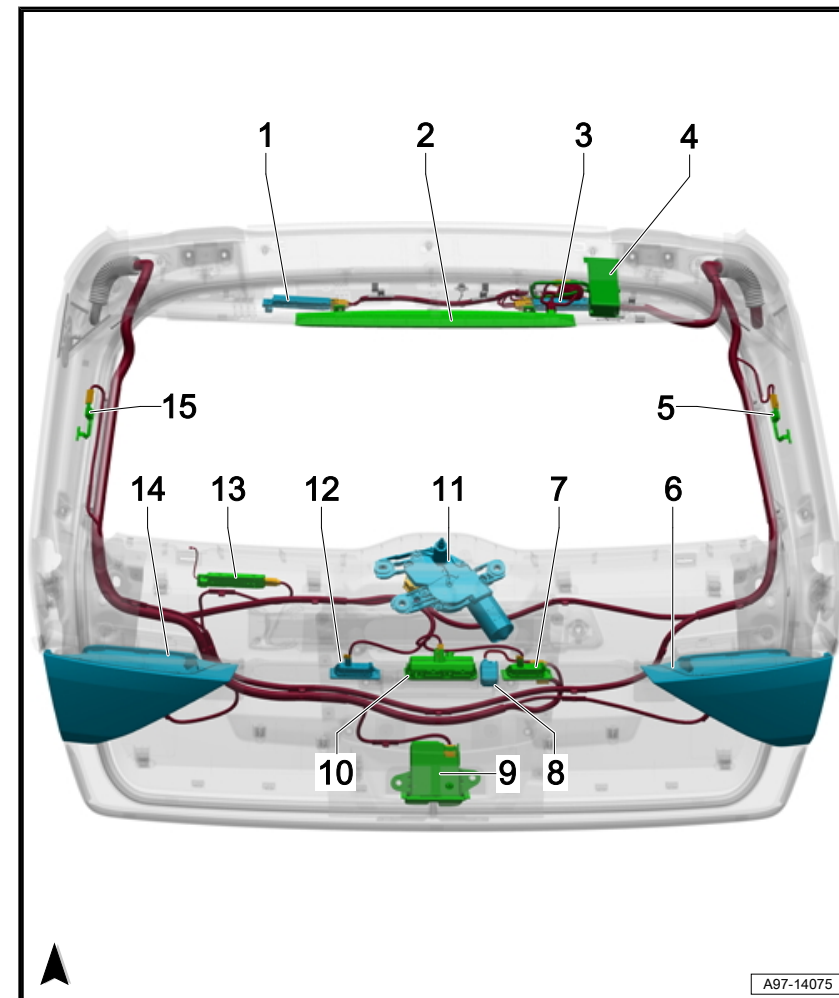

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

[Back to overview](#) ⇒ [page 1](#)

1.2 Rear bumper

A - 8-pin connector -T8l- , black/
8-pin connector -T8k- , black

1 - Rear left park assist steering sender -G716-

2 - Blind Spot Monitor control unit 2 -J1087-

3 - Rear left parking aid sender -G203-

4 - LTE aerial 2 -R306-

☐ Up to July 2019

☐ From July 2019:

☐ For models without emergency call system

☐ For models with emergency call system -> see fitting locations: middle part of vehicle

4 - Emergency call module aerial 2 -R322-

☐ From July 2019

☐ For models with emergency call system

5 - Rear centre left parking aid sender -G204-

6 - Rear bumper aerial for entry and start system -R136-


7 - Rear centre right parking aid sender -G205-

8 - LTE aerial 1 -R297-


9 - Rear right parking aid sender -G206-

10 - Blind Spot Monitor control unit -J1086-

11 - Rear right park assist steering sender -G717-

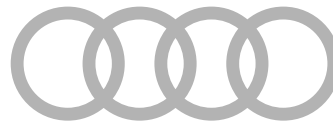

Protected by copyright. Copying for
permitted unless authorised by AUD
with respect to the correctness of in

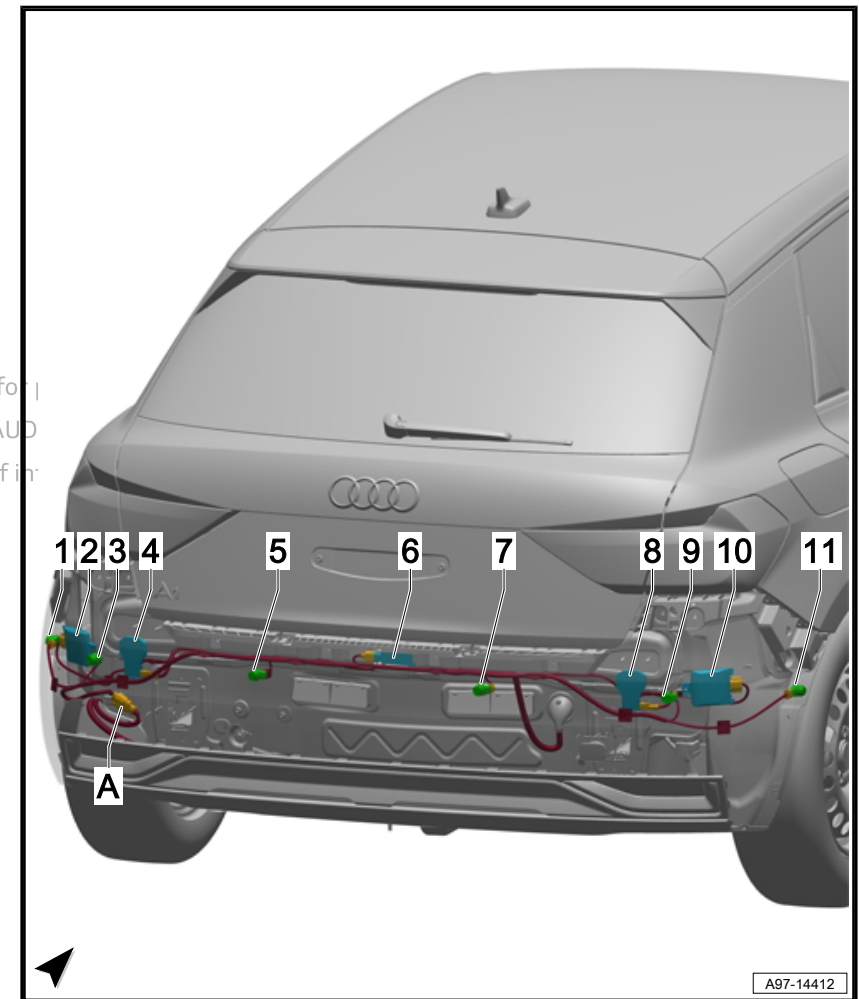


[Back to overview](#) ⇒ [page 1](#)

1.3 Rear side, view from left

- 1 - Aerial amplifier for mobile telephone -R86-
- 2 - Frequency modulation (FM) frequency filter in positive wire -R179-
- 3 - Luggage compartment light -W3-
- 4 - Right tail light -MX4-
- 5 - Subwoofer -R211-
 - ☐ For models with battery in luggage compartment
 - ☐ Fitting location for vehicles with battery in engine compartment ⇒ [Item 2 \(page 6\)](#)
- 6 - Battery -A-
 - ☐ For models with battery in luggage compartment
 - ☐ For models with battery in engine compartment, see fitting locations: front part of vehicle
- 7 - Battery monitor control unit -J367-
 - ☐ For models with battery in luggage compartment
 - ☐ For models with battery in engine compartment, see fitting locations: front part of vehicle



Protected by copyright. Copying for private or commercial purposes, in part or in whole is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

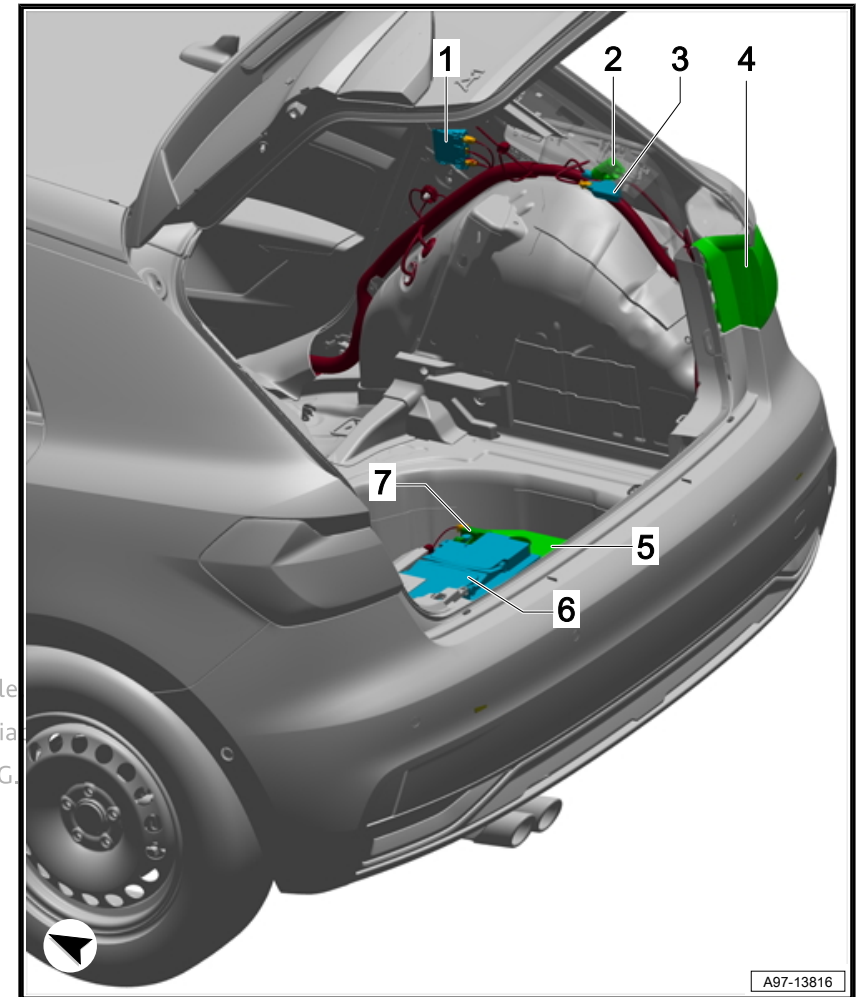

[Back to overview ⇒ page 1](#)

1.4 Rear side, view from right

1 - Tank filler flap locking motor -V155-

2 - Subwoofer -R211-


- ☐ For models with battery in engine compartment
- ☐ Fitting location for vehicles with battery in boot ⇒ [Item 5 \(page 5\)](#)

3 - Left tail light -MX3-

4 - Electronically controlled damping control unit -J250-



Protected by copyright. Copying for private or commercial purposes, in whole or in part, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee the accuracy of the information with respect to the correctness of information in this document. Copyright © 2019 Audi AG

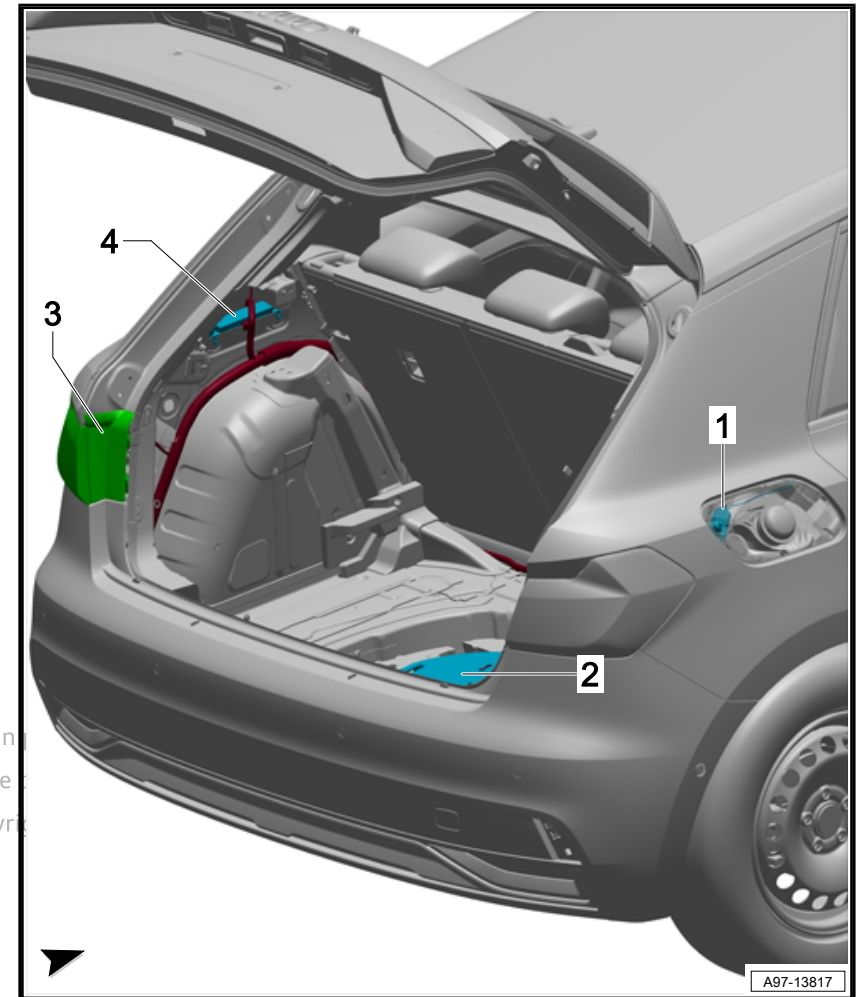

[Back to overview ⇒ page 1](#)