

PAJERO

WORKSHOP MANUAL

Volume 2

FOREWORD

This Workshop Manual contains procedures for service mechanics, including removal, disassembly, inspection, adjustment, reassembly and installation. Use the following manuals in combination with this manual as required.

TECHNICAL INFORMATION MANUAL
PYJE0001

WORKSHOP MANUAL
ENGINE GROUP PWEE____
(Looseleaf edition)

CHASSIS GROUP PWJT0008R
(CD-ROM)

ELECTRICAL WIRING PHJE0001

BODY REPAIR MANUAL PBJE0001

PARTS CATALOGUE B603H601A□

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.



"GDI" is a trade mark of Mitsubishi Motors Corporation.

© Mitsubishi Motors Corporation

February 2000

General	00
Engine	11
Engine Lubrication	12
Fuel	13
Engine Cooling	14
Intake and Exhaust	15
Engine Electrical	16
Engine and Emission Control	17
Clutch	21
Manual Transmission	22
Automatic Transmission	23
Propeller Shaft	25
Front Axle	26
Rear Axle	27
Wheel and Tyre	31
Power Plant Mount	32
Front Suspension	33
Rear Suspension	34
Service Brakes	35
Parking Brakes	36
Steering	37
Body	42
Exterior	51
Interior and Supplemental Restraint System (SRS)	52
Chassis Electrical	54
Heater, Air Conditioner and Ventilation	55

□ : Refer to Volume 1.

WARNING!

- (1) Improper service or maintenance of any component of the SRS and any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag or to the driver and passenger (from rendering the SRS inoperative).
- (2) SRS components should not be subjected to heat, so remove the SRS-ECU, air bag module (driver's side and front passenger's side), clock spring, side impact sensor and front seat assembly (side air bag module) before drying or baking the vehicle after painting.
SRS-ECU, air bag module, clock spring and side impact sensor: 93°C or more
- (3) Service or maintenance of any SRS component and SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS), before beginning any service or maintenance of any component of the SRS and any SRS-related component.

NOTE

Section titles with asterisks (*) in the table of contents in each group indicate operations requiring warnings.